



C2000

Get Started Guide



VGA CMOS Digital Camera



External Caller ID LCD with Color Filter



Speakerphone



Instant Messaging (IM)



C2000

TRI-BAND

PHONE OVERVIEW



 
MAIN MENU





> Taking and Sending a Photo

1. From standby mode, press the **Camera Key** to activate the viewfinder.
2. Press **up** or **down** on the Navigation Key to zoom or **right** or **left** to adjust the brightness.
3. To take a picture, press the **Camera Key** again, or press **OK**. Pictures are automatically stored in the gallery and can be accessed by pressing the **Gallery Key** .
4. To send the photo, press the **Left Soft Key**.
5. Use the keypad to enter a text message, and scroll down using the Navigation Key to add a sound by pressing **OK**.
6. Once your message is complete, press the **Right Soft Key** for **Menu**, then select **Send (1)**.
7. Press the **Left Soft Key** for **Select** to choose phone numbers or e-mail addresses from **Address Book**, or scroll down to enter a phone number or e-mail address.
8. Press the **Right Soft Key** for **Menu** and select **Send (1)**.

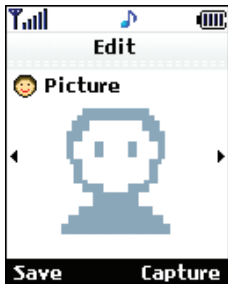


> Setting a Photo as Caller ID

1. From standby mode, press the **Right Soft Key** for **Names**, then select **Contacts (1)**.
2. Use the Navigation Key to highlight the desired contact and press the **Right Soft Key** for **Options**, then select **Edit (5)**.
3. Scroll to the **Picture** field and press the **left** or **right** on the Navigation Key to scroll through the gallery.
4. Press the **Left Soft Key** for **Save**.

Setting a Photo as Wallpaper

 1. Press the **Gallery Key** under the Left Soft Key and highlight the saved photo you'd like to use.
2. Press the **Right Soft Key** for **Options**, select **Set as Wallpaper (3)** and press **OK**.

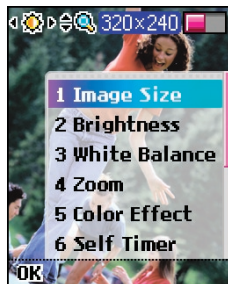


> Changing the Resolution

1. From standby mode, press the **Camera Key** to activate the viewfinder.
2. Press the **Right Soft Key** for **Options**.
3. Select **Image Size (1)**.
4. Press **left** or **right** on the Navigation Key to select **128x160**, **160x120** (QQVGA), **320x240** (QVGA), or **640x480** (VGA) and press **OK**.

Changing Shutter Sounds

1. From standby mode, press the **Camera Key** to activate the viewfinder.
2. Press the **Right Soft Key** for **Options**.
3. Select **Shutter Sounds (7)** or **(8)**.
4. Press **left** or **right** on the Navigation Key to select from the available shutter sound options and press **OK**.

 VOICE FEATURES

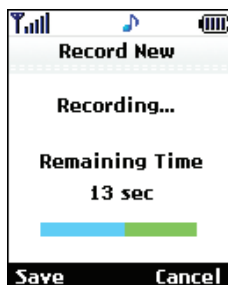

Activating Speakerphone

1. During a call, press **OK** until you see on the middle of the screen for hands-free conversation.
2. Press **OK** to return to normal conversation.

Warning! Due to higher volume levels, don't place the phone near your ear while the speakerphone is enabled.

> Recording a Voice Memo

1. Press the **My MEdia** icon (left) on the Navigation Key, and select **Tools (6)**.
2. Select **Voice Memo (4)**.
3. Press **OK** and start recording immediately. You have 30 seconds to record the memo.
4. Once you've finished recording, press **OK** for **Save**.

Note: Recorded voice memos are stored in the main menu under **My MEdia (7)** > **Tools (6)** > **Voice Memo (4)**.




> **Downloading New Content from MEdia Mall**

1. From standby mode, press the **Left Soft Key** for **Menu**, select **MEdia Mall (4)**, and select a category that you would like to download content from (ringtones, games, graphics, multimedia, applications), and press **OK**.

Note: Downloaded content is stored in the main menu under **My MEdia (7)**.


Accessing the Web

1. Press and *hold* the **OK/Web Key**  until you see the “MEdia Net Connecting” screen.
2. Once connected, choose a category and press **OK**.
3. Press the **End Key** to end your browsing session, then press the **Left Soft Key** for **Yes** to confirm.



MESSAGING

 
Signing On to Instant Messaging

1. Press the **IM icon**  (right) on the Navigation Key, select an IM provider and press **OK**.
2. Enter your Screen Name/ID and password and press **OK** to sign on.


> **Sending an Instant Message**

A color icon will appear next to the screen names that are currently online.

1. Use the Navigation Key to select the name you'd like to chat with and press **OK**.
2. Enter your message in the blue area at the bottom of the screen and press **OK** to send.
3. Your sent message will appear in the main message area with a left-facing carat/red arrow. Incoming replies will be marked with a right-facing carat/blue arrow.

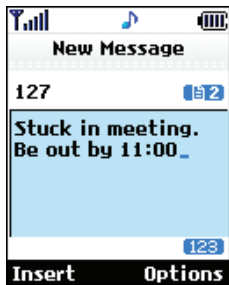

> **Sending a Text Message**

1. Press the **Text Message icon**  (up) on the Navigation Key and enter the message (up to 160 characters) using the keypad, and press **Right Soft Key** for **Options** when done.
2. Select **Send to Number (1)** or **Send to Email (2)**.
3. Press the **Left Soft Key** for **Contacts** to select a recipient, or use the keypad to enter a phone number or e-mail address. Up to 5 recipients can be added.
4. Press the **Left Soft Key** for **Send**.



> **Sending a Multimedia Message**

1. From standby mode, press the **Left Soft Key** for **Menu**, select **Messaging (2)**, then **Multimedia Messages (3)**.
2. Select **New Message (1)**.
3. Select **New** and press **OK**.
4. Use the keypad to enter a text message, then scroll using the Navigation Key to add an image or a sound by pressing **OK**. (You can press the **Right Soft Key** for **Capture** to take a new photo for the message.)
5. Once your message is complete, press the **Right Soft Key** for **Menu**, then select **Send (1)**.
6. Press the **Left Soft Key** for **Select** to choose phone numbers or e-mail addresses from the **Address Book**, or scroll down to enter a phone number or e-mail address.
7. Press the **Right Soft Key** for **Menu** and select **Send (1)**.



> **Changing the Ringtones**

1. From standby mode, press the **Left Soft Key** for **Menu**, select **Settings (9)**, then **Sounds (1)**.
2. Select **Shop Ringtones (1)** to download new ringtones (including MP3 ringtones), or **Ringtones (2)** to choose from default or already downloaded ringtones. Press **OK** to select.

Adjusting Volume Settings

Ringer Volume: While in standby mode, press the side volume keys to adjust the ringtone volume.

Earpiece Volume: During a conversation, press the side volume keys to adjust the earpiece volume.

Silent Mode: While in standby mode, press the lower volume key until it reads Silent All to mute all sounds.



Changing the Wallpaper Image


1. From standby mode, press the **Left Soft Key** for **Menu**, select **Settings (9)**, then **Display (2)**.
2. Select **Wallpaper (1)**.
3. Press **left** or **right** on the Navigation Key to select a default graphic, or download more from MEdia Mall, and press **OK**.

Note: Downloaded wallpaper graphics are stored in the main menu under **My MEdia (7)**.


PERSONAL INFORMATION TOOLS



Scheduling an Event

1. Press the **My MEdia** icon  (left) on the Navigation Key, and select **Tools (6)**.
2. Select **Calendar (3)**.
3. Highlight the event date using the Navigation Key and press **OK**. To quickly jump from month to month, press the * or # keys.
4. Add an event by pressing the **Left Soft Key** for **New**. You may set the appropriate subject, event time, recurrence (if any), and alarm by scrolling to the corresponding field.
5. Press the **Left Soft Key** for **Save**.

Scheduling an Alarm

1. Press the **My MEdia** icon  (left) on the Navigation Key, and select **Tools (6)**.
2. Select **Alarm Clock (2)**.
3. Press **left** or **right** on the Navigation Key to select **On**, then set the appropriate time, recurrence (if any) and alarm tone by scrolling to the corresponding field.
4. Press the **Left Soft Key** for **Set**.



Adding a New Contact Entry

1. From standby mode, press the **Right Soft Key** for **Names**, then select **New Contact (2)**.
2. Enter information into any of the following fields: **Name**, **Mobile**, **Home**, **Office**, **E-mail**, **Group**, **Notepad** and **Picture**, and press the **Left Soft Key** for **Save**.

Setting a Speed Dial

1. From standby mode, press the **Right Soft Key** for **Names**, then select **Speed Dial List (3)**.
2. Select an empty speed dial number (2-9) and press **OK** to add.
3. Highlight the contact and press **left** or **right** on the Navigation Key to select the phone number you'd like to create a speed dial for, then press **OK**.

Note: To make a call, press and *hold* the speed dial number on the keypad for that contact.




Setting a Voice Dial

1. From standby mode, press the **Right Soft Key** for **Names**, then select **Voice Dial List (4)**.
2. Press the **Left Soft Key** for **New**.
3. Highlight the contact and press **left** or **right** on the Navigation Key to select the phone number you'd like to create a voice dial for, then press **OK**.
4. You will be prompted twice to say your contact's name.

Note: To initiate voice-activated dialing, from standby mode, press and *hold* the # key. When prompted, say the name of the contact you want to call.

OTHER NOTABLE SETTINGS

Activating Vibrate Mode

1. From standby mode, press and *hold* the **Vibrate Mode Key (*)** for 3 seconds. The phone will vibrate when activated. When set, the vibrate icon  will appear on the idle screen.
2. To turn off Vibrate Mode, press the * key until "**Normal Mode**" is displayed.

MENU TREE

| | | | | | |
|--|--|---|---|---|---|
| <p>RECENT CALLS (1) </p> <ol style="list-style-type: none"> 1. Missed Calls 2. Dialed Calls 3. Received Calls 4. Delete Recent Calls 5. Call Duration 6. Data Information <ul style="list-style-type: none"> > 1. Web Data > 2. Data Call > 3. Total Data | <p>GAMES & APPS (3) </p> <ol style="list-style-type: none"> 1. Shop Games 2. Games & Apps 3. Favorites 4. Information | <ul style="list-style-type: none"> > 6. Notepad > 7. World Clock > 8. Unit Converter > 9. Tip Calculator | <ul style="list-style-type: none"> > 7. Auto Redial > 8. Send DTMF Tones <p>5. Security</p> <ul style="list-style-type: none"> > 1. Request PIN Code > 2. Fixed Dial Number > 3. Change Codes <p>6. Connection</p> <ul style="list-style-type: none"> > 1. Change Frequency Band > 2. GPRS Attach > 3. Network Profile > 4. Reset Network Profile <p>7. Reset Default</p> |  | |
| <p>MESSAGING (2) </p> <ol style="list-style-type: none"> 1. IM 2. Text Messages <ul style="list-style-type: none"> > 1. New Message > 2. Inbox > 3. Sent > 4. Drafts > 5. Settings > 6. Delete All Messages 3. Multimedia Messages <ul style="list-style-type: none"> > 1. New Message > 2. Inbox > 3. Outbox > 4. Sent > 5. Drafts > 6. Settings 4. Voice Mail 5. Download Messages <ul style="list-style-type: none"> > 1. Inbox > 2. Receive 6. Chat 7. Templates <ul style="list-style-type: none"> > 1. Text > 2. Multimedia > 3. Business Card 8. Check Memory <ul style="list-style-type: none"> > 1. Text > 2. Multimedia | <p>MEDIA MALL (4) </p> <ol style="list-style-type: none"> 1. Shop Ringtones 2. Shop Games 3. Shop Graphics 4. Shop Multimedia 5. Shop Applications 6. MEdia Net Home | <p>ADDRESS BOOK (8) </p> <ol style="list-style-type: none"> 1. Contacts 2. New Contact 3. Speed Dial List 4. Voice Dial List 5. Caller Groups 6. Copy All Contacts 7. Delete All Contacts 8. Set Save Location 9. Information | <p>CAMERA (options) </p> <ol style="list-style-type: none"> 1. Image Size 2. Brightness 3. White Balance 4. Zoom* 5. Color Effect 6. Self Timer 7. Multishot 8. Shutter Sound 9. Default Settings |  | |
| <p>IM (6) </p> <ol style="list-style-type: none"> 1. AIM 2. ICQ 3. Y! Messenger 4. CW | <p>MEDIA NET (5) </p> <ol style="list-style-type: none"> 1. MEdia Net Home 2. Favorites 3. Go to URL 4. Network Profile 5. Cache Settings 6. Security Certificates 7. Information | <p>SETTINGS (9) </p> <ol style="list-style-type: none"> 1. Sounds <ul style="list-style-type: none"> > 1. Shop Ringtones > 2. Ringtones > 3. Volume > 4. Ring Alert Type > 5. Message Alert Tones > 6. Key Tones > 7. Voice Memo 2. Display <ul style="list-style-type: none"> > 1. Wallpaper > 2. Backlight Timer > 3. Contrast > 4. Languages > 5. Menu Style 3. Date & Time 4. Call <ul style="list-style-type: none"> > 1. Call Forwarding > 2. Answer Mode > 3. Send My Number > 4. Call Waiting > 5. Minute Minder > 6. Voice Dial | <p>GALLERY (options) </p> <ol style="list-style-type: none"> 1. View 2. Send Photo 3. Set as Wallpaper 4. Set as Photo ID 5. Delete 6. Slideshow 7. Rename 8. Delete All 9. Information |  | |
| <p style="text-align: right;">*Resolution dependent</p> | | | | |  |



LG Electronics MobileComm U.S.A., Inc. | 10225 Willow Creek Road, San Diego, CA 92131-1639
 Customer Service: 800-793-8896 | Accessories: 800-851-6734 | www.LGUSA.com

All materials in this training manual including, without limitation, the design, the text, and any marks are the property of LG Electronics, Inc. ALL RIGHTS RESERVED Copyright © 2005 LG Electronics, Inc. All product and service marks contained herein that are not LG Electronics, Inc. proprietary marks are the trademarks of their respective owners. LG Electronics, Inc. makes no claim to such properties. Phone features and specifications are subject to change without prior notice. The use of non-LG approved accessories will void the warranty and may result in damage to the phone, the phone exploding, or other dangerous conditions. Battery talk and standby times are estimates only. Use of certain features and other conditions including, but not limited to, battery age and condition, charging habits, temperatures to which the battery is exposed, and use in digital mode will cause actual standby and talk time to vary. The amount of talk time used will impact the standby time. In the same way, the amount of time that the phone is in standby mode will impact the talk time.