




[GETTING STARTED]


1 PREPARATION

Power Supply & Tape Cassettes


1 Open the tape compartment cover by pressing in the rough area at the top end of the machine. If a tape cassette is already installed, remove it by pulling it straight up. Also, if batteries are already installed, remove them. Make sure that the power is turned off when replacing batteries or tape cassette.

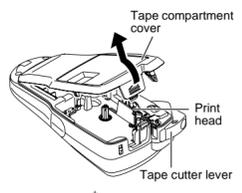

2 Insert six new AAA alkaline batteries (LR03), making sure that their poles point in the correct directions. Always replace all six batteries at the same time using brand new ones.

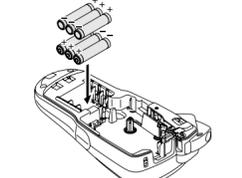

3 Insert a tape cassette, making sure that it snaps into place.

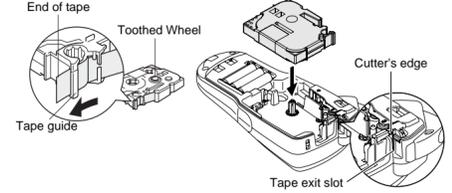

Make sure that the end of the tape feeds under the tape guides. If the ink ribbon is loose, use your finger to wind the toothed wheel in the direction of the arrow on the cassette. Use only Brother TZ tapes with this machine.

4 Securely close the back cover, making sure that it snaps into place. After you have installed the tape, feed the tape (see Feeding) once and then push in the tape cutter lever to cut the tape.



When using optional AC adapter (AD-24)


- Insert the plug on the adapter cord into the adapter jack on the bottom end of the machine.
- Insert the plug into the nearest standard electrical outlet.

For memory back up, we recommend using AAA alkaline batteries (LR03) together when using the AC adapter.



2 OPERATION

Keyboard & LCD

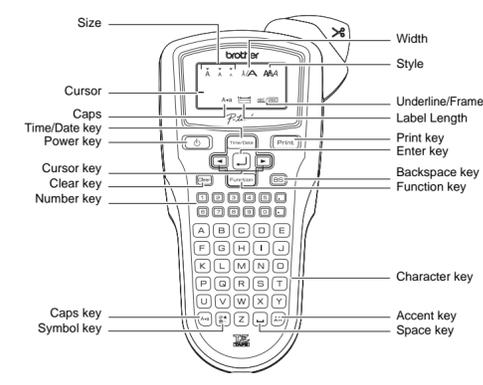

The LCD shows one row of 12 characters; however, the text that you enter can be up to 80 characters in length.

Initial Settings

1 Start your machine
Supply power by using six AAA alkaline batteries or the optional AC adapter, and then press **[ON]**.

 
2 Set the language (English/Español/Français/Hrvatski/Italiano/Magyar/Nedrlnds/Norsk/Polski/Portug./Română/Slovenski/Slovensky/Suomi/Svenska/Česky/Dansk/Deutsch)
The default setting is "English".

Choose a language with **[F]** and **[Language]** and press **[OK]**.

3 Set the unit (inch/mm)
The default setting is "inch".

Choose unit with **[U]** and press **[OK]**.

4 Set Date (MM/DD/YY) and Time (hh:mm)
Example: setting the clock to October 21st 2009, 10:30AM



Select AMPM with **[A]** and press **[OK]**. You can also confirm the figure and move to the next setting by using the right cursor key.

- The machine automatically turns off if no keys are pressed within 5 minutes.
- To cancel operations, press **[ESC]**.
- To initialize the settings, turn off the machine and then while holding down **[F]** and **[R]**, press **[ON]** to turn the machine back on. Finally, release **[F]** and **[R]**.

3 REFERENCE

Troubleshooting

Message	Cause/Remedy
Battery	The batteries are weak. Replace them with new ones.
BATTERY!	The installed batteries are about to run out.
Invalid	<ul style="list-style-type: none"> There is no text above the cursor when you set Numbering. Invalid character is selected for Numbering. Invalid number is selected for Tab Length or Label Length.
No Text	<ul style="list-style-type: none"> You tried to print a text file when there is no data stored in the memory. The Print key is pressed when no text is entered. You tried to set Copies, Numbering, Mirror, or Text Preview when no text is entered.
Line Lmt	<ul style="list-style-type: none"> You tried to enter a 3rd line by pressing the Enter key. You tried to print a 2 line text when 9/64" (3.5mm) or 1/4" (6mm) tape is installed.
No Cassette	You tried to print a label when there is no cassette installed.
Cutter Error	Tape cutter lever is used in the middle of printing process.
Full	The maximum number of characters (80 characters) have already been entered.
Text Lmt	The text length exceeds the selected label length or the selected Auto Format setting length.
No Frame OK?	Printing on 9/64" (3.5mm) tape with invalid Frame setting ON. (Select [J] to print with no Frame, [C] to cancel.)

What to do when...

Problem	Solution
The display stays blank after you have turned on the machine.	<ul style="list-style-type: none"> Check that the batteries are correctly inserted. If the batteries are weak, replace them. Check that the AD-24 adapter is correctly connected.
When the label is printed out, there is too much margin (space) on both sides of the text.	<ul style="list-style-type: none"> See "[Margin] (Tape Margin)" in this user's guide and select [Half] or [Narrow] to have smaller margins for your label.
The machine does not print, or the printed characters are not formed properly.	<ul style="list-style-type: none"> Check that the tape cassette has been inserted correctly. If the tape cassette is empty, replace it. Check the tape compartment cover is properly closed.
The setting has cleared on its own.	<ul style="list-style-type: none"> The batteries may be weak. Replace them. When power is disconnected for more than two minutes, all text & formats in the display will be lost. Language, Unit and Time/Date settings will also be cleared.
A blank horizontal line appears through the printed label.	<ul style="list-style-type: none"> There maybe some dust on the print head. Remove the tape cassette and use a dry cotton swab to gently wipe the print head with an up-and-down motion.
The machine has "locked up" (i.e., nothing happens when a key is pressed, even though the machine is on.)	<ul style="list-style-type: none"> Turn off the machine, and then while holding down [F] and [R], press [ON] to turn the machine back on. Finally, release [F] and [R]. Note: The text and formats in the display are erased. Also, the language, Unit and Time/Date settings will be cleared.
The power turns off when you try to print.	<ul style="list-style-type: none"> The batteries may be weak. Replace them. Check that the batteries are correctly inserted.
The tape does not feed properly or the tape gets stuck inside the machine.	<ul style="list-style-type: none"> Check that the end of the tape feeds under the tape guides. The cutter lever is used while printing. Do not touch the cutter lever during printing.
All text and format settings need to be cleared to create a new label.	<ul style="list-style-type: none"> Press [ESC] and select [Tx&Format].
To change language setting.	<ul style="list-style-type: none"> See step 2 "Set the language" of the "Initial Settings".

Specifications

Item	Specification
Dimensions	4.3" (W) x 8.1" (D) x 2.3" (H) (107.4 mm (W) x 202.6 mm (D) x 56.6 mm (H))
Weight	0.80 lbs. (365 g) (without batteries and tape cassette)
Power supply	Six AAA alkaline batteries (LR03) or optional AC adapter (AD-24)
Tape cassette	Brother TZ tape (width): 9/64" (3.5 mm), 1/4" (6 mm), 3/8" (9 mm), 1/2" (12 mm)

Accessories (Supplies may differ by distribution.)

Accessories	Stock No.
Tape Cassettes	See the included "Supplies and Accessories Guide".
AC Adapter	AD-24
Cutter Unit	TC-5 (replacement)

If the cutter blade becomes blunt and the cutter stopper wear after repetitive use and the tape cannot be cut cleanly, replace with new cutter unit (stock no. TC-5) by obtaining from an authorized brother reseller.

INTRODUCTION

With your PT-7100, you can create labels for any application. Select from the many frames, character sizes and styles to design beautiful custom labels. In addition, the variety of tape cartridges available allows you to print labels with different widths and exciting colors. Read this manual carefully before starting and keep the manual in a handy place for future reference.

WARNING

- Always use the specified voltage and the suggested AC adapter (AD-24) for this machine to prevent any damage or failure.
- Unplug the power cord immediately and stop using the P-touch labeler during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use the AC adapter in places of high humidity such as bathrooms.
- Do not overload the power cord.
- Do not place heavy objects on, or damage the power cord or plug. Do not forcibly bend or pull the power cord. When disconnecting the power cord from the power outlet, always hold the plug.
- To prevent fire or electric shock, make sure that the plug is fully inserted to the power outlet. Do not use an outlet that is loose.
- Do not get the machine/AC adapter/power plug wet, such as by handling them with wet hands or spilling beverages on to them.
- Do not disassemble or modify the machine/AC adapter/batteries.
- Disconnect the AC adapter, remove batteries and stop using immediately if you notice any abnormal odor, heat, discoloration, deformation or anything unusual while in use, or in storage.
- Do not use metallic articles, such as tweezers or a metallic pen, when exchanging the batteries.
- Do not throw into fire or heat up the battery.

CAUTION

- To avoid injuries, do not touch the blade of the cutter unit or any metal parts near the print head.
- Do not apply excessive pressure to the cutter lever.
- Remove the batteries and disconnect the AC adapter if you do not intend to use the machine for an extended period of time. (Note: When power is disconnected for more than two minutes, all text & formats in the display will be lost. Language, Unit and Time/Date settings will also be cleared.)
- Do not use old and new batteries together or mix alkaline batteries with other type batteries, or set the positive and negative end in the wrong position. Otherwise, the batteries may leak or be damaged.
- To prevent damage or breakage, do not drop or hit the machine/AC adapter and press on the LCD display.
- Depending on the location, material, and environmental conditions, the label may peel or become irremovable, the color of the label may change or be transferred to other objects. Before applying the label, check the environmental condition and the material.
- Any data stored in memory will be lost due to failure or repair of the P-touch labeler, or if the battery expires.

General Precautions

- Do not use the P-touch labeler in any way or for any purpose not described in this guide. Doing so may result in accidents or damage the machine.
- Use only Brother TZ tapes with this machine. Do not use tapes that do not have the **TZ** mark.
- Do not clean the machine with alcohol or other organic solvents. Only use a soft, dry cloth.
- Do not touch the print head with your fingers. Use a soft wipe (e.g. a cotton swab) when cleaning the print head.
- Do not put any foreign objects into the tape exit slot or AC adapter connector, etc.
- Do not place the P-touch labeler in direct sunlight or rain, near heaters or other hot appliances, dashboard or in the back of your car, in any location exposed to extremely high or low temperatures, high humidity, or dusty locations. Standard operating temperature range: 50°F to 95°F (10°C to 35°C).
- Do not try to print labels using an empty tape cassette in the P-touch labeler. Doing so will damage the print head.
- Do not pull the tape being fed from the P-touch labeler, otherwise the tape cassette or P-touch labeler may be damaged.

2 DESIGNING LABELS

[Size]

Press **[Size]** and **[Large]** to set the label size. The LCD shows the whole text and the label length (inch/mm), then returns to the original text.

Automatically adjusts the text size according to the tape width.

[Width]
Press **[Width]** and **[x2]** to set the label width. The LCD shows the whole text and the label width (inch/mm), then returns to the original text.

[Style] (Vertical)
Press **[Style]** and **[Vertical]** to set the label style. The LCD shows the whole text and the label style, then returns to the original text.

[Normal] **[Bold]** **[Outline]**
[Shadow] **[Italic]** **[I+Bold](Italic Bold)**
[I+Out](Italic Outline) **[I+Shadow](Italic Shadow)** **[Vertical]**

[Underline/Frame]
Press **[Undl/Frm]** and **[Undl]** to set the label underline/frame. The LCD shows the whole text and the label underline/frame, then returns to the original text.

[Off] **[Undl](Underline)** **[Round]** **[Candy]**
[Callout] **[Banner]** **[Wooden]**

Frames can not be printed on 9/64" (3.5mm) tape.

[Tab]
You can make aligned texts by setting tabs. Example: To set a tab between "ABC" and "D". The cursor should be positioned where you set a tab.

Display: ABC D
Label image: ABC D

[Tab Length](Auto / 0.0" - 4.0" (0-100mm))
Press **[Tab Length]** and **[1.0"]** to set the tab length. The LCD shows the whole text and the tab length, then returns to the original text.

You can also select the length by entering the length with Number keys. To return to [Auto], press **[OK]**.

[Label Length](Auto / 1.2" - 12.0" (30-300mm))
Press **[Length]** and **[1.2"]** to set the label length. The LCD shows the whole text and the label length, then returns to the original text.

You can also select the length by entering the length with Number keys. To return to [Auto], press **[OK]**.

[Auto Format]
You can choose label length from six formats to create labels for various applications.

Application	Length	Application	Length
VCR VHS	5.5" (140mm)	CD Spine	4.4" (113mm)
Mini DV	1.6" (42mm)	File Tab	3.2" (82mm)
Audio	3.5" (89mm)	Divider	1.6" (42mm)

You can also use the Function shortcuts for these menu. Press the **[F]** and the shortcut key shown next to the menu title. To confirm, press **[OK]**.

3 PRINTING LABELS

Text Preview

You can preview the text before printing. Press **[Preview]** to preview the text. The LCD shows the whole text and the label length (inch/mm), then returns to the original text.

- Only the text can be previewed, not the font, style, size, underline/frame or any additional features.

Feeding (Tape Feed)

Press **[Feed]** to feed the tape. The LCD shows the whole text and the label length (inch/mm), then returns to the original text.

 
Printing

- To cut off the label, push in the tape cutter lever on the upper-right corner of the machine.
- To prevent damage to the tape, do not try to cut while the message "Print" or "Feed" is displayed.
- When Chain Print is set, "OK to Feed?" will appear. (See the Note of [Chain Prt] in [Margin] (Tape Margin).)

[Margin] (Tape Margin)

Press **[Margin]** and **[Full]** to set the label margin. The LCD shows the whole text and the label margin, then returns to the original text.

[Full]/**[Half]**/**[Narrow]** is for leaving equal margins on both sides of the text. NOTE: Cut along the printed dots (·) with scissors so the text is centered in the label.



[Chain Prt] (Chain Print) is for printing more than 1 copy of a label with minimum margin <e.g. 1>. You can also create a label containing texts in various styles; enter a text in one style and press **[F]**. After that, cancel feeding (see the note below), and enter the second text in another style <e.g. 2>.

Chain Print
<e.g. 1> ABC ABC ABC (feed & cut)
<e.g. 2> ABC ABC DEF (feed & cut)

FEED THE TAPE BEFORE USING THE CUTTER OTHERWISE A PART OF THE TEXT MAY BE CUT OFF.

After pressing **[Feed]**, "OK to Feed?" will appear. Press **[Feed]** to feed. Press **[ESC]** to cancel.

Do not try to pull the tape since this may damage the tape cassette.

Using [Print Option]

[Copies]
You can print up to 9 copies of each label. Press **[Print Option]** and **[Copies]** to set the number of copies. The LCD shows the whole text and the number of copies, then returns to the original text.

You can also select the number of copies by entering with Number keys.

[Numbering]
You can print many copies of the same text while increasing a selected number by 1 after each label is printed. Example: To print copies of a label containing a serial number (0123, 0124 and 0125).

Select the highest number you wish to be printed when setting the number. **[Mirror Prt?]** **[HTIM&L]**

Use clear tape in [Mirror], so the labels can be read correctly from the opposite side when attached on glass, windows or other transparent surfaces.

4 COMPLETED LABELS



Peel the printed label from backing and apply the label.

USEFUL FUNCTIONS

File (Memory)

You can save your original labels on to your machine. Up to nine labels can be saved and recalled for printing whenever you desire. You can also edit and overwrite the stored label. Press **[File]** and **[Save]** to save the label. The LCD shows the whole text and the label length (inch/mm), then returns to the original text.

To Save: **[Save]** to save the label. The LCD shows the whole text and the label length (inch/mm), then returns to the original text.

To Print: **[Print]** to print the label. The LCD shows the whole text and the label length (inch/mm), then returns to the original text.

To Open: **[Open]** to open the label. The LCD shows the whole text and the label length (inch/mm), then returns to the original text.

If you try to store a label when there is already a label stored to that number, a message "Overwrite?" will appear. Press **[Y]** to save your new label. Press **[N]** to cancel.

Time/Date Function

You can insert the desired time and date to your text at the touch of a button. 8 Formats are available for printing time and date. You can change the number of time/date by changing the clock setting.

To add Time/Date to your text:
Press **[Time/Date]** and **[Format]** to set the time/date. The LCD shows the whole text and the time/date, then returns to the original text.

The cursor should be positioned where you wish to insert the time and date. **To select the format of Time/Date:** Press **[Time/Date]** and **[Format]** to set the time/date. The LCD shows the whole text and the time/date, then returns to the original text.

Format	Example (October 21st 2009, 3:30PM)	Format	Example (October 21st 2009, 3:30PM)
M/D/Y	10/21/09	D.M.Y	21.10.09
M/D/Y hm	10/21/09 03:30PM	D.M.Y hm	21.10.09 03:30PM
D/M/Y	21/10/09	Y-M-D	09-10-21
D/M/Y hm	21/10/09 03:30PM	Y-M-D hm	09-10-21 03:30PM

To change the Clock Setting:
See step 4 of the "Initial Settings".

FCC NOTICE
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by Brother Industries, Ltd. could void the user's authority to operate the equipment.

Should you encounter any problems with your product, please do not return your product to the store! After referring to the User's guide, if you still need assistance, call Brother Customer Service at:

Voice: 1-877-BROTHER Web: www.brother.com Fax: 1-901-379-1210
If you need to locate a service center, please call 1-877-BROTHER or visit us at www.brother-usa.com

1 MAKING TEXT

Switching Upper Case/Lower Case

Press **[Upper case]** and **[ON]** to set the label case. The LCD shows the whole text and the label length (inch/mm), then returns to the original text.

Making Two Line Text
Move the cursor to where the second line starts and press **[Enter]**. Use either 3/8" (9 mm) or 1/2" (12 mm) wide tape for two line text.

Display: ABC DEF
Label image: ABC DEF

Entering Symbols

Press **[Symbol]** and **[Symbol]** to enter the symbol. The LCD shows the whole text and the symbol, then returns to the original text.

Group	Symbols	Group	Symbols
1	. , : ; " ' •	10	↓ ↑ ⇄ ⇄ ⇄ ⇄ ⇄ ⇄
2	@ - & _ \ /	11	⊕ ⊖ ⊗ ⊘ ⊙ ⊚ ⊛ ⊜
3	# % ? ! ; ' •	12	⊕ ⊖ ⊗ ⊘ ⊙ ⊚ ⊛ ⊜
4	+ - × ÷ ± =	13	⊕ ⊖ ⊗ ⊘ ⊙ ⊚ ⊛ ⊜
5	() [] < >	14	⊕ ⊖ ⊗ ⊘ ⊙ ⊚ ⊛ ⊜
6	← → ↕ ↖ ↗	15	⊕ ⊖ ⊗ ⊘ ⊙ ⊚ ⊛ ⊜
7	\$ % € £ ¥ ¢	16	⊕ ⊖ ⊗ ⊘ ⊙ ⊚ ⊛ ⊜
8	α β γ δ ϕ ζ	17	⊕ ⊖ ⊗ ⊘ ⊙ ⊚ ⊛ ⊜
9	² ³ • ○ ★		

To go to the next group, press **[Next]**. To cancel operations, press **[ESC]**.

Entering Accented Characters

Press **[Accented]** and **[Accented]** to enter the accented character. The LCD shows the whole text and the accented character, then returns to the original text.

Accented Characters	Accented Characters
A A A A A A A A A	a a a a a a a a a
C C C C	c c c c
D D D	d d d d
E E E E E E E E E	e e e e e e e e e
G G G	g g g
I I I I I I I I I	i i i i i i i i i
K K	k k
L L L L L	l l l l l
N N N N N	n n n n n