

C**2525**/C**3030** DSc525/DSc530 *LD425c/LD430c* Aficio[™] MP C2500/C3000

Operating Instructions Copy/Document Server Reference





2 Copying

- 3 Document Server
- 4 Appendix

Read this manual carefully before you use this machine and keep it handy for future reference. For safe and correct use, be sure to read the Safety Information in "About This Machine" before using the machine.

Introduction

This manual contains detailed instructions and notes on the operation and use of this machine. For your safety and benefit, read this manual carefully before using the machine. Keep this manual in a handy place for quick reference.

Important

Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating the machine.

Notes:

Some illustrations in this manual might be slightly different from the machine.

Certain options might not be available in some countries. For details, please contact your local dealer.

Caution:

Use of controls or adjustments or performance of procedures other than those specified in this manual might result in hazardous radiation exposure.

Notes:

The model names of the machines do not appear in the following pages. Check the type of your machine before reading this manual. (For details, see "Machine Types", About This Machine.)

- Type 1: C2525/DSc525/LD425c/Aficio MP C2500
- Type 2: C3030/DSc530/LD430c/Aficio MP C3000

Certain types might not be available in some countries. For details, please contact your local dealer.

Depending on which country you are in, certain units may be optional. For details, please contact your local dealer.

Two kinds of size notation are employed in this manual. With this machine refer to the inch version.

For good copy quality, the supplier recommends that you use genuine toner from the supplier.

The supplier shall not be responsible for any damage or expense that might result from the use of parts other than genuine parts from the supplier with your office products.

Manuals for This Machine

Refer to the manuals that are relevant to what you want to do with the machine.

About This Machine

Be sure to read the Safety Information in this manual before using the machine.

This manual provides an introduction to the functions of the machine. It also explains the control panel, preparation procedures for using the machine, how to enter text, and how to install the CD-ROMs provided.

✤ General Settings Guide

Explains User Tools settings, and Address Book procedures such as registering fax numbers, e-mail addresses, and user codes. Also refer to this manual for explanations on how to connect the machine.

Troubleshooting

Provides a guide to solving common problems, and explains how to replace paper, toner, staples, and other consumables.

✤ Security Reference

This manual is for administrators of the machine. It explains security functions that the administrators can use to protect data from being tampered, or prevent the machine from unauthorized use. Also refer to this manual for the procedures for registering administrators, as well as setting user and administrator authentication.

Copy/ Document Server Reference

Explains Copier and Document Server functions and operations. Also refer to this manual for explanations on how to place originals.

Facsimile Reference

Explains Facsimile functions and operations.

Printer Reference

Explains Printer functions and operations.

Scanner Reference

Explains Scanner functions and operations.

Network Guide

Explains how to configure and operate the machine in a network environment, and use the software provided.

This manual covers all models, and includes descriptions of functions and settings that might not be available on this machine. Images, illustrations, and information about operating systems that are supported might also differ slightly from those of this machine.

Other manuals

- PostScript3 Supplement
- UNIX Supplement
- Manuals for DeskTopBinder Lite
 - DeskTopBinder Lite Setup Guide
 - DeskTopBinder Introduction Guide
 - Auto Document Link Guide

🔗 Note

- □ Manuals provided are specific to machine types.
- □ Adobe Acrobat Reader/Adobe Reader must be installed in order to view the manuals as PDF files.

What You Can Do with This Machine <Color Functions/Color Adjustments>

Color Copying

You can switch the color copy mode depending on the type of originals used and the desired finish.

See p.41 "Selecting a Color Mode".

✤ Full Color Copy

Copies using four colors: yellow, magenta, cyan and black.



Black/White Copy

Copies in black and white even if the original is colored.



Convert Colors

See p.42 "Convert Colors". Copies by changing a specific color in the original to another color.



Erase Specified Color

See p.43 "Erase Color". Copies by deleting a specific color in the original.



Color Background

See p.44 "Color Background". Copies by adding a color to the whole page.



Stamping on Copies

Copies with the date, page numbers, etc. The stamp color can be yellow, red, cyan, magenta, green, blue, and black.

ABCDE ABCDEFGHIJ KLMNOPQRS TUVWXYZ ABCDEFGHIJ KLMNOPQRS TUVWXYZ	BCDEFGHIJ MNOPQRS JVWXYZ BCDEFGHIJ MNOPQRS	BCDEFGHIJ MNOPQRS JVWXYZ BCDEFGHIJ MNOPQRS	ABCDE CDEFGHIJ MNOPQRS JVWXYZ SCDEFGHIJ MNOPQRS JVWXYZ	
ABCDE W ABCDEFGHIJ KLMNOPQRS TUVWXYZ ABCDEFGHIJ KLMNOPQRS TUVWXYZ	BCDEFGHIJ MNOPQRS JVWXYZ BCDEFGHIJ MNOPQRS	ABCDE (R) BCDEFGHIJ LMNOPQRS JVWXYZ BCDEFGHIJ LMNOPQRS JVWXYZ		

AMF041S

Printed inserts types:

Background Numbering

See p.106 "Background Numbering".

Preset Stamp

See p.107 "Preset Stamp".

✤ User Stamp

See p.109 "User Stamp".

✤ Date Stamp

See p.114 "Date Stamp".

Page Numbering

See p.118 "Page Numbering".

Adjusting Colors

See p.48 "Color Adjustment".

Primary Colors



Colors can be created by combining the 3 primary colors: yellow, magenta and cyan. Black can be made by combining yellow, magenta and cyan, however, as there might be some slight differences, "black" will be expressed using a black toner.

* Adjust Color

Adjusts the specific colors (yellow, red, magenta, blue, cyan and green) by mixing them with adjacent colors in the color circle. See p.48 "Color Adjustment".



Color Balance

Adjusts the overall color tone of copies. See p.45 "Color Balance".



Adjusting Images

See p.49 "Image Adjustment".

Sharp/Soft

Adjust the outline of the image. See p.50 "Adjusting the sharpness/softness".



Contrast

Adjust the shades of the image. See p.51 "Adjusting the contrast".



AMA017S

✤ Background Density

Adjust the background density of the image. See p.51 "Adjusting the background density".



Other Adjustments

- Adjust U.C.R. See p.52 "Adjusting the U.C.R".
- Text/Photo Sensitivity See p.52 "Adjusting the Text/Photo sensitivity".

What You Can Do with This Machine

Functions differ depending on machine type and options.

₽ Reference

See p.3 "Functions Requiring Optional Configurations".

Types of Duplex Copies

★ 1 Sided 2 Pages \rightarrow 2 Sided 1 Page See p.82 "Duplex".



♦ 2 Sided 1 Page \rightarrow 2 Sided 1 Page See p.82 "Duplex".



★ 1 Sided 4 Pages → Combine 2 Sided 1 Page See p.88 "Two-Sided Combine".



◆ 1 Sided 8 Pages → Combine 2 Sided 1 Page See p.88 "Two-Sided Combine".



- 1 Front
- 2 Back

◆ 2 Sided 16 Pages → Combine 2 Sided 1 Page See p.88 "Two-Sided Combine".



- 1 Front
- 2 Back
- ◆ 2 Sided 2 Pages → Combine 2 Sided 1 Page See p.88 "Two-Sided Combine".



* 2 Sided 4 Pages \rightarrow Combine 2 Sided 1 Page

See p.88 "Two-Sided Combine".



- 1 Front
- 2 Back
- ♦ 2 Sided 8 Pages → Combine 2 Sided 1 Page See p.88 "Two-Sided Combine".



- 1 Front
- 2 Back
- * Bound Originals \rightarrow 2 Sided 1 Page See p.93 "Booklet/Magazine".



✤ Front & Back Bound Originals → 2 Sided Pages

See p.93 "Booklet/Magazine".



Copying Book Originals

- ✤ 1 Sided 4 Pages → Booklet See p.93 "Booklet/Magazine".

 - Open to left



• Open to right



* 2 Sided 2 Pages \rightarrow Booklet

See p.93 "Booklet/Magazine".

• Open to left



• Open to right



♦ 1 Sided \rightarrow Magazine

See p.93 "Booklet/Magazine".

• Open to left



• Open to right



♦ 2 Sided \rightarrow Magazine

See p.93 "Booklet/Magazine".

• Open to left



• Open to right



Combining Multiple Pages onto a Single Page

See p.86 "One-Sided Combine".

* 1 Sided 2 Pages \rightarrow Combine 1 Sided 1 Page



* 1 Sided 4 Pages \rightarrow Combine 1 Sided 1 Page



* 1 Sided 8 Pages \rightarrow Combine 1 Sided 1 Page









Copying Originals Such as Books

★ Bound Originals \rightarrow 1 Sided 2 Pages See p.91 "Series Copies".



Bound Originals \rightarrow 2 Sided 1 Page

See p.93 "Booklet/Magazine".



◆ Front & Back Bound Originals → 2 Sided Pages See p.93 "Booklet/Magazine".



Copying 2-Sided Pages onto 1-Sided Pages

See p.91 "Series Copies".

* 2 Sided 1 Page \rightarrow 1 Sided 2 Pages



Copying onto Thick Paper

Copying onto Thick Paper

See p.39 "When copying onto Thick Paper".

TABLE OF CONTENTS

Manuals for This Machine	i
What You Can Do with This Machine <color adjustme<="" color="" functions="" th=""><th>nts>iii</th></color>	nts>iii
Color Copying	iii
Stamping on Copies	V
Adjusting Colors	vi
Adjusting Images	vii
What You Can Do with This Machine	ix
Types of Duplex Copies	ix
Copying Book Originals	xii
Combining Multiple Pages onto a Single Page	xiv
Copying Originals Such as Books	
Copying 2-Sided Pages onto 1-Sided Pages	
Copying onto Thick Paper	xvii
Notice	1
How to Read This Manual	2
Symbols	
Functions Requiring Optional Configurations	3
Display	4
Simplified Display	
User Tools Menu (Copier and Document Server Features)	6

1. Placing Originals

Originals	.11
Sizes and Weights of Recommended Originals	
Sizes Detectable by the Auto Paper Select	
Missing image area	.14
Placing Originals	.15
Original Orientation	
Placing Originals on the Exposure Glass	
Placing Originals in the Auto Document Feeder	
Batch mode	
SADF mode	.20
Mixed size mode	.21
Original size	.22

2. Copying

Basic Procedure	25
Interrupt Copy	
Left Original Beeper	
Job Preset	
Job List	
Job List screen	
Checking jobs in the print queue	
Changing the order of jobs	
Holding print jobs	
Deleting jobs	
Checking Job History	

Copying from the Bypass Tray	34
When copying onto Regular Size Paper	36
When copying onto Custom Size Paper	
When copying onto OHP Transparencies or Thin Paper	38
When copying onto Thick Paper	
When Copying onto Envelopes	40
Color Functions	
Selecting a Color Mode	41
Convert Colors	42
Erase Color	43
Color Background	
Color Balance	45
Color Balance Program	46
Color Adjustment	
Image Adjustment	49
User Color	53
Copier Functions	57
Adjusting Copy Image Density	57
Selecting the Original Type Setting	59
Selecting Copy Paper	60
Preset Reduce/Enlarge	63
Zoom	65
Auto Reduce/Enlarge	66
Size Magnification	
Directional Magnification (%)	
Directional Size Magnification (mm)	
Sort	
Stack	
Staple	
Punch	
Duplex	
One-Sided Combine	
Two-Sided Combine Series Copies	
Booklet/Magazine	
Margin Adjustment	
Erase	
Background Numbering	
Preset Stamp	
User Stamp	
Date Stamp	
Page Numbering	
Image Repeat	
Double Copies	
Centering	
Positive/Negative	
Mirror	
Covers	
Designate	
Chapters	
Slip Sheets	135

Storing Data in the Document Server	
Programs	
Storing a Program	
Changing a Stored Program	
Deleting a Program	
Recalling a Program	
Programming Defaults in Initial Display	

3. Document Server

Relationship between Document Server and Other Functions	143
Document Server Display	144
Simplified Display	
Preview Display	146
Using the Document Server	147
Storing Data	147
Changing User Name, File Name or Password of a Stored Document	152
Checking the Details of a Stored Document	153
Searching for a Stored Document	154
Printing a Stored Document	156
Deleting a Document	162
Displaying a Document in Document Server with Web Image Monitor	163
Downloading Stored Documents	164

4. Appendix

Function Compatibility	
Supplementary Informations	
INDEX	178

Notice

Do not copy or print any item for which reproduction is prohibited by law.

Copying or printing the following items is generally prohibited by local law:

bank notes, revenue stamps, bonds, stock certificates, bank drafts, checks, passports, driver's licenses.

The preceding list is meant as a guide only and is not inclusive. We assume no responsibility for its completeness or accuracy. If you have any questions concerning the legality of copying or printing certain items, consult with your legal advisor.

The color samples in this manual may differ slightly from the colors of actual copies.

Colors on color keys or the color circle may differ slightly from the colors of actual copies.

This machine is equipped with a function that prevents making counterfeit bank bills. Due to this function the original images similar to bank bills may not be copied properly.

How to Read This Manual

🖉 Note

- □ For proper use of this product, be sure to read About This Machine first.
- Supplementary information about the copier mode is described in "Supplementary Information".

See p.167 "Supplementary Informations".

Symbols

This manual uses the following symbols:

A WARNING:

Indicates important safety notes.

Ignoring these notes could result in serious injury or death. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

CAUTION:

Indicates important safety notes.

Ignoring these notes could result in moderate or minor injury, or damage to the machine or to property. Be sure to read these notes. They can be found in the "Safety Information" section of About This Machine.

Important

Indicates points to pay attention to when using the machine, and explanations of likely causes of paper misfeeds, damage to originals, or loss of data. Be sure to read these explanations.

🖉 Note

Indicates supplementary explanations of the machine's functions, and instructions on resolving user errors.

₽ Reference

This symbol is located at the end of sections. It indicates where you can find further relevant information.

[]

Indicates the names of keys that appear on the machine's display panel.

Indicates the names of keys on the machine's control panel.

Functions Requiring Optional Configurations

Certain functions require special machine configuration and extra options as follows:

Stack: Internal Shift Tray, 500-sheet finisher, 1000-sheet finisher or booklet finisher

Staple: 500-sheet finisher, 1000-sheet finisher or booklet finisher

Staple (Booklet): booklet finisher

Punch: booklet finisher, Punch kit

🖉 Note

□ The bridge unit and paper tray unit are required when you install the finisher.

Display

The function items displayed serve as selector keys. You can select or specify an item by lightly pressing them.

When you select or specify an item on the display panel, it is highlighted like Interest. Keys appearing as Cannot be used.

Initial copy display



1. Original function, Image Density and Special Original function.

2. Operational status and messages.

3. You can register up to three frequently used reduce/enlarge ratios other than the fixed reduce/enlarge ratios. See "Shortcut R/E", General Settings Guide.

4. Numbers of originals scanned into memory, copies set, and copies made.

5. Displays contents of the Shortcut keys. You can register frequently used functions in these keys. See "Customize: Copier Function Key", General Settings Guide.

6. Sort, Stack, Staple functions.

7. Displays available functions. Press a function name to display its menu. For example, press [Reduce / Enlarge] to bring up the Reduce/Enlarge menu.

8. A clip mark indicates the currently selected function.

Simplified Display

This section explains how to use the "Simplified Display" and introduces its keys.

You can view the simplified display from the Copier's initial screen by pressing the **[Simplified Display]** key.

The simplified display contains main functions only.

Enlarged characters and keys make for easier operation.



Simplified Copier Screen



1. [Key Color]

Use this to intensify the screen contrast by changing the color of the keys. Not available on the copier default screen.

🖉 Note

- □ Press the **[Simplified Display]** key again to return to the copier default screen.
- □ The simplified display screen does not contain every available key.

User Tools Menu (Copier and Document Server Features)

This section describes items that can be specified on the copier initial screen. Copier initial screen can be displayed by pressing the **[User Tools/Counter]** key. For details about how to set up these items, see General Settings Guide.

*	General	Features
---	---------	----------

Item	Description
Auto Image Density Prior- ity	Set this function to use Auto Image Density when the power is turned on, or modes cleared.
Original Type Priority	You can select the original type effective when the power is turned on, or modes cleared.
Original Photo Type Prior- ity	When you select "Text / Photo" or "Photo" in "Original Type Pri- ority", you can change the settings of the selected original type.
Original Type Display	You can have the original types shown on the initial display.
Paper Display	You can choose to have the available paper trays and sizes shown on the initial display.
Original Orientation in Duplex Mode	You can set the original orientation when making two-sided copies.
Copy Orientation in Du- plex Mode	You can set the copy orientation when making two-sided copies.
Max. Copy Quantity	You can set the maximum copy quantity.
Auto Tray Switching	If you load paper of the same size in two or more trays, the ma- chine automatically shifts to the other when the first tray runs out of paper (when Auto Paper Select is selected.) This function is called "Auto Tray Switching". This setting specifies whether to use Auto Tray Switching or not.
Tone: Original Remains	The beeper (key tone) sounds if you forget to remove originals af- ter copying.
Job End Call	You can choose to have the beeper sound when copying is complete.
Customize: Copier Funci- ton Key	You can assign frequently used functions to function keys F1 to F6.
Customize: Document Server Storage Key	You can register frequently used functions to the Copy Function Keys of F1 to F6. You can also change the registered functions.

Reproduction Ratio

Item	Description
Shortcut R / E	You can register up to three frequently used Reduce/Enlarge ra- tios other than the fixed Reduce/Enlarge ratio and have them shown on the initial display. You can also change registered Re- duce/Enlarge ratios.
R / E Ratio	You can select a key to specify the reproduction ratio.
R / E Ratio Priority	Specify prioritized enlargement and reduction ratios by pressing [Reduce / Enlarge] .
Ratio for Create Margin	You can set a Reduce/Enlarge ratio when registering Create Mar- gin in a shortcut key.

✤ Edit

Item	Description
Front Margin: Left / Right	You can specify left and right margins on the front side of copies using the Margin Adjustment function.
Back Margin: Left / Right	You can specify left and right margins on the back side of copies using the Margin Adjustment function.
Front Margin: Top / Bottom	You can specify top and bottom margins on the front side of cop- ies using the Margin Adjustment function.
Back Margin: Top / Bottom	You can specify top and bottom margins on the back side of copies using the Margin Adjustment function.
1 Sided \rightarrow 2 Sided Auto Margin: TtoT	When using the 1 sided \rightarrow 2 sided Duplex function, you can specify margins on the back side.
1 Sided \rightarrow 2 Sided Auto Margin: TtoB	When using the 1 sided \rightarrow 2 sided Duplex function, you can specify margins on the back side.
Erase Border Width	You can specify the width of erased border margins using this function.
Erase Original Shadow in Combine	In Combine Copy or Booklet/Magazine Copy mode, you can specify whether to erase a 3 mm, 0.1" bounding margin around all four edges of each original.
Erase Center Width	You can specify the width of the erased center margins using this function.
Front Cover Copy in Combine	You can make a combined copy on the front cover sheet when you select the Front Cover function.
Copy Order in Combine	You can set the copy order when using the Combine function to Left to Right or Top to Bottom.
Orientation: Booklet, Mag- azine	You can select the orientation of copies to open when using Book- let or Magazine function.
Copy on Designating Page in Combine	You can make a combined copy on the inserted slip sheets when using the Desig./Chapter Copy function.
Image Repeat Separation Line	You can select a separation line using the Image Repeat function from: None, Solid, Broken A, Broken B, or Crop Marks.
Double Copies Separation Line	You can select a separation line using the Double Copies function from: None, Solid, Broken A, Broken B, or Crop Marks.
Separation Line in Combine	You can select a separation line using the Combine function from: None, Solid, Broken A, Broken B, or Crop Marks.

Stamp

Item	Description						
Background Numbering							
Size	You can set the size of the numbers.						
Density	You can set the density of the numbers.						
Stamp Color	You can set the color of the numbers.						
Preset Stamp							
Stamp Language	You can select the language of the stamp.						
Stamp Priority	You can select the stamp type given priority when [Preset Stamp] is pressed.						
Stamp Format	You can adjust the stamp printing quality ("COPY", "URGENT", "PRIORITY", "For Your Info.", "PRELIMINARY", "For Internal Use Only", "CONFIDENTIAL", "DRAFT").						
Stamp Color	You can specify the stamp printing color ("COPY", "URGENT", "PRIORITY", "For Your Info.", "PRELIMINARY", "For Internal Use Only", "CONFIDENTIAL", "DRAFT").						
User Stamp							
Program / Delete Stamp	You can register, change, or delete these user stamp designs.						
Stamp Format: 1 to 4	You can set the position where the stamp is printed.						
Stamp Color	Sets the color registered in User Stamp color (1 to 4).						
Date Stamp							
Format	You can select the date format for the Date Stamp function.						
Font	You can select the Date Stamp font.						
Size	You can set the Date Stamp size.						
Superimpose	You can have the Date Stamp printed in white where it overlap black parts of the image.						
Stamp Color	You can set the selected priority color when printing the date.						
Stamp Setting	You can have the date printed on the first page or all pages.						
Page Numbering							
Stamp Format	You can select the page number format given priority when [Page Numbering] is pressed.						
Font	You can select the page number font.						
Size	You can set the size of the page number.						
Duplex Back Page Stamp- ing Position	You can set the position of the duplex back page number printed using the Duplex function.						
Page Numbering in Combine	You can set page numbering when using the Combine and Page Numbering function together.						
Stamp on Designating Slip Sheet	You can print the page number onto slip sheets when using the Designate function and the Page Numbering function together.						
Stamp Position:P1,P2	You can set the position where the stamp is printed.						
Stamp Position:1/5,2/5	You can set the position where the stamp is printed.						

Item	Description
Stamp Position:-1-,-2	You can set the position where the stamp is printed.
Stamp Position:P.1,P.2	You can set the position where the stamp is printed.
Stamp Position:1,2	You can set the position where the stamp is printed.
Stamp Position:1-1,1-2	You can set the position where the stamp is printed.
Stamp Position:Page 1,Page 2	You can set the position where the stamp is printed.
Superimpose	You can have page numbers printed in white where they overlap black parts of the image.
Stamp Color	You can set the selected priority color when printing the date.
Page Numbering Initial Letter	You can select the page numbering initial letter between "P.1, P.2/P.1, P.2" and "S1, S2/S.1, S.2".

Input / Output

Item	Description
Switch to Batch	You can select to have the Batch or SADF function displayed when you press [Special Original] .
SADF Auto Reset	When you set one original at a time in the ADF, the Auto Feed in- dicator lights for a specified time after an original is fed, to show the ADF is ready for another original.
Rotate Sort: Auto Paper Continue	You can continue copying when paper of the required orientation has run out during rotate-sorting.
	This item becomes active when [With Image Rotation] of [Auto Tray Switching] under [With Image Rotation] is selected.
Memory Full Auto Scan Restart	If memory becomes full while scanning originals, the machine will copy the scanned originals first, and then automatically pro- ceed scanning remaining originals. You can enable or disable this function.
Letterhead Setting	If you select [Yes] for this function, the machine rotates images correctly.
Staple Position	You can select a key to appear preferentially for staple on the ini- tial screen.
Punch Type	You can select a key to appear preferentially for punch on the ini- tial screen.
Simplified Screen: Finish- ing Types	You can select a key to appear preferentially for finishing on the simple screen.

* Adjust Color Image

Item	Description
Background Density of ADS (Full Color)	The background density is adjusted to skip the texture and copy. You can adjust the background density up to 5 levels when in Full Color.
Color Sensitivity	You can adjust the color specified to convert in "Color Convert" and the color specified for "Erase Color", in 5 levels.
A.C.S. Sensitivity	This 5-step setting determines the level of the standard used for discriminating between black & white originals and full color originals when "Auto Color Select" is selected.
A.C.S. Priority	This setting determines the copy priority between "Black & White" and "Full Color" when "Auto Color Select" is selected.

* Administrator Tools

Item	Description
Menu Protect	You can prevent unauthenticated users from changing the user tools settings.

1. Placing Originals

This chapter describes the types of originals you can set and how to place originals.

Originals

This section describes the types of originals that can be placed, paper sizes that are automatically detected, and missing image area.

🖉 Note

□ As the color of markers or highlighters is difficult to reproduce, the copy might not come out depending on the color or a different color might be copied.

Sizes and Weights of Recommended Originals

The following describes recommended paper sizes and non-recommended originals for the ADF:

Metric version

Where original is placed	Original size	Original weight
Exposure glass	Up to A3	-
ADF	One-sided originals:A3□ - B5 JIS (Japanese Industrial Standard)□□	40-128 g/m ² (35-110 kg)
	Two-sided originals: A3□7-B6 JIS (Japanese Industrial Standard)□□	$52-105 \text{ g/m}^2 (45-90 \text{ kg})$

Inch version

Where original is placed	Original size	Original weight
Exposure glass	Up to 11" × 17"	-
ADF	One-sided originals: $11'' \times 17'' \square -5^1/2'' \times 8^1/2'' \square \square$	11-34 lb.
	Two-sided originals: $11'' \times 17'' \square -5^1/_2 \times 8^1/_2'' \square \square$	14-28 lb.

🖉 Note

- □ About 50 originals can be placed in the ADF.
- \Box The weight range for originals in the Mixed mode is 52-81 g/m² (13.8-21.5 lb).

Non-compatible originals for the Auto Document Feeder

Placing the following types of originals in the ADF can cause paper misfeeds or light & black lines or result in damage to the originals. Place these originals on the exposure glass instead.

- Originals other than those specified on "Sizes and Weights of Recommended Originals".
- Stapled or clipped originals
- Perforated or torn originals
- Curled, folded, or creased originals
- Pasted originals
- Originals with any kind of coating, such as thermal fax paper, art paper, aluminum foil, carbon paper, or conductive paper
- Originals with perforated lines
- Originals with indexes, tags, or other projecting parts
- Sticky originals such as translucent paper
- Thin, highly flexible originals
- Thick originals such as postcards
- Bound originals such as books
- Transparent originals such as OHP transparencies or translucent paper
- Originals that are still wet with ink or white-out.

🖉 Note

□ The original might become dirty if it is written with a pencil or a similar tool.

Sizes Detectable by the Auto Paper Select

Sizes detectable by the exposure glass and ADF are:

Metric version

Size Location of the original	A3D	B4 JIS ⊡	A4 🖓	B5 JIS 🗗	A5 🖓	B6 JIS 🗗	11″× 17″ ₽	81/2″ × 11″ ₽₽	8″ × 13″ ₽	8KD	16K
Expos- sure glass	0	0	0	0	O *1	×	×	×	O *2	O *3	O *3
ADF	0	0	0	0	0	0	0	0	O *2	0	0

- ^{*1} If you want to make A5 size detectable, consult your service representative.
- ^{*2} You can select from $8^1/2'' \times 13''$, $8^1/4'' \times 13''$, $8'' \times 13''$ with User Tools (System Settings).
- *3 You can select from 8K to A3 or B4 JIS, from 16K to A4, A5 or B5 JIS with User Tools (System Settings).

Inch version

Size Location of the original	A3D	A4 🖵	11″× 17″ ┏	81/2″ × 14″ ₽	81/2″ × 11″ ₽₽	51/2" × 81/2" D	81/2″ × 13″ ₽	11″× 15″ ₽	10″× 14″ ┏	8″ × 10″ ┏	71/4 ″× 101/2 ″₽ ₽
Expos- sure glass	×	×	0	0	0	O *1	×	×	×	×	×
ADF	0	0	0	0	0	0	O *2	O *2	0	O *2	O *2

 $^{*1}\,$ If you want make $5^1/_2'' \times 8^1/_2''$ size detectable, consult your service representative.

^{*2} You can select from $8^{1}/_{2}'' \times 13''$ to $8^{1}/_{2}'' \times 14''$, from $11'' \times 15''$ to $11'' \times 17''$, from $8'' \times 10''$ to $8^{1}/_{2}'' \times 11'' \square', 7/^{1}/_{4}'' \times 10^{1}/_{2} \square'$ to $8^{1}/_{2}'' \times 11'' \square'$ with User Tools (System Settings).

Exposure glass



✤ ADF



🖉 Note

□ When you copy custom size originals, make sure you specify the size of the originals. If not, the image may not be copied properly.

See p.23 "Custom sizes".

Sizes difficult to detect

It is difficult for the machine to detect the sizes of the following originals, so select the paper size manually:

- Originals with indexes, tags, or other projecting parts
- Transparent originals such as OHP transparencies or translucent paper
- Dark originals with a lot of text and drawings
- Originals which partially contain a solid image
- Originals which have solid images at their edges

Missing image area

Even if you place originals in the ADF or on the exposure glass correctly, 3 mm (0.1'') margins on all four sides might not be copied.
1

Placing Originals

This section describes the procedure for placing originals on the exposure glass and in the ADF.

Take care to place originals after any correction fluid and ink has completely dried. Not taking this precaution could cause marks on the exposure glass that will be copied onto paper.

🖉 Note

□ For original sizes you can set, see "Originals".

Reference

See p.11 "Originals".

Original Orientation

You can set the original orientation in the following ways. When placing the original on the exposure glass, set it facing downwards.

- Standard orientation sea Select this function when the original orientation is the same as the copy paper orientation.
- 90° turn 🖃

Use this function when you want to copy A3 \Box , B4 JIS \Box or $11'' \times 17''\Box$ size originals. The machine rotates the copy image by 90° and you can make copies as you want.

This is useful for copying large originals with the Staple, Duplex, Combine or Stamp functions.

For example, to copy A3 \square or $11'' \times 17''\square$ originals with the Staple function selected:



Press [Special Original].



2 Select the original orientation (**Man** or **Gamma**), and then press [OK].

🖉 Note

□ It is recommended to use this function together with the [Auto Paper Select] or [Auto Reduce / Enlarge] function.

Placing Originals on the Exposure Glass

Place originals on the exposure glass.

∰Important

Do not lift the exposure glass cover or ADF forcefully. Otherwise, the cover of the ADF might open or be damaged.

1 Lift the exposure glass cover or ADF.

Be sure to lift the exposure glass cover or ADF by more than 30 degrees. Otherwise, the size of the original might not be detected correctly.

2 Place the original face down on the exposure glass. The original should be aligned to the rear left corner.

Start with the first page to be copied.



- Positioning mark
- Left scale

E Lower the exposure glass cover or ADF.

Placing Originals in the Auto Document Feeder

Place originals in ADF.

Settings should be made in the following situations:

- When placing originals consisting of more than 50 pages: See "Batch mode".
- When placing originals one by one: See "SADF mode".
- When copying originals of various sizes: See "Mixed size mode".
- When placing custom size originals: See "Custom sizes".

Adjust the guide to the original size.

2 Set the aligned originals face up into the ADF.

Do not stack originals beyond the limit mark.

The last page should be on the bottom.

Be sure not to block the sensor or load the original untidily. Doing so may cause the machine to detect the size of the scanned image incorrectly or display a paper misfeed message. Also, be sure not to place originals or other objects on the top cover. Doing so may cause a malfunction.



1) Sensors



- Limit mark
- Document guide

- □ Straighten curls in the originals before placing them on the ADF.
- □ To prevent multiple sheets from being fed at once, fan the original before placing it on the ADF.
- □ Set the original squarely.

Batch mode

In Batch mode, the machine copies an original of more than 50 pages as one document, even if it is placed on the ADF in parts.

Press [Special Original].



2 Select [Batch] and then press [OK].

B Place the first part of the original, and then press the [Start] key.

After the first part of the original has been fed, place the next part, then press the [Start] key.

- □ When **[SADF]** is displayed in step **2**, set the Batch mode with **[Switch to Batch]**. See "Switch to Batch", General Settings Guide.
- □ To copy subsequent originals in this mode, repeat step .
- □ When the Sort, Combine or 1 Sided→2 Sided mode has been set, press the [#] key after all originals have been scanned.

SADF mode

In SADF mode, even when an original is placed page by page in the ADF, each page is automatically fed when placed.

∰Important

□ You should make a setting so that **[SADF]** will be displayed when you press **[Special Original]**. See "Switch to Batch", General Settings Guide.

Press [Special Original].



Press [SADF], and then press [OK].

E Place one page of an original, and then press the [Start] key.

When the machine instructs you to place another original, place the next page.

The second and subsequent pages will be fed automatically without pressing the **[Start]** key.

- □ When the Sort, Combine or 1 Sided→2 Sided mode has been set, press the [#] key after all originals have been scanned.
- □ See "SADF Auto Reset", General Settings Guide.

Mixed size mode

When placing different size originals of the same width in the ADF at the same time, the machine automatically checks the size of the originals and makes copies.

∰Important

- When placing originals of different sizes in the ADF and making copies without using the Mixed size mode, paper might become jammed or parts of the original image might not be copied.
- □ The sizes of the originals that can be placed in this mode are follows:
 - Metric version A3, B4 JIS, A4, C, B5 JIS, C, C
 - Inch version $11'' \times 17'' \square, 8^1/2'' \times 14'' \square, 8^1/2'' \times 11'' \square \square$

Press [Special Original].



2 Select [Mixed Sizes], and then press [OK].

3 Align the rear and left edges of the originals as shown in the illustration.



- ① Place the originals into the ADF
- Vertical size

Adjust the guide to the widest original size.

Delace originals in ADF.

6 Press [Start] key.

Original size

Specify the size of the originals.

Regular sizes

Select the size of the originals from the regular sizes.

Press [Special Original].



2 Press [Original Size] .





Select the size of original, and then press [OK].

b Place the original, and then press the [Start] key.

Custom sizes

When placing custom size originals in the ADF, specify the size of the originals.

∰Important

□ Paper that has a vertical length of 128–297 mm (5.1"-11.6") and a horizontal length of 128–432 mm (5.1"-17") can be placed with this function.

Press [Special Original].



2 Press [Original Size].

B Press [Custom Size].

Enter the horizontal size of the original with the number keys, and then press [#] key.



Enter the vertical size of the original with the number keys, and then press [#] key.

6 Press [OK].

2 Place the originals, and then press the [Start] key.

🖉 Note

□ If you make a mistake in step ④ or ⑤, press [Clear] or [Clear/Stop] in step ④, and then enter the value again.

2. Copying

This chapter describes the procedure for making copies in various modes.

Basic Procedure

This section describes the basic procedure for making copies.

∰Important

- When User Code Authentication is set, enter your user code (up to eight digits) with the number keys so that the machine accepts copy jobs. See "User Authentication Management", General Settings Guide.
- When Basic Authentication, Windows Authentication, LDAP Authentication, or Integration Server Authentication is set, enter your login user name and user password so that the machine accepts copy jobs. Ask the user administrator for the login user name and login password. For details, see "When the Authentication Screen is Displayed", About This Machine.

Make sure "Ready" appears on the screen.

If any other function is displayed, press the **[Copy]** key on the left side of the control panel.

Initial copy screen



2 Make sure no previous settings remain.

When there are previous settings remaining, press the **[Clear Modes]** key and enter the setting again.

- **B** Place your originals.
- 4 Make desired settings.

5 Enter the number of copies using the number keys.

The maximum copy quantity that can be set is 999.

6 Press the **[Start]** key.

The machine starts copying.

When placing originals on the exposure glass, press the **[#]** key after all originals are scanned.

Copies are delivered face down.

🖉 Note

- Always log off when you have finished using the machine to prevent unauthorized users from using the machine.
- □ To stop the machine during a multi-copy run, press the **[Clear/Stop]** key.
- □ To cancel all copy jobs and return the machine to the default condition, press the **[Clear Modes]** key.
- □ To clear entered values, press the **[Clear/Stop]** key or **[Cancel]** on the screen.
- □ To confirm settings, press the [Check Modes].

Interrupt Copy

Use this function if you want to interrupt a long copy job to make urgently needed copies.

∰Important

□ You cannot use the Interrupt Copy function when fax originals are being scanned or the scanner function is being used.

Press the [Interrupt] key.



2 The machine stops scanning. Remove the originals that were being copied.

3 Place the originals you want to copy.

4 Press the **[Start]** key.

The machine starts making copies.

5 When copying is complete, remove the originals and copies.

6 Press the [Interrupt] key again.

The interrupt key indicator goes off.

2 Replace the originals that you were copying, and then press the [Start] key.

Following message "Reset n originals.", replace the originals that you were copying.

🖉 Note

□ The previous copy job settings are restored. Simply press the **[Start]** key to continue copying from where it left off.

Left Original Beeper

The beeper sounds and an error message is displayed when you leave your originals on the exposure glass after copying.

🖉 Note

□ For details, see "Tone: Original Remains", General Settings Guide.

Job Preset

You can set up the next copy content during copying. If a long copy job is in progress and you do not want to wait for it to finish, you can use this function to set up the next copy job in advance. When the current copy job is finished, the next job will start automatically.

Press [New Job] when "Copying..." appears.



Be sure message "Ready" appears, and then set up the next copy job.

E Place the originals, and then press the [Start] key.

All originals are scanned.

When the preset job is complete, a job preset confirmation dialog box appears.

4 Press [Exit].

You return to the copy screen.

After the current copy job, the next copy job starts automatically.



□ You can switch the display to the current copy job by pressing **[To Copying Screen]**. You can switch the display to the preset job by pressing **[To Reserv. Screen]**.

Job List

Jobs printed using Copy, Document Server, or Printer mode are temporarily stored in the machine, and then executed in order. The Job List function allows you to manage these jobs. For example, you can cancel incorrect job settings or print an urgent document.

- □ You cannot use the Job List function when Interrupt Copy is active.
- Documents printed using the facsimile function and scanner function are not displayed in the job list.

Job List screen

This section explains displays and icons that appear in the Job List screen.

The Job List screen varies depending on whether **[Job Order]** is selected with Print Priority for the System Settings. For details about the setting procedure, see "Print Priority", General Settings Guide.

When [Job Order] is not selected:

The job list is displayed for each of the functions.

	rrent / Waitir			Job History		\
Copier / Doc	ument Server	Pri	inter			Others
Status	No. Us	er Name	File Name	Original Quantity T	ime Required	Waiting Jobs: 1
Printing	🛛 104			1 8	1 min.	
Add paper to	Tray 1.					
001 Scanning	D 105			7		
		nor				
ad 8 1/2 x	11 P size pa	pu.				

AMG059S

When [Job Order] is selected:

The job list is displayed for all functions in the order of print jobs.



- ① Switches between job lists for each function.
- ② Switches between [Current / Waiting Job List] and [Job History].
- Displays reserved job numbers.
- ④ Displays the function used to print jobs.
 - : Job printed using copy function.
 - L: Job printed using printer function.
 - D: Job printed using Document Server function.
 - Is Job printed using DeskTopBinder.
 - E: Job printed using Web Image Monitor.

Checking jobs in the print queue

You can check the contents of jobs in the print queue.

Press [Job List].

2 Select the job you want to check.



B Press [Details], and then check the contents.

Press [Exit].

Changing the order of jobs

You can change the order in which print jobs in the job list are served:

Press [Job List].

2 Select the job whose order you want to change.

Ja	b List			Exit
<u> </u>	Current / Waiting Job List		Job History	
Status	No. User Name	File Name	Original Quantity Time F	Required Waiting Jobs: 3
Printing	G 109		1 20	1 min. Details
Add paper t	to Tray 1.			Change Order
001	D 110		1 40 3	2 min. Suspend Printing
002	D 111		2 15	I min. Delete Reservation
003	G 112		3 5	1 min.
		Su		Capier JAN 21,2016 Printing: Imin. 214004

Press [Change Order].

Change the order using [Top], [Previous], or [Next].

]	Current / Waiting Job List		Job History		\
Status	No. User Name	File Name	Original Quantity	Time Required	Waiting Jobs: 3
Printing	109		1 20	1 min.	Change Order
Add paper -	to Tray 1.				OK
001	D 110		1 40	2 min.	▲ Top
002	D 111		2 15	1 min.	Previous
003	J 112		3 5	1 min.	▼ Next

5 Press [OK].

Holding print jobs

The machine holds jobs that are queued and currently printing.

Press [Job List].

2 Select the job(s) to hold.

	Current / W	aiting Job List	V	Job History		\
Status	No.	User Name	File Name	Original Quantity	Time Required	Waiting Jobs: 3
Printing	Q 10	9		1 20	1 min.	Details
Add paper	to Tray 1.					Change Order
001	Q 11)		1 40	2 min.	Suspend Printing
002	Q 11	1		2 15	1 min.	Delete Reservation
003	Q 112	2		3 5	1 min.	

Press [Suspend Printing].

Deleting jobs

You can delete a job that is queued or currently printing.

Press [Job List].

2 Select the job you want to delete.

J.	bb List				Exit
<u></u>	Current / Waiting Job List		Job History)	\
Status	No. User Name	File Name	Original Quantity	Time Required	Waiting Jobs: 3
Printing	G 109		1 20	1 min.	Details
Add paper	to Trav 1.				Change Order
001	D 110		1 40	2 min.	Suspend Printing
002	D 111		2 15	1 min.	Delete Reservation
003	G 112		3 5	1 min.	
		5	sten Status 🛛 Job Li:	t Cooler Printing	JAN 21,2016 1 min. 2140W

B Press [Delete Reservation].

Press [Yes].

🖉 Note

□ To delete multiple print jobs, select them in step 2.

Checking Job History

You can view the history contents of printed jobs.

Press [Job List].

2 Press [Job History].

A list of completed print jobs appears.

B Press [Details] to check the contents of the displayed jobs.

Press [Exit].

Copying from the Bypass Tray

Use the bypass tray to copy onto OHP transparencies, adhesive labels, translucent paper, postcards and copy paper that cannot be loaded in the paper trays.

∰Important

- □ When the duplex unit is attached, the default is [1 Sided → 2 Sided]. When copying from the bypass tray, select [1 Sided] for copying in [Dup./Combine/Series] (for example [1 Sided → 1 Sided] or [2 Sided → 1 Sided]). You can change the initial settings. See "Programming Defaults in Initial Display".
- Paper has a vertical length of 90-305 mm (3.6-12 inch) and a horizontal length of 148-457.2 mm (5.9-18 inch) can be copied from the bypass tray.
- □ The machine can detect the following sizes as regular size copy paper: A3 \Box , A4 \Box , 8″ × 13″ \Box . If you want to use the size of paper other than the above, be sure to specify the size.
- □ When copying on OHP transparencies or paper heavier than 128 g/m² (about 90 kg, 34 lb.), you need to specify the type and size of paper with "Special Original".
- The maximum number of sheets you can load at the same time depends on paper type. The maximum number of sheets should not exceed the upper limit.
- □ When copying paper lighter than 59g/m² or tracing paper, you need to specify the paper type.
- □ When paper larger than 433 mm (17.1 inch) in size is used, the paper may become wrinkled, may not be fed into the machine, or may cause paper jams.

✤ [Bypass Tray Usage] key

Press [Bypass Tray Usage] to display a description on using the bypass tray.



1 Open the bypass tray.



2 Insert the paper face-down until you hear the beep, and then align the paper guide to the paper size.

If the guides are not flush against the copy paper, images might be skewed or paper misfeeds might occur.

Do not stack paper over the limit mark, otherwise images might be skewed or paper misfeeds might occur.

Swing out the extender to support paper sizes larger than A4 \square or $8^1/_2$ " × 11" \square . Fan paper to get air between the sheets and avoid a multi-sheet feed.



Extender

E Press [Bypass], and then press the [#] key.

Select the size and type of the paper.

• Place the paper, and then press the [Start] key.

6 When the copy job is finished, press the **[Clear Modes]** key to clear the settings.

🖉 Note

- □ When the Sort function is selected, press the **[#]** key after all originals have been scanned.
- When the beeper is turned off, it will not sound if you insert paper into the bypass tray. See "Panel Tone", General Settings Guide.

Reference

See p.142 "Programming Defaults in Initial Display".

When copying onto Regular Size Paper

Makes copies onto regular size paper from the bypass tray.

1 Open the bypass tray, and then align the paper guide to the paper size.

2 Insert the paper face-down until you hear the beep.

B Press the [#] key.

Press [Select Size].



5 Select the paper size.6 Press [OK] twice.

When copying onto Custom Size Paper

Makes copies onto custom size paper from the bypass tray.

1 Open the bypass tray, and then align the paper guide to the paper size.

2 Insert the paper face-down until you hear the beep.

8 [#] key.

4 Press [Custom Size].



Enter the horizontal size of the original with the number keys, and then press [#].

6 Enter the vertical size of the original with the number keys, and then press **[#]**.



Press [OK].

- □ If you make a mistake in step **5** or **6**, press **[Clear]** or **(Clear/Stop)** key, and then enter the value again.
- □ To register the custom size entered in step [], press [Program] and then press [Exit] in the confirmation screen.

When copying onto OHP Transparencies or Thin Paper

When copying onto OHP transparencies or thin paper, select the type and size of paper.

∰Important

- **D** We recommend that you use specified OHP transparencies.
- □ OHP transparencies must be loaded face down in the tray with the notched corner of the sheet in the appropriate corner of the tray.
- To prevent multiple sheets from being fed at once, fan paper before placing it on the tray.
- □ When copying onto OHP transparencies, remove copied sheets one by one.

U Open the bypass tray, and then align the paper guide to the paper size.

2 Insert the paper face down until you hear the beep.

- Press the [#] key.
- Select paper type ([OHP (Transparency)] or [Thin Paper]) in the special paper settings.

Tray. Custom Size	
	► Special Paper
paper in ⊡orientation. Ist paper guide with paper	OHP (Transparency)
Select Size	Select Thick Paper,
System Status Job List	JAN 21,2006 3:16AM

Select the paper size, and then press [OK] to return to the initial display.

6 Place the paper, and then press the **[Start]** key.

When the copy job is finished, press the [Clear Modes] key to clear the settings.

🖉 Note

□ For OHP transparencies or thin paper, print speed is slower when compared to printing on plain paper.

When copying onto Thick Paper

When copying onto thick paper, select the type and size of paper.

To prevent multiple sheets from being fed at once, fan paper before placing it on the tray.

1 Open the bypass tray, and then align the paper guide to the paper size.

2 Insert the paper face down until you hear the beep.

Press the [#] key.

Press [Select Thick Paper].

Select paper type (one of [Thick Paper 1], [Thick Paper 2], [Thick Paper 3], [Thick 1: Dup.Back], [Thick 2: Dup.Back], and [Thick 3: Dup.Back]), and then press [OK]. Select [Thick Paper 1] when copying paper lighter than 169 g/m² (45.0 lb.) or less. Select [Thick Paper 2] when copying paper lighter than 219 g/m² (58.3 lb.) or less. Select [Thick Paper 3] when copying paper lighter than 253 g/m² (67.3 lb.) or less.

Car

6 Select the paper size.

2 Press [OK] twice.

Place the paper, and then press the [Start] key.

• When the copy job is finished, press the [Clear Modes] key to clear the settings.

- □ If Internal Tray 1 is not selected for the output paper tray, copies are delivered to it.
- □ For thick paper, print speed is slower when compared to printing on plain paper.

When Copying onto Envelopes

- **1** Open the bypass tray, and then insert the envelopes with the side you want to copy face down until the beeper sounds.
- Align the paper guide to the envelope side.
- Press the **[#]** key.
- **4** Press [Select Thick Paper].
- **5** Select [Thick Paper 1], and then press [OK].
- **6** Select the paper size.
- Press [OK] twice.
- B Place the originals, and then press the [Start] key.
- When the copy job is finished, press the [Clear Modes] key to clear the settings.

🖉 Note

- When placing an original on the exposure glass, place the original with the bottom line aligned to the left scale.
- □ When placing originals in the ADF, place the originals with the bottom line inserted in the ADF.
- □ When inserting envelopes, be sure to unfold the flaps and position them opposite to the paper feed direction.



Reference

For details about supported size of envelope, see "Recommended Paper Sizes and Types", About This Machine.

Color Functions

This section describes functions that are used for color copying.

Selecting a Color Mode

Select a color (or colors) that suits your originals and copying requirements. For color images, refer to "What You Can Do with This Machine <Color Functions/Color Adjustments>".

The following three color modes are available:

Auto Color Selection

Judges the color of the original automatically, and copies either in full color or black/white.

Full Color Copy

Copies by overlaying yellow, magenta, cyan and black.

Black/White Copy

Copies in black regardless of the color of the original.

Select the type of color.



🖉 Note

- □ For color images, refer to "What You Can Do with This Machine <Color Functions/Color Adjustments>".
- □ To use a user color, you need to register it beforehand. For details, see "Registering Colors".

Reference

See p.iii "What You Can Do with This Machine <Color Functions/Color Adjustments>".

See p.53 "User Color".

2

Convert Colors

Copies by changing the Color in the original to a different Color.

∰Important

- □ It is possible to specify up to 4 Colors.
- □ To use this function, **[Full Color]** must be selected.
- □ If any other Color mode is selected, you cannot select [Convert Color].

Press [Full Color].



2 Press [Edit / Color].



1 Make sure that [Color] is selected before pressing [Convert Color].

Select any one item from [Conversion 1] to [Conversion 4].

Auto Paper 1 ∟ . Select► 8½×11	2 ⊔ ¤ 11×17	3 ⊫⊔	⊌ Bypass	
Convert Color				Can
Select item.				
Conversion 1,,,			\rightarrow	
Conversion 2,,,			\rightarrow	
Conversion 3			\rightarrow	
Conversion 4,,,		·	\rightarrow	

5 Selects the Color to be converted.

6 Selects the new Color to be converted.

You can adjust the density of each Color in four steps.

To select User Color, press [User Color], and then select the Color.

After selecting all Colors to be converted, press [OK] three times.

Place the originals, and then press the [Start] key.

🖉 Note

- The width of the Color to be converted can be adjusted in five levels. If the Color width is set to [Wider] and red has been specified, Colors, which are close to magenta or orange, will also be converted. The Color width can be adjusted in User Tools. This adjustment will be valid in "Erase Color". See "Color Sensitivity", General Settings Guide.
- □ When you want to change the converted Color in step [], press from [Conversion 1] to [Conversion 4] and make the selection again.
- □ When changing between more than two Colors, repeat steps 4 to 6.
- □ The full Color counter will advance to "1".

Erase Color

Copies by erasing a certain Color in the image of the original.

Press [Edit / Color].



2 Make sure that [Color] is selected before pressing [Erase Color].

B Select the Color to be erased.

It is possible to select up to 4 Colors.

- After selecting all Colors to be erased, press [OK] twice.
- E Place the originals, and then press the [Start] key.

🖉 Note

- The width of the Color to be deleted can be adjusted in five levels. If the Color width is set to [Wider] and red has been specified, Colors, which are close to magenta or orange, will also be deleted. The Color width can be adjusted in User Tools. See "Color Sensitivity", General Settings Guide.
- □ You can cancel the selection by pressing the selected (highlighted) key in step 3.
- When the Full Color Copy is selected, the full Color counter will advance to "1". When the Black/White is selected, the mono-Color counter will advance to "1".

Color Background

Copies by adding a Color in the whole page.

∰Important

Since the Color Background function overprints the entire original, the Color of the image may change.

Press [Edit / Color].



2 Make sure that [Color] is selected before pressing [Color Background].

Select the background Color, and then press [OK] twice.

You can adjust the density of each Color in four steps.

To select User Color, press [User Color], and then select the Color.

Place the originals, and then press the [Start] key.

- □ You can cancel the selection by pressing the selected (highlighted) key in step 3.
- When the Full Color Copy is selected, the full Color counter will advance to "1". When the Black/White is selected, the mono-Color counter will advance to "1".

Color Balance

Adjusts the overall Color tone when the overall copy is reddish or bluish.

Press [Edit / Color].



2 Make sure that [Color] is selected before pressing [Adjust Color].

3 Make sure that [Color Balance] is selected.

Adjust the Color balance by pressing [Lighter] or [Darker].



5 Press [OK] twice.

🖉 Note

- □ The adjusted settings will be deleted and the initial values will be reset, when Auto Clear has been performed, when the **[Clear Modes]** key has been pressed or when the power has been turned off.
- □ For types and examples of the image adjustment functions, see "What You Can Do with This Machine <Color Functions/Color Adjustments>".

Reference

See p.iii "What You Can Do with This Machine <Color Functions/Color Adjustments>".

Color Balance Program

You can also store the Color balance setting as a Color balance program and recall it when you want to use it.

You can store up to three programs.

🖉 Note

□ If you want to change the registered settings, register them one more time. In this case, the previously registered contents will be changed.

Registering the adjusted Color balance

Register adjusted Color balance settings so that you can use them later.

Change the Color balance.

Press [Program Color Balance].

Yellow	aLighter	
Magenta	aLighter	
Cyan	dLighter	
Black	aLighter	
Program Color Balance		
		System Statu

E Press [♣ Program].

Select a program number ([1]-[3]) for this setting.

The Color balance setting will be registered in the selected number.

5 Press [OK] twice.

🖉 Note

- □ If you select the program number key where the � is displayed in step , the previously registered settings will change (will be overwritten).
- □ For details about how to adjust the Color balance, see "Color Balance".

Reference

See p.iii "What You Can Do with This Machine <Color Functions/Color Adjustments>".

See p.45 "Color Balance".

Changing the registered contents

Changes contents stored in Color balance programs.

Press [Edit / Color].

2 Make sure that [Color] is selected before pressing [Adjust Color].

B Make sure that [Color Balance] is selected before pressing [Program Color Balance].



Select the program number ([1]-[3]) to be changed.

The programmed Color balance appears.

- **5** Change the registered contents.
- **6** After the programmed contents are changed, press [Program Color Balance].

2 Press [Program], and then press the program number to be overwritten.

8 Press [Yes].

The program is overwritten.

Press [OK]twice.

Copying with the registered contents

Recalls and copies contents stored in Color balance programs.

Press [Edit / Color].

2 Make sure that [Color] is selected before pressing [Adjust Color].

Make sure that [Color Balance] is selected before pressing [Program Color Balance].

A Make sure that [Recall] is selected, and then select the program number registered by the Color balance to be used.

5 Press [OK] twice.

2

6 Place the originals, and then press the **[Start]** key.

🖉 Note

□ After copying has been completed, pressing the **[Clear Modes]** key deletes the recalled contents.

Deleting the registered contents

Deletes contents stored in Color balance programs.

- Press [Edit / Color].
- **2** Make sure that [Color] is selected before pressing [Adjust Color].
- **U** Make sure that [Color Balance] is selected before pressing [Program Color Balance].
- Press [Delete], and then select the program number registered by the Color balance to delete.

D Press [Yes].

6 Press [**0**K] twice.

Color Adjustment

Adjusts the specific Colors (yellow, red, magenta, blue, cyan and green) by mixing them with adjacent Colors in the Color circle.

You can adjust up to three Colors from yellow, red, magenta, blue, cyan, or green.

This function is not available if Black/White is selected.

Press [Edit / Color].



2 Make sure that [Color] is selected before pressing [Adjust Color].

Press [Adjust Color].

Select the Colors you want to adjust.

You can select up to 3 Colors.



5 Adjust the Color tastes using $[\leftarrow]$ or $[\rightarrow]$.

Refer to the Color circle on the control panel.

6 Press [**0**K] twice.

🖉 Note

- □ The adjusted settings will be deleted and the initial values will be reset, when Auto Clear has been performed, when the **[Clear Modes]** key has been pressed or when the power has been turned off.
- □ For types and examples of the image adjustment functions, see "What You Can Do with This Machine <Color Functions/Color Adjustments>".

✓ Reference

See p.iii "What You Can Do with This Machine <Color Functions/Color Adjustments>".

Image Adjustment

The following five types of image adjustments are available:

Sharp/Soft

Adjusts the outline of an image.

Contrast

Adjusts the shades of an image.

Background Density

Adjusts the background density of an image.

Adjust U.C.R

Adjusts the amount of black toner to express vividly the black areas in an image.

Text/Photo Sensitivity

Adjusts the standard level in judging the image in the text and photo part when using "Text / Photo".

Press [Edit / Color].



- **2** Make sure that [Color] is selected before pressing [Adjust Color].
- Press [Copy Quality].

4 Adjusts the settings.

🔗 Note

- □ [Sharp / Soft], [Contrast], and [Background Density] can each be adjusted, however, their adjustments can affect the level of other adjustment functions.
- □ The adjusted settings will be deleted and the initial values will be reset, when Auto Clear has been performed, when the **[Clear Modes]** key has been pressed or when the power has been turned off.
- □ For types and examples of the image adjustment functions, see "What You Can Do with This Machine <Color Functions/Color Adjustments>".

PReference

See p.iii "What You Can Do with This Machine <Color Functions/Color Adjustments>".

Adjusting the sharpness/softness

Adjusts the outline of an image.

A	adjust Color		
A	djust each item.		
	Color Balance	Adjust Color	Copy Qi
	Sharp / Soft	Soft	
	Contrast	Low	
	Background Density	QLighter	
	Adjust U.C.R.	aLighter	

Press [OK].
Adjusting the contrast

Adjusts the shades of an image.



Press [OK].

Adjusting the background density

Adjusts the background density of an image.

Adjust by pressing [Lighter] or [Darker].

Adjust Color		
Adjust each item.		
Color Balance	Adjust Color	Copy Qua
Sharp / Soft	Soft	
Contrast	Low	
Background Density	dLighter	
Adjust U.C.R.	aLighter	

2 Press [OK].

🖉 Note

- □ Adjustments should be made lightly when copying dark textured originals, such as newspaper or recycled paper.
- Adjustments should be made darker when darkening the Color of markers or highlighters. However, as the Color of highlighters is difficult to reproduce, the copy might not come out depending on the Color or a different Color might be copied.

Adjusting the U.C.R

Adjusts the amount of black toner to express vividly the black areas in an image.

1	Adjust by	pressing	[Lighter]	or [Darl	ker]
---	-----------	----------	-----------	----------	------

Sharp / Soft	Soft		
Contrast	Low		
Background Density	dLighter		
Adjust U.C.R.	dLighter		
Text / Photo Sensitivity	Text		
		Sys	tem Statu

2 Press [OK].

Adjusting the Text/Photo sensitivity

Adjusts the standard level in judging the image in the text and photo part when using "Text / Photo".

Adjust by pressing [Text] or [Photo].

Sharp / Soft	Soft		I	
Contrast	Low			
Background Density	ØLighter			
Adjust U.C.R.	aLighter			
Text / Photo Sensitivity	Text			
K		Sy	stem	Statu

2 Press [OK].

🖉 Note

Make sure to set to "Text" when parts of the texts are faded or are not clear. Set to "Photo" when the outline of photos becomes dark.

User Color

You can register User Colors made by adjusting the density of yellow, magenta, cyan, and black. You can also give a name to the Colors you register, and print out a list of user colors.

You can create Colors by:

- Adjusting the density of each Color based on the density of a chosen basic Color.
- Directly specifying the density of each Color using the number keys.

🖉 Note

- □ Adjust the Colors to be registered so that the total of yellow, magenta, cyan and black is under 400%.
- □ When copying using user colors, the fine shades might vary depending on the condition of the machine.
- □ In order to correctly reproduce originals, the values, which have been input, are corrected inside the machine, and copies are made using the best suitable values. Therefore, there might be slight Color differences when copying using "Text" and when using "Photo".
- **Up** to 15 Colors can be registered.
- □ Sample prints of user colors can also be made on an A4 □, 8¹/₂" × 11" □, A3 □, or 11" × 17" □ size page.
- □ When printing a list of user colors, the full Color counter will advance to "1".
- □ For types and examples of the image adjustment functions, see "What You Can Do with This Machine <Color Functions/Color Adjustments>".

Reference

See p.iii "What You Can Do with This Machine <Color Functions/Color Adjustments>".

Adjusting Colors Based on Selected Color

Creates Colors by adjusting the density of each Color based on the density of a chosen basic Color.

Press [Edit / Color].



2 Press [Color], and then press [User Color].



Select the number ([1]-[15]) for the Color you want to register.

Select the Color to be used as a base for registration from the basic and user colors.

The density of each Color for the selected Color is displayed.

User Color 1		
Select base color.		
Basic Color	Yellow	В
User Color	Red	Ligh
	Pink	Ma
	Marine Blue	E
	Black	

To select User Color, press [User Color], and then select the Color.

5 Select the Color whose density is to be specified, and then specify the density in percentages using [+] or [-].

Yellow	ensity, press a color key.	
Magenta	0%	
Cyan	0%	+
Black	0%	—

Check names and densities of each Color, and press [OK].

Press [OK].

🖉 Note

- □ It is also possible to specify density by pressing **[Adjust with Number Keys]** in step **5**.
- Selecting a user color key that is indicated by a solid line will change (overwrite) the contents of that Color.

Creating Colors by Directly Specifying the Density of Each Color with Number Keys

Creates Colors by directly specifying the density of each Color using the number keys.

Press [Edit / Color].

Press [Color], and then press [User Color].

3 Select the number ([1]-[15]) for the Color you want to register.

4 Press [Custom Setting].

5 Select the Color whose density is to be specified.

6 Enter the density (%) using the number key. When the densities of each Colors have been specified, press **[#]** key.

Check names and densities of each Color, and press [OK].

Repeat steps **5-7** if you want to specify the density of multiple Colors.

Press [OK].

🖉 Note

- □ It is also possible to specify density by pressing [Adjust with [+] [-]] and then using [+] and [-] in step [].
- Selecting a user color key that is indicated by a solid line will change (overwrite) the contents of that Color.

Renaming a Color

Renames a user color.

Press [Change Name].

2 Enter the name of the Color (up to 16 characters), and then press [OK].

Press [OK].

Deleting User colors

Deletes user colors.

∰Important

□ You can not delete Colors registered in the program or user colors that are currently being used.

Press [Edit / Color].

2 Press [Color], and then press [User Color].

B Press [Delete].

Select the number of the user color (whose key is indicated by a solid line) you want to delete.

5 Press [Yes].

6 Press [**0**K] twice.

Printing a List of user colors

Prints a list of user colors.

Press [Edit / Color].

2 Press [Color], and then press [User Color].

E Check the copy paper, and then press [Print Sample of User Color].

The list of user colors is output in the internal tray.

🖉 Note

 \Box The list will be copied on a A4 \Box , $8^1/_2'' \times 11'' \Box$, A3 \Box or $11'' \times 17'' \Box$ sheet.

2

Copier Functions

This section describes the copy functions.

Adjusting Copy Image Density

There are three types of adjustment available.

Auto Image Density

The machine automatically adjusts the image density by scanning the densities of originals. Dark texture originals (such as newspaper or recycled paper) will be copied so that background will not be reproduced.

Manual image density

You can adjust the density of the overall original in nine steps.

Combined auto and manual image density

Adjusts the density of an image only for dark texture originals.

Auto image density

The machine automatically adjusts the image density by scanning the densities of originals. Dark texture originals (such as newspaper or recycled paper) will be copied so that background will not be reproduced.

1 Make sure that [Auto Density] is selected.



Manual image density

You can adjust the density of the overall original in nine steps.

[Auto Density] is selected, press [Auto Density] to cancel it.

2 Press [◀] or [▶] to adjust the image density. The density indicator "∇" moves.

Full Color	Detection		
Black & White			
Text Photo	Full Size	Auto Reduce / Enlarge	11×15 81/2×11
Text / Photo	1 sided+2 sided		ed≁Comb 2 o
Others	$1^2 \rightarrow 2$	$\int_{2} \boxed{\int_{2}^{2} \sqrt{\int_{2}^{2} \sqrt{\int_{2}^{2}}}} \boxed{\int_{2}^{1}}$	$ ^2 \rightarrow 1 ^2$
Auto Density	Sort S	itack Staple	, B
R 🖪 Special Original	Finishin	g Cover/Slip Shee	t Edit
		2	ystem Statu

Combined auto and manual image density

Adjusts the density of an image only for dark texture originals.

Make sure [Auto Density] is selected.

2 Press [◀] or [▶] to adjust the density. The density indicator "▽" moves.



2

Selecting the Original Type Setting

Select one of the following 6 types to match your originals:

✤ Text

Select this mode when your originals contain only text (no pictures).

Text/Photo

Select **[Text / Photo]** when your originals contain photographs or pictures with text.

Photo

Delicate tones of photographs and pictures can be reproduced with this mode.

- When copying developed photographs:
- When copying photographs or pictures that are printed on paper (e.g. magazines):
- When copying copies or originals generated by printers:

Generation Copy

If your originals are copies (generation copies), the copy image can be reproduced sharply and clearly.

Select this type from **[Others]** when Original Type Display (Copier / Document Server Features) has been set to Hide.

Pale

The machine scans originals with settings suitable for originals that have lighter lines written in pencil, or for faint copied slips. The faint lines will be clearly copied.

Select this type from **[Others]** when Original Type Display (Copier / Document Server Features) has been set to Hide.

Map

The machine scans originals with settings suitable for map originals. Select this type from **[Others]** when Original Type Display (Copier / Document Server Features) has been set to Hide.

1 Select the original type, and then press [OK].



🖉 Note

See "Original Type Display" and "Adjust Color Image", General Settings Guide.

Selecting Copy Paper

There are two ways to select copy paper:

* Auto Paper Select

The machine selects a suitable size of copy paper automatically based on original size and reproduction ratio.

Manual Paper Select

Choose the tray containing the paper you want to copy onto: a paper tray, by-pass tray or LCT.

See the following table for copy paper sizes and orientations that can be used with Auto Paper Select (when copying at a ratio of 100%):

Metric version

Where original is set	Paper size and orientation
Exposure glass	A3, B4 JIS, A4, C, B5 JIS, C, 8" × 13"
ADF	A3 \square , B4 JIS \square , A4 \square \square , B5 JIS \square \square , A5 \square \square , 11 × 17 \square , 8 ¹ / ₂ " × 11" \square \square , 8" × 13" \square , 8K \square , 16K \square \square

Inch version

Where original is set	Paper size and orientation
Exposure glass	$11'' \times 17'' \square, 8^1/2'' \times 14'' \square, 8^1/2'' \times 11'' \square \square$
ADF	A3D, A4D, $11'' \times 17''$ D, $8^{1}/{2''} \times 14''$ D, $8^{1}/{2''} \times 11''$ D, $5^{1}/{2''} \times 8^{1}/{2''}$, $10'' \times 14''$ D, $7^{1}/{4''} \times 10^{1}/{2''}$ D

🖉 Note

Only the paper trays set to [No Display] or [Recycled Paper] in Paper Type in Tray Paper Setting in System Settings and also set to [Yes] in Apply Auto Paper Select can be selected in Auto Paper Select mode. See "Paper Type: Tray 1-4", General Settings Guide.

□ See "Paper Display", General Settings Guide.

Reference

See p.12 "Non-compatible originals for the Auto Document Feeder".

Auto Paper Select

The machine selects a suitable size of copy paper automatically based on the original size and the reproduction ratio.

1 Make sure that Auto Paper Select is selected.

Trays with a key mark (ID) will not be automatically selected. See "Paper Type", General Settings Guide.



Manual Paper Select

Choose the tray containing the paper you wish to copy onto: a paper tray, bypass tray or large capacity tray (LCT).

1 Select the paper tray, bypass tray or the LCT.

The indicator corresponding to the selected paper tray is highlighted. See "Copying from the Bypass Tray".



🖉 Note

□ If the orientation in which your original is placed (□ or □) is different from that of the paper you are copying onto, this function rotates the original image by 90° to fit it on the copy paper.



- □ This function works when **[Auto Paper Select]** or **[Auto Reduce / Enlarge]** is selected. See "Auto Paper Select" and "Auto Reduce / Enlarge".
- □ The default setting for Auto Tray Switching is **[With Image Rotation]**. You cannot use the Rotated Copy function if this setting is changed to **[Without Image Rotation]** or **[Off]**. See "Auto Tray Switching", General Settings Guide.
- □ You cannot use the Rotated Copy function when enlarging onto A3, B4 JIS or 11" × 17", 8¹/₂" × 14" size paper. In this case, place your original in the □ orientation.

	Original size and orientation		Copy paper size and orientation
You cannot rotate:	$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	When enlarg- ing to \rightarrow	8 ¹ /2" × 14", or 11" × 17" GCROTA2E
However, you can use:	$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	When enlarg- ing to \rightarrow	8 ¹ /2″ × 14″, or 11″ × 17″ GCROTA3E

- □ You cannot use the Rotated Copy function if Left 2, Top 2 is selected for stapling when using the 500-sheet finisher. See "Staple".
- You cannot use the Rotated Copy function if 2 is selected for stapling when using the 1000-sheet finisher.
- You cannot use the Rotated Copy function if 2 or Center is selected for stapling when using the booklet finisher.

Reference
 See p.34 "Copying from the Bypass Tray".
 See p.66 "Auto Reduce/Enlarge".
 See p.77 "Staple".
 See p.80 "Punch".

Preset Reduce/Enlarge

You can select a preset ratio for copying.



Base Point

The base point of Reduce/Enlarge differs depending on how the original is scanned. When the original is placed on the exposure glass, the upper left corner will be the base point. When it is placed in the ADF, the bottom left corner will be the base point.



- ① Base point when placed on the exposure glass.
- ② Base point when placed in the ADF.

Press [Reduce / Enlarge].



2 Select a ratio, and then press [OK].

E Place your originals, and then press the [Start] key.

🔗 Note

- □ To select a preset ratio on the initial display in step **1**, press the shortcut reduce/enlarge key and go to step **3**.
- □ See "Shortcut R / E" and "R / E Ratio Priority", General Settings Guide.

Create Margin function

Create Margin function reduces the image to 93% of its original size to place the reduced image at the center. By combining it with the Reduce/Enlarge function, you can further increase a margin.

Press [Create Margin] displayed on the initial display.



2 If you do not want to combine it with the Reduce/Enlarge function, place your originals, and then press the [Start] key.

🖉 Note

See "Customize: Copier Function Key", "Ratio for Create Margin", General Settings Guide.

Zoom

You can change the reproduction ratio in increments of 1%.



To select the ratio with [-] and [+]

Select a ratio using [-] or [+].

Press [Reduce / Enlarge].



2 Select a preset ratio which is close to the desired ratio.

3 Adjust the ratio with [-] or [+].

To change the ratio in increments of 1%, press [-] or [+]. To change the ratio increments of 10%, press and hold down [-] or [+].

Press [OK].

5 Place the originals, and then press the [Start] key.

🖉 Note

□ If you have incorrectly entered the ratio in step 3, readjust it with [-] or [+].

To enter the ratio with the number keys

Select a ratio using the number keys.

Press [Reduce / Enlarge].



2 Press [Number keys].

Enter the desired ratio with the number keys, and then press [#] key.

Press [OK] twice.

• Place your originals, and then press the [Start] key.

Auto Reduce/Enlarge

The machine can choose an appropriate reproduction ratio based on the paper and original sizes you select.



∰Important

- □ You cannot use the bypass tray with this function.
- □ When using Auto Reduce/Enlarge, see the following table for original sizes and orientations you can use:

Metric version

Where original is placed	Original size and orientation
Exposure glass	A3, B4 JIS, A4, C, B5 JIS, C, 8" × 13"
ADF	A3 \square , B4 JIS \square , A4 \square \square , B5 JIS \square \square , A5 \square \square , 11 × 17 \square , 8 ¹ / ₂ " × 11" \square \square , 8" × 13" \square , 8K \square , 16K \square \square

Inch version

Where original is placed	Paper size and orientation
Exposure glass	$11'' \times 17'' \square, 8^1/_2'' \times 14'' \square, 8^1/_2'' \times 11'' \square \square$
ADF	A3D, A4 DD, $11'' \times 17''$ D, $8^1/2'' \times 14''$ D, $8^1/2'' \times 11''$ D, $5^1/2'' \times 8^1/2''$ D, $10'' \times 14''$ D, $7^1/4'' \times 10^1/2''$ D

Press [Auto Reduce / Enlarge].



2 Select the paper type.

B Place your originals, and then press the [Start] key.

Reference

See p.12 "Non-compatible originals for the Auto Document Feeder".

Size Magnification

This function calculates an enlargement or reduction ratio based on the lengths of the original and copy.



Measure and specify the lengths of the original and copy by comparing "A" with "a".

Press [Reduce / Enlarge].

/ Enlarge	11×15 8½×11	51/2×81/2 81/2×14	93%	100%		
sided 1 side	:d⇒Comb 2 orig	1 sided+Comb 4	+ orig			
1/2 L	$ \begin{array}{ c c c c c } \hline & & & \\ \hline \\ \hline$					
BE F BE BE						
'Slip Sheet Edit / Color Dup./Combine/Series Reduce / Enlarge						
S	vstem Status	Job List		JAN 21,2006 3:20AM		

- **2** Press [Size Magnification].
- Enter the length of the original with the number keys, and then press [#] key.

You can enter sizes between 1 to 999 mm in 1 mm steps.

Enter the length of the copy with the number keys, and then press [#] key.

5 Press [OK] twice.

Delace the originals, and then press the [Start] key.

🖉 Note

□ To change the length after pressing **[#]** key in step **[**], select **[Original]** or **[Copy]**, and then enter the desired length.

Directional Magnification (%)

Specify the horizontal and vertical lengths of the original and copy image at different reproduction ratio. Copies can be reduced or enlarged at different reproduction ratios horizontally and vertically.



- a: Horizontal ratio
- b: Vertical ratio

To enter the ratio with the number keys

Select a ratio using the number keys.

Press [Reduce / Enlarge].



Press [Direct. Mag. %].

B Press [Horizontal].

Enter the desired ratio with the number keys, and then press [#] key.

5 Press [Vertical].

6 Enter the desired ratio with the number keys, and then press **[#]** key.

2 Press [OK] twice.

B Place the originals, and then press the [Start] key.

To specify a ration with [--] and [+-]

Select a ratio using [-] or [+].

Press [Reduce / Enlarge].



- **2** Press [Direct. Mag. %].
- **B** Press [[+] [-] keys].
- Press [Horizontal].
- **5** Adjust the ratio using [+] or [-].

Pressing [+] or [-] changes the ratio in increments of 1%. Pressing and holding down [+] or [-] changes it in increments of 10%.

6 Press [Vertical].

Adjust the ratio with [+] or [-].

- 8 Press [OK] twice.
- Place your originals, and then press the [Start] key.
 - 🖉 Note
 - □ If you have incorrectly entered the ratio in steps ⑤ or ⑥, readjust it with [+] or [-].

Directional Size Magnification (mm)

Specify the horizontal and vertical lengths of the original and copy image. Copies can be reduced or enlarged at different reproduction ratios horizontally and vertically.



- 1) Horizontal original size: Amm
- Vertical original size: Bmm
- ③ Horizontal copy size: amm
- ④ Vertical copy size: bmm

Measure and specify the lengths of the original and copy by comparing "A" with "a" and "B" with "b".

Press [Reduce / Enlarge].



- Press [Dir. Size Mag. mm].
- Enter the horizontal size of the original with the number keys, and then press [#] key.

You can enter sizes between 1 to 999 mm in 1 mm (0.1'') steps.

- Enter the horizontal size of the copy with the number keys, and then press [#] key.
- Enter the vertical size of the original with the number keys, and then press [#] key.

6 Enter the vertical size of the copy with the number keys, and then press **[#]** key.

2 Press [OK] twice.

Place the originals, and then press the [Start] key.

🖉 Note

□ To change a length in steps 3 to 6, press the key you wish to change and enter the new value.

Sort

The machine assembles copies as sets in sequential order.

∰Important

- □ To use the Rotate Sort function, two paper trays loaded with same size and type paper, but in different orientation (□□), are required. See "Paper Type: Tray 1-4", General Settings Guide.
- □ You cannot use the bypass tray with Rotate Sort.

Sort

Copies are assembled as sets in sequential order.



Rotate Sort

Every other copy set is rotated by 90 degrees ($\Box \Box$) and delivered to the copy tray.



Press [Finishing].

2 Select [Sort] or [Rotate Sort], and then press [OK].

When a finisher is not installed:

Sort Rotate Sc	xt			
Finishing	Cover/Slip Sheet	: Edit /	Color [)up./Combin
	Sv	vstem Status	Job List	t

When the 500-sheet finisher is installed:

Sort Rotate So	ort Stack					
Stele RR RR RR RE						
Finishing	Cover/Slip Sheet	Edit / Colo	r Dup./Combin			
	Syste	m Status 📃 .	Job List			

When the 1000-sheet finisher is installed:



When the booklet finisher is installed:



2

B Enter the number of copy sets using the number keys.

4 Place your originals.

When placing an original on the exposure glass, start with the first page to be copied. When placing an original in the ADF, set so the first page is on the top.

When placing an original on the exposure glass or in the ADF using Batch mode, press the **[#]** key after all the originals have been scanned.

Press the [Start] key.

🖉 Note

- □ To confirm the type of finishing, press the **[Sample Copy]** key in step **[**.
- See "Memory Full Auto Scan Restart", "Rotate Sort: Auto Paper Continue", "Auto Tray Switching", General Settings Guide.

Sample copy

Use this function to check the copy settings before making a long copy run.

∰Important

□ This function can be used only when the Sort function is turned on.

1 Select Sort and any other necessary functions, and then place the originals.

2 Press the [Sample Copy] key.

One copy set is delivered as a sample.



E If the sample is acceptable, press [Continue].

The number of copies made is the number specified, minus one for the proof copy.

🖉 Note

□ If you press [Suspend] after checking the results, return to step 1 to adjust the copy settings as necessary. You can change the settings for Staple, Duplex (1 sided → 1 sided, 1 sided → 2 sided), Copy Orientation, Margin Adjust., and Cover/Slip Sheet. However, depending on the combination of functions, you may not be able to change some settings.

Changing the Number of Sets

You can change the number of copy sets during copying.

∰Important

□ This function can only be used when the Sort function is turned on.

While "Copying..." is displayed, press the [Clear/Stop] key.

2 Press [Change Quantity].



Enter the number of copy sets with the number keys, and then press the [#] key.

4 Press [Continue].

Copying starts again.

🖉 Note

□ The number of sets you can enter in step ☑ differs depending on when the [Clear/Stop] key is pressed.

Stack

Copies can be assembled with each page placed.



If a finisher is installed, each time the copies of one page are delivered, the next copy is shifted when delivered so you can separate each job by page.

∰Important

□ You cannot use the bypass tray with this function.

Press [Stack].



2 Enter the number of copies with the number keys.

B Place your originals, and then press the [Start] key.

🖉 Note

When placing an original on the exposure glass, start with the first page to be copied. When placing an original in the ADF, set so the last page is on the bottom.

Staple

Each copy set can be stapled together.



∰Important

□ You cannot use the bypass tray with this function.

Stapling position and original setting

Place all the originals in the ADF in the orientation in which they can be read normally. When placing the original on the exposure glass, keep the same orientation, but set the original facing downwards. When there is copy paper that is identical in size and orientation to your original, the staple positions are as follows:

Original location Stapling Exposure position ADF glass Top Slant/Left R R Ŕ R R R R Bottom Slant/Left R R R R.R. R 8. R R R Left 2 R R R R R) ₽ 0 R R 2 R R Гор P_RO R R€ AMG018S

✤ 500-sheet finisher

✤ 1000-sheet finisher

				1
		Origina	Stapling	
		Exposure glass	ADF	position
B'B	Тор		R -	► R
			R -	→ [®] R
,B.B.	Bottom	R)	R -	→ R
			R -	→ <u></u> R
BE	Left 2		R -	→ B
		R	R -	→ (<mark>8</mark>
R R	Top 2		R -	→ R
			R -	→ [®] R [®]
				AMG020S

Booklet finisher



This table shows the stapling positions, not the orientation of delivery. Left $2 \square$ and Top $2 \square$ are not available for larger than A4 size paper.

Press [Finishing].

2 Select one of the stapling positions.

500-sheet finisher

Sort Rotate S	iort Stack						
Staple	Staple						
RE R.R. RE RE							
Finishing	Cover/Slip Sheet Edit / Color Dup./Combin						
	System Status Job List						

1000-sheet finisher

Sort Rotate So	rt Stack	2				
Stole R.R. R.R. R.R.						
Finishing	Cover/Slip She	et Edit/	Color	Dup./Combin		
		System Status	Job Lis	t		

Booklet finisher



When you select a stapling position, Sort mode is automatically selected.

Enter the number of copy sets using the number keys.

Place your originals, and then press the [Start] key.

🖉 Note

- When placing an original on the exposure glass, start with the first page to be copied. When placing an original in the ADF, set so that the last page is on the bottom.
- □ When placing an original on the exposure glass or in the ADF using Batch mode, press the **[#]** key after all the originals have been scanned.
- □ See "Select Stapling Position", General Settings Guide.

Punch

You can make punch holes in copies.

✤ 2 holes



✤ 3 holes



✤ 4 holes



∰Important

□ You cannot use the bypass tray with this function.

Punch hole positions

The relationship between the orientation in which you place the original and the punch hole positions is as follows:



This table shows the punch hole positions, not the orientation of delivery.

2 hole left \Box and 2 hole top \Box are not available for larger than A4 size paper.

Press [Finishing].

2 Select one of the punch hole positions.



B Place your originals, and then press the [Start] key.

2

Duplex

There are two types of duplex.

$\clubsuit\ 1\ \text{Sided} \to 2\ \text{Sides}$

Copies 2 one-sided pages on 1 two-sided page.



* 2 Sided \rightarrow 2 Sided

Copies 1 two-sided page on 1 two sided page.



Original orientation and completed copies

The resulting copy image will differ according to the orientation in which you place your originals (vertical or horizontal).

The table shows the orientation of images on the front and back of copies, not the orientation of delivery.



Press [Dup./Combine/Series].



2 Select [1 Sided \rightarrow 2 Sided] or [2 Sided \rightarrow 2 Sided].



Press [OK].

Place the originals, and then press the [Start] key.

🖉 Note

- □ You cannot use the bypass tray with this function.
- □ The maximum paper weight that can be used with duplex copying is $64-105 \text{ g/m}^2$ (17-28 lb.).
- When placing an original on the exposure glass, start with the first page to be copied. When placing an original in the ADF, set so that the last page is on the bottom.
- □ You can also select "1 Sided to 2 Sided" or "2 Sided to 2 Sided" directly by pressing the Copy Function Key in step **1**. In that case, proceed to step **4**.
- □ To change originals and copy orientation in step **2**, press **[Orientation]**.
- When placing an original on the exposure glass or in the ADF using Batch mode, press the [#] key after all the originals have been scanned.
- For related initial settings, see "Front Margin: Left / Right", "Back Margin: Left / Right", "Front Margin: Top / Bottom", "Back Margin: Top / Bottom", General Settings Guide.

Reference

See p.99 "Margin Adjustment".

Originals and copy orientation

You can select the orientation.

• Top to Top



• Top to Bottom



Duplex2

Duplex1

Select orientation (original and copy), and then press [OK].



🖉 Note

□ The default setting is **[Top to Top]**. You can change the default orientation with Copier Features in User Tools. See "Copy Orientation in Duplex Mode", "Original Orientation in Duplex Mode", General Settings Guide.

2

One-Sided Combine

Combine several pages onto one side of a sheet. There are six types of One-Sided Combine.

* 1 Sided 2 Pages \rightarrow Combine 1 Side

Copies 2 one-sided originals to one side of a sheet.



- ◆ 1 Sided 4 Pages → Combine 1 Side Copies 4 one-sided originals to one side of a sheet.
- ◆ 1 Sided 8 Pages → Combine 1 Side Copies 8 one-sided originals to one side of a sheet.
- ◆ 2 Sided 1 Page → Combine 1 Side Copies 1 two-sided original to one side of a sheet.
- ◆ 2 Sided 2 Page → Combine 1 Side Copies 2 two-sided originals to one side of a sheet.
- ◆ 2 Sided 4 Page → Combine 1 Side Copies 4 two-sided originals to one side of a sheet.
- Orientation of the original and image position of combine
 Open to left () originals



Open to top (\square) originals


Placing originals (originals placed in the ADF)

• Originals read from left to right



• Originals read from top to bottom



Press [Dup./Combine/Series].



Press [Combine].

Select [1 Sided] or [2 Sided] for Original, and then press [Combine 1 Side] for Copy.



- Select the number of originals to combine.
- **5** Select the paper size.
- **6** Press [OK].
- **2** Place your originals, and then press the [Start] key.

🖉 Note

- □ You cannot use the bypass tray with this function.
- □ You can also select [1 sided → Comb 2 orig] or [1 sided → Comb 4 orig] directly by pressing the Copy Function Key in step []. In that case, proceed to step [].
- See "Erase Original Shadow in Combine", "Copy Order in Combine", "Separation Line in Combine", General Settings Guide.

PReference

See p.85 "Originals and copy orientation".

Two-Sided Combine

Combines various pages of originals into one sheet with two sides. There are six types of Two-Sided Combine.

* 1 Sided 4 Pages \rightarrow Combine 2 Side

Copies 4 one-sided originals to one sheet with two pages per side.



* 1 Sided 8 Pages \rightarrow Combine 2 Side

Copies 8 one-sided originals to one sheet with four pages per side.



- 1) Front
- Back

* 1 Sided 16 Pages \rightarrow Combine 2 Side

Copies 16 one-sided originals to one sheet with eight pages per side.



- 1) Front
- Back

* 2 Sided 2 Pages \rightarrow Combine 2 Side

Copies 2 two-sided originals to one sheet with two pages per side.



* 2 Sided 4 Pages \rightarrow Combine 2 Side

Copies 4 two-sided originals to one sheet with four pages per side.



- 1) Front
- Back

* 2 Sided 8 Pages \rightarrow Combine 2 Side

Copies 8 two-sided originals to one sheet with eight pages per side.



- 1) Front
- Back

Press [Dup./Combine/Series].



2 Press [Combine].

Select [1 Sided] or [2 Sided] for Original, and then press [Combine 2 Sides] for Copy.



Select the number of originals to combine.

D Press [OK].

6 Place your originals, and then press the **[Start]** key.

🖉 Note

- □ You cannot use the bypass tray with this function.
- □ See "Erase Original Shadow in Combine", "Copy Order in Combine", "Separation Line in Combine", General Settings Guide.

See p.85 "Originals and copy orientation".

Series Copies

Separately copies the front and back of a two-sided original or the two facing pages of a bound original onto two sheets.

There are two types of Series Copies.

∰Important

- \Box You cannot use the Book \rightarrow 1 Sided function from the ADF.
- □ See the following table for original and copy paper sizes when using a 100% ratio:

Metric version

Original	Paper for 1-sided copy
A3 🗗	A4 🖵 × 2 sheets
B4 JIS ⊡	B5 JIS □ × 2 sheets
A4 🗗	A5 🗗 × 2 sheets
-	AMA0205

Inch version

Original	Paper for 1-sided copy
11" × 17" 🕞	8 ¹ / ₂ ×11" □ ×2 sheets
8 ¹ / ₂ × 11" □	$5^{1/2} \times 8^{1/2}$ > 2 sheets
	AMA0275

$\clubsuit \text{ Book} \rightarrow 1 \text{ Sided}$

You can make one-sided copies from two facing pages of a bound original (book).



4

* 2 Sided \rightarrow 1 Sided

You can make one-sided copies from two-sided originals.



Press [Dup./Combine/Series].



2 Press [Series].

E Select [2 Sided \rightarrow 1 Sided] or [Book \rightarrow 1 Sided], and then press [OK].

If you selected **[2 Sided** \rightarrow **1 Sided]**, you can change the orientation.

Place your original on the exposure glass, and then press the [Start] key.

🖉 Note

□ Press the **[#]** key after all originals have been scanned.

Booklet/Magazine

Copies two or more originals in page order. There are six types of Booklet/Magazine.

∰Important

□ The following table shows the paper sizes of two-sided original and two-sided copy (when copying at a ratio of 100%):

Metric version

Original	Paper for 1-sided copy
A3 🗗	A4 🖵 × 2 sheets
B4 JIS 🗗	B5 JIS 🗗 × 2 sheets
A4 🕞	A5 🖵 × 2 sheets
	AMA020S

Inch version

Original	Paper for 1-sided copy
11" × 17" 🕞	8 ¹ / ₂ ×11" 2 sheets
8 ¹ / ₂ × 11" □	$5^{1}/_{2} \times 8^{1}/_{2} \square \times 2$ sheets
	AMA0275

$\clubsuit \text{ 1 Sided} \rightarrow \text{Booklet}$

Make copies in page order for a folded booklet as shown.

• Open to left



• Open to right



$\clubsuit \text{ 2 Sided} \rightarrow \text{Booklet}$

Make two-sided originals to copies in page order for a folded booklet as shown.

• Open to left



• Open to right



♦ 1 Sided \rightarrow Magazine

Copies two or more originals to make copies in page order when they are folded and stacked.

• Open to left



• Open to right



♦ 2 Sided \rightarrow Magazine

Copies two or more originals of two-sided to make copies in page order when they are folded and stacked.

• Open to left



2

• Open to right



$\clubsuit \text{ Book} \rightarrow \text{2 Sided}$

Copies a two-page spread original onto one sheet with one page per side.



You cannot use the bypass tray with "Book \rightarrow 2 Sided" or "Front&Back \rightarrow 2 Sided".

Front & Back \rightarrow 2 Sided

Copies each two-page spread original as it is onto both sides of a sheet.



How to fold and unfold copies to make a booklet

As shown below, fold a copy along the centerline, and open.



- ① Open to left
- Open to right

How to fold and unfold copies to make a magazine

As shown below, fold and stack copies to make a magazine, and open.

• Open to left



• Open to right



Select [Open to Left] or [Open to Right] with User Tools.

See "Orientation: Booklet, Magazine", General Settings Guide.

Press [Dup./Combine/Series].



B Press [Book].

Select a book type separately for the original ([1 Sided] or [2 Sided]) and copy ([Booklet] or [Magazine]), or select a book type from [Book \rightarrow 2 Sided] and [Front&Back \rightarrow 2 Sided].

5 Select the paper.

⁶ Press [OK].

Place your originals, and then press the [Start] key.

🖉 Note

- □ You cannot use the bypass tray with this function.
- □ When placing an original on the exposure glass or in the ADF using Batch mode, press the [#] key after all the originals have been scanned.
- □ The machine sets the reproduction ratio automatically to meet the paper size.

Margin Adjustment

Copies originals leaving a binding margin.



Press [Edit / Color].

/ Enlarge	11×15 8½×11	51/2×81/2 81/2×14	93%	100%	
sided 1 sid	$e^{d+Comb 2 orig}$	1 sided→Comb		Margin	
taple	<u></u> R	R.	R) R)		
'Slip Shee	t Edit /	Color [Dup./Combine/Se	ries Reduce / Enlarg	ge
S	ystem Status	Job Lis	t	JAN 21,2006 3:20AM	

Press [Margin Adj.].

Set a binding margin for a front page. Press [←] and [→] when setting the left and right margins, and [↓] and [↑] when setting the top and bottom margins.

Set a binding margin for the back side pages. Press [←] and [→] when setting the left and right margins, and [↓] and [↑] when setting the top and bottom margins, and then press [OK].

Margin on the back side of the page is valid when [1 Sided \rightarrow 2 Sided] or [Combine 2 Sides] is selected.

E Place your originals, and then press the [Start] key.

🖉 Note

- □ If you make a mistake, press [←], [→], [↓], [↑], or press [Clear] to set a new value.
- □ If you do not need to specify the margins for the back side pages in step **3**, press **[OK]** and proceed to step **5**.
- □ See "Front Margin: Left / Right", "Back Margin: Left / Right", "Front Margin: Top / Bottom", "Back Margin: Top / Bottom", "1 Sided → 2 Sided Auto Margin: TtoT", "1 Sided → 2 Sided Auto Margin: TtoB", General Settings Guide.

2

Erase

This function erases the center and/or all four sides of the original image. This function has the following three types:

Border

This mode erases the edge margin of the original image.



Center

This mode erases the center margin of the original image.



Center/Border

This mode erases both the center and edge margins of the original image.



🖉 Note

The relationship between the original orientation and the erased part is as follows:



- ① Erased part
- (2) 2-99 mm (0.1"-3.9")
- □ The erase width is set to 10 mm (0.4 inch) as a default. You can change this setting with User Tools. See "Erase Center Width", "Erase Border Width", General Settings Guide.

Border Erase (same width)

This mode erases the edge margin of the original image.

Press	s [Edit	/ Colo	r].	
/ Enlarge	11×15 81∕2×11	51/2×81/2 81/2×14	93%	100%
sided 1 side	d⇒Comb 2 orig 2 → 1 2	1 sided + Comb 4 $1^2 \rightarrow \frac{1}{3}$	_	Margin
taple	L.B.	BB	R R	
'Slip Shee	t Edit /	Color [)up./Combine/Se	eries Reduce / Enlarge
S	vstem Status	Job List	:	JAN 21,2006 3:20AM

- **2** Press [Erase].
- Press [Erase Center / Border].
- **4** Press [Same Width].

\mathbf{5} Set an erase border width with [+] or [-].

Pressing [+] or [-] changes the width in increments of 1 mm (0.1 inch). Pressing and holding down the relevant key changes the width in increments of 10 mm (0.4 inch).



6 Press [**0**K] twice.

Place your originals, and then press the [Start] key.

🖉 Note

□ To change the value entered in step **⑤**, press **[+]** and **[-]** to set a new value.

Border Erase (different width)

This mode erases the edge margin of the original image.

Press [Edit / Color].



2 Press [Erase].

B Press [Erase Center / Border].

Press [Different Width].

Press the key for the border you want to change and set an erase width with [+] and [-].



6 Press [**0**K] twice.

2 Place your originals, and then press the [Start] key.

Center Erase

This mode erases the center margin of the original image.

Press [Edit / Color].



2 Press [Erase].

Press [Erase Center / Border].

Press [Erase Center].

 \bullet Set the erase center width with [+] and [-].

6 Press [**0**K] twice.

2 Place your originals, and then press the [Start] key.

Center/Border Erase (same width)

This mode erases both the center and edge margins of the original image.

Press [Edit / Color].

/ Enlarge 11×15 5½×8½ 93%	00%
sided 1 sided+Comb 4 orig	h
/Slip Sheet Edit / Color Dup./Combine/Series	Reduce / Enlarge
System Status Job List	JAN 21,2006 3:20AM
Press [Erase].	

Press [Erase Center / Border].

4 Press [Erase Center / Border].

5 Press [Same Width].

O Press [**Center**], and then set the erase center width with [+] and [-].



2 Press [Border], and then set the erase border width with [+] and [-].

Press [OK] twice.

Place your originals, and then press the [Start] key.

Center/Border Erase (different width)

This mode erases both the center and edge margins of the original image.

Press [Edit / Color].



2 Press [Erase].

B Press [Erase Center / Border].

Press [Erase Center / Border].

5 Press [Different Width].

Press the key for the order you want to change and set an erase width with [+] and [-].



2 Press [OK] twice.

B Place your originals, and then press the [Start] key.

Background Numbering

Use this function to have numbers printed on the background of copies. If this function is used in conjunction with Sort, same numbers are printed on a department basis, helping you to keep track of confidential documents.

骤Important

□ You cannot use the bypass tray with this function.



Press [Edit / Color].



- Press [Stamp].
- B Press [Background Numbering].
- Enter the number to start counting from with the number keys, and then press [#] key.
- **5** Press [OK] twice.

6 Place your originals, and then press the **[Start]** key.

Note

- □ To change the value entered in step [], press the [Clear] or [Clear/Stop] key to set a new value.
- □ When the Full Color Copy is selected, the full Color counter will advance to "1".
- □ The default Color is black.
- □ See "Size", "Density", General Settings Guide.

Preset Stamp

Messages are stamped on copied.

∰Important

- □ You cannot use the bypass tray with this function.
- □ Only one message can be stamped at a time.



 The following eight messages are available for stamping: "COPY", "URGENT", "PRIORITY", "For Your Info.", "PRELIMINARY", "For Internal Use Only", "CONFIDENTIAL", "DRAFT"

Stamp position and original orientation

The stamp positions differ according to the orientation in which you place your originals.





2 Press [Stamp].

Press [Preset Stamp].

A Select the desired message.

You can change the Stamp Color, position, size, and density of the stamp.

• Press [All Pages] or [1st Page Only] to select the print page.



6 After you specify all desired settings, press [OK].

Press [OK] twice.

B Place your originals, and then press the [Start] key.

🖉 Note

- □ When the Full Color Copy is selected, the full Color counter will advance to "1".
- □ The default user stamp Color is red.
- See "Stamp Priority", "Stamp Language", "Stamp Position", "Stamp Format", General Settings Guide.

Changing the stamp Color

Changes the stamp Color.

Press [Stamp Color].

2 Select the stamp Color, and then press [OK].

Changing the stamp position, size and density

Changes the stamp position, size and density.

Press [Change].

2 Select the position for print, size, and density, and then press [OK].

Position / Size / D	ensity			
<stamp position=""> R K K K K K K K</stamp>	↑ ※	⊼ ← لا	<size></size>	2 X
J.		System Statu	ıs 🛛 Job Lis	t

User Stamp

Copies a scanned image as a stamp. Letters or images you use frequently can be registered.

∰Important

- □ You have to register a user stamp before using this function.
- □ You cannot use the bypass tray with this function.
- **O**nly one message can be stamped each time.



Stamp position and original orientation

The user stamp positions differ according to the orientation in which you place your originals.



Press [Edit / Color].



- **2** Press [Stamp].
- B Press [User Stamp].

Select the stamp you require.

You can change the stamp Color and position.

5 Press [All Pages] or [1st Page Only] to select the print page.



6 After making all settings, press [OK].

2 Press [OK].

B Place your originals, and then press the [Start] key.

🖉 Note

- □ When the Full Color Copy is selected, the full Color counter will advance to "1".
- **D** The default user stamp Color is red.
- □ See "Stamp Format: 1-4", "Stamp Color: 1-4", General Settings Guide.

Changing the user stamp Color

Changes the stamp Color.

Press [Stamp Color].

2 Select the stamp Color, and then press [OK].

Changing the user stamp position

Changes the stamp position.

Press [Change] under < Stamp Position >.

2 Select the desired position, and then press [OK].

	stect						
St	tamp Pos	ition					
	Stamp Po	osition> K + L	↑ ※ ↓	⊼ →			
				System St	atus	Job List	

To program the user stamp

This function scans an image that is used as a user stamp.

The range of stamp images for readability is 10-297 mm (0.4"-11.7") high and 10-432 mm (0.4"-17.0") wide. However, if the value exceeds the maximum value of the area (5,000 mm², 7.75 inch²), it is corrected within the range of the area automatically.

1 Make sure that the machine is in copier mode.

2 Press the [User Tools/Counter] key.



B Press [Copier / Document Server Features].



- 4 Press [Stamp].
- D Press [User Stamp].
- Press [Program / Delete Stamp].
- **∠** Press [⇒Program], and then press the stamp number you want to program.
- Enter the user stamp name (up to ten characters) with the letter keys, and then press [OK].
- Enter the horizontal size of the stamp with the number keys, and then press [#] key.
- Press [Vertical], and then enter the vertical size of the stamp with the number keys, and then press [#] key.

Place the original for user stamp on the exposure glass, and then press [Start Scanning].

The original will be scanned, and the stamp will be registered.

Press [Exit].

B Press [Exit].

The display returns to the Printer Configuration menu screen.

Press [Exit].

Exits settings and gets ready to copy.

🖉 Note

- \Box Stamp numbers with \clubsuit already have settings in them.
- □ If the stamp number is already being used, the machine will ask you if you want to overwrite it . Press **[Yes]** or **[No]**.
- Originals cannot be scanned from the ADF when programming the user stamp.

To delete the user stamp

Deletes an image registered as a user stamp.

You cannot restore a deleted stamp.

1 Make sure that the machine is in Copy mode.

2 Press the [User Tools/Counter] key.







- 4 Press [Stamp].
- **5** Press [User Stamp].
- **6** Press [Program / Delete Stamp].
- **2** Press [Delete], and then press the stamp number you want to delete.
- **B** Select [Yes], and then press [Exit].
- **9** Press [Exit].

The display returns to the Copier/Document Server Features main menu.

D Press [Exit].

Exits settings and gets ready to copy.

Date Stamp

Use this function to print dates on your copies.



You can select from the following styles:

- MM/DD/YYYY
- MM.DD.YYYY
- DD/MM/YYYY
- DD.MM.YYYY
- YYY.MM.DD

Stamp position and original orientation

The date stamp positions differ according to the orientation in which you place your originals.



Important

□ You cannot use the bypass tray with this function.

Press [Edit / Color].



- **2** Press [Stamp].
- Press [Date Stamp].

Select the stamp format.

You can change the Stamp Color, style and position of the date to be stamped.

E Press [All Pages] or [1st Page Only] to select the print page.



6 After all settings are complete, press [OK].

2 Press [OK].

B Place your originals, and then press the [Start] key.

🖉 Note

- □ You can change the Stamp Color, format and position of the date to be stamped.
- □ The default Color is Black.
- □ See "Date Stamp", General Settings Guide.

To change the date stamp Color

Changes the stamp Color.

Press [Stamp Color].

2 Select the stamp Color, and then press [OK].

To change the format of date

Changes the style of date to be stamped.

Press [Change Format] under < Current Date>.



2 Select the date format, and then press [OK].

To change the date stamp position

Changes the stamp position.

Press [Change] under < Stamp Position >.

Date Stamp	Car
Check format and position of dat <current date=""></current>	e.
1/21/2006	Change Format
<stamp position=""></stamp>	<print page=""></print>
	All Pages
R Change	1st Page Only
	System Status Job List

2 Select the desired date stamp position, and then press [OK].



Page Numbering

Use this function to print page numbers on your copies.



There are six types of page numbering.

- P1,P2,...
- 1/5,2/5,...
- -1-,-2-,...
- P.1,P.2,...
- 1, 2, ...
- 1-1,1-2,...

Stamp position and original orientation

The page stamp positions differ according to the orientation in which you place your originals.



∰Important

 \square You cannot use the bypass tray with this function.

Press [Edit / Color].



Press [Stamp].

Press [Page Numbering].

4 Select the format.



E After you specify all desired settings, press [OK].

6 Press [OK].

2 Place the originals, and then press the [Start] key.

🖉 Note

- □ You can specify the stamp Color, position, pages to be stamped, and numbering.
- □ The default Color is black.
- □ See "Stamp", General Settings Guide.

Changing the stamp Color

Changes the stamp Color.

Press [Stamp Color].

2 Select the stamp Color, and then press [OK].

Changing the stamp position

Changes the stamp position.

Press [Change] under < Stamp Position >.

2 Select the desired position, and then press [OK].

Stamp Position		
	▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲▲<	
	System Status	Job List

Specifying the first printing page and start number ("P1,P2...", "-1-,-2-...", "P.1,P.2...", "1,2...")

Below explains the example when "P1, P2 ..." is selected. The steps are the same for other cases.

Press [Change] under <Change Numbering>.



2 Press [First Printing Page], enter the original sheet number from which to start printing from, and then press the [#] key.

Press [First Printing Number], enter the number of page from which to start numbering from with the number keys, and then press the [#] key.

The example below shows when the first printing page is "2" and the start number is "3".



Press [Last Number], enter the number of the page at which to stop numbering with the number keys, and then press the [#] key.

2>			[Cancel	ОК
hen press					
	1				
	1	~ [Last Number	to the End	to the End
				#	Clear
S	iystem ?	Status	Job List		JAN 21,2006 4:50AM

If you want to number all pages to the end, press [to the End].

5 When page designation is complete, press [OK].

6 Press [**0**K] twice.

Specifying the first printing page and start number ("1/5,2/5...")

Press [Change] under <Change Numbering>.

2 Press [First Printing Page]. Enter the original sheet number from which to start printing, and then press [#] key.



You can enter between 1 and 9999 for the original sheet number from which to start printing.

Press [First Printing Number], enter the number of page from which to start numbering from with the number keys, and then press the [#] key.

Press [Last Number], enter the number of page at which to stop numbering with the number keys, and then press the [#] key.

Proceed to step **5** when not changing.

If you want to number all pages to the end, press [to the End].

The last number is the last page number to print. For example, if Total Pages is ten, if you want to print up to seven pages and do not want to print from page 8 on, enter "7" for Last Number. Normally, you do not need to enter the number.

Press [Total Pages], enter the total number of original pages with the number keys, and then press the [#] key.

() When page designation is complete, press [OK] twice.

Place the originals, and then press the [Start] key.

🖉 Note

- □ To change the number entered in step 2, press the [Clear] or [Clear/Stop] key, and then enter a new number.
- □ To change the settings (the first printing page, the number of page from which to start numbering, or total number of pages) after pressing **[OK]**, press **[Change]** and then enter the numbers again.
- □ To change a page number, press **[StartPage]**, and then enter the number with number keys.

Specifying the first printing page and start number ("1-1,1-2...")

Press [Change] under <Change Numbering>.

2 Press [First Printing Page], enter the original sheet number from which to start printing, and then press the [#] key.


Press [First Chapter No.], enter the chapter number from which to start numbering with the number keys, and then press the [#] key.

You can enter between 1 and 9999 for the chapter number from which to start numbering.

Press [First Printing Number], enter the page number from which to start printing with the number keys, and then press the [#] key.

D Press [OK].

6 When page designation is complete, press [OK] twice.

Place the originals, and then press the [Start] key.

🖉 Note

- □ To change the number entered in step 2, press the [Clear] or [Clear/Stop] key, and then enter a new number.
- If you selected "1/5,2/5..." and want to change the settings (the first printing page, the number of page from which to start numbering, or total number of pages) after pressing [OK] in step [], press [Change] and then enter the numbers again.
- □ If you selected "1/5,2/5..." and want to change a page number after pressing **[OK]** in step **[**, press **[Change]** and then enter the number again with the number keys.

Image Repeat

The original image is copied repeatedly.

There are two ways to specify an image to be repeated.



Whole Area Repeat

Repeatedly copies the entire image.

Specified Area Repeat

Repeatedly copies a specified portion of the image.

🖉 Note

□ See "Image Repeat Separation Line", General Settings Guide.

Whole Area Repeat

Repeatedly copies the entire image.

The number of repeated images depends on the original size, copy paper size, and reproduction ratio. For example, see the following table:

♦ Original: A5 □/Copy paper: A4 □ or Original: A5 □/Copy paper A4 □, Original: 5¹/₂" × 8¹/₂" □/Copy paper: 8¹/₂" × 11" □ or Original: 5¹/₂" × 8¹/₂" □/Copy paper: 8¹/₂" × 11" □



♦ Original: A5 □/Copy paper: A4□ or Original: A5□/Copy paper A4 □, Original: 5¹/₂" × 8¹/₂" □/Copy paper: 8¹/₂" × 11" □ or Original: 5¹/₂" × 8¹/₂" □/Copy paper: 8¹/₂" × 11" □



1 Select the size of copy paper and the reproduction ratio.

Press [Edit / Color].



B Press [Edit Image].

4 Press [Image Repeat].

• Make sure that [Whole Area] is selected, and then press [OK].

6 Press [OK].

Place your original, and then press the [Start] key.

Specified Area Repeat

Repeatedly copies a specified portion of the image.

Determine the location of the area's base point and its length and width.



① Set on the exposure glass

∰Important

□ You cannot use this function from the ADF.

Measure the location of the base point (X1, Y1) and its length and width (X2, Y2) for the area of the image repeatedly copied.

You can set any value in the range of X1: 0-412 mm (0"-16.2"), X2: 20-432 mm (0.8"-17.0"), Y1: 0-277 mm (0"-10.8"), and Y2: 20-297 mm (0.8"-11.6").

2 Select the size of copy paper and the reproduction ratio.

Press [Edit / Color].

4 Press [Edit Image].

D Press [Image Repeat].

6 Press [Specified Area].

2 Enter the length of [X1] with number keys, and then press [#] key.



Enter the length of [Y1] with the number keys, and then press [#] key.

Enter the length of [X2] with the number keys, and then press [#] key.

 \blacksquare Enter the length of [Y2] with the number keys, and then press [#] key.

Press [OK] twice.

Place the original on the exposure glass, and then press the [Start] key.

Double Copies

One original image is copied twice on one copy as shown.

∰Important

- □ You cannot use the bypass tray with this function.
- □ See the following table for original and copy paper sizes when using a 100% ratio:

✤ Metric version

Original size and Orientation	Copy paper size and Orientation
A5 🗗	A4 🖵
A4 🖵	A3 🗗
A5 🖵	A4 🗗
B5 JIS 🖵	B4 JIS 🕞
	AMG015S

Inch version

Original size and Orientation	Copy paper size and Orientation
5 ¹ /2" × 8 ¹ /2" 🕞	8 ¹ /2" × 11" 🖵
5 ¹ /2" × 8 ¹ /2" 🖵	8 ¹ /2"×11" □
8 ¹ /2" × 11" 🖵	11"×17" 🕞
	AMG016S



Press [Edit / Color].

/ Enlarge	11×15 81/2×11	51/2×81/2 81/2×14	93%	100%	
sided 1 sid	ed⇒Comb 2 orig	1 sided⇒Comb 4	4 orig		
2 L	2 → 1 2	$1_2 \rightarrow \frac{1}{3}$	2 4 Create Mar	gin	
RE RE					
'Slip Shee	t Edit /	Color [oup./Combine/Series	Reduce / Enlarge	
S	ystem Status	Job List	:	JAN 21,2006 3:20AM	

2 Press [Edit Image].

Press [Double Copies].

Press [OK].

5 Select the paper.

⁶ Place your originals, and then press the [Start] key.

🖉 Note

□ See "Double Copies Separation Line", General Settings Guide.

Centering

You can make copies with the image moved to the center of the copy paper.

∰Important

- □ You cannot use the bypass tray with this function.
- **D** The original sizes and directions for centering are listed below.

Metric version

Original placed on:	Original size and orientation		
Exposure glass	A3, B4 JIS, A4, D, B5 JIS, D, 8" × 13"		
ADF	A3D, B4 JISD, A4 D, B5 JIS D, A5 D, A7 D, 11×17 D, $8^{1}/_{2}^{"} \times 11^{"}$ D, $8^{"} \times 13^{"}$ D, $8K$ D, $16K$ D		

Inch version

Original placed on:	Paper size and orientation
Exposure glass	$11'' \times 17''$, $8^{1}/_{2}'' \times 14''$, $8^{1}/_{2}'' \times 11''$, $11''$
ADF	A3D, A4D, $11'' \times 17''$ D, $8^{1}/{2''} \times 14''$ D, $8^{1}/{2''} \times 11''$ D, $5^{1}/{2''} \times 8^{1}/{2''}$ D, $10'' \times 14''$ D, $7^{1}/{4''} \times 10^{1}/{2''}$ D

2



Select the paper.

Press [Edit / Color].



B Press [Edit Image].

Press [Centering].

5 Press [OK].

⁶ Place your originals, and then press the [Start] key.

Positive/Negative

Copies an image inverted. If your original is black and white, copy images are inverted. If your original is Color, the density, darkness and brightness of each Color will be reversed and inverted to complimentary Colors.

∰Important

□ If your original is black and white, copy images are inverted. If your original is Color, the density, darkness and brightness of each Color will be reversed and inverted to complimentary Colors.



Press [Edit / Color].



- **2** Press [Edit Image].
- Press [Positive / Negative].
- Press [OK].
- **5** Select the paper.
- **6** Place your originals, and then press the **[Start]** key.

Mirror

Copies by reversing the image from left to right, as reflected in a mirror.



Press [Edit / Color].



2 Press [Edit Image].

E Press [Mirror Image].

- Press [OK].
- **5** Place the originals, and then press the **[Start]** key.

Covers

Covers function includes Front Cover and Front/Back Covers.

Front cover

The first page of your originals is copied on specific paper sheet for covers, or a cover sheet is inserted before the first copy.

• Copy



• Blank



Front/Back Covers

The first and last pages of your original are copied on specific paper for use as covers, or a cover sheet is inserted before the first copy and after the last copy.

• Copy



• Blank



Set the tray for the front cover paper.

The cover sheet should be the same size and orientation as the copy paper. See "Cover Sheet Tray", General Settings Guide.

2 Press [Cover/Slip Sheet].



Select [Copy] or [Blank] for the cover sheet, and then press [OK].

Select the paper tray that contains the sheet paper to copy the originals.

• Place your originals in the ADF, and then press the [Start] key.

🖉 Note

- □ You can set neither the copy paper for originals nor cover sheets in the bypass tray.
- □ When selecting **[Copy]** in step **E**, select whether the front and back covers are copied 1 Sided or 2 Sided.

Designate

Use this function to have certain pages of your original copied onto slip sheets or to insert a slip sheet for each page specified.



∰Important

- □ Before using this function, set the special paper tray for slip sheets.
- □ The slip sheets should be the same size and orientation as the copy paper.
- □ You cannot place the copy paper in the bypass tray.

Press [Cover/Slip Sheet].



Press [Designate / Chapter].

Select [Designate: Copy] or [Designate: Blank].

Press the key to select the chapter number.

To select pages 11 to 20 (chapter), press [11-20].

Enter the page location of the first page of the first chapter with the number keys, and then press the [#] key.

To specify another page location, repeat steps 4 to **5**. Up to 20 pages can be specified.

2 Select the paper tray that contains the sheet paper to copy the originals.

U When you finish specifying pages, press [OK] twice.

Place your originals in the ADF, and then press the [Start] key.

PReference

See "Slip Sheet Tray", General Settings Guide.

Chapters

The page locations you specify with this function will appear on the front of copy sheets.



∰Important

- □ Before selecting this function, press [Dup./Combine/Series] and select "1 Sided \rightarrow 2 Sided" or "Combine".
- □ This function can be used only when you use the Duplex (1 Sided \rightarrow 2 Sided) or Combine function.

Press [Cover/Slip Sheet].



- Press [Designate / Chapter].
- B Press [Chapter].

Press the key to select the chapter number.

To select chapters 11 to 20, press [11-20].

Enter the page location of the first page of the first chapter with the number keys, and then press the [#] key.

You can specify the pages up to 20.

6 To specify another page location, repeat steps **4** to **5**.

2 Select the paper.

U When page designation is complete, [OK] twice.

Place the originals, and then press the [Start] key.

Slip Sheets

Every time an original page changes, a slip sheet is inserted. You can also print on the inserted slip sheet.

Since a slip sheet is inserted for every page, you can protect printed surfaces. This function is useful in copying OHP transparencies.



∰Important

- **D** Before using this function, set the special paper tray for slip sheets.
- Load the slip sheets in the same size and orientation as the copy paper or the OHP transparency.
- When using OHP transparencies placed in the bypass tray
 - Copy



• Blank



Press [Cover/Slip Sheet].



2 Select [Copy] or [Blank], and then press [OK].

3 Select the paper tray containing the sheet paper to copy the originals. When using OHP transparencies, open the bypass tray.

Place the originals, and then press the [Start] key.

🖉 Note

- □ Press the **[#]** key and select **[OHP (Transparency)]** in Special paper.
- When copying OHP transparencies set on the bypass tray, if Internal Tray 1 is not selected for the output paper tray, copies are delivered to it.
- □ See "Slip Sheet Tray", General Settings Guide.

PReference

See p.38 "When copying onto OHP Transparencies or Thin Paper".

Storing Data in the Document Server

The Document Server enables you to store documents in the memory and print them as you want.

∰Important

Data stored in the machine might be lost if some kind of failure occurs. The manufacturer shall not be responsible for any damage that might result from the loss of data.

Press [Store File].



2 Enter a file name, user name, or password if necessary.

Store File		Can
Set item(s) to store a file.		
	COPY0001	
User Name	File Name	P

B Press [OK].

4 Place the originals.

5 Make the scanning settings for the original.



6 Press the **[Start]** key.

Originals are scanned and stored in memory.

🖉 Note

- □ To stop scanning, press the **[Clear/Stop]** key. To resume a paused scanning job, press **[Continue]** in the confirmation display. To delete scanned images and cancel the job, press **[Stop]**. The originals placed in the ADF are delivered.
- □ When placing an original on the exposure glass, press the **[#]** key after all the originals have been scanned.
- Data stored in the Document Server is set to be deleted after three days by the factory default. You can specify the period after which the stored data is deleted automatically. For details about changing settings, see "Auto Delete File in Document Server", General Settings Guide.
- □ To check if the document has been stored, press the **[Document Server]** key.
- □ If you want to store another document, do so after copying is complete.
- □ For details about the Document Server, see "Document Server".
- For details about printing stored documents, see "Printing a Stored Document".
- □ For details about setting user name, file name, and password, see "Storing Data".
- Depending on the security setting, [Access Privileges] may appear instead of [User Name]. For details about specifying [Access Privileges], consult the administrator.

Reference

See p.147 "Using the Document Server".

See p.156 "Printing a Stored Document".

See p.147 "Storing Data".

Programs

You can store the frequently used copy job settings in the machine memory and recall them for future use.

You can store up to 10 programs.

🖉 Note

- □ You can select the standard mode or program No. 10 as the mode to be set when modes are cleared or reset, or immediately after the operation switch is turned on. See "Programming Defaults in Initial Display".
- Paper settings are stored based on paper size. So if you place more than one paper tray of the same size, the paper tray prioritized with User Tools (System Settings) will be selected first. See "Paper Tray Priority", General Settings Guide.
- Programs are not deleted by turning the power off or by pressing the [Clear Modes] key.

Storing a Program

Stores a program.

1 Edit the copy settings so all functions you want to store in this program are selected.

2 Press the [Program] key.



AMG042S

Press [Program].

Program (Copier)	
Select No. to program.	
🗢 Recall 🛛 🔷 Program 🤇 Cha	inge Name
001 × Not Programmed	002 * Not
003 × Not Programmed	004 × Not
005 × Not Programmed	006 * Not
007 × Not Programmed	008 * Not
009 × Not Programmed	010 * Not

Press the program number you want to store.

5 Enter the program name with the letter keys on the display panel.

You can enter up to 40 characters.

Program Name
Enter the program name, then press [OK].
` 1 2 3 4 5 6 7 q w e r t y u a s d f g h j z x c v b n m

6 Press [OK].

The screen returns to the program screen, showing the program number followed by the program name. The screen returns to the initial copy display after a short time.

🔗 Note

- □ Program numbers with ⇒ against them already have settings made for them.
- □ If you do not want to enter the program name in step **5**, proceed to step **6**.

Changing a Stored Program

Changes program settings.

U Check the program settings.

2 Set the contents of a program.

Press the [Program] key.

4 Press [Program].

E Press the program number you want to store.

6 Press [Yes].

U Enter the program name.

You can enter up to 40 characters.

8 Press [OK].

The screen returns to the program screen, showing the program number followed by the program name. The screen returns to the initial copy display after a short time.

🖉 Note

- □ When you want to check the contents of a program, recall the program.
- **D** When it is overwritten, the previous program is deleted.

Deleting a Program

Erases the contents of program.

Press the [Program] key.

2 Press [Delete].

		Exit
hange Name	Delete	Program as Defaults
002 * N	ot Programmed	
004 × N	ot Programmed	
006 × N		
008 × N		
010 * N	ot Programmed	

2 Press the program number you want to delete.

4 Press [Yes].

The program is deleted, and the display returns to the initial copy display.

Recalling a Program

Recalls a stored program and copies its contents.



2 Press [Recall].

Program (Copier)				
Select program No. to recall.				
♦ Recall ♦ Program	Change Name			
◆001 Comb	002 * Not			
003 * Not Programmed	004 * Not			
005 × Not Programmed	006 * Not			
007 × Not Programmed	008 * Not			
009 * Not Programmed	010 * Not			

3 Press the program number you want to recall.

The stored settings are displayed.

Place the originals, and then press the [Start] key.

🖉 Note

 \Box Only programs with \clubsuit against them contain a program in step **\underline{B}**.

Programming Defaults in Initial Display

This section describes how to program defaults for the initial display when modes are cleared or reset, or immediately after the operation switch is turned.

The default settings you can program are Color Mode, Paper Tray, Original Type, Density, Special Original, Original Orientation, Cover/Slip Sheet, Edit / Color, Dup./Combine/Series, Reduce / Enlarge, Finishing.

Specify scan settings and any other settings you require in the initial display.

Press the [Program] key.

E Press [Program as Defaults].

4 Press [Program].

5 When a confirmation dialog appears, press [Yes].

The current settings are programmed as defaults. The screen returns to the initial display.

🖉 Note

- □ To restore the factory default settings on the initial display, press [Restore Factory Defaults].
- □ The default settings can be programmed separately for the normal screen and simplified screens.

3. Document Server

Using the Document Server enables you to store documents being read with the copy feature on the hard disk of this machine. Thus you can print them later applying necessary conditions.

Relationship between Document Server and Other Functions

State of the Document Server varies depending on the function used.

Copier Functions

- Storing method: Copy/Document Server
- List display: Available
- Printing: Available
- Transmission: Unavailable

Printer Functions

- Storing method: Personal computer
- List display: Available
- Printing: Available
- Transmission: Unavailable

Fax Functions

- Storing method: Fax
- List display: Available
- Printing: Available
- Transmission: Available Transmission is done by use of the stored document transmission of the fax feature. See "Sending Stored Documents", Facsimile Reference.

Scanner Functions

- Storing method: Scanner
- List display: Unavailable When documents are stored with the scanner feature, you can confirm them from the scanner feature screen. See "Displaying the List of Stored Files", Scanner Reference.
- Printing: Unavailable
- Transmission: Available Transmission is done by use of the stored document transmission of the scanner feature. See "Sending Stored Files", Scanner Reference.

Document Server Display

Following explains the screens and icons displayed in the Document Server function.

Document Server initial display



1. This screen displays the operational status and messages.

2. The number of the originals being read with the memory as well as the number of paper sets and copied are displayed. 4. The function used for the storing as well as the color mode is displayed.

5. The functions under which the documents were stored.

3. Keys for the operation is displayed.

The list display of the Document Server shows the following icons depending on the storing function and the color mode selected:

Function	Copying	Facsimile	Printer
Icons	G	¢	Ð
Color icons	Full color	Black and white	Monochrome

🔗 Note

□ All the stored documents may not be displayed depending on the security function specified.

Simplified Display

This section explains how to use the "Simplified Display" and introduces its keys.

You can view the simplified display from the Document Server's initial screen by pressing the **[Simplified Display]** key.

The simplified display contains main functions only.

Characters and keys are enlarged on this screen, making for easier operation.



Simplified Document Server Screen

			ct File> Pa files to print.	ige 0]Qty		1)Print 0)
1	Туре	User Name	File Nan	ne Date	Page	Delete File
	%	Tokyo Office	COPY0003	Jan./21	3	Specified
	<i>.</i>		COPY0002	Jan./21	1	Page
						▲ Previous
1	- Key	' Color		1,	/1	▼ Next
			Sv	stem Status 🛛 Job List		JAN 21,2006 5:06AN

1. [Key Color]

Use this to intensify the screen contrast by changing the color of the keys. Not available on the Document Server default display.

🖉 Note

- □ Press the **[Simplified Display]** key again to return to the Document Server default screen.
- □ The simplified display screen does not contain every available key.

Preview Display

Following explains the preview display displaying procedure and the items displayed on this screen.

The Preview Display appears after scanning completes. You can also display stored documents on the preview display. For details, see "Displaying the List of Stored Files", Scanner Reference.

The preview display denotes the screen that allows confirming contents of the scanned documents.

Preview Display



1. [←][→][↑][↓]

They are used to move the portion to be displayed.

2. [Zoom Out], [Zoom In]

Used to scale up or down the document to be displayed.

3. [Exit]

The login screen will appear.

4. Display File

Used to display the document name. [Switch] is displayed on the preview screen for the stored documents. Above key is used to switch the document to be displayed in the preview.

5. Display Page

Used to display the currently opened page number, total number of pages, page size and the color mode selected.

6. [Switch]

Used to turn the page of the selected document.

7. Display Position

When the image is enlarged, the position on the document indicated by this key is displayed.

- 🖉 Note
- □ When the preview is already selected from another function, the preview screen function may become unusable.
- The preview display is also not available when the paper size is larger than A3.

Using the Document Server

Following describes how to use the Document Server.

Storing Data

Following describes the procedure for storing documents on the Document Server.

∰Important

- Data stored in the machine might be lost if some kind of failure occurs. The manufacturer shall not be responsible for any damage resulting from loss of data.
- When entering your password or recording it to your notebook or like, be sure to protect it from being seen by others. Care must also be exercised for safe keeping of its recording paper.
- □ Enter the password in the range of four and eight digits.
- □ It is advisable not to use the same number such as "0000" or continuous numbers such as "1234" for your password. These numbers are imagine fully and they do not provide sufficient security.
- When you have selected a document using a correct password, it remains being selected after the operation is finished. As is, therefore, the document is left operable to those who don't the password. After the operation, be sure to press the [Clear Modes] key to cancel the selected state of the document.
- User names registered to the stored documents of the Document Server are used for identifying the documents' authors and the nature of the documents. They don't function as a protective means of confidential documents.
- When turning on the fax transmission or scanning by the scanner, make sure that all other operations are ended.

File Name

A document name such as "COPY0001" and "COPY0002" is automatically attached to the scanned document. You can change the document name.

User Name

You can specify the user name so that the person or department that has stored the document can be identified. Two approaches are available in specifying the user name. One is specifying the name being registered from the Address Book Management and the other is entering another name.

Password

You can specify a password for a document to be stored. When a password is set for a document, you are to enter that password for printing the document. Above arrangement prevents unauthorized printing of the document. Lock icon will be attached to the document for which a password has been set.

3

Press [Document Server] key.



2 Press [Scan Original].



3 Above operation sets up the user name, document name and password. When not changing a document name, the name will be automatically set.

4 Set the original.

5 Specify the original scanning conditions.



6 Press [Start] key.

The original is canned. The document is saved in the Document Server.

🖉 Note

- □ When interrupting the scan, press [Clear/Stop] key. Pressing [Continue] from the confirmation screen resumes the scan. Pressing [Stop] deletes the scanned images and the original on the automatic document feeder (ADF) will be ejected.
- □ As a password is set, the lock mark will be displayed on the left side of the document.
- □ As scan of the document is completed, a list will be displayed. If the list did not appear, press [Scanning Complete].
- According to the factory default, the documents stored on the Document Server are deleted three days (72 hours) after the storing date. You can cancel the automatic document deletion or select other period than three days for the automatic deletion. See "Auto Delete File in Document Server", General Settings Guide.
- When storing a document, which is not to be automatically deleted, in the Document Server, specify [Off] for "Auto Delete File in Document Server", General Settings Guide before storing the document. If you specify [On] for "Auto Delete File in Document Server" after that, Auto Delete File in Document Server will be enabled for the documents being stored after the setting.
- When storing a document in the Document Server after storing it from the copy feature, be sure that its copy is completed.

To register or change a user name (When using a user name registered to the Address Book)

Following describes the procedure for registering or changing a user name to be attached to a stored document.

1 Display the original scan screen.

2 Press [User Name].



Screen for user name change will appear

E Select the user name and then press [OK].

To register or change a user name (When using a user name not registered to the Address Book)

Following describes the procedure for registering or changing a user name to be attached to a stored document.

1 Display the original scan screen.

2 Select the user name and then press [OK].

User Name						
Enter the user name, then press [OK].						
Frequent	AB	CD	EF	GH	IJĸ	LMN
Londo	n Office		NewYork	Office		Berl
Tokyo	Office		Paris Office C		Chica	
Mosco	w Office		Beijing Office		Osak	
ABC Company			FACTORY GROUP			South

The user name change screen will appear.

Press [Manual Entry].

Enter the user name and then press [OK].

To register or change a user name (When no name is registered to the Address Book)

Following describes the procedure for registering or changing a user name to be attached to a stored document.



Display the original scan screen.

Press [User Name].



The user name input screen will appear.

Enter the user name and then press [OK].

To change a file name

Following describes the procedure for changing a name to be attached to a stored document.

1 Display the original scan screen.

2 Press [File Name].



The document name change screen will appear.

Press [Clear] to delete the document name to be automatically set.

Enter document name and then press [OK].

🖉 Note

- □ In Step **⑤**, pressing **[Backspace]** allows you to delete up to any desired location.
- □ You can enter up to 10 full size or 20 half-size characters for a document name. In the list, however, up to 8 full size or 16 half-size characters are displayed as the document name. If above limits are exceeded, the list will display up to 7 full size or 15 half-size characters for the document name.

To set or change a Password

Following describes the procedure for setting or changing a password to be attached to a stored document.

Display the original scan screen.

2 Press [Password].



Enter the password from the numerical keypad and then press [OK].

You can use four to eight digits for specifying the password.

Four double-check, enter the password again and then press [OK].

Changing User Name, File Name or Password of a Stored Document

Following describes the procedure for changing a user name, document name or password.



Press [Document Server]key.

2 Select the document whose user name, document name or password is to be changed.

Туре	User Name	File Name	Date	Page Orde
.	Tokyo Office	COPY0003	Jan./21	3
۸Ū		COPY0002	Jan./21	1

When a password is set, enter it and then press **[OK]**.

B Press [File Management].

Press [Change User Name], [Change File Name] or [Change Password].



E From the respective change screens, enter the new user name, document name or password and then press [OK].

3

6 Press [OK].

🖉 Note

Depending on the security setting, [Access Privileges] may appear instead of [User Name]. For details about specifying [Access Privileges], consult the administrator.

Checking the Details of a Stored Document

Following describes the procedure for displaying details of a stored document

1 Select the document whose details are to be displayed.

Туре	User Name	File Name	Date	Page Orde
ൢ	Tokyo Office	COPY0003	Jan./21	3
۸D		COPY0002	Jan./21	1

When a password is set, enter it and then press[OK].

2 Press [Details].

Details of the document will be displayed.

Details		Exit
▶User Name		
►File Name COPY0002	►Color Mode Black & White	
Stored Date / Time Jan. 21, 2006 05:02 AM		
▶Scanned Size 8½×11 🖓		
▶Page(s) 1page(s)	D. L	0 1 1/1
►Storage Method	Printing	a Order: 1/1

🖉 Note

- □ When you have selected two or more documents, you can view the information of the documents in the order of [▲][▼].
- □ Pressing **[Exit]** restores the document selection screen.

Searching for a Stored Document

Following describes the procedure for searching a stored document from user name or document name.

You can rearrange the currently chronologically ordered documents in any desired order.

To search by file name

Following describes the procedure for searching a stored document from the document name.

To search by user name

Following describes the procedure for searching a stored document from the user name.

Note 🖉

- Installing DeskTopBinder Lite enables search and reordering of stored documents from PC.
- For details about DeskTopBinder Lite, see Instruction Manual and Help of DeskTopBinder Lite.

To search by file name

Following describes the procedure for searching a stored document from the document name.

Press [Document Server] key.

2 Press [File Name].



Enter the document name to be searched and then press [OK].

A document name that matches completely from the starting character will be searched and displayed on the document selection screen.

🖉 Note

□ Pressing [Display All] displays ever stored document.

To search by user name

Following describes the procedure for searching a stored document from the user name.

Press [Document Server] key.

2 Press [User Name].



When specifying a registered user name, select the user name and then press [OK].

When using a not-registered user name, proceed to the next step.

When the user name is not registered, press [Manual Entry] and then enter the user name from the input screen to be displayed. Then press [OK].



D Press [OK].

A document name that matches completely from the starting character will be searched and displayed on the document selection screen.

🔗 Note

□ Pressing [Display All] displays ever stored document.

Printing a Stored Document

Following describes the procedure for printing a stored.

Using Web Image Monitor allows you to print a document stored in the Document Server from your PC.

1 Select the document to be printed.

When a password is set, enter it and then press [OK].

When printing two or more documents at a time, repeat the operation in step **1**.

Up to 30 documents can be printed.

U When specifying printing conditions, press [To Printing Screen].

The printing condition screen will appear. User name of the document, document name and the order of printing of this document will be displayed.



Enter the number of print copies from the numerical keypad.



Up to 999 copies are specifiable.

5 Press [Start] key.

Printing will be started.

🖉 Note

- □ You can search the target document using, in step **[**], **[User Name]** or **[File Name]** situated in the upper left side of the screen.
- □ Some of the selected document may not be printed due to the difference in the size or resolution.
- □ When changing the printing order, cancel the highlight and then specify the order correctly.
- □ Pressing **[Clear Modes]** key cancels every selection.
- □ Pressing **[Order]** displays the selected documents in the printing order.
- The copy and printer features holds the specified printing conditions after the operation is over and applies them at the next printing. The fax feature does not have the function of storing the printing conditions.
- When two or more documents are specified, the printing conditions are stored on the first document but not on the succeeding documents.
- □ Following settings are available for the printing conditions. For respective printing results, see "Copier Functions".
 - Book binding style (2 Sided Top to Top, 2 Sided Top to Bottom, Magazine, Booklet)
 - Treatment of front cover (Cover/Slip Sheet, Edit / Stamp)
 - Finish (Sort, Rotate Sort, Stack, Staple, Punch)
- □ When printing two or more copies while selecting the sort function, you can confirm the finish by printing only one copy.
- When printing two or more documents at a time, you can print them as a single continuous document by specifying the order of their printing.
- When printing two or more documents at a time, the printing conditions set for the first document are applied to all the remaining documents.

3

- □ When two or more documents are selected, pressing [▲][▼] allows you to confirm the user name, document name and printing order being designated for deletion in step].
- Pressing [Select File] restores the document selection screen.
- Stamp function is not specifiable to the documents being stored from the fax feature.

Reference

See p.57 "Copier Functions"

When Interrupting Printing

Following describes the procedure for interrupting printing work.

Press [Clear/Stop] key

Press [Suspend].

Changing Number of Print Copies while Printing is in Progress

Following describes the procedure for changing the number of print copies after printing is stared.

∰Important

This feature is enabled when the sort function is selected in the printing conditions.



Press [Change Quantity].

E Enter the number of print copies anew from the numerical keypad.

4 Press the [#] key.

5 Press [Continue].

Printing will be resumed.

🔗 Note

□ The range of print copies enterable in step **3** depends on the timing of your pressing **[Clear/Stop]** key.
Sample Print

When print copies are massive, you can print a single copy in advance to check appropriateness of the printing order of the selected documents and the printing conditions.

#Important

□ This feature is enabled when the sort function is selected in the printing conditions.



When a password is set, enter it and then press [OK].

Press [Sample Copy] key.

Only one copy will be printed.

B Press [Continue].

Printing will be resumed.

🖉 Note

- □ You can search the target document using, in step **[]**, **[User Name]** or **[File** Name] situated in the upper left side of the screen.
- □ In the display order field of step **1**, you can sort the documents by **[User** Name], [File Name], [Date]. Press the item to be used for the sorting.
- □ When canceling the selection in step **1**, press the highlighted document again.
- □ When canceling the printing, press **[Suspend]**. The print screen will appear, enabling to set another item.

Printing the First Page

In order to confirm the print results, you can print the first page alone of the document selected from the document selection screen.

When two or more documents are selected, the first page of the respective documents is printed.

1 Select the document to be printed (confirmed).

When a password is set, enter it and then press [OK].

2	Press	[Print	Specified	Page].
---	-------	--------	-----------	--------

Press [1st Page].

Print Specified Page				
Specify page to print, then press the Start key.				
1st Page				
Specified Page				
Specify Range				
System Status Job List				

4 Press [Start] key.

🖉 Note

- □ You can search the target document using, in step [], [User Name] or [File Name] situated in the upper left side of the screen.
- □ In the display order field of step **1**, you can sort the documents by **[User** Name], **[File Name]**, **[Date]**. Press the item to be used for the sorting.
- □ When canceling the selection in step **1**, press the highlighted document again.

Printing a Specified Page

You can print the specified page alone of the document selected from the document selection screen.

When two or more documents are selected, the specified page of the respective documents is printed.

1 Select the document to be printed.

When a password is set, enter it and then press [OK].

Press [Print Specified Page].

B Press [Specified Page].



Specify the page to be printed from the numerical keypad and then press [#] key.

5 Press [Start] key.

🖉 Note

- □ You can search the target document using, in step **[]**, **[User Name]** or **[File Name]** situated in the upper left side of the screen.
- □ In the display order field of step **1**, you can sort the documents by **[User Name]**, **[File Name]**, **[Date]**. Press the item to be used for the sorting.
- □ When canceling the selection in step **1**, press the highlighted document again.

Printing a Specified Range

You can print the pages in the specified range alone of the document selected from the document selection screen.

When two or more documents are selected, pages in the specified range of the respective documents is printed.

Select the document to be printed.

When a password is set, enter it and then press [OK].

Press [Print Specified Page].

Press [Specify Range].



- Specify the printing start page from the numerical keypad and then press [#] key.
- Specify the printing end page from the numerical keypad and then press [#] key.

6 Press [Start] key.

Note 🖉

- □ You can search the target document using, in step **[**, **[User Name]** or **[File Name]** situated in the upper left side of the screen.
- □ In the display order field of step **1**, you can sort the documents by **[User** Name], **[File Name]**, **[Date]**. Press the item to be used for the sorting.
- □ When canceling the selection in step **1**, press the highlighted document again.

Deleting a Document

Following describes the procedure for deleting a stored document.

∰Important

□ The Document Server can store up to 1000 documents. As the number of stored documents reaches 1000, storing of a new document becomes unavailable. Thus, you should delete unnecessary documents as much as practicable.



2 Select the document to be deleted.

When a password is set, enter it and then press [OK].

Press [Delete File].

Print Specified Page				
Specify page to print, then press the Start key.				
1st Page				
Specified Page				
Specify Range				
<u> </u>				
System Status Job List				

Press [Yes].

🖉 Note

- □ It deletes the stored documents at a time. See "Delete All Files in Document Server", General Settings Guide.
- Using Web Image Monitor allows you to print a document stored in the Document Server from your PC.
- □ It is also possible to select two or more documents and delete them.
- □ You can search the target document using, [File Name] or [User Name] situated in the upper left side of the screen.
- □ In the display order field, you can sort the documents by **[User Name]**, **[File Name]**, **[Date]**. Press the item to be used for the sorting.
- When you could not identify the target document from the document name, print the first page alone of the document in order to confirm the print results.
- □ When canceling your selection, press the highlighted document again.
- □ For the Web Image Monitor starting procedure, see "Displaying a Document in Document Server with Web Image Monitor".

Displaying a Document in Document Server with Web Image Monitor

Following describes the procedure for confirming contents of a stored document on the PC screen by use of Web Image Monitor.

1 Start Web browser.

Enter "http:// (IP address of this machine) /" to the address.

Top page of Web Image Monitor will be displayed.

Click [Document Server].

The list of documents in the Document Server will be displayed

Click 🗐 of the document you want to confirm.

Information of the document will be displayed.

5 Confirm contents of the document.

🖉 Note

- □ You can change the document list display format from step 3. Click the ⊞ (Thumbnails), (Icons), or (Details).
- □ When you want to enlarge the preview display in step **5**, click **[Enlarge Image]**.

Downloading Stored Documents

Following describes the procedure for downloading a stored document to the PC by use of Web Image Monitor.

∰Important

- □ When downloading a document stored with the copy feature, you must prepare the extended data conversion board.
- Start Web browser.

Enter "http://(IP address of this machine)/" to the address.

Top page of Web Image Monitor will be displayed.

Click [Document Server].

List of the documents will be displayed.

Click 🗐 of the document you want to download.

• Select File format [PDF][Multi-page TIFF] and then click [Download].

The data will be downloaded.

Click [OK].

🖉 Note

- □ You can change the document list display format from step 4. Click the ⊞ (Thumbnails), (Icons), or (Details).
- □ In step **⑤**, you cannot select **[Multi-page TIFF]** for a document being stored with the copy or printer.
- □ When downloading a document with [Multi-page TIFF] in step ⑤, you must prepare a Printer/Scanner Unit and File Format Converter.

4. Appendix

Following describes the copy machine's specifications and the function compatibility.

Function Compatibility

The combination chart given below shows which modes can be used together. Blank space: These modes can be used together.

×: These modes cannot be used together. The first mode selected will be the mode you are working in.

•: These modes cannot be used together. The second mode selected will be the mode you are working in.

The following shows the combinations of functions:



- ^{*1} When "2 Sided \rightarrow 1Sided" is specified, the combination with the front cover or slip sheet (Designate) is ×.
- *2 Combination of "Staple: Top" and "Punch: Left" is ×.
 Combination of "Staple: Left" and "Punch: Top" is ×.
 Combination of "Staple: Center" and "Punch: Left"/"Punch:Top" is ×.



AMG070S

Supplementary Informations

Following describes the detailed specifications of the respective functions.

Mixed Size mode

- Since small originals may not be correctly aligned with the original guide, the copy image may be slanted.
- You can place originals of two different sizes at a time.
- Copying speed and scanning speed will be reduced.

Bypass Tray Copy

- The following paper sizes can be selected as the standard sizes: A3□, B4 JIS□, A4□□, B5 JIS□□, A5□□, B6 JIS□, A6□, 12 × 18□, 11 × 17□, 8¹/₂ × 14□, 8¹/₂" × 11"□□, 5¹/₂ × 8¹/₂□□, Postcard□, 148 × 200 mm□□
- When the beeper is turned off, it will not sound if you insert paper into the bypass tray. See "Panel Tone", General Settings Guide.

Preset Enlarge/Reduce

- You can select one of 12 preset ratios (5 enlargement ratios, 7 reduction ratios).
- Following shows the relation between the original's size and copied-to paper size at respective scaling factors.

```
• Metric version
400% (Area ratio 16 times):-
```

400% (Area ratio 16 times):-200% (Area ratio 4 times): $A5 \rightarrow A3$, $B6JIS \rightarrow B4$ JIS 141% (Area ratio 2 times): $A4 \rightarrow A3$, $A5 \rightarrow A4$, B5 JIS $\rightarrow B4$ JIS, $B6JIS \rightarrow B5$ JIS 122%: $A4 \rightarrow B4$ JIS, $A5 \rightarrow B5$ JIS 115%: B4 JIS $\rightarrow A3$, B5 JIS $\rightarrow A4$, $B6JIS \rightarrow A5$ 93%:-82%: B4 JIS $\rightarrow A4$, B5 JIS $\rightarrow A5$ 75%: B4 JIS $\rightarrow F4$, B4 JIS $\rightarrow F$ 71% (Area ratio $^{1}/_{2}$ times): $A3 \rightarrow A4$, $A4 \rightarrow A5$, B4 JIS $\rightarrow B5$ JIS, B5 JIS $\rightarrow B6$ JIS 65%: $A3 \rightarrow F$ 50% (Area ratio $^{1}/_{4}$ times): $A3 \rightarrow A5$, B4 JIS $\rightarrow B6$ JIS 25%:-

- Inch version 400% (Area ratio 16 times): -200% (Area ratio 4 times): $5^{1}/{_{2}''} \times 8^{1}/{_{2}''} \rightarrow 11'' \times 17''$ 155% (Area ratio 2 times): $5^{1}/{_{2}''} \times 8^{1}/{_{2}''} \rightarrow 8^{1}/{_{2}''} \times 14''$ 129%: $8^{1}/{_{2}''} \times 11'' \rightarrow 11'' \times 17''$ 121%: $8^{1}/{_{2}''} \times 14'' \rightarrow 11'' \times 17''$ 93%: -85%: $F \rightarrow 8^{1}/{_{2}''} \times 11''$ 78%: $8^{1}/{_{2}''} \times 14'' \rightarrow 8^{1}/{_{2}''} \times 11''$ 73%: $11'' \times 15'' \rightarrow 8^{1}/{_{2}''} \times 11''$ 65%: $11'' \times 17'' \rightarrow 8^{1}/{_{2}''} \times 11''$ 50% (Area ratio $^{1}/{_{4}}$ times): $11'' \times 17'' \rightarrow 5^{1}/{_{2}''} \times 8^{1}/{_{2}''}$ 25%: -
- You can select a ratio regardless of the size of an original or copy paper. With some ratios, parts of the image might not be copied or margins will appear on copies.
- If a Copy Data Security Unit is installed, you can select the factor from 50 to 400%.

Zoom

- The reproduction ratios you can specify are 25-400%. The factor can be from 50 to 400%, when the machine is equipped with a Copy Data Security Unit.
- You can select a ratio regardless of the size of an original or copy paper. With some ratios, parts of the image might not be copied or margins will appear on copies.

✤ Size Magnification

- If the calculated ratio is over the maximum or under the minimum ratio, it is automatically adjusted to within available range. However, with some ratios, parts of the image might not be copied or margins will appear on copies.
- The reproduction ratios you can specify are 25-400%. If the machine is equipped with a Copy Data Security Unit, the range is from 50 to 400%.

Directional Size Magnification

- The reproduction ratio you can specify are 25-400%. If the machine is equipped with a Copy Data Security Unit, the range is from 50 to 400%.
- When entering a percentage ratio, you can specify any value in the permitted range,regardless of original or copy paper size. However, depending on settings and other conditions, part of the image may not be copied, or margins will appear on copies.
- When entering a size in mm, if the calculated ratio is over the maximum or under the minimum ratio, it is automatically adjusted to within available range. However, with some ratios, parts of the image might not be copied or margins will appear on copies.

Sort, Rotate Sort, Stack

- Following shows the stackable paper sizes and the orientation.
 - Internal shift sort tray $12'' \times 18''$, A3, D, B4, D, A4, D, B5, D, A5, D, B6, A6, 11'' × 17'', $8^{1}/{2''} \times 14''$, $8^{1}/{2''} \times 11''$, $5^{1}/{2''} \times 8^{1}/{2''}$, $7^{1}/{4''} \times 10^{1}/{2''}$, $8'' \times 13''$, $8^{1}/{2''} \times 13'''$, $8^{1}/{2''} \times 13'''$, $8^{1}/{2''} \times 13'''$,
 - 500-sheet finisher A3D, B4D, A4DD, B5DD, A5DD, B6D, $11'' \times 17''D$, $8^{1}/{2''} \times 14''D$, $8^{1}/{2''} \times 11''DD$, $5^{1}/{2''} \times 8^{1}/{2''D}$, $7^{1}/{4''} \times 10^{1}/{2''}DD$, $8'' \times 13''D$, $8^{1}/{2''} \times 13''DD$, $8^{1}/{2''} \times 13''D$, 8KD, 16KDD
 - 1000-sheet finisher $12'' \times 18'' \square$, A3 \square , B4 \square , A4 \square \square , B5 \square \square , A5 \square \square , 11'' $\times 17'' \square$, $8^{1}/{2''} \times 14'' \square$, $8^{1}/{2''} \times 11'' \square$ \square , $5^{1}/{2''} \times 8^{1}/{2''} \square$, $7^{1}/{4''} \times 10^{1}/{2''} \square$, $8'' \times 13'' \square$, $8^{1}/{2''} \times 13'' \square$ \square , $8^{1}/{2''} \times 13'' \square$, 8K \square , 16K \square \square
 - Booklet finisher $12'' \times 18''\Box'$, A3 \Box' , B4 \Box' , A4 $\Box'\Box'$, B5 $\Box'\Box'$, A5 $\Box'\Box'$, $11'' \times 17''\Box'$, $8^{1}/{2''} \times 14''\Box'$, $8^{1}/{2''} \times 11''\Box'\Box'$, $5^{1}/{2''} \times 8^{1}/{2''}\Box'$, $7^{1}/{4''} \times 10^{1}/{2''}\Box''$, $8'' \times 13''\Box'$, $8^{1}/{2''} \times 13''\Box''$, $8^{1}/{2''} \times 13''\Box'$, 8K \Box' , 16K $\Box'\Box'$
- Paper sizes and orientations that can be used in the Rotate Sort function are A4 □ □, B5 JIS □ □ and 8¹/₂" × 11" □ □.
- The number of copies that can be placed on the tray is as follows. When the number of copies exceeds capacity, remove copies from the tray.
 - Internal tray A4, $8^1/2'' \times 11''$ or smaller: 500 sheets B4 JIS, $8^1/2'' \times 14''$ or larger: 250 sheets
 - Internal tray 2 125 sheets
 - Internal shift sort tray A4, 8¹/₂" × 11" or smaller: 250 sheets B4 JIS, 8¹/₂" × 14" or larger: 125 sheets
 - 500-sheet finisher (On the Finisher tray, stack unstapled paper) A4, 8¹/₂" × 11" or smaller:500 sheets B4 JIS, 8¹/₂" × 14" or larger: 250 sheets
 - 500-sheet finisher (On the Finisher tray, stack stapled paper) A4 □ □, B5 JIS □ □, 8¹/₂" × 11" □ □: 2-leaf binding...55 copies, 50-leaf binding ...9 copies A3□, B4 JIS□, 11 × 17□, 8¹/₂" × 14"□: 2-leaf binding...33 copies, 30-leaf binding ...8 copies
 - 1000-sheet finisher (Finisher upper tray) A4, 8¹/₂" × 11" or smaller: 250 sheets B4 JIS, 8¹/₂" × 14" or larger: 50 sheets
 - 1000-sheet finisher (On the Finisher shift tray, stack unstapled paper) A4, 8¹/₂" × 11" or smaller: 1000 sheets B4 JIS, 8¹/₂" × 14" or larger: 500 sheets

- 1000-sheet finisher (On the Finisher shift tray, stack stapled paper) A4□, 8¹/₂" × 11"□: 10 to 50-feaf binging...100 to 20 copies, 2 to 9-leaf binding...100 copies A4□, B5 JIS□, 8¹/₂" × 11"□: 10 to 50-feaf binging...50 to 10 copies, 2 to 9-leaf binding...100 copies A3□, B4□, 11" × 17"□, 8¹/₂" × 14"□, 12" × 18"□: 10 to 30-leaf binding...50 to 10 copies, 2 to 9-leaf binding...50 to 10 copies
- Booklet finisher (Finisher tray) A4, 8¹/₂" × 11" or smaller: 100 sheets B4 JIS, 8¹/₂" × 14" or larger: 50 sheets
- Booklet finisher (On the Finisher tray2, stack unstapled paper) A4, 8¹/₂" × 11" or smaller:1,000 sheets B4 JIS, 8¹/₂" × 14" or larger: 500 sheets
- Booklet finisher (On the Finisher tray2, stack stapled paper) A4□, B5 JIS□, 8¹/₂" × 11"□: 10 to 50-leaf binding...100 to 20 copies, 2 to 9-leaf binding...100 copies A4□, B5 JIS□, 8¹/₂ × 11□:10 to 50-leaf binding...50 to 10 copies, 2 to 9-leaf binding...100 copies A3□, B4 JIS□, 11 × 17□, 8¹/₂" × 14"□: 10 to 30-leaf binding...50 to 10 copies, 2 to 9-leaf binding...50 copies
- Booklet finisher (Booklet tray) A3□, B4 JIS□, A4□, 11 × 17□, 8¹/₂" × 14"□, 8¹/₂" × 11"□: 2 to 5-leaf binding...30 copies, 6 to 10-leaf binding...15 copies
- When using the Rotate Sort or Staple functions, the capacity may be reduced.
- Installing the finisher to the internal tray also reduces the number of paper it can house.

✤ Staple

- The following type of paper cannot be stapled:
 - Postcard
 - Translucent paper
 - OHP transparencies
 - Label paper (adhesive labels)
 - Curled paper
 - Paper of low stiffness
 - Paper of mixed sizes
- In the following cases, copies will be delivered to the shift tray without stapling:
 - When the number of sheets for one set is over stapler capacity.
 - When memory reaches 0% during copying.
- When using the Staple function with [1 Sided → 1 Sided], [1 Sided → 2 Sided], [2 Sided → 1 Sided], [2 Sided → 2 Sided], [Double Copies], select □ original for □ and □ original for □ copy.

- When using the Staple function with [1 sided → Comb 2 orig], [1 sided → 2 sided:TtoB], [1 sided → 2 sided:TtoT], [Double Copies], select □ paper for □ original and □ for □ original.
- When using the Staple function [Staple: Left 2] or [Staple: Top 2] with the Combine function [1 Sided → 1 Sided], [1 Sided → 2 Sided], [2 Sided → 1 Sided], [2 Sided → 2 Sided], [Double Copies], select □ paper for □ original and □ paper for □ original.
- If a finisher is installed, the mixed size function and the auto paper selection function become available. These functions make it possible to choose the paper appropriate for stapling from the mixed sizes. Prior to the operation, you should set on the feed tray the paper of the size to be used. Following sizes allow the stapling when mixed with other sizes.
 - A3 \square and A4 \square
 - B4 JIS□ and B5 JIS □
 - $11'' \times 17'' \square$ and $8^1/2'' \times 11'' \square$
- Paper sizes and orientation that can be used in the Staple function and the stapler capacity are as follows:
 - 500-sheet finisher
 A3□, B4 JIS□. 11" × 17"□, 8¹/₂" × 14"□: 30 sheets
 A4□□, B5 JIS□□, 8¹/₂" × 11"□□: 50 sheets
 - 1000-sheet finisher
 12" × 18" □, A3□, B4 JIS□, 11" × 17" □, 8¹/₂" × 14" □, 8" × 13" □, 8¹/₂" × 13" □, 8K□: 30 sheets
 A4 □ □, B5 JIS □ □, 8¹/₂" × 11" □ □, 7¹/₄" × 10¹/₂" □ □, 16K □ □: 50 Sheets
 - Booklet finisher A3□, B4 JIS□, 11" × 17"□, 8¹/₂" × 14"□: 30 sheets A4□□, B5 JIS□□, 8¹/₂" × 11"□□:50 sheets When stapling center: A3□, B4 JIS□, A4□, B5 JIS□, 11" × 17"□, Legal 8¹/₂" × 14"□, 8¹/₂" × 11"□□: 10 sheets
- When stapling B4 JIS□, A3□, Legal 8¹/₂" × 14"□, 11" × 17"□, be sure to extend the paper support plate of the finisher tray.
- When the number of copies exceeds tray capacity, copying stops. If this happens, remove the copies from the shift tray, and then resume copying. The tray capacity for the stapled sheets is as follows: (paper weight: 80 g/m2, 20 lb.)
 - 500-sheet finisher (Finisher tray 1) A4□□, B5 JIS□□, 8¹/₂" × 11"□□: 2-leaf binding...55 copies, 50-leaf binding ...9 copies A3□, B4 JIS□, 11" × 17"□, 8¹/₂" × 14"□: 2-leaf binding...33 copies, 30-leaf binding ...8 copies

• 1000-sheet finisher (Finisher shift tray)

A4 \square , $8^1/2'' \times 11''$ \square : 10 to 50-feaf binging...100 to 20 copies, 2 to 9-leaf binding...100 copies A4 \square , B5 JIS \square , $8^1/2'' \times 11''$ \square : 10 to 50-feaf binging...50 to 10 copies, 2 to 9-leaf binding...100 copies

A3, B4, $11^{"} \times 17^{"}$, $8^{1}/{_{2}^{"}} \times 14^{"}$, $12^{"} \times 18^{"}$; 10 to 30-leaf binding...50 to 10 copies, 2 to 9-leaf binding...50 copies

- Booklet finisher A4□, B5 JIS□, 8¹/₂" × 11"□: 10 to 50-leaf binding...100 to 20 copies, 2 to 9-leaf binding...100 copies A4□, B5 JIS□, 8¹/₂" × 11"□:10 to 50-leaf binding...50 to 10 copies, 2 to 9-leaf binding...100 copies A3□, B4 JIS□, 11" × 17"□, 8¹/₂" × 14")□: 10 to 30-leaf binding...50 to 10 copies, 2 to 9-leaf binding...50 copies Booklet tray: A3□. B4 JIS□, A4□, 11" × 17"□, 8¹/₂" × 14"□, 8¹/₂" × 14"□? × 14"□? × 11"□: 2 to 5-leaf binding...30 copies, 6 to 10-leaf binding...15 copies
- You cannot change stapling positions during copying.
- When the original image is rotated, the staple orientation changes by 90°.
- The maximum original image size that can be rotated is as follows: Metric version: A4, Inch version: $8^1/2'' \times 11''$
- When using [Staple: Slant], [Staple: Bottom Slant], [Staple: Left 2], [Staple: Top 2] with Combine, Double copies or Auto Reduce / Enlarge function, "Blank part will appear. Check orientation. "message may appear depending on the orientation of originals and paper you placed. In this case, change the paper orientation.
- When **[Staple: Left 2]**, **[Staple: Top 2]** is selected, the following settings are useful to rotate images appropriately:
 - [Auto Reduce / Enlarge] or [Auto Paper Select]
 - Replace **[Auto Tray Switching]** with **[With Image Rotation]** in the User Tool's Copier / Document Server Features
- If you select Saddle Stitch function with the optional booklet finisher, the machine staples and folds the paper in the center, then delivers the paper folded.
- If you select **[Staple: Center]** from the Booklet or Magazine function, the machine staples the paper, and folds it like a book, then delivers the paper folded.

Punch

- When using Punch and Combine, Double Copies, or Auto Reduce/Enlarge,the message "Blank part will appear. Check orientation." may appear because of the orientation of the original and the copy paper. If this occurs, change the orientation of the copy paper.
- Since punch holes are made in each copy, the punch hole positions vary slightly.

- Punchable paper sizes are as follows:
 - 2 and 4 holes type (2 holes) A3, B4 JIS, A4, B5 JIS, A5, A5, $11'' \times 17''$, $8^1/2'' \times 14''$, $8^1/2'' \times 11''$, $7^1/4'' \times 10^1/2''$, $8^1/2'' \times 13''$, $8^1/4'' \times 13''$, $8'' \times 13''$, 8K, 16K, D
 - 2 and 4 holes type (4 holes) A3□, B4 JIS□, A4□, B5 JIS□□, 11″×17″□, 8¹/₂″×11″□, 7¹/₄″×10¹/₂″□, 8K□, 16K□□
 - 2 and 3 holes type (2 holes) A3, B4 JIS, A4, A4, B5 JIS, A5, A5, $11'' \times 17''$, $8^1/2'' \times 14''$, $8^1/2'' \times 11''$, $7^1/4'' \times 10^1/2''$, $8^1/2'' \times 13''$, $8^1/4'' \times 13''$, $8'' \times 13''$, 8K, 16K, 16K
 - 2 and 3 holes type (3 holes) A3□, B4 JIS□, A4□, B5 JIS□, 11" × 17"□, 8¹/₂" × 11"□, 7¹/₄" × 10¹/₂"□, 8K□, 16K□
 - 4 holes type A3D, B4 JISD, A4 D, B5 JIS D, A5 D, $11'' \times 17''D$, $8^1/2'' \times 14''D$, $8^1/2'' \times 11''D, 7^1/4'' \times 10^1/2''D, 8^1/2'' \times 13''D, 8^1/4'' \times 13''D, 8'' \times 13''D$, 8KD, 16K D

✤ Duplex

- You cannot use the following copy paper with this function: A3D, B4 JISD, A4DD, B5 JISDD, A5D, $11'' \times 17''D$, $8^1/2'' \times 14''D$, $8^1/2'' \times 11''DD$, $7^1/4'' \times 10^1/2''DD$, $8'' \times 13''D$, $8^1/2'' \times 13''D$, $8^1/4'' \times 13''D$, 8KD, 16KDD
- You cannot use the following copy paper with this function:
 - Paper smaller than A5, $5^1/2'' \times 8^1/2''$
 - Translucent paper
 - Label paper (adhesive labels)
 - OHP transparencies
 - Paper thicker than 105 g/m^2 , 28 lb.
 - Paper thinner than 64 g/m^2 , 17 lb.
 - Postcards
- When an odd number of originals is placed in the ADF, the back of the last page of copied paper is blank.
- During copying, the image is shifted to allow for the binding margin.

Combine

- In this mode, the machine selects the reproduction ratio automatically. This reproduction ratio depends on copy paper sizes and the number of originals.
- The reproduction ratios you can specify are 25-400%. If the machine is equipped with a Copy Data Security Unit, the range is from 50 to 400%.
- If the calculated ratio is under the minimum ratio, it is automatically adjusted to within available range. However, with some ratios, parts of the image might not be copied.
- You cannot use custom size paper.
- If the orientation of originals is different from that of the copy paper, the machine will automatically rotate the image by 90° to make copies properly.
- If the number of originals placed is less than the number specified for combining, the last page segment is left blank as shown.



✤ Booklet/Magazine

- The machine sets the reproduction ratio automatically to meet the paper size and copies the originals together onto the paper.
- The reproduction ratios you can specify are 25-400%. If the machine is equipped with a Copy Data Security Unit, the range is from 50 to 400%.
- If the calculated ratio is under the minimum ratio, it is automatically adjusted to within available range. However, with some ratios, parts of the image might not be copied.
- If the orientation of originals is different from that of the copy paper, the machine will automatically rotate the image by 90° to make copies properly.
- You cannot copy with originals different in size and orientation.
- If the number of originals scanned is less than a multiple of 4, the last page is copied blank.
- In Magazine mode, the copying may take some time after scanning originals.
- When the optional booklet finisher is installed, if you select Saddle Stitch function in Magazine mode, the machine staples and folds the paper in the center, then delivers the paper folded.

✤ Image Repeat

• Depending on the paper size, ratio, and orientation, parts of repeated images may not be copied.

✤ Centering

• Though the original is set to a different orientation from the paper loaded, the machine will not rotate the image by 90° (Rotate copy).

Erase

- The width of the erased margin varies depending on the reproduction ratio.
- If the size of the original is different from sizes listed in the following chart, the erased margin might be shifted:
 - Metric version Exposure glass : A3, B4 JIS, A4, C, B5 JIS, ADF : A3, B4 JIS, A4, C, B5 JIS, A5, C
 - Inch version
 Exposure glass: 11" × 17"□, 8¹/₂" × 14"□, 8¹/₂" × 11"□□
 ADF: 11"×17"□, 8¹/₂" × 14"□, 8¹/₂" × 11"□□, 5/₂" × 8¹/₂"□

Background Numbering

• The numbers appear to overlap the copied image in some cases.

Margin Adjustment

- If you set a binding margin that is too wide, part of the image may not be copied.
- When making copies in Combine mode, the binding margin is added to the copies after the combination is finished.

Preset Stamp

- You can change the size and density of the stamp with User Tools. Depending on the setting, density may change.
- Depending on paper size, if you change the stamp size, parts of the stamp might not be printed.

- ✤ Date Stamp
 - When using Combine mode, the date stamp is printed as follows:
 - With the Combine function



• With the Magazine or Booklet function



Page Numbering

- When page numbering is used with Combine mode, page numbers are printed as follows:
- Page Numbering per original: With 1 Sided/2 Sided using the Combine function



With the Magazine or Booklet function



• Page Numbering per copy: With 1 Sided/2 Sided using the Combine function



GCANPE2E

• If you combine this function with the Duplex (Top to Top) function and select **[P1,P2...]** or **[1/5,2/5...]**, page numbers on the back are printed as follows:



- 1) Front
- Back

Front Cover, Front/Back Cover

- If Blank mode is selected, the cover will not be counted as a copy.
- Front and back covers are two-sided copied depending on the settings made in Display Time in Cover Sheet Tray of User Tools (System Settings).
 - At Mode Selected... Depends on the setting done from Cover Sheet Tray.
 - Full Time... Depends on the setting done from Paper Type. See "Paper Type", "Cover Sheet Tray", General Settings Guide.

Slip sheet

• If you do not copy onto slip sheets, they are excluded from the number of copies counted.

INDEX

1 Sided 16 Pages \rightarrow Combine 2 Side, 88 1 Sided 2 Pages \rightarrow Combine 1 Side, 86 1 Sided 4 Pages \rightarrow Combine 1 Side, 86 1 Sided 4 Pages \rightarrow Combine 2 Side, 88 1 Sided 8 Pages \rightarrow Combine 1 Side, 86 1 Sided 8 Pages \rightarrow Combine 2 Side, 88 1 Sided \rightarrow 2 Sides, 82 1 Sided \rightarrow Booklet, 93 1 Sided \rightarrow Magazine, 93 2 Sided 16 Pages \rightarrow Combine 2 Side, 88 2 Sided 1 Page \rightarrow Combine 1 Side, 86 2 Sided 2 Page \rightarrow Combine 1 Side, 86 2 Sided 4 Page \rightarrow Combine 1 Side, 86 2 Sided 4 Pages \rightarrow Combine 2 Side, 88 2 Sided 8 Pages \rightarrow Combine 2 Side, 88 2 Sided $\rightarrow 1$ Sided, 91 2 Sided $\rightarrow 2$ Sided, 82 $2 \text{ Sided} \rightarrow \text{Booklet}, 93$

A

Adjust Color, vi, 48 Adjust Color Image, 6 Adjusting Colors Based on Selected Color, 53 Adjusting Copy Image Density, 57 Adjusting the background density, 51 Adjusting the contrast, 51 Adjusting the sharpness/softness, 50 Adjusting the Text/Photo sensitivity, 52 Adjusting the U.C.R., 52 Adjust U.C.R., vii, 49 Administrator Tools, 6 Auto Document Feeder, 12 Auto image density, 57 Auto Paper Select, 60, 61 Auto Reduce/Enlarge, 66

В

Background Density, vii, 49 Background Numbering, v, 106, 167 Basic Procedure, 25 Batch mode, 19 binding margin, 99 Black/White Copy, iii, 41 Book \rightarrow 1 Sided, 91 Book \rightarrow 2 Sided, 93 Booklet, 97 Booklet/Magazine, xii, xvi, 93, 167 Border Erase, 100, 101, 102, 105 border erase, 104 Bypass tray, 37 bypass tray, 36 Bypass Tray Copy, 167

С

Center, 103 center, 104, 105, 127 Center/Border Erase, 104 center/Border Erase, 100 center Erase, 100, 103 Centering, 127, 167 Changing a Stored Program, 140 Changing the Number of Sets, 75 Changing the order of jobs, 31 Changing the registered contents, 47 Changing User Name, File Name or Password of a Stored Document, 152 Chapters, 134 Checking Job History, 33 Checking jobs in the print queue, 31 Checking the Details of a Stored Document, 153 check the copy, 74 Color Background, 44 Color background, iii Color Balance, vi, 45 Color Balance Program, 46 Color Functions, 41 Combine, 167 Combined auto and manual image density, 57, 58 Contrast, vii, 49 Convert Colors, iii, 42 Copier Functions, 57, 143 Copying, 25 onto envelopes, 40 Copying 2-Sided Pages, xvii Copying from the Bypass Tray, 34 copying onto OHP Transparencies, 38 Copying onto Thick Paper, xvii copying onto Thick Paper, 39 copying onto Thin Paper, 38 Copying Originals Such as Books, xvi Covers, 131 Create Margin function, 64 Creating Colors by Directly Specifying the Density of Each Color with Number Keys, 55 custom size, 37 Custom sizes, 23

D

date, 116, 117 Date Stamp, v, 114, 167 default, 142 Deleting a Document, 162 Deleting a Program, 141 Deleting jobs, 32 Deleting User colors, 56 density, 109 Designate, 132 detect, 14 different sizes, 21 Directional Magnification, 69, 70 Directional Size Magnification (mm), 71 Display, 4 Displaying a Document in Document Server with Web Image Monitor, 163 Document Server, 143 Document Server Display, 144 Double Copies, 126 Downloading Stored Documents, 164 Duplex, ix, 82, 167

Ε

Edit, 6 Erase, 100, 167 Erase Color, 43 Erase Specified Color, iii

F

Fax Functions, 143 first printing number, 120, 121, 122 first printing page, 120, 121, 122 format of date, 116 Front & Back \rightarrow 2 Sided, 93 Front/Back Covers, 131 Front cover, 131 Front Cover, Front/Back Cover, 167 Full Color Copy, iii, 41 Function Compatibility, 165

G

General Features, 6 Generation Copy, 59 Holding print jobs, 32 How to fold, 97 How to fold and unfold copies to make a booklet, 93 How to fold and unfold copies to make a magazine, 93 How to Read This Manual, 2 How to unfold, 97

I

image density, 57 Image Repeat, 123, 167 Initial Display, 142 Input / Output, 6 Interrupt Copy, 26 Interrupting Printing, 158 invert, 129

J

Job List, 29 Job List screen, 30 Job Preset, 27

L

Last Number, 120, 121 Left Original Beeper, 27

Μ

Magazine, 97 Manual image density, 58 Manual Paper Select, 61 Manuals for This Machine, i Map, 59 Margin Adjustment, 99, 167 Mirror, 130 Missing image area, 14 Mixed size mode, 21, 167

Ν

number keys, 66, 69

0

One-Sided Combine, xiv, 86 onto 1-Sided Pages, xvii Option, 3 Orientation, 110 Original, 11 Original Orientation, 15 Original orientation, 107, 115 original orientation, 77, 110, 118 Original orientation and completed copies, 83 Originals, 11, 14 Originals and copy orientation, 85 Original size, 22

Ρ

Page Numbering, v, 118, 119, 120, 121, 122, 167 Pale, 59 Photo, 59 Placing, 11 Placing Originals, 15 Placing Originals in the Auto Document Feeder, 17 Placing Originals on the Exposure Glass, 17 Position, 77, 110 position, 77 Positive/Negative, 129 Preset Enlarge/Reduce, 167 Preset Reduce/Enlarge, 63 Preset Stamp, v, 107, 109, 167 Preview Display, 146 Primary Colors, vi Printer Functions, 143 Printing a List of user colors, 56 Printing a Specified Page, 160 Printing a Stored Document, 156 Printing the First Page, 160 program, 112, 142 Programs, 139 Punch, 80 Punch hole positions, 81 Punch holes, 80

R

ratio, 65, 66 Recalling a Program, 141 reflect, 130 Registering the adjusted Color balance, 46 Regular sizes, 22 Renaming a Color, 55 Repeat, 124 repeat, 123 Reproduction Ratio, 6 reverse, 129 Rotate Sort, 72

S

SADF, 20 SADF mode, 20 Sample copy, 74 Sample Print, 159 Scanner Functions, 143 Searching for a Stored Document, 154 Selecting a Color Mode, 41 Selecting Copy Paper, 60 Series Copies, 91 Sharp/Soft, vii, 49 Simplified Display, 5, 145 size, 109 Size Magnification, 68, 167 Sizes, 14 Sizes and Weights of Recommended Originals, 11 Sizes Detectable, 12 Slip Sheet, 167 Slip Sheets, 135 Sort, 72, 167 Specified Area Repeat, 123, 125 Stack, 76, 167 Stamp, 6 stamp color, 109, 111, 116, 119 stamp position, 107, 109, 110, 111, 115, 117, 118, 120 Staple, 77, 167 staple, 77 stapler, 77 Stapling position and original setting, 77 Storing a Program, 139 Storing Data, 147 Storing Data in the Document Server, 137 Symbols, 2

Т

Text, 59 Text/Photo, 59 Text/Photo Sensitivity, vii, 49 To change a file name, 151 To delete the user stamp, 113 To register or change a user name, 149, 150 To search by file name, 155 To search by user name, 155 To set or change a Password, 152 Two-Sided Combine, 88

U

User Color, 53 User Stamp, v, 109, 110, 111, 112, 113

V

various sizes, 21

W

What You Can Do with This Machine, iii, ix When copying onto Regular Size Paper, 36 Whole Area, 124 Whole Area Repeat, 123

Ζ

Zoom, 65, 167



In accordance with IEC 60417, this machine uses the following symbols for the main power switch:

- means POWER ON.
- O means POWER OFF.
- () means STAND BY.

Acrobat[®] is a registered trademark of Adobe Systems Incorporated.

Other product names used herein are for identification purposes only and might be trademarks of their respective companies. We disclaim any and all rights to those marks.





Type for C2525/DSc525/LD425c/Aficio MP C2500 Type for C3030/DSc530/LD430c/Aficio MP C3000 EN (USA) B230-7607