# DDC52/62n Digital Document Copier S2/62n

# User's Guide

©1999 Hitachi Koki Imaging Solutions, Inc. 1757 Tapo Canyon Road Simi Valley, CA 93063 336693-001, Rev. A August, 1999 © 1999 Hitachi Koki Imaging Solutions, Inc. All rights reserved.

No part of this document may be reproduced without the expressed permission of Hitachi Koki Imaging Solutions, Inc.

The material in this document is for informational purposes and is subject to change without notice. Hitachi Koki Imaging Solutions, Inc., assumes no responsibility for errors or omissions in this document. No liability is assumed for any damages resulting from the use of the information it contains.

#### **TRADEMARK**

Digital Document Copier, DDC, DDC 52n, DDC 62n, and their associated logo marks, are trademarks of Hitachi Koki Imaging Solutions, Inc.

Hitachi and the Hitachi logo are trademarks of Hitachi, Ltd. All rights reserved.

All other trademarks are the property of their owners.

#### NOTICE TO USER

In an effort to meet the demands of a rapidly changing technology, the manufacturer is continually developing new features and functions to meet your changing printing or printer needs. As a result, this manual may not exactly reflect future changes made to the product. Please be sure to consult all manual updates or addenda when using this product's documentation.



As an ENERGY STAR® Partner, Hitachi Koki Imaging Solutions, Inc. has determined that this copier meets the ENERGY STAR® Guidelines for energy efficiency.



What is an Energy Star Copier?

Energy Star Copiers have a feature that allows them to automatically turn off or "go to sleep" after a period of inactivity, ensuring night and weekend shut off. This autofeature can reduce a copier's annual electricity costs by over 60 percent. In addition, high speed copiers will be set to automatically make double-sided copies. An organization's paper costs can be reduced by \$60 a month and the volume of paper sent into the waste stream will decline. It takes 10 times more energy to produce a piece of paper than it does to make a single copy on a copier. Therefore, using less paper also means decreased national energy consumption.

# **Using the Copier Properly**

To ensure the optimum performance of the copier, follow the precautions listed below.

- Never place a heavy object on the copier.
- Never subject the copier to shocks.
- Never open any doors or turn the copier off while the copier is making copies.
- Never bring any magnetized object near the copier.
- Never use flammable sprays, liquids or gases near the copier.
- Never modify the copier, as a fire or electrical shock could result.
- Never remove any panel or cover which is secured. The copier contains high voltage components which can cause electrical shock.
- Never tamper with the laser mechanism in laser-equipped models, as blindness or other injury may result.
- Never drop paper clips, staples or other small pieces of metal through the vents or other openings in the copier, as a fire or electrical shock can result.
- Never place containers of liquid on the copier. If liquids get inside the copier, they can cause fire or electrical shock. If a piece of metal or any liquid gets inside the copier, immediately turn the copier off, unplug the power cord and call your technical representative. A fire or electrical shock can result if the copier remains plugged in or is operated after metal or liquid gets inside.
- Never leave the copier running if it becomes unusually hot, or if smoke or an unusual odor or noise is detected. Should any of these conditions occur, immediately turn the copier off, unplug the power cord and call your technical representative. A fire or electrical shock can result if the copier remains plugged in under any of these conditions.
- Always insert the power plug all the way into the outlet.
- Always make sure that the outlet is visible, clear of the copier or copier cabinet.
- Always provide good ventilation when making a large number of continuous copies.
- Never pull on the power cord, and always hold the plug when unplugging the power cord. A damaged cord could result in a fire or cause an electrical shock.
- Never unplug the power cord with a wet hand, as it could cause an electrical shock.
- Always unplug the power cord before moving the copier. Moving the copier with the power cord plugged in can damage the cord resulting in a fire or causing an electrical shock
- Always unplug the power cord when the copier is not going to be used for a long time.
- Never place a heavy object on the power cord, or pull or bend it, as a fire or electrical shock can result.
- Always ensure that the copier does not sit on or roll onto the power cord or communications cable of other electrical equipment, as malfunctioning equipment or a fire could result.
- Always ensure that the power cord or communications cable of other electrical equipment does not become wedged into the copier mechanism, as malfunctioning equipment or a fire could result.
- Always use the correct power voltage, as improper voltage can cause a fire or electrical shock.

#### **Using the Copier Properly**

- Never use a multiple outlet adapter, as a fire or electrical shock can result.
- Should the power cord become damaged, immediately turn the copier off, unplug the power cord and call your technical representative. A damaged cord can result in a fire or cause an electric shock.
- If an extension cord is needed, use one with a greater rated capacity than the maximum power requirements of the copier. The use of an extension cord that falls short of supporting the maximum power requirements can result in overheating or a fire.
- Always unplug the copier whenever anything unusual is observed during operation. Make sure that the outlet is nearby and clear of the copier and furniture.

#### =Locate the Copier in a Well Ventilated Room=

A negligible amount of ozone is generated during normal operation of this copier. An unpleasant odor may, however, be created in poorly ventilated rooms during extensive copier operations. For a comfortable, healthy and safe operating environment, it is recommended that the room be well ventilated.

#### =Placer le copieur dans une pièce largement ventilée=

Une quantité d'ozone négligeble est dégagée pendant le fonctionnement du copieur quand celui-ci est utilisé normalement. Cependant, une odeur désagréable peut être ressentie dans les pièces dont l'aération est insuffisante et lorsqu'une utilisation prolongée du copieur est effectuée. Pour avoir la certitude de travailler dans un environnement réunissant des conditions de confort, santé et de sécurité, il est préférable de bien aérer la pièce ou se trouve le copieur.

Thank you for choosing Hitachi Koki Imaging Solutions, Inc.

This operator's manual explains how to operate the copier and replenish its supplies. It also gives some troubleshooting tips as well as general precautions to be observed when operating the copier.

To ensure the best performance and effective use of your copier, read this manual carefully until you familiarize yourself thoroughly with its operation and features. After you have read through the manual, keep it for ready reference.

Please use this manual as a quick and handy reference tool for immediately clarifying any questions which may arise.

#### CE Marking (Declaration of Conformity)

We declare under our sole responsibility that the copier and options to which this declaration relates is in conformity with the specifications below. This declaration is valid for the area of the European Union (EU) only.

Product Type	Copying Machine		
Product Name	DDC52/62n		
Options			
Options	EDH-1, FN-3, C-304, C-304L, D-102, DT-103, Hard Disk Drive Kit		
A			
Accessories	16 MB Memory		
Standards	Safety *2 : EN 60 950 / 1992 (A1, A2, A3, A4)		
	(Safety of information technology equipment, including electrical		
	business equipment)		
	EN 60825/1992 (A11:1996)		
	(Safety of laser products-Part 1: Equipment classification,		
	requirements and users guide)		
	EMC *1 : EN 55 022 (Class B) / 1994 (A1, A2)		
	(Limits and method for measurement of radio disturbance		
	characteristics of information technology equipment (ITE))		
	EN61000-3-2 / 1995		
	(Electromagnetic compatibility (EMC) - Part 3: Limits, Section 2:		
	Limits for harmonic current emissions (equipment input current < 16A		
	per phase))		
	EN61000-3-3 / 1995 (Electromagnetic compatibility (EMC) - Part 3: Limits, Section 3:		
	Limitation of voltage fluctuations and flicker in low-voltage supply		
	systems for equipment with rated current < 16A)		
	EN 50 082-1 / 1992		
	(Electromagnetic compatibility - Generic immunity standard		
	Part 1: Residential, commercial and light industry)		
	IEC 801-2 / 1991 (Electrostatic discharge requirement)		
	IEC 801-3 / 1984 (Radiated electromagnetic field requirement)		
	IEC 801-4 / 1988 (Electrical fast transient / burst requirement)		
	Notes : *1) EMC performance: This product was designed for operation in a		
	typical office environment.		
	*2) First year of labeling according to EC-directive 73/23/EEC and 93/		
	68/EEC: 98		
	3) This product was designed for operation in a typical office		
	environment.		
EC Directives	Safety : 73 / 23 / EEC and 93 / 68 / EEC		
	EMC : 89 / 336 / EEC and 93 / 68 / EEC		
	1 2 2		

# Contents

	Terms and Symbols for the Type of Originals and Copy Paper	v
	Feeding Direction (copy paper path)	
	Safety Precautions	
	Laser Safety Label	
	Safety Information	
01 1 1	Onfoto Notes	
Chapter 1	Safety Notes	
	1. Installing the Copier	
	Installation Site	
	Power Source	
	Space Requirements	1-2
	2. Precautions for Use	
	Operating Environment	
	Using the Copier Properly	
	Moving the Copier	
	Care of Copier Supplies	
	Note on making multiple copies	1-4
	Legal Restrictions on Copying	1-4
Chapter 2	Getting to Know Your Copier	
	1. Typical Copies You Can Make with Your Copier	
	Typical copies you can make with your copier	2-2
	2. System Overview	
	System Overview	2-6
	3. Copier Parts and Accessories	
	Outside the copier	2-8
	Copier Accessories	2-10
	Precautions When Using a Finisher	2-11
	Inside the Copier	2-13
	4. Control Panel Keys and Indicators	
	Control panel keys and indicators	2-14
	5. Using the Touch Panel	
	What is the Touch Panel?	2-16
	How the Screen is Organized	2-16
	Operating the Touch Panel	2-17
	6. Turning ON and OFF and Initial Mode	
	Turning ON and OFF	
	When the Copier is Turned ON	2-18
	Initial Mode	2-18
	7. Auxiliary Functions	
	Auxiliary functions	2-19
	Entering the Access Number	2-20
Chapter 3	Making Copies	
	1. Basic Copying Overview	
	Basic Copying Overview	3-2
	2. Placing the Original	
	Using the Electronic Document Handler	3-4
	Not Using the Document Handler	
	3. Selecting the Paper	-

	Copy Paper Size	3-9
	Manual Bypass Copying	3-11
	4. Selecting the Zoom	
	Zoom Ratio	3-14
	5. Selecting the Finishing	
	Finishing Functions	3-20
	Selecting the Finishing Function	3-22
	Loading the Originals	3-31
	Auto Dual Function	3-33
	6. Selecting the Original Copy Type	
	Original Copy Type <b>≯</b>	3-34
	Selecting the Original Copy Type	3-36
	Some Precautions for ▶aking Copies	3-41
	7. Selecting the Density	
	Image Density	3-42
	8. Auxiliary Functions	
	Cover	3-44
	Page Insertion	3-46
	OHP Interleaving	3-52
	File Margin	3-54
	Edge/Frame Erase	3-56
	Image Repeat	3-58
	Number Stamping	3-60
	Image Stamping	3-64
	9. Selecting Mixed Orig. Detection and Other Functions	
	Mixed Orig. Detection and Other Functions	3-66
	10. Selecting the Job Functions	
	Memory Recall	3-69
	Reserve	3-70
	Job List	3-71
	11. Typical Function Combinations	
	Making Different Types of Copy	3-74
Chapter 4	Using the Utility Mode	
	1. Job Memory Input and Job Recall	
	Job Memory Input	
	Recalling a Job from Memory	4-5
	2. Zoom Memory Input	
	Storing a Zoom Ratio	4-6
	3. Image Memory Input	
	Image Memory Input	4-8
	4. Meter Count and Toner Replenisher	
	Meter Count	
	Toner Replenisher	4-13
	5. User's Choice	
	User's Choice Functions	
	Making the User's Choice Settings	
	Copy Track Function	4-22
	6. Data Send	
	Data Send	4-30

#### Contents


Chapter 5	When a Message Appears		
	When the Message "The current Paper Drawer is empty." Appears     Adding paper	5-2	
	2. When the Message "Replenish Toner." Appears		
	Replacing the Toner Bottle	5-6	
	3. When the Message "The Staple Cartridge is empty." Appears		
	Replacing the Staple Cartridge	5-8	
	4. When the Message "A paper misfeed has been detected." Appears		
	Misfeed Location Displays	5-10	
	Misfeed Clearing Procedures	5-12	
	5. What Does Each Message Mean?		
	What does each message mean?	5-28	
Chapter 6	Troubleshooting		
	1. When This Type of Copy is Produced		
	When this type of copy is produced	6-2	
	2. The Copier is not Functioning as Designed		
	The copier is not functioning as designed	6-4	
Chapter 7	Miscellaneous		
	1. Specifications		
	Specifications	7-2	
	2. Care of the Copier		
	Cleaning	7-5	
	3. Function Combination Matrix	_	
	Function combination matrix	7-7	
	Conditions for Combined Functions	7-9	
	4. Description of Paper Size and Zoom Ratio Table		
	Description of paper size and zoom ratio table	7-10	
Index			

# Terms and Symbols for the Type of Originals and Copy Paper


A few special terms and symbols are used in this manual to designate types of originals and copy paper. This page explains about these terms and symbols.

# Feeding Direction (copy paper path)

In this copier system, copy paper is taken up from the right-hand side of the copier and fed through the copier toward the left-hand side, face up onto the Copy Tray. In the figure below, the direction in which the copy paper is fed, as indicated by the arrow, is called the "feeding direction."

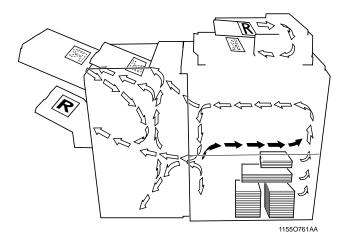


# "Width" and "Length"

 

When we talk about the size of the original or copy, we call side A "width" and side B "length."


A: Width B: Length

# **Terms and Symbols Used**

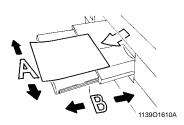

<Lengthwise  $\bigcirc$ >

 When the original or copy has a "length" longer than its "width," we call it "lengthwise" and use symbol "L" or " ."




<Crosswise >

When the original or copy has a "length" shorter than its "width," we call it "crosswise" and use symbol "C" or " ..."

# **Safety Precautions**

# **Laser Safety Label**

A laser safety label is attached to the outside of the copy machine as shown below.

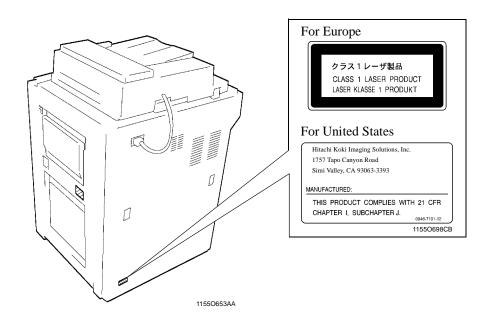

# **Safety Information**

This copy machine is a digital copy machine which operates by means of a laser. There is no possibility of danger from the laser, provided the copy machine is operated according to the instructions in this manual

Since radiation emitted by the laser is completely confined within protective housing, the laser beam cannot escape from the machine during any phase of user operation.

This copy machine is certified as a Class 1 laser product. This means the copy machine does not produce hazardous laser radiation.

LUOKAN 1 LASERLAITE KLASS 1 LASER APPARAT

CAUTION: The use of controls, adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure. Because of this, we strongly recommend that you operate your copy machine only as described in this documentation.

#### **For United States Users**

#### **Laser Safety**

This copy machine is certified as a Class 1 Laser product under the U.S. Department of Health and Human Services (DHHS) Radiation Performance Standard according to the Radiation Control for Health and Safety Act of 1968. This means that the copy machine does not produce hazardous laser radiation.

#### **CDRH Regulations**

The Center for Devices and Radiological Health (CDRH) of the U.S. Food and Drug Administration implemented regulations for laser products on August 2, 1976. Compliance is mandatory for products marketed in the United States. The label shown below indicates compliance with the CDRH regulations and must be attached to laser products marketed in the United States.

**WARNING:** Use of controls, adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

#### **Internal Laser Radiation**

Maximum Radiation Power: 15mW × 2 diodes

Wave Length: 780nm

#### For European Users

**WARNING:** Use of controls, adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure.

This is a semiconductor laser. The maximum power of the laser diode is 15mW and the wavelength is 780nm. (Two provided.)

#### For Denmark Users

#### ADVARSEL

Usynlig laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

Klasse 1 laser produkt der opfylder IEC825 sikkerheds kravene.

#### For Finland, Sweden Users

#### **VAROITUS**

Laitteen käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

#### **VARNING**

Om apparaten används på annat sätt än i denna bruksanvisning specificerats, kan användaren utsättas för osynlig laserstrålning, som överskrider gränsen för laserklass 1.

#### **For Norway Users**

#### ADVERSEL

Dersom apparatet brukes på annen måte enn spesifisert i denne bruksanvisning, kan brukeren utsettes for unsynlig laserstråling som overskrider grensen for laser klasse 1.

Dette en halvleder laser. Maksimal effeckt till laserdiode er 15mW og bølgelengde er 780nm.

# **Chapter 1**

Safety Notes

# 1. Installing the Copier

#### **Installation Site**

To ensure utmost safety and prevent possible malfunctions of the copier, install it in a location which meets the following requirements.

- ◆ A place away from a curtain or the like that may catch fire and burn easily.
- ◆An area where there is no possibility of being splashed with water or other types of liquid.
- ◆An area free from direct sunlight.
- ◆ A place out of the direct air stream of an air conditioner, heater, or ventilator.
- ◆A well-ventilated place.
- ◆A dry place.
- ◆A dust-free location.
- ◆An area not subject to undue vibration.
- ◆A stable and level location.
- ◆ A place where ammonia or other organic gas is not generated.
- ◆ A place which does not put the operator in the direct stream of exhaust from the copier.
- ◆ A place which is not near any kind of heating device.

#### **Power Source**


The power source voltage requirements are as follows:

◆Use a power source with little voltage fluctuation.

 $\begin{array}{ll} \mbox{Voltage Fluctuation} & : \mbox{ Within} \pm 10\% \\ \mbox{Frequency Fluctuation} & : \mbox{ Within} \pm 0.3\% \\ \end{array}$ 

# **Space Requirements**

To ensure easy copier operation, supply replacements, and service maintenance, adhere to the recommended space requirements detailed below. Allow a clearance of 150mm or more at the back of the copier as there is a ventilation duct.

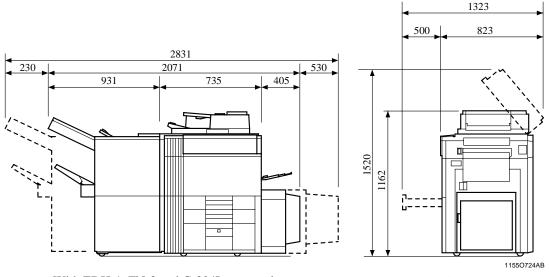

<With EDH-1, FN-3 and C-304L mounted>

Unit: mm

## 2. Precautions for Use

# **Operating Environment**

The operating environmental requirements of the copier are as follows:

Temperature: 10°C to 32°C (50°F to 90°F) with a fluctuation of 10°C (18°F) per hour.

: 15% to 85% with a fluctuation of 10% per hour.

# **Using the Copier Properly**

To ensure optimum performance of the copier, follow the precautions listed below.

- ◆ NEVER place a heavy object on the copier or subject the copier to shocks.
- ◆ NEVER open any doors, or turn OFF the copier while the copier is making copies.
- ◆ NEVER bring any magnetized object or use flammable sprays near the copier.
- ◆ NEVER remodel the copier, as a fire or electrical shock could result.
- ◆ ALWAYS insert the power plug all the way into the outlet.
- ◆ ALWAYS make sure that the outlet is visible, clear of the copier or copier cabinet.
- ◆ALWAYS provide good ventilation when making a large number of continuous copies.

#### NOTE

= Locate the Copier in a Well Ventilated Room =

A negligible amount of ozone is generated during normal operation of this copier. An unpleasant odor may, however, be created in poorly ventilated rooms during extensive copier operations. For a comfortable, healthy, and safe operating environment, it is recommended that the room be well ventilated.

#### REMARQUE

= Placer le copieur dans une pièce largement ventilée =

Une quantité d'ozone négligable est dégagée pendant le fonctionnement du copieur quand celui-ci est utilisé normalement. Cependant, une odeur désagréable peut être ressentie dans les pièces dont l'aération est insuffisante et lorsque une utilisation prolongée du copieur est effectuée. Pour avoir la certitude de travailler dans un environnement réunissant des conditions de confort, santé et de sécurité, il est préférable de bien aérer la pièce ou se trouve le copieur.

# **Moving the Copier**

If you need to transport the copier over a long distance, consult your Technical Representative.

# **Care of Copier Supplies**

Use the following precautions when handling the copier supplies (toner, paper, etc.).

- ◆ Store the paper, toner, and other supplies in a place free from direct sunlight and away from any heating apparatus. Keep them in a dry, cool, clean environment.
- ◆ Store paper, which has been removed from its wrapper but not loaded into the drawer, in a sealed plastic bag in a cool, dark place.
- ◆ Keep supplies out of the reach of children.
- ♦ If your hands become soiled with toner, wash them with soap and water immediately.

#### 2. Precautions for Use

# Note on making multiple copies

If the fusing temperature drops excessively during a multi-copy cycle, there is a possibility that the copying speed will be reduced. The copying speed will automatically return to normal when the fusing temperature rises enough to ensure good fusing performance.

# **Legal Restrictions on Copying**

Certain types of documents must never be copied by the copier for the purpose or with the intent to pass copies of such documents off as the original. The following is not a complete list but is meant to be used as a guide to responsible copying.

#### **Financial Instruments**

- Personal Checks
- Travelers Checks
- Money Orders
- Certificates of Deposit
- Bonds or other Certificates of Indebtedness
- Stock Certificates

#### **Legal Documents**

- Food Stamps
- Postage Stamps (canceled or uncanceled)
- Checks or Drafts drawn by Government Agencies
- Internal Revenue Stamps (canceled or uncanceled)
- Passports
- Immigration Papers
- Motor Vehicle Licenses and Titles
- House and Property Titles and Deeds

#### General

- · Identification Cards, Badges, or Insignias
- Copyrighted Works without permission of the copyright owner

In addition, it is prohibited under any circumstances to copy domestic or foreign currencies or Works of Art without permission of the copyright owner.

When in doubt about the nature of a document, consult with legal counsel.

# Chapter 2

**Getting to Know Your Copier** 

 
# 1. Typical Copies You Can Make with Your Copier

# Typical copies you can make with your copier


Here's a sample of the features the copier is equipped with to turn out different types of copies. For the specific operations, see the relevant pages indicated by @p.

# **Original** ► **Copy p.** 3-34


1-sided ▶ 1-sided



1-sided ▶ 2-sided

 


2-sided ▶ 1-sided

 


Book ▶ 1-sided



 
2-in-1



4-in-1

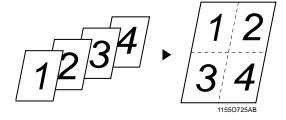


Booklet

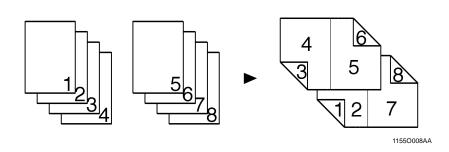

Staple


# Finishing p. 3-20



 







 


Group

 




 

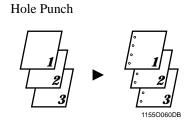

# Folding Options



 





Zoom Ratio @p. 3-14

Reduce, Full size, Enlarge, X/Y Zoom






1155O010AA


#### 1. Typical Copies You Can Make with Your Copier

# **Auxiliary Functions**

Cover @p. 3-44

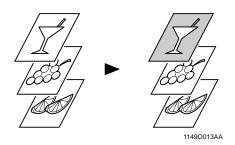


OHP Interleaving @p. 3-50

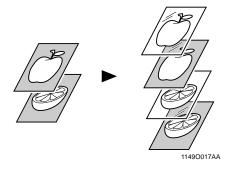


Erase @p. 3-56



 
Number Stamping (Page) @p. 3-60




Page Insertion @p. 3-46

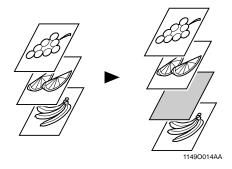


File Margin @p. 3-54

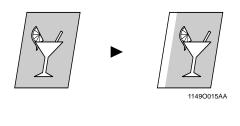

Number Stamping (Date) @p. 3-60

 


Number Stamping (Distribution) @p. 3-60

 

# **Auxiliary Functions**

 
Image Repeat @p. 3-58





# **Mixed Original Detection** @p. 3-66

 
Mixed Orig. Detection




# 2. System Overview

# **System Overview**


The following overview presents the copier and the available options with a brief explanation of the function of each. Refer to "Control Panel Keys and Indicators" (\*p. 2-14) for using the Touch Panel and Control Panel.

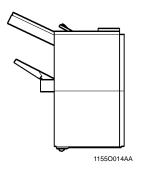


 Finisher FN-3 < Option>
Permits sorting, grouping, sort-stapling, punching or folding copies.



#### Electronic Document Handler EDH-1 In addition to being capable of feeding in sheet originals one at a time, it can automatically turn over the original for making copies from 2-sided originals.

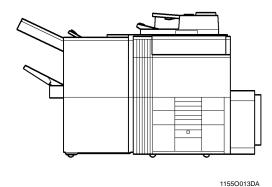

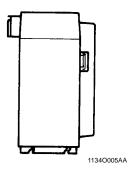

**Large Capacity Cassette C-304 < Option >** Holds up to 3,000 sheets of A4C copy paper (80 g/m<sup>2</sup>).



Large Capacity Cassette C-304L <Option> Holds up to 3,000 sheets of A4L or A4C copy paper  $(80 \text{ g/m}^2)$ .


#### **Printer Controller < Option>**

When the copier is fitted with this unit, it can function also as a printer.

\* For more details, see the Printer Operator's Manual.

# 3. Copier Parts and Accessories

#### Outside the copier

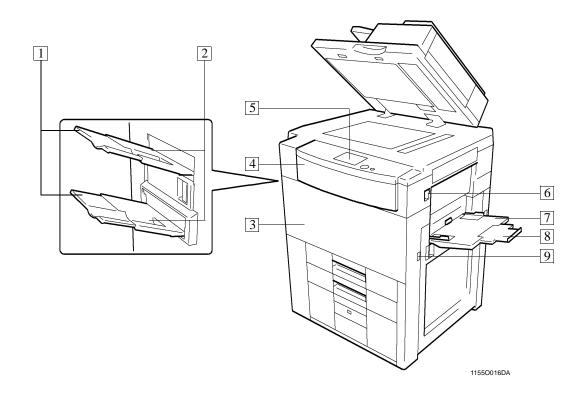

#### Copier

The Exit Tray Extender : Slide this extender out when making copies on large-size paper.

2 Exit Tray : Holds copies fed out of the copier. (Option)

Front Door : Open to clear a paper misfeed. ©p. 5-10

Closing the Front Door after a misfeed has been cleared will turn the

misfeed warning message on the control panel OFF.

4 Upper Front Door : Open to replace the Toner Bottle. To. 5-6

[5] Control Panel : Use to start a copy cycle or to make copy job settings.

(See) Control Panel Keys and Touch Panel. 🖘 p. 2-14


6 Power Switch : Use to turn the copier ON and OFF. p. 2-18

7 Intelligent Multi : Use for manual feeding of copy paper into the copier. @p. 3-11

**Bypass Tray** 

8 Extender : Slide this extender out to make copies on large-size copy paper.

9 Total Counter : Shows the total number of copies made so far.

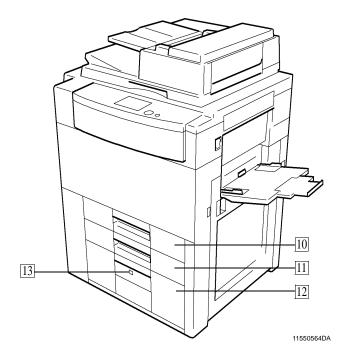

# **Drawers of the Copier**

10 1st Drawer : Holds up to 500 sheets of copy paper. Tp. 5-2

11 2nd Drawer : Holds up to 500 sheets of copy paper. Tp. 5-3


It can accommodate paper of different sizes.


12 3rd Drawer : Holds up to 2,500 sheets of copy paper. Tp. 5-4

[13] Paper Descent Key : Press before sliding the drawer out of the copier.

#### 3. Copier Parts and Accessories

# **Copier Accessories**

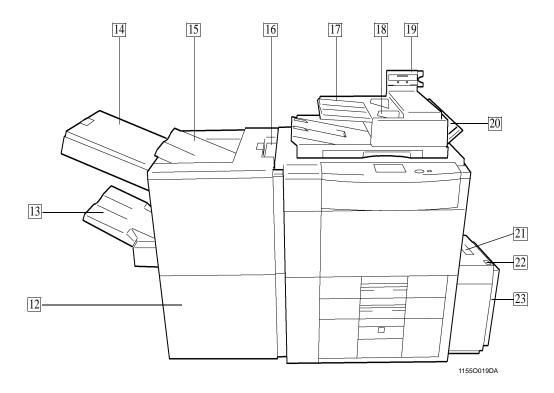

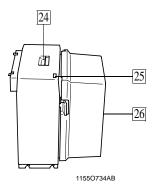

## Finisher FN-3

12 Finisher Door : Open to replace the Staple Cartridge. @p. 5-8 Open to clear a paper misfeed. Tp. 5-12

13 Bottom Offset Tray : Receives sorted/stapled copy sets or grouped copy stacks.


14 Manual Staple Tray : Open to load documents for manual stapling or to clear a paper misfeed. Cover

15 Top Offset Tray : Receives sorted copy sets or grouped copy stacks.

16 Grip : Grasp and press here to slide the Finisher away from the copier to clear a

misfeed or other service job.

#### **Precautions When Using a Finisher**

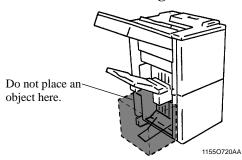

NEVER place an object under the Bottom Offset Tray or Elevator Tray. Anything that is placed under the Bottom Offset Tray or Elevator Tray can interfere with the tray when it lowers after a copy set has been fed onto it, which results in a malfunction.

#### 3. Copier Parts and Accessories

#### **Electronic Document Handler**

17 Document Handling : Load the originals face up on this tray. @p. 3-5

Tray

18 Document Guide Plate : Slide the plate as necessary to the size of the originals. @p. 3-5

20 Single Feed Tray : Insert a single sheet of original into the tray to make a copy or copies of

it. @p. 3-8

## **Large Capacity Cassette C-304**

21 Lock Release Lever : Use to unlock the Cassette from the copier for clearing a misfed sheet of

paper or other service job.

22 Paper Plate Descent Key: Press to lower the paper plate.

23 Cassette Door : Open to add paper or clear a misfed sheet of paper.

#### Large Capacity Cassette C-304L


24 Lock Release Lever : Use to unlock the Cassette from the copier for clearing a misfed sheet of

paper or other service job.

25 Paper Plate Descent Key: Press to lower the paper plate.

26 Cassette Door : Open to add paper or clear a misfed sheet of paper.

# **Inside the Copier**

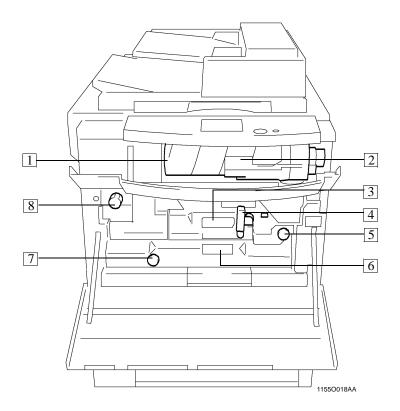

1 Toner Bottle :Contains Toner. Replace it with a new one when the warning message

tells you to. @p. 5-6

2 Toner Bottle Holder : Swing open to replace the Toner Bottle. To-6

: Use to clear a misfed sheet of paper. Tp. 5-12 3 Misfeed Removal

Guide Unit M5

4 Misfeed Removal : Press down to pull out the M5 Unit. \*p. 5-12 Lever M4

5 Misfeed Removal : Use to clear a misfed sheet of paper. @p. 5-12 Knob M3


6 Duplex Unit **D2** : Slide out to clear a sheet of paper misfed in the Duplex Unit. @p. 5-14

7 Misfeed Removal : Use to clear a misfed sheet of paper. @p. 5-12 Knob D1

8 Misfeed Removal : Turn to clear a misfed sheet of paper. Turn to clear a misfed sheet of paper. Knob M1

# 4. Control Panel Keys and Indicators

# Control panel keys and indicators

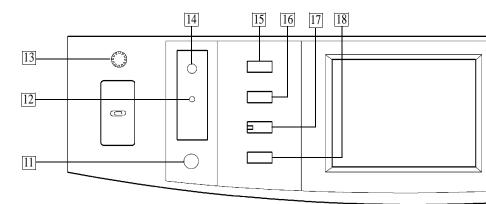

#### 1 Touch Panel

• Shows various screens and messages. \*\*p. 2-16

#### 2 Start Key

- Press to start the document scanning sequence.
- Press to start a print cycle.
- Lights up green to accept a print command; lights up orange to reject one.
- Print lamp :

Lights up to indicate that a print cycle can be run.

• Scan lamp:

Lights up to indicate that a document scanning cycle can be run.

#### 3 10-Kev Pad

Use to enter:

- The number of copies to be made.
- The various numeric values.

#### 4 Clear Key

Press to:

- Reset the multi-copy entry to 1.
- Clear a zoom ratio entered when setting one from the 10-Key Pad.
- Clear the original count, image data scanned, and Access code.

#### 5 Stop Key

Press to:

- Stop a print cycle.
- Stop a scanning cycle.

#### 6 Access Mode Key

- Press to enter the access number. © p. 2-20
  - \* This key becomes valid only when Copy Track of the Administrator mode available from User's Choice is set.

#### 7 Energy Saver Key

 Press to set the copier into the Energy Saver mode. p. 2-19

#### 8 HDD Lamp


• Lights up to indicate that the Hard Disk Drive Kit (option) is being accessed.

#### 9 Interrupt Key

- Press to interrupt a current job with a different one
- Press it again to return to the previous job. ©p. 2-20
- Press to stop a multi copy cycle (except when the copier is in an interrupt mode).
- Lights up to indicate that the copier is in the Interrupt mode.

#### 10 Panel Reset Key

- Press to set the copier into the initial mode, clearing all settings made on the control panel.
   p. 2-19
  - \* It does not, however, clear the contents of the zoom and job program memory, Interrupt mode, and the job held in reserve.

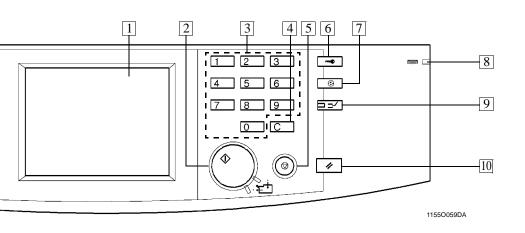

#### 11 Job List Key

- Press to check for the settings made for a job (Mode Check), modify the settings of a job (Change), delete a job (Delete), and unlock a job (Unlock). Pp. 3-71
- Press to check for the memory space still available for use.
- When the lamp is lit up, it indicates that a job has been reserved.

#### 12 Ready Lamp

- When the lamp is lit up, it indicates that data can be transferred.
- The lamp also indicates whether the copier is hooked up to the Printer Controller.
   Blinking: Data is being transferred.
  - \*For more details, see the Printer Operator's Manual.

#### 13 Display Contrast Knob

• Turn to vary the brightness of the Touch Panel.

#### 14 On Line Key

• Used when the copier is hooked up to the Printer Controller.

#### 15 Utility Key

• Press to show the Utility Mode menu.

Utility Mode

- •Job/Zoom Mem. Input •Meter Count
- •User's Choice
- Toner Replenisher
- •Data Send
- \* For details, see Using the Utility Mode p. 4-1

#### 16 Job Recall Key

- Press to show the Job Recall screen on which you can recall or check a copy-job program previously stored in memory.
- This key is not valid while the copier is in the Interrupt mode.
  - \* For details, see Recalling a Job from Memory p. 4-5

#### 17 Mode Check Key

- Press to show the Mode Check screen. From this screen you can access the setting screen of a particular function and change or cancel the setting as necessary.
- When the lamp is lit up, it indicates that the copying function currently valid is not the default setting.
  - \* For details, see Mode Check @p. 2-20

#### 18 Original Key

- Press to select the Mixed Orig. Detection and other document-related functions setting screen.
  - •Mixed Orig. Detection •Free Orig. Placement
  - •Small Orig. Adjustment •Separate Scan


# 5. Using the Touch Panel

#### What is the Touch Panel?


When you turn ON the Power Switch, the Basics screen as shown below appears on the Touch Panel. It shows in messages and graphics the currently set functions, available functions to choose from, and the copier status.

\* Some of the Touch Panel screens used in the Operator's Manual may be different from what you actually will see on your copier.

# How the Screen is Organized

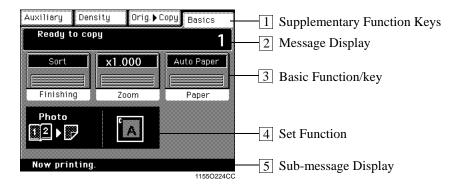

#### 1 Supplementary Function Keys

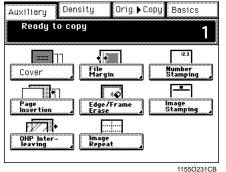


ex.) Auxiliary Function

The Auxiliary, Density, Orig. ► Copy, and Basics keys are displayed. When any of these keys is touched, the corresponding supplementary function screen appears.

\* Touching Basic returns you to the Basics screen.


# 2 Supplementary Function Keys

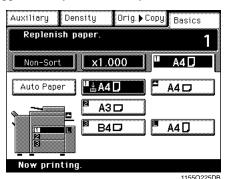

ex.) Add paper

Shows the current copier status, operating instructions and precautions, and other data including the number of copies selected.

#### 3 Basic Function/Key Display

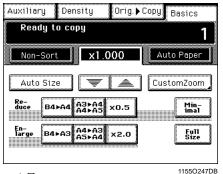

ex.) Zoom

Shows the basic function keys and the corresponding functions currently selected for use. Touching a basic function key shows the corresponding basic function screen.

\* What is shown inside the key is the current setting.

#### 4 Set Function Display



ex.) Orig. ► Copy : 1 ► 2
Finishing : Sort-and-Staple

Shows graphic representations of the settings currently made for Orig. ▶ Copy and Finishing.

\* When you want to check for more details of the set functions, press the Mode Check key.

p. 2-20

#### 5 Sub-message Display



ex.) Being printed

Shows what is being done with the currently reserved job.

\* To check for the settings made for the currently reserved job, press the Job List key. \*p. 3-72

# **Operating the Touch Panel**


You need only to lightly touch the key shown on the Touch Panel to select or activate the function represented by the key.

#### **NOTE**

NEVER press the Touch Panel hard or use a hard or pointed object to press it, as a damaged panel could result.

# 6. Turning ON and OFF and Initial Mode

## **Turning ON and OFF**

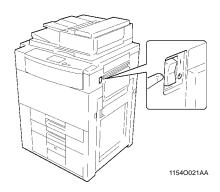

- Turning the Copier ON:

  Press the Power Switch to the | (ON) position.
- Turning the Copier OFF:

  Press the Power Switch to the (OFF) position.

#### NOTE

The Auto Power OFF function will automatically shut down the copier a given period of time after the last activity. Tp. 2-19

# When the Copier is Turned ON


When the Power Switch is turned ON, the Start Key lights up orange.

In about a few seconds, the message "Now warming-up. Ready to scan." appears and the Start key lights up green. The copier thereafter enables its auto copy start function. "P. 2-19

At this time, however, pressing of the Start key does not start a copy cycle. The copier needs a warm-up period of about 7 minutes (at a room temperature of 23°C).

#### **Initial Mode**

When the Power Switch is turned ON, the Basic screen appears on the Touch Panel. The settings on this screen are called the initial mode, serving as the reference for all panel settings to be later made.

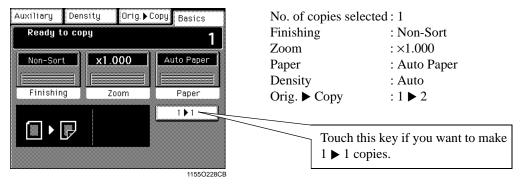

#### Useful Tip

User's Choice can be used to change the settings of initial mode. ☞p. 4-14

# 7. Auxiliary Functions

# **Auxiliary functions**

# **Panel Resetting**

The Panel Reset key resets all control panel settings to default settings including the number of copies and zoom ratio. The settings just made would also be cleared.

#### Useful Tips

- The Panel Reset key enables you to cancel all previous settings at the touch of the key.
- To avoid miscopy, try to press this key before making any setting for your own copy job.

## **Auto Panel Reset**

If no key on the control panel is pressed within 1 min. after a copy cycle has been completed or copying settings made, the Auto Panel Reset function is activated to return the copier to the default settings.

#### Useful Tip

The time for the copier to enter the Auto Panel Reset Function can be selected from among "30 sec.", "1 min.", "2 min.", "3 min.", or "5 min." For details, see User's Choice. @p. 4-18

# **Auto Copy Start**

If you load originals into the document handler or place an original on the Glass and press the Start key while the copier is warming up after it has been turned ON, the Auto Copy Start function allows that copy process to be started as soon as the copier completes warming up.

## **Auto Shut OFF**

The Auto Shut OFF function shuts down the copier a given period of time after the copier has been used last. The initial setting is 90 min.

#### Useful Tip

The time for the copier to enter the Auto Shut OFF mode can be selected from 15 to 240 min. The Auto Shut OFF function can even be disabled.

For details, see User's Choice. \$\iint p\$. 4-18

## **Energy Saver**

If the copier is shut down when it is not in use, it takes the copier some time to complete the warmup cycle. Instead of turning the copier OFF, it's a good idea to use the Energy Saver mode which will minimize the time for the copier to complete the warm-up cycle to about 20 sec.

To set the copier into the Energy Saver mode, you need only to press the Energy Saver key. Or, a given period of time after the copier has been touched last, it automatically enters the Energy Saver mode. The initial setting is 15 min.

To cancel the Energy Saver mode, press any key on the control panel.

#### NOTE

The copier is automatically shut down if the Auto Shut OFF function is activated while it is in the Energy Saver mode.

#### Useful Tip

The time for the copier to enter the Energy Saver mode can be selected from 1 to 240 min. For details, see User's Choice. ☞p. 4-18

#### 7. Auxiliary Functions

## **Interrupt**

The Interrupt function allows you to interrupt a current job and run a different one. Pressing the Interrupt key once sets the copier into the Interrupt mode. Pressing the key again lets the copier leave the Interrupt mode, returning to the previous settings.

#### **NOTE**


To cancel an Interrupt cycle, you need to press the Interrupt key. The Panel Reset key or Auto Panel Reset function does not serve this purpose.

#### Useful Tips

- Pressing the Interrupt key sets the copier into the initial mode, except for the finishing function which is Non-Sort.
- Custom Zoom and X/Y Zoom cannot be set in the Interrupt mode. Cover, Page Insertion, OHP Interleaving and Job Recall cannot be set in the Interrupt mode, either.

## **Mode Check**

By pressing the Mode Check key on the control panel, you can either check for or change the current settings.

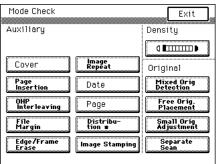

1155O227CB


- When you touch **Exit** after having checked the currently set functions, the Basic screen reappears.
- To change a certain function, touch the corresponding key and then make the necessary change.

## **Access Number**

If an access number has been programmed, it allows only particular persons to use the copier or a supervisor to keep track of the number of copies made by a particular department.

#### NOTES

• If an access number has been programmed, a copy cycle can be initiated only after the access number has been input to the copier. < "Access #" Prompt Screen>

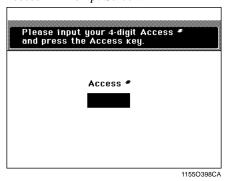


• Before you can use this function, you must first turn "ON" the "Copy Track" function of the Administrator Mode available from User's Choice. 

¬p. 4-19

# **Entering the Access Number**

**1** From the 10-Key Pad, enter the 4-digit access number and press the Access Mode key.

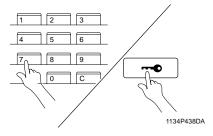

#### NOTE

To correct the 4-digit access number entered, first press the (c) key, then enter the new number.

- When the initial screen reappears, you can now start the copy cycle.
- When the copy cycle is completed, press the Access Mode key again.

# **Chapter 3**


**Making Copies** 


# 1. Basic Copying Overview

# **Basic Copying Overview**

One of the most basic copying jobs is to make full-size (×1.000) copies of the original.

• Place the original in position (step 1), set the number of copies to be made (step 8), and press the Start key (step 9). This will allow you to make full-size copies on paper of the same size as the original. (\*Automatically selected in the initial mode are Auto Paper, Full Size, and Auto Exposure.)

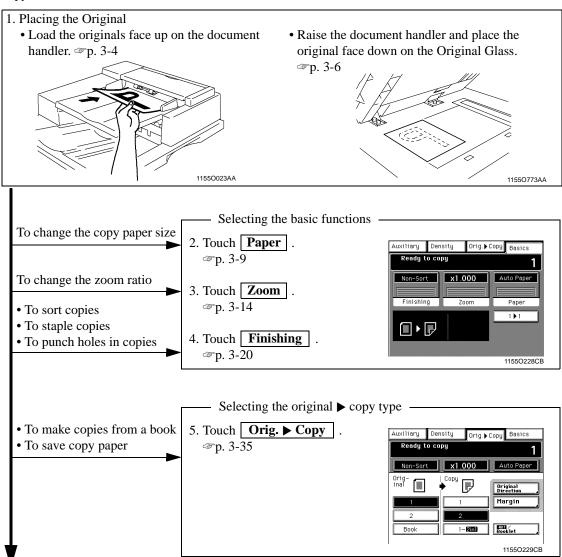

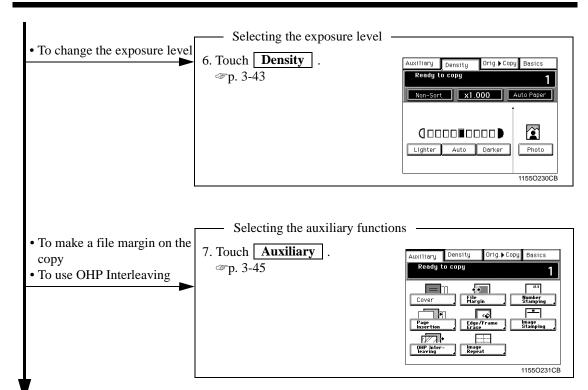


- 8. Setting the number of copies.
  - From the 10-Key Pad, set the desired number of copies to be made.

The maximum number that can be set is 999.

## Useful Tip

The User's Choice can be used to limit the maximum number of copies to be set in the range from 1 to 99. Tp. 4-19

\* If you have entered an incorrect number, press the key, then enter the correct number.

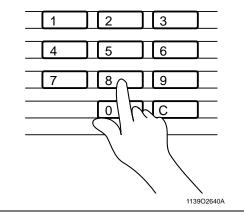




9. Pressing the Start key

When you press the Start key, the copier starts the copy cycle.

\* To stop the copy cycle, press the Stop key.

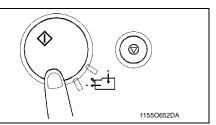

## Useful Tip

Different functions can be combined in various ways to create different types of copy. See "Typical Function Combinations" for how to combine the various functions offered by the copier. \$\mathref{\sigma}\$p. 3-75

# 2. Placing the Original

# **Using the Electronic Document Handler**

The Document Handler automatically feeds in sheet originals placed on the Document Handling Tray one by one. After the copy cycle has been completed, it automatically ejects the original onto the Document Exit Tray.

Some originals may not be suitable for reliable operation in the Document Handler. Here is a guide.

## **Originals Suitable for the Document Handler**

Types of Originals: Sheets (Plain paper)

Normal mode

- 1-sided Original (weighing 50g/m<sup>2</sup> to 110g/m<sup>2</sup>)
- 2-sided Original (weighing 60g/m<sup>2</sup> to 90g/m<sup>2</sup>)
- Mixed Original Detection mode (weighing 60g/m<sup>2</sup> to 90g/m<sup>2</sup>)


Original size: 1-Sided Original, 2-Sided Original Mode: A3L to A5L Mixed Original Detection mode :A3L to A4

## **Originals Not Suitable**


- Typing paper, paraffin paper, and other thin paper
- Thick paper
- Originals greater than A3L or smaller than A5L
- Transparencies, translucent paper
- Wrinkled, dog-eared, curled, or torn originals
- Clipped or stapled originals
- · Carbon-backed originals
- \*For any of these types of originals, place the original manually on the Original Glass to make a copy. ☞p. 3-6

# **Loading the Originals**

Slide the Document Guide Plate to the size of the originals.

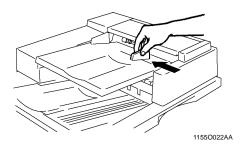


2 Load a neat stack of originals face up on the Document Handling Tray.

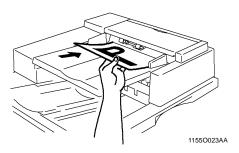

#### **NOTES**

- The maximum number of originals that can be loaded: Up to 100.
- The copier is capable of scanning a document consisting of 100 or more pages at one time.

  p. 3-69
- Make sure that the top level of the original stack does not exceed the ▼ marking.
- Make sure that the Document Guide Plate is in touch with the edges of the original stack. If it's not pressed snugly against the original stack, skewed feeding could result.
- You can make copies automatically from originals of assorted sizes loaded in the Document Handler. You can also make copies of the same size from originals of different sizes. \$\mathrightarrow\$p. 3-67
- Load the original in the direction shown below when loading it in the Document Handler.

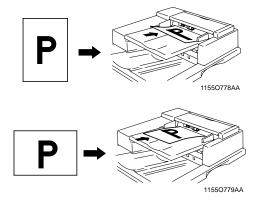



• If you need to load your original in a direction different from these examples, set the direction of the original on the Touch Panel. \*p. 3-37

# **Not Using the Document Handler**

  Different methods are used to place the original depending on its type. Use the procedure appropriate for your original. If you are using a Document Handler. To 3-4

• If you place your original directly on the Original Glass, make sure that it is placed in the direction illustrated below.







• If you need to place your original in a direction different from these examples, set the direction of the original on the Touch Panel. \*p. 3-37

# **Sheet Originals**

- <Using plain paper or originals not suitable for the Document Handler>
- 1 Raise the Document Handler.
- Place the original face down on the Original Glass.

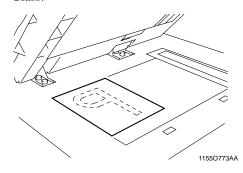


**3** Position the original in the left rear corner with the ↑ marker on the scale.

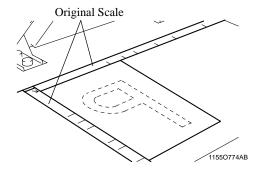

✓ Gently lower the Document Handler.

## **Highly Transparent Originals**

- <Using transparencies and translucent paper for the original>
- **1** Place the original in the same way as the sheet originals.
- Place a blank sheet of paper of the same size over the original.

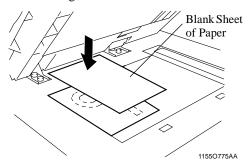


**3** Gently lower the Document Handler.

# Making Copies from a Book Using Book Copy Mode

<"Book" refers to an open bound original>

Place the open book so that its top edge is at the rear of the copier and the center of the book is aligned with the Book Marker indicated on the Original Length Scale.



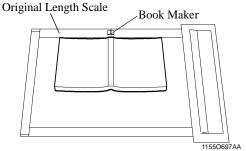


# **2** Gently lower the Document Handler.

#### **NOTES**

- If the book is thick, make a copy with the document handler raised.
- Not positioning the open book properly will result in copies with pages in incorrect order.
- Do not look directly at the Original Glass surface as a strong beam of light is emitted.

#### **NOTES**

• Be sure to raise the document handler 15° or more before placing the original. If the document handler is raised to an angle less than 15°, the copier may fail to select the correct copy paper size or zoom ratio.

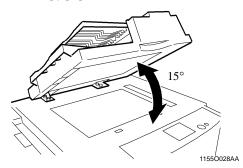

- Do not place an original weighing more than 3kg on the Original Glass.
- When placing an open book, do not press the book hard on the Original Glass, as trouble could result.

# Using the SADF Mode

This is the mode in which you insert your originals one by one into the Document Handler to make a copy or copies from it. When you insert the original, the copier automatically starts the copy cycle.

#### **NOTES**


• Originals appropriate for the SADF Mode.

Type : Plain paper Thickness : 35g/m² to 157g/m²

Size : A3L to A5L


- The following features will be cancelled when using the SADF Mode.

  Auto Paper, Auto Zoom, Staple Mode, Punch Mode, Folding Options Mode, 2-sided Original Mode,
  Book, Dual Original Scanning Mode, 4-in-1 Mode, Booklet Creation, Cover Mode, Page Insertion
  Mode, OHP Interleaving Mode, File Margin Mode, Image Repeats, Mixed Orig. Detection and Free
  Orig. Placement.
- **1** Open the Single Feed Tray and slide the Guide Plate to the size of the original.

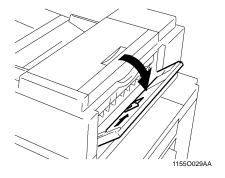

- The original is automatically taken up and the copy cycle is started.
- 4 Making sure that the Scan Lamp and Print Lamp of the Start Key lights up green again, insert the next original.

2 Make sure that the Scan Lamp and Print Lamp of the Start Key are lit green and insert the original face down into the Tray.

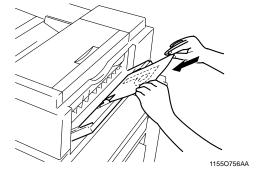

#### **NOTES**

- Be sure to place one original at a time.
- Be sure to correct any fold or curl in the original beforehand.

# 3. Selecting the Paper

In the following pages, we explain how to select the copy paper.


Touch **Basics** and **Paper** to show a screen which allows you to select the copy paper.

# **Copy Paper Size**

## **Auto Paper**

In the Auto Paper mode, the copier automatically selects the paper of the optimum size according to the size of the original being used and zoom ratio selected for use.

Touch Paper on the Basics screen and then touch Auto Paper.

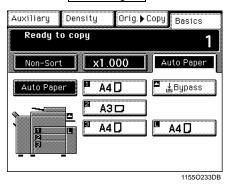

#### **NOTES**

- The original sizes that can be detected in the Auto Paper Select Mode are A3L, B4L, A4L, A4C, A5L, LetterL, LetterC. When making copies from originals other than the above, select the copy paper size.
- When using wrinkled or curled originals, the original size might not be detected correctly. So, select the copy paper size and do not use the Auto Paper Select Mode.
- When the document handler is used, the copier determines the copy paper size when the first original is taken up and fed in and uses that paper size for the subsequent originals (except in the Mixed Original Detection mode).


## Useful Tips

- This mode is efficient when you want to make copies on paper of the same size as your originals automatically.
- Priority settings for the initial mode can be made using User's Choice.


# **Manual Selection**

The copy paper size can be set manually according to your need.

Touch Paper on the Basics screen and the Touch Panel shows which drawer holds which copy paper size.

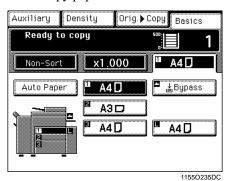

2 Touch the desired paper size key.

 

1 1st Drawer

2 2nd Drawer

3 3rd Drawer


Manual Bypass

Large Capacity Cassette

# **Special Paper Setting**

3. Selecting the Paper

If the symbol S. appears on the paper select key on the Touch Panel, it means that particular drawer has been designated for special paper.

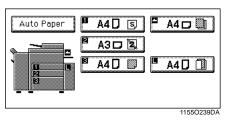

The copier provides five different types of special paper setting, each having a specific purpose as detailed below. The setting can be made by using User's Choice. @p. 4-18

: Recycled paper

This setting precludes the Auto Paper mode. You may be using both recycled as well as plain paper loaded in your copier. If, for example, you make this setting for the drawer loaded with recycled paper, the copier does not select that particular drawer in the Auto Paper mode. This allows you to make copies on plain paper first.

: Disabling 2-sided copying This setting precludes 2-sided copying.

:Cover/Inserts

This setting precludes both Auto Paper mode and Automatic Drawer Switching. Make this setting for the paper for cover/inserts (e.g., colored paper), preventing that paper from being used for other purposes.

:Cover

This setting precludes both Auto Paper mode and Automatic Drawer Switching. Make this setting for the paper for covers (e.g., colored paper), preventing that paper from being used for other purposes.

:Inserts

This setting precludes both Auto Paper mode and Automatic Drawer Switching. Make this setting for the paper for inserts (e.g., colored paper), preventing that paper from being used for other purposes.

## **Auto Drawer Switching**

If the drawer currently selected for use runs out of paper and there is another drawer loaded with paper of the same size and in the same direction, the copier automatically selects that second drawer to continue copying.

#### Useful Tip

This feature is a great advantage when you need to make a large number of copies on the same size paper. For example, you can make up to 3,550 copies without interruption if all three drawers and Multi Bypass Tray are loaded with paper of the same size and in the same direction. You can even make up to 6,550 copies if an optional Large Capacity Cassette is additionally fitted to the copier.

# **Manual Bypass Copying**


- Use the Manual Bypass to make copies on paper not loaded in any drawer, or to copy onto OHP transparencies, thick paper, or any other special paper.
- When using the Multi Bypass Tray, you can load multiple sheets of copy paper.
- The setting of copy paper size is needed for manual bypass copying.
- Manual Bypass cannot be used for a reserved job.

# Copy Paper that Can be Used for Manual Bypass


- ◆ Types of Paper
  - Plain paper (weighing 60g/m<sup>2</sup> to 90g/m<sup>2</sup>)
  - Thick paper (weighing 91g/m<sup>2</sup> to 157g/m<sup>2</sup>)
  - Recycled paper, OHP transparencies
- ◆ Paper Size
  - Max. Size : 297mm × 432mm
  - Minimum Size: 100mm × 148mm
- ◆ Capacity of the Multi Bypass Tray
  - Plain paper, Recycled paper...Up to 50 sheets
  - Plain paper (once-copied paper)... Up to 20 sheets
  - Thick paper, OHP transparencies... Up to 20 sheets

# **Using the Intelligent Multi Bypass Tray**

- Place the original on the Original Glass and 1 make the control panel settings.
- 2 Swing down the Bypass Tray and insert a neat stack of copy paper into the tray until it stops.
  - \*Slide the Tray Extender out when using large-size copy paper.

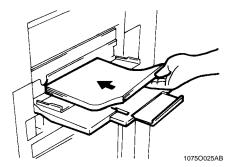

3 Slide the Paper Guide Plate to the size of the copy paper.

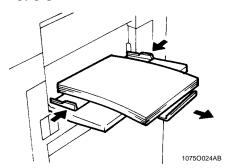


#### NOTES

- The paper should be loaded no higher than the  $\nabla$  (Max. Level Indicator).
- Before inserting, fan the paper stack well if you are using OHP transparencies.
- Correct any curl if you are using thick paper.
- For making copies on thick paper or OHP transparencies, the following functions cannot *be used: 1* ▶ 2, *Booklet Creation, Staple, Hole* Punch, Folding Options.
- The paper will be copied on the side facing up.

#### 3. Selecting the Paper

4


Select the desired copy paper size.

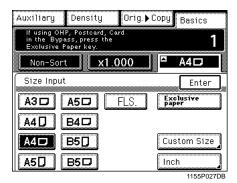

5


Touch Enter

- <Changing the Paper Size>
- Touch Paper and Size Input on the Touch Panel.

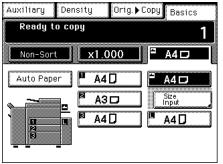

1155O655DC

• Select the desired copy paper size.

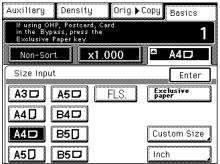


1155P027DB

• Touch Enter


<Using Inch Size Paper>

When you want to use inch size paper, touch **Inch** on the screen given in step 4 and you have a screen that allows you to select an inch paper size.

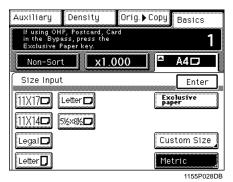


## <Using Nonstandard Size Paper>

When you use a nonstandard size paper, touch
 Custom Size on the screen given in step 4 and you have the following screen.

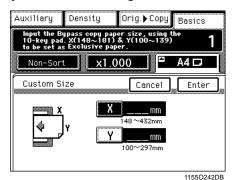

• Touch X and enter the size from the 10-Key Pad.

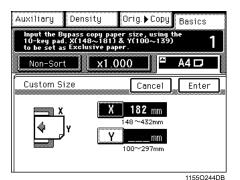


- Touch **Y** and enter the size from the 10-Key Pad.
- Touch Enter .

<Using Exclusive Paper>

Exclusive Paper: Thick paper and OHP transparencies.

After a paper size has been selected in step 4, touch **Exclusive paper**.

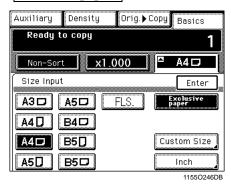

#### **NOTES**

- The Exclusive Paper mode is automatically selected when a length in the range of 148 to 181 mm is entered for X and a width in the range of 100 to 139 mm is entered for Y using Custom Size.
- When a multi-page document is copied using the Electronic Document Handler, the page order of the originals is reversed in the copy set.
- When making copies of a multi-page document through the Glass, start with the last page and go in descending order.


#### Useful Tips

- Exclusive Paper setting precludes 1 ▶ 2, Booklet Creation, Staple Mode, Punch Mode and Folding Options.
- This setting prevents that paper from being used for other purposes.
- This setting ensures that the copier uses the paper path for exclusive paper.

# 4. Selecting the Zoom

## Zoom Ratio


In the following pages, we explain how to select the zoom ratio. When you touch **Zoom** after touching **Basics** on the Touch Panel, a screen appears that allows you to set the zoom ratio. You have six different ways to choose from to set the zoom ratio. Select one according to your need.

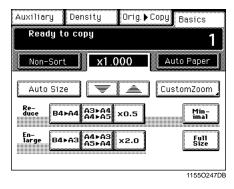

# **Auto Size**

In the Auto Size mode, the copier automatically selects the zoom ratio according to the size of the original being used and the copy paper size selected for use.

 Touch Auto Size to set the copier into the Auto Size mode.



Select the paper size. (Copy Paper Size @p. 3-9)


#### Useful Tips

 - This mode is very helpful for neat filing when you need to make copies from originals of assorted sizes.
- Priority settings for the initial mode can be made using User's Choice.

# **Selecting the Fixed Zoom**

The copier provides most frequently used zoom ratios ready for immediate use.

Touch the appropriate original-to-copy-size 1 representation key. You have three reduction and three enlargement ratios.



When you touch | Full Size  $(\times 1.000)$  is selected.


#### NOTE

 When the document handler is used, the copier determines the zoom ratio when the first original is taken up and fed in and uses that zoom ratio for the subsequent originals (except in the Mixed Original Detection mode.)

# For a Slightly Smaller Image

This function lets you make a copy slightly reduced in image size from that of the original.

1 Touch Minimal




#### Useful Tips

- A ratio of ×0.930 has been factoryprogrammed in Minimal, but that ratio can be changed as necessary. *☞*p. 4-6
- It comes in handy for making a copy, without losing any portion of the original image, from an original which has an image area covering its entire surface.

# Using Zoom Up/Down Keys

Pressing the or key changes the zoom ratio in 0.001 increments. You can hold down the key to change the ratio quickly.

 1 Hold down the or key until the desired zoom ratio is reached.



#### Useful Tips

- To save time, first select the fixed zoom ratio nearest to the target ratio before using the or key.
- The zoom ratio can be set within the range  $\times 0.250$  to  $\times 4.000$  when placing the original face down on the Original Glass. When using the Document Handler, the ratio can be set within  $\times 0.250$  to  $\times 2.000$ .

 
#### 4. Selecting the Zoom

# Using the 10-Key Pad


You may use the 10-Key Pad to directly enter the zoom ratio.

<Same ratio for X and Y>

Touch Custom Zoom



Enter the desired zoom ratio from the 10-Key Pad.

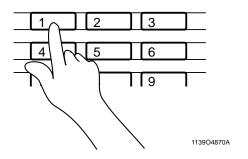

## Useful Tips

*Example:* ×1.300

 
Press 1, 3, 0, and 0, in that order.




- To correct a ratio, press the ©  $\square$  key and then enter the correct one again.
- The zoom ratio can be set within the range ×0.250 to ×4.000 when placing the original face down on the Original Glass. When using the Document Handler, the ratio can be set within ×0.250 to ×2.000.
- Touch Enter

<Using the X / Y Zoom>


Touch Custom Zoom 1



Touch X/Y Zoom 2

 


 Touch X and enter the zoom ratio from the 3 10-Key Pad. Then do Y.



#### Useful Tips

 - To correct a ratio, press the C key and then enter the correct one again.
- The zoom ratio can be set within the range  $\times 0.250$  to  $\times 4.000$  when placing the original face down on the Original Glass. When using the Document Handler, the ratio can be set within  $\times 0.250$  to  $\times 2.000$ .




# Calling up a Ratio from Memory


You can store some of the most frequently used zoom ratios in memory and recall them later as necessary.

<Same ratio for X and Y>

 Touch | Custom Zoom |



From among the two ratios previously stored in memory, select the desired one.

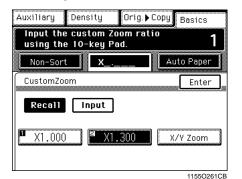


Useful Tip

It's a good idea for you to store frequently used zoom ratios in memory. \$\infty\$p. 3-18

Touch Enter 3


<Using the X/Y Zoom>

Touch | Custom Zoom |

 


1155O257DA

 Touch X/Y Zoom 2



1155O259CA

From among the three ratios previously 3 stored in memory, select the desired one.

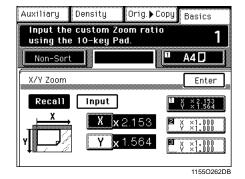

#### Useful Tip

 
It's a good idea for you to store frequently used zoom ratios in memory. \$\infty\$p. 3-18



<Same ratio for X and Y>


1 Touch Custom Zoom

Storing a Ratio in Memory




1155O257DA

7 Touch Input.

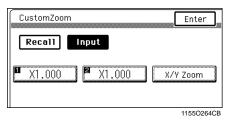

3 Enter the desired zoom ratio from the 10-Key Pad.

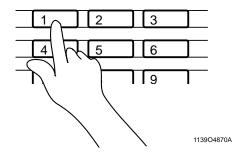

## Useful Tips


*Example:* ×1.300

Press 1, 3, 0, and 0, in that order.



- To correct a ratio, press the c key and then enter the correct one again.
- The zoom ratio can be set within the range  $\times 0.250$  to  $\times 4.000$  when placing the original face down on the Original Glass. When using the Document Handler, the ratio can be set within  $\times 0.250$  to  $\times 2.000$ .

4 Touch memory location key 1 or 2 in which to store the set zoom ratio.

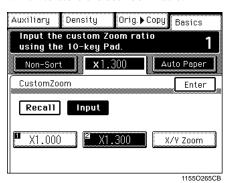


\* When the key is touched, the ratio is shown on the key, indicating that it has been stored in memory.

#### NOTES

 
- When a new ratio is stored, the old one is erased.
- The ratios may also be stored in memory by using the Utility Mode. © p. 4-6
- 5 Touch Enter

## <Using the X/Y Zoom>

Touch Custom Zoom




Touch X/Y Zoom

 


1155O259CA

 Touch Input 3




1155O266CA

 Touch the **X** or **Y** key to enter the desired zoom ratio from the 10-key Pad.



Touch memory location key 1, 2 or 3 5 in which to store the set zoom ratio.

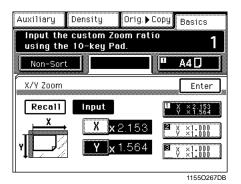

\* When the key is touched, the ratio is shown on the key, indicating that it has been stored in memory.

#### NOTE

When a new ratio is stored, the old one is erased.

Touch Enter 6

 
# 5. Selecting the Finishing

In the following, we explain about different finishing functions and setting procedures.

When **Finishing** is touched on the Touch Panel, a screen appears that allows you to set a particular finishing function.

# **Finishing Functions**

Non-Sort




All copies are fed out without being sorted, grouped, stapled or punched.
 Touch Non-Sort .

#### NOTE

Thick paper and OHP transparencies cannot be used for making copies in Staple, Punch and Folding.


Sort

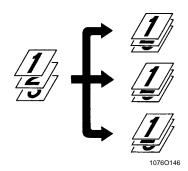

• This function is effective when making multiple copies from multiple originals. Copies are sorted into complete sets of the originals.

Touch Sort .


Group

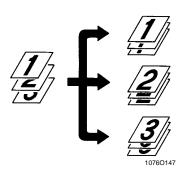

• The copies made from each original are separated into groups. Each group contains the same number of copies.


Touch Group .

#### Staple

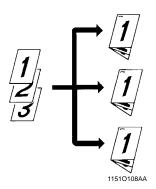

- <Only when the Finisher or Mailbin Finisher is mounted>
- This function is effective when making multiple copies from multiple originals. Copies are sorted or grouped into complete sets of the originals and then stapled.
- Only when the Finisher FN-3 is mounted, this feature is efficient for stapling originals after making copies.
   p. 3-26
   Touch Staple .

#### Hole Punch

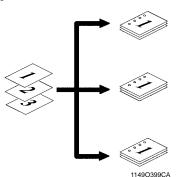

- <Only when the Finisher or Mailbin Finisher is mounted>
- Holes are punched in the copy sets or stacks for filing. It can be combined with Non-Sort, Sort, Group or Staple.

Touch Hole Punch

## Folding



- <Only when the Finisher FN-3 is mounted>
- This function allows you to fold copies. Touch **Fold**.
- \*You have a choice of folding options, either Crease, Half-Fold or Z-fold. Tp. 3-28

#### Useful Tip


The copier has been factory-set to automatically select Non-Sort in the initial mode. Also, the copier automatically switches between Sort and Non-Sort depending on the number of originals loaded in the Document Handler and the number of copies to be made. User's Choice can, however, be used to change these default settings. \*p. 4-16

## 5. Selecting the Finishing

# **Selecting the Finishing Function**

## Sort/Group

Touch the desired finishing function key.

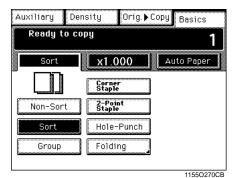

#### **NOTES**

- Only when the Finisher FN-3 is mounted, copies are fed out in a crisscross manner.
- Crisscross sorting is possible only when all of the following conditions are met:
  - Crisscross Mode of User's Choice is turned ON.
  - The copier is loaded with paper of the same size, but in two different directions.
- Mixed Original Detection is turned OFF.
- -None of the Staple, Hole Punch, Folding, Page Insertion, and Cover functions are set.

## Useful Tips

- If Crisscross is set to ON in User's Choice, sorted copy sets will be stacked in a crisscross manner, one set stacked lengthwise on top of another set stacked crosswise. Otherwise, if Crisscross is set to OFF, the sorted copy sets will be stacked together in the same direction.
- The default setting for Crisscross is ON. This can be changed to OFF in User's Choice. *☞p.4-16*

## Useful Tips

• Shift Sorting

The sorted copy sets are stacked in the same direction, but in a sawtooth manner by shifting the tray to the front or rear for each set.



1166O033AB

Crisscross Sorting

The sorted copy sets are stacked in a crisscross manner, one set stacked lengthwise on top of another set stacked crosswise.



1166O034AB

· Shift Grouping

The sorted copy stacks are stacked in the same direction, but in a sawtooth manner by shifting the tray to the front or rear for each stack.



1166O035AB

• Crisscross Grouping

The sorted copy stacks are stacked in a crisscross manner, one stack stacked lengthwise on top of another stack stacked crosswise.




1166O036AB

## **Hole Punch**

Touch the desired finishing function key.

Touch Hole Punch.

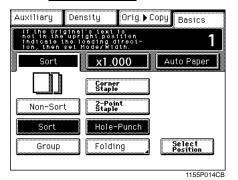


#### **NOTES**


- The size of the copy paper for Hole Punch is A3L, A4L and A4C only.
- Hole Punch is not possible in the Interrupt mode.
- When making copies in the Hole Punch Mode, make sure to load the originals into the Document Handler in the correct direction.
   p. 3-33

#### Useful Tips

• If you do not select a hole-punching position, the copier autmatically sets the Hole Punch position according to the original feeding direction ilustrated below.

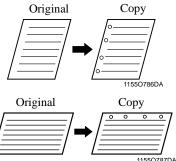

 
• When making copies from either the A3L or B4L size, the copier autmatically speify the hole punching position as shown below.



# **Select Position** Key:


Use this key when you want to place your original in a direction other than the standard or make punch holes in positions other than those made automatically.

1 Touch Select Position

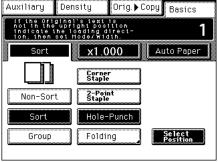

1155P015CB

**2** Touch the desired hole-punching position.

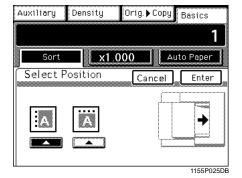


7 Touch Enter

#### 5. Selecting the Finishing


# Staple

<Only when the Finisher FN-3 is mounted>

1 Touch the desired finishing function key.

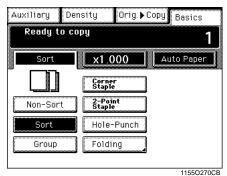

**7** Touch the stapling key of your choice.

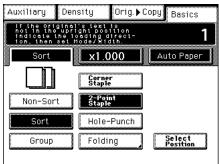

1155P0160

You have a choice of the following two stapling types.

• Corner Staple



Paper size:
A3L, B4L, A4L, A4C
Number of sheets:
2 ~ 50

• 2-Point Staple <Side Staple>



Paper size: A3L, B4L, A4L, A4C Number of sheets: 2 ~ 50

<Center Staple>




Paper size:
A3L, B4L, A4L
Number of sheets:
2 ~ 15

1155O669DA


\* When you touch a stapling key, the sorter is automatically set into the Sort mode.

3 Touch Select Position

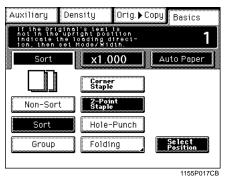

#### NOTES

- The stapling position cannot be specified if Corner Staple is selected.
- Although Hole Punch is combined with Corner Staple, you can specify the stapling position.
- **4** Touch the desired stapling position on the Touch Panel.

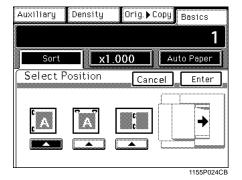

5 Touch Enter


#### **NOTES**

- Stapling is not possible in the Interrupt mode.
- Note the correct direction of the originals when making copies in the Sort Staple Mode.


  \*\*pp. 3-32

# **Manual Staple**


1 Open the Manual Staple Tray Cover.

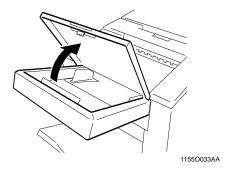

**?** Align the sheets of paper neatly.

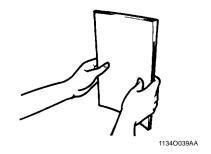


3 Insert a neat stack of papers face down into the Staple Tray.

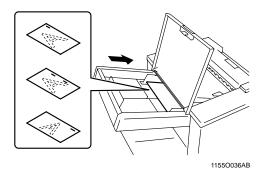

#### **NOTES**

- Make sure of the stapling position and press the paper stack against the end bracket.
- Up to 50 sheets of plain paper can be stapled.


4 Slide the Paper Guide Plate to the size of the copy paper.

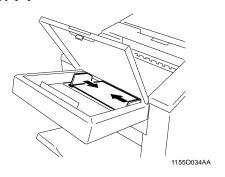


#### **NOTE**

Make sure that the Paper Guide Plates are in touch with the edge of the paper stack.

**5** Close the Manual Staple Tray Cover.

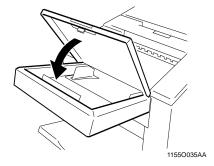

After you hear the mechanism stop, select the desired stapling type on the Finisher Panel.

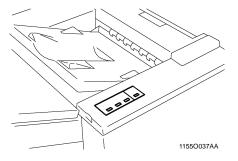

## 5. Selecting the Finishing

You have a choice of the following three stapling positions.



Paper size: A3L, B4L, A4L, A4C Number of sheets:  $2 \sim 50$ 




Paper size: A3L, B4L, A4L, A4C Number of sheets: 2 ~ 50



Paper size: A3L, B4L, A4L, A4C Number of sheets:  $2\sim 50$ 

1155O670DA


Press . This staples the copy stack or set.

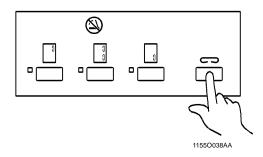

## Useful Tip

This feature is useful for stapling originals after making copies.

8 Open the Manual Staple Tray Cover and remove the stapled paper stack.

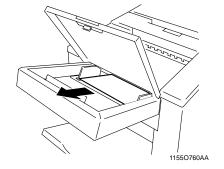


Close the Manual Staple Tray Cover.

# **Folding**
 
<Crease>


Crease makes a crease in the copy at its center before it is fed out.



Sizes of paper that can be loaded:

A3L, B4L, A4L Length 279~432mm Width 210~297mm

Make sure to select the correct stapling function when making copies with the Crease function if you want to make a stapled copy set.

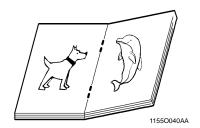


Number of sheets: 2~15

#### NOTE


Even if Staple is previously set to a corner or side position, the setting of Crease automatically cancels this setting and reselects a center stapling position.

Touch the desired finishing function key. 1 Touch Folding

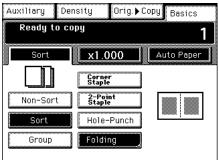


1155O275CB

2 Touch Crease

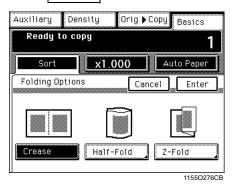

Touch 2-Point Staple . 3

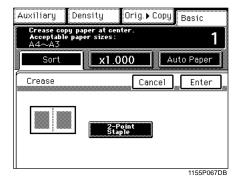


Touch Enter

#### 5. Selecting the Finishing
 
#### <Half-Fold>

Half-Fold folds the copy in two at its center with the copy surface on the outside.



Sizes of paper that can be loaded: A3L, B4L Length 364~432mm Width 257~297mm


\*The finished copy size has a length half that of the paper loaded in the copier. You can produce a document that looks like below by combining this function with Staple and Hole Punch.



Number of sheets: 2~10


#### **NOTES**

- Half-Fold cannot be used if you make a copy from an original placed directly on the Original Glass.
- Even if Staple is previously set to a corner or center position, the setting of Half-Fold automatically cancels this setting and reselects a side stapling position.
- Touch the desired finishing function key. Touch Folding.

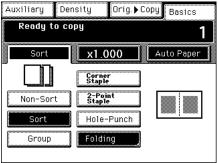


1155O275CB


7 Touch Half-Fold

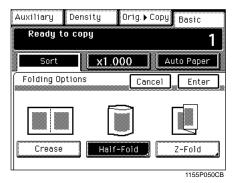

To set Staple, touch 2-Point Staple.

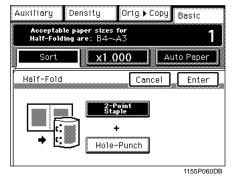


**⊿** To set Hole Punch, touch Hole-Punch

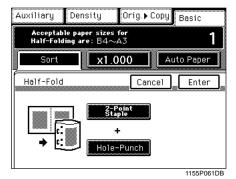

Touch Enter

#### <Z-Fold>

 
Z-Fold folds the copy into three parts with the copy surface inside as shown below.



Sizes of paper that can be loaded: A3L

\*The finished copy size has a length half that of the paper loaded in the copier.

 This feature comes in handy when you combine it with Mixed Original Detection to make a document of the same size or when you make copies for filing.




Number of sheets: Only for Z-Folded 2~10 Z-Folded 5 sheets + Unfolded 25 sheets.


#### NOTES

- Z-Fold cannot be used if you make a copy from an original placed directly on the Original Glass.
- Even if control panel settings are made to make 2-sided copies from 1-sided originals, the copies to be Z-Folded will be 1-sided.
- If control panel settings are made to make 2-sided copies from 2-sided originals, the copies to be Z-Folded will be 2-sided.
- Even if Staple previously set to center position, the setting of Z-Fold automatically cancels this settitng and reselects a side stapling position.


Touch the desired finishing function key. 1 Touch Folding

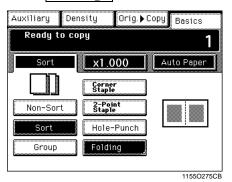


Touch **Z-Fold**. 2

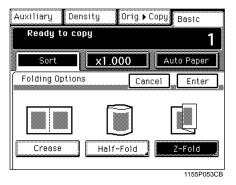

Touch A4 **B5** ) of Output Size. 3

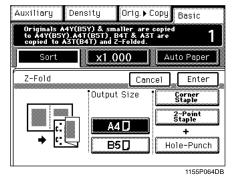


To set Staple, touch Corner Staple or 2-Point Staple

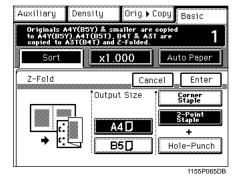

## 5. Selecting the Finishing

To set Hole Punch, touch Hole-Punch . **5** 

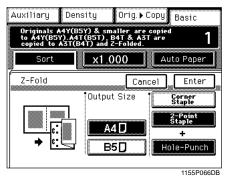

Touch Enter 6

# **Loading the Originals**

# Staple

Note the correct direction of the originals if the copies are to be stapled in Staple Mode.

<Using the Document Handler>

	D 1 0::10						
	Panel	Original Placement					
Corner Staple	Stapling Position  11550532AA						
2-Point Staple	1155O430AA	Stapling Position  11550534AA					
	1155O431AA	Stapling Position  11550535AA					
	1155O432AA	Stapling Position  11550536AA					

<Placing the Original on the Glass>

	The ing the original on the class.							
	Panel	Original Placement						
Corner Staple	_	Stapling Position  11550538AA						
2-Point Staple	1155O430AA	Stapling Position  11550539AA						
	1155O431AA	Stapling Position  11550540AA						
	1155O432AA	Stapling Position  11550541AA						


Useful Tip
Refer to the instruction labels on the machine or the Document Handler.

## 5. Selecting the Finishing

# **Hole Punch**

Note the correct direction of the originals if the copies are to be punched using Hole Punch.

# <Using the Document Handler>

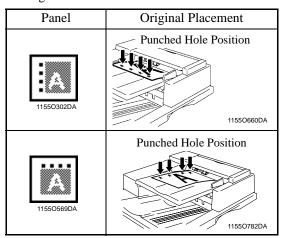

# <Placing the Original on the Glass>

Panel	Original Placement		
1155O302DA	Punched Hole Position  11550664DA		
1155O569DA	Punched Hole Position  11550783DA		

# **Auto Dual Function**

## **Auto Dual Function in Finishing Mode**

Though the Top Offset Tray can hold only up to 100 sheets, the Auto Dual function permits making copies of up to 2,100 sheets.

<Only when the Finisher FN-3 is mounted>

			Daman Cina	Top Offset	Bottom Offset Tray		
	Paper Si		Paper Size	Tray	Corner Staple	2-Point Staple	
Non-Sort		on-Sort	A4C	100 sheets	2000 sheets (no staple)		
Sort		ort	A3L, B4L, A4L	100 sheets	1000 sheets (no staple)		
Group		roup	A5L, A5C, A6L	100 sheets	-		
Crisscross Sort		sscross Sort	A4L, A4C	100 sheets	1000 sheets (no staple)		
Staple	Sort Group	Corner	A3L to A4	-	100 sets or 1000 sheets	•	
		Side	A4C	-	•	200 sets or 2000 Sheets	
			A3L, B4L, A4L	-	•	200 sets or 1000 Sheets	
		Center	A3L to A4L	-	•	100 sets or 1000 sheets	
Folding	Crease	Staple	A3L to A4L	-	•	100 sets or 1000 sheets	
	Half-	Non-Sort, Sort, Group	A3L to B4L	10 sheets	50 sheets	(no staple)	
	Fold	Staple	A3L to B4L	-	•	100 sheets	
	Z-	Non-Sort, Sort, Group	A3L	10 sheets	50 sheets (no staple)		
	Fold	Staple	A3L	-	100 sheets	100 sheets	
on					Z-Folded: 100 sheets		
cti				30 sheets	Z-Folded + Unfolded*: 1000 sheets		
Detection			A3 (Z-Folded) + A4C		(no staple)		
Mixed Orig. Do	Z-Folded + Unfolded*		*Z-Folded: 5 sheets/set Unfolded*: 2 sheets/set	-	Z-Folded: 100 sheets Z-Folded + Unfolded*: 1000 sheets	Z-Folded 100 sheets Z-Folded +Unfolded*: 2000 sheets	

<sup>\*</sup> Only A3 size paper can be Z-folded. Therefore, if a stack of mixed-size originals (A3 and other sizes) is copied in Mixed Original Dtection mode, the copy set will contain a mix of Z-folded and unfolded copies.

# **Auto Dual Function in Stapling**

 
If a stapling sequence is attempted and the number of sheets is greater than the stapling capacity, Stapling is automatically canceled and the Finisher is set into the Sort or Group mode, sorting or grouping copies using the Auto Dual function (but no stapling action takes place).

# **6. Selecting the Original** ▶ Copy Type


In the following pages, we shall look at how to make the settings for the type of copy you want to make from the type of original you have. When you touch | Orig. ▶ Copy | on the Touch Panel, a screen appears that allows you to set the orig. ▶ copy type.


# **Original** ▶ Copy Types

Select 1 ▶ 1 to make 1-sided copies from 1-sided originals.




 Select 1 ▶ 2 to make 2-sided copies from 1-sided originals.

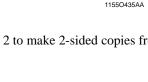




 
Select  $1 \triangleright 1$  [2in1] to make a 1-sided copy, through reduction, from two 1-sided originals side-by-side.



 
Select  $1 \triangleright 2$  [2in1] to make a 2-sided copy, through reduction, from four 1-sided originals. Each pair of originals will be placed side-by-side on either side of the copy.



 
Select 2 ▶ 1 to make 1-sided copies from 2-sided originals.



 
Select 2 ▶ 2 to make 2-sided copies from 2-sided originals.



 
Select 2 ▶ 1 [2in1] <accessed via 2in1> to make a 1-sided side-by-side copy, by reduction, from a 2-sided original.



 
Select 2 ▶ 2 [2in1] <accessed via 2in1> to make a 2-sided side-by-side copy, by reduction, from two-sided originals.



 
Select 1 ▶ 1 [4in1] to copy 4 different 1-sided originals onto one side of a single sheet of paper.



 
Select 1 ▶ 2 [4in1] to copy 8 different 1-sided originals onto both sides of a single sheet of paper, each side containing 4 pages of the originals.



 
Select 1 ▶ Booklet Creation to copy 4 different 1sided originals onto both sides of a single sheet of paper.



 
Select Book ▶ 1 to make 1-sided page-by-page copies of an open book.



 
Select Book ▶ Booklet Creation to copy 4 pages of a book onto both sides of a single sheet of paper.



 
Select 2 ▶ 1 [4in1] to copy 2 different 2-sided originals (4 pages) onto one side of a single sheet of paper.



 Select 2 ▶ 2 [4in1] to copy 4 different 2-sided originals (8 pages) onto both sides of a single sheet of paper, each side containing 4 pages of the originals.



 Select 2 ▶ Booklet Creation to copy 2 different 2sided originals onto both sides of a single sheet of paper.



Select Book ▶ 2 to make a 2-sided copy of an open book. Each page of the open book will be copied onto one side of the copy.




# **Selecting the Original** ▶ **Copy Type**


### Using 1 or 2 Originals

Load the Originals.

2 Select the Original Type.

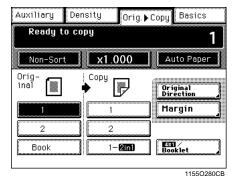


3 Select the desired copy type.

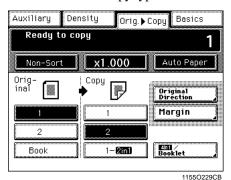


<To copy using 2 ▶ 2[2in1], Booklet, 1 ▶ 1[4in1], 2 ▶ 2[4in1]>

• Touch | 4in1 | Booklet | in step 3.

 

 • Select the desired copy type and touch Enter




# Original Direction | Key:

Use this key when you want to place your original in a direction other than the standard.

Touch Original Direction 1




2 Select the position of the original.

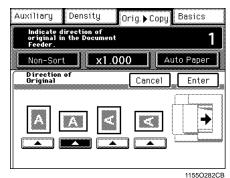

Touch Enter

### **Margin** key for the original:

When you're going to make copies using  $1 \triangleright 2$  or 2 ▶ 1, first check to see if your original has a file margin in it. The copier can correct the margin position to make good copies as long as you instruct it properly.

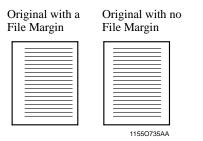

# If your original has a file margin

 
Touch | Margin |




1155O283CB

- Select the desired margin position. 2 You have a choice of the following two Margin Positions.
  - Margin Position (Left)






• Margin Position (Top)

 


Hold down the **▼** or **△** key until the 3 desired margin width is reached.

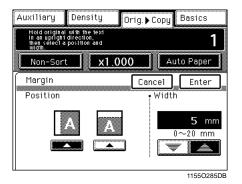

#### Useful Tip

 You can change the margin width in 1mm increments within the range 0 ~ 20mm.



#### Useful Tips

• If the margin position is set to Left and width to 0 mm, the image on both the front and back sides of the copy has the same orientation as that on the original.



• If the margin position is set to Top and width to 0 mm, the image on the 2nd side of the copy is inverted to that on the 1st side.



1155O046AA


# If your original has no file margin

It's not necessary to correct the margin position and width if your original has no file margin.

#### 6. Selecting the Original ▶ Copy Type


#### **Book**

- Position the book on the glass.
- Touch Book 2

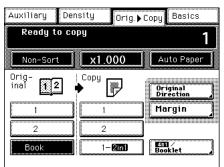


1155O288CB

Touch **Standard Book** or **Right Bound** 3

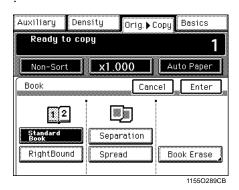


Separation Touch Spread

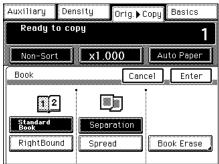

1155O290CB


5 If you want to erase the four edges or center, touch Book Erase

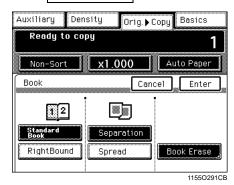


Useful Tip

You have a choice of the following three erase functions.

 
• Frame Erase Erase a given width along the four edges.



 
• Center Erase Erase a given width down the center.



 • Frame + Center Erase Erase a given width along the four edges and down the center.




Select the particular erase function ("Book Erase").

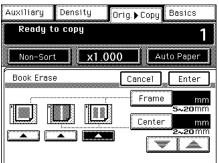

1155O295DB


Touch Frame or Center, then hold down the or key until the desired erase width is reached. Then, touch Enter .

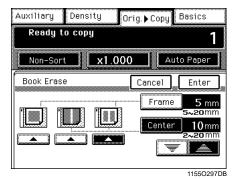

Useful Tip


You can change the erase width in 1mm increments within the following range:

- Frame: 5~20mm • Center: 2~20mm
- Touch Enter 8
- Touch the **1**, **2** or **Booklet** keys in the Orig. ▶ Copy Mode.

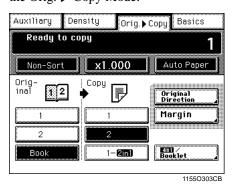


<To copy Using Booklet>

• Touch | 4in1 / Booklet | in step 9.

 


• Touch Booklet Creation

 

1155O658CA

  Input the copy starting page position and last page position. Then touch **Enter** .




1155O659CA


#### **6.** Selecting the Original ▶ Copy Type

<To copy using Separation and 2-sided>


• Touch Page arrange

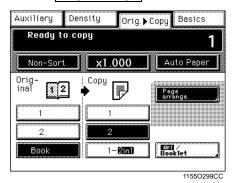

 
You have a choice of the following two arrangement types.



• Standard

 

• Select the desired page arrangement.

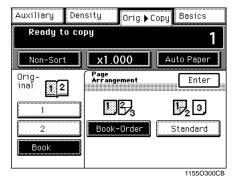


• Touch Enter .

# **Some Precautions for Making Copies**

#### **Precautions for Book Copying**

- Place the open book so that its top edge is at the rear of the copier and the center of the book is aligned with the Book Marker indicated on the Original Length Scale.
- Make copies in descending order of page.
- Select the desired zoom ratio and copy paper size.

Placing the Book on the Glass Correctly

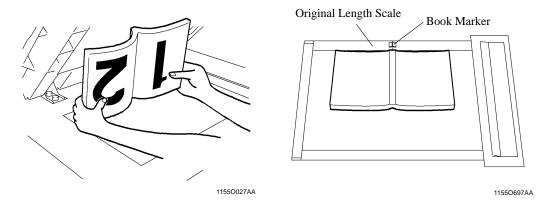


### Precautions for 2-in-1, 4-in-1 and Booklet Copying

- When the 2-in-1, 4-in-1 or Booklet function is selected, the copier automatically selects a default zoom ratio. However, you can choose another zoom ratio by changing the User's Choice setting. To 4-16
- User's Choice also allows you to program a specific page order for 4-in-1. Tp. 4-17

# 7. Selecting the Density

# **Image Density**

In the following pages, we explain how to set the exposure level for the image density. When you touch | **Density** | on the Touch Panel, a screen appears that allows you to set the exposure level for the image density. You have a choice of three different ways to adjust the exposure level: Auto Exposure, Manual Exposure, or Photo mode. Select the appropriate mode according to your particular needs.

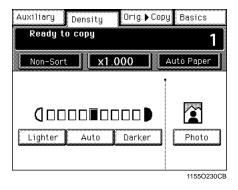


### **Auto Exposure**

When in the Auto Exposure mode, the copier automatically adjusts the exposure level for the optimum copy image density.

1

Touch Auto .

 The **Auto** key is highlighted, indicating that the copier is set into the Auto Exposure mode.




#### Useful Tips

- The exposure level in the Auto Exposure mode can be made either "Darker" or "Lighter" by using User's Choice. \$\iiint p. 4-16\$
- The copier has been factory-set to automatically select the Auto Exposure mode. User's Choice can be used to change this default setting to the Manual Exposure mode. ☞p. 4-16

### **Manual Exposure**

In the Manual Exposure mode, you can vary the exposure level in nine steps.

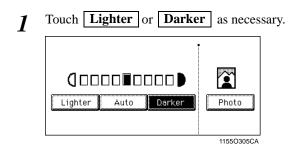


#### Useful Tips

- To make the image darker, touch | Darker
- To make the image lighter, touch | Lighter

#### Photo


The copier can make a faithful reproduction of an original having a halftone image such as photos. The exposure level of the photo may be varied in nine steps.

 Touch **Photo** . 1 The **Photo** key is highlighted, indicating that the copier is set into the Photo mode.



1155O306CA

 Touch **Lighter** or **Darker** as necessary.



1155O307CA


#### NOTE

When making copies in the Photo Mode, Auto Exposure does not operate. Select the desired exposure level in the Manual Exposure Mode.

#### Useful Tips


- To make the image darker, touch Darker
- To make the image lighter, touch Lighter

These pages explain about convenient functions offered as the Auxiliary functions and how to set these features. When the **Auxiliary** key on the Touch Panel is touched, the Auxiliary function menu screen appears.

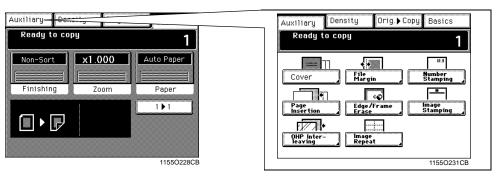


#### Cover

The Cover mode lets you make a front cover or a front and back cover for a copy set by copying the first page or the first and last page of an original set on different paper from the normal copy paper, such as color paper. There are six different Cover functions available. Select the appropriate one according to your need.

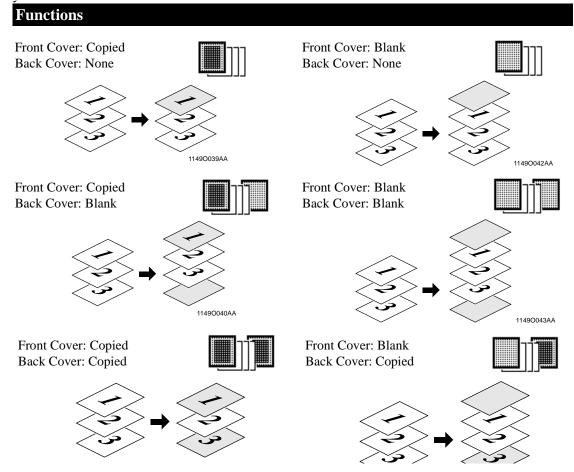


# **Using the Cover Mode**


Load your originals into the document handler.

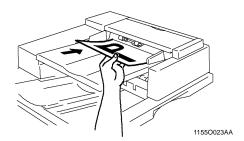


Touch Cover 2

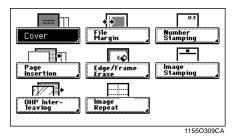


3 Select the key for the front cover.

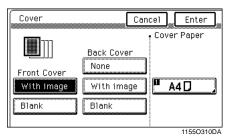

Select the key for the back cover. 4

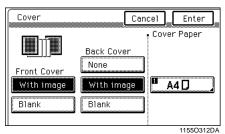


5 Load the paper for the cover (e.g., color paper) into the drawer.

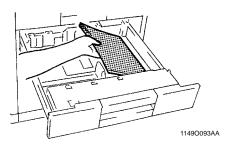


### Useful Tip

You can use the Multi Bypass Tray as the source of the cover paper.


Touch the key for Cover Paper. 6

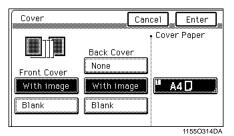

Select the drawer in which paper for the cover has been loaded in step 5.

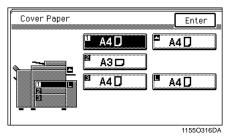

- Touch Enter
- Touch Enter

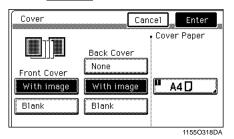


# **Page Insertion**

Page Insertion allows you to insert a special sheet of paper (e.g., color paper) into the copy set. Two different functions are available. Select the appropriate one according to your need.


# **Functions**

Page Insertion < Copied Inserts>

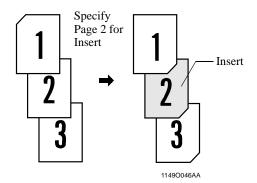

The copier copies the page, which is specified for an insert, on paper for inserts (e.g., color paper).

Page Insertion < Non-Copied Inserts>

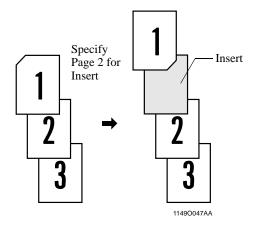

The copier inserts a blank sheet of paper for inserts (e.g., color paper) at any specified place between pages.

# Specifying the Place for an Insert

In the Page Insertion mode, you must specify where to place an insert by using Automatic Detection.


#### **Automatic Detection**

Put a sheet of paper of a different size from the originals at your desired places in the original set (for convenience, let us call this paper the insert marker), load the original set onto the document handler and let the copier start the original count sequence. To 3-48

<The copier automatically detects and sets the places for inserts.>


#### **NOTE**

Automatic Detection cannot be performed when the Mixed Original Detection mode is set.

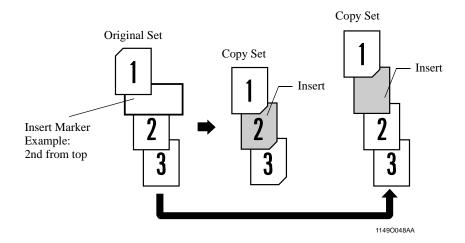


# **Using Page Insertion**


Put an insert marker into the desired place in the original set.

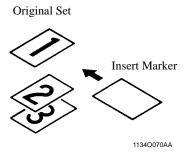

Example 1: To place a copied insert at the 2nd position from top.

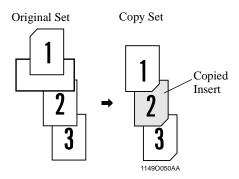


Example 2: To place a non-copied insert between pages 1 and 2.

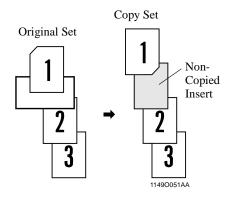


#### **NOTE**

For the insert marker, use paper that is a size, or loaded in a direction, different from the originals.


Load the original set containing insert 2 markers into the document feeder.

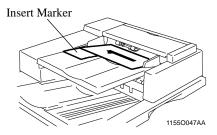


Page Insertion 3 Touch

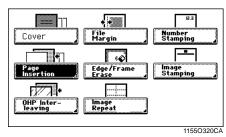

Touch the appropriate key for Paper to select whether to copy onto inserts (With Image) or not (Blank).

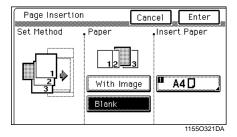


Load the paper for inserts into the drawer.

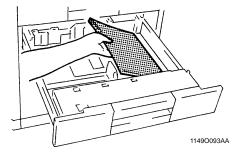


Useful Tip

You can use the Multi Bypass Tray as the source of the paper for the inserts.

6 Touch the paper size key for Insert Paper.

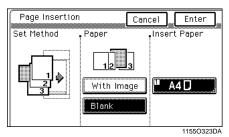


Select the paper source in which paper for inserts has been loaded in step 5.

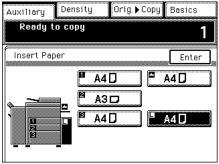

1155O325DB

- Touch Enter 8
- 9 Touch Enter

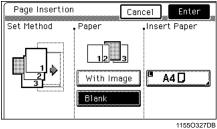

- Press the Start Key to let the copier start the Auto Detection sequence.
  - \*The document handler starts feeding the originals loaded in it to detect the insert markers and scan the originals.


# **OHP Interleaving**

 When you make copies on transparencies, the OHP Interleaving function inserts copied or non-copied interleaves after each transparency. Four different functions are available. Select the appropriate one according to your need.

# **Functions**


#### **Single Copy**

<Copied Interleaves>



The copier copies onto OHP transparencies and, after each transparency, inserts a copied sheet of paper.


<Non-Copied Interleaves>

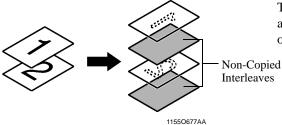


The copier copies onto OHP transparencies and, after each transparency, inserts a non-copied sheet of paper.

### **Multiple Copy**

<Copied Interleaves>

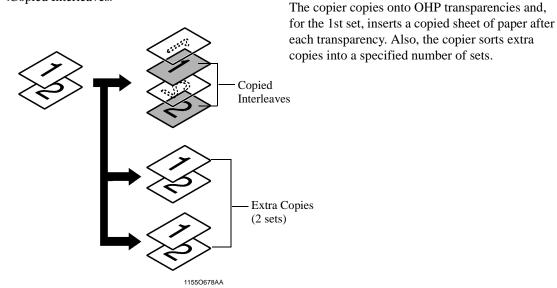

<Non-Copied Interleaves>

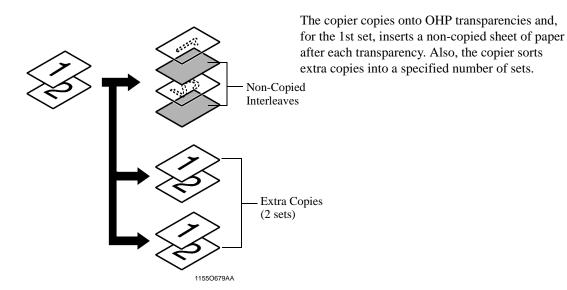


### Useful Tip

Auto Paper, Auto Zoom, Sort, Staple, Punch, 2-sided, 2-in-1, 4-in-1, Booklet, Cover and Insertion are all available for the extra copies.

### **Using OHP Interleaving**


Load the originals.

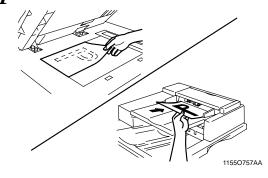


#### **NOTES**

- If you make each copy through the Original Glass, start with the first page of the set. "Not Using the Document Handler" \$\infty p. 3-6
- When a multi-page document is copied using the Electronic Document Handler, the page order of the originals is reversed in the copy set.


Touch **OHP Interleaving** 2

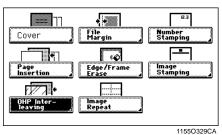

Load OHP transparencies onto the Multi Bypass Tray. (Up to 20 sheets of OHP transparencies can be placed on the tray.)

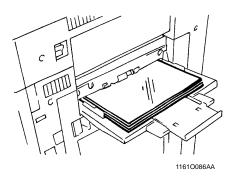


Select a transparency size. 4

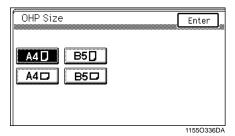


Touch Enter 5

6 Select whether to copy onto the interleaves (With Image) or not (Blank).

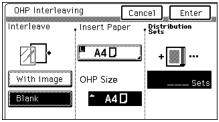


1155O330DA

Touch the key for Insert Paper.

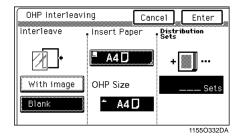


8 Select the Insert Paper.

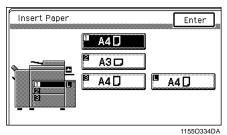

Touch Enter

10 Enter the number of extra copy sets to make from the 10-Key Pad.

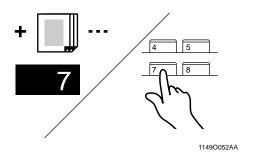

#### **NOTE**

For the paper for extra copy sets, touch

**Paper** on the Basics screen and select the desired copy paper.

\*Auto Paper may also be used for the copies.

 
11 Touch Enter.

# File Margin


The copier provides a file margin along the leading edge for your ease in filing. There are four different ways available for making a file margin. Use the one that is most suited to your need.

### **Functions**

Shift-for-Margin




The image of the original is shifted to the right to make a margin along the left edge of the copy.

 


The image of the original is shifted to the bottom to make a margin along the top edge of the copy.

### Margin-by-Reduction

 

The image of the original which has almost no file margins along the sides is reduced to make a wider margin along the left edge of the copy.

 


The image of the original which has almost no file margins along the sides is reduced to make a wider margin along the top edge of the copy.

#### Useful Tip


If the image of the original covers the entire surface of the original, Margin-by-Reduction will ensure a copy with no lost image along the edges.

# **Using File Margin**


Touch File Margin

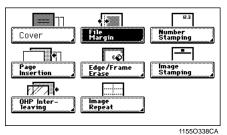


- Place the original.
- 3 Select the desired "Position" of the margin.

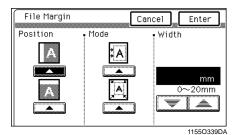

Select the "Mode" of margin making.

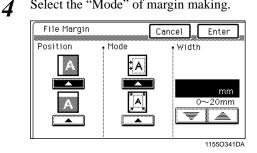

5 Hold down the ▼ or ▲ key until the desired margin width is reached.

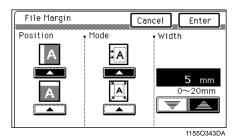


### NOTE

Having a margin width larger than necessary could result in part of the image missing on the copy. Try to keep a logical margin width.


#### Useful Tip

 You can change the margin width in 1mm increments within the range 0 ~ 20mm.




#### Useful Tips

 • If the margin position is set to Left and width to 0 mm, the image on both the front and back sides of the copy has the same orientation as that on the original.



 • If the margin position is set to Top and width to 0 mm, the image on the 2nd side of the copy is inverted to that on the 1st side.




# **Edge/Frame Erase**

The copier erases a margin of a set width along the four edges, one edge, or at the center to erase shadows or other unwanted images. This feature is effective in erasing the communications record on a document received by fax. One of three different functions can be selected. Use the one that is most suited to your need.


### **Functions**

 Left Edge Erase




Erases a given width from the left edge of the copy.

 Top Edge Erase



Erases a given width from the top edge of the copy.

 
Frame Erase




Erases a given width along the four edges.

# Using a Particular Edge/Frame Erase **Function**


Touch Edge/Frame Erase .

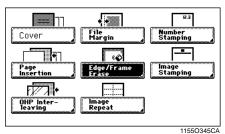

- Place the original.
- Select the desired erase function ("Position").

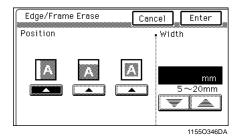

Hold down the 🔻 or 🔺 key until the desired erase width is reached.

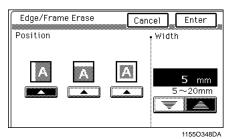

#### Useful Tip

 
You can change the erase width in 1mm increments within the range 5 ~ 20mm.

Touch Enter 5

#### NOTE

The erase width represents that on the original, not on the copy. So, use care when making a reduction or enlargement copy.

Example: Erasing the margin of an A3 size original on a copy reduced by  $\times 0.5$ :



1166O255AA


If you want to erase the 20mm-wide margin on the original, select 20mm for the erase width.

# **Image Repeat**

The image of the original is repeatedly produced on the copy paper. The copier automatically calculates the number of images that can be printed based on the copy paper size and zoom ratio.


# **Functions**

 With Dotted Line



Provides dotted lines between the adjacent images on the copy.

 Without Dotted Line




Provides no dotted lines between images on the copy.

# **Selecting Image Repeat**


- Load the originals.
- Select the desired copy paper and zoom ratio. (Selecting the Paper @p. 3-9 Selecting the Zoom @p. 3-14)

Touch Image Repeat . 3

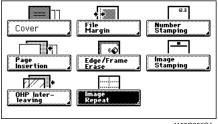


1155O350CA

Select whether you want a dotted line or not by touching **Yes** or **No**.

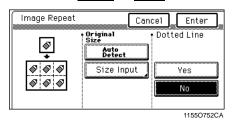


Touch Auto Detect to detect the original 5 size.

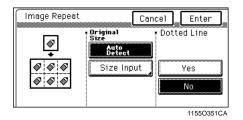


#### NOTE

 For an original placed directly on the Original Glass, enter its size using Size Input. For using Size Input, see the instructions on the right.




- <Size Input>
- · Original Size is standard Touch **Size Input** in step 5. Select the size of the original and touch **Enter** .

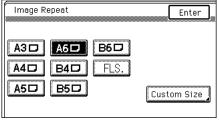


1155O352DA

· Original Size is nonstandard Touch Size Input, then touch Custom Size in step 5.

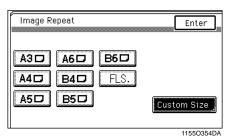

• Touch the  $\boxed{\mathbf{X}}$  or  $\boxed{\mathbf{Y}}$  key and enter the size of the original using the 10-key Pad.

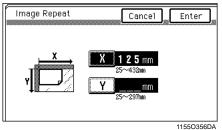


• Touch **Enter** 

# **Number Stamping**

The copier places on each copy the date of copying (Date), page number (Page) and a reference number for each copy set (Distribution).

# **Functions**


#### **Date**

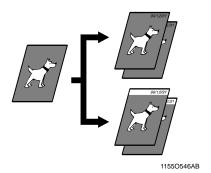

Places the date of copying on each copy.

\*The image area on which the date is printed may be erased.


### Page

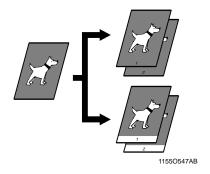

Places a page number on each copy.

\*The image area on which the page number is printed may be erased.

#### Distribution

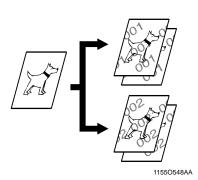


Places a reference (distribution) number on the background of the copy, as assigned to each copy set.

# **Using Date**


Load your originals.

**Number Stamping** 2 Touch

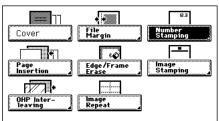


1155O358CA


Touch Date 3

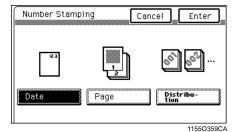

Select the desired date stamping position. 4

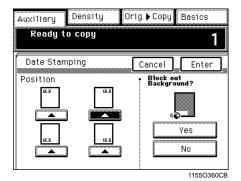


Select whether to block out the background **5** Yes or not No .

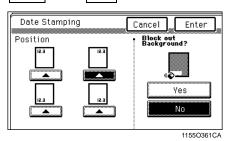


#### Useful Tips

 • Blocking out the background The background image is erased and the date is printed on the erased area.



1155O550AB

 · Not blocking out The date is printed over the image.



Touch Enter 6


#### Useful Tip

User's Choice allows you to set the date and time, date printing format, and date printing position. @p. 4-17, 4-19

# **Using Page**


Load your originals.

Touch Number Stamping 2

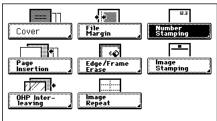


1155O358CA


Touch Page 3

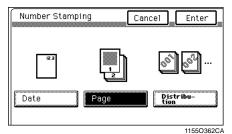

Enter the starting number from the 10-Key 4 Pad.

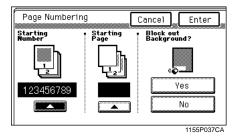


Enter the starting page number from the 10-5 Key Pad.

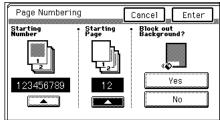

1155P038CA

Select whether to block out the background 6 Yes or not No

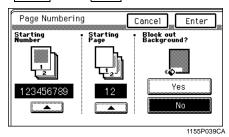

Useful Tips

• Blocking out the background The background image is erased and the page number is printed on the erased area.



1155O551AB

• Not blocking out The page number is printed over the image.



Touch Enter

### Useful Tips


- · User's Choice allows you to set the page number position. 

  ☞ p. 4-17
- Page number is reset to 0 when reaching 999999999.

# **Using Distribution**


Load your originals.

**Number Stamping** 2 Touch

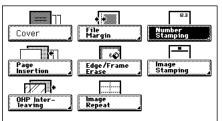


1155O358CA

 Touch **Distribution** 3




1155O365CA

Enter the starting number from the 10-Key 4 Pad.

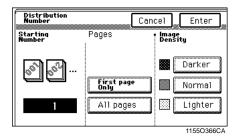


Select the page on which to print the 5 distribution number,

 either First page only or All pages



1155O367CA

Select the image density, either Darker, 6 Normal, or Lighter.

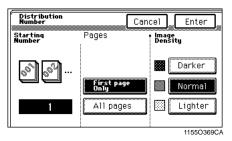

Touch Enter

#### Useful Tip

The Distribution number is reset to 0 when reaching 999.

# **Image Stamping**

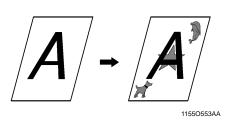



Image Stamping lets you print a preprogrammed image at a specified location on the copy.

\*The image can be printed at up to three places.

# **Checking the Preprogrammed Image**


The preprogrammed image can be checked in advance.

Touch Image Stamping .

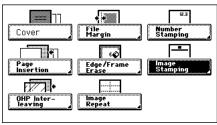


1155O368CA

2 Touch Check and select the image to be checked.

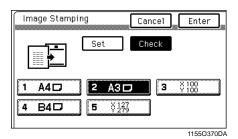

3 Select the copy paper and press the Start key.

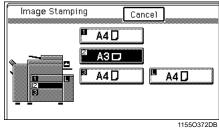

#### NOTE

It is not possible to check the preprogrammed image if a job has been reserved.

#### Useful Tips


- A preprogrammed image can be stored in memory using Utility.
- Image Memory Input. ☞p. 4-8
- A preprogrammed image can also be checked using Utility.
- Checking Programmed Image. ☞ p. 4-11

# Calling Up a Preprogramed Image

You may want to call up a preprogrammed image for use on the copy.


Load the originals. 1

2 Touch Image Stamping .

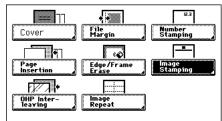


1155O368CA

 3 Touch Set and select the desired image.




1155O374DA

 Select the image stamping position.



1155O376CA


5 Select the desired image density.

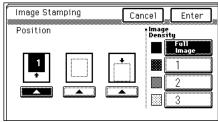

1155O377CA

Touch Enter 6

7 Touch Enter

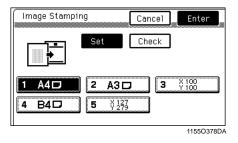

#### **NOTES**

- If two or more images are used, each has to be different from the other and should be placed in a unique position. (No two images can be exactly the same.)
- •When using Image Stamping, select the "Original Direction." \$\sip\$p. 3-36

#### Useful Tip

Up to three preprogrammed images can be placed on the copy.

# 9. Selecting Mixed Orig. Detection and Other Functions


# Mixed Orig. Detection and Other Functions

These pages explain about Mixed Original Detection and other document-related functions the copier offers. Pressing the Original key on the control panel shows a screen that allows you to set these

- Touching either one of the four function keys highlights that particular key, which sets that function.
- Touching it a second time cancels the setting of that function.

### **Selecting Mixed Original Detection**

Use the Mixed Original Detection function to make copies automatically from originals of assorted sizes loaded in the Electronic Document Handler.

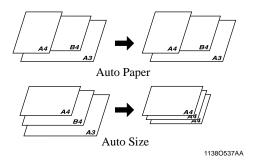


### **NOTE**


<When FN-3 is mounted>

The copier cannot be used to make copies with Mixed Orig. Detection, Auto Paper, and Staple combined. It becomes, however, possible to make copies when Z-Fold is further combined with these three functions.

Load the stack of originals so that the rear 1 edge of each original is pressed against the rear Document Guide Plate. Then, slide the front Document Guide Plate against the front edges of the originals with the greatest width.

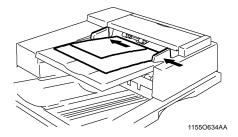

Touch the **Mixed Orig. Detection** key on 2 the touch panel.

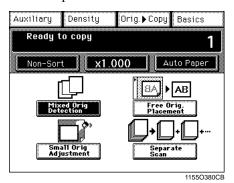

#### Useful Tip

User's Choice allows you to default to Mixed Original Detection. @p. 4-15


### **Selecting Free Original Placement**

Free Original Placement eliminates voids or image deviations on the copy even if the original is placed away from the Original Scales on the Original Glass.



1155O554AA

Touch Free Orig. Placement

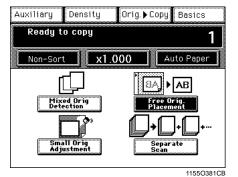


#### NOTES


- Place the original in parallel with the Original Scales. The function does not work on an original placed askew.
- If the Realign Warning available from User's Choice is turned ON, the copier warns you of an original placed askew.
- The Realign Warning may fail to function properly to detect the correct original position for the following types of originals:
  - An original with a colored background
  - An original with images printed to the edges
  - An original that is not rectangular

### **Selecting Small Original Adjustment**

When your original is smaller than the copy paper or when you are making a reduction copy, Small Original Adjustment prevents the areas outside the original from being dirtied on the copy. You will not have a copy with black areas surrounding the image which is made with the Electronic Document Handler raised.

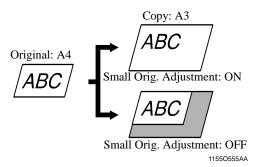

1 Touch Small Orig. Adjustment

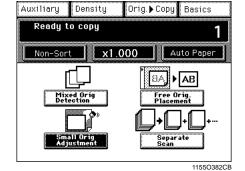

#### **NOTES**

- Small Orig. Adjustment may fail to detect the correct position of the original, erasing part of the image, for the following types of originals:
  - An original with a colored background
  - An original with images printed to the edges
  - An original that is not rectangular
- The function can erase only a rectangular area even if the original is a complicated shape.



1155O646AA

 
### 9. Selecting Mixed Orig. Detection and Other Functions

### **Selecting Separate Scan**

Separate Scan permits the copier to scan a large set of originals in several parts.


The Electronic Document Handler can be loaded with up to 100 pages of a document. If you, however, divide a document consisting of more than 100 pages so that each part contains less than 100 pages, it can still be scanned as one set by the copier.

Example: A 150-page document




1155O556AA

Touch Separate Scan 1

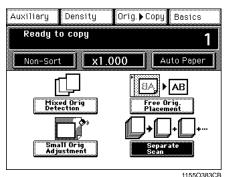

Load the first set of original(s) and press the Start key.

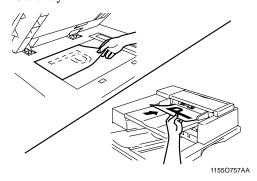

#### NOTE

If the original is placed directly on the Original Glass to make a copy, do that in ascending order of page.

- Load the next set of originals and press the 3 Start key.
- Repeat step 3 according to the number of pages of the document.

#### Useful Tip

The number of originals that can be scanned and stored in memory at one time is about 500 sheets of standard A4 paper.

When all pages of the document have been 5 scanned, touch **Finish** and press the Start key.



1155O384CA

The copier starts a print cycle. 6

# 10. Selecting the Job Functions


# **Memory Recall**

After a print cycle has been completed, Memory Recall allows you to run another print cycle again using the same image data and copy settings as the previous one without having to reload the originals.


After the first print cycle, touch Memory Recall on the Touch Panel to show a screen that allows you to make the necessary settings.

### **Setting Memory Recall**

Touch Memory Recall

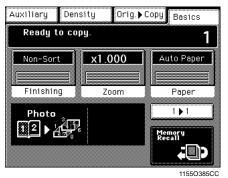

2 If you have any function to change, touch the corresponding mode key and make the necessary change.

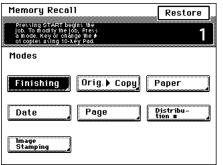

155O386CA

#### Useful Tips

• The following functions can be changed when running a print cycle again using Memory Recall:

•Finishing
•Paper
•Page
•Pinage Stamping
•Orig. ► Copy
•Date
•Date
•Distribution #
•No. of copies

- A pen mark appears above the key of the function changed.
- To change the number of copies to be made, press the © key and set the new number.
- Paper size and direction cannot be changed.

**3** Press the Start key and the copier starts the print cycle.

#### NOTES

- Memory Recall available from User's Choice must be turned ON to use this function.

  ☞ p. 4-15
- This function cannot be used in the Interrupt mode.
- The preceding image data and copy settings are cleared to disable Memory Recall when any of the following operations are performed:
  - The copier is turned OFF.
  - The copier scans a new original or the Start key is pressed.
  - The Access key or Interrupt key is pressed, or Reserve is touched.
  - The c key or Panel Reset key is pressed while the copier remains idle.

#### Useful Tip

After you have made copies from a confidential document, it is recommended that you press the Panel Reset key to erase the data.

#### 10. Selecting the Job Functions

#### Reserve

As the copier completes scanning for a regular copy job, it is capable of scanning for another job which is held in reserve. When the copier completes the print cycle for the first job, it automatically starts the print cycle for the reserved job.

\*By job, we mean a sequence of operation from original loading to the end of the print cycle.

#### NOTE


"RESERVE" does not function when Date Controller/Key-Counter is installed to copier.

### Reserving a Job

1 Touch Reserve on the Touch Panel.



**2** Load the originals and make the necessary settings.

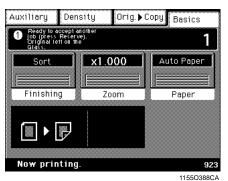

Press the Start key and the copier starts scanning the originals and the job is reserved.

#### NOTES

- The number of copier jobs that can be stored is a maximum of 5 or about 500 sheets of A4 standard original.
- Jobs are printed in order of reservation.
- For a job to be reserved, Manual Bypass cannot be selected.


### Job List

These pages explain about what convenient functions can be performed and settings made with the Job List key on the control panel. To use this function, press the Job List key.


### Mode Check

Mode Check allows you to check what settings have been made for a job.

Touch | Mode Check | and then touch the job no. key whose settings are to be checked.

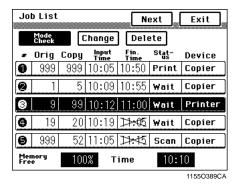

Touch Next or Back Up to check for the details of the settings.

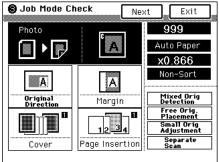


- After the settings have been checked, touch Exit
- Touch Exit again.

### Change


Change allows you to change the settings made for a job.

Touch | Change | and then touch the job no. key whose settings are to be changed.

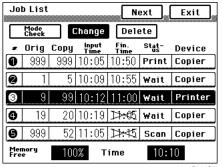

1155O391CA

Select the desired function mode to be changed and touch Enter

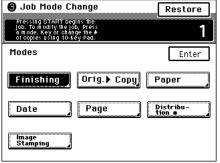

1155O392CA

### NOTES

- The following functions can be changed:
  - -Finishing -Orig. ► Copy
  - -Paper -Date
  - -Page -Distribution # -No. of copies -Image Stamping
- A pen mark A appears above the key of the function changed.
- To change the number of copies to be made, press the c key and set the new number.

### **Delete**

Delete allows you to delete a job previously set.

<To delete a job on the print queue>

Touch Delete

Jo	b List			No	ext	Exit
	Mode Check	[	Change	Dele	ete	
*	Orig	Сору	Input Time	Fin. Time	Stat-	Device
0	999	999	10:05	10:50	Print	Copier
0	1	5	10:09	10:55	Wait	Copier
0	9	99	10:12	11:00	Wait	Printer
0	19	20	10:19	D>:05	Wait	Copier
Θ	999	52	11:05	<b>⊅</b> :45	Scan	Copier
Mei Fre	nory e	100	)% т	ime	10:	10

1155O393CA

Touch the job no. key to be deleted.

	Mode Check	_ 0	hange	Delo	ete	
#	Orig	Сору	Input Time	Fin. Time	Stat-	Device
0	999	999	10:05	10:50	Print	Copier
0	1	5	10:09	10:55	Wait	Copier
0	9	99	10:12	11:00	₩ait	Printer
0	19	20	10:19	<b>⊅</b> +95	Wait	Copier
6	999	52	11:05	121:45	Scan	Copier

1155O394CB

Touch Yes 3




1155O395CB


Touch Exit .

<To delete a job being scanned or printed>

Press the Stop key while the job in queue is being scanned or printed.

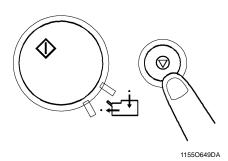

Touch **Delete Printing Job** or 2 **Delete Scanning Job** 

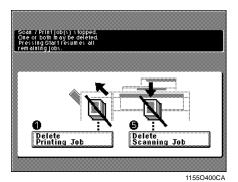

Useful Tip


Pressing the Stop key stops the scanning or printing action being performed.

Press the Start key. 3

### Unlock

A confidential document transmitted by a personal computer is unlocked when a password is entered, putting it in the print queue. A confidential document is identified with "Lock" in the status column.

1 Touch Unlock.

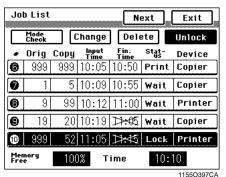


**2** Enter a 4-digit password from the 10-Key Pad.



1155O684CA

**3** This unlocks the job, putting it in the print queue (status changes to "Wait").

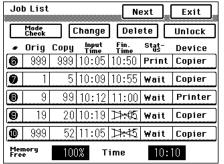

1155O399CA


### **NOTES**

- All jobs are unlocked if the password matches that entered.
- An unlocked job is placed at the end of the jobs on the print queue.

# **Making Different Types of Copy**

These pages explain about how to combine different functions to make various types of copy.

### Reading the Table

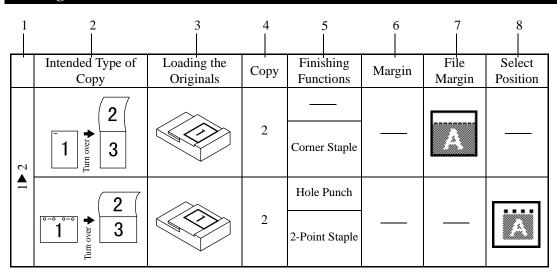

- 1. Shows whether the copy is 1-sided or 2-sided.
- 2. Shows what type of copy you want to make.
- 3. Shows how to load your original. Tp. 3-4
- 4. Shows which to set, either 1, 2, 2in1, or 4in1 for Original ▶ Copy. ☞p. 3-34
- 5. Shows which to set, either Corner Staple, 2-Point Staple, or Hole-Punch for the finishing function. ☞ p. 3-20
- 6. Shows the margin position to be set for your original. @p. 3-37
- 7. Shows the file margin function to be set as an auxiliary function. \$\infty\$p. 3-54
- 8. Shows that the stapling position or hole punch positions must be set using the Select Position key. ☞p. 3-23, 3-24

<sup>\*</sup>The marker "-" in the table indicates that no key setting is necessary.

# Making Copies from 1-Sided Originals

	Intended Type of Copy	Loading the Originals	Сору	Finishing Functions	Margin	File Margin	Select Position
	1 mu over 2		1	Corner Staple			
	1 John Ower 2		1	Corner Staple		_	
	Tum over 2		1	Hole Punch 2-Point Staple			
1	1 January 2		1	Hole Punch 2-Point Staple			A
1	1 - 2 - 2		1	Corner Staple			
	1 *** 2		1	Corner Staple			
	2 mu ower 4		1	Hole Punch  2-Point Staple			
	1 2		1	Hole Punch 2-Point Staple			Ä

	Intended Type of Copy	Loading the Originals	Сору	Finishing Functions	Margin	File Margin	Select Position
	1 2 • 3 4		1[2in1]	Corner Staple			
	1 2  3 4		1[2in1]	Corner Staple			
		$\sim$		Hole Punch			
	1 2 on mar 3 4		1[2in1]	2-Point Staple			A
				Hole Punch			
1	1 2 over 1 3 4		1[2in1]	2-Point Staple			
	-						
	1 2 January 3 4		1[2in1]	Corner Staple			
		<i>∕</i> ≈					
	1 2 3 4		1[2in1]	Corner Staple			
				Hole Punch			
	0 1		1[2in1]	2-Point Staple			
		~~		Hole Punch			
	1 3 4		1[2in1]	2-Point Staple			A

	Internal ATT CC	Loading the	G.	Finishing	М	File	Select
	Intended Type of Copy	Originals	Copy	Functions	Margin	Margin	Position
	1 2 basso mar. 5 6 7 8		1[4in1]	Corner Staple			
			1[4in1]				
	1 2 5 6 7 8			Corner Staple			
				Hole Punch			
	\$1 2   5 6   7 8   7 8		1[4in1]	2-Point Staple			
		_		Hole Punch			
1▶1	1 2 5 6 7 8		1[4in1]	2-Point Staple			A
=							
	1 2 to the second of the secon		1[4in1]	Corner Staple			
		~~					
	1 2 1 5 6 7 8 5 6 7 8		1[4in1]	Corner Staple			
		<u>~</u>		Hole Punch			
	6 1 2 5 6 7 8 5 6 7 8		1[4in1]	2-Point Staple			
		_		Hole Punch			
	1 2 1 5 6 7 8 mn		1[4in1]	2-Point Staple			Α

	Intended Type of Copy	Loading the Originals	Сору	Finihsing Functions	Margin	File Margin	Select Position
	1 over 2 3		2	Corner Staple			
	1 loo unt 3		2	Corner Staple		Á	
		<i></i>		Hole Punch			
	2 3		2	2-Point Staple			
	2	<i>→</i>		Hole Punch			
1▶2	1 Januard 3		2	2-Point Staple			Α
	1 2 3		2	Corner Staple		A	
	2						
	1 • 2 3		2	Corner Staple			
		<i>∕</i> ≈		Hole Punch			
	1 2 3		2	2-Point Staple		Å	
	2	<i>→</i>		Hole Punch			
	1 draw omut 3		2	2-Point Staple			A

			1	T		I .	
	Intended Type of Copy	Loading the Originals	Сору	Finishing Functions	Margin	File Margin	Select Position
	1 2 3 4 5 6		2[2in1]	Corner Staple			
	1 2 • 3 4 5 6	2	2[2in1]	Corner Staple			_
		<i>→</i>		Hole Punch			• ********
	\$\frac{1}{2}\$ 1 2 \$\frac{1}{2}\$ 3 4 5 6		2[2in1]	2-Point Staple	_		
	(3 4 (			Hole Punch			
<b>&gt;</b> 2	1 2 1 5 6		2[2in1]	2-Point Staple			
1	- <b>\</b> 2		2[2in1]				
	1 2 3 5 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6			Corner Staple			
	$\begin{pmatrix} 3 \\ 4 \end{pmatrix}$						
	1 2 5 6 6		2[2in1]	Corner Staple		Å	
				Hole Punch			
	0-1 1 3 4 6 6 6		2[2in1]	2-Point Staple			
	3			Hole Punch			
	1 2 5 6		2[2in1]	2-Point Staple			A

	Intended Type of Copy	Loading the Originals	Сору	Finishing Functions	Margin	File Margin	Select Position
	1 2 so und 7 8 11 12		2[4in1]	Corner Staple			
	5 6 7 8 9 10 3 4 11 12		2[4in1]	Corner Staple	_	á	
		~~		Hole Punch			
	5 6 9 10 7 8 11 12		2[4in1]	2-Point Staple			
	5 6			Hole Punch			
<b>1▶</b> 2	7 8 1 2 3 4 9 10 11 12		2[4in1]	2-Point Staple			A
1	_						
	1 2 5 6 9 10 11 12 may a series of the serie		2[4in1]	Corner Staple			
	5 6						
	7 8 9 10 11 12		2[4in1]	Corner Staple			
				Hole Punch			
	5 6 9 10 7 8 11 12		2[4in1]	2-Point Staple		A	
	5 6 7 8			Hole Punch			
	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0		2[4in1]	2-Point Staple			Â

# Making Copies from 2-sided Originals to be Stapled on Left Edge

	Intended Type of Copy	Loading the Originals	Сору	Finishing Functions	Margin	File Margin	Select Position
	1 monomer 2		1	Corner Staple			
	1 Description 2		1	Corner Staple			
	1 Jun over 2		1	Hole Punch 2-Point Staple			
1	1 John Owen. 2		1	Hole Punch 2-Point Staple			A
2▶1	1 Department 2		1	Corner Staple	*		
	1 Day Own 2		1	Corner Staple	**		
	2 mm ower 4		1	Hole Punch  2-Point Staple	- 42		
	1 Danie 2		1	Hole Punch  2-Point Staple	A		4

	Intended Type of Copy	Loading the Originals	Сору	Finishing Functions	Margin	File Margin	Select Position	
	1 2 • 3 4		1[2in1]	Corner Staple				
	1 2 3 4		1[2in1]	Corner Staple				
		<i>→</i>		Hole Punch			• *******	
	\$\frac{1}{2} \text{ 1 2} \text{ 1 3 4}		1[2in1]	2-Point Staple			Â	
		<i></i>		Hole Punch				
2▶1	1 2 3 4		1[2in1]	2-Point Staple				
21	1 2 over 4		1[2in1]	Corner Staple	á	_		
	1 2 3 4 4		1[2in1]	Corner Staple	~4			
				Hole Punch				
	3 4 4		1[2in1]	2-Point Staple				
	3 4		1[2in1]	Hole Punch  2-Point Staple	à			

		I andi	I	Dimichin -		File	Select	
	Intended Type of Copy	Loading the Originals	Copy	Finishing Functions	Margin	File Margin	Position	
	<b>→</b>							
	1 2 January 5 6 7 8 7 8		1[4in1]	Corner Staple				
		$\sim$						
	1 2 soo unL 3 4 T 8		1[4in1]	Corner Staple				
		$\sim$		Hole Punch				
	\$1 2 \$3 4 \$3 4 \$7 8		1[4in1]	2-Point Staple				
		<i></i>		Hole Punch			A	
2▶1	1 2 5 6 7 8		1[4in1]	2-Point Staple				
2			1[4in1]					
	1 2 mm over 7 8 5 6 7 8			Corner Staple	- 2			
	1 2 3 4 5 6 7 8		1[4in1]	Corner Staple				
				Hole Punch				
	\$\begin{align*} 6 1 2 \\ 6 3 4 \\ 7 8 \end{align*}  \text{5 6 } 7 8		1[4in1]	2-Point Staple	*			
				Hole Punch				
	1 2 5 6 7 8 mg.		1[4in1]	2-Point Staple	A		Â	

	Intended Type of Copy	Loading the Originals	Сору	Finishing Functions	Margin	File Margin	Select Position
	1 over 2 3		2	Corner Staple			
	1 and 1 and 2 3		2	Corner Staple		Á	
	1		2	Hole Punch			
	Tum c	***		2-Point Staple			
2▶2	2 3		2	Hole Punch 2-Point Staple			À
21	1 2 3		2	Corner Staple	· d	á	
	1 • 2 3		2	Corner Staple	, sa		
	1		2	Hole Punch  2-Point Staple	À	À	
	2 3		2	Hole Punch 2-Point Staple	á		Å

			ı	T	T	1	
	Intended Type of Copy	Loading the Originals	Сору	Finishing Functions	Margin	File Margin	Select Position
	1 2 3 4 5 6		2[2in1]	Corner Staple		À	
	1 2 \$\int\( \) 5 6		2[2in1]	Corner Staple	_	_	
			0.501 43	Hole Punch			•
	1 2 3 4 5 6		2[2in1]	2-Point Staple			Å
	(34(	<i>→</i>		Hole Punch			_
<b>&gt;</b> 2	1 2 1 5 6		2[2in1]	2-Point Staple			
21			2[2in1]				
	1 2 3 5 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6			Corner Staple			
	$\begin{pmatrix} 3 \\ 4 \end{pmatrix}$						
	1 2 5 6		2[2in1]	Corner Staple	Â	*	
				Hole Punch			
	1 3 4 5 6 6		2[2in1]	2-Point Staple	Å		
	3	~		Hole Punch	**		
	1 5 6 6		2[2in1]	2-Point Staple		—	Â

	Intended Type of Copy	Loading the Originals	Сору	Finishing Functions	Margin	File Margin	Select Position
	1 2 3 4 In 12 5 6 9 10 7 8 11 12		2[4in1]	Corner Staple			
	5 6 7 8 9 10 3 4 11 12		2[4in1]	Corner Staple		á	
		~~		Hole Punch			
	5 6 9 10 7 8 11 12		2[4in1]	2-Point Staple			
	5 6 7 8		2[4in1]	Hole Punch			A
2▶2	1 2 9 10 3 4 11 12			2-Point Staple			
21	1 2 5 6 9 10 7 8 11 12		2[4in1]	Corner Staple	, st	à	
	5 6 7 8						
	1 2 9 10 11 12		2[4in1]	Corner Staple			
				Hole Punch			
	5 6 9 10 7 8 11 12		2[4in1]	2-Point Staple		A	
	5 6 7 8	<i>→</i>		Hole Punch			
	***		2[4in1]	2-Point Staple			A

# Making Copies from 2-sided Originals to be Stapled on Top Edge

	Intended Type of Copy	Loading the Originals	Сору	Finishing Functions	Margin	File Margin	Select Position
	1 muonent 2		1	Corner Staple	A		
	1 ano unit		1	Corner Staple	A		
	on the second of the second o		1	Hole Punch  2-Point Staple	, va		
2▶1	1 non out. 2		1	Hole Punch  2-Point Staple	, vi		
21	1 December 2		1	Corner Staple			
	1 1 2		1	Corner Staple			
	2 mm over 2		1	Hole Punch 2-Point Staple			
	1 2		1	Hole Punch 2-Point Staple			Ä

	Intended Type of Copy	Loading the Originals	Сору	Finishing Functions	Margin	File Margin	Select Position
	1 2 • 3 4		1[2in1]	Corner Staple	A	A	
	1 2 ** 3 4		1[2in1]	Corner Staple			
	°12 → 34		1[2in1]	Hole Punch 2-Point Staple	Á		ia
1	1 2 3 4		1[2in1]	Hole Punch  2-Point Staple	Á		
2▶1	1 2 January 3 4		1[2in1]	Corner Staple			
	1 2 3 4		1[2in1]	Corner Staple			
	1 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0		1[2in1]	Hole Punch 2-Point Staple		A	
	1 3 4		1[2in1]	Hole Punch 2-Point Staple			

		Y 11 .1	l	T	ı	T2'1	G 1 .
	Intended Type of Copy	Loading the Originals	Copy	Finishing Functions	Margin	File Margin	Select Position
	1 2 5 6 7 8	Oliginals -	1[4in1]	Corner Staple	A.		
	1 2 too unit 5 6 7 8		1[4in1]	Corner Staple	á		
	©1 2		1[4in1]	Hole Punch 2-Point Staple	A		
	1 2 5 6 7 8		1[4in1]	Hole Punch 2-Point Staple	A		A
2▶1	1 2 Jano umL 5 6 7 8		1[4in1]	Corner Staple			_
	1 2 sao umL 5 6 7 8		1[4in1]	Corner Staple			_
	5 6 7 8		1[4in1]	Hole Punch 2-Point Staple			
	1 2 5 6 7 8		1[4in1]	Hole Punch 2-Point Staple			Α

	Intended Type of Copy	Loading the Originals	Сору	Finishing Functions	Margin	File Margin	Select Position
	1 ower 2 3		2	Corner Staple			
	1 lovo unu 3		2	Corner Staple	A	A	
	1 mu over 2 3		2	Hole Punch 2-Point Staple	*		
2▶2	2 1 1 3		2	Hole Punch  2-Point Staple			
2	1 2 3		2	Corner Staple		á	
	1 ** 2 3		2	Corner Staple			_
	2 3		2	Hole Punch 2-Point Staple		A	
	2 3		2	Hole Punch 2-Point Staple			


	Intended Type of Copy	Loading the Originals	Сору	Finishing Functions	Margin	File Margin	Select Position			
	1 2 3 4 5 6		2[2in1]	Corner Staple	Á		_			
	1 2 one 5 6		2[2in1]	Corner Staple	Å					
		<i>→</i>		Hole Punch			- >>>>			
	1 2 3 4 5 6		2[2in1]	2-Point Staple	Å		Â			
	(3 4 (		2[2in1]	Hole Punch	, w		_			
<b>2</b>	1 2 Day 5 6			2-Point Staple						
2			2[2in1]							
	1 2 over 4 6			Corner Staple						
	3					À				
	1 2 5 6 6		2[2in1]	Corner Staple						
				Hole Punch						
	1 3 5 6 6		2[2in1]	2-Point Staple						
	(3)	<i>→</i>		Hole Punch						
	1 5 6		2[2in1]	2-Point Staple			Å			

	Intended Type of Copy	Loading the Originals	Сору	Finishing Functions	Margin	File Margin	Select Position
	1 2 3 4 5 6 9 10 7 8 11 12		2[4in1]	Corner Staple	A		
	1 2 5 6 7 8 9 10 11 12		2[4in1]	Corner Staple	A	A	
	5 6 9 10 7 8 11 12		2[4in1]	Hole Punch 2-Point Staple	Á		
	5 6 7 8	<i>→</i>	2[4in1]	Hole Punch			
<b>&gt;</b> 2	1 2 by 9 10 11 12			2-Point Staple	A		Α
<b>2</b> ▶		2	2[4in1]			Á	
	1 2 5 6 9 10 7 8 11 12			Corner Staple			
	5 6 7 8	<i> → →</i>					
	1 2 3 4 50 11 12 12 13 14 15 15 15 15 15 15 15 15 15 15 15 15 15		2[4in1]	Corner Staple			
				Hole Punch			
	5 6 9 10 7 8 11 12		2[4in1]	2-Point Staple		A	
	(5 6 (			Hole Punch			
	7 8 1 2 9 10 3 4 9 10 11 12		2[4in1]	2-Point Staple			A


### Precautions When Making Copies on A3L or B4L

When making copies on A3L or B4L, make sure of the correct direction of the original, position of 2point staple, and position of hole-punch.

If you load your original as shown below, select as part of your steps to specify the Direction of Original.

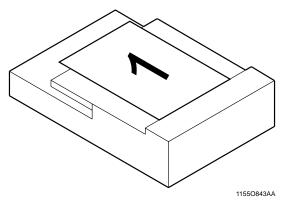

When making copies on A3L or B4L, 2-point staple or hole punch cannot be made in any of the following positions.

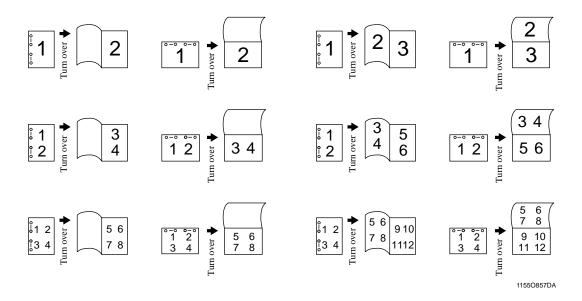

# **Chapter 4**

**Using the Utility Mode** 

# 1. Job Memory Input and Job Recall

### Job Memory Input


Up to 10 different, frequently used copy job programs can be stored in memory and recalled later as necessary. If "100 Accounts" is selected for "Copy Track" of "Administrator Mode" available from User's Choice, up to 10 different jobs can be stored in memory for each account.

### Storing a Job

- 1 Set up the job you want to store in memory.
- **?** Press the Utility key.




3 Touch Job/Zoom mem. Input

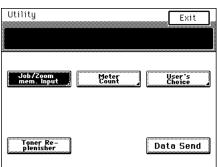


1155O571CA

4 Touch Job Memory Input

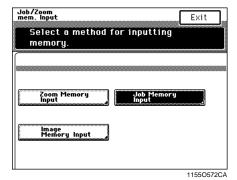


5 Select any one of the 10 job number keys from 1 to 10 marked with ...

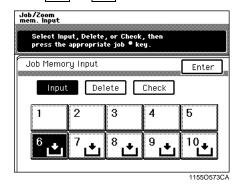

NOTE


A job number key not marked with indicates that a job has already been stored under that number. If you store a new job in that number key, the old job is erased.

To check for the details of the job stored, touch **Check** and then touch the job number key.

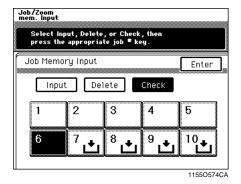




The job settings appear on the Touch Panel.

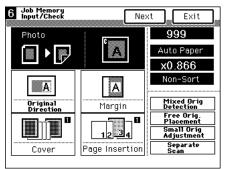

1155O575CA

- After you have checked the settings, touch Exit .
- Touch Enter . 8

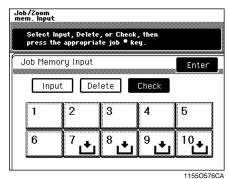


### **Deleting a Job Program**

Press the Utility key.




Touch Job/Zoom mem. Input

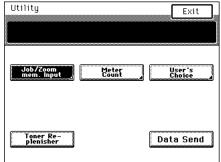


1155O571CA

Touch Job Memory Input 3

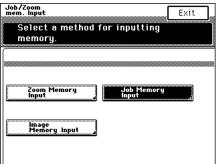

1155O572CA


Touch **Delete**, then touch the job number key from which you want to delete a job program.

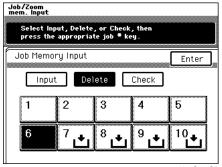

1155O577CA

When <u></u> appears in that key, it indicates that the job program has been deleted.

Touch Enter . 5

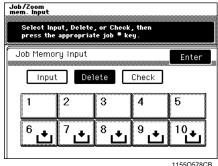


1155O578CB

# **Recalling a Job from Memory**


Press the Job Recall key.



Touch the job number key in which the desired job has been stored.

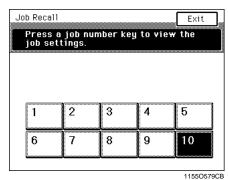

3 Check the settings made and then touch **Exit** . The copier is set up for these settings and the Basics screen reappears.

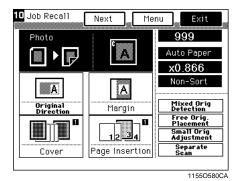

If the job recalled is not what you want, touch **Menu** . Then, the Job Recall screen reappears.

# 2. Zoom Memory Input


Up to two different, frequently used zoom ratios can be stored in memory so you can use them later whenever necessary. For the Mini Redu ratio, ×0.930 has been factory-set, but that can be changed as necessary. If "100 Accounts" is selected for "Copy Track" of "Administrator Mode" available from User's Choice, zoom ratios can be stored in memory for each account.

### **Storing a Zoom Ratio**


**1** Press the Utility key.




2 Touch Job/Zoom mem. Input

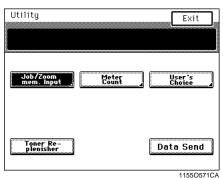

3 Touch Zoom Memory Input

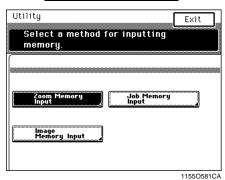

4 Using the 10-Key Pad, enter the desired zoom ratio.

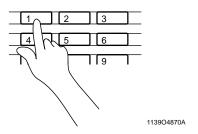


### Useful Tips

• For example, enter ×1.234 as  $\boxed{1}$ ,  $\boxed{2}$ ,  $\boxed{3}$ , and  $\boxed{4}$ , in that order.



- To correct an entry, press the C key, then enter the new ratio.
- The zoom ratio can range from  $\times 0.250 \sim \times 4.000$ .
- The Mini Redu ratio can range between  $\times 0.900 \sim \times 0.999$ .
- Touch the desired number key in which you want to store the zoom ratio, either 1 or 2. When the zoom ratio is properly stored in the number key, the ratio appears on the number key.

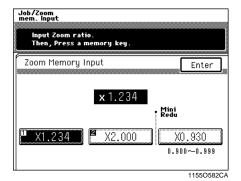


### NOTE

When a new zoom ratio is stored in a key number, the old one stored in that key number is lost.



Touch Enter .

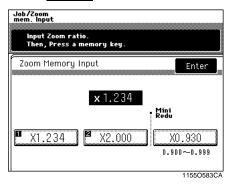

### Useful Tips

• A zoom ratio using X/Y Zoom can be stored in memory on the screen with which to recall a X/Y Zoom ratio.

Storing a Ratio in Memory \$\infty\$p. 3-19

• Custom Zoom may also be used to store a zoom ratio.

Storing a Ratio in Memory @p.3-18

# 3. Image Memory Input

# **Image Memory Input**


Up to five different, frequently used characters and marks can be stored in memory so you can use them later whenever necessary.

### Storing an Image


**1** Press the Utility key.




7 Touch Job/Zoom mem. Input

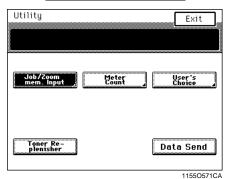

3 Touch Image Memory Input

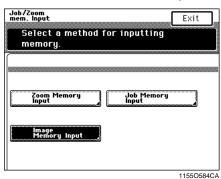


Touch Input, then touch the desired image number key, in which you want to store the image.

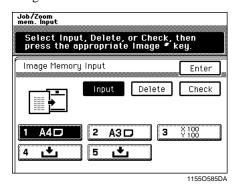

### NOTE


An image number key not marked with indicates that an image has already been stored under that number. If you store a new image in that number key, the old image is erased.

5 Select the size of the original, from which to store an image.

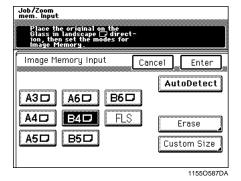

<Auto size detection>


• Touch **AutoDetect** on the screen given in step 5.

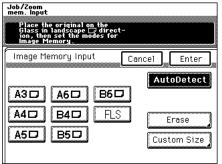


1155O589DA

<Size input>

• Touch **Custom Size** on the screen given in step 5.

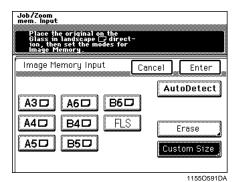


• Touch | X | or | Y | and enter the original size from the 10-Key Pad.

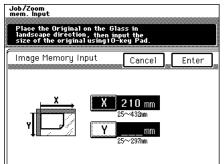

1155O593DA

• Touch **Enter** 


6 If you want to erase the image on the left, top, or along the frame of the original, touch Erase .

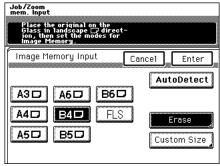

1155O595DA


You have a choice of the following three types of erase:

 · Left edge erase Stores the image after erasing the left edge of the original.




• Top edge erase

Stores the image after erasing the top edge of the original.

 


• Frame erase

Stores the image after erasing the four edges of the original.

 


#### 3. Image Memory Input

**7** Select the desired erase position.

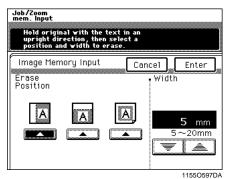

8 Using the or key, set the desired erase width.

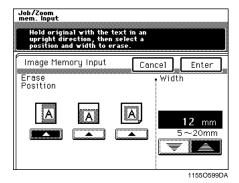


Useful Tip


The erase width can range between  $5 \sim 20$  mm variable in 1 mm increments.

**9** Touch Enter


10 Touch Enter

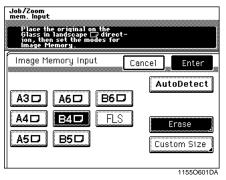

As illustrated on the Touch Panel, place the original directly on the Original Glass.

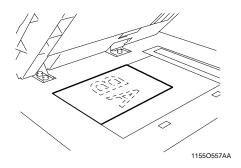

12 Select an image orientation the same as that of the original.

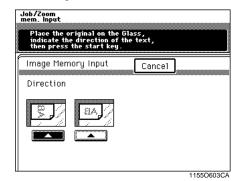


13 Press the Start key.

### **Checking the Programmed Image**

**1** Press the Utility key.




7 Touch Job/Zoom mem. Input

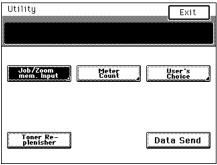


1155O571CA

Touch Image Memory Input

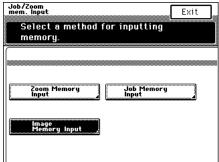


1155O584CA

**4** Touch **Check**, then touch the number key to be checked.

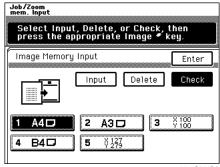

1155O604DA

**5** Select the copy paper.

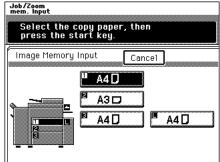

1155O606DA

6 Press the Start key and the programmed image is printed on the copy.

### Useful Tip

Programmed images may be checked by using the screen for calling up a preprogrammed image.


Checking the Preprogrammed Image @p. 3-64

### **Deleting a Programmed Image**

Press the Utility key.




Touch Job/Zoom mem. Input .

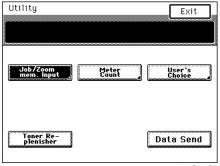


1155O571CA

Touch Image Memory Input 3

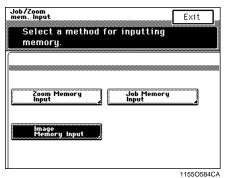

4 to be deleted.

Touch **Delete**, then touch the number key

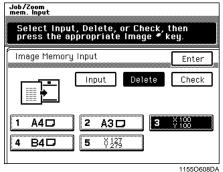

Touch Enter . 5

# 4. Meter Count and Toner Replenisher

#### **Meter Count**

Touching **Meter Count** allows you to check the total count of each of the following seven counters.

#### **Total Counter**

Shows the total number of copies made since the installation of the copier.

# **Size Counter**

Shows the number of copies made on copy paper of a preset size. (The size will be set by your Tech. Rep.)

# 2-Sided Total

Shows the number of 2-sided copies made.

# 2-Sided Size

Shows the number of 2-sided copies made on copy paper of a preset size (the same size as set for Size Counter).

# **Account Total**

Shows the total number of copies made by the active accounts.

# **Printer Total Counter**

Shows the total number of prints produced by the copier configured as a printer.

#### **Printer Size Counter**

Shows the number of prints produced by the copier configured as a printer on paper of a size preset for Size Counter.

# **Toner Replenisher**

Touching Toner Replenisher sets the copier into the auxiliary toner replenishing mode. The copier tends to exhaust the supply of toner rapidly when making a number of copies from an original with dark solid areas such as a photo. As a result, the image density of the copy will become lighter. In such a case, you can use Toner Replenisher to regain the normal image density quickly.


#### NOTES

- Do not turn OFF the Power Switch or open the Front Door while the copier is replenishing toner.
- Toner is not replenished if the image density is sufficiently high.
- The toner replenishing sequence ends automatically.

# 5. User's Choice

The copier has been set so that the most frequently used settings are automatically selected in the initial mode. User's Choice allows you to select the default settings which are automatically selected in the initial mode according to your own needs. By setting defaults that are most frequently used, time and effort to make extra settings will be eliminated when the copier is turned ON or when Auto Panel Reset is activated.

# **User's Choice Functions**

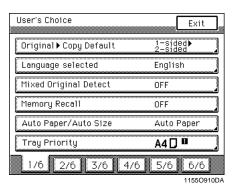

A listing of User's Choice functions is given in six pages of menu, from 1/6 to 6/6. To show the listing of each page, touch the desired page number key at the bottom of the Touch Panel.

1/6	4/6 @p. 4-18
Original ► Copy Default	Confirmation Beep
Language Selected	
Mixed Original Detect	
Memory Recall	
Auto Paper/Auto Size	
Tray Priority	
2/6	5/6
2in1, 4in1, Booklet Copy Zoom	Universal Tray
Exposure Priority	Special Paper
Default Level	Auto Panel Reset
Output Priority	Energy Save Mode
Intelligent Sorting	Plug-in Counter Reset
Criss Cross Mode	Auto Shut OFF
3/6	6/6 ©p. 4-19
Realign Warning	Date/Time Set
"Small" Originals	Print Exposure
4in1 Copy Order	Priority Device
Date Printing Format	Density (ADF)
Date Printing Position	Priority Offset Tray
Page Number Position	Administrator Mode

#### Useful Tips

- When "100 Accounts" is selected, the User's Choice functions of 1/6 to 4/6 can be set for each account after the corresponding access code has been entered. Note, however, that when "100 Accounts" is selected, the listing of User's Choice displayed on the Touch Panel is from 1/4 to 4/4.
- The administrator can make the User's Choice settings in common with all 100 accounts after "100 Accounts" has been selected.
- ① With the Touch Panel prompting you to enter the access code, press the Utility key.
- ② Touch User's Choice
- 3 Enter the administrator number from the 10-Key Pad.
- \*This allows the administrator to make the settings for 1/6 to 6/6.

#### NOTE

The User's Choice settings in common with 100 accounts for 1/6 to 4/6 are not valid for the accounts for which the individual User's Choice settings have been made after "100 Accounts" was selected.

1/6

# **Original** ▶ Copy Default

Specify the original ▶ copy type automatically selected when power is turned ON or panel reset.

The initial setting is 1-Sided ▶ 2-Sided. Consult your Technical Representative if you want to change the setting to 1-Sided ▶ 1-Sided.

# Language Selected

Select the language of the Touch Panel messages. The initial setting is "English."

# **Mixed Original Detect**

Select whether to default to Mixed Original Detection ("ON") or not ("OFF") when power is turned ON or panel reset.

The initial setting is "OFF."

- \* If the following combination is set at a time in User's Choice, the Mixed Orig. Detect will be automatically canceled and the copies are made in 1 ▶ 2 copy mode.
  - Original ► Copy Default: 1-sided ► 2-sided
  - Mixed Orig. Detect: ON

# **Memory Recall**

Select whether to enable ("ON") the function that allows you to use the same image data of the copy cycle that has just been completed or not ("OFF"). The initial setting is "OFF."

# Auto Paper/Auto Size

Specify the default mode selected automatically when power is turned ON or panel reset, either "Auto Paper," "Auto Size," or "Manual."

The initial setting is "Auto Paper."

# **Tray Priority**

Specify the default paper source that is automatically selected.

The initial setting is "1" (1st Drawer).

# 2in1, 4in1, Booklet Copy Zoom

Select whether to enable ("ON") or disable ("OFF") recalling a default zoom ratio for 2in1, 4in1, or Booklet Creation. Setting is possible for "2in1/4in1" and "Booklet Creation."

• "2in1/4in1"

Default zoom ratios:

2in1: 0.707 4in1: 0.500

The initial setting is "ON."

• "Booklet Creation"

Default zoom ratio:

Booklet Creation: 0.707 The initial setting is "ON."

# **Exposure Priority**

Select the default exposure mode selected automatically when power is turned ON or panel reset, either "Auto Exposure" or "Manual."

The initial setting is "Auto Exposure."

#### **Default Level**

#### Auto

Select the default exposure level in the Auto Exposure mode, either "Lighter," "Normal," or "Darker."

 
The initial setting is "Normal."

#### Manual

Set the default exposure level in the Manual Exposure mode.

The initial setting is "5."

\* With EXP5 at the central level, the exposure level will become lower as the number becomes smaller, and it will become higher as the number becomes greater.



# **Output Priority**

Select the default finishing type when the copier is equipped with a Finisher from among the following: Non-Sort, Sort, Group, Non-Sort + Hole Punch, Sort + Hole Punch, Sort + Corner Staple, Sort + Corner Staple + Hole Punch, \*Sort + 2-Point Staple, \*Sort + 2-Point Staple + Hole Punch, Group + Hole Punch, Group + Corner Staple, Group + Corner Staple + Hole Punch, \*Group + 2-Point Staple, \*Group + 2-Point Staple + Hole Punch.

The initial setting is "Non-Sort." \*Only when the Finisher FN-3 is mounted.

# **Intelligent Sorting**

Select whether to turn "ON" or "OFF" the function that automatically switches between Sort and Non-Sort, selecting Non-Sort if only a single original is loaded and Sort if two or more originals are loaded in the Electronic Document Handler.

The initial setting is "ON."

#### **Crisscross Mode**

Select whether to enable ("ON") or disable ("OFF") crisscross sorting when the conditions for crisscross sorting are met and Sort or Group is selected.

The initial setting is "ON."

## **Realign Warning**

Select whether to give ("ON") a warning message or not ("OFF") when the original is placed out-of-alignment on the Glass.

The initial setting is "OFF."

# "Small" Originals

Select whether to enable ("ON") a copy cycle or not ("OFF") when it is initiated by pressing the Start key with no originals placed on the Original Glass or with an original smaller than the detectable size placed on the Glass in the Auto Paper mode.

If this function is turned "ON," the copy cycle is run using the paper loaded in the default paper source. If turned "OFF," a warning message appears to instruct the user to select the paper.

The initial setting is "OFF."

# 4in1 Copy Order

Select the default copying order in the 4-in-1 mode from among the following two:

1 2	1
3 4	2

The initial setting is 3 4

# **Date Printing Format**

Select the format for date printing, i.e., "punctuation," "date format," and "year."

 "Punctuation" can be either XX/XX/XX or XX.XX.XX.

The initial setting is XX/XX/XX.

- "Date Format" can be either '98/12/27, 12/27/'98, DEC/27/'98, 27/12/'98, or 27/DEC/'98.
  The initial setting is '98/12/27.
- "Year" can be either 'yy or yyyy.
   The initial setting is 'yy.

# **Date Printing Position**

Enter the position at which to print the date by X and Y from the 10-Key Pad. The dimension can range from 4 mm  $\sim$  40 mm.

The initial setting is X: 8 mm, Y: 20 mm.

# **Page Number Position**

Enter the position at which to print the page number from the 10-Key Pad. It can range from 4 mm ~ 40 mm from the bottom of the page.

The initial setting is 8 mm.

#### **Confirmation Beep**

Select whether to turn "ON" or "OFF" the beep that sounds each time a key on the Touch Panel is touched.

The initial setting is "ON."

5/6

# **Universal Tray**

Select the default paper size detection for the Universal Tray, either Auto Detect or Custom Size. The initial setting is "Auto Detect."

# **Special Paper**

Designate a drawer for special paper. The initial setting is "Normal" for all drawers. See p. 3-10 for Special Paper Setting.

# Auto Panel Reset

Select the time it takes the auto panel reset function to be activated from among "30 seconds," "1 min.," "2 min.," "3 min.," or "5 min.," or not activate the function at all ("No Reset").

The initial setting is "1 min."

# **Energy Save Mode**

Set the time it takes the copier to enter the Energy Saver mode, from 1 min. ~ 240 min. (in 1 min. increments).

The initial setting is "15 min."

# Plug-In Counter Reset

Select whether to reset the panel ("ON") or not ("OFF") when the Plug-In Counter is pulled out of the copier or a magnetic card is pulled out of the Data Controller.

The initial setting is "ON."

# Auto Shut Off

Select the time it takes the Auto Shut Off function to be activated, from 15 min. ~ 240 min. in 1 min. increments. Auto Shut Off shuts down the copier a given period of time after the last operation.

The initial setting is 90 min.

\*A setting is also possible to disable Auto Shut Off.

# **Date/Time Set**

Set the date and time-of-day.

The initial setting is "1997/04/01, 00:00:00."

# **Print Exposure**

Select the print exposure level from among "Lighter," "Normal," or "Darker."

The initial setting is "Normal."

# **Priority Device**

Select the configuration of the Di620, either as a "Copier" or "Printer."

The initial setting is "Copier."

#### Density (ADF)

Select the density level according to the original, either Mode 1 or Mode 2.

The initial setting is "Mode 1."

Mode 1: Used for the standard original, such as a word-processor made document.

Mode 2: Effective in reproducing a pale original, such as a faint pencil-written document.

# **Priority Offset Tray**

<Only when the Fnisher FN-3 is mounted> Select the output tray into which copied paper is to be fed, either "Top Tray" or "Bottom Tray."

The initial setting is "Top Tray."

#### **Administrator Mode**

This mode is used only by the administrator of your copier. When Administrator Mode is selected, the copier prompts you to enter your "Administrator's #." The following functions can be set only when the correct administrator number is entered.

- Copy Track
- Max. Copy Sets
- Non-Auto Shut Off
- User Help

The administrator number is set by the Technical Representative. For more details, consult your Technical Representative.

See p. 4-22 for setting the Copy Track function.

#### <Copy Track>

This function allows the administrator to keep track of the number of copies made in the Copier mode and the number of prints made in the Printer mode for each account.

Select whether to turn "ON" or "OFF" the Copy Track function for "Copier" or "Printer" and select the Copy Track Method, either "100 Accounts" or "1000 Accounts."

The initial setting is "OFF."

When "100 Accounts" is selected:

◆Access Code:

You can program or change your access code (for a max. of 100 accounts).

**♦**Copy Limit:

You can limit the maximum number of copies that can be made.

◆Total Count:

Displays the count of the Total Counter. You can also clear the counter.

♦Size Count:

Displays the count of the Size Counter. You can also clear the counter.

◆ Account No.:

Program or change the account number.

When "1000 Accounts" is selected:

◆Total Count:

Displays the count of the Total Counter. You can also clear the counter.

5. User's Choice

6/6

<Max. Copy Sets>

Limit the number of copies or copy sets that can be made per job.

The initial setting is "OFF."

<Non-Auto Shut Off>

This function can disable the Auto Shut Off function.

Select whether to enable ("ON") or disable ("OFF") the Non-Auto Shut Off function.
The initial setting is "OFF" (disable).

<User Help>


Set the help code to be transmitted by the user when a Data Terminal is mounted. For more details, consult your Technical Representative.

# Making the User's Choice Settings


Press the Utility key.




Touch User's Choice

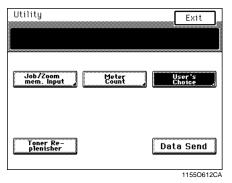


Select the key of the page number on which 3 the desired User's Choice function is listed. For example, to change Output Priority from Non-Sort to Sort, touch 2/6

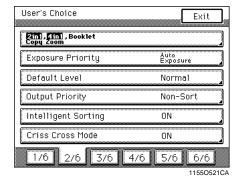

Touch the key of the desired User's Choice function. For example, touch Output Priority

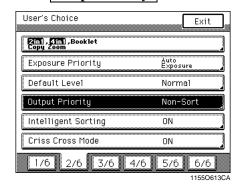

Touch Sort . 5

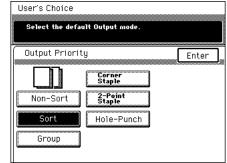

1155O614CA

- Touch Enter .
  - \*Repeat steps 3 to 6 to make new settings for other User's Choice functions.
- Touch Exit .

# **Copy Track Function**


The administrator of the copier should make the setting, either "100 Accounts" or "1000 Accounts." \*If "100 Accounts" is selected, it is possible to make the User's Choice settings for each account.

# **Setting the Copy Track Function**


**1** Press the Utility key.




7 Touch User's Choice .

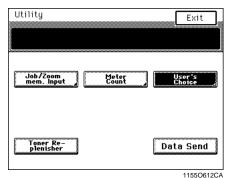


3 Touch 6/6.

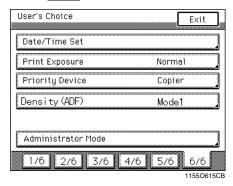

4 Touch Administrator Mode

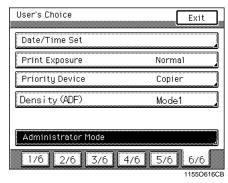


5 Enter the administrator number from the 10-Key Pad.

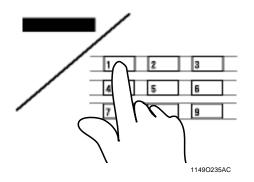

#### **NOTES**

- Your Technical Representative is to program and change the administrator number. For details, consult your Technical Representative.
- The administrator should remember the administrator number.


6 Touch Copy Track

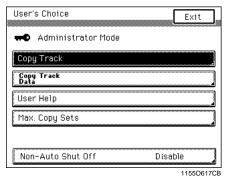

7 Touch ON or OFF of the desired configuration (Copier or Printer), then select the appropriate Copy Track Method. For example, to keep track of 100 accounts, touch 100 Accounts, and then Enter.



8 Initialize the Copy Track function data.
Touch Yes and Enter.

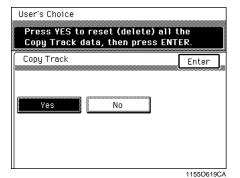


NOTE

If you change the Copy Track Method, be sure to initialize the Copy Track data.

**9** Touch Enter.

10 Touch Exit.

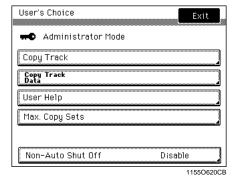

NOTE


When "100 Accounts" is set, program the access code for each account.

Programming the Access Code \$\iiint p\$, 4-24

#### Useful Tip

You can have the copy track data printed on paper.

• Touch Copy Track Data .

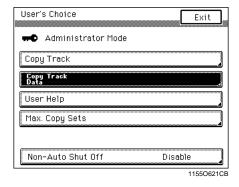

 Place A4L copy paper on the Intelligent Multi Bypass Tray lengthwise and press the Start key.


# **Programming the Access Code**

An access code can be programmed when "100 Accounts" is selected.


**1** Press the Utility key.



2 Touch User's Choice

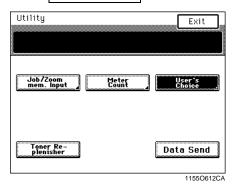


**3** Enter the administrator number from the 10-Key Pad.

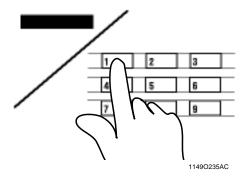


#### **NOTES**

- Your Technical Representative is to program and change the administrator number. For details, consult your Technical Representative.
- The administrator should remember the administrator number.


4 Touch 6/6

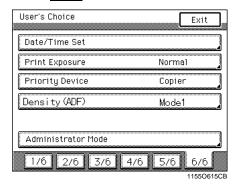

5 Touch Administrator Mode

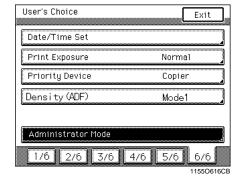

6 Touch Copy Track Data.

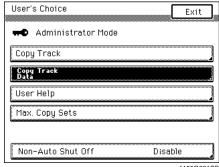

1155O621CB

7 Select the page number on which the target account is shown.

Copy Track Data can be printed. Place ★4□ paper in the Bypass Tray and press the start key.				
Copy Track Data				Enter
			A11 Co Reset	ounter
1/20	3/20	5/20	7/20	9/20
11/20	13/20	15/20	17/20	19/20


1155O622DA

8 Touch the Access Code key of the target account.

User's Choice Enter  Select an account, then input/change the data using the 10-key Pad.				
Copy Tr. Data	ack 1/20	Size	Conu	Next Access
NU.	Total Count	Size Count	Copy Limit	Code
0001	U	0		
0002	0	0		
0003	0	0		
0004	0	0		
0005	0	0		

1155O624CA

**9** Enter the access code from the 10-Key Pad. Then, touch **Enter**.

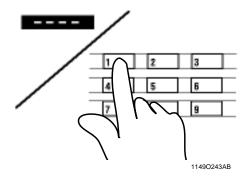


#### **NOTES**

- The access code should be a 4-digit number.
- To correct a number entry, press the key and then enter the new number.
- If you want to program an access code for another account, repeat steps 7 through 9.
- If a new access code is programmed, the old one is erased.
- If a new access code entered already exists for another account, the entry is rejected. Enter a different access code.

10 Touch Enter.

11 Touch Exit.

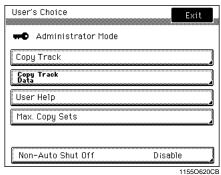

#### Useful Tip

The account number may be changed by touching the corresponding NO. key and using the 10-Key Pad. If the account number newly entered already exists, that entry is canceled.


# **Setting a Copy Limit for Each Account**

A limit for the number of copies made can be set for each account when "100 Accounts" is selected.


Press the Utility key.



2 Touch User's Choice

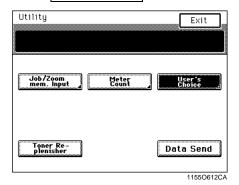


Enter the administrator number from the 10-3 Key Pad.

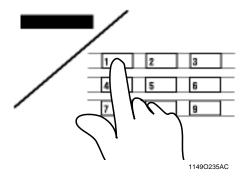


#### **NOTES**

- Your Technical Representative is to program and change the administrator number. For details, consult your Technical Representative.
- The administrator should remember the administrator number.


Touch 6/6 4

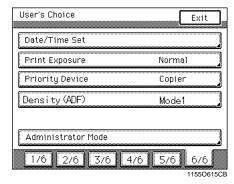

5 Touch Administrator Mode

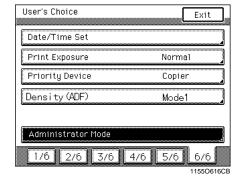


Touch Copy Track Data 6

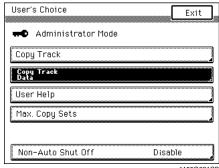

1155O621CB


Select the page number on which the target account is shown.

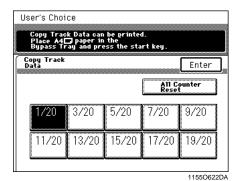

Touch the Copy Limit key of the target account.

User's Choice  Select an account, then input/change the data using the 10-key Pad.				
Copy Tra Data	ack 1/20		[	Next
NO.	Total Count	Size Count	Copy Limit	Access Code
0001	0	0		1111
0002	0	0		
0003	0	0		
0004	0	0		
0005	0	0		
				1155O625CA

Enter a number for the Copy Limit from the 10-Key Pad. Then, touch **Enter**.

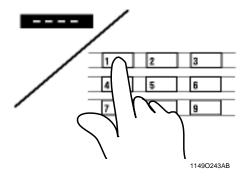


#### **NOTES**

8

- To correct a number entry, press the [ key and then enter the new number.
- If you want to set a Copy Limit for another account, repeat steps 7 through 9.

- Touch Enter . 10
- 11 Touch Exit

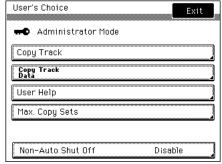

1155O620CB


# **Clearing Counters for Each Account**

A counter can be cleared for each account when "100 Accounts" or "1000 Accounts" is selected. It is also possible to clear all counters of all accounts at once.


**1** Press the Utility key.



2 Touch User's Choice.

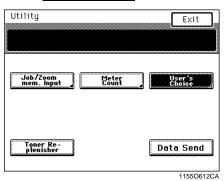



**3** Enter the administrator number from the 10-Key Pad.

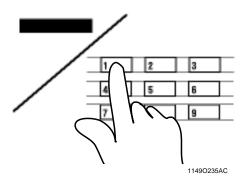


#### **NOTES**

 
- Your Technical Representative is to program and change the administrator number. For details, consult your Technical Representative.
- The administrator should remember the administrator number.
- If "1000 Accounts." is selected, enter the administrator number after step 5.




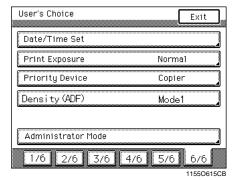


# 5 Touch Administrator Mode

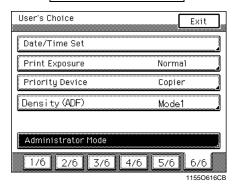

 

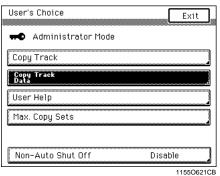

Select the page number on which the target account is shown.

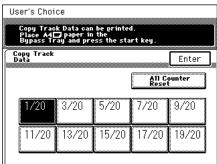

1155O622DA

# Useful Tip

To clear the counters of all accounts at once, touch All Counter Reset

8 Touch the counter key of the target account.

User's Choice Enter  Select an account, then input/change the data using the 10-key Pad.				
Copy Track 1/20 Next				
<u>NO.</u>	Total Count	Size Count	Copy Limit	Access Code
0001	500	100	1000	1111
0002	300	50	1000	2222
0003	400	60	1000	3333
0004	500	70	1000	4444
0005	600	80	1000	5555
1155O6260				

Press the C key and then touch Enter

User's Choice Enter  Select an account, then input/change the data using the 10-key Pad.				
Copy Tra Data NO.	1/20 Total Count	Size Count	Copy Limit	Next Access Code
0001	0	100	1000	1111
0002	300	50	1000	2222
0003	400	60	1000	3333
0004	500	70	1000	4444
0005	600	80	1000	5555

1155O627CB

#### NOTE


If you want to clear the counter of another account, repeat steps 7 through 9.

#### Useful Tip

To undo a clear operation, press the Interrupt key.

Touch Enter

Touch Exit 11

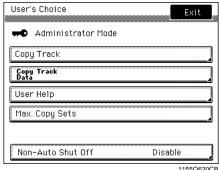


1155O620CB

# 6. Data Send

# **Data Send**

The copier provides a function that allows the user to tell his/her service shop the operating status of the copier by means of preset codes when a Data Terminal is mounted. For details, consult your Technical Representative.

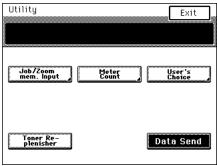


1155O628CA

# **Chapter 5**

When a Message Appears

# 1. When the Message "The current Paper Drawer is empty." Appears

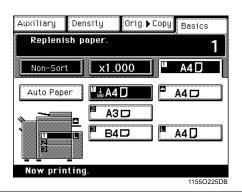


When the drawer currently selected for use runs out of paper, the message shown on the left appears. The current copy cycle is interrupted and you cannot start a new copy cycle. The blinking drawer has run out of paper.

Add paper by using the following procedure.

# **Adding paper**

 
# 1st Drawer

1 Slide out the 1st Drawer.




1075O101DA

**3** Slide the Drawer back in.

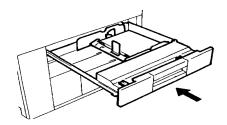

1161O095DA

 2 Load the paper stack into the Drawer so that its front side faces down.



1161O009AA


#### **NOTE**

The paper should be loaded no higher than the  $\nabla$  (Max. Level Indicator).




# 2nd Drawer


Slide out the 2nd Drawer.

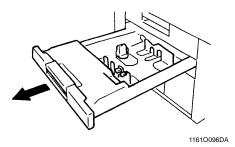


Slide the Drawer back in.

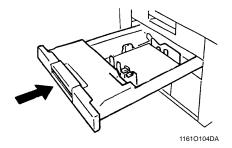

Slide the Edge Guides in the direction of the arrow to suit the paper size.

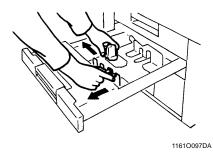

Load the paper stack into the Drawer so that 3 its front side faces down.

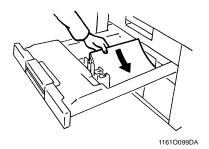

#### NOTE


The paper should be loaded no higher than the  $\blacktriangledown$  (Max. Level Indicator).



# When a Message Appears

#### **3rd Drawer**

Press the Paper Descent Key and then slide the Drawer out.

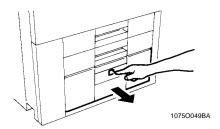

#### **Indication of the Paper Descent Key**

Steady Light:


The 3rd Drawer has run out of paper when a Drawer other than the 3rd is 11360146AA currently selected for use.



Blinking Light:

The 3rd Drawer has run out of paper when the 3rd Drawer is currently selected for use.

2 Load the paper stack into the right half of the Drawer, front side face down. Press the leading edge of the paper stack tightly up against the right side of the Drawer.

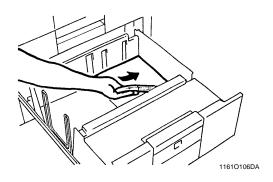


#### **NOTE**

The paper should be loaded no higher than the **▼** (*Max. Level Indicator*).




3 Load another paper stack into the left half of the Drawer, front side face down. Press the leading edge of the paper stack tightly up against the left side of the Drawer.

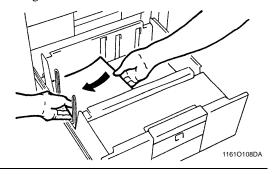

#### NOTE

 The paper should be loaded no higher than the **▼** (Max. Level Indicator).




Slide the Drawer back in and press the Paper Descent Key.




# Large Capacity Cassette


Holding the Door Lock Release Lever, open the Cassette Door.

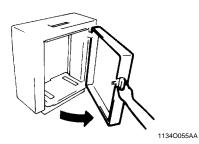

When adding paper to a partially loaded Cassette, press the Paper Plate Descent Key to lower the Paper Plate before opening the Cassette Door.

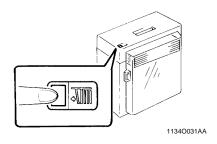

Place the paper stack onto the Paper Plate so that its front side faces up.

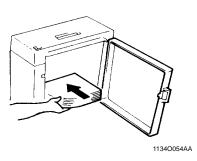


#### **NOTES**

- Make sure that the leading edge of the paper stack is pressed tightly up against the Guide Plate on the take-up side of the Cassette.
- The paper should be loaded no higher than the ▼ (Max. Level Indicator).



**3** Close the Cassette Door.

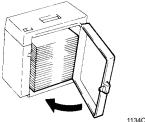


1134O033AA

\* This causes the Paper Plate to rise automatically.

#### NOTE

The Paper Plate may not ascend if the Cassette Door is not closed completely. Be sure to close the Door completely.

# 2. When the Message "Replenish Toner." Appears

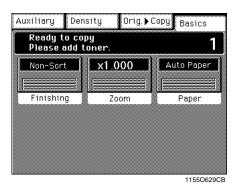


The message shown on the left appears when toner is soon running out. You can still make copies, but the image density will become lighter and lighter. It is recommended therefore that you replace the Toner Bottle as soon as possible.




When toner has run out, the message shown on the left appears and you can no longer start a new copy cycle. Replace the Toner Bottle with a new one by following the procedure given below.

# **Replacing the Toner Bottle**


1 Swing down the Upper Front Door.

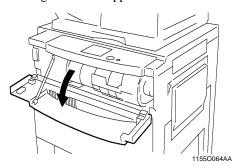

2 Swing open the Toner Bottle Holder and pull out the used Toner Bottle.

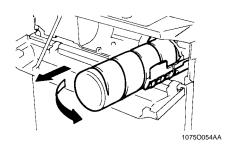

 Tap a new Toner Bottle against a desk or other hard surface four to five times. Then, turn the Toner Bottle upside down and tap it in the same way again.




1075O229AA

**4** Shake the new Toner Bottle well and turn it over lengthwise five times.




With the "UP" marking on top, insert the Bottle into position.


Check that the marking on the Bottle is aligned with the marking on the Toner Bottle Holder.

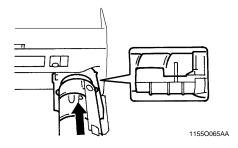

6 Pull the seal off the Toner Bottle.

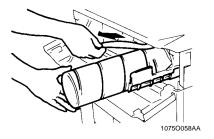

7 Swing the Toner Bottle Holder closed and close the Front Door.

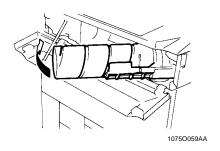

#### **NOTES**


- Use ONLY the specified toner for this copier. Using any other toner could result in trouble.
- Do not throw away, but keep, the used Toner Bottle which will be collected by your Tech. Rep.
- Be careful not to drop the Toner Bottle from a 1 m or more height. It may cause damage to the Toner Bottle.
- When the Front Door is closed, the copier automatically starts replenishing the supply of toner. During this period, do not attempt to turn OFF the Power Switch or open the Front Door.

#### Toner Replenisher

Use the Toner Replenisher function available from the User Mode if the image is light immediately after the Toner Bottle has been replaced with a new one. © p. 4-13

# 3. When the Message "The Staple Cartridge is empty." Appears

<Only when the Finisher FN-3 is mounted>

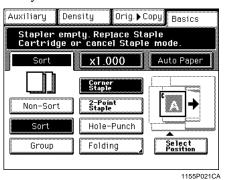


The message shown on the left appears when the staples are running out.

Replace the Staple Cartridge with a new one by following the procedure given below.

# Replacing the Staple Cartridge

<Only when the Finisher FN-3 is mounted>

Holding the Finisher Lock Release Lever, slide the Finisher away from the copier.

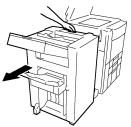


Open the Finisher Front Door.






1155O066AA


Slide out the Staple Unit.

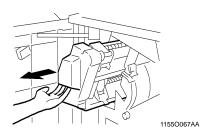

While pressing down the Staple Cartridge Lever, pull the Staple Cartridge out its port.

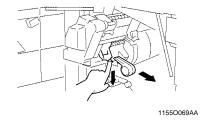


Pull the staple sheet about 3 cm out of the new Staple Cartridge and break off that portion.

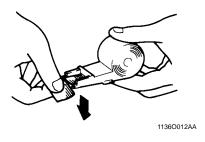


#### NOTE


Check that no portion of the staple sheet hangs out of the cartridge. Break off any portion of the sheet that hangs out of the cartridge.

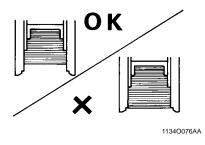


Insert the new Staple Cartridge until it clicks into position.

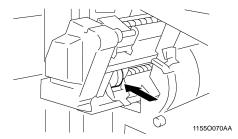

Push the Staple Unit back in and close the Finisher Front Door.

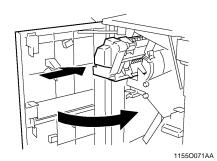


Slide the Finisher back against the copier.

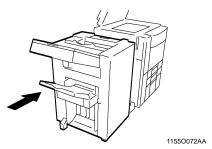

9 Touch **Staple** and the copier automatically feeds a sheet of paper to test the stapling.




- Remove the sheet of paper to check that it has been properly stapled.
  - If no staples are evident, repeat the procedure from the beginning.

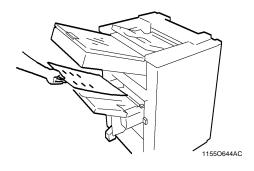

#### **NOTES**

- Replace the Staple Cartridge only after you are prompted to do that by the message. Removing the Staple Cartridge before then will result in stapling trouble.
- After a new Staple Cartridge has been installed, be sure to run a test-stapling sequence to ensure that staples are properly driven into the paper.

# 4. When the Message "A paper misfeed has been detected." Appears

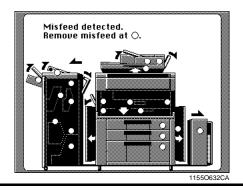

If a paper misfeed occurs during a copy cycle, the message shown on the left appears and that particular copy cycle is stopped in the middle of operation.


Clear the misfed sheet of paper according to the procedure given below.

# **Misfeed Location Displays**

 Different procedures are used to clear a misfed sheet of paper depending on the location. First, isolate the location, then clear the misfeed according to the procedure applicable to the misfeed occurring at that particular location. A blinking dot "O" indicates that there is a misfeed at that location. A lit dot "O" indicates that there might be a sheet of paper stopped at that location.













# Duplex Unit p. 5-14







# Electronic Document Handler p. 5-16







When a Message Appears


# Large Capacity Cassette p. 5-18



# Intelligent Multi Bypass Tray p. 5-19



# Finisher FN-3 p. 5-20

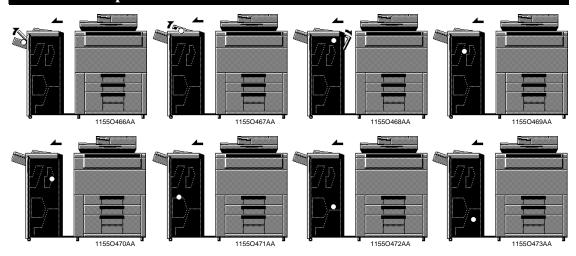


# **a** .

# Copier

1 Open the Misfeed Clearing Guide L1, pull out the sheet of paper.


**Misfeed Clearing Procedures** 

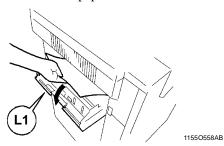

Open the Left Door.




Open the Front Door.

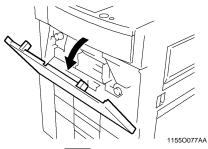


1155O076AA

Turning Knob M1, pull out the sheet of paper. Then turn Knob D1 to return any paper to the Duplex Unit.

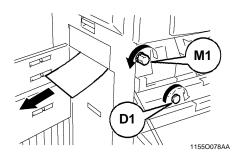


**5** Close the Left Door.

6 Open the Right Door.

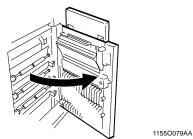


7 Turning Knob  $\boxed{\text{M2}}$ , pull out the sheet of paper.

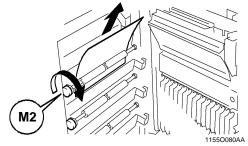


8 Close the Right Door.


**9** Turn Knob  $\overline{M3}$  to feed the sheet of paper.

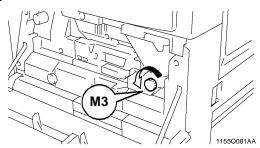


10 Lower the  $\boxed{\text{M4}}$  Lever and slide out the  $\boxed{\text{M5}}$  Unit.

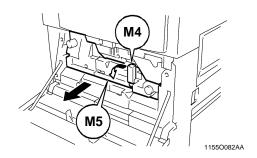


11 Raising Misfeed Clearing Guide M6, remove the sheet of paper.

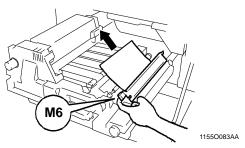

12 Turn Knob M7 and remove the sheet of paper.

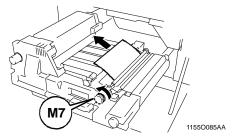


13 Opening Misfeed Clearing Guide M8, remove the sheet of paper.

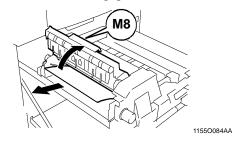


# **⚠** CAUTION

The area around the Fusing Unit is very hot. Do not touch anything but the paper to prevent you from getting burned.


14 Slide in the M5 Unit and raise the M4 Lever back up again.

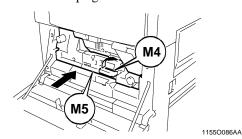


- **15** Close the Front Door.
- 16 Slide out the drawer being used and take out the paper stack left in it.

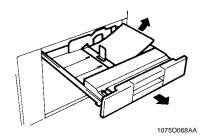

17 Reload the paper stack and slide the drawer into the copier.

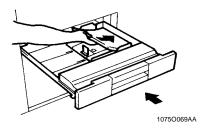

To reset the paper misfeed indication on the Touch Panel, open and close the Front Door.

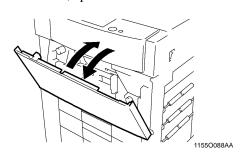


#### Useful Tip


After the paper misfeed has been cleared, the copier automatically resumes a print cycle without pressing the Start key.


# **Duplex Unit**

1 Open the Left Door.

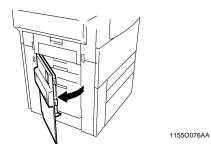


**2** Open the Front Door.

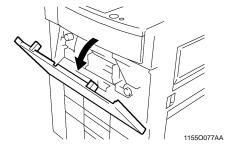

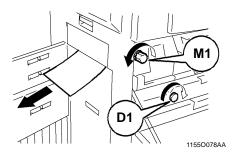


- **5** Open the Right Door.

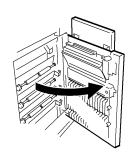


1155O079AA


**6** Turning Knob M2, pull out the sheet of paper.

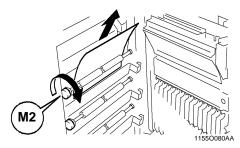


- 7 Close the Right Door.
- Slide out Duplex Unit **D2**.

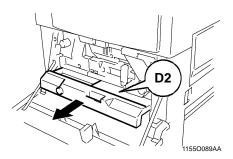


**9** Raising Misfeed Clearing Guide **D3**, remove the sheet of paper.

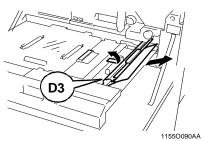


Raising Misfeed Clearing Guide D4, remove the sheet of paper.

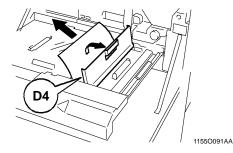

Raising Misfeed Clearing Guide **D5**, remove the sheet of paper.

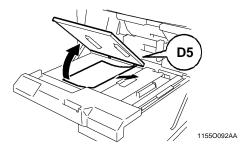

Slide Duplex Unit D2 back into the copier.

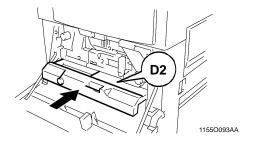


Close the Front Door.

# Useful Tip


After the paper misfeed has been cleared, the copier automatically resumes a print cycle without pressing the Start key.

# **Electronic Document Handler**


Unload the originals from the Document Handling Tray.

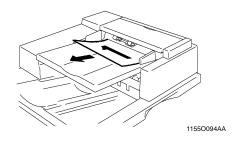


2 Open Misfeed Clearing Guide F1.

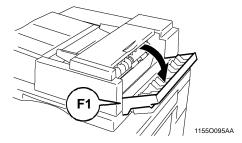


3 Open Misfeed Clearing Guide F2 and gently pull out the original.

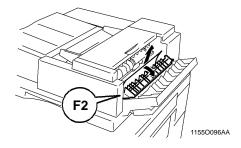


**4** Pull up the Document Handling Tray until a click is heard and then gently pull out the original.

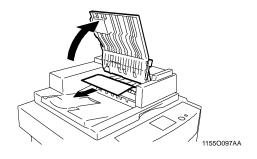


Pulling up Misfeed Clearing Tray F4, gently pull out the original.

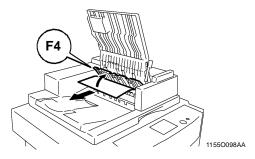


6 Pinching the lever on the Document Tray, bring the tray back down.

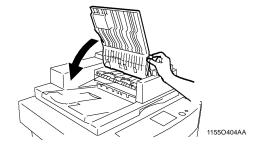


**7** Raise the Electronic Document Handler.

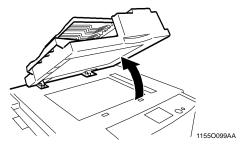


8 Opening the **F5** Lever, gently pull out the original.

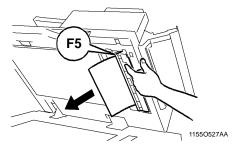


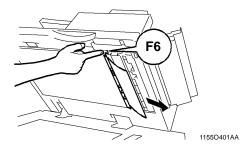


 $10^{\circ}$  Lower the Electronic Document Handler.

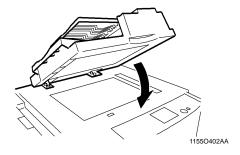

11 Close Misfeed Clearing Guides  $\boxed{\mathbf{F1}}$  and  $\boxed{\mathbf{F2}}$ .

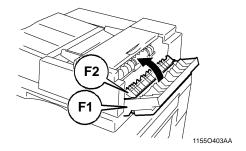


12 Reload the originals as instructed on the Touch Panel.

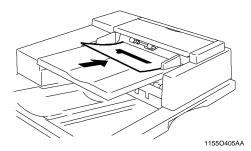


# **Large Capacity Cassette**


1 Press the Paper Descent Key.

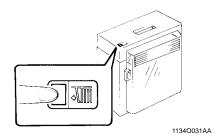

2 Holding the Door Lock Release Lever, open the Cassette Door and remove the sheet of paper.

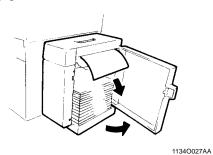


**3** Close the Cassette Door.

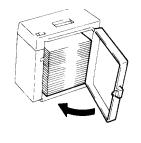


1134O033AA

**4** Press the Lock Release Lever and slide the Cassette away from the copier.

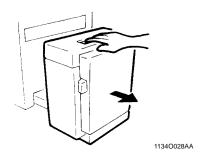


**5** Remove the sheet of paper.

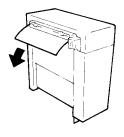

1134O029AA


Slide the Cassette back against the copier.

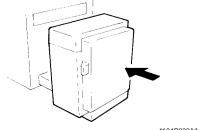


1134O030AA

#### Intelligent Multi Bypass Tray


Unload the paper stack from the Intelligent Multi Bypass Tray and open the Right Door.

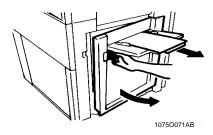


Pull out the sheet of paper from the Paper Take-Up Section. Then, close the Right Door.

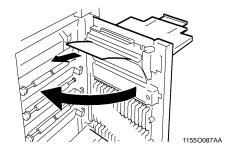

**3** Place the paper stack back on the tray.

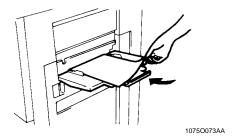


To reset the paper misfeed indication on the Touch Panel, open and close the Front Door.

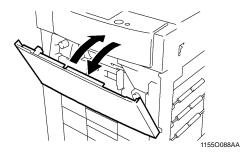


#### Finisher FN-3


<When the following dots are lit:>

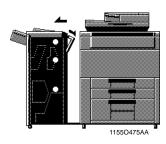


**1** Holding the Finisher Lock Release Lever, slide the Finisher away from the copier.

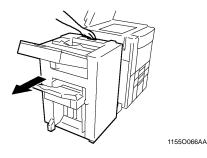


2 Opening Misfeed Clearing Guide FN1 remove the sheet of paper.

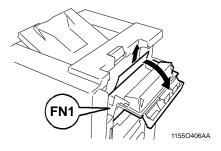


**3** Loosen two screws, open the Misfeed Clearing Guide and remove the sheet of paper.

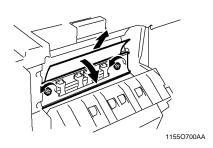


- **4** Close the Misfeed Clearing Guide and tighten the screws.
- **5** Open the Finisher Front Door.

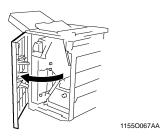


Raising Misfeed Clearing Guide FN3, remove the sheet of paper.

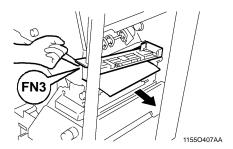


7 Turn Knob  $\boxed{FN2}$  to feed the sheet of paper.

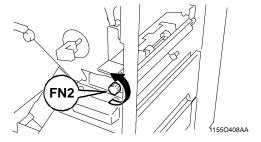


Open Misfeed Clearing Guide **FN4**.

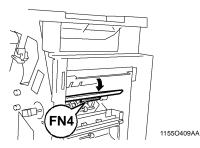


Remove the sheet of paper and close Misfeed Clearing Guide **FN4**.

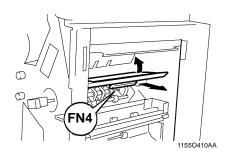


Turn Knobs **FN7** and **FN6** to feed the sheet of paper.

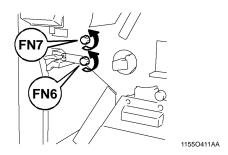


Pinching the lever of Misfeed Clearing Guide **FN5**, open **FN5**.

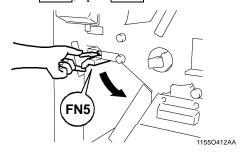


Remove the sheet of paper and close  $\boxed{\textbf{FN5}}$ .

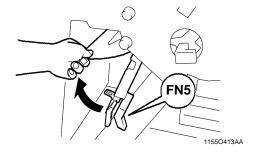

Close the Finisher Front Door.

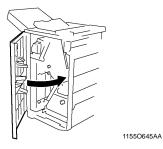


Slide the Finisher back against the copier.

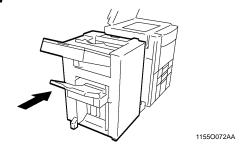


#### 4. When the Message "A paper misfeed has been detected." Appears

<When the following dots are lit:>

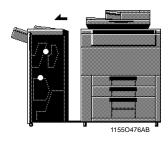


Holding the Finisher Lock Release Lever, 1 slide the Finisher away from the copier.

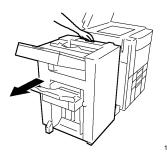


1155O066AA

 Open the Finisher Front Door.




1155O067AA


3 Pinching the lever of Misfeed Clearing Guide FN8, open FN8

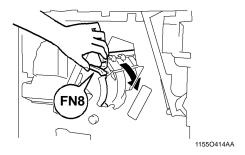


Remove the sheet of paper and close FN8 .

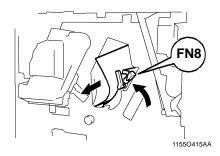


Turn Knobs **FN7** and **FN6** to feed the 5 sheet of paper.

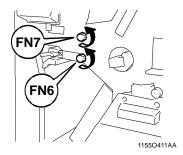


Pinching the lever of Misfeed Clearing Guide **FN5**, open **FN5**.

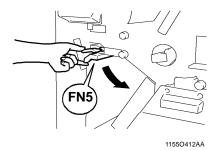

Remove the sheet of paper and close **FN5**.

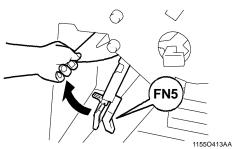


Close the Finisher Front Door.

 


1155O645AA


Slide the Finisher back against the copier.

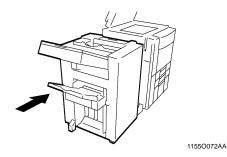


<When the following dots are lit:>

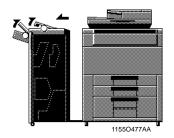

Open Exit Tray **FN9** and remove the 1 sheet of paper.

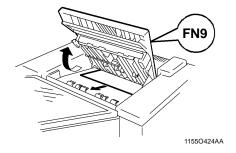


- Close FN9
- Open Manual Staple Tray Cover **FN10** and remove the sheet of paper.

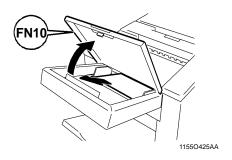


Close FN10

#### 4. When the Message "A paper misfeed has been detected." Appears

<When the following dots are lit:>

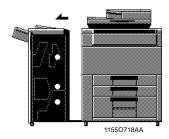


Holding the Finisher Lock Release Lever, 1 slide the Finisher away from the copier.

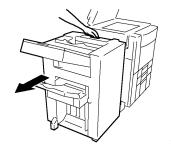


1155O066AA

 Open the Finisher Front Door.




1155O067AA


Raising Misfeed Clearing Guide **FN3** remove the sheet of paper.

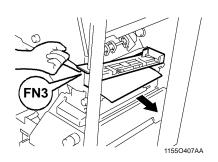


Turn Knob  $\boxed{FN2}$  to feed the sheet of paper.

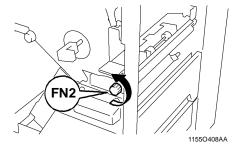


Open Misfeed Clearing Guide **FN4**.

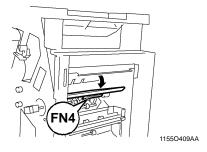


Remove the sheet of paper and close Misfeed Clearing Guide **FN4**.

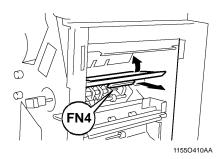


Turn Knobs **FN7** and **FN6** to feed the sheet of paper.

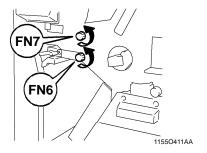


Pinching the lever of Misfeed Clearing Guide FN5, open FN5.

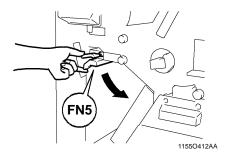


P Remove the sheet of paper and close FN5.

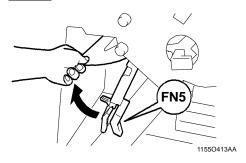


10 Turn Knobs FN2 and PF1 together five turns to feed the sheet of paper.

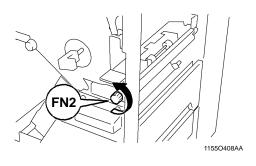

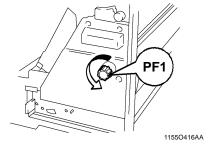


11 Check to see if a sheet of paper is left in the Finisher. If any is visible, perform step 10 once again.

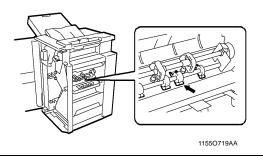


#### NOTE

Sliding out Paper Folding Unit **PF2** with a sheet of paper left inside could result in a malfunction.

12 Open Misfeed Clearing Guide FN4.

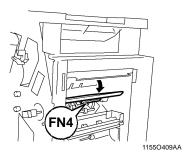


Remove the sheet of paper and close Misfeed Clearing Guide **FN4**.

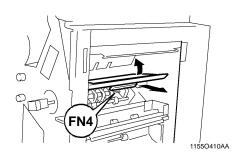


#### 4. When the Message "A paper misfeed has been detected." Appears


14 Turn Knobs FN7 and FN6 to feed the sheet of paper.

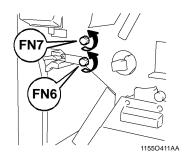


Pinching the lever of Misfeed Clearing Guide FN5, open FN5.

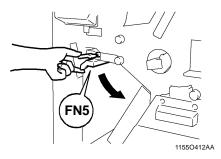


Remove the sheet of paper and close **FN5** *16* 

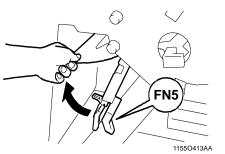


Slide out Paper Folding Unit

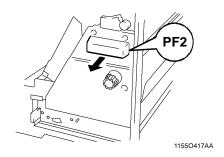


18 Opening Misfeed Clearing Guide PF3, remove the sheet of paper.

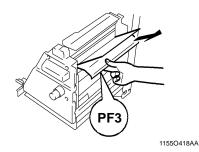


Raise Misfeed Clearing Guide

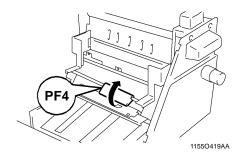


Turning Knob **PF1**, remove the sheet of 20 paper and then lower Misfeed Clearing Guide **PF4** 

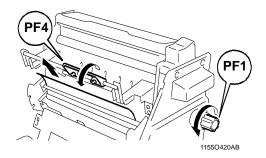


Opening Misfeed Clearing Guide **PF5** remove the sheet of paper.

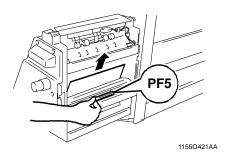


22 Opening Misfeed Clearing Guide PF6, remove the sheet of paper.

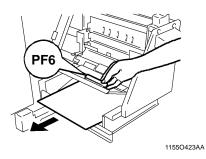


Slide Paper Folding Unit **PF2** back into the copier.

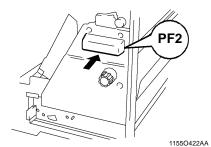

Close the Finisher Front Door.

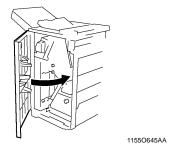

Slide the Finisher back against the copier.

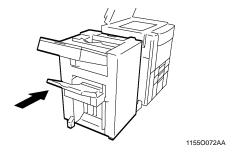

# **5. What Does Each Message Mean?**

Message	Cause	Action								
Malfunction detected. Call your Technical Rep. and provide code:	The copier malfunctioned and is unable to make copies.	Call and inform your Technical Representative of the code being shown on the Touch Panel.								
Please add toner. Follow the instructions on label inside of Front Door.	Toner has run out and the copier is unable to make copies.	Replace the Toner Bottle with a new one. ("When the Message 'Replenish Toner.' Appears"  p. 5-6)								
Please add toner.	Toner is soon running out.	Replace the Toner Bottle with a new one. ("When the Message 'Replenish Toner.' Appears"  p. 5-6)								
Stapler empty. Replace Staple Cartridge or cancel Staple mode.	The staples have run out.	Replace the Staple Cartridge with a new one. ("When the Message 'The Staple Cartridge is empty.' Appears" \$\sim p\$. 5-8)								
Preventative maintenance time.	The time has come when the copier needs service.	Call your Technical Representative.								
Your account has reached its maximum copy allowance. Please call your administrator.	The max. number of copies that can be made for your account is determined in the Administrator Mode.	Consult the administrator of your copier. (Administrator Mode of User's Choice p. 4-19)								
Return the following # of originals to Document Feeder: # Sheet(s)	After a misfed sheet of paper has been cleared, you need to reload the originals fed out onto the Document Exit Tray onto the Document Feed Tray.	Add the number of originals indicated to the bottom of the remaining stack and reload.								
Image data has caused memory overflow. Your copy job has been canceled.	The copier is unable to scan the data for lack of memory.	Wait until a print cycle is run or erase a reserved job to make room for new data.								
Original left on the Glass.	You have left an original on the Original Glass.	Remove the original from the Glass.								
This mode cannot be selected with the OOO.	You have set two functions that conflict with each other.	Cancel either one of the two functions.								

# Chapter 6

Troubleshooting

# 1. When This Type of Copy is Produced

# When this type of copy is produced

Symptom	Possible Cause	Action								
The image is too light.	The exposure level for the Auto	Change the setting of "Auto								
	Exposure mode is set at	Exposure Level" of User's								
11	"Lighter."	Choice. ©p. 4-16								
		Or, cancel the Auto Exposure								
		mode and select Manual								
		Exposure to adjust the exposure								
11		level to obtain a darker image.								
10740110	The second of the second	☞p. 3-42								
	The exposure level for the	Touch <b>Darker</b> as necessary to obtain a darker image. To 3-42								
	Manual Exposure mode is set at "Lighter."									
	You have been making copies	The copier needs more toner.								
	from a photo or an original with	Replenish toner by using Toner								
	a large dark area.	Replenisher of Utility Mode.  p. 4-13								
	The Toner Bottle has just been	The copier needs more toner.								
	replaced.	Replenish toner by using Toner								
		Replenisher of Utility Mode.  p. 4-13								
	The message "Replenish Toner."	Replace the Toner Bottle.								
	is shown on the Touch Panel.	☞p. 5-6								
	The paper is damp.	Change the paper. © p. 5-2								
The image is too dark.	The exposure level for the Auto	Change the setting of "Auto								
	Exposure mode is set at "Darker."	Exposure Level" of User's Choice. p. 4-16								
	Darker.	Or, cancel the Auto Exposure								
		mode and select Manual								
		Exposure to adjust the exposure								
		level to obtain a lighter image.								
		☞p. 3-44								
1074O109	The exposure level for the	Touch <b>Lighter</b> as necessary to								
	Manual Exposure mode is set at	obtain a lighter image. \$\alpha\$p. 3-42								
	"Darker."									
	The Original Glass surface is	Wipe the Original Glass clean								
	dirty.	with a soft dry cloth. *p. 7-5								
	The original is not held tightly	Place the original in position so								
	against the Original Glass.	that it is held tightly against the								
		Original Glass. @p. 3-6								
The copy is blurry.	The paper is damp.	Change the paper. Tp. 5-2								
10740110										

Symptom	Possible Cause	Action
The copy has lines.		Wipe the Original Glass clean
The copy has lines.	The Original Glass is dirty.	with a soft dry cloth. To 7-5
	The Original Pad is dirty.	-
	The Original Pad is dirty.	Wipe the Original Pad clean with a soft cloth dampened with
		alcohol. © p. 7-6
	The original is very thin or	Place a blank sheet of paper over
	highly transparent.	the original. The original of paper over
	The original is 2-sided.	The information on the back side
The copy has dark specks or spots.	The original is 2 sided.	of a 2-sided, thin original may be
The copy has dark speeks of spots.		slightly reproduced on the copy.
Martin and the state of the way		Set the copier into the Manual
		Exposure mode and, using the
		<b>Lighter</b> key, make the
		exposure level lighter. @p. 3-42
The state of the state of		
10740111		
The edge of the copy is dirty.	The Original Pad is dirty.	Wipe the Original Pad clean
Programme and the second second	j	with a soft cloth dampened with
		alcohol. ℱp. 7-6
(2) (2) (2) (3) (3) (4) (4) (4) (4) (4) (4) (4) (4) (4) (4	You have selected a paper size	Select the same copy paper size
	larger than the original. (When	as the original. Tp. 3-9
	Zoom Ratio is set at full size	Or, use the Auto Size Mode to
	×1.000)	enlarge the copy to the
10740112		appropriate size. Tp. 3-14
	The original is not placed in the	Select the same copy paper size
	correct position (when the zoom ratio is set at full size ×1.000).	as the original. Or, reload the paper in the same direction as
	ratio is set at run size ×1.000).	the original. To 3-9
	The reduction ratio selected is	Select the zoom ratio according
	not in accord with the copy	to the copy paper size. • p. 3-14
	paper size. (When doing manual	Or, use the Auto Size Mode to
	reduction copying.)	reduce the copy to the
		appropriate size. @p. 3-14
The image on the copy is not	The original is not placed in the	Place the original correctly on
aligned properly.	correct position.	the Original Glass against the
		Original Width Scale. © p. 3-6
		Or, load it onto the document
		feeder correctly along the Document Guide Plates. Tp. 3-5
	The originals may not be	Raise the document feeder and
	The originals may not be suitable for use in the document	place the originals on the
	feeder.	Original Glass one at a time,
10740113		instead of using the document
		feeder. @p. 3-5
	Something is sticking to the	Wipe the Original Glass clean
	Original Glass.	with a soft dry cloth. \$\infty\$ p. 7-5

<sup>\*</sup> Call your Technical Representative if these procedures do not correct the problem.

# 2. The Copier is not Functioning as Designed

## The copier is not functioning as designed

Symptom	Check for	Action							
The Touch Panel shows nothing.	Is only the Start key lit up green?	The copier is in the Energy Saver mode. Press any key on the control panel to cancel Energy Saver mode.							
	Auto Shut Off is activated.	Turn the Power Switch ON.							
	The Display Contrast Knob is turned to the excessively light or dark position.	Viewing the Touch Panel, adjust the Display Contrast Knob as necessary.							
The Start key does not light up green.	Is your Access Number or Account Number entered?  Please Input your 4-digit Access * and press the Access key.  Access *	Enter your Access Number or Account Number by following the procedure given in "Entering the Access Number." p. 2-20							
No copies are fed out when the Start key is pressed.	The copier has developed a malfunction.	Check the Touch Panel and take action according to the message on the panel.							
	It takes the copier about 7 min. to be ready for making copies after it has been turned ON. Please wait.								
Control panel keys do not respond.	The Interrupt key LED is lit up.	The copier is in the interrupt mode. Press the Interrupt key to cancel the interrupt mode.							
The copier is not activated when	The power cord is left unplugged	Plug the power cord into the							
the Power Switch is turned ON.	from the power outlet.	power outlet.							
	The room circuit breaker is open.	Close the room circuit breaker.							

<sup>\*</sup> If these procedures do not correct the problem, turn OFF the Power Switch, unplug the power cord from the power outlet, and contact your Technical Representative.

# **Chapter 7**

**Miscellaneous** 

# 1. Specifications

# **Specifications**

# Copier DDC52n/62n

Time	Console Copier
Type	
Platen Type	Stationary
Photoconductor	OPC
Copying System	Electrostatic Dry Powdered Image Transfer to Plain Paper
Developing System	Micro-Toning System
Fusing System	Lamp-Heated Roller
Resolution	400dpi
Types of Original	Sheets, Books and other three-dimensional objects
	Maximum Original Size : A3L
	Maximum Original Weight: 3kg
Kinds of Paper	Plain Paper (60g/m² to 90g/m²), Recycled Paper
	Exclusive Paper: Thick paper (91g/m² to 157g/m²), OHP transparencies *Exclusive Paper can only be used for the Multi Bypass Tray.
C D Ci	1st Drawer : A3L to A5L
Copy Paper Size	2nd Drawer : A3L to A5L
	3rd Drawer : A4C
	Intelligent Multi Bypass Tray:
	Crosswise: 100mm to 297mm Lengthwise: 148mm to 432mm
Paper Feeding System	1st Drawer: 500 sheets (80g/m²)
	2nd Drawer: 500 sheets (80g/m <sup>2</sup> )
	3rd Drawer : 2, 500 sheets (80g/m <sup>2</sup> )
	Intelligent Multi Bypass Tray: 50 sheets (80g/m²), 20 sheets (Recycled paper or
	Exclusive paper)
Warm-Up Time	450 sec. or less
First Copy	A4C = 6 sec. or less (in full size mode using 1st copier drawer)
Copy Speed	Full size (x1.000)
(Approx. copies/minute)	<b>52 ppm:</b> A3L: 31 B4L: 40 A4L: 47 A4C: 52
	<b>62 ppm:</b> A3L: 35 B4L: 40 A4L: 47 A4C: 62
Copy Speed	Full size (x1.000)
(Approx. copies/minute)	A3L: 35B4L: 40A4L: 47A4C: 62
Magnification Ratios	Fixed ratios, Full size: 1:1±0.005
	Reduction ratios : $\times 0.500$ , $\times 0.707$ , $\times 0.816$
	Enlargement ratios: $\times 1.154$ , $\times 1.414$ , $\times 2.000$
	Zoom ratios : From ×0.250 to ×4.000 in ×0.001 increments
Multiple Copies	Up to 999 copies (count-down system)
Exposure Control	Auto Exposure Mode, Manual Exposure Mode and Photo Mode
Lost Image	1-sided copy in the full size mode
	Leading Edge, 3mm Trailing Edge, 3mm Rear Edge, 3mm
Power Requirements	AC120V, 220V-240V; 50/60Hz
Power Consumption	1.5kW or less
Dimensions	Width: 777mm Depth: 735mm Height: 980mm
Weight	200kg

#### **Electronic Document Handler EDH-1**

Document Feeding System	Standard Mode : 1-sided original, 2-sided original
	Mixed Original Detection Mode: 1-sided Mixed Original Detection
	2-sided Mixed Original Detection
	Single Feeding Mode : 1-sided original
Kinds of Original	Plain paper
	1-sided original Mode : 50g/m <sup>2</sup> to 110g/m <sup>2</sup>
	2-sided original Mode, Mixed Original Detection Mode: 60g/m² to 90g/m²
	Single Feeding Mode : 35g/m <sup>2</sup> to 157g/m <sup>2</sup>
Original Size	1-sided, 2-sided original, Single Feeding Mode: A3L to A5L
	Mixed original Detection Mode : A3L to A4
Capacity of Document Feed	Up to 100 sheets (80g/m <sup>2</sup> )
Tray	
Copy Productivity	100%
Power Source	Supplied from copier
Power Consumption	60W or less
Dimensions	Width: 645mm Depth: 556mm Height: 182mm
Weight	17kg

#### Large Capacity Cassette C-304

Kinds of Paper	Plain paper (60g/m <sup>2</sup> to 90g/m <sup>2</sup> ), Recycled paper
Paper Size	A4C, Letter C
Capacity	3,000 sheets (80g/m²)
Power Source	Supplied from copier
Power Consumption	30W or less
Dimensions	Width: 287mm Depth: 446mm Height: 500mm
Weight	14.2kg

## **Large Capacity Cassette C-304L**

Kinds of Paper	Plain paper (60g/m <sup>2</sup> to 90g/m <sup>2</sup> ), Recycled paper										
Paper Size	A4L, A4C, LegalL, LetterL, Letter C										
Capacity	00 sheets (80g/m²)										
Power Source	Supplied from copier										
Power Consumption	40W or less										
Dimensions	Width: 440mm Depth: 446mm Height: 500mm										
Weight	16.4kg										

#### 1. Specifications

#### Finisher FN-3

Types of Trays	Top Offset Tray, Bottom Offset Tray											
Modes	Non-Sort Mode, Sort Mode, Group Mode, Staple Mode, Hole Punch Mode and											
	Folding Mode											
Kinds of Paper	Non-Sort Mode, Sort Mode and Group Mode											
	<ul> <li>Plain paper (60g/m<sup>2</sup> to 90g/m<sup>2</sup>), Recycled paper</li> </ul>											
	Exclusive paper: Thick paper, OHP transparencies											
	Staple Mode, Hole Punch Mode and Folding Mode											
	• Plain paper (60g/m² to 80g/m²), Recycled paper											
Capacity of Bins	Plain paper, Recycled paper: Refer to the chart below											
	• Exclusive paper: 10 OHP transparencies (Max. paper size A4), 10 Thick											
	papers											
Punching	Acceptable paper size: A3L, A4L, A4C											
	Punch Hole : 4-Hole											
Power Source	Supplied from copier											
Power Consumption	96W or less											
Dimensions	Width: 931mm Depth: 664mm Height: 1111mm											
Weight	90kg											
Accessories	Staple Cartridge, 5000 staples/ cartridge x1 piece											

			Daman Ciga	Top Offset	Bottom O	#Sheets/	
			Paper Size	Tray	Corner Staple	2-Point Staple	Copy Set
		Non-Sort	A4C	100 sheets	2000 sheets	-	
		Sort	A3L, B4L, A4L	100 sheets	1000 sheets	-	
		Group	A5L, A5C, A6L	-	-		
Cr	isscross	Sort	A4L, A4C	100 sheets	1000 sheets	s (no staple)	-
		Corner	A3L to A4	-	100 sets or 1000 sheets	-	2 to 50 sheets
Staple	Sort	Side	A4C	-	-	200 sets or 2000 sheets	2 to 50 sheets
Sta	Group	Side	A3L, B4L, A4L	-	-	200 sets or 1000 sheets	2 to 50 sheets
		Center	A3L to A4L	-	-	100 sets or 1000 sheets	2 to 50 sheets
	Crease	Staple	Staple A3L to A4L		-	100 sets or 100 sheets	2 to 15 sheets
g	Half-	Non-Sort, Sort, Group	A3L to B4L	10 sheets	50 sheets	(no staple)	-
Folding	Fold	Staple	A3L to B4L	-	=	100 sheets	2 to 10 sheets
$\mathbf{F}_{\mathbf{C}}$	Z-	Non-Sort, Sort, Group	A3L	10 sheets	50 sheets	(no staple)	-
	Fold	Staple	A3L	-	100 sheets	100 sheets	2 to 10 sheets
Detection		Z-Folded	A3 (Z-Folded) + A4C	30 sheets	Z-Folded + Unfol	100 sheets ded*: 1000 sheets taple)	-
Mixed Orig. D		+ Unfolded*	*Z-Folded: 5 sheets/set Unfolded*: 25 sheets/set	-	Z-Folded: 100 sheets Z-Folded + Unfolded*: 1000 sheets	Z-Folded: 100 sheets Z-Folded + Unfolded*: 2000 sheets	2 to 30 sheets

<sup>\*</sup> Only A3 size paper can be Z-folded. Therefore, if a stack of mixed-size originals (A3 and other sizes) is copied in Mixed Original Detection mode, the copy set will contain a mix of Z-folded and unfolded copies.


#### 2. Care of the Copier

#### **Cleaning**

(Turn OFF the Power Switch of the copier when cleaning.)


#### Housing

**1** Wipe the surface of the housing clean with a soft cloth dampened with alcohol.

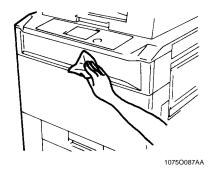

#### **Control Panel**

- 1 Turn the Power Switch OFF.
- Wipe the surface of the Control Panel clean with a soft, dry cloth.

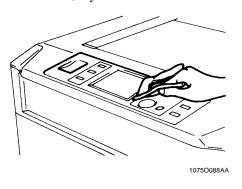


#### NOTE

NEVER use a glass cleaner or any detergent to avoid damage to the control panel keys and Touch Panel.


#### **Original Glass**

Raise the Electronic Document Handler.

Wipe the surface of the Original Glass clean with a soft, dry cloth.

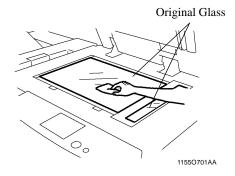

Wipe the surface of the guide plate and polyester film (shown below) of the Document Handler clean with a soft, dry cloth.

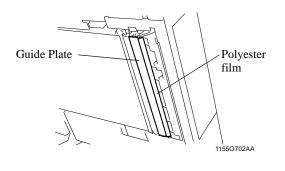


#### **NOTE**

Wipe the film gently as it is fragile.


# **Original Pad**

- Raise the Document Handler.
- Wipe the surface of the Original Pad clean 2 with a soft cloth dampened with alcohol.

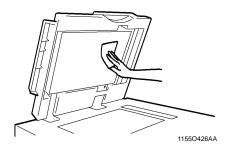

## Front Door

- Swing down the Front Door. 1
- Wipe the surface of the Front Door clean 2 with a soft, dry cloth.

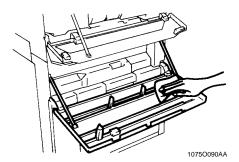

# 3. Function Combination Matrix

## **Function combination matrix**

_		Fund	ction Set Last										Ba	sic											Ori	g. 🕨	► Co	ру	
	\				Paj	per				Zo							F	inis	hin	g				(	)rig	. ]	C	op	/
					Manual Paper	ass	Exclusive Paper	Auto Size	Full Size	Change Fixed Zoom	Zoom Ratio in Memory	10-Key Input	X/Y Zoom	Non-Sort		dr	ner Staple	Side Staple	ter Staple	Hole Punch	ıse	Half-Fold	old			k			[2in1]
		Func	ction Set First	Auto Paper	Man	Bypass	Excl	Aut	Full	Char	Zooi	10-k	X/X		Sort	Group	Corner	Side	Center	Hole	Crease	Half	Z-Fold	1	2	Book	1	2	1 [2i
	Paper	Auto Paper Manual Paper Bypass Exclusive Paper	× ×	×××	× × / 0	×	A A	0	0000	0000	000	× O O	) ) )	0	0	) )	0	000	000	000	000	× ×	0000	000	) ) )	000	000	0	
		Zoom	Auto Size Full Size Change Fixed Zoom Zoom Ratio in Memory 10-Key Input	× O O O	A O O O	A O O	0 0 0	$\times \times \times \times$	$\times$ $\times$ $\times$ $\times$	× × ×	$\times$ $\times$ $\times$ $\times$	× × ×	× × × ×	) ) ) )	0000	0 0 0	) ) ) )	0 0 0	0000	0000	0000	0000	× 0 0 0	0000	0 0 0	<ul><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li></ul>	0000	0000	0000
	Basic		X/Y Zoom Non-Sort Sort Group Corner Staple	× 0 0 0	$\circ \circ \circ \circ \circ$	$\circ \circ \circ \circ$	0 0 0 ×	× 0 0 0	× 0 0 0 0	× 0 0 0 0	× 0 0 0 0	× 0 0 0	000	× × ×	$0 \times / \times 0$	0 × × / 0	) × 0 )	O × O ×	O × O ×	$\circ \circ \circ \circ$	000	К О О L	× 0 0 0 0	$\circ \circ \circ \circ$	$\begin{array}{c c} \circ & \circ \\ \hline \circ & \circ \\ \hline \end{array}$	<ul><li>O</li><li>O</li><li>O</li><li>O</li></ul>	$\circ \circ \circ \circ$	$\begin{array}{c c} \circ & \circ \\ \hline \circ & \circ \\ \hline \end{array}$	× O O O
		Finishing	Side Staple Center Staple Hole Punch Crease Half-Fold	0 0 0	$\circ \circ \circ \circ \circ$	0000	× × × ×	0000	0000	$\circ \circ \circ \circ$	$\circ \circ \circ \circ \circ$	$\circ \circ \circ \circ$	) ) ) )	×	0000	0000	× × •	× 0 • 0	$\times$ $\bigcirc$ $\bigcirc$ $\bigcirc$	$\bigcirc \times / \bigcirc \bigcirc$	$\times$ $\times$ $\times$ $\cup$ $\times$ $\cup$ $\cup$ $\times$ $\cup$	OLOX	O L X X	$\circ$	0000	O O O M	$\circ \circ \circ \circ$	000	0 0 0 0
		Orig.	Z-Fold 1 2 Book	0	0000	0000	- 0 0	0000	$\circ \circ \circ \circ$	$\circ$	$\circ$	$\circ$	0	0	$\circ \circ \circ \circ$	0 0 0	0	000	0000	$\circ$	× 0 0 0	х О М		$\times \times / C$	$\times \times \times$	×	0000	0	<ul><li>O</li><li>X</li></ul>
Δ	Orig. Copy	Сору	1 2 1 [2in1] 2 [2in1] 1 [4in1] 2 [4in1] Booklet Creation	0 0 0			O × O × × ×						<ul><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><li>O</li><l< td=""><td>0 0 0 0 0</td><td>000000</td><td>000000</td><td>0 0 0 0</td><td>00000</td><td></td><td><math>\circ \circ \circ \circ \circ \circ \bullet</math></td><td></td><td><math>\bigcirc \bullet \bigcirc \bullet \bigcirc \bullet \bigcirc \bullet \bigcirc</math></td><td><math>\circ \circ \bullet \bullet \bullet \bullet \bullet</math></td><td><math>\circ \circ \circ \circ \circ \circ \circ</math></td><td><math>\circ \circ \circ \circ \circ \circ</math></td><td>O × × × ×</td><td>× × × × ×</td><td>× × × ×</td><td>× × × ×</td></l<></ul>	0 0 0 0 0	000000	000000	0 0 0 0	00000		$\circ \circ \circ \circ \circ \circ \bullet$		$\bigcirc \bullet \bigcirc \bullet \bigcirc \bullet \bigcirc \bullet \bigcirc$	$\circ \circ \bullet \bullet \bullet \bullet \bullet$	$\circ \circ \circ \circ \circ \circ \circ$	$\circ \circ \circ \circ \circ \circ$	O × × × ×	× × × × ×	× × × ×	× × × ×
		-	Original Direction Margin Page Arrange	) )	0	0	O ×	0	0	0	0	0	0	) )	0	0	0	000	0	000	0	00	000	O ×	O O ×	× × O	O X	0	O O ×
	OHP Inte File Marg Edge/Fran	Page Inse OHP Inter File Marg Edge/Fran Image Re	rleaving in ne Erase peat	O B O O		$\circ \circ \bullet \circ \circ \circ$		$\circ \circ \circ \circ \circ \bullet$	$\circ \circ \circ \circ \circ \circ$	$\circ \circ \circ \circ \circ$	$\circ \circ \circ \circ \circ$	<u>О</u>	0 0 0 0	0 0 0 0 0	00000	$\circ \circ \bullet \circ \circ$	O B O O	O B O O	O B O O	O B O O	$\circ \circ \bullet \circ \circ \bullet$		R R O O	$\circ \circ \circ \circ \circ$	$\begin{array}{c c} \circ \\ \circ \\ \circ \\ \circ \\ \end{array}$	<ul><li>O</li><li>O</li><li>X</li><li>O</li></ul>	$\circ \circ \circ \circ \circ$	O B O O	$\circ$
		Image Sta	nbering on Numbering	0 0 0	$\circ \circ \circ \circ \circ$	$\circ \circ \circ \circ$	0000	$\circ \circ \circ \circ$	$\circ \circ \circ \circ$	$\circ \circ \circ \circ \circ$	$\circ \circ \circ \circ \circ$	$\circ \circ \circ \circ \circ$	0	) • •	$\circ \circ \circ \circ$	0 0 0	) ) ) )	O O O P	O O O P	$\circ \circ \circ \circ \circ$	0	$\circ \circ \circ \circ \bullet$	O O O E	0000	$\circ \circ \circ \circ$	) ) )	$\circ \circ \circ \circ \circ$	000	0000
Mixed Onic		Separate S Small Ori	Scan g. Adjustment . Placement	0 0 0		00000		$\circ \circ \circ \bullet \circ$	0		0000	00000	0 0 0 0	0 0 0			0	0							$\circ \circ \circ \circ \circ$	) ) × •	00000		$\circ \circ \circ \circ \circ$
	Others	Reserve Orig. on t	he Glass emory Input	) ) -	0	) • ()	) • () -	0 0	0 0	0 0	<u>O</u>	0 0	) ) -	) ) -	0	0	) ) -	0 0	0	0	0	• ○ △ -	<u>○</u>	0 0	0	<u>)</u>	0	0	0

	Fun	ction Set Last	Orig. ▶ Copy								Auxiliary											l Oı	io	Others					
	ı un	ction Set Last	Copy						Auxiliary												ctic		Otners						
						Booklet Creation	Original Direction		rrange		Page Insertion	OHP Interleaving	argin	Edge/Frame Erase	Image Repeat	Date Stamping	Page Numbering	Distribution Numbering	Image Stamping	Mixed Orig. Detection	Separate Scan	Small Orig. Adjustment	Free Orig. Placement	ADF/SADF Mode	pt	9	Orig. on the Class	Image Memory Input	
	Func	ction Set First	2 [2in1]	1 [4in1	2 [4in1]	Bookle		Margin	Page Arrange	Cover			File Margin					Distrib		Mixed				ADF/S	Interrupt	Reserve			
		Auto Paper	0	0	0	0	0	0	0	0	0	0	0	0	×	0	0	0	0	0	0	0	0	×	0	-	0	0	
	Paper	Manual Paper	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	-	0	0	
	ruper	Bypass	0	$\circ$	0	$\circ$	$\circ$	0	0	$\circ$	0	×	0	0	0	$\circ$	0	0	0	0	$\circ$	0	$\circ$	0	0	-	0	0	
		Exclusive Paper		0	•	•	0	0	-	•	•	C	0	0	О	0	0	0	0	0	0	0	0	0	0	-	0	0	
		Auto Size	0	$\circ$	0	$\circ$	$\circ$	0	0	$\circ$	0	0	0	0	×	$\circ$	0	0	0	0	$\circ$	0	$\circ$	×	$\circ$	-	0	Н	
		Full Size	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	-	0	0	
	Zoom	Change Fixed Zoom	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	-	0	Н	
	20011	Zoom Ratio in Memory	0	$\circ$	0	$\circ$	$\circ$	0	0	$\circ$	0	0	0	0	0	$\circ$	0	0	0	0	$\circ$	0	$\circ$	0	0	-	0	Н	
		10-Key Input	0	$\circ$	0	$\circ$	$\circ$	0	0	$\circ$	0	0	0	0	0	$\circ$	0	0	0	0	$\circ$	0	$\circ$	0	0	-	0	Н	
Basic		X/Y Zoom	×	×	×	×	$\circ$	0	0	0	0	0	0	0	0	0	0	0	0	0	$\circ$	0	$\circ$	0	0	-	0	Н	
Βį		Non-Sort	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	×	0	0	0	0	0	0	0	-	0	0	
		Sort	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	-	0	0	
		Group	0	0	0	0	0	0	0	0	0	×	0	0	0	0	0	×	0	0	0	0	0	0	0	-	0	0	
		Corner Staple	0	0	0	N	0	0	0	0	0	В	0	0	×	0	0	О	0	Q	0	0	0	×	0	-	0	0	
	Finishing	Side Staple	0	0	0	J	0	0	0	0	0	В	0	0	×	0	0	0	0	P	0	0	0	×	0	-	0	0	
	Timsning	Center Staple	0	0	0	0	0	0	0	0	0	В	0	0	×	0	0	0	0	P	0	0	0	×	0	-	0	0	
		Hole Punch	0	0	0	•	0	0	0	0	0	В	0	0	×	0	0	0	0	0	0	0	0	×	0	-	0	0	
		Crease	0	0	0	0	0	0	0	0	0	•	0	0	×	0	0	О	0	•	0	0	0	×	0	-	0	0	
		Half-Fold	lacktriangle	0	•	•	0	0	lacktriangle	•	•	•	D	0	×	0	0	0	0	•	0	0	0	×	0	-	Δ	0	
		Z-Fold	lacktriangle	•	•	•	0	0	lacktriangle	0	0	•	0	0	×	0	0	0	0	Е	0	0	0	×	0	-	$\triangle$	0	
	Orig.	1	0	0	0	0	0	0	-	0	0	0	0	0	0	0	0	0	0	$\blacktriangle$	0	0	0	0	0	-	0	0	
		2	0	0	О	0	0	0	-	0	0	0	0	0	0	0	0	$\circ$	$\circ$	0	0	0	0	×	0	-	0	0	
		Book	×	×	×	0	•	•	0	0	•	0	0	•	×	0	0	0	0	0	0	0	•	×	0	-	0	×	
		1	×	×	×	×	0	0	-	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	-	0	0	
py		2	×	×	×	×	0	0	0	0	0	В	0	0	×	0	0	0	0	$\blacksquare$	0	0	0	0	0	-	0	0	
► Copy		1 [2in1]	×	×	×	×	0	0	-	0	0	0	0	0	×	0	0	$\circ$	$\circ$	•	0	0	0	×	0	-	0	0	
<b>A</b>		2 [2in1]		×	×	×	0	0	-	0	0	В	0	0	×	0	0	0	0	•	0	0	0	×	0	-	0	С	
Orig.	Сору	1 [4in1]	×		×	×	0	0	-	0	0	0	0	0	×	0	0	$\circ$	$\circ$	•	0	0	0	×	0	-	0	С	
Ō	Сору	2 [4in1]	×	×		×	0	0	-	0	0	В	0	0	×	0	0	О	$\circ$	lacktriangle	0	0	0	×	0	-	0	С	
		Booklet Creation	×	×	×	/	0	0	ı	G	•	В	0	0	×	0	0	0	0	•	0	0	0	×	0	-	0	$\Box$	
		Original Direction	0	0	О	0		0	-	0	0	0	0	0	0	0	0	О	$\circ$	0	0	0	0	×	0	-	0	С	
		Margin	О	0	О	0	0		Ŀ	0	О	О	0	0	X	0	0	0	0	О	0	О	0	О	0	-	О	С	
		Page Arrange	×	X	×	X	•	1		0	•	В	0	•	×	0	0	0	0	О	0	0	•	×	0	-	0	×	
	Cover		0	0	0	G	0	0	0		0	В	0	0	×	0	0	0	0	О	0	0	0	×	0	-	0	С	
	Page Inse		0	0	0	•	0	0	0	0		В	0	0	×	0	0	0	0	•	$\circ$	0	0	×	0	_	Δ	×	
	OHP Inte	C	В	0	В	В	0	0	В	В	В		В	0	×	В	В	В	В	О	0	0	0	×	0	_	0	С	
5	File Marg		0	0	0	0	_	0	0	0	0	В		0,	×	0	0	0	0	0	0	0	$\circ$	×	0	_	0	С	
Auxiliary	Edge/Frai		0	0	0	0	0	0	×	0	0	0	0		0	0	0	0	0	О	0	0	0	0	0	L-	0	С	
n.	Image Re		•	•	•	•	•	•	-	•	•	•	•	0		lacksquare	•	•	•	F	0	0	0	×	0	-	0	С	
A	Date Stan		0	0	0	0	0	0	0	0	0	В	0	0	×		0	0	0	О	О	0	0	0	0	-	0	0	
	Page Nun		0	0	0	0	0	0	0	0	0	В	0	0	×	0		0	0	О	0	0	0	0	0	Ŀ	0	0	
	Distributi	on Numbering	О	0	0	0	0	0	О	0	0	В	0	0	×	0	0		0	О	0	О	0	О	0	-	О	0	
		Image Stamping		0	О	0	0	0	0	0	0	В	0	0	×	0	0	0		О	0	О	0	О	0	-	О	0	
		rig. Detection	•	•	•	•	0	0	0	0	•	0	0	0	F	0	0	0	0	$\leq$	0	О	0	×	0	Ľ-	0	0	
n ág	Separate S		О	0	0	0	0	0	О	0	0	О	0	0	О	0	0	0	0	О	$\sum$	0	0	О	0	-	О	0	
ction		a A divistment	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	О	O		0	0	0	-	0	С	
etection	Small Ori	Small Orig. Adjustment Free Orig. Placement			0	0	0	0	-	0	0	0	0	0	0	0	0	0	0	О	0	О	$\setminus$	X	0	<u> </u>	0	C	
Detection	Small Ori Free Orig	. Placement	О	0		_	_																_ `		_	_	$\sim$		
Mixed Ong. Detection	Small Ori	. Placement	<b>○</b>	$\circ$	•	•	•	0	-	•	•	•	lacksquare	0	lacksquare	0	$\circ$	0	0	•	0	О	•		0	-	•		
	Small Ori Free Orig	. Placement	_	-	•	_		_	<u>-</u>	• •	•	•	• 0	0	•	$\circ$	$\circ$	0	0	• •	0	<u>о</u>	• 0	0	_	-	_	•	
	Small Ori Free Orig ADF/SAI Interrupt Reserve	. Placement DF Mode	•	•	•	•	•		_	_	_	_	_		_	_	_		_	• • •		_	_		_	-	•	_	
Others Detection	Small Ori Free Orig ADF/SAI Interrupt	. Placement DF Mode	•	• •	•	•	•	O	0	•	•	•	0	О	O	0	O	O	Ō		0	O	Ō	0	0	-	• •	•	

#### **Conditions for Combined Functions**

- O: The combination is possible.
- : Either of the functions which is set first takes precedence.
- X : Either of the functions which is set last takes precedence.
- $\triangle$ : One of the functions must be canceled before a copy cycle can be initiated.
- $\triangle$ : The combination is disabled in  $1 \triangleright 2$  Mode and the function set first takes precedence.
- A: The combination is impossible if the Paper Size is input by custom size and the function set first takes precedence.
- B: The combination is only available for the extra copies.

  When OHP Interleaving is selected, 2 ▶ 2[2-in-1] or 2 ▶ 2[4-in-1] Mode will be automatically changed to 1 ▶ 1[2-in-1] or 1 ▶ 1 [4-in-1] Mode.
- C: The combination can make OHP copies.
- D: Shift-for-Margin and Half-Fold cannot be combined. (The function set first takes precedence.)
- E: The Mixed Original Detection mode is valid regardless of whether Mixed Orig. Detect is turned ON or OFF.
- F: The Mixed Original Detection mode is valid for Auto Detect and not valid for Size Input regardless of whether Mixed Orig. Detect is turned ON or OFF.
- G: Booklet Creation and Back Cover cannot be combined. (Booklet Creation takes precedence.)
- H: The zoom ration is automatically changed to Full Size.
- I : No zoom ratios can be stored in memory in the Interrupt mode.
- J: The function set last takes precedence. (Center Staple is automatically selected.)
- K: Auto Size is automatically selected.
- L: 2-Point Side Staple is automatically selected.
- M: The functions cannot be combined only for Separation. (The function set first takes precedence.)
- N: When the copier is equipped with an FN-3, the function set last takes precedence (and Center Staple is automatically selected).
- P: The combination is not possible only if Auto Paper is used, and Staple is automatically canceled. (The combination becomes possible when it is further combined with Z-Fold.)
- Q: The combination is not possible only if Auto Paper is used with an FN-3 installed, and Staple is automatically canceled. (The combination becomes possible when it is further combined with Z-Fold.)
- R: The combination is not possible only if the finished size of Z-Fold differs from the size of the cover or interleaf. The function set first takes precedence. (Neither the cover nor interleaf can be folded in Z-fold.)
- : Has no bearing

## 4. Description of Paper Size and Zoom Ratio Table

## Description of paper size and zoom ratio table

#### Paper Size

Name	Size (Metric)	Size (Inch)
A3	297mm×420mm	11-3/4" × 16-1/2"
B4	257mm×364mm	10" × 14-1/4"
A4	210mm×297mm	8-1/4" × 11-3/4"
B5	182mm×257mm	7-1/4" × 10"
A5	148mm×210mm	5-3/4" × 8-1/4"
В6	128mm×182mm	5" × 7-1/4"
A6	105mm×148mm	4-1/4" × 5-3/4"
POST CARD	100mm×148mm	4" × 5-3/4"

Name		Size (Inch)	Size (Metric)
LEDGER		11" × 17"	279mm×432mm
11"×14"		11" × 14"	279mm×356mm
COMPUTER		10-1/8" × 14"	257mm×356mm
10"×14"		10" × 14"	254mm×356mm
9-1/4"×14"		9-1/4" × 14"	236mm×356mm
LEGAL		8-1/2" × 14"	216mm×356mm
FOOLSCAP	GOVERNMENT LEGAL	8-1/2" × 13"	216mm×330mm
FOOLSCAP		8" × 13"	203mm×330mm
FOOLSCAP		8-2/3" × 13"	220mm×330mm
FOOLSCAP	FOLIO	8-1/4" × 13"	210mm×330mm
8-1/4"×11-3/4"		8-1/4" × 11-3/4"	210mm×301mm
LETTER		8-1/2" × 11"	210mm×279mm
GOVERNMENT LETTER		8" × 10-1/2"	203mm×267mm
QUARTO		8" × 10	203mm×254mm
STATEMENT	INVOICE	5-1/2" × 8-1/2"	140mm×216mm

#### **Zoom Ratio Table (Original Size to Copy Paper Size)**

Metric Areas			
Original Size	Copy Paper Size	Zoom Ratio	
A3	A4	×0.707	
	A5	×0.500	
297×420mm	B4	×0.866	
11-3/4"×16-1/2"	B5	×0.610	
	A5	×0.707	
A4	A6	×0.500	
1	B5	×0.866	
210×297mm 8-1/4"×11-3/4"	B6	×0.610	
8-1/4"×11-3/4"	A3	×1.414	
	B4	×1.224	
	A6	×0.707	
A5	B6	×0.866	
	A4	×0.414	
148×210mm 5-3/4"×8-1/4"	A3	×2.000	
5-3/4"×8-1/4"	B4	×1.733	
	B5	×1.224	
A6	A4	×2.000	
	A5	×1.414	
105×148mm 4-1/4"×5-3/4"	B5	×1.733	
4-1/4 ×3-3/4	B6	×1.224	
	A4	×0.816	
B4	A5	×0.577	
257×364mm	B5	×0.707	
10"×14-1/4"	B6	×0.500	
	A3	×1.154	
	A5	×0.816	
B5	A6	×0.577	
	B6	×0.707	
182×257mm 7-1/4"×10"	A3	×1.640	
/-1/4"×10"	A4	×1.154	
	B4	×1.414	
D.C	A6	×0.816	
B6	A4	×1.640	
128×182mm	A5	×1.154	
5"×7-1/4"	B4	×2.000	
	B5	×1.414	

Metric Areas			
Original Size	Copy Paper Size	Zoom Ratio	
	11"×14"	×0.823	
11"×17"	Legal	×0.772	
-	Foolscap	×0.764	
279.4×431.8mm	Letter	×0.647	
	Invoice	×0.500	
	11"×14"	×0.933	
11"×15"	Legal	×0.772	
-	Foolscap	×0.772	
279.4×381mm	Letter	×0.733	
	Invoice	×0.500	
	Legal	×0.772	
11"×14"	Foolscap	×0.772	
279.4×355.6mm	Letter	×0.772	
	Invoice	×0.500	
Legal	Foolscap	×0.928	
_	Letter	×0.785	
8-1/2"×14"	Invoice	×0.607	
215.9×355.6mm	11"×17"	×1.214	
Foolscap	Letter	×0.846	
	Invoice	×0.647	
8-1/2"×13"	11"×17"	×1.294	
215.9×330.2mm	11"×14"	×1.076	
Letter	Invoice	×0.647	
	11"×17"	×1.294	
8-1/2"×11"	11"×14"	×1.272	
215.9×279.4mm			
	11"×17"	×2.000	
Invoice	11"×14"	×1.647	
5-1/2"×8-1/2"	Legal	×1.545	
139.7×215.9mm	Foolscap	×1.529	
	Letter	×1.294	

Zoom Ratio = Copy Paper Size ÷ Original Size

1"(Inch) = 25.4mm1 mm = 0.0394"(Inch)

# Index

Numeric		Copy Track Data	4-23
100 Accounts	4-19	Cover	
1000 Accounts		Crisscross Grouping	3-22
10-Key Pad		Crisscross Sorting	3-22
1▶1		D	
1▶1 (2in1)		<del>_</del>	4 10
1 ▶ 1 (4in1)		Date/Time Set	
1 > 2		Default Level	
1 ▶ 2 (2in1)		Deleting a Job Program	4-4
1 ▶ 2 (4in1)		Description of Paper Size and	7 10
1 ▶ Booklet Creation		Zoom Ratio Table	
1st Drawer		Display Contrast Knob	2-15
<b>2▶</b> 1		${f E}$	
2►1 (2in1)		Edge/Frame Erase	3-58
2►1 (4in1)		Energy Saver	
2▶2		Exposure Priority	
2►2 (2in1)		•	
2►2 (4in1)		$\mathbf{F}$	
2▶ Booklet Creation		File Margin	
2in1, 4in1, Booklet Copy Zoom		Folding	
2nd Drawer		Function combination matrix	7-10
3rd Drawer		G	
4in1 Copy Order		Group	3-20
		•	3-20
A	2 14	H	
Access Mode Key		Half-Fold	
Access Number		Hole Punch	3-21
Adding paper		I	
Administrator Mode		Image Density	3-44
Auto Copy Start		Image Memory Input	
Auto Drawer Switching		Image Repeat	
Auto Dual Function		Image Stamping	
Auto Exposure		Initial Mode	
Auto Panel Reset		Intelligent Sorting	
Auto Paper/Auto Size		Interrupt	
Auto Shut OFF		Interrupt Key	
Auto Size	3-14	• •	2 1
В		J	0.70
Book ▶1	3-37	Job List	
Book ▶2	3-37	Job Memory Input	4-2
Book ▶ Booklet	3-37	L	
C		Language Selected	
Calling up a Ratio from Memory	3-17	Large Capacity Cassette	
Cleaning		Loading the Originals	3-5
Clear Key		M	
Clearing Counters for Each Account			2 74
Confirmation Beep		Making Different Types of Copy	
Control Panel		Making the User's Choice Settings	
Copy Paper Size		Manual Bypass Copying	
Copy Track		Manual Exposure	

×
ze
ž

Margin	Specifications	7.2
Max. Copy Set	Staple	
Memory Recall3-71	Start Key	
Meter Count	•	
Misfeed Clearing Procedures	Storing a Patie in Mamory	
•	Storing a Ratio in Memory	3-18
Misfeed Location Displays	T	
Mixed Orig. Detection	Toner Replenisher	4-13
Mixed Original Detect4-15	Total Counter	
Mode Check	Touch Panel	
Mode Check Key2-15	Tray Priority	
N	Turning ON and OFF	
Non-Auto Shut Off4-19	U	
Non-Sort3-20	_	4 1 4
Number Stamping3-62	User's Choice Functions	
0	Using Zoom Up/Down Key	
	Utility Key	
OHP Interleaving	Utility Mode	4-1
Original Direction	$\mathbf{W}$	
Original ▶Copy Default4-15	What does each message mean?	5-36
P	_	
Page Insertion3-48	X	
Panel Reset Key2-14	X / Y Zoom	3-16
Panel Resetting2-19	Z	
Photo	Z-Fold	3-30
Plug-In Counter Reset4-18	Zoom Memory Input	
Print Exposure4-19	Zoom Ratio	
Priority Device4-19	Zoom Ratio	5-14
Priority Offset Tray4-19		
Programming the Access Code4-24		
R		
Recalling a Job from Memory4-5		
Replacing the Staple Cartridge5-8		
Replacing the Toner Bottle5-6		
Reserve3-72		
S		
SADF Mode3-8		
Selecting Free Original Placement3-69		
Selecting Separate Scan3-70		
Selecting Small Original Adjustment3-69		
Selecting the Finishing Function3-22		
Selecting the Fixed Zoom3-14		
Setting a Copy Limit for Each Account4-26		
Setting the Copy Track Function4-22		
Shift Grouping3-22		
Shift Sorting		
Size Counter		
"Small" Originals4-17		
Sort		
Special Paper Setting3-20		
Special Laper Setting		