

e-STUDIO232 e-STUDIO282



User Function Guide



TRADEMARKS AND COPYRIGHT

Trademarks

- The official name of Windows 98 is Microsoft Windows 98 Operating System.
- The official name of Windows Me is Microsoft Windows Me Operating System.
- The official name of Windows 2000 is Microsoft Windows 2000 Operating System.
- The official name of Windows XP is Microsoft Windows XP Operating System.
- The official name of Windows Server 2003 is Microsoft Windows Server 2003 Operating System.
- Microsoft, Windows, Windows NT, and the brand names and product names of other Microsoft products are trademarks of Microsoft Corporation in the US and other countries.
- Apple, AppleTalk, Macintosh, Mac, TrueType, and LaserWriter are trademarks of Apple Computer, Inc. in the US and other countries.
- Postscript is a trademark of Adobe Systems Incorporated.
- Netscape is a trademark of Netscape Communications Corporation.
- IBM, AT and AIX are trademarks of International Business Machines Corporation.
- NOVELL, NetWare, and NDS are trademarks of Novell, Inc.
- Other company names and product names in this manual are the trademarks of their respective companies.

Copyright

© 2005 TOSHIBA TEC CORPORATION All rights reserved

Under the copyright laws, this manual cannot be reproduced in any form without prior written permission of TTEC. No patent liability is assumed, however, with respect to the use of the information contained herein.

TABLE OF CONTENTS

	TABLE OF CONTENTS	1
	PREFACE	3
	FEATURES OF THE e-STUDIO202L/232/282	4
1.	MANAGING ADDRESS BOOK (ADDRESS MENU)	5
	1. MANAGING ADDRESS BOOK	6
	MANAGING ADDRESS BOOK About Managing Contacts in Address Book	6
	Registering Contacts	7
	Editing Contacts	.10
	Deleting Contacts	.12
	Searching Contacts MANAGING GROUPS	. 14
	About Managing Groups in Address Book	18
	Creating New Group	.19
	Editing Groups	.22
	Deleting Groups	.28
	Searching Groups	.30
	Confirming the Members of the Groups	.34
2.	MANAGING COUNTERS (COUNTER MENU)	.35
	1. TOTAL COUNTER	.36
	Displaying Print Counter	.36
	Displaying Scan Counter	.37
	2. PRINT OUT TOTAL COUNTER	.პგ ივ
	DEPARTMENT COUNTER Displaying Print Counter for Department Code	. აყ ვი
	Displaying Scan Counter for Department Code	.41
	Displaying Fax Communication Counter for Department Code	.43
	Displaying Scan Counter for Department Code Displaying Fax Communication Counter for Department Code MANAGING DEPARTMENT CODE	.45
	Logging On As Administrator	.45
	Printing Department Codes List	.4/
	Enabling Department Code Resetting All Department Counters	.40 40
	Deleting All Department Codes	. - -3
	Registering a New Department Code	.51
	Editing the Department Code	.54
	Deleting the Department Code	.58
	Resetting the Counter of Each Department	.60
	Setting Output Limitations for All Departments	.02
3.	SETTING ITEMS (USER)	.63
	SETTING GENERAL FUNCTIONS	.64
	Setting the Auto Clear Mode	.64
	Changing the Display Language	.65
	Changing the Display Language Setting the Reversed Display Mode	.00
	SETTING COPT FUNCTIONS SETTING FAX FUNCTIONS	.00 70
	4. SETTING SCAN FUNCTIONS	.72
	5. PRINTING LISTS	.74
	Printing the Address Book List	.74
	Printing the Group Numbers List	.75
	Printing the Function List (User)	.76
	6. CHECKING E-MAIL	
	8. TURN OFF THE POWER (SHUT DOWN)	79
4.	SETTING ITEMS (ADMIN)	.81
	ENTERING TO ADMIN MENU SETTING GENERAL FUNCTIONS	
	Setting the Device Information	
	Setting the Notification	
	Changing the Administrator Password	.88
	Setting the Date and Time	.90
	Setting the Weekly Timer	.92
	Setting the Auto Power Save Mode	
	Setting the Sleep Mode Setting the Drawer Setup Pop-Up	.97
	octung the Drawer Setup r Op-Op	. ອອ

	3. SETTING NETWORK FUNCTIONS	100
	Setting the TCP/IP Protocol	
	Setting the IPX/SPX Protocol	105
	Setting the NetWare Settings	107
	Setting the SMB Protocol	109
	Setting the AppleTalk Protocol	112
	Setting the HTTP Network Service	114
	Setting the Ethernet Speed	116
	Setting the LDAP and SNMP Network Service	118
	4. SETTING COPY FUNCTIONS	
	5. SETTING FAX FUNCTIONS	
	Setting the Terminal ID	122
	Setting the Fax Initial Setup	125
	Setting the Line-2 Mode	
	Setting the RX Printing	130
	Setting the Recovery Transmission	134
	6. SETTING FILE FUNCTIONS	1 <u>36</u>
	7. SETTING E-MAIL FUNCTIONS	137
	Setting the Scan to E-mail Message Properties	137
	Setting the Scan to E-mail Fragmentation	138
	8. SETTING INTERNET FAX FUNCTIONS	
	Setting the Internet Fax Message Properties	139
	Setting the Internet Fax Fragmentation Setting the Internet Fax Body String Transmission	140
	Setting the internet rax Body String Transmission	141
	9. SETTING LIST/REPORT • Setting the Transmission / Reception Journal	142
	Setting the Transmission Reception Journal Setting the Communication Report	142
	Setting the Communication Report Setting the Reception List	144
	10. PRINTING LISTS	147
	11. SETTING PRINTER/E-FILING FUNCTIONS	149
	12. WIRELESS SETTINGS AND Bluetooth SETTINGS	151
5.	APPENDIX	153
-	1. LIST PRINT FORMAT	154
	Total Counter List	
	Department Code List	
	Address Book List	156
	Group Numbers List	
	Function List (User)	158
	NIC Configuration Page	159
	Function List (Administrator)	160
	PS3 Font List	175
	PCL Font List	
	INDEV	177

PREFACE

Thank you for purchasing the Toshiba Multifunctional Digital System e-STUDIO202L/232/282. This Operator's Manual describes the following:

- · How to set up the Multifunctional Digital System.
- How to operate the functions in the [USER FUNCTIONS] button.

Before using the Multifunctional Digital System, thoroughly read and understand this Operator's Manual. To ensure that clean copies are made at all times and to keep your Multifunctional Digital System in optimum working order, this Operator's Manual should be readily available for future reference.

To ensure correct and safe use of the Toshiba Multifunctional Digital System e-STUDIO202L/232/282, this Operator's Manual describes safety precautions according to the following three levels of warning:

Before reading this Operator's Manual, you should fully understand the meaning and importance of these signal words.

Warning

Indicates a potentially hazardous situation which, if not avoided, could result in death, serious injury, or serious damage, or fire in the equipment or surrounding assets.

Caution

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury, partial damage of the equipment or surrounding assets, or loss of data.

Note

Indicates a procedure you should follow to ensure the optimal performance of the Multifunctional Digital System and problem-free copying.

Tip

Describes handy information that is useful to know when operating the Multifunctional Digital System.

Advice

Describes an operation you should follow to keep the Multifunctional Digital System in good working order.

FEATURES OF THE e-STUDIO202L/232/282

The e-STUDIO202L/232/282 is a Multifunctional Digital Systems that is capable of using each function via networks. The e-STUDIO202L/232/282 also has various optional paper handling devices to meet the needs of your office.

The e-STUDIO202L/232/282 offers the following convenient features, functions and options.

- The copying speed is 20 copies (LT) per minute for e-STUDIO202L, 23 copies (LT) per minute for e-STUDIO232, 28 copies (LT) per minute for the e-STUDIO282.
- Considering eco-friendliness and energy saving, the used toner free recycle system is adopted, warmup time is shortened to approximately 25 seconds and the ozone generation amount in the equipment is reduced by 75% compared with current models.
- Improving the scanning speed allows you to scan, fax and copy with ease. You can also make duplex copies at the equivalent speed.
- An all-in-one controller is installed to perform the effective network functions. (To use the print, scan
 and Internet Fax functions, optional printer kit, scanner kit, printer/scanner kit, etc. are required.)
- The input/output interface is designed for internet connection (access) environment.
- A 1/2 VGA wide panel improves operability and efficiency.
- A universal design is adopted for the control panel whose angle can be changed.
- The e-Filing function allows you to scan, save, reuse, and re-edit the original data via client PCs from the scanning section.
- Received Fax documents can be stored in the e-Filing without printing them. (Optional FAX board is required.)
- Scanned originals can be sent via Fax and E-mail simultaneously. (To send them via Fax, optional FAX board is required. To send them via E-mail, optional printer/scanner kit or scanner kit is required.)
- Electric sorting improves copying productivity.
- · Comes with rich editing functions such as trimming, masking and mirror.
- Loading the page memory and hard disk as standard equipment enables 2 in 1/4 in 1, Electronic sorting and magazine sorting, etc.
- The job build function enables the copying and storing collectively of up to 1,000 original pages by scanning each page with the optimum original mode or image adjustment and setting the desired finishing mode.
- A fixing system that uses less oil reduces the amount of oil affixed to the paper.
- By simply replacing the cartridge, you can add toner without dirtying your hands.
- A wide variety of media from thick paper (up to 110 lb. Index), sticker labels, OHP films, etc. is acceptable.
- Printing and copying on envelopes are also possible.
- Installing an optional finisher offers quick automatic sorting, stapling and hole punching (optional) of copies.
- Installing a finisher with an optional saddle stitching function attached allows you to select the saddle stitching mode which will automatically staple the center of the documents just like a book.
- When the optional printer/scanner kit, both printer kit and scanner kit, or Fax board is installed, the
 machine will enter a Sleep mode and will re-activate when a job is received.

1. MANAGING ADDRESS BOOK (ADDRESS MENU)

1.	. MANAGING ADDRESS BOOK	6
	About Managing Contacts in Address Book	6
	Registering Contacts	7
	Editing Contacts	
	Deleting Contacts	12
	Searching Contacts	14
2.	MANAGING GROUPS	18
	About Managing Groups in Address Book	18
	Creating New Group	19
	Editing Groups	22
	Deleting Groups	
	Searching Groups	

1. MANAGING ADDRESS BOOK

About Managing Contacts in Address Book

Contacts in the Address Book will be displayed such as in the [ADDRESS] button screen that is displayed by pressing the [FAX] button on the Control Panel. These are also used to specify the recipients for Scan to E-mail documents.

In Address Book, you can register up to 1000 contacts that can contain a fax number, an E-mail address, or both in each contact. Also you can specify the option settings for the fax transmission in each contact, such as Transmission type, ECM, Quality transmission, Line select, and subaddress settings.

Note

- You can register the E-mail addresses in the Address Book, however, you can use them to specify the
 destinations for Scan to E-mail or Internet Fax only when the Scanner Kit is installed, or when the
 Printer/Scanner Kit is installed.
- You can register the fax numbers in the Address Book, however, you can use them to specify the destinations for fax transmission only when the optional Fax unit is installed.


In the Address Book button menu, you can perform following operations to manage contacts.

- P.7 "Registering Contacts"
- P.10 "Editing Contacts"
- P.12 "Deleting Contacts"
- P.14 "Searching Contacts"


Registering Contacts

The following procedure describes how to register new contact in the Address Book.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- **2** Press the [ADDRESS] button, and then press the [ADDRESS BOOK] button on the touch panel.

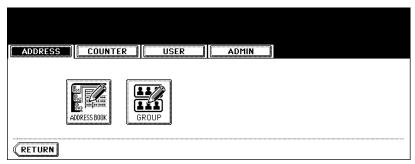

- · The ADDRESS BOOK screen is displayed.
- 3 Press undefined button that you want to register new contact and press the [ENTRY] button.

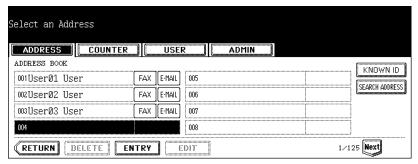


· The ADDRESS BOOK REGISTRATION screen is displayed.



If the touch panel does not display an undefined contact, press the [Next] button to display the next screen.

4 Press each button on the touch panel to enter following contact information.

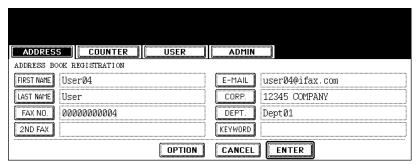

- [FIRST NAME] Enter the first name of the contact. This name will appear in the address book list on the touch panel.
- [LAST NAME] Enter the last name of the contact. This name will appear in the address book list on the touch panel.
- [FAX NO.] Enter the fax number of the contact.
- · [2ND FAX] Enter the second fax number of the contact.
- [E-MAIL] Enter the E-mail address of the contact.
- **[CORP.]** Enter the company name of the contact.
- [DEPT.] Enter the department name of the contact.
- [KEYWORD] Enter the keyword of the contact. This keyword can be used to search for this contact.



You must at least enter either the [FIRST NAME] or [LAST NAME] button, and either the [FAX NO.] or [E-MAIL] button to register the contact.




When you press each button, the input screen is displayed. Enter the value using the keyboard and digital keys and press the [ENTER] button to set the entry.

5 Press the [OPTION] button to specify the default settings for a fax transmission.



This is available only when the optional fax unit is installed.

6 Specify following items as you required.

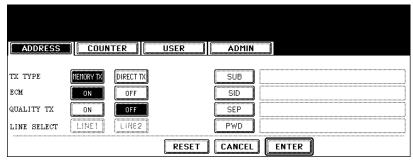


- TX TYPE This sets the type of the fax transmission mode. Press the [MEMORY TX] button to select the memory transmission mode or the [DIRECT TX] button to select the direct transmission mode.
- ECM Select whether enabling or disabling the ECM (Error Correction Mode) to automatically resend any
 portion of the document affected by phone line noise or distortion. Press the [ON] button to enable the ECM,
 or the [OFF] button to disable the ECM.
- QUALITY TX Select whether a document is sent in the Quality TX mode. This feature allows to send a document at a slower speed than a normal so that the transmission will be less affected by line condition. Press the [ON] button to enable the Quality TX, or [OFF] button to disable the Quality TX.
- LINE SELECT Select the line to be used for the fax transmission. Press the [LINE1] button to use the Line 1, or [LINE2] button to use Line 2. The [LINE2] button can be selected only when the optional 2nd line board is installed.
- [SUB] Enter the mailbox number if you want to send originals to the mailbox in the remote fax.
- [SID] Enter the password to input a document into the mailbox in the remote facsimile.
- [SEP] Enter the mailbox number if you want to retrieve a document from the mailbox in the remote fax.
- [PWD] Enter the password to retrieve a document from the mailbox in the remote facsimile.



When you press the [SUB], [SID], [SEP], and [PWD] buttons, the input screen is displayed. Enter the value using the keyboard and digital keys, and press the [ENTER] button to set the entry.

7 Press the [ENTER] button to save option settings.


A Press the [ENTER] button to register the contact.

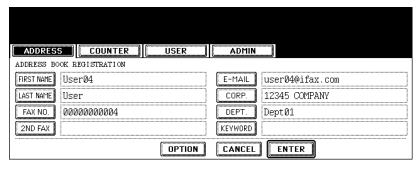


Editing Contacts

The following procedure describes how to edit existing contact in the Address Book.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- **2** Press the [ADDRESS] button, and then press the [ADDRESS BOOK] button on the touch panel.

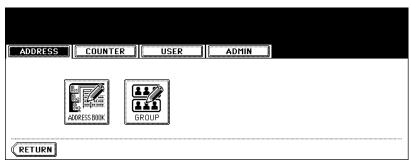

- · The ADDRESS BOOK screen is displayed.
- 3 Press the contact that you want to edit and press the [EDIT] button.

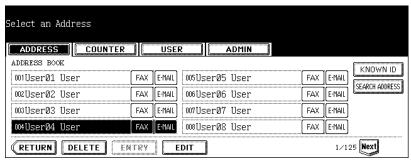


· The ADDRESS BOOK EDIT screen is displayed.



- If the touch panel does not display the contact that you want to edit, press the [Next] button to display the next screen.
- You can quickly search for the contact that you want to edit. To search for the contact, see the "Searching Contacts".

 P.14

⚠ Press each button on the touch panel to edit the contact information.

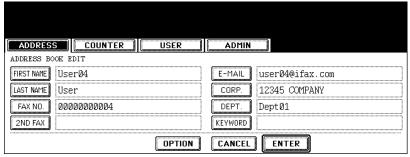


- For the description of each item, see the Step 4 in the procedure of "Registering Contacts" in the previous section
- 5 Press the [OPTION] button to specify the default settings for a fax transmission.




This is available only when the optional fax unit is installed.

6 Specify the items as you required.

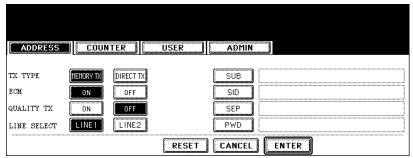

- For the description of each item, see the Step 6 in the procedure of "Registering Contacts" in the previous section
- 7 Press the [ENTER] button to save option settings.
- 8 Press the [ENTER] button to save the contact.

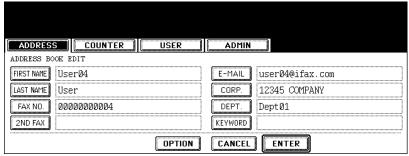


· The contact is edited.


Deleting Contacts

The following procedure describes how to delete existing contact in the Address Book.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- **2** Press the [ADDRESS] button, and then press the [ADDRESS BOOK] button on the touch panel.

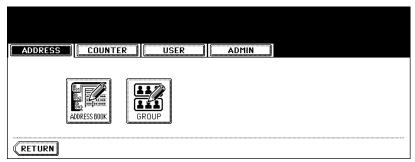

- · The ADDRESS BOOK screen is displayed.
- 3 Press the contact that you want to delete and press the [DELETE] button.

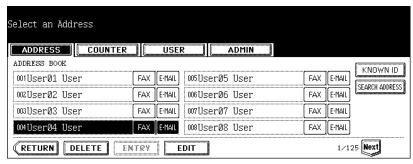


· The delete confirmation screen is displayed.



If the touch panel does not display the contact that you want to delete, press the [Next] button to display the next screen.

4 Press the [YES] button to delete the contact, or the [NO] button to cancel deleting.

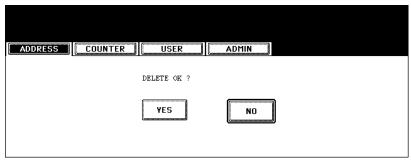

• When you press the [YES] button, the selected contact is deleted.


Searching Contacts

The following procedure describes how to search for contacts in the Address Book. This function is useful to find the contact that you want to edit.


You can search for the contacts by entering a ID number or the search strings.

Searching a Contact by ID Number


- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- **2** Press the [ADDRESS] button, and then press the [ADDRESS BOOK] button on the touch panel.

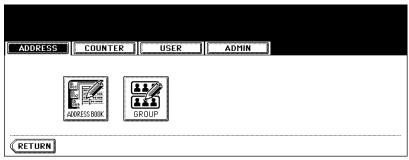


- · The ADDRESS BOOK screen is displayed.
- 3 Press the [KNOWN ID] button.

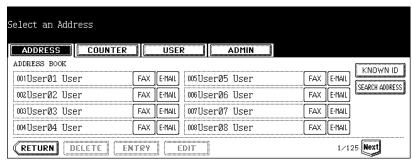

- · The KNOWN ID screen is displayed.
- 4 Enter the ID Number using the digital keys and press the [ENTER] button.

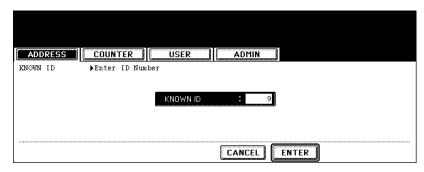

5 The touch panel displays the screen that contains the searched contact. Press the contact and press the [EDIT] button to edit the contact information, or press the [DELETE] button to delete the contact.

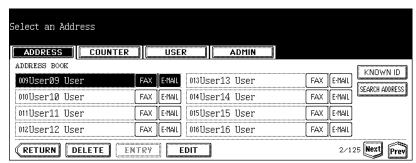


• See "Editing Contacts" for the instruction to edit the contact.


P.10

Searching Contacts by Entering Search String

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- **2** Press the [ADDRESS] button, and then press the [ADDRESS BOOK] button on the touch panel.

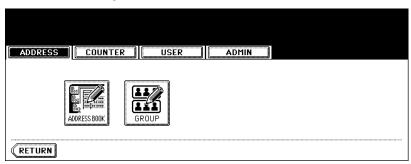


- · The ADDRESS BOOK screen is displayed.
- 3 Press the [SEARCH ADDRESS] button.

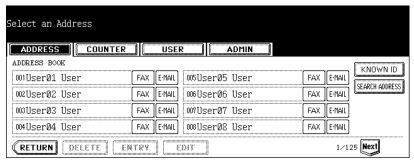


· The SEARCH ADDRESS screen is displayed.

4 Press the button that is used for searching to specify the search string.

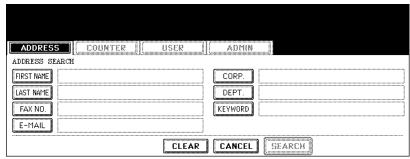


- · When you press each button, the input screen is displayed.
- 5 Enter the search string using the keyboard and digital keys, and press the [ENTER] button.

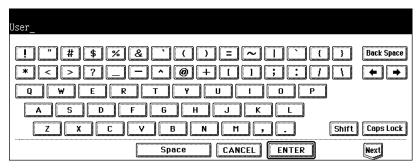




It will search for the contacts that contain the search text in the specified items.

6 Specify the search string in the items that you require and press the [SEARCH] button.

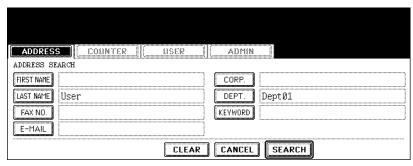

7 The touch panel displays the screen that contains the searched contacts. Press the contact and press the [ENTER] button to edit the contact information.

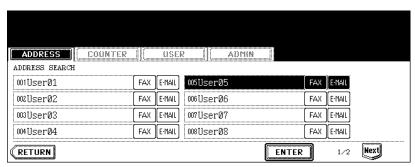

• See "Editing Contacts" for the instruction to edit the contact.

2. MANAGING GROUPS

About Managing Groups in Address Book

You can create groups that contain the multiple members of contacts. This enables you to specify the groups instead of specifying each recipient separately when operating Scan to E-mail, or fax or Internet Fax transmission. You can also delete groups.

In Address Book, you can register up to 200 groups and each group can contain up to 1000 members.

Note

- One fax number or one E-mail address is counted as one destination. If you select the contact that contains both fax number and E-mail address, it results in two destinations in the group.
- You can register the E-mail addresses in the Groups, however, you can use them to specify the destinations for Scan to E-mail or Internet Fax only when the Scanner Kit is installed, or when the Printer/Scanner Kit is installed.
- You can register the fax numbers in the Groups, however, you can use them to specify the destinations for fax transmission only when the optional Fax unit is installed.


In the Group button menu, you can perform following operations to manage groups.

- P.19 "Creating New Group"
- P.22 "Editing Groups"
- P.28 "Deleting Groups"
- P.30 "Searching Groups"


Creating New Group

The following procedure describes how to create new group in the Address Book.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [ADDRESS] button, and then press the [GROUP] button on the touch panel.

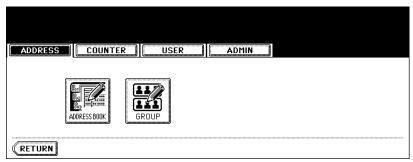

- · The GROUP screen is displayed.
- **3** Press undefined button that you want to create new group and press the [ENTRY] button.

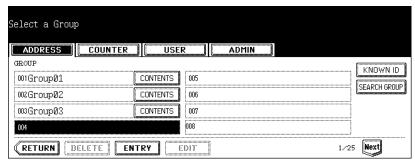


· The GROUP NO. REGISTRATION screen is displayed.




If the touch panel does not display an undefined group, press the [Next] button to display the next screen.

▲ Press the [GROUP NAME] button.

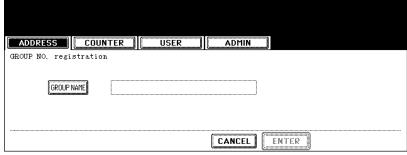


· The input screen is displayed.


5 Enter the group name using the keyboard and digital keys, and press the [ENTER] button.

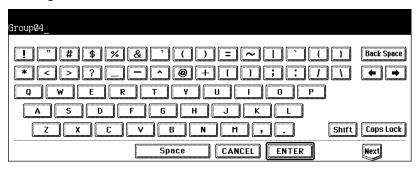

6 Press the [ENTER] button.

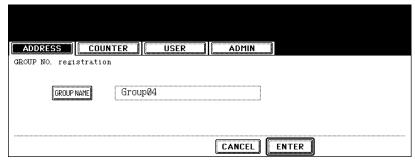


- The CHECK OF GROUP MEMBER screen is displayed.
- 7 Select the contacts that you want to add to the group, and then press the [ENTER] button.

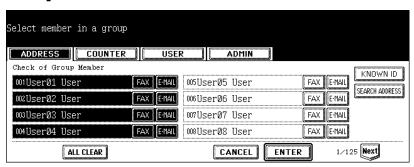

- To add or remove the contacts by selecting each contacts manually, see "Adding or Removing Contacts".
 P.24

New Group is created and appears on the touch panel.

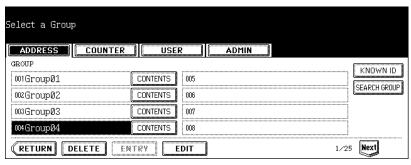


Editing Groups


The following procedure describes how to edit the name of groups, add or remove the members in groups.

Editing Group Name

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- **2** Press the [ADDRESS] button, and then press the [GROUP] button on the touch panel.

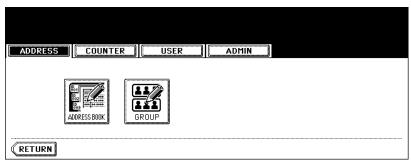

- · The GROUP screen is displayed.
- 3 Press the group that you want to edit and press the [EDIT] button.

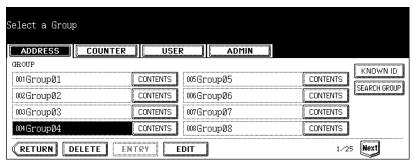


· The GROUP NO. EDIT screen is displayed.




If the touch panel does not display the group that you want to edit, press the [Next] button to display the next screen


4 Press the [GROUP NAME] button to edit the group name.

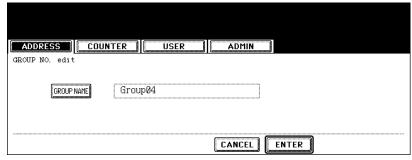

- The input screen is displayed.
- 5 Enter the group name using the keyboard and digital keys, and press the [ENTER] button.

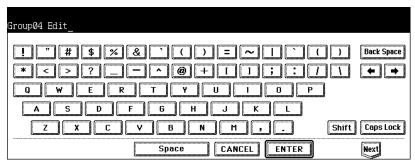


6 Press the [ENTER] button.

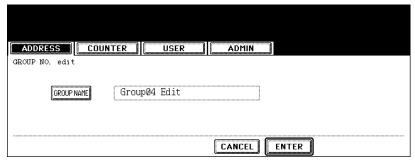

• The CHECK OF GROUP MEMBER screen is displayed.

7 In the screen, the contacts that have been registered in the group are highlighted.

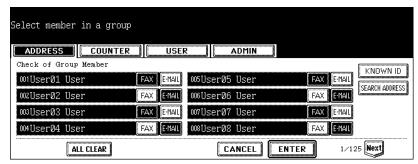


- To add or remove the contacts by selecting each contacts manually, see "Adding or Removing Contacts".
 P.24

- 8 To finish editing the group, press the [ENTER] key to save the settings.

Adding or Removing Contacts

1 Press the contacts that are not highlighted to add to the group, or press the highlighted contacts to remove from the group.

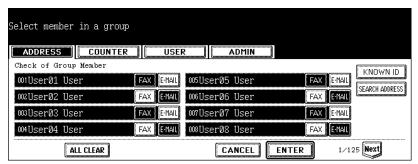


- · To add both the fax number and E-mail address of a contact to the group, press over the contact name.
- To add only the fax number of a contact to the group, press the [FAX] button of the contact.
- To add only the E-mail address of a contact to the group, press the [E-MAIL] button of the contact.

Tips


- Press the [Prev] button or [Next] button to display the contacts in the different page.
- · You can also clear the all highlighted contacts by pressing the [ALL CLEAR] button.
- **7** Press the [ENTER] button to save the group.
 - · The group is modified.

Adding Contacts by Searching with ID Number


1 Press the [KNOWN ID] button.

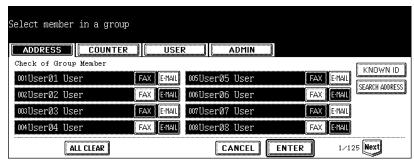

- · The KNOWN ID screen is displayed.
- 2 Enter the ID Number using the digital keys and press the [ENTER] button.

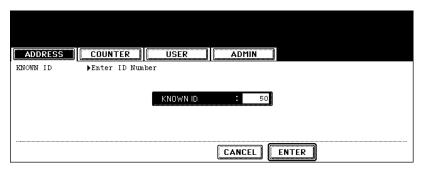

3 The touch panel displays the screen that contains the searched contact. Press the contact to be added to the group.

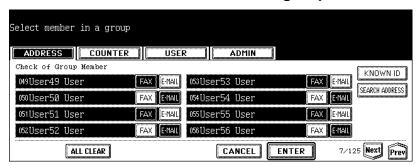

- To add both the fax number and E-mail address of a contact to the group, press over the contact name.
- To add only the fax number of a contact to the group, press the [FAX] button of the contact.
- To add only the E-mail address of a contact to the group, press the [E-MAIL] button of the contact.




- · Press the [Prev] button or [Next] button to display the contacts in the different page.
- · You can also clear the all highlighted contacts by pressing the [ALL CLEAR] button.


- ⚠ Press the [ENTER] button to add to the group.
 - · The contacts in the group is modified.

Adding Contacts by Searching with Search String


1 Press the [SEARCH ADDRESS] button.

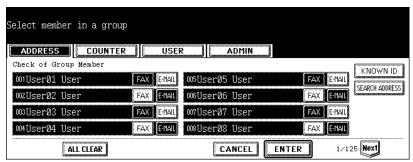

- · The SEARCH ADDRESS screen is displayed.
- **2** Press the button that is used for searching to specify the search string.

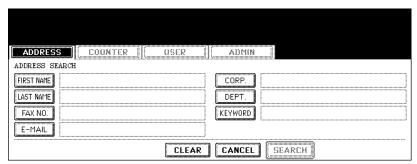


- · When you press each button, the input screen is displayed.
- 3 Enter the search string using the keyboard and digital keys, and press the [ENTER] button.

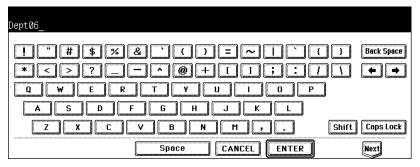




It will search for the contacts that contain the search string in the specified items.

4 Specify the search string in the items that you require and press the [SEARCH] button.

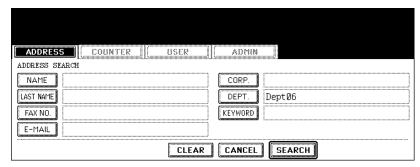

5 The touch panel displays the screen that contains the searched contacts. Press the contacts that you want to add to the group.

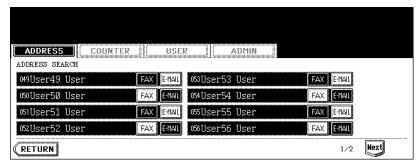

- To add both the fax number and E-mail address of a contact to the group, press over the contact name.
- To add only the fax number of a contact to the group, press the [FAX] button of the contact.
- To add only the E-mail address of a contact to the group, press the [E-MAIL] button of the contact.




Press the [Prev] button or [Next] button to display the contacts in the different page.

- 6 Press the [ENTER] button to save the group.
 - · The contacts in the group is modified.


Deleting Groups

The following procedure describes how to delete a group in the Address Book.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- **2** Press the [ADDRESS] button, and then press the [GROUP] button on the touch panel.

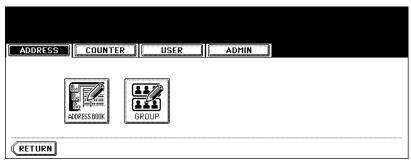

- · The GROUP screen is displayed.
- 3 Press the group that you want to delete and press the [DELETE] button.

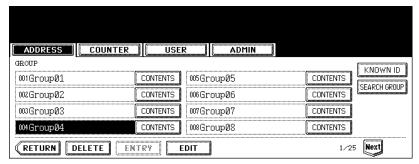


· The delete confirmation screen is displayed.



If the touch panel does not display the group that you want to delete, press the [Next] button to display the next screen.

4 Press the [YES] button to delete the contact, or [NO] button to cancel deleting.

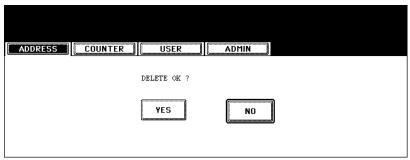

• When you press the [YES] button, the selected group is deleted.


Searching Groups

The following procedure describes how to search for groups in the Address Book. This function is useful to find the contact that you want to edit.


You can search for the groups by entering the ID number or the search string.

Searching a Group by ID Number


- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- **2** Press the [ADDRESS] button, and then press the [GROUP] button on the touch panel.

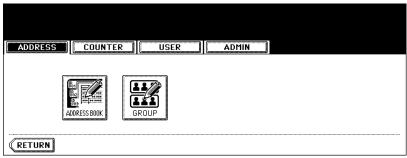


- · The GROUP screen is displayed.
- 3 Press the [KNOWN ID] button.

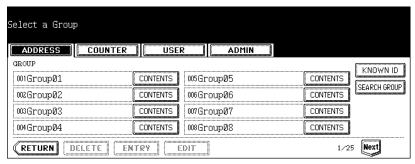

- · The KNOWN ID screen is displayed.
- 4 Enter the ID Number using the digital keys and press the [ENTER] button.

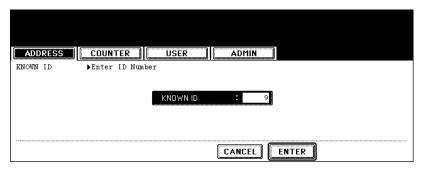


5 The touch panel displays the screen that contains the searched group. Press the group and press the [EDIT] button to edit the group information.

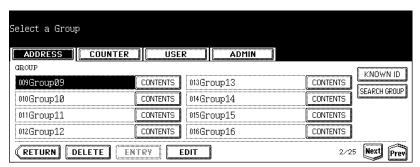


• See "Editing Groups" for the instruction to edit the group. 🚨 P.22

Searching Groups by Group Name

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- **2** Press the [ADDRESS] button, and then press the [GROUP] button on the touch panel.

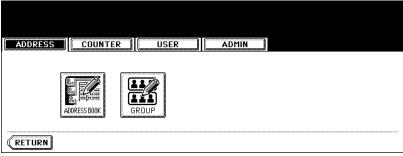


- · The GROUP screen is displayed.
- 3 Press the [SEARCH GROUP] button.

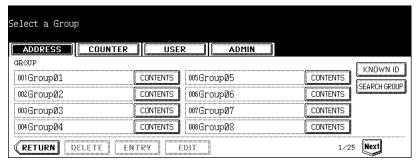


· The SEARCH GROUP screen is displayed.

4 Press the [GROUP NAME] button to specify the search string.

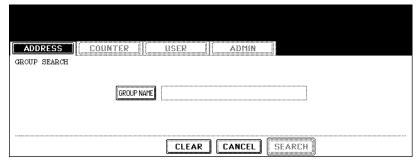


- The input screen is displayed.
- 5 Enter the search string using the keyboard and digital keys, and press the [ENTER] button.

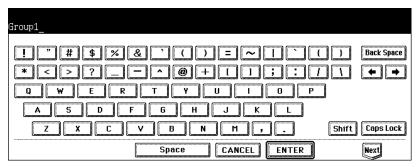




It will search for the groups that contain the search string in the group name field.

6 Press the [SEARCH] button.

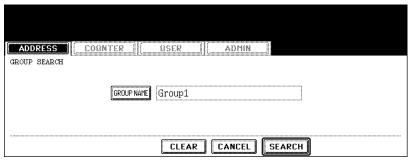

7 The touch panel displays the screen that contains the searched groups. Press the group and press the [ENTER] button to edit the group information.

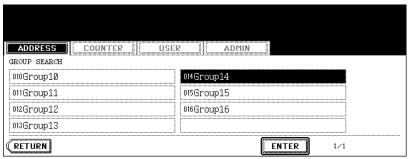


• See "Editing Groups" for the instruction to edit the contact. ☐ P.22


Confirming the Members of the Groups

The following procedure describes how to confirm the contacts that are added in the group.


- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- **2** Press the [ADDRESS] button, and then press the [GROUP] button on the touch panel.

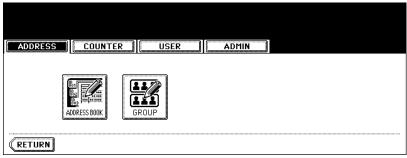

- · The GROUP screen is displayed.
- **3** Press the [CONTENTS] button of the group that you want to confirm the members.

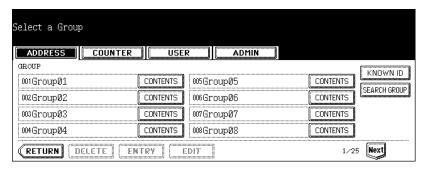

4 The contacts added to the group are displayed.

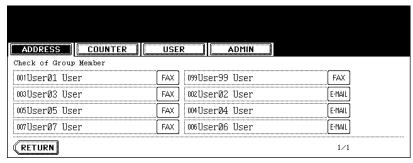

2. MANAGING COUNTERS (COUNTER MENU)


1.	TOTAL COUNTER	36
	Displaying Print Counter	36
	Displaying Scan Counter	
2.	PRINT OUT TOTAL COUNTER	38
3.	DEPARTMENT COUNTER	39
	Displaying Print Counter for Department Code	
	Displaying Scan Counter for Department Code	
	Displaying Fax Communication Counter for Department Code	
4.	MANAGING DEPARTMENT CODE	45
	Logging On As Administrator	45
	Printing Department Codes List	47
	Enabling Department Code	
	Resetting All Department Counters	
	Deleting All Department Codes	
	Registering a New Department Code	
	Editing the Department Code	
	Deleting the Department Code	
	Resetting the Counter of Each Department	
	Setting Output Limitations for All Departments	

Displaying Print Counter


This feature allows you to display the total number of the print counter.

The print counter contains following counters:


- Copy Counter indicates the number of sheets that has been printed by copy operations.
- Fax Counter indicates the number of sheets that has been printed by fax receptions.
- Printer Counter indicates the number of sheets that has been printed by print operations and E-mail receptions (Internet Fax receptions).
- List Counter indicates the number of sheets that has been printed by system page print operations.
 - 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
 - **2** Press the [COUNTER] button, and then press the [TOTAL COUNTER] button on the touch panel.

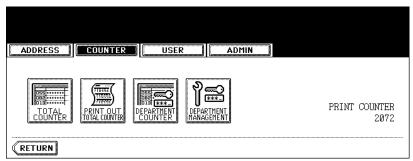

- · The TOTAL COUNTER menu is displayed.
- 3 Press the [PRINT COUNTER] button.

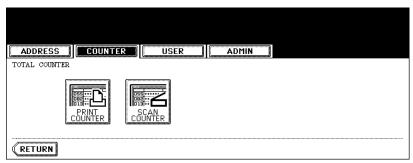

▲ The Print Counter is displayed.

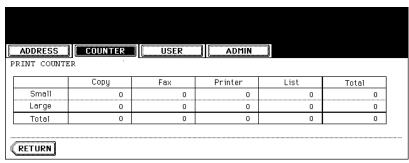


Displaying Scan Counter


This feature allows you to display the total number of the scan counter.

The scan counter contains following counters:


- Copy Counter indicates the number of originals that has been scanned by copy operations.
- Fax Counter indicates the number of originals that has been scanned by fax and Internet Fax transmissions.
- Network Counter indicates the number of originals that has been scanned by scan operations.
 - 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- **2** Press the [COUNTER] button, and then press the [TOTAL COUNTER] button on the touch panel.

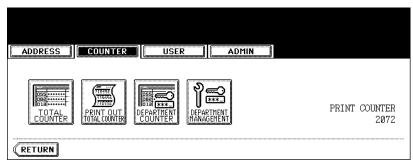

- · The TOTAL COUNTER menu is displayed.
- 3 Press the [SCAN COUNTER] button.

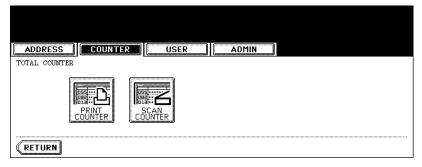


▲ The Scan Counter is displayed.

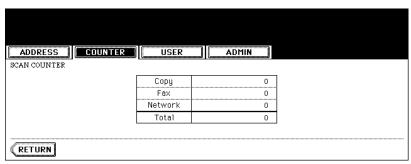

This feature allows you to print the total counter list.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- Press the [COUNTER] button, and then press the [PRINT OUT TOTAL COUNTER] button on the touch panel.

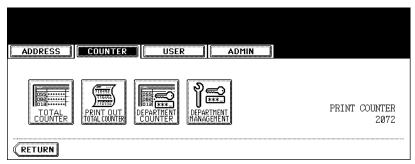

· The total counter list is printed.



For an output example of the total counter list, see "Total Counter List". 🕮 P.154

3. DEPARTMENT COUNTER

Displaying Print Counter for Department Code

This feature allows you to display the number of the print counter for each department code.




The department counter is available only when this equipment has been managed with the department code.


P.45 "4.MANAGING DEPARTMENT CODE"

The print counter contains following counters:


- Copy Counter indicates the number of sheets that has been printed by copy operations.
- Fax Counter indicates the number of sheets that has been printed by polling operations.
- Printer Counter indicates the number of sheets that has been printed by print operations.
- List Counter indicates the number of sheets that has been printed by system page print operations.
 - 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
 - Press the [COUNTER] button, and then press the [DEPARTMENT COUNTER] button on the touch panel.

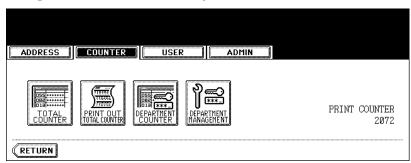


- · The DEPARTMENT CODE screen is displayed.
- 3 Enter the department number using the digital keys, and then press the [ENTER] button.

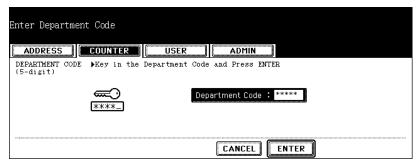

4 Press the [PRINT COUNTER] button.

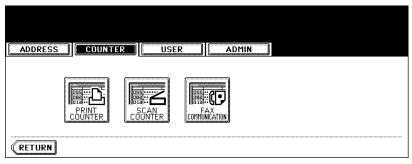

5 The Print Counter for the specified department code is displayed.

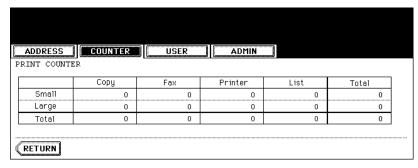

Displaying Scan Counter for Department Code


This feature allows you to display the number of the scan counter for each department code.




The department counter is available only when this equipment has been managed with the department code. P.45 "4.MANAGING DEPARTMENT CODE"

The scan counter contains following counters:


- Copy Counter indicates the number of originals that has been scanned by copy operations.
- Fax Counter indicates the number of originals that has been scanned by fax and Internet Fax transmissions.
- Network Counter indicates the number of originals that has been scanned by scan operations.
 - 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
 - **2** Press the [COUNTER] button, and then press the [DEPARTMENT COUNTER] button on the touch panel.

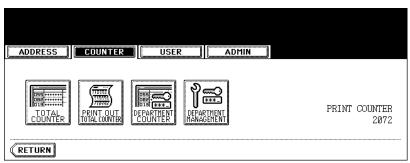


- · The DEPARTMENT CODE screen is displayed.
- 3 Enter the department number using the digital keys, and then press the [ENTER] button.

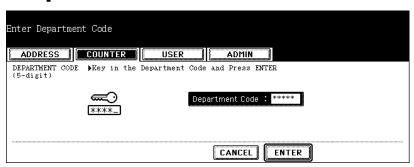

4 Press the [SCAN COUNTER] button.

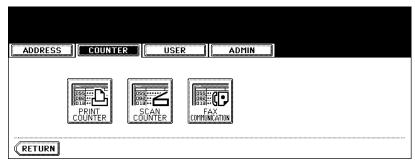

5 The Scan Counter for the specified department code is displayed.

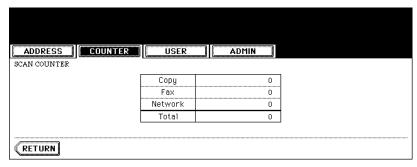

Displaying Fax Communication Counter for Department Code


This feature allows you to display the number of the Fax and Internet Fax Transmission and Reception counter for each department code.




The department counter is available only when this equipment has been managed with the department code. P.45 "4.MANAGING DEPARTMENT CODE"

The fax communication counter contains following counters:


- Transmit indicates the number of pages that are sent by Fax transmissions.
- Reception indicates the number of pages that are received by polling operations.
 - 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
 - 2 Press the [COUNTER] button, and then press the [DEPARTMENT COUNTER] button on the touch panel.

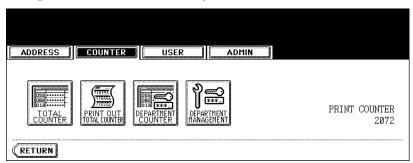


- · The DEPARTMENT CODE screen is displayed.
- 3 Enter the department number using the digital keys, and then press the [ENTER] button.

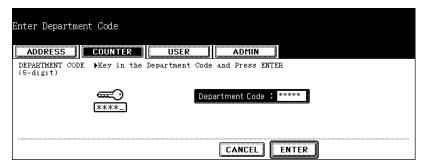

4 Press the [FAX COMMUNICATION] button.

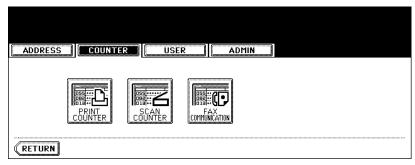

5 The Fax Communication Counter for the specified department code is displayed.

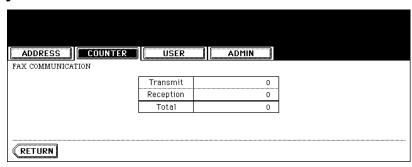

4. MANAGING DEPARTMENT CODE

Logging On As Administrator


You can audit the copy quantity of copy, print, scan, and facsimile pages performed by setting a department code. Up to 1000 department codes can be registered.

To manage the department code, you must know the administrator password for this equipment. Therefore, it is recommended to be performed by an authorized administrator in your place.




If the User Management Setting is enabled and you login with the user name that has the Account Manager privilege, you do not have to enter the administrator password to display the DEPARTMENT MANAGEMENT menu.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- 2 Press the [COUNTER] button, and then press the [DEPARTMENT MANAGEMENT] button on the touch panel.

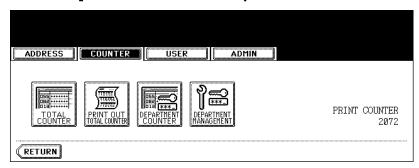


- The ADMINISTRATOR PASSWORD screen is displayed.
- ? Press the [PASSWORD] button.

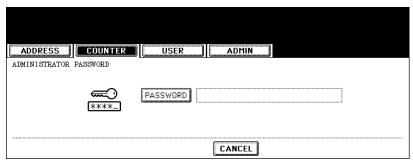


· The input screen is displayed.

▲ Enter the administrator password and press the [ENTER] button.

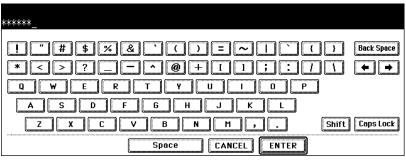

· The DEPT. MANAGEMENT menu is displayed.

5 Continue the operation that you want.

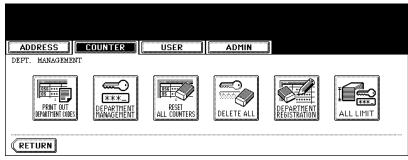


- P.47 "Printing Department Codes List"
- P.48 "Enabling Department Code"
- P.49 "Resetting All Department Counters"
- P.50 "Deleting All Department Codes"
- P.51 "Registering a New Department Code"
- P.54 "Editing the Department Code"
- P.58 "Deleting the Department Code"
- P.62 "Setting Output Limitations for All Departments"

Printing Department Codes List

You can print out the department codes list and counters for each department code.

1 In the DEPT. MANAGEMENT menu, press the [PRINT OUT DEPARTMENT CODES] button.

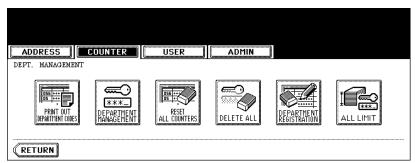

· Printing begins.




- For the procedure to display the screen above, see "Logging On As Administrator". 🚨 P.45
- For an output example of the department code list, see "Department Code List". 🚨 P.155

Enabling Department Code

In the initial setting, the department code feature is disabled. If you want to manage the counter separately by the department codes, you must enable the department code. When the department management is enabled, the department code input screen will be displayed before entering the copy, scan, fax, and e-Filing operation screen to manage the operations for each department code. Also the print jobs that are sent from computers can be managed for each department code.

Note

- The [DEPARTMENT MANAGEMENT] button will be available after registering a department code.
 Before enabling the department code, register the required department code.
 P.51 "Registering a New Department Code"
- Using TopAccess, you can also configure the Department Code Enforcement setting that sets whether
 the invalid jobs, which a department code is not specified or invalid department code is specified, will
 be printed or stored in the invalid job list when the department management is enabled. For instructions on how to set the Department Code Enforcement, see *TopAccess Guide*.
- When the User Management Setting is enabled, the Department Code feature cannot be disabled. If
 you want to disable the Department Code, you must disable the User Management Setting and then
 disable the Department Code.
 - 1 In the DEPT. MANAGEMENT menu, press the [DEPARTMENT MANAGEMENT] button.

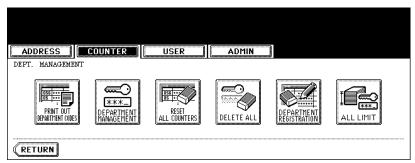


· The DEPARTMENT MANAGEMENT screen is displayed.



For the procedure to display the screen above, see "Logging On As Administrator". 🛄 P.45

2 Press the [ENABLE] button to enable the department code, or [DISABLE] button to disable the department code.

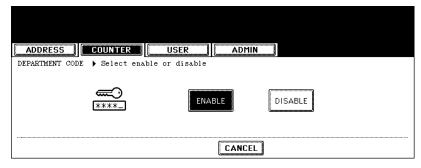


Resetting All Department Counters

This function clears all department counters to "0".



- This function is available only when the department code is enabled.
- This function clears only the department counters. You cannot clear the total counter.
 - 1 In the DEPT. MANAGEMENT menu, press the [RESET ALL COUNTERS] button.

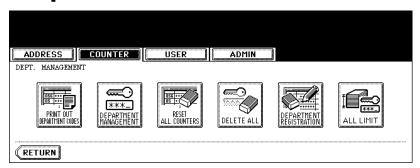


· The clear confirmation screen is displayed.



For the procedure to display the screen above, see "Logging On As Administrator". 🚨 P.45

Press the [YES] button to clear all department counters, or [NO] button to cancel clearing.

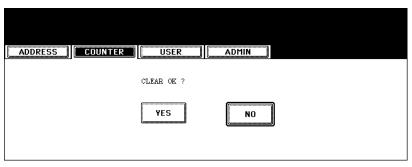


This function deletes all department codes that have been registered.



The [DELETE ALL] button will be available after registering a department code.

P.51 "Registering a New Department Code"

1 In the DEPT. MANAGEMENT menu, press the [DELETE ALL] button.

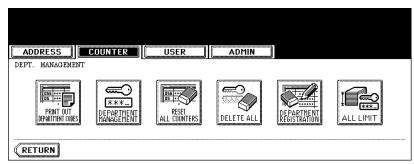


· The delete confirmation screen is displayed.



For the procedure to display the screen above, see "Logging On As Administrator". 🚨 P.45

2 Press the [YES] button to delete all department codes, or [NO] button to cancel deleting.

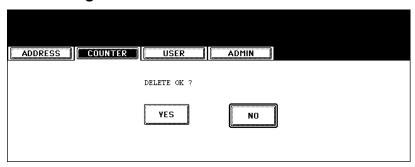

Registering a New Department Code


The function allows you to register new department code.



After registering the department code(s), you must enable the Department Code function.

P.48 "Enabling Department Code"

1 In the DEPT. MANAGEMENT menu, press the [DEPARTMENT REGISTRATION] button.

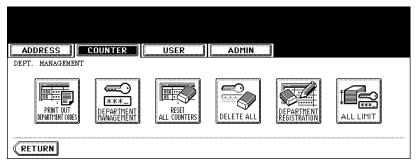


· The DEPARTMENT CODE screen is displayed.



For the procedure to display the screen above, see "Logging On As Administrator". 🚨 P.45

2 Press the undefined department code and press the [CHANGE] button.

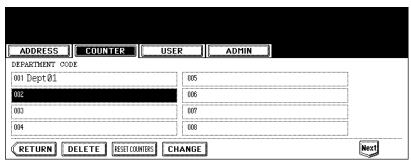


· The input screen is displayed.




If the touch panel does not display an undefined department code, press the [Next] button to display the next screen

3 Enter the department name using the keyboard and digital keys, and press the [ENTER] button.

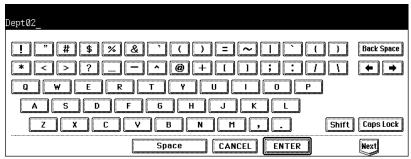

- The REGISTRATION DEPARTMENT CODE screen is displayed.
- 4 Enter the 5-digit code in the "New Code" field using the digital keys, and then press the [SET] button to set the entry.

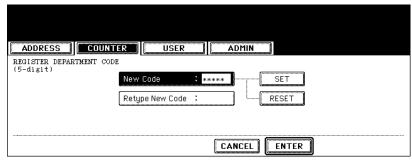


- If you enter the code, asterisks (*) appear in the "New Code" field.
- If you want to clear the code to retype it, press the [CLEAR] button on the Control Panel.
- · After pressing the [SET] button, the "Retype New Code" field is highlighted.



The department code must be the 5-digit code except "00000".

5 Enter the 5-digit code again in the "Retype New Code" field using the digital keys, and then press the [SET] button to set the entry.

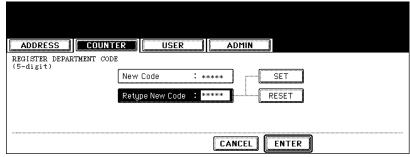

- If you enter the code, asterisks (*) appear in the "Retype New Code" field.
- If you want to clear the code to retype it, press the [CLEAR] button on the Control Panel.




If you want to return to the "New Code" field to retype it, press the [RESET] button.

6 Press the [ENTER] button at the bottom of the touch panel.

• The LIMITATION screen is displayed.

7 Set the limitation of this department code as required.

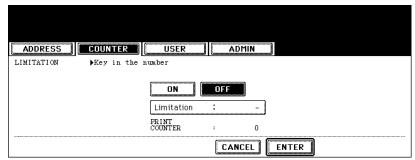

Press the [ON] button to enable the output limitation for this department code. When you select the [ON] button, press the "Limitation" field and enter the maximum number of the outputs for this department code using the digital keys. You can enter up to "99999999". If you do not set the output limitation for outputs, press the [OFF] button.



If you enter "0" for the limitation, it will disable printing any copies or prints using this department code.


R Press the [ENTER] button.

· New department code is registered.

Editing the Department Code

The function allows you to edit the existing department code.

In the DEPT. MANAGEMENT menu, press the [DEPARTMENT REGISTRATION] button.

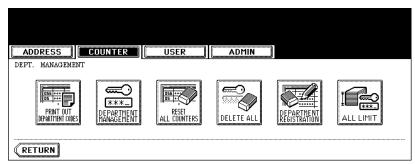


· The DEPARTMENT CODE screen is displayed.



For the procedure to display the screen above, see "Logging On As Administrator". 🚨 P.45

2 Press the department button that you want to edit and press the [CHANGE] button.

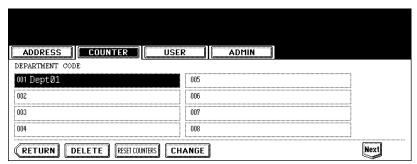


· The message "This department code is already registered. Do you wish to replace this code?" is displayed.




If the touch panel does not display the department code that you want to edit, press the [Next] button to display the next screen.


3 Press the [ENTER] button.

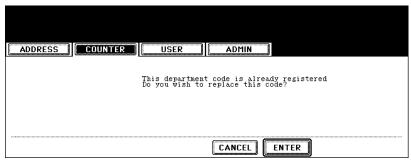

- · The input screen is displayed.
- 4 Enter the department name using the keyboard and digital keys, and press the [ENTER] button.

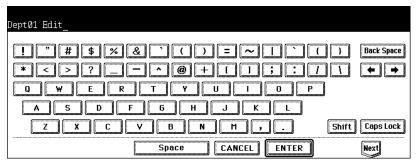


- · The CHANGE DEPARTMENT CODE screen is displayed.
- 5 Enter current department code in the "Current Code" field using the digital keys, and then press the [SET] button to set the entry.

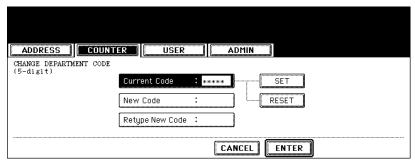

- If you enter the code, asterisks (*) appear in the "Current Code" field.
- If you want to clear the code to retype it, press the [CLEAR] button on the Control Panel.
- · After pressing the [SET] button, the "New Code" field is highlighted.

6 Enter new 5-digit code in the "New Code" field using the digital keys, and then press the [SET] button to set the entry.

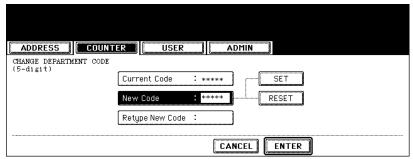

- If you enter the code, asterisks (*) appear in the "New Code" field.
- If you want to clear the code to retype it, press the [CLEAR] button on the Control Panel.
- · After pressing the [SET] button, the "Retype New Code" field is highlighted.




The department code must be the 5-digit code except "00000".



If you want to return to the "Current Code" field to retype it, press the [RESET] button.

7 Enter new 5-digit code again in the "Retype New Code" field using the digital keys, and then press the [SET] button to set the entry.

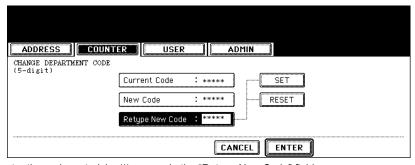


- If you enter the code, asterisks (*) appear in the "Retype New Code" field.
- If you want to clear the code to retype it, press the [CLEAR] button on the Control Panel.



If you want to return to the "Current Code" field or "New Code" field to retype them, press the [RESET] button.

- Press the [ENTER] button at the bottom of the touch panel.
 - The LIMITATION screen is displayed.

${f g}$ Set the limitation of this department code as required.

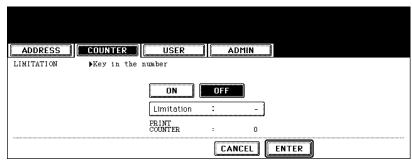

Press the [ON] button to enable the output limitation for this department code. When you select the [ON] button, press the "Limitation" field and enter the maximum number of the outputs for this department code using the digital keys. You can enter up to "99999999". If you do not set the output limitation for outputs, press the [OFF] button.



If you enter "0" for the limitation, it will disable printing any copies or prints using this department code.


1 Press the [ENTER] button.

· The department code is edited.

Deleting the Department Code

The function allows you to delete the existing department code.

1 In the DEPT. MANAGEMENT menu, press the [DEPARTMENT REGISTRATION] button.

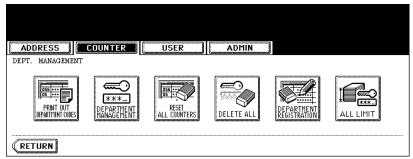


· The DEPARTMENT CODE screen is displayed.



For the procedure to display the screen above, see "Logging On As Administrator". 🚨 P.45

2 Press the department button that you want to delete and press the [DELETE] button.

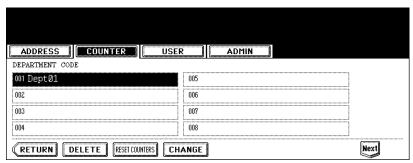


· The delete confirmation screen is displayed.



If the touch panel does not display the department code that you want to delete, press the [Next] button to display the next screen.

3 Press the [YES] button to delete the department code, or [NO] button to cancel deleting.

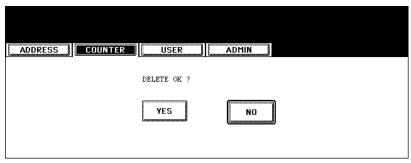


• When you press the [YES] button, the department code is deleted.

Resetting the Counter of Each Department

The function allows you to reset the counter of specific department code only.

In the DEPT. MANAGEMENT menu, press the [DEPARTMENT REGISTRATION] button.

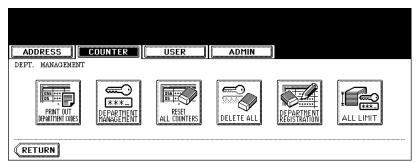


· The DEPARTMENT CODE screen is displayed.



For the procedure to display the screen above, see "Logging On As Administrator". 🚨 P.45


Press the department button that you want to reset the counter and press the [RESET COUNTERS] button.

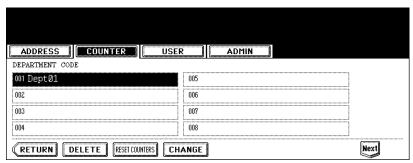

· The clear confirmation screen is displayed.



If the touch panel does not display the department code that you want to clear the counter, press the [Next] button to display the next screen. 3 Press the [YES] button to clear the counter of the department code, or [NO] button to cancel clearing the counter.

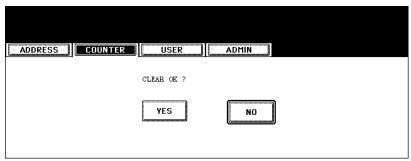

• When you press the [YES] button, the counter of the department code is cleared.

This function allows you to set the output limitation for all departments by a single operation. When you select [ON], the output will be disabled for all departments.


When you select [OFF], the infinite outputs will be allowed for all departments.



When you select [ON], the limitation setting for each department code will be set to [ON] and the "Limitation" field will be set to "0". If you want to change the limitation setting for each department code, change the limitation setting by editing a department code.

P.54 "Editing the Department Code"

In the DEPT. MANAGEMENT menu, press the [ALL LIMIT] button.

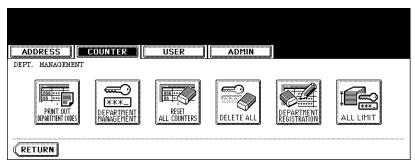


· The ALL LIMIT screen is displayed.



For the procedure to display the screen above, see "Logging On As Administrator".

P.45

Press the [ON] button to disable the copies/prints for all departments, or [OFF] button to permit infinite copies/prints for all departments.

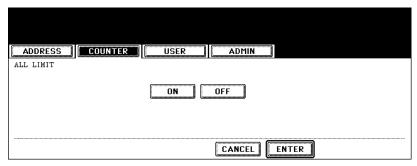

- Press the [ENTER] button.
 - · The output limitation settings are saved.

3. SETTING ITEMS (USER)


1.	SETTING GENERAL FUNCTIONS	64
	Setting the Auto Clear Mode	64
	Changing the Display Language	
	Setting the Reversed Display Mode	66
2.	SETTING COPY FUNCTIONS	68
3.	SETTING FAX FUNCTIONS	70
4.	SETTING SCAN FUNCTIONS	72
5.	PRINTING LISTS	74
	Printing the Address Book List	74
	Printing the Group Numbers List	75
	Printing the Function List (User)	76
6.	CHECKING E-MAIL	77
7.	SETTING DRAWER	78
8	TURN OFF THE POWER (SHUT DOWN)	79

1. SETTING GENERAL FUNCTIONS


Setting the Auto Clear Mode

This function sets how long the machine waits before clearing the previous functions set on the control panel.


- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- **2** Press the [USER] button, and then press the [GENERAL] button on the touch panel.

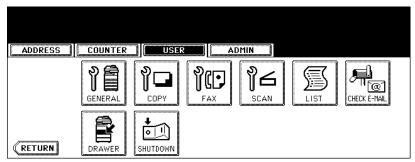

- · The GENERAL menu is displayed.
- 3 Press the [AUTO CLEAR] button.

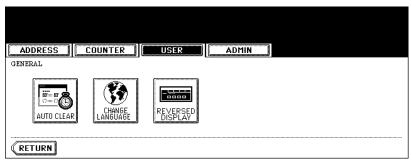

- · The AUTO CLEAR screen is displayed.
- ▲ Press the button that indicates the desired time in seconds.

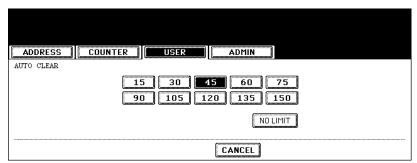

· The Auto Clear mode has been set to selected time.




- · If you want to disable the Auto Clear mode, press the [NO LIMIT] button.
- Even if the [NO LIMIT] button is selected, the screen will be cleared after 45 seconds in case that users operate in the USER FUNCTION, JOB STATUS, or TEMPLATE screen.


Changing the Display Language

The language used on the touch panel can be changed to a different one.


- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- **2** Press the [USER] button, and then press the [GENERAL] button on the touch panel.

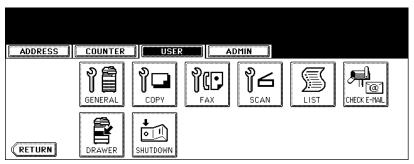

- · The GENERAL menu is displayed.
- 3 Press the [CHANGE LANGUAGE] button.

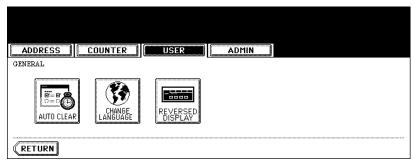

- · The CHANGE LANGUAGE screen is displayed.
- 4 Press the desired language button.

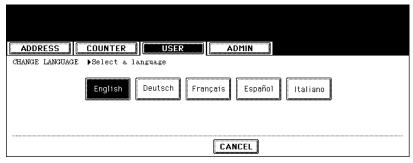


· The touch panel is displayed in the selected language.

Setting the Reversed Display Mode


You can change the touch panel to be displayed in the Reversed Display mode (which the white portion will be black and the black portion will be white).

Changing to the Reversed Display mode helps you to display the touch panel more clearly where it is too bright to see the touch panel.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- Press the [USER] button, and then press the [GENERAL] button on the touch panel.

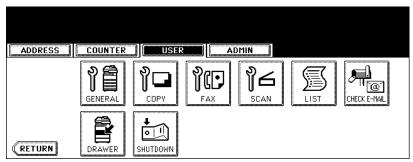


- · The GENERAL menu is displayed.
- 3 Press the [REVERSED DISPLAY] button.

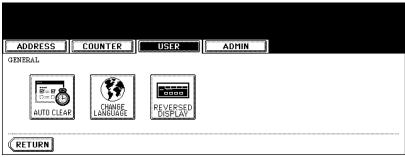


· The REVERSED DISPLAY screen is displayed.

4 Press the [ON] button to enable the Reversed Display, or [OFF] button to disable the Reversed Display.

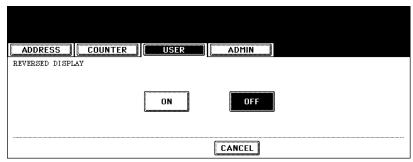


• When you select the [ON] button, the touch panel is displayed in the Reversed Display mode.

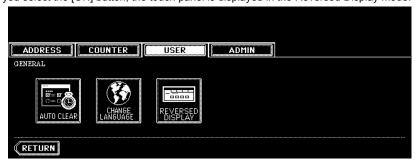


2. SETTING COPY FUNCTIONS

You can change the initial setting (default setting) of copy job.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- **2** Press the [USER] button, and then press the [COPY] button on the touch panel.

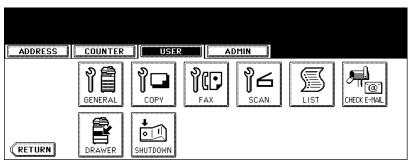

- · The COPY screen is displayed.
- 3 Specify the following items as you require.

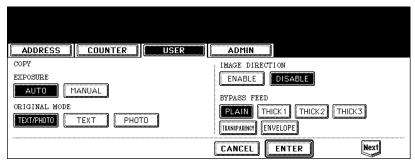


- · In the "EXPOSURE MODE" option, press the desired mode button.
- In the "ORIGINAL MODE" option, press the desired mode button.
- In the "IMAGE DIRECTION" option, press the desired mode button.
 When this is enabled, the portrait originals that are placed in R direction can be detected as portrait original and perform the duplex copy correctly. This is usually enabled only when you want to perform duplex copy from the large size of portrait originals such as A3 or LD-size portrait originals.
- In the "BYPASS FEED" option, press the desired media type button.



For more information about the paper type, please see the Operator's Manual For Basic Functions.

⚠ Press the [Next] button to display the next screen.

5 Specify the following items as you require.

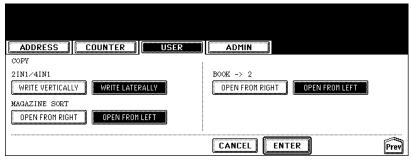

• In the "2IN1/4IN1" option, press the desired mode button.

[WRITE VERTICALLY] — Press this to print each two pages or four pages from left to right or top to bottom for the 2IN1/4IN1 copy. When the portrait originals are copied using 2in1 or 4in1, it copies them from left to right. When the landscape originals are copied using 2in1 or 4in1, it copies them from top to bottom.

[WRITE LATERALLY] — Press this to print each two pages or four pages are copied from right to left or top to bottom for the 2IN1/4IN1 copy. When the portrait originals are copied using 2in1 or 4in1, it copies them from right to left. When the landscape originals are copied using 2in1 or 4in1, it copies them from top to bottom.

- In the "MAGAZINE SORT" option, press the desired mode button.
- **[OPEN FROM RIGHT]** Press this to perform magazine sort copy to create a booklet that can be opened from right pages.
- **[OPEN FROM LEFT]** Press this to perform magazine sort copy to create a booklet that can be opened from left pages.
- In the "DUPLEX BOOK -> 2" option, press the desired mode button.
 [OPEN FROM RIGHT] Press this when you copy the booklet that can be opened from right pages.
 [OPEN FROM LEFT] Press this when you copy the booklet that can be opened from left pages.

6 Press the [ENTER] button.

· The default settings for each mode are changed as you specified.


3. SETTING FAX FUNCTIONS

You can change the initial setting (default setting) of fax and Internet Fax features.




The [FAX] button in the [USER] menu will be available only when the Scanner Kit or Printer/Scanner Kit is installed, or when the optional Fax unit is installed.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- Press the [USER] button, and then press the [FAX] button on the touch panel.

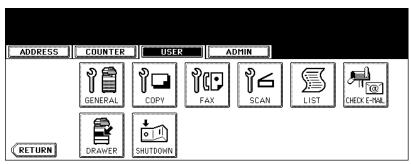

- · The FAX screen is displayed.
- 3 Specify the following items as you require.

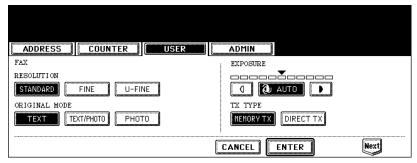


- · In the "RESOLUTION" option, press the desired mode button.
- In the "ORIGINAL MODE" option, press the desired mode button.
- In the "EXPOSURE" option, press light or dark buttons to specify the default exposure manually, or press the [AUTO] button to select auto mode for the default exposure mode.
- In the "TX TYPE" option, press the desired mode button.
 [MEMORY TX] Press this to set the Memory TX mode as default transmission mode that will send after scanning and saving all originals in the memory. This mode enables to multi-address transmission.
 [DIRECT TX] Press this to set the Direct TX mode as default transmission mode that will send originals page by page after every original has been scanned. This mode enable to single-address transmission only.



The "TX TYPE" option is available only when the optional Fax unit is installed.

⚠ Press the [Next] button to display the next screen.

5 Specify the following items as you require.

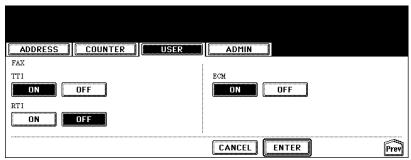

- In the "TTI" option, specify whether the TTI is enabled or disabled as default setting.
 - **[ON]** Press this to print a transmission header (TTI) on received faxes to clearly identify the sender name of received faxes.
 - **[OFF]** Press this not to print a transmission header (TTI) on received faxes.
- In the "RTI" option, specify whether the RTI is enabled or disabled as default setting.
 - **[ON]** Press this to print a reception header (RTI) on received faxes to clearly identify the time, date, and page count of received faxes.
 - **[OFF]** Press this not to print a reception header (RTI) on received faxes.
- In the "ECM" option, specify whether the ECM is enabled or disabled as default setting.
 - **[ON]** Press this to enable the ECM (Error Correction Mode) to automatically re-send any portion of the document affected by phone line noise or distortion.
 - [OFF] Press this to disable the ECM.

Note

- The "TTI", "RTI", and "ECM" options are available only when the optional Fax unit is installed.
- The "TTI" option is not displayed depending on the region.

6 Press the [ENTER] button.

· The default settings for each mode are changed as you specified.


4. SETTING SCAN FUNCTIONS

You can change the initial setting (default setting) of scan job.




The [SCAN] button in the [USER] menu will be available only when the Scanner Kit is installed, or when the Printer/Scanner Kit is installed.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- Press the [USER] button, and then press the [SCAN] button on the touch panel.

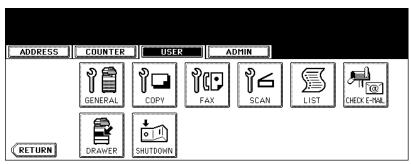

- · The SCAN screen is displayed.
- 3 Specify the following items as you require.

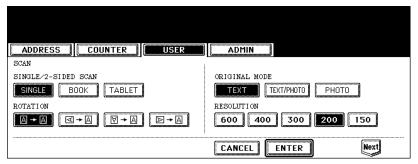


- In the "SINGLE/2-SIDE SCAN" option, press the desired mode button.
 - **[SINGLE]** Press this to set single page scan as default scan mode.
 - **[BOOK]** Press this to set book scan mode as default scan mode. This enables to scan both side of originals in the same direction.

[TABLET] — Press this to set tablet scan mode as default scan mode. This enables to scan front page in the general direction, and scan back page rotated 180 degree.

- In the "ROTATION" option, press the desired mode button.
- In the "ORIGINAL MODE" option, press the desired mode button applied for scans.
- In the "RESOLUTION" option, press the desired mode button applied for scans.
- ⚠ Press the [Next] button to display the next screen.

5 Specify the following items as you require.

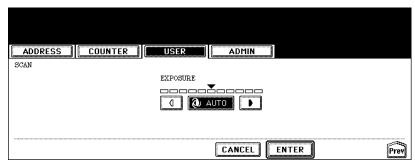

 In the "EXPOSURE" option, press light or dark buttons to specify the default exposure for scans manually, or press the [AUTO] button to select auto mode for the default exposure mode for scans.

6 Press the [ENTER] button.


• The default settings for each mode are changed as you specified.

5. PRINTING LISTS


Printing the Address Book List

You can print the address book list that shows all registered contacts and groups in this equipment.


- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- **2** Press the [USER] button, and then press the [LIST] button on the touch panel.

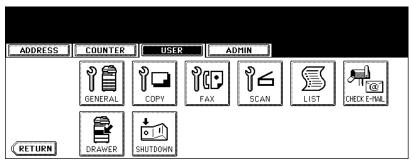

- · The LIST menu is displayed.
- 3 Press the [ADDRESS BOOK] button.

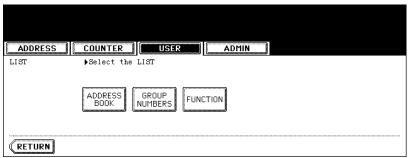

- · The ADDRESS BOOK menu is displayed.
- Press the [ID SORT] button to print it as sorted by the ID number, or [NAME SORT] button to print it as sorted by the last name.

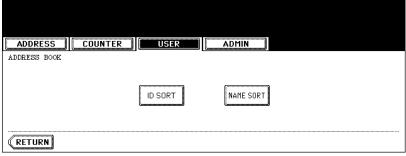


- · When the department management is disabled, the address book list is printed.
- When the department management is enabled, the screen to input the department code is displayed. Enter
 the department code using the digital keys and press the [ENTER] button to print the address book list.




Printing the Group Numbers List

You can print the group numbers list that shows all registered groups and members in this equipment.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- Press the [USER] button, and then press the [LIST] button on the touch panel.

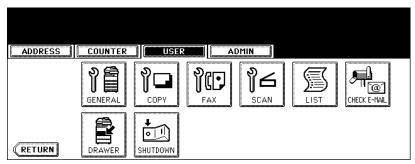

- · The LIST menu is displayed.
- 3 Press the [GROUP NUMBERS] button.

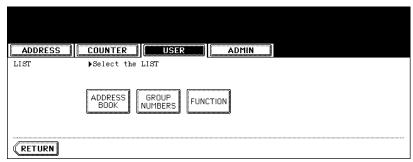

- When the department management is disabled, the group numbers list is printed.
- When the department management is enabled, the screen to input the department code is displayed. Enter
 the department code using the digital keys and press the [ENTER] button to print the group numbers list.




For an output example of the group numbers list, see "Group Numbers List". 🕮 P.157


Printing the Function List (User)

You can print the function list that shows the function flow under the [USER] button of the User Functions.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- **2** Press the [USER] button, and then press the [LIST] button on the touch panel.

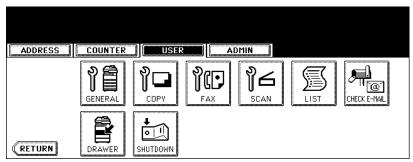

- · The LIST menu is displayed.
- 3 Press the [FUNCTION] button.

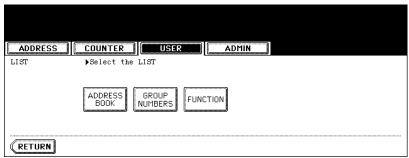

- When the department management is disabled, the function list is printed.
- When the department management is enabled, the screen to input the department code is displayed. Enter the department code using the digital keys and press the [ENTER] button to print the function list.



For an output example of the function list, see "Function List (User)". P.158

6. CHECKING E-MAIL

This function allows you to check for new E-mails (Internet Faxes) on the POP3 server.




The [CHECK E-MAIL] button in the [USER] menu will be available only when the Scanner Kit is installed, or when the Printer/Scanner Kit is installed.



This equipment also automatically checks for new E-mails on the POP3 server.


- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- **2** Press the [USER] button, and then press the [CHECK E-MAIL] button on the touch panel.

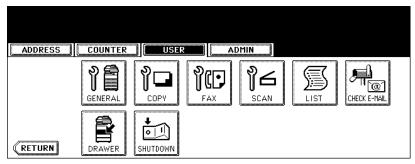


- · This equipment starts communicating to the POP3 server.
- If new E-mail to this machine is on the POP3 server, it will be automatically printed after retrieving the E-mail data from the POP3 server.
- If new E-mail of the Offramp Gateway document is on the POP3 server, this equipment starts dialing the specified fax number to transmit the received E-mail to remote facsimile.

This function allows you to set the paper size and paper type of each drawer.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- **2** Press the [USER] button, and then press the [DRAWER] button on the touch panel.

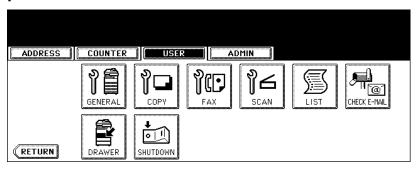

3 Press the drawer portion in the illustration to highlight the drawer where you want to change the paper size and paper type, then press the desired paper size button and paper type button.

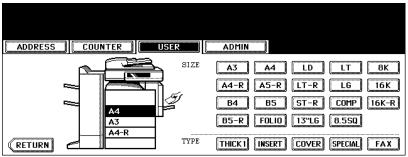

• The paper size in the selected drawer changes to the selected paper size.


8. TURN OFF THE POWER (SHUT DOWN)

When turning off the power of the equipment, perform the following shutdown procedure.


DO NOT turn off the power by switching off the power switch of the equipment as it can cause the failure of the hard disk.

Before turning off the power, be sure that the following 3 conditions are satisfied.

- No jobs are left in the printing job list.
- The ERROR lamp is not blinking.
- No PCs access the equipment via network.
 - 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
 - 2 Press the [USER] button, and then press the [SHUTDOWN] button on the touch panel.

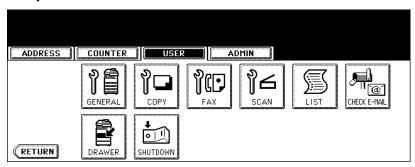

3 "Processing job will be deleted. Are you sure you want to shutdown?" appears on the screen. Press the [YES] button.

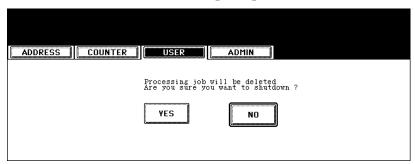

• To cancel the shutdown operation, press the [NO] button.

4 "Shutdown in progress" appears on the screen, and then the equipment is shut down.



• The power switch automatically returns to the OFF position.


4. SETTING ITEMS (ADMIN)

1.	ENTERING TO ADMIN MENU	82
2.	SETTING GENERAL FUNCTIONS	84
	Setting the Device Information	84
	Setting the Notification	
	Changing the Administrator Password	
	Setting the Date and Time	
	Setting the Weekly Timer	
	Setting the Auto Power Save Mode	
	Setting the Sleep Mode	
	Setting the Drawer Setup Pop-Up	
3.	SETTING NETWORK FUNCTIONS	
	Setting the TCP/IP Protocol	
	Setting the IPX/SPX Protocol	
	Setting the NetWare Settings	
	Setting the SMB Protocol Setting the AppleTalk Protocol	
	Setting the Apple laik Frotocol Setting the HTTP Network Service	
	Setting the Ethernet Speed	
	Setting the LDAP and SNMP Network Service	
4.	SETTING COPY FUNCTIONS	
5	SETTING FAX FUNCTIONS	122
٠.	Setting the Terminal ID	
	Setting the Fax Initial Setup	
	Setting the Line-2 Mode	
	Setting the RX Printing	
	Setting the Recovery Transmission	134
6.	SETTING FILE FUNCTIONS	136
7.	SETTING E-MAIL FUNCTIONS	137
	Setting the Scan to E-mail Message Properties	137
	Setting the Scan to E-mail Fragmentation	138
8.	SETTING INTERNET FAX FUNCTIONS	139
	Setting the Internet Fax Message Properties	139
	Setting the Internet Fax Fragmentation	140
	Setting the Internet Fax Body String Transmission	141
9.	SETTING LIST/REPORT	142
	Setting the Transmission / Reception Journal	142
	Setting the Communication Report	
	Setting the Reception List	147
).PRINTING LISTS	
11	.SETTING PRINTER/E-FILING FUNCTIONS	150
12	2.WIRELESS SETTINGS AND Bluetooth SETTINGS	151


1. ENTERING TO ADMIN MENU

When the administrator password has been set, you must enter the administrator password to enter the [ADMIN] menu in the User Functions screen.

- 1 Press the [USER FUNCTIONS] button on the control panel to enter the User Functions menu.
- **?** Press the [ADMIN] button.
 - The ADMINISTRATOR PASSWORD screen is displayed.
- 3 Press the [PASSWORD] button.

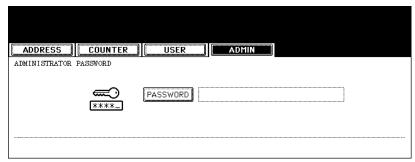

- · The input screen is displayed.
- **4** Enter the administrator password and press the [ENTER] button.

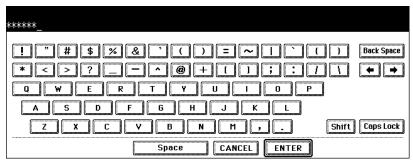

· The ADMIN menu is displayed.




If the administrator password has not been changed before, enter the default administrator password "123456".



If you enter the incorrect password continuously three times, the equipment cannot be operated for about 30 seconds. In that case, wait until the screen becomes operatable and then try again.

5 The ADMIN menu is displayed. Continue the administrative operation that you require.

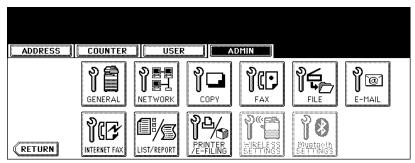

- P.84 "2.SETTING GENERAL FUNCTIONS"
- ☐ P.100 "3.SETTING NETWORK FUNCTIONS"
- ☐ P.120 "4.SETTING COPY FUNCTIONS"
- P.122 "5.SETTING FAX FUNCTIONS"
- P.136 "6.SETTING FILE FUNCTIONS"
- P.137 "7.SETTING E-MAIL FUNCTIONS"
- P.139 "8.SETTING INTERNET FAX FUNCTIONS"
- P.142 "9.SETTING LIST/REPORT"
- P.149 "10.PRINTING LISTS"




- There are also the [WIRELESS SETTINGS] button in the ADMIN menu. This button will be available only when the optional Wireless LAN Module is installed. For the instructions on how to operate the WIRELESS SETTINGS, please refer to the **GN-1040 Operator's Manual for Wireless LAN**.
- There are also the [Bluetooth SETTINGS] button in the ADMIN menu. This button will be available only when
 the optional Bluetooth Module is installed. For the instructions on how to operate the Bluetooth SETTINGS,
 please refer to the GN-2010 Operator's Manual for Bluetooth.

2. SETTING GENERAL FUNCTIONS

Setting the Device Information

You can set the device information of this equipment. These items appear in the Device page of TopAccess, that is the web-based device management utility.

1 Press the [GENERAL] button in the ADMIN menu.

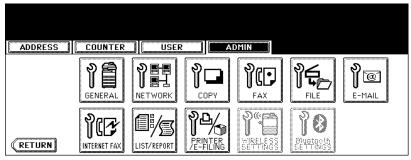


· The GENERAL menu is displayed.




To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU".

P.82

2 Press the [DEVICE INFORMATION] button.

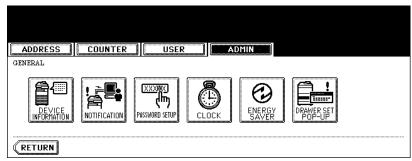

- · The DEVICE INFORMATION screen is displayed.
- 3 Press each button on the touch panel to enter following items.

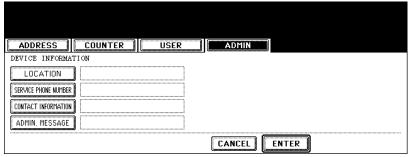

- [LOCATION] Press this button to enter the location where this device is located.
- $[SERVICE\ PHONE\ NUMBER]$ Press this button to enter the service call number.
- [CONTACT INFORMATION] Press this button to enter the name of the service technician.
- [ADMIN. MESSAGE] Press this button to enter the administration message for users.



When you press each button, the input screen is displayed. Enter the value using the keyboard and digital keys, and press the [ENTER] button to set the entry. To enter the [SERVICE PHONE NUMBER], enter the number using only the digital keys.

Press the [ENTER] button.

Setting the Notification


You can set the notification mail to send a notification message when specified events occur on this equipment such as toner empty, paper empty, serviceman call, and so on.

You can specify up to 3 E-mail addresses for the destination of the notification message.



- You can specify the events that you want to be notified using the TopAccess web utility. For instructions on how to specify the events for the notification, please refer to *TopAccess Guide*.
- To enable this function, there must be a SMTP server in your network. In addition, the settings to
 enable the Internet Fax transmission on this equipment must be configured correctly.

1 Press the [GENERAL] button in the ADMIN menu.

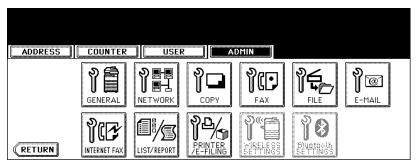


· The GENERAL menu is displayed.




To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU". $\ \square$ P.82

7 Press the [NOTIFICATION] button.

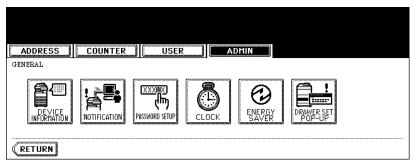


· The NOTIFICATION screen is displayed.


3 Press the [E-MAIL] buttons.

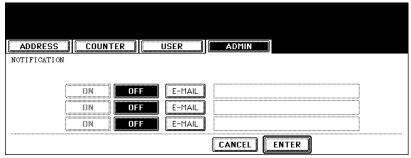

- · The input screen is displayed.
- 4 Enter the E-mail address using the keyboard and digital keys, and press the [ENTER] key to set the entry.

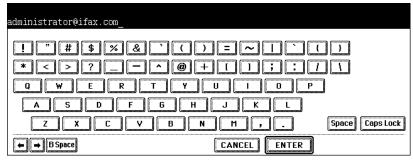

- You can specify up to three E-mail addresses to which the notification message will be sent, as required.
 When you enable the notification, you must enter at least one E-mail address.
- 5 After entering the E-mail addresses that you require, press the [ON] button of the E-mail address that you want to enable the notification.

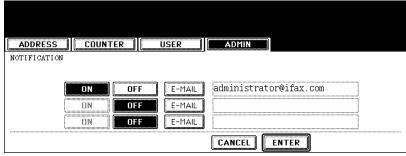

· To disable the notification for an E-mail address, press the [OFF] button.




You can select only the [ON] button of which an E-mail address is entered.

6 Press the [ENTER] button.

Changing the Administrator Password

You can change the administrator password. The administrator password must be alphanumeric characters of 6 or more and 10 or less.

1 Press the [GENERAL] button in the ADMIN menu.

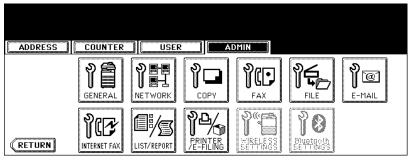


· The GENERAL menu is displayed.



To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU".


P.82

7 Press the [PASSWORD SETUP] button.

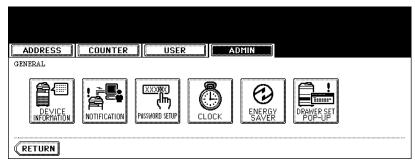


· The PASSWORD SETUP screen is displayed.

3 Press the [OLD PASSWORD] button.

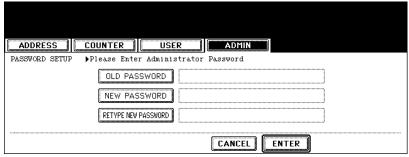

· The input screen is displayed.

4 Enter the current administrator password and press the [ENTER] button.

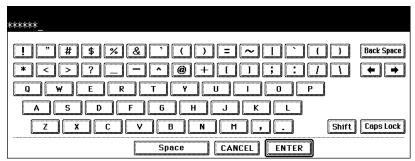


• The input password appears as asterisks (*).



If the administrator password will be changed at the first time, enter "123456" in the "Old Password" field.

5 Same as "OLD PASSWORD", press the [NEW PASSWORD] and [RETYPE NEW PASSWORD] buttons and enter the new password.

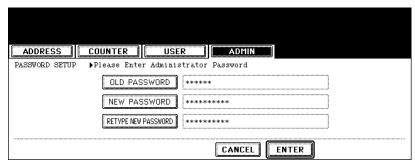

You can enter alphanumeric characters of 6 or more and 10 or less for the administrator's password. You cannot enter any symbol characters.




You cannot leave these fields blank to set no administrator password. You must set the administrator password.

6 Press the [ENTER] button at the bottom of the touch panel.

Setting the Date and Time

The clock built in to this equipment can be set by entering the date, day of the week and time using the digital keys. Also, you can easily change the clock to and from the daylight saving system at the touch of a button.

1 Press the [GENERAL] button in the ADMIN menu.

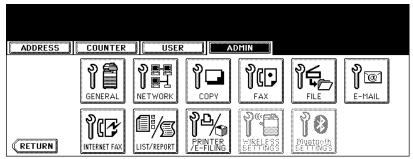


· The GENERAL menu is displayed.



To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU".


P.82

Press the [CLOCK] button.

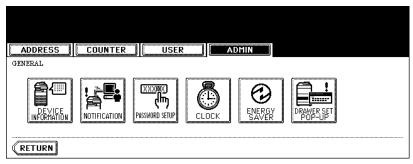


· The CLOCK menu is displayed.

3 Press the [DATE/TIME] button.

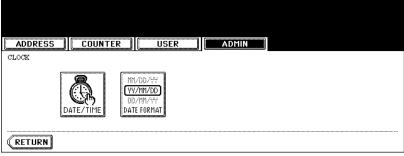


- · If you want to change the date format only, skip to step 10.
- When you press the [DATE/TIME] button, the DATE/TIME screen is displayed.


4 Highlight the section that you want to edit using the arrow buttons, and enter the number using the digital keys.

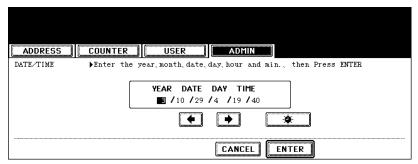

- The "DAY" section describes the day of week with a number. The numbers corresponding to the days of week as following:
 - 1: Sun, 2: Mon, 3:Tue, 4: Wed, 5: Thu, 6:Fri, 7: Sat
- 5 To enable the daylight saving system, press the button.
 - · The daylight saving button is highlighted.
- 6 Press the [ENTER] button.
 - · Returns you to the CLOCK menu.
- **7** Press the [DATE FORMAT] button.

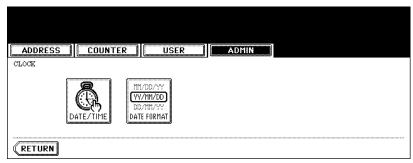

- · The DATE FORMAT screen is displayed.
- R Press the desired date format button.

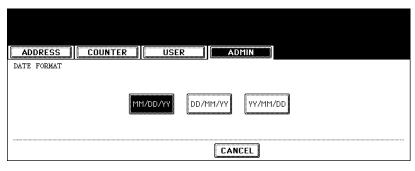

Using the built-in weekly timer, you can have this equipment automatically turned ON and OFF at specified times. For instance, you can set the timer for the starting time and closing time of your office so that the copier will automatically turn itself ON and OFF at those specified times.




You can turn on the power simply pressing the [START] button on the control panel when the device is OFF-mode by the weekly timer. If you leave the device for a while after the latest operation, it will automatically return to OFF-mode again by the weekly timer.



When the power switch is turned off, the weekly timer does not work.

1 Press the [GENERAL] button in the ADMIN menu.

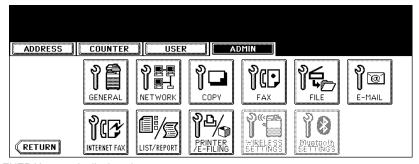


· The GENERAL menu is displayed.



To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU".

P.82


2 Press the [ENERGY SAVER] button.

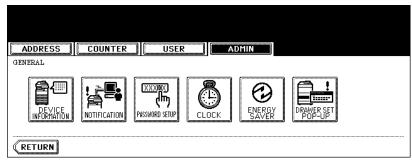


· The ENERGY SAVER menu is displayed.

A


3 Press the [WEEKLY TIMER] button.

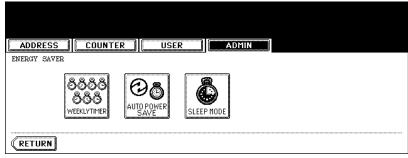

- · The TIMER screen is displayed.
- 4 Check the settings on the display, and if corrections are necessary, press the [CHANGE] button.

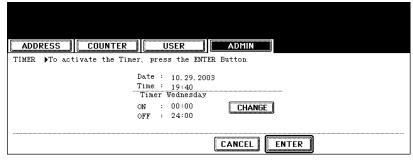


- If no correction is needed, press the [ENTER] button and complete the operation.
- Press the [<-Sun] or [Sat->] buttons to switch the days of the week. Then in the "ON" field, enter the hour and minute that the device will automatically turn on the power using the digital keys and press the [SET] button to set each entry.

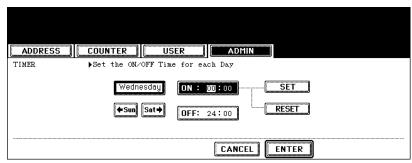

- If you want to clear entered time to retype it, press the [CLEAR] button on the Control Panel.
- · After pressing the [SET] button, the "OFF" field will be highlighted.

6 In the "OFF" field, enter the hour and minute that the device will automatically turn off the power using the digital keys and press the [SET] button to set each entry.

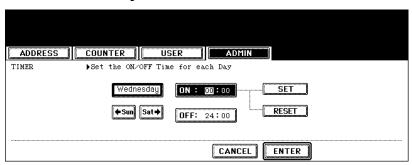

• If you want to clear entered time to retype it, press the [CLEAR] button on the Control Panel.




- If you want to return to the "OFF" field to retype it, press the [RESET] button.
- If you want this equipment not to be turned ON, enter the same time in both "ON" and "OFF" field.
- If you want to disable the Weekly Timer, enter "00:00" for the ON time and "24:00" for the OFF time.
- 7 Press the [ENTER] button at the bottom of the touch panel.

Setting the Auto Power Save Mode

This function allows this equipment automatically to go into the energy saving mode (unnecessary electricity is cut off at standby) if it is left inactive for a certain period of time.

1 Press the [GENERAL] button in the ADMIN menu.

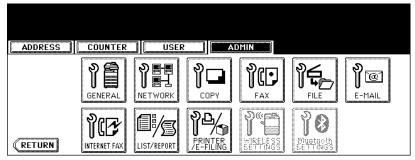


· The GENERAL menu is displayed.



To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU".


P.82

2 Press the [ENERGY SAVER] button.

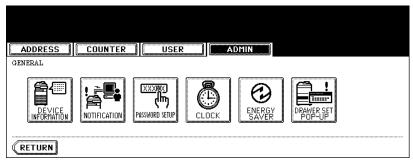


· The ENERGY SAVER menu is displayed.

3 Press the [AUTO POWER SAVE] button.

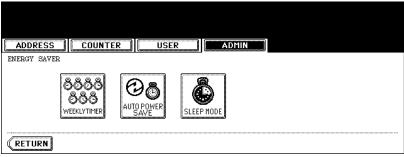

· The AUTO POWER SAVE screen is displayed.

4 Press the desired period of time (in minutes) that this equipment waits before the Automatic Power Save mode is activated.

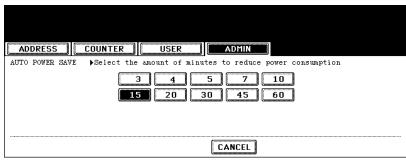


• The Auto Power Save mode setting is completed.

Setting the Sleep Mode

This function allows this equipment goes into the sleep mode that stands by with the minimum power consumption.

1 Press the [GENERAL] button in the ADMIN menu.

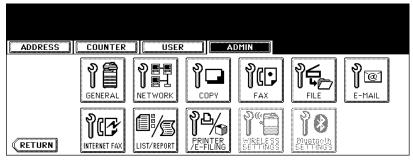


· The GENERAL menu is displayed.



To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU".


P.82

2 Press the [ENERGY SAVER] button.

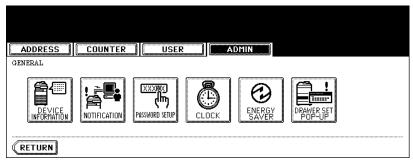


· The ENERGY SAVER menu is displayed.

3 Press the [SLEEP MODE] button.

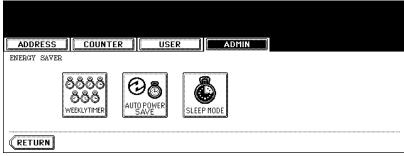

· The SLEEP MODE screen is displayed.

4 Press the desired period of time (in minutes) that this equipment waits before the Automatic Shut Off mode is activated.

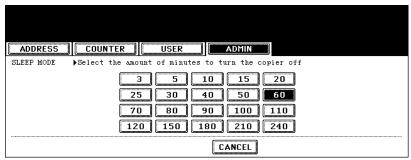


• The Sleep mode setting is completed.

Setting the Drawer Setup Pop-Up

When this functions is enabled, the message to ask users to change the paper size setting every time you open the drawer.

1 Press the [GENERAL] button.

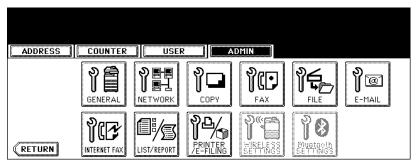


· The GENERAL menu is displayed.




To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU".

P.82

2 Press the [DRAWER SET POP-UP] button.

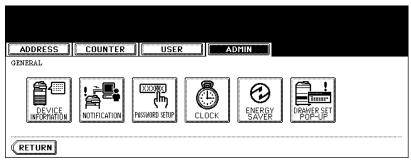

- · The DRAWER SET POP-UP screen is displayed.
- 3 Press the [ENALBE] button to enable the Drawer Set Pop-Up, or press the [DISABLE] button to disable the Drawer Set Pop-Up.

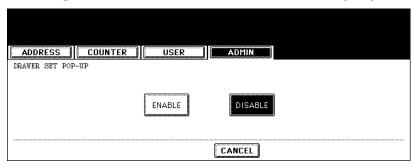

3. SETTING NETWORK FUNCTIONS

Setting the TCP/IP Protocol

You can set the TCP/IP protocol that is commonly used for most of network system. It is recommended to configure the TCP/IP protocol because TopAccess, the device management web-based utility, and e-Filing web-based utility, that allows you to manage files in the e-Filing, will be available with the TCP/IP protocol. Also other network features of this equipment use the TCP/IP protocol.

In the TCP/IP menu, you can enable or disable the TCP/IP protocol, select the addressing mode, assign the IP address, subnet mask, and default gateway (if manually assigned).

How the TCP/IP protocol is configured is depending on the network configuration of your network.

When you assign the TCP/IP using the Auto-IP addressing or DHCP server:

If you do not know how the TCP/IP settings should be assigned, you can select Dynamic addressing mode. When the Dynamic addressing mode is selected, this equipment will obtain the IP address, subnet mask, default gateway, primary WINS server address, secondary WINS server address, POP3 server address, and SMTP server address from the DHCP server if the network supports the DHCP. If the network does not support the DHCP, this equipment will assign the appropriate IP address using the Auto-IP addressing.

P.100 "Setting the TCP/IP for Auto-IP and DHCP Server"

When you assign the TCP/IP using the DHCP server only:

If your local area network has been configured with the DHCP server and you do not want to enable the Auto-IP addressing, you can select No Auto-IP addressing mode. When the No Auto-IP addressing mode is selected, the IP address, subnet mask, default gateway, primary WINS server address, secondary WINS server address, POP3 server address, and SMTP server address will be automatically obtained from the DHCP server, and the Auto-IP addressing will be disabled. To enable the DHCP addressing only, please configure the TCP/IP settings as described in following procedure.

P.102 "Setting the TCP/IP for DHCP Server Only"


· When you connect to local area network where the static IP addresses are used:

If your local area network has been configured with the static IP address, you must assign the specific IP address, subnet mask, and default gateway as required.

P.103 "Setting the TCP/IP for Static IP Address"

Setting the TCP/IP for Auto-IP and DHCP Server

1 Press the [NETWORK] button in the ADMIN menu.

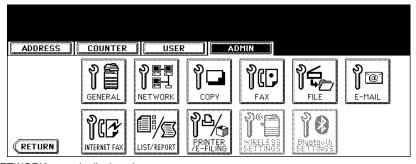


· The NETWORK menu is displayed.




To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU". P.82


2 Press the [TCP/IP] button.

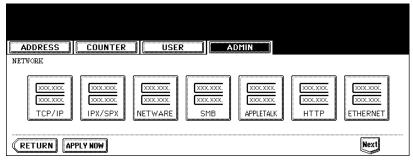

- · The TCP/IP screen is displayed.
- **?** Press the [DYNAMIC] button in the "ADDRESS MODE" option.

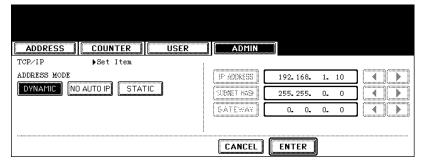


- ▲ Press the [ENTER] button.
 - Returns you to the NETWORK menu.
- 5 Continue to another network setting if required, then press the [APPLY NOW] button.

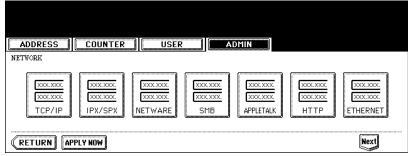

· This equipment starts initializing the network interface card to apply the changes.

Setting the TCP/IP for DHCP Server Only

1 Press the [NETWORK] button in the ADMIN menu.

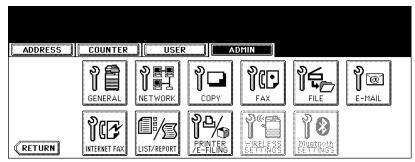


· The NETWORK menu is displayed.




To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU".

P.82

2 Press the [TCP/IP] button.

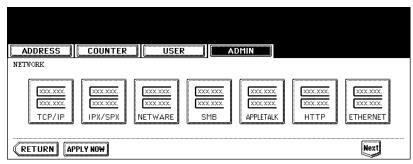


- · The TCP/IP screen is displayed.
- 3 Press the [NO AUTO IP] button in the "ADDRESS MODE" option.

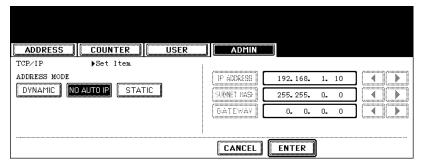

- ⚠ Press the [ENTER] button.
 - · Returns you to the NETWORK menu.


5 Continue to another network setting if required, then press the [APPLY NOW] button.

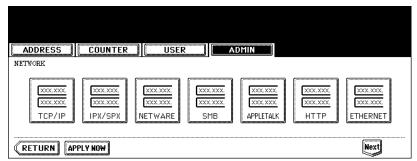

· This equipment starts initializing the network interface card to apply the changes.

Setting the TCP/IP for Static IP Address

1 Press the [NETWORK] button in the ADMIN menu.

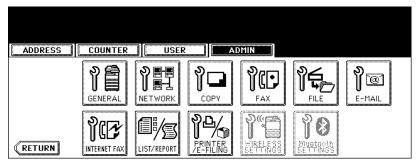


· The NETWORK menu is displayed.




To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU". \square P.82

2 Press the [TCP/IP] button.

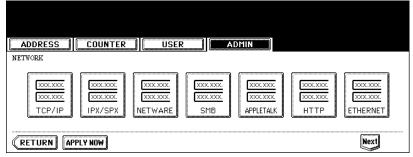


· The TCP/IP screen is displayed.


? Press the [STATIC] button in the "ADDRESS MODE" option.

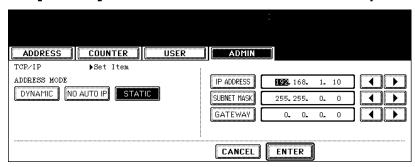

4 Press the [IP ADDRESS] button and enter the IP address of this device using the digital keys. Enter also the subnet mask and default gateway as required.

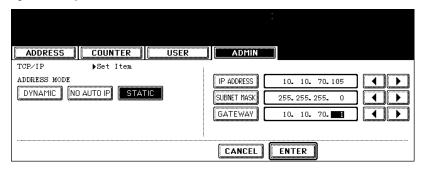

- 5 Press the [ENTER] button.
 - · Returns you to the NETWORK menu.
- 6 Continue to another network setting if required, then press the [APPLY NOW] button.

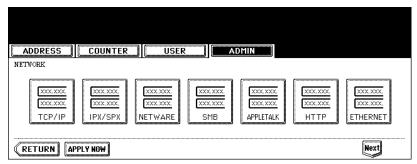


· This equipment starts initializing the network interface card to apply the changes.

Setting the IPX/SPX Protocol

You can set the IPX/SPX protocol on this equipment. The IPX/SPX protocol is usually used to communicate with the NetWare file server through the network.

1 Press the [NETWORK] button in the ADMIN menu.

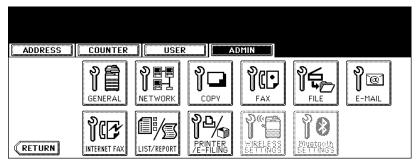


· The NETWORK menu is displayed.



To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU".


P.82

2 Press the [IPX/SPX] button.

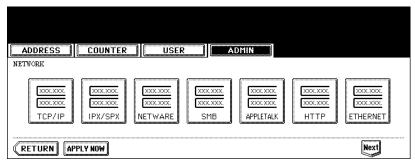

· The IPX/SPX screen is displayed.

3 Specify the following items as required.

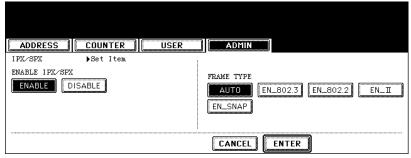


- ENABLE IPX/SPX Press the [ENABLE] button to enable the IPX/SPX protocol, or [DISABLE] button to disable the IPX/SPX protocol.
- FRAME TYPE Press the [AUTO] button to automatically detect the appropriate frame type, or press other specific frame type button. If you do not know the frame type that must be used, select the [AUTO] button.

⚠ Press the [ENTER] button.

· Returns you to the NETWORK menu.

5 Continue to another network setting if required, then press the [APPLY NOW] button.

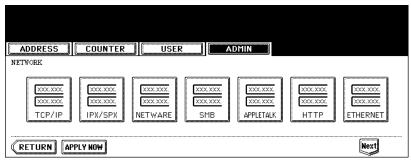


• This equipment starts initializing the network interface card to apply the changes.

Setting the NetWare Settings

You can set the NetWare network mode and the NetWare configuration to be connected. This must be set when you use the NetWare file server for Novell printing.

1 Press the [NETWORK] button in the ADMIN menu.

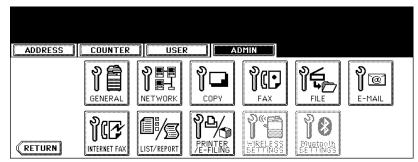


· The NETWORK menu is displayed.



To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU".


P.82

2 Press the [NETWARE] button.

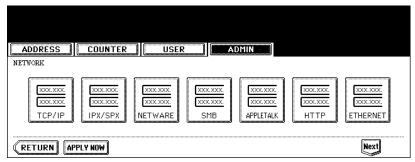

• The NETWARE screen is displayed.

3 Specify following items as required.

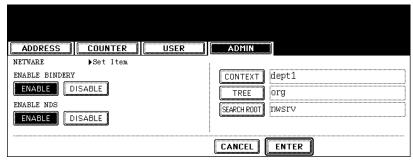

- **ENABLE BINDERY** Press the [ENABLE] button to enable communicating with the NetWare file server in bindery mode, or [DISABLE] button to disable the bindery mode.
- ENABLE NDS Press the [ENABLE] button to enable communicating with the NetWare file server in NDS mode, or [DISABLE] button to disable the NDS mode.
- [CONTEXT] Press this to enter the NDS context that the NetWare print server for this equipment is located. This must be entered when you connect the NetWare file server in NDS mode.
- [TREE] Press this to enter the NDS tree. This must be entered when you connect the NetWare file server in NDS mode.
- [SEARCH ROOT] Press this to enter the NetWare file server name. It is recommended to enter this when you connect the NetWare file server in bindery mode.


Tips

- When you press each button, the input screen is displayed. Enter the value using the keyboard and digital
 keys, and press the [ENTER] button to set the entry.
- · You can enable both the bindery and NDS mode at the same time.

⚠ Press the [ENTER] button.

· Returns you to the NETWORK menu.

5 Continue to another network setting if required, then press the [APPLY NOW] button.

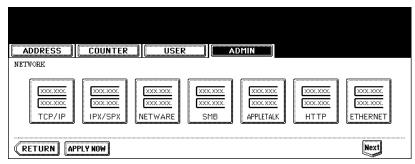

· This equipment starts initializing the network interface card to apply the changes.


Setting the SMB Protocol

When you want to enable this equipment visible in the Windows network, you must enable the SMB protocol and enter the NetBIOS name and workgroup to specify the device name of this equipment and workgroup where this equipment will be visible.

Also if your network uses the WINS server to allow the SMB communication across the segments, you must specify the WINS server address, so that this equipment will be visible from the different segment.

This must be enabled for SMB printing, Save as file to the network folder using SMB, and sharing the "FILE SHARE" folder (that is the local folder of this equipment) in the network.

1 Press the [NETWORK] button in the ADMIN menu.

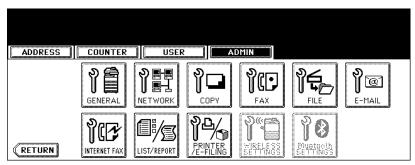


· The NETWORK menu is displayed.




To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU". 🚨 P.82

9 Press the [SMB] button.

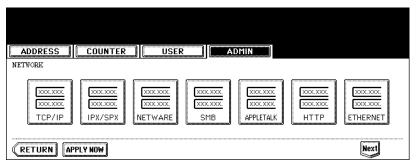

· The SMB screen is displayed.

3 Specify following items as required and press the [ENTER] button.

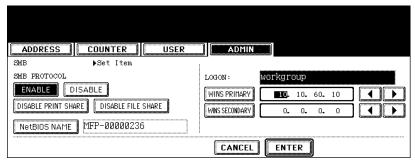

• SMB PROTOCOL — Select whether the SMB protocol is enabled or disabled.

When you want to enable the SMB protocol to enable the Save as file to network folder using SMB and sharing the "FILE_SHARE" folder of this equipment, but not to enable the SMB printing, press the [DISABLE PRINT SHARE] button.

When you want to enable the SMB protocol to enable the SMB printing, but not to enable the Save as file to network folder using SMB and sharing the "FILE_SHARE" folder of this equipment, press the [DISABLE FILE SHARE] button.

- [NetBIOS NAME] Press this button to enter the Windows computer name of this device if this device is connected to the Windows network. This must be specified when you want to enable SMB printing.
- LOGON This displays the Windows network logon environment. "workgroup" will be displayed if this equipment logon the workgroup network and "domain" will be displayed if this equipment logon the domain network. This can be specified only from TopAccess. For instructions on how to set the workgroup or domain, please see "Setting up the SMB Session" in "Chapter 7 TopAccess Administrator Mode" of TopAccess Guide.
- [WINS PRIMARY] Press this button and enter the IP address of the primary WINS server using the digital keys if required.
- [WINS SECONDARY] Press this button and enter the IP address of the secondary WINS server using the digital keys if required.




When you press the [NetBIOS NAME] button, the input screen is displayed. Enter the value using the keyboard and digital keys, and press the [ENTER] button to set the entry.

Note

- If this equipment is configured to logon the domain in the SMB Session of TopAccess administrator mode but "workgroup" is displayed, loggin on the domain network is failed. In that case, confirm that the Windows Server and the SMB Session settings are correctly set.
- When you set "Domain" for the Logon setting in the SMB Session of TopAccess administrator mode, this
 equipment will logon to the domain network after turnning ON the power of equipment or changing the network
 settings and pressing the [APPLY NOW] button.
- You can enter only alphanumeric characters and "-" (hyphenation) for NetBIOS name. If you use any other characters, a warning message will be displayed.
- Do not enter an IP address that starts with "0" (i.e. "0.10.10.10"), "127" (i.e. "127.10.10.10"), and "224" (i.e. "224.10.10.10"). If you enter such an address, the equipment cannot communicate with the WINS server.
- If you enter "0.0.0.0" for [WINS PRIMARY] and [WINS SECONDARY], this equipment will not use the WINS server.
- When [DYNAMIC] or [NO AUTO IP] is selected for the Address Mode in the TCP/IP setting, this equipment can
 obtain the IP address for [WINS PRIMARY] and [WINS SECONDARY] from the DHCP server. However, if you
 enter the IP address for them manually here, this equipment will use the entered IP address instead of the IP
 address that is obtained from the DHCP server.

4 Continue to another network setting if required, then press the [APPLY NOW] button.

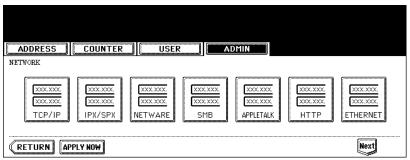


• This equipment starts initializing the network interface card to apply the changes.

Setting the AppleTalk Protocol

The AppleTalk protocol must be enabled and properly configured to enable AppleTalk printing with the Macintosh computer.

1 Press the [NETWORK] button in the ADMIN menu.

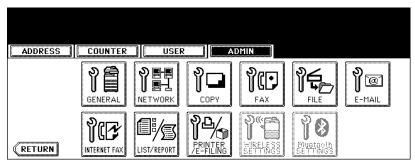


· The NETWORK menu is displayed.



To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU".


P.82

2 Press the [APPLETALK] button.

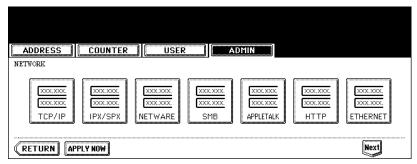

· The APPLETALK screen is displayed.

3 Specify following items as required.

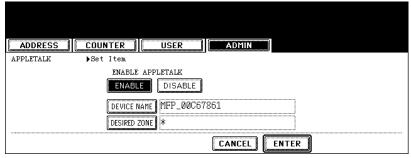


- ENABLE APPLETALK Press the [ENABLE] button to enable the AppleTalk, or [DISABLE] button to disable
 the AppleTalk.
- [DEVICE NAME] Press this to enter the AppleTalk name of this equipment.
- [DESIRED ZONE] Press this to enter the AppleTalk zone name this equipment joins. If your AppleTalk network has not been configured with a zone, you do not have to enter the zone name.



When you press the [APPLETALK NAME] and [DESIRED ZONE] buttons, the input screen is displayed. Enter the value using the keyboard and digital keys, and press the [ENTER] button to set the entry.

⚠ Press the [ENTER] button.

- · Returns you to the NETWORK menu.
- 5 Continue to another network setting if required, then press the [APPLY NOW] button.

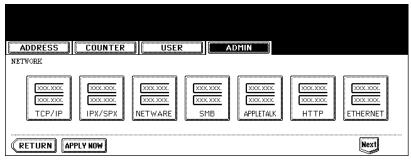


• This equipment starts initializing the network interface card to apply the changes.

Setting the HTTP Network Service

This function allows you to enable or disable the HTTP network server service that provides the webbased utility on this equipment, such as TopAccess and e-Filing web utility. The HTTP network server service also must be enabled for IPP printing.

1 Press the [NETWORK] button in the ADMIN menu.

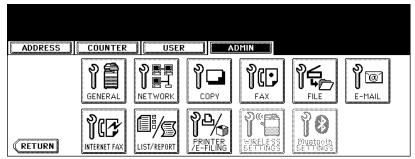


· The NETWORK menu is displayed.




To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU". \square P.82

2 Press the [HTTP] button.

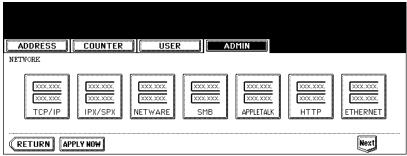

• The HTTP screen is displayed.

3 Specify following items as required.

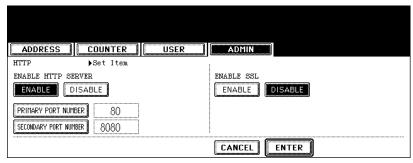

- ENABLE HTTP SERVER Press the [ENABLE] button to enable the HTTP network server service, or [DIS-ABLE] button to disable the HTTP network server service. This must be enabled for TopAccess, e-Filing web utility, and IPP printing.
- [PRIMARY PORT NUMBER] Press this to enter the primary port number to be used for the HTTP access from the other client. It is recommended to use the default port number "80" if you are not sure changing this port number.
- [SECONDARY PORT NUMBER] Press this to enter the secondary port number to be used to access the TopAccess and e-Filing web utility. It is recommended to use the default port number "8080" if you are not sure changing this port number.
- ENABLE SSL Press the [ENABLE] button to enable the SSL for accessing the administration pages in TopAccess and e-Filing web utility, or [DISABLE] button to disable the SSL for accessing the administration pages in TopAccess and e-Filing web utility. When this is enabled, the data transferred between the equipment and client computers will be encrypted using a private key when operating TopAccess and e-Filing web utility.




To enable SSL, you must create a self-signed certificate in the equipment using TopAccess. If the selfsigned certificate is not created, the SSL cannot be enabled.

⚠ Press the [ENTER] button.

· Returns you to the NETWORK menu.

5 Continue to another network setting if required, then press the [APPLY NOW] button.

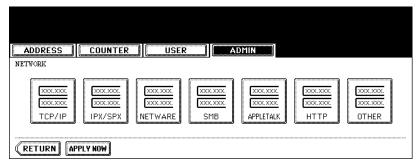


· This equipment starts initializing the network interface card to apply the changes.

Setting the Ethernet Speed

This function allows you to specify the ethernet speed.

1 Press the [NETWORK] button in the ADMIN menu.

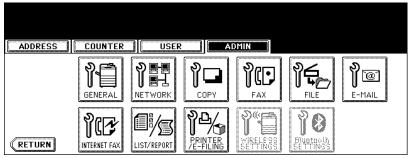


· The NETWORK menu is displayed.




To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU". 🚨 P.82

7 Press the [ETHERNET] button.

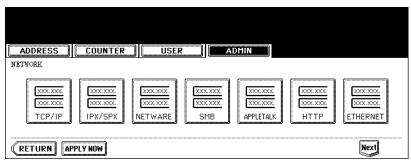


- · The ETHERNET screen is displayed.
- 3 Press the [AUTO] button to automatically detect the appropriate ethernet speed, or press other specific ethernet speed button.

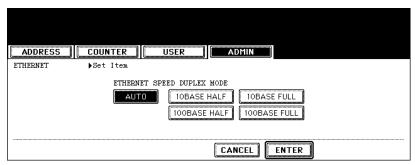



- When you select a specific ethernet speed, you must select the same ethernet speed as set in the connected network. If you do not know the ethernet speed that must be used, select the [AUTO] button.
- · If the network is not stable, power OFF the equipment then ON.

- 4 Press the [ENTER] button.
 - Returns you to the NETWORK menu.
- 5 Continue to another network setting if required, then press the [APPLY NOW] button.

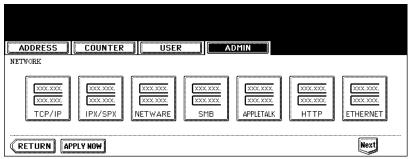

• This equipment starts initializing the network interface card to apply the changes.


Setting the LDAP and SNMP Network Service

Tips

This function allows this equipment to access the LDAP directory service. This equipment can search for the contacts in the LDAP server to specify the recipients of the Internet Fax, fax transmission, and Scan to E-mail job.

- If the LDAP network service is enabled, you can register the LDAP directory service, and then this equipment can search for the contacts in the LDAP server. To add the LDAP directory service, you must operate using TopAccess. For more information about registering the directory service, please see the TopAccess Guide.
- When the LDAP network service is disabled, it is not possible to obtain the user's e-mail address as "From Address" from the LDAP server during the User Authentication for Scan to Email.

Press the [NETWORK] button in the ADMIN menu.

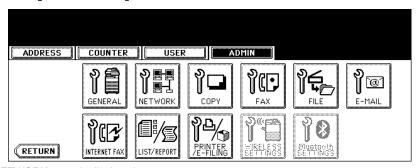


· The NETWORK menu is displayed.




To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU".

P.82


2 Press the [Next] button.

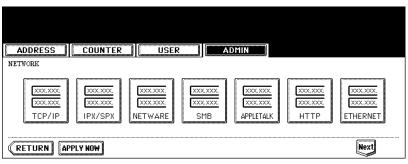


3 Press the [OTHER] button.

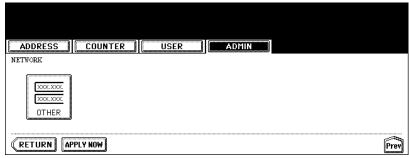

- · The OTHER screen is displayed.
- 4 Press the [ENABLE] button to enable the LDAP network service, or [DISABLE] button to disable it.

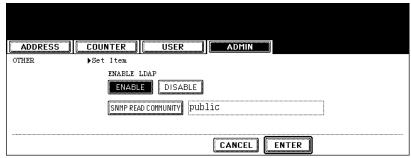

- Optionally you can enter the trap community name for the SNMP Traps by pressing the [SNMP READ COM-MUNITY] button.
 - When you press this button, the QWERTY Type Keyboard screen is displayed. Enter the value using the keyboard and digital keys, and press the [ENTER] button to set the entry.
- 5 Press the [ENTER] button.
 - · Returns you to the NETWORK menu.
- 6 Continue to another network setting if required, then press the [APPLY NOW] button.

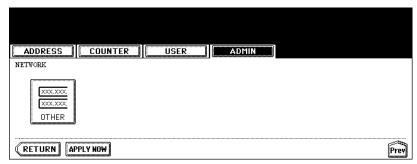


· This equipment starts initializing the network interface card to apply the changes.

4. SETTING COPY FUNCTIONS

You can change the system behaviors for the copy operation, such as maximum number of copies, auto 2-sided mode, and the sort mode priority.

1 Press the [COPY] button in the ADMIN menu.

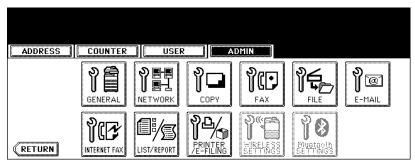


· The COPY screen is displayed.



To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU".

P.82

2 Specify following items as required.

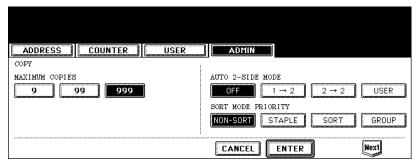

- MAXIMUM COPIES Press the number button that indicates the maximum number of copies to be allowed.
- AUTO 2-SIDE MODE Press the button of the 2-Sided mode that initially applies to copy settings when originals are set in the Automatic Document Feeder. When the [OFF] button is selected, the initial setting of the 2-Sided mode will be [1 -> 1 SIMPLEX] when originals are set in the Automatic Document Feeder.

When the [1->2] button is selected, the initial setting of the 2-Sided mode will be [1 -> 2 DUPLEX] when originals are set in the Automatic Document Feeder.


When the [2->2] button is selected, the initial setting of the 2-Sided mode will be [2 -> 2 DUPLEX] when originals are set in the Automatic Document Feeder.

When the [USER] button is selected, the screen to select the 2-Sided mode will be displayed when originals are set in the Automatic Document Feeder.

SORT MODE PRIORITY — Press the sort mode that applies prior for copy jobs.

3 Press the [Next] button to display the next screen.

4 Specify following items as required.

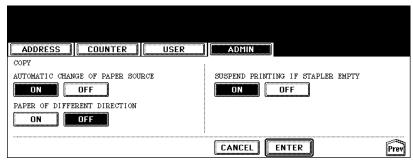

- AUTOMATIC CHANGE OF PAPER SOURCE When this is set to [ON], this equipment will print on the different size of paper when the specified paper size is not set. When this is set to [OFF], this equipment will display a message to set the correct paper.
- PAPER OF DIFFERENT DIRECTION When this is set to [ON], this equipment will rotate the image and print on the different direction of paper if the correct direction of paper is not set. When this is set to [OFF], this equipment will display a message to set the correct paper.
- SUSPEND PRINTING IF STAPLER EMPTY When this is set to [ON], this equipment quit the job with stapling when the stapler empty occurs. When this is set to [OFF], this equipment will continue the job without stapling.

5 Press the [ENTER] button.

· Returns you to the ADMIN menu.

5. SETTING FAX FUNCTIONS

Setting the Terminal ID




The Terminal ID settings are available only when the optional Fax unit is installed.

Once programmed, Terminal ID information will be printed on the leading edge of transmitted or received documents if the TTI and RIT are enabled.



- · ID information is sent and printed about 5 mm from the top edge of the original.
- In compliance with FCC regulations, your company's name, facsimile telephone number and date & time are added at the top of all transmitted documents. This feature enables remote parties to easily identify your documents and the time of transmission.

1 Press the [FAX] button in the ADMIN menu.

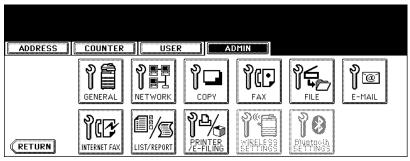


· The FAX menu is displayed.



To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU".


P.82

2 Press the [TERMINAL ID] button.

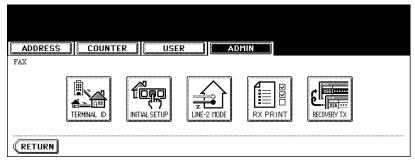


· The TERMINAL ID screen is displayed.

3 Specify following items as required.

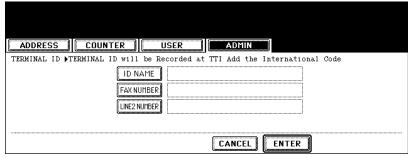


- [ID NAME] Press this to enter the terminal ID of this equipment.
- **[FAX NUMBER]** Press this to enter the fax number of this equipment.
- **[LINE2 NUMBER]** Press this to enter the 2 line fax number of this equipment if the Line2 board is installed. This is not displayed when the Line2 board is not installed.
- When you press the [ID NAME] button, the input screen is displayed. Enter the name using the keyboard and digital keys, and press the [ENTER] button to set the entry.

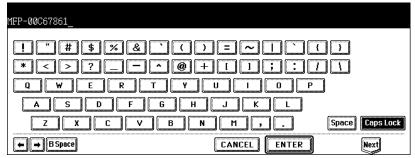


When you press the [FAX NUMBER] or [LINE2 NUMBER] button, the message to ask you whether adding the
international code is displayed. Press the [YES] button if you want to add the international code, or the [NO]
button if you do not want to add the international code.

When you press the [YES] button, the input screen that "+" is entered is displayed.


When you press the [NO] button, the input screen without any entry is displayed.

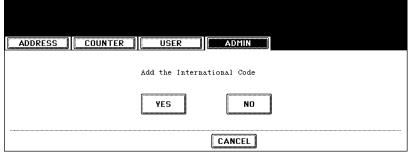

Enter the phone number using the digital keys, and press the [ENTER] button to set the entry.

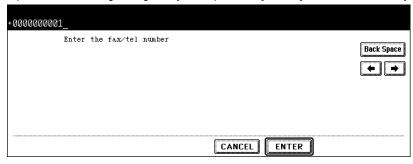

4 Press the [ENTER] button.

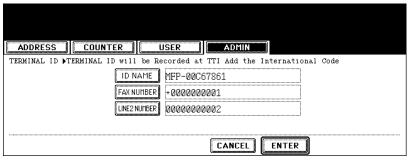

· Returns you to the FAX menu.

Setting the Fax Initial Setup




The [INITIAL SETUP] button in the [ADMIN] menu will be available only when the optional Fax unit is installed.

Set the initial settings for the fax functions such as the volume settings and reception mode.

- · Reception mode: AUTO, MANUAL
- Monitor tone volume: Adjustable 0-7 steps (0: tone OFF)
 The "monitor tone" is the line monitor tone which is heard when the [MONITOR/PAUSE] button is pressed.
- Completion tone volume: Adjustable 0-7 stages (0: tone OFF)

 The "completion tone" is the ringer tone which is heard when original printing has been completed. It can be heard when all originals have been printed out.
- Dial type (Line 1 /Line 2): DP, MF (not available for the European version)
 There are two types of telephone lines: Dial pulse lines (DP) and multi frequency lines (MF). Change the telephone line setting to match the type of the line you are using, for example, when you first install the system or when you change the connected telephone line.

1 Press the [FAX] button in the ADMIN menu.

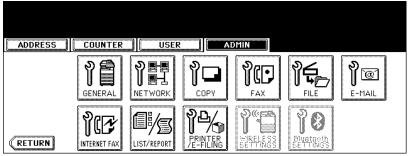


· The FAX menu is displayed.




To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU". $\ \square$ P.82

2 Press the [INITIAL SETUP] button.

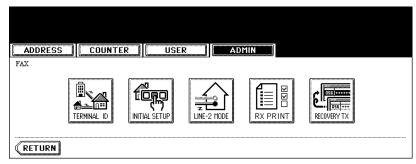

· The INITIAL SETUP screen is displayed.

3 Specify following items as required.

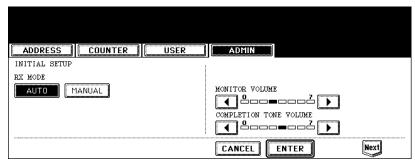


- RX MODE Press the [AUTO] button to receive faxes automatically, or [MANUAL] button to receive faxes
 manually. When you select the manual mode, you can receive the faxes by pressing the [START] button when
 it rings.
- MONITOR VOLUME Press the arrow buttons to change the monitor volume.
- COMPLETION TONE VOLUME Press the arrow buttons to change the complete volume.



When the User Management Setting is enabled, only the [AUTO] button can be selected for the RX MODE option.

- Press the [Next] button to display the next screen.
- 5 Specify following items as required.

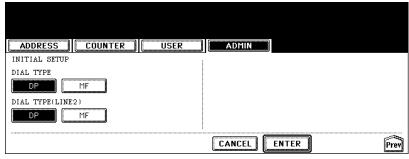

- DIAL TYPE Press the [MF] button to select the Multi-frequency mode, or [DP] button to select the Dial Pulse mode for the line 1.
- DIAL TYPE (LINE2) Press the [MF] button to select the Multi-frequency mode, or [DP] button to select the
 Dial Pulse mode for the line 2. This is available only when the optional 2nd line board is installed.



The "DIAL TYPE" and "DIAL TYPE (LINE2)" is not available for the European version.

6 Press the [ENTER] button.

· Returns you to the FAX menu.

Setting the Line-2 Mode



The Line-2 Mode settings are available only when the optional Fax unit and optional Line-2 board are installed.

Installing the 2nd line board (option) allows transmission during reception, reception during transmission, and simultaneous two communications of transmission/reception.

When the 2nd line is used, the following function setting and registration are required.


- Dial type setting P.125
- Line-2 setting (following instruction)
- The 1st line takes precedence in the initial setting (not including the case that LINE 2 is selected in the LINE SELECT when you register remote fax numbers into the address). If you want the 2nd line to have priority in the initial setting, ask your service technician.

When the optional 2nd line board is installed, its operation can be selected from the following:

- Transmission/Reception
 - Both transmission and reception are available all the time.
- Reception only (24 hours)
 - The 2nd line is always standing by for reception.
- · Reception only (timer)
 - Only reception is available during the specified period of time.
- * Even during reception only, the specified line performs transmission if any line has been specified by the options or address menu.

Entering Line-2 Mode Setting

1 Press the [FAX] button in the ADMIN menu.

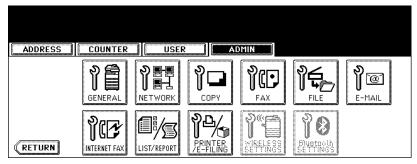


· The FAX menu is displayed.



To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU".

P.82


2 Press the [LINE-2 MODE] button.

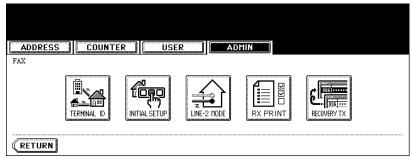

- · The LINE-2 MODE screen is displayed.
- **?** Continue the procedure depending on how you set the Line-2 mode.
 - P.128 "Transmission and Reception (TX /RX)"
 - P.128 "Reception Only (24HR)"
 - P.129 "Reception Only (TIMER)"

Transmission and Reception (TX /RX)


1 Press the [TX/RX] button.

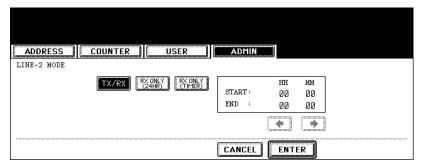

2 Press the [ENTER] button.

Reception Only (24HR)

1 Press the [RX ONLY (24HR)] button.

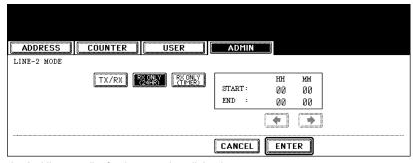


Making the 2nd line standby for the reception all the time.

2 Press the [ENTER] button.

Reception Only (TIMER)

1 Press the [RX ONLY (TIMER)] button.

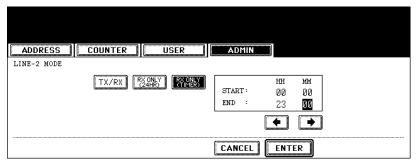

- Using the 2nd line for reception only during the specified period.
- · Enter the START time and END time using the digital keys.
- · Pressing the arrow buttons moves the cursor.
- · Time is displayed in the 24-hour system.

2 Press the [ENTER] button.

Setting Discard and Reduction Printing

Set print settings for received fax and Internet Fax originals that are to be printed.

Two print settings are available: discard printing and reduction printing.


Discard Printing: ON, OFF

- · ON (default setting):
 - When originals are up to 10mm larger than the printing area; the part of the originals that exceeds the paper printing area is discarded.
- OFF: The received original is printed on two sheets of paper if its length exceeds the paper printing area.
 - * For detail of DISCARD setting, contact your service technician.

RX Reduction Printing: ON, OFF

- · ON (default setting):
 - If the received original is longer than the recording paper, it will be vertically reduced to 90% to fit on the recording paper.
- OFF: The received original is printed on two sheets of paper if its length exceeds the paper printing area.
- * Only drawers can be set for received FAX printing. Please see the *Operator's Manual for Basic Functions*. Be sure to use LD, LG, LT, LT-R, A3, A4, A4-R or B4.

1 Press the [FAX] button in the ADMIN menu.

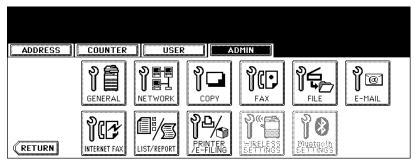


· The FAX menu is displayed.



To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU". 🚨 P.82


? Press the [RX PRINT] button.

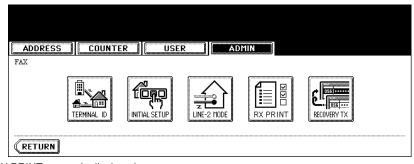

The RX PRINT screen is displayed.

4

3 Press the [ON] (or [OFF]) button of the "DISCARD" and/or "REDUCTION".

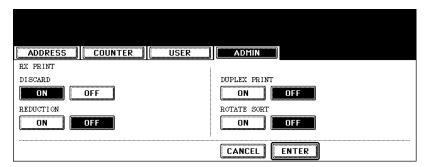

⚠ Press the [ENTER] button.

• The registered items can be confirmed in the function list. \square P.149

Setting Duplex Printing




The "Duplex Print" function is available only when the optional Fax unit is installed.

This printer setting determines whether or not to print received originals on both sides of sheet.

- * Duplex printing is available only if the received originals are the same size.
- * When the system runs out of paper during duplex printing, the rest of the documents is printed on both sides of another size of paper.

1 Press the [FAX] button in the ADMIN menu.

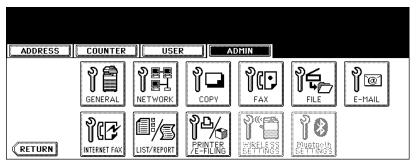


· The FAX menu is displayed.



To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU". 🚨 P.82

3 Press the [ON] button of the "DUPLEX PRINT", and then press the [ENTER] button.

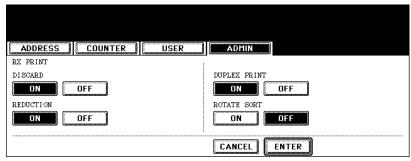


• The registered items can be confirmed in the function list.


P.149



Duplex printing direction differs depending on the received original size.

  - Received LD, LG, LT, A3, A4, or B4-sized originals are printed so that they can be bound alone the long edge
 of direction.
- Received ST, A5 or B5-sized originals are printed so that they can be bound alone the short edge of direction.

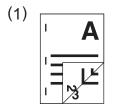

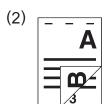

Setting the Rotate Sort




The "Rotate Sort" function is available only when the optional Fax unit is installed.

The printer setting determines whether or not to output each separate job of received originals in the different orientation.

Λ

- Rotate Sort printing is available only for LT/A4-sized paper. Set the LT and LT-R, or A4 and A4-R drawers.
- * When the system runs out of paper during Rotate Sort printing, the rest of the documents is printed on the remaining paper.

1 Press the [FAX] button in the ADMIN menu.

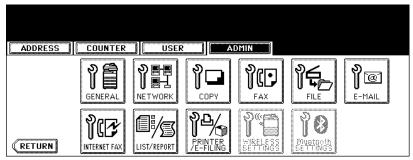


· The FAX menu is displayed.




To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU". 🚨 P.82

2 Press the [RX PRINT] button.

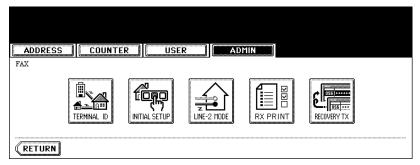

3 Press the [ON] button of the "ROTATE SORT", and then press the [ENTER] button.

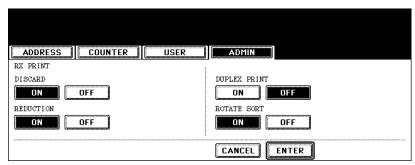

• The registered items can be confirmed in the function list.

P.149


The Recovery transmission is available only when the optional Fax unit is installed.

This function allows you to specify how long a document will be remained in the memory after failing the redial attempts.



You can retransmit the document held in the memory. For instructions on how to send the recovery transmission, see the *Operator's Manual For Facsimile Function*.

1 Press the [FAX] button in the ADMIN menu.

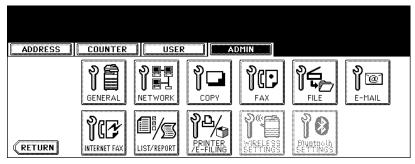


· The FAX menu is displayed.




To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU". 🚨 P.82

2 Press the [RECOVERY TX] button.

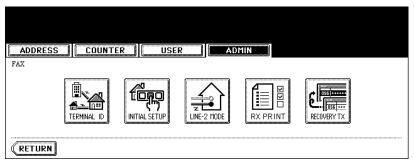

4

3 Change the document-stored time with the [< 1H] or [24H >] button, and press the [ENTER] button.

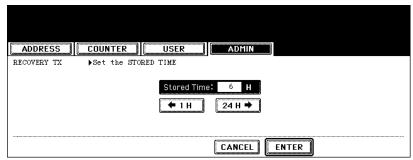

• The document-holding time can be changed by the 1 hour.



When the Recovery transmission is enabled, the [RECOVERY TX] button will be grayed icon. You can disable the Recovery transmission by pressing the [RECOVERY TX] button again, and the button turns to the normal icon.


6. SETTING FILE FUNCTIONS

This function allows you to automatically delete the files stored by the Save as file operations. This function is used to periodically delete stored files in the local storage to maintain the available hard disk space.



The [FILE] button in the [ADMIN] menu will be available only when the Scanner Kit is installed, or when the Printer/Scanner Kit is installed.

1 Press the [FILE] button in the ADMIN menu.

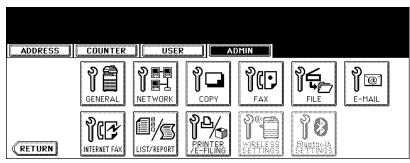


· The FILE menu is displayed.



To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU". 🚨 P.82

Press the [ON] button to enable the storage maintenance, or [OFF] button to disable the storage maintenance.

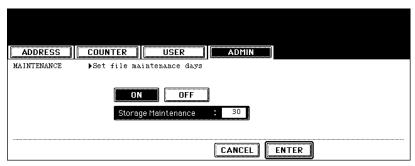

- When you press the [ON] button, the "Storage Maintenance" field will be highlighted. Continue to next step to
 enter the number of days.
- · When you press the [OFF] button, skip to step 4.
- 3 Press the [Storage Maintenance] button to activate the input field, and enter the number of days the system preserve the files before deleting them automatically using the digital keys.
 - · You can enter 1 to 99 days.
- ▲ Press the [ENTER] button.

7. SETTING E-MAIL FUNCTIONS


Setting the Scan to E-mail Message Properties

You can configure the message properties of E-mail documents that will be sent by Scan to E-mail opera-



The [E-MAIL] button in the [ADMIN] menu will be available only when the Scanner Kit is installed, or when the Printer/Scanner Kit is installed.

1 Press the [E-MAIL] button.

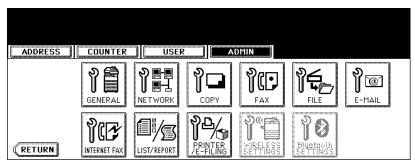


· The E-MAIL screen is displayed.



To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU".

P.82

2 Press each button to enter the E-mail properties.

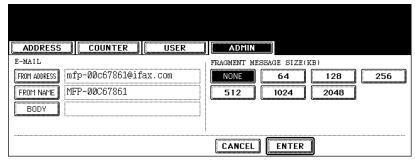

- [FROM ADDRESS] Press this to enter the E-mail address of this equipment.
- [FROM NAME] Press this to enter the identification name of this equipment.
- [BODY] Press this to enter the body message.



You must enter the [FROM ADDRESS] button to enable Scan to E-mail.



When you press each button, the input screen is displayed. Enter the value using the keyboard and digital keys, and press the [ENTER] button to set the entry.

? Press the [ENTER] button.


Setting the Scan to E-mail Fragmentation

This function allows you to send the Scan to E-mail job split by the fragment size you specified. This can reduce the transmission errors caused by the network traffic problems.



The [E-MAIL] button in the [ADMIN] menu will be available only when the Scanner Kit is installed, or when the Printer/Scanner Kit is installed.

1 Press the [E-MAIL] button in the ADMIN menu.

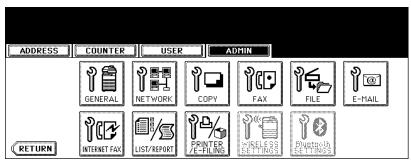


· The E-MAIL screen is displayed.



To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU".

P.82

7 Press desired fragment size button and press the [ENTER] button.

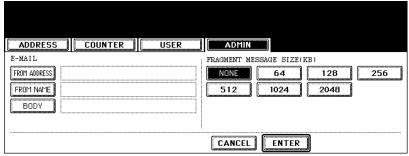

• Press the [NONE] button to disable the fragmentation.

8. SETTING INTERNET FAX FUNCTIONS


Setting the Internet Fax Message Properties

You can configure the message properties of Internet Faxes that will be sent by Internet Fax transmission.



The [INTERNET FAX] button in the [ADMIN] menu will be available only when the Scanner Kit is installed, or when the Printer/Scanner Kit is installed.

1 Press the [INTERNET FAX] button in the ADMIN menu.

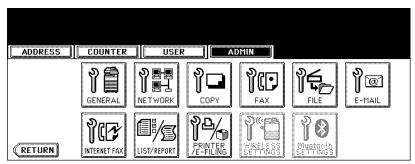


· The INTERNET FAX screen is displayed.



To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU". P.82

2 Press each button to enter the Internet Fax properties.

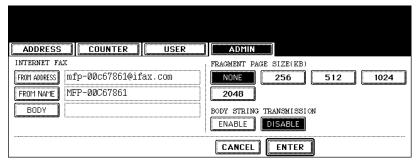

- [FROM ADDRESS] Press this to enter the E-mail address of this equipment.
- [FROM NAME] Press this to enter the identification name of this equipment.
- [BODY] Press this to enter the body message.



You must enter the [FROM ADDRESS] button to enable Internet Fax.



When you press each button, the input screen is displayed. Enter the value using the keyboard and digital keys, and press the [ENTER] button to set the entry.

? Press the [ENTER] button.


Setting the Internet Fax Fragmentation

This function allows you to send the Internet Faxes split by the fragment size you specified. This can reduce the transmission errors caused by the network traffic problems.



The [INTERNET FAX] button in the [ADMIN] menu will be available only when the Scanner Kit is installed, or when the Printer/Scanner Kit is installed.

1 Press the [INTERNET FAX] button in the ADMIN menu.

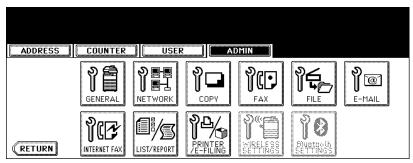


· The INTERNET FAX screen is displayed.



To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU".

P.82

7 Press desired fragment size button and press the [ENTER] button.

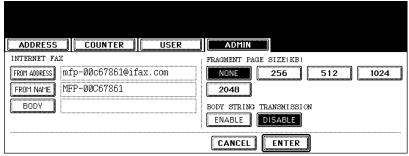

· Press the [NONE] button to disable the fragmentation.


Setting the Internet Fax Body String Transmission

This function allows you to set whether the body string will be transmitted or not.



The [INTERNET FAX] button in the [ADMIN] menu will be available only when the Scanner Kit is installed, or when the Printer/Scanner Kit is installed.

1 Press the [INTERNET FAX] button in the ADMIN menu.

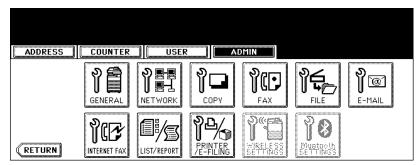


· The INTERNET FAX screen is displayed.



To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU".

P.82

2 Press the [ENABLE] button to enable the body string transmission, or [DISABLE] button to disable the body string transmission.

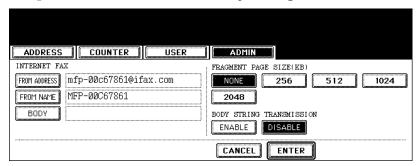

3 Press the [ENTER] button.

9. SETTING LIST/REPORT

Setting the Transmission / Reception Journal

There are two types of journals available on this equipment. Journals can be printed either automatically or manually.

This function allows you to set the auto-print for the journals, and the number of transactions appears in the journal list.



The Transmission/Reception Journal settings will be available only when the Printer Kit and Scanner Kit is installed, when the Printer/Scanner Kit is installed, or when the optional Fax unit is installed.

1 Press the [LIST/REPORT] button in the ADMIN menu.




· The LIST/REPORT screen is displayed.




To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU". 🚨 P.82

7 Press the [REPORT SETTING] button.

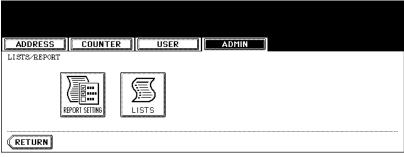


· The REPORT SETTING menu is displayed.

3 Press the [JOURNAL] button.

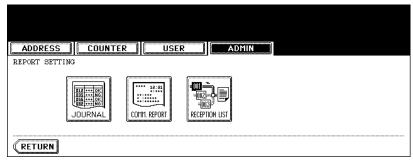

· The JOURNAL screen is displayed.

▲ Specify the following items as required.

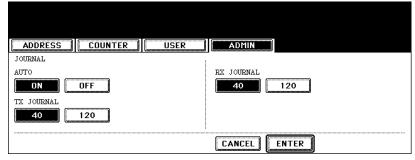

- AUTO Press the [ON] button to enable printing the transmission and reception journals automatically.
 When you enable this, the transmission and reception journals will be printed when specified numbers of transmissions are completed.
- TX JOURNAL Press the number button to specify the number of transmissions will be printed on a transmission journal.
- RX JOURNAL Press the number button to specify the number of receptions will be printed on a reception
 journal.

5 Press the [ENTER] button.

Setting the Communication Report


Communication Report allows you to print a report after every transmission. Reports can be printed automatically only.

This function allows you to select the condition to print the communication report for each transmission type separately.



The Communication Report setting will be available only when the Printer Kit and Scanner Kit is installed, when the Printer/Scanner Kit is installed, or when the optional Fax unit is installed.

1 Press the [LIST/REPORT] button in the ADMIN menu.

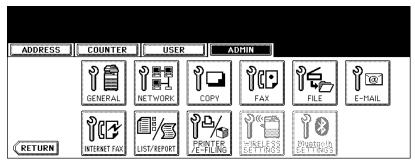


· The LIST/REPORT screen is displayed.




To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU". 🚨 P.82

7 Press the [REPORT SETTING] button.

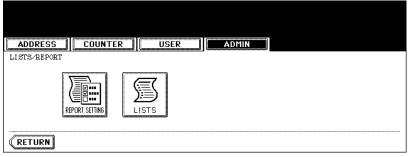


· The REPORT SETTING screen is displayed.

3 Press the [COMM. REPORT] button.

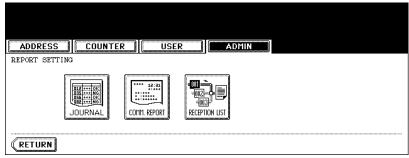

- · The COMM. REPORT screen is displayed.
- **△** Specify the condition for each transmission type.

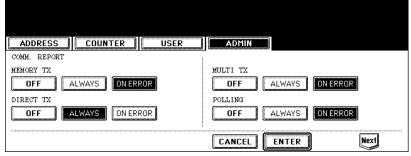


- [OFF] Press this to disable printing the communication report.
- [ALWAYS] Press this to print the communication report every transmission.
- [ON ERROR] Press this to print the communication report only when an error occurs.




"DIRECT TX" and "POLLING" are available only when the optional Fax unit is installed.

When you press the [ALWAYS] or [ON ERROR] button for "MEMORY TX" or "MULTI TX", the "PRINT 1st PAGE IMAGE?" message is displayed. Press the [YES] button to print the communication report with the first page image, or press the [NO] button to print the communication report without the page image.

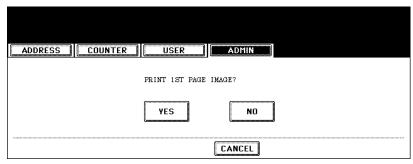

· Returns you to the COMM. REPORT screen.


6 Press the [Next] button to display the next screen and specify the condition for each transmission type.

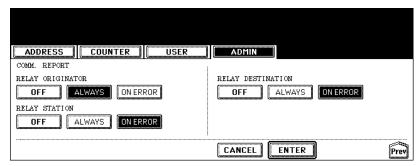



"RELAY ORIGINATOR" is available only when the optional Fax unit is installed.

7 When you press the [ALWAYS] or [ON ERROR] button for each transmission type, the "PRINT 1st PAGE IMAGE?" message is displayed. Press the [YES] button to print the communication report with the first page image, or press the [NO] button to print the communication report without the page image.

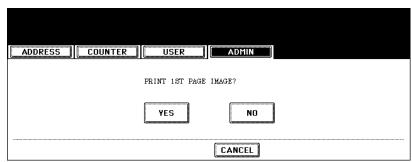

- · Returns you to the COMM. REPORT screen.
- R Press the [ENTER] button.

Setting the Reception List

The Reception List allows you to print a reception list after receiving a document to a mailbox on this equipment.


This function allows you to enable or disable printing a reception list for the following mailbox transmissions:

Relay Station — Receiving a relay transmission from an originator as a relay hub.

Local — Reserving a document to a mailbox within this equipment locally.

Remote — Reserving a document to a mailbox within this equipment remotely from another facsimile.

1 Press the [LIST/REPORT] button in the ADMIN menu.

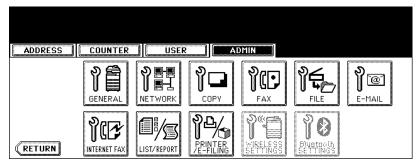


· The LIST/REPORT screen is displayed.




To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU". 🚨 P.82

2 Press the [REPORT SETTING] button.

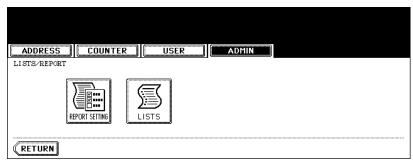


• The REPORT SETTING screen is displayed.

3 Press the [RECEPTION LIST] button.

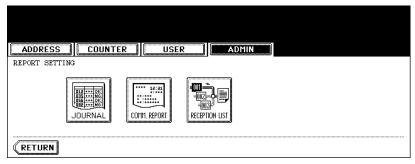

· The RECEPTION LIST screen is displayed.

4 Specify whether the reception list will be printed for each transmission.

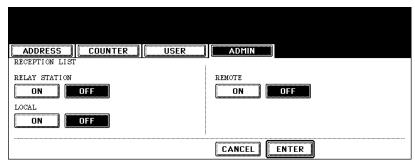

- RELAY STATION Select the [ON] button to print the reception list when receiving a relay transmission from an originator.
- LOCAL Select the [ON] button to print the reception list when reserving a document to a mailbox within the
 machine locally.
- **REMOTE** Select the [ON] button to print the reception list when receiving a document to a mailbox within the machine remotely from another facsimile.

5 Press the [ENTER] button.

10. PRINTING LISTS


This function allow you to print the NIC configuration page, function list, PS3 font list, and PCL font list.

* For the examples of each list format are described in Appendix. P.153



The NIC configuration page, PS3 font list, and PCL font list can be printed only when the Printer Kit, the Printer/Scanner Kit, or optional Fax unit is installed.

1 Press the [LIST/REPORT] button in the ADMIN menu.

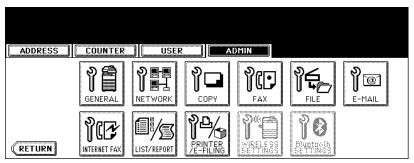


· The LIST screen is displayed.




To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU".

P.82

2 Press the [LIST] button.

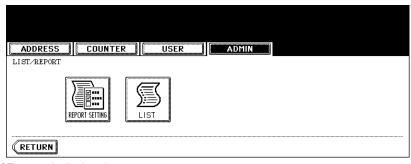

- · The LIST screen is displayed.
- 3 Press the button that you want to print.

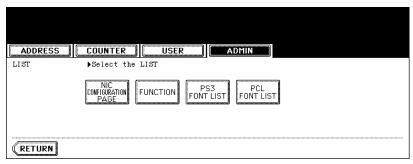


· Selected list is printed.

11. SETTING PRINTER/E-FILING FUNCTIONS

You can configure the printer and e-Filing functions that will apply to the print jobs or e-Filing jobs.

1 Press the [PRINTER/E-FILING] button in the ADMIN menu.

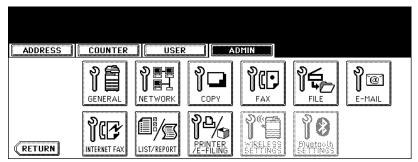


· The PRINTER/E-FILING screen is displayed.



To display the ADMIN menu, see "1.ENTERING TO ADMIN MENU". 🚨 P.82

9 Specify the following items as you require.

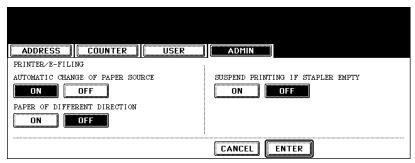

- AUTOMATIC CHANGE OF PAPER SOURCE When the [ON] button is selected, this equipment will feed
 the same size of paper from the different drawer if the specified drawer becomes empty.
- PAPER OF DIFFERENT DIRECTION When the [ON] button is selected, this equipment will feed the same size of paper that is set in a different direction if the specified drawer becomes empty.
- SUSPEND PRINTING IF STAPLER EMPTY Select the [ON] button to enable suspending printing if stapler
 empty occurs. When this is enabled, this equipment quit printing that stapling is specified if stapler empty
 occurs. When this is disabled, this equipment will print a document without stapling even if stapler empty
 occurs.

3 Press the [ENTER] button.

12. WIRELESS SETTINGS AND Bluetooth SETTINGS

- There is also the [WIRELESS SETTINGS] button in the ADMIN menu. This button will be available
 only when the optional Wireless LAN Module is installed. For the instructions on how to operate the
 WIRELESS SETTINGS, please refer to the GN-1041 Operator's Manual for Wireless LAN.
- There is also the [Bluetooth SETTINGS] button in the ADMIN menu. This button will be available only when the optional Bluetooth Module is installed. For the instructions on how to operate the Bluetooth SETTINGS, please refer to the *GN-2010 Operator's Manual for Bluetooth*.

5. APPENDIX

LIST PRINT FORMAT	154
Total Counter List	154
Department Code List	
Address Book List	
Function List (User)	158
NIC Configuration Page	
Function List (Administrator)	
PS3 Font List	
PCL Font List	176

1. LIST PRINT FORMAT

Total Counter List

An output example of the Total Counter List

TC	TAL COUNTE	R LIST	TIME S/N	: 10-09-'05 2 : 0987654321		
PRINT COUNTE	ER COPY	FAX	PRINTER	LIST	TOTAL	
SMALL LARGE	99999	99999	99999	99999	399996 399996	
TOTAL	199998	199998	199998	199998	799992	
SCAN COUNTER	₹					
COPY FAX NETWORK	99999 99999 99999					
TOTAL	299997					

Department Code List

An output example of the Department Code List

DEPAI	RTMENT (CODE LIST		TIME	: 10-0	09-'05 20:47		
DEPT NO. DE	PARTMENT							
D 1 00	001							
PRINT COUN								
	COPY	FAX	PRINT	LIST	Т	OTAL	LIMIT	_
	99999	99999	99999	99999		399996		
LARGE	99999	99999	99999	99999		399996		_
	199998	199998	199998	199998	7	799992	-	
FAX COMMU	NICATION		SCAN COUN	TER				
	TRANSMIT	RECEPTION		COPY	FAX	NETWORK		
CMATT	99999	99999	SMALL	99999	99999	99999		
DMALL	2222							
	99999	99999	LARGE	99999	99999	99999		
	99999	99999 199998			99999 199998			
	99999							
LARGE DEPT NO. DE	99999 199998 PARTMENT							
LARGE	99999 199998 PARTMENT							
LARGE DEPT NO. DE	99999 199998 PARTMENT 002							
LARGE DEPT NO. DE D 2 00	99999 199998 PARTMENT 002				199998		LIMIT	
LARGE DEPT NO. DE D 2 00 PRINT COUN	99999 199998 PARTMENT 002 VTER COPY	199998 FAX	PRINT	199998 LIST	199998 T	199998	LIMIT	_
LARGE DEPT NO. DE D 2 00 PRINT COUN	99999 199998 PARTMENT 002 VTER COPY	199998 FAX	PRINT	199998	199998 T	199998 'OTAL	LIMIT	-
LARGE DEPT NO. DE D 2 00 PRINT COUN	99999 199998 PARTMENT 002 WITER COPY 99999 99999	199998 FAX 99999 99999	PRINT 99999 99999	199998 LIST 99999	199998 T	199998 OTAL 399996	LIMIT	-
LARGE DEPT NO. DE D 2 00 PRINT COUN	99999 199998 PARTMENT 002 WITER COPY 99999 99999 199998	199998 FAX 99999 99999	PRINT 99999 99999	199998 LIST 99999 99999	199998 T	199998 OTAL 399996 399996		-
LARGE DEPT NO. DE D 2 00 PRINT COUN SMALL LARGE	99999 199998 PARTMENT 002 WITER COPY 99999 99999 199998	199998 FAX 99999 99999	PRINT 99999 99999 199998	199998 LIST 99999 99999	199998 T	199998 OTAL 399996 399996		-
LARGE DEPT NO. DE D 2 00 PRINT COUN SMALL LARGE FAX COMMUN	99999 199998 PARTMENT 002 VTER COPY 99999 199999 199998 NICATION	199998 FAX 99999 199998	PRINT 99999 99999 199998	199998 LIST 99999 99999 199998 TER	199998 T	199998 OTAL 399996 399996		-
LARGE DEPT NO. DE D 2 00 PRINT COUN SMALL LARGE FAX COMMUN	99999 199998 PARTMENT 002 NTER COPY 99999 199999 199998 NICATION TRANSMIT	199998 FAX 99999 199998 RECEPTION	PRINT 99999 99999 199998 SCAN COUN	LIST 99999 99999 199998 TER COPY	199998 T 3 3	199998 OTAL 399996 399996		-

Address Book List

An output example of the Address Book List

	ADDRESS BOOK	INFORMATION	TIME FAX NO.1 FAX NO.2 NAME	: 10-09-'05 2 : 9999999999 : 9999999999999999999999)	
NO.	NAME	FAX NUMBER/E-MAIL ADDRESS	QUALITY TX	TX TYPE	LINE ECM	ATT
001	USER01	0000000001 ⊠user01@ifax.com	OFF	MEMORY	OFF	0
002	USER01	00000000002 ☑user02@ifax.com	OFF	MEMORY	OFF	0
003	USER01	0000000003 ☑user03@ifax.com	OFF	MEMORY	OFF	0
004	USER01	0000000004 ☑user04@ifax.com	OFF	MEMORY	OFF	0
005	USER01	0000000005 ☑user05@ifax.com	OFF	MEMORY	OFF	0
006	USER01	0000000006 ☑user06@ifax.com	OFF	MEMORY	OFF	0
007	USER01	0000000007 ☑user07@ifax.com	OFF	MEMORY	OFF	0
800	USER01	0000000008 ☑user08@ifax.com	OFF	MEMORY	OFF	0
009	USER01	0000000009 ☑user09@ifax.com	OFF	MEMORY	OFF	0
010	USER01	0000000010 ☑user10@ifax.com	OFF	MEMORY	OFF	0
011	USER01	0000000011 ☑userll@ifax.com	OPP	-		
_	USER01					

Group Numbers List

An output example of the Group Numbers List

	GROUP NUMBER	R INFOR	MATTON	I				9999 9990		
NO.	NAME	ADDRESS	BOOK							
001	GROUP01	⊠ 001	001 M 008						006 012	
		007		000			016		□ 012 □ 018	018
		□ 011 □ 019		☐ 020	020		010	 01/		010
002	GROUP02	005	007	009	 015	≥ 060	₩ 065			
003	GROUP03	 005	005	₩ 006	₩ 006	₩ 007	₩ 009			

Function List (User)

An output example of the Function List (User)

```
FUNCTION LIST
                                                        TIME : 10-09-'05 20:47
                              : 0987654321
                      S/N
                                  : T410SY0U010 FAX NO.1 : 99999999999
: 410M-003 FAX NO.2 : 9999999990
: 410S-00 NAME : MFP_00000183
                      F/W Ver.
                      M-ROM Ver. : 410M-003
                      S-ROM Ver. : 410S-00
GENERAL
       TOTAL COUNTER
                                            : 9999
       DRAWER
               DRAWER 1
                                           : LT
               DRAWER 2
                                           : A3
               DRAWER 3
DRAWER 4
                                           : A4-R
       AUTO CLEAR
COPY
       EXPOSURE
                                            : AUTO
       EXPOSURE
ORIGINAL MODE
IMAGE DIRECTION
BYPASS FEED
2IN1/4IN1
MAGAZINE SORT
BOOK -> 2
                                            : TEXT/PHOTO
                                            : DISABLE
                                            : PLAIN
                                           : WRITE LATERALLY
                                           : OPEN FROM LEFT
                                           : OPEN FROM LEFT
       BOOK -> 2
SCAN
                                            : 0
       ROTATION
       ROTATION
SINGLE/2-SIDE SCAN
PROJUTION
                                             : SINGLE
                                             : 200dpi
       RESOLUTION
                                            : TEXT
       ORIGINAL MODE
                                           : AUTO
       BACKGROUND ADJUSTMENT
                                            : 0
FAX
       FAX ROM VERSION
                                           : F562-A05
                                            : STANDARD
       RESOLUTION
       ORIGINAL MODE
        EXPOSURE
                                                AUTO
       TX TYPE
                                             : MEMORY TX
                                             : OFF
       RTT
                                            : ON
       INITIAL SETUP
              MONITOR VOLUME
```



For further information about the items printed on the function list, please refer to the "Function List (Administrator)". (P.160)

NIC Configuration Page

An output example of the NIC Configuration Page

```
______
Unit Serial No
                  : 00C67861
                                     Version: T000SY00000
Network Address : 00:40:af:7e:28:55
Network Topology : Ethernet
                                            Connector: RJ45
Network Mode
                 : 100 Megabits
                                             enabled
Novell Network Information
   Print Server Name : MFP_00C67861
Password Defined : No
Search Root : NWSRV
Directory Services Tree : ORG
    Directory Services Context : dept1.org
                               : 5
: Auto Sense
    Scan Rate
    Frame Type
TCP/IP Network Information
                                             enabled
     Address Mode : Static IP IP Address : 10.10.70.105
     IP Address : 10.10.70.105
Subnet Mask : 255.255.255.0
Default Gateway : 10.10.70.1
     Primary DNS Server : 0.0.0.0
     DNS Name
     Host Name
     Primary WINS Server : 0.0.0.0
     NetBios Name : MFP 00C67861
IPP Network Information

IPP without SSL : http://169.254.204.215:631/Print

TPP with SSL : https://169.254.204.215:443/Print
AppleTalk Network Information
                                             enabled
     AppleTalk Printer Name: MFP 00C67861
     AppleTalk Zone : *
AppleTalk Type : LaserWriter
     AppleTalk Frame Type : 802.2 SNAP On 802.3
______
 Novell Connection Information
     File Server Name: NWSRV
     Queue Name: MFP QUEUE
   leTalk Connection I
```

159

Function List (Administrator)

An output example of the Function List (Administrator)

```
FUNCTION LIST
                                                                   TIME
                           S/N
                                 : 0987654321
                                                                                   : 10-09-'05 20:47
                          F/W Ver. : T410SY0U010
                                                                   FAX NO.1 : 99999999999
                          M-ROM Ver. : 410M-003
                                                                   FAX NO.2 : 99999999990
                          S-ROM Ver. : 410S-00
                                                                   NAME : MFP_00000183
GENERAL
         TOTAL COUNTER
                                                    : 9999
        MAIN / PAGE MEMORY SIZE
                                                    : 256 MB / 64 MB
         DRAWER
                  DRAWER 1
                                                   : LT
                  DRAWER 2
                                                   : A3
                  DRAWER 3
                                                   : A4-R
                                                   : B5
                  DRAWER 4
                                                    : 45
         AUTO CLEAR
         ENERGY SAVER
                     TIMER SUNDAY : 00:00 24:00
TIMER MONDAY : 00:00 24:00
TIMER TUESDAY : 00:00 24:00
TIMER WEDNESDAY : 00:00 24:00
TIMER THURSDAY : 00:00 24:00
TIMER THURSDAY : 00:00 24:00
TIMER FRIDAY : 00:00 24:00
TIMER FRIDAY : 00:00 24:00
TIMER SATURDAY : 00:00 24:00
                  WEEKLY TIMER
                                                       ON
                  AUTO POWER SAVE
                  SLEEP MODE
                                                     : 60
COPY
        EXPOSURE
        IMAGE DIRECTION
BYPASS FEED
2IN1/4IN1
MAGGATINE
                                                   : TEXT/PHOTO
                                                   : DISABLE
                                                   : PLAIN
                                                   : WRITE LATERALLY
                                                   : OPEN FROM LEFT
         MAGAZINE SORT
                                                     : OPEN FROM LEFT
         BOOK -> 2
                                                     : 9999
         MAXIMUM COPIES
                                                    : OFF
         AUTO 2-SIDED MODE
         SORT MODE PRIORITY
                                                    : NON=SORT
         AUTOMATIC CHANGE OF PAPER SIZE
         PAPER OF DIFFERENT DIRAECTION_
```

The Function List for an administrator shows the setting list for all functions. The following table shows all functions that are printed for an administrator's function list, and the "User" column indicates which functions are printed in a user's function list. This table also describes about each function.

GENERAL

Function	Description	User
TOTAL COUNTER	Shows the total counter.	YES
MAIN / PAGE MEMORY SIZE	Shows the main memory size and page memory size.	NO
DRAWER - DRAWER 1	Shows the paper size of the drawer 1.	YES
DRAWER - DRAWER 2	Shows the paper size of the drawer 2.	YES

GENERAL

Function	Description	User
DRAWER - DRAWER 3*1	Shows the paper size of the drawer 3.	YES
DRAWER - DRAWER 4*2	Shows the paper size of the drawer 4.	YES
DRAWER - LARGE CAPACITY FEEDER*3	Shows the paper size of the large capacity feeder	YES
AUTO CLEAR	Shows the time (in second) that the Touch Panel Display clears the previous settings that had been set and turns to the initial screen.	YES
ENERGY SAVER - WEEKLY TIMER	Shows the time to enter the energy saver mode (ON time), and the time to exit the energy saver mode (OFF time) for each day (Sunday to Saturday).	NO
ENERGY SAVER - AUTO POWER SAVE	Shows the time to enter the power save mode (in minutes).	NO
ENERGY SAVER - SLEEP MODE	Shows the time to enter the sleep mode (in minutes).	NO

^{*1. &}quot;DRAWER 3" is printed only when the Drawer 3 & 4 is installed.

COPY

Function	Description	User
EXPOSURE	Shows the default exposure setting for copy.	YES
ORIGINAL MODE	Shows the default original mode for copy.	YES
IMAGE DIRECTION	Shows whether the image direction is enabled or disabled.	YES
BYPASS FEED	Shows the default paper type of the bypass feed.	YES
2IN1/4IN1	Shows the default 2in1/4in1 mode.	YES
MAGAZINE SORT	Shows the default magazine sort mode.	YES
BOOK -> 2	Shows the default duplex book copy mode.	YES
MAXIMUM COPIES	Shows the maximum copies that are allowed to be set.	NO
AUTO 2-SIDE MODE	Shows the default auto 2-sided mode.	NO
SORT MODE PRIORITY	Shows the default sort mode.	NO

^{*2. &}quot;DRAWER 4" is printed only when the Drawer 3 & 4 is installed.

^{*3. &}quot;LARGE CAPACITY FEEDER" is printed only when the LCF is installed.

COPY

Function	Description	User
AUTOMATIC CHANGE OF PAPER SOURCE	Shows whether the Automatic Change of Paper Source function is enabled or disabled.	NO
PAPER OF DIFFERENT DIRECTION	Shows whether the Paper of Different Direction function is enabled or disabled.	NO
SUSPEND PRINTING IF STAPLER EMPTY	Shows whether this equipment suspends printing when stapler empty occurs.	NO

SCAN

Function	Description	User
ROTATION	Shows the default rotation mode.	YES
SINGLE/2-SIDED SCAN	Shows the default 2-sided scan mode.	YES
RESOLUTION	Shows the resolution for scans.	YES
ORIGINAL MODE	Shows the default original mode for scans.	YES
EXPOSURE	Shows the default exposure setting for scans.	YES

FAX

Function	Description	User
FAX ROM VERSION	Shows the ROM version of the Fax unit.	YES
RESOLUTION	Shows the default resolution setting for a fax/Internet Fax transmission.	YES
ORIGINAL MODE	Shows the default original mode for a fax/ Internet Fax transmission.	YES
EXPOSURE	Shows the default exposure setting for a fax/ Internet Fax transmission.	YES
TX TYPE*1	Shows the default transmission type.	YES
RTI	Shows whether the RTI is enabled or disabled.	YES
ECM ^{*1}	Shows whether the ECM is enabled or disabled.	YES
INITIAL SETUP - MONITOR VOLUME*1	Shows the monitor volume setting.	NO
INITIAL SETUP - COMPLETION TONE VOLUME*1	Shows the complete volume setting.	NO
INITIAL SETUP - RX MODE*1	Shows the default RX mode.	NO

FAX

Function	Description	User
INITIAL SETUP - DIAL TYPE*1	Shows the dial type of the line 1.	NO
INITIAL SETUP - DIAL TYPE (LINE2)*2	Shows the dial type of the line2.	NO
LINE-2 MODE*2	Shows the line2 mode.	NO
LINE-2 MODE - START*2	Shows the start time to use the Line2 for receptions only. This applies only when "RX ONLY (TIMER)" is set to the LINE-2 MODE.	NO
LINE-2 MODE - END*2	Shows the end time to finish using the Line2 for receptions only. This applies only when "RX ONLY (TIMER)" is set to the LINE-2 MODE.	NO
RX PRINT - DISCARD	Shows whether the discard function is enabled or disabled.	NO
RX PRINT - REDUCTION	Shows whether the reduction is enabled or disabled.	NO
RX PRINT - DUPLEX PRINT*1	Shows whether the duplex print is enabled or disabled.	NO
RX PRINT - ROTATE SORT*1	Shows whether the rotate sort is enabled or disabled.	NO
RECOVERY TX - STORED TIME*1	Shows how many hours that a recovery transmission job is to be stored.	NO
FAX RECEIVED FORWARD - AGENT1*1	Shows the agent type if the Fax Received Forward is registered.	NO
FAX RECEIVED FORWARD - AGENT2*1	Shows the agent type if the Fax Received Forward is registered.	NO

FILE

Function	Description	User
MAINTENANCE	Shows whether the storage maintenance is enabled or disabled.	NO
STORAGE MAINTENANCE	Shows how many days the data in the local folder is remained. This applies only when the maintenance function is enabled.	NO

^{*1.} These are printed only when the optional Fax unit is installed.*2. These are printed only when the optional Fax unit and optional Line2 board are installed.

E-MAIL

Function	Description	User
FRAGMENT MESSAGE SIZE (KB)	Shows the fragment message size that applies to an E-mail transmission.	NO
FROM ADDRESS	Shows the sender's E-mail address that applies to an E-mail transmission.	NO
FROM NAME	Shows the sender's name that applies to an E-mail transmission.	NO

INTERNET FAX

Function	Description	User
FRAGMENT PAGE SIZE (KB)	Shows the fragment message size that applies to an Internet Fax transmission.	NO
BODY STRING TRANSMISSION	Shows whether the body string transmission is enabled or disabled.	NO
FROM ADDRESS	Shows the sender's E-mail address that applies to an Internet Fax transmission.	NO
FROM NAME	Shows the sender's name that applies to an Internet Fax transmission.	NO
INTERNET FAX RECEIVED FORWARD - AGENT1	Shows the agent type if the Internet Fax Received Forward is registered.	NO
INTERNET FAX RECEIVED FORWARD - AGENT2	Shows the agent type if the Internet Fax Received Forward is registered.	NO

REPORT SETTING

Function	Description	User
JOURNAL - AUTO	Shows whether the auto journal print is enabled or disabled.	NO
JOURNAL - TX JOURNAL	Shows how many transmissions will be printed on a transmission journal.	NO
JOURNAL - RX JOURNAL	Shows how many receptions will be printed on a reception journal.	NO
COMM. REPORT - MEMORY TX	Shows the condition to print a memory transmission report.	NO
COMM. REPORT - DIRECT TX	Shows the condition to print a direct transmission report.	NO
COMM. REPORT - MULTI TX	Shows the condition to print a multi transmission report.	NO
COMM. REPORT - POLLING*1	Shows the condition to print a polling report.	NO

REPORT SETTING

Function	Description	User
COMM. REPORT - RELAY ORIGINATOR*1	Shows the condition to print a relay originator report.	NO
COMM. REPORT - RELAY STATION	Shows the condition to print a relay station report.	NO
COMM. REPORT - RELAY DESTINATION	Shows the condition to print a relay destination report.	NO
RECEPTION LIST - LOCAL	Shows whether a reception list will be printed or not after reserving a document to a mailbox within the equipment.	NO
RECEPTION LIST - REMOTE	Shows whether a reception list will be printed or not after reserving a document to a mailbox within the equipment remotely from another facsimile.	NO
RECEPTION LIST - RELAY STATION	Shows whether a reception list will be printed or not after receiving a relay transmission from an originator as a relay hub.	NO

^{*1.} These are printed only when the optional Fax unit is installed.

PRINTER/E-FILING

Function	Description	User
AUTOMATIC CHANGE OF PAPER SOURCE	Shows whether the Automatic Change of Paper Source function is enabled or disabled.	NO
PAPER OF DIFFERENT DIRECTION	Shows whether the Paper of Different Direction function is enabled or disabled.	NO
SUSPEND PRINTING IF STAPLER EMPTY	Shows whether this equipment suspends printing when stapler empty occurs.	NO

WIRELESS SETTINGS

Function	Description	User
WIRELESS LAN	Shows whether the Wireless LAN function is enabled or disabled.	NO
NETWORK TYPE	Shows the network type for Wireless LAN.	NO
SSID	Shows the SSID.	NO
SECURITY	Shows the security mode.	NO
802.1x AUTHENTICATION	Shows the protocol for WPA/WPA2/802.1x authentication when WPA/WPA2/802.1x authentication is selected for the security mode.	NO

WIRELESS SETTINGS

Function	Description	User
USER CERTIFICATE	Shows the user certificate name to be used for authentication.	NO
CA CERTIFICATE	Shows the CA certificate name to be used for authentication.	NO
EAP USER NAME	Shows the EAP user name to be used for authentication.	NO
TRANSMIT RATE (Mbps)	Shows the transmission rate.	NO
TRANSMIT POWER	Shows the transmission power.	NO



WIRELESS SETTINGS are printed only when the optional Wireless LAN Module is installed.

BLUETOOTH SETTINGS

Function	Description	User
BLUETOOTH	Shows whether the Bluetooth function is enabled or disabled.	NO
BLUETOOTH NAME	Shows the Bluetooth name of this equipment.	NO
DEVICE ADDRESS	Shows the device address of this equipment.	NO
ALLOW DISCOVERY	Shows whether the Allow Discovery function is enabled or disabled.	NO
SECURITY	Shows whether the security function is enabled or disabled.	NO
REQUIRED PIN	Shows the PIN number.	NO
DATA ENCRYPTION	Shows whether the data encryption is enabled or disabled.	NO



BLUETOOTH SETTINGS are printed only when the optional Bluetooth Module is installed.

NETWORK SETTING - GENERAL PRODUCT

Function	Description	User
GENERAL - ETHER SPEED/DUPLEX MODE	Shows the Ethernet speed setting.	NO

NETWORK SETTING - NETWORK - TCP/IP

Function	Description	User
ADDRESS MODE	Shows the TCP/IP address mode.	NO
IP ADDRESS	Shows the IP address of this equipment.	NO
SUBNET MASK	Shows the subnet mask of this equipment.	NO
DEFAULT GATEWAY	Shows the default gateway address of this equipment.	NO

NETWORK SETTING - NETWORK - IPX/SPX

Function	Description	User
ENABLE IPX/SPX	Shows whether the IPX/SPX protocol is enabled or disabled.	NO
FRAME TYPE	Shows the frame type to be selected.	NO

NETWORK SETTING - NETWORK - APPLETALK

Function	Description	User
ENABLE APPLE TALK	Shows whether the AppleTalk protocol is enabled or disabled.	NO
DEVICE NAME	Shows the AppleTalk device name.	NO
DESIRED ZONE	Shows the AppleTalk zone.	NO

NETWORK SETTING - SESSION - LDAP SESSION

Function	Description	User
ENABLE LDAP	Shows whether the LDAP is enabled or disabled.	NO
ENABLE SSL	Shows whether the LDAP SSL is enabled or disabled.	NO

NETWORK SETTING - SESSION - DNS SESSION

Function	Description	User
ENABLE DNS	Shows whether the DNS is enabled or disabled.	NO
PRIMARY DNS SERVER ADDRESS	Shows the primary DNS server address if it has been set.	NO
SECONDARY DNS SERVER ADDRESS	Shows the secondary DNS server address if it has been set.	NO

NETWORK SETTING - SESSION - DDNS SESSION

Function	Description	User
ENABLE DDNS	Shows whether the DDNS is enabled or disabled.	NO
HOST NAME	Shows the host name of this equipment.	NO
DOMAIN NAME	Shows the domain name of this equipment.	NO

NETWORK SETTING - SESSION - SMB SESSION

Function	Description	User
SMB SERVER PROTOCOL	Shows whether the SMB protocol is enabled or disabled.	NO
NETBIOS NAME	Shows the NetBIOS name of this equipment.	NO
LOGON	Shows the logon setting.	NO
WORKGROUP	Shows the workgroup of this equipment.	NO
DOMAIN	Shows the domain name of this equipment.	NO
PRIMARY DOMAIN CONTROLLER	Shows the primary domain controller address if it has been set.	NO
BACKUP DOMAIN CONTROLLER	Shows the backup domain controller address if it has been set.	NO
DEVICE NAME	Shows the device name of this equipment for the domain if it has been set.	NO
PRIMARY WINS SERVER	Shows the primary WINS server address if it has been set.	NO
SECONDARY WINS SERVER	Shows the secondary WINS server address if it has been set.	NO
SMB SIGNING OF SMB SERVER	Shows the setting of the SMB Signing of SMB Server.	NO
SMB SIGNING OF SMB CLIENT	Shows the setting of the SMB Signing of SMB Client.	NO

NETWORK SETTING - SESSION - NETWARE SESSION

Function	Description	User
ENABLE BINDERY	Shows whether the bindery mode is enabled or disabled.	NO
ENABLE NDS	Shows whether the NDS mode is enabled or disabled.	NO
CONTEXT	Shows the NDS context.	NO

NETWORK SETTING - SESSION - NETWARE SESSION

Function	Description	User
TREE	Shows the NDS tree.	NO
SEARCH ROOT	Shows the NDS Search Root.	NO

NETWORK SETTING - SESSION - BONJOUR SESSION

Function	Description	User
ENABLE BONJOUR	Shows whether the Bonjour is enabled or disabled.	NO
LINK-LOCAL HOST NAME	Shows the link-local host name of this equipment for Bonjour.	NO
SERVICE NAME	Shows the service name of this equipment for Bonjour.	NO

NETWORK SETTING - NETWORK SERVICE - HTTP NETWORK SERVICE

Function	Description	User
ENABLE HTTP SERVER	Shows whether the HTTP network service is enabled or disabled.	NO
PRIMARY PORT NUMBER	Shows the primary port number for the HTTP network service.	NO
SECONDARY PORT NUMBER	Shows the secondary port number for the HTTP network service.	NO
ENABLE SSL	Shows whether the SSL for the HTTP network service is enabled or disabled.	NO
SSL PORT NUMBER	Shows the SSL port number for the HTTP network service.	NO

NETWORK SETTING - NETWORK SERVICE - SMTP CLIENT NETWORK SERVICE

Function	Description	User
ENABLE SMTP CLIENT	Shows whether the SMTP client is enabled or disabled.	NO
AUTHENTICATION	Shows whether SMTP authentication is enabled or disabled.	NO
POP BEFORE SMTP	Shows whether POP Before SMTP is enabled or disabled.	NO
SMTP SERVER ADDRESS	Shows the IP address of SMTP server that has been assigned.	NO
LOGIN NAME	Shows the login name used for SMTP authentication.	NO

NETWORK SETTING - NETWORK SERVICE - SMTP CLIENT NETWORK SERVICE

Function	Description	User
PORT NUMBER	Shows the port number to be used for sending an E-mail or Internet Fax to the SMTP server.	NO
ENABLE SSL	Shows whether the SSL for the SMTP client is enabled or disabled.	NO

NETWORK SETTING - NETWORK SERVICE - SMTP SERVER NETWORK SERVICE

Function	Description	User
ENABLE SMTP SERVER	Shows whether the SMTP server is enabled or disabled.	NO
PORT NUMBER	Shows the port number to be used for receiving the Internet Fax using the SMTP protocol.	NO
ENABLE OFFRAMP GATEWAY	Shows whether the offramp gateway is enabled or disabled.	NO
ENABLE OFFRAMP SECURITY	Shows whether the offramp security is enabled or disabled.	NO
ENABLE OFFRAMP PRINT	Shows whether the offramp print is enabled or disabled.	NO
E-MAIL ADDRESS	Shows the E-mail address of this equipment if the SMTP server is enabled and it has been set.	NO

NETWORK SETTING - NETWORK SERVICE - POP3 NETWORK SERVICE

Function	Description	User
ENABLE POP3 CLIENT	Shows whether the POP3 client is enabled or disabled.	NO
POP3 SERVER ADDRESS	Shows the IP address of the POP3 server if it has been assigned.	NO
TYPE POP3 LOGIN	Shows the POP3 login type.	NO
ACCOUNT NAME	Shows the POP3 account name if it has been set.	NO
SCAN RATE	Shows the scan rate to check the POP3 server for new message (in minutes).	NO
PORT NUMBER	Shows the port number to be used for accessing the POP3 server.	NO
ENABLE SSL	Shows whether the SSL for the POP3 network service is enabled or disabled.	NO

NETWORK SETTING - NETWORK SERVICE - POP3 NETWORK SERVICE

Function	Description	User
SSL PORT NUMBER	Shows the SSL port number to be used for accessing the POP3 server.	NO

NETWORK SETTING - NETWORK SERVICE - FTP CLIENT NETWORK SERVICE

Function	Description	User
DEFAULT PORT NUMBER	Shows the default port number to be used for saving a document to the network folder using the FTP.	NO

NETWORK SETTING - NETWORK SERVICE - FTP SERVER NETWORK SERVICE

Function	Description	User
ENABLE FTP SERVER	Shows whether the FTP server service is enabled or disabled.	NO
DEFAULT PORT NUMBER	Shows the default port number to be used for receiving data using FTP.	NO
ENABLE SSL	Shows whether the SSL for the FTP server network service is enabled or disabled.	NO
SSL PORT NUMBER	Shows the SSL port number to be used for accessing the equipment using FTP.	NO

NETWORK SETTING - NETWORK SERVICE - SNMP NETWORK SERVICE

Function	Description	User
ENABLE SNMP	Shows whether the SNMP is enabled or disabled.	NO
READ COMMUNITY	Shows the read community name.	NO
ENABLE AUTHENTICATION TRAP	Shows whether the authentication trap is enabled or disabled.	NO
ENABLE ALERTS TRAP	Shows whether the alerts trap is enabled or disabled.	NO
IP TRAP ADDRESS1	Shows the IP address that have been set for IP trap address 1.	NO
IP TRAP COMMUNITY	Shows the IP Trap community name.	NO
IPX TRAP ADDRESS	Shows the IPX trap address.	NO

NETWORK SETTING - NETWORK SERVICE - SNTP NETWORK SERVICE

Function	Description	User
ENABLE SNTP	Shows whether the SNTP is enabled or disabled.	NO

NETWORK SETTING - NETWORK SERVICE - SNTP NETWORK SERVICE

Function	Description	User
PRIMARY SNTP ADDRESS	Shows the primary SNTP server address if it has been set.	NO
SECONDARY SNTP ADDRESS	Shows the secondary SNTP server address if it has been set.	NO
PORT NUMBER	Shows the port number to be used for accessing the SNTP server.	NO
SCAN RATE	Shows the scan rate to check the SNTP server for adjusting the time setting.	NO

NETWORK SETTING - PRINT SERVICE SETTING - RAW TCP PRINT

Function	Description	User
ENABLE RAW TCP	Shows whether Raw TCP printing is enabled or disabled.	NO
PORT NUMBER	Shows the port number to be used for Raw TCP printing.	NO

NETWORK SETTING - PRINT SERVICE SETTING - LPD PRINT

Function	Description	User
ENABLE LPD	Shows whether LPR printing is enabled or disabled.	NO
PORT NUMBER	Shows the port number to be used for LPR printing.	NO
BANNERS	Shows whether the banner will be printed for each LPR print job.	NO

NETWORK SETTING - PRINT SERVICE SETTING - IPP PRINT

Function	Description	User
ENABLE IPP	Shows whether IPP printing is enabled or disabled.	NO
ENABLE PORT80	Shows whether the Port80 is used for IPP printing.	NO
PORT NUMBER	Shows the port number to be used for IPP printing.	NO
URL	Shows the URL for IPP printing.	NO
ADMINISTRATOR'S NAME	Shows the administrator's user name to be allowed to perform the [Cancel All Documents] function.	NO

NETWORK SETTING - PRINT SERVICE SETTING - IPP PRINT

Function	Description	User
AUTHENTICATION	Shows whether the authentication for IPP printing is enabled or disabled.	NO
USER NAME	Shows the user name for authentication.	NO
ENABLE SSL	Shows whether the SSL for IPP printing is enabled or disabled.	NO
SSL PORT NUMBER	Shows the SSL port number to be used for IPP printing.	NO
SSL URL	Shows the SSL URL for IPP printing.	NO

NETWORK SETTING - PRINT SERVICE SETTING - FTP PRINT

Function	Description	User
ENABLE FTP PRINT	Shows whether FTP printing is enabled or disabled.	NO
PRINT USER NAME	Shows the user name for FTP printing.	NO
PRINT PASSWORD	Shows the password for FTP printing.	NO
PORT NUMBER	Shows the port number to be used for FTP printing.	NO

NETWORK SETTING - PRINT SERVICE SETTING - NETWARE PRINT

Function	Description	User
LOGIN NAME	Shows the login name for NetWare file server.	NO
PASSWORD	Shows the password for NetWare file server.	NO
PRINT QUEUE SCAN RATE	Shows how often the equipment scans the queue on NetWare file server (in second).	NO

NETWORK SETTINGS - PRINT AND NOTIFICATION SERVICE - E-MAIL PRINT

Function	Description	User
ENABLE PRINT HEADER	Shows whether the header will be printed or not for E-mail printing.	NO
ENABLE PRINT MESSAGE BODY	Shows whether the message body will be printed or not for E-mail printing.	NO
MAXIMUM E-MAIL BODY PRINT	Shows the maximum number of pages to print the body strings of the received Email print job.	
ENABLE PRINT E-MAIL ERROR	Shows whether an E-mail error report will be printed or not.	NO

NETWORK SETTINGS - PRINT AND NOTIFICATION SERVICE - E-MAIL PRINT

Function	Description	User
ENABLE E-MAIL ERROR FORWARD	Shows whether an E-mail error message will be sent or not.	NO
E-MAIL ERROR TRANSFER ADDRESS	Shows the E-mail address where an E-mail error message will be sent, if it has been set.	NO
ENABLE PARTIAL E-MAIL	Shows whether the equipment allows printing an E-mail job that partially received.	NO
PARTIAL WAIT TIME	Shows how long the equipment will wait for receiving data of a partial E-mail job before printing (in second).	NO
MDN REPLY	Shows whether MDN Reply is enabled or disabled.	NO

An output example of the PS3 Font List

e-STUDIO 282 Series TOSHIBA

Internal PS Font List

Page:1

AlbertusMT-Light AlbertusMT AlbertusMT-Italic AntiqueOlive-Roman AntiqueOlive-Italic AntiqueOlive-Bold AntiqueOlive-Compact Apple-Chancery ArialMT Arial-ItalicMT Arial-BoldMT Arial-BoldItalicMT AvantGarde-Book AvantGarde-BookOblique AvantGarde-Demi AvantGarde-DemiOblique Bodoni Bodoni-Italic Bodoni-Bold Bodoni-BoldItalic Bodoni-Poster Bodoni-PosterCompressed Bookman-Light Bookman-LightItalic Bookman-Demi Bookman-DemiItalic Candid Chicago Clarendon-Light Clarendon Clarendon-Bold CooperBlack CooperBlack-Italic Copperplate-ThirtyTwoBC Copperplate-ThirtyThreeBC Coronet-Regular Courier Courier-Oblique Courier-Bold Courier-BoldOblique Eurostile Eurostile-Bold Eurostile-ExtendedTwo Eurostile-BoldExtendedTwo Geneva GillSans-Light

GillSans-LightItalic

GillSans GillSans-Italic

The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog

©↓★ ☎️♥️● ♣️♥️△৯ఄ౾ ௯️○௦ ♣ੑੑ૿૿૿૿૽૾૾૽ૢ૽૾૽૽૽૽૽૽૽* ○★★♥ ◎↓★ □↓₺░ ▲○₤ The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog THE QUICK BROWN FOX JUMPS OVER THE LAZY DOG THE QUICK BROWN FOX JUMPS OVER THE LAZY DOG The quick brown for jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog
The quick brown fox jumps over the lazy dog
The quick brown fox jumps over the lazy dog
The quick brown fox jumps over the lazy dog

The quick brown fox jumps over the la

The quick brown fox jumps over the

The quick brown fox jumps over #

The quick

The quick brown fox in

PCL Font List

An output example of the PCL Font List

TOSHIBA

e-STUDIO 282 Series Internal PCL Font List

Page:1

CG-Times CG-Times Bold CG-Times Italic CG-Times Bold Italic CG Omega CG Omega Bold CG Omega Italic CG Omega Bold Italic Coronet Clarendon Condensed 11 Univers Medium 12 Univers Bold 13 Univers Italic Univers Bold Italic 14 Univers Medium Condensed 15 Univers Condensed Bold 16 Univers Medium Condensed Italic Univers Condensed Bold Italic 18 Antique Olive 19 20 Antique Olive Bold 21 Antique Olive Italic 22 Garamond Antiqua Garamond Halbfett 23 Garamond Kursiv 24 25 Garamond Kursiv Halbfett Marigold 26 27 Albertus Medium Albertus Extra Bold 29 Arial 30 Arial Bold 31 Arial Italic Arial Bold Italic 32 Times New Roman 33 Times New Roman Bold 34 35 Times New Roman Italic Times New Roman Bold Italic Helvetica Helvetica-Bold 38 39 Helvetica-Oblique 40 Helvetica-BoldOblique Helvetica-Narrow 41

The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quich brown fox jumps over the lazy dog
The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog
The quick brown fox jumps over the lazy dog
The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog
The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog
The quick brown fox jumps over the lazy dog The quick brown fox jumps over the lazy dog
The quick brown fox jumps over the lazy dog

The quick brown fox jumps over the lazy dog

The quick brown fox jumps over the

The quick brown fox

ط The quick

Helvetica-Narrow-Bold

Palatino-Roman Palatino-Bold

Helvetica-Narrow-Oblique

Helvetica-Narrow-BoldOblique

42

43

44

INDEX

Numerics		D	_
2ND TEL	8	Date and Time	90
		DATE FORMAT	91
A		DATE/TIME	
ADDRESS BOOK		Daylight Saving System	
ADDRESS BOOK EDIT		DELETE ALL	50
Address Book List		DEMO PAGE PRINT	
ADDRESS BOOK REGISTRATION		Department Code	
ADDRESS MENU		Deleting	E0 E9
ADDRESS MODE10	, ,		
ADMIN	82	Editing	
COPY	120	Enabling	
E-MAIL	137	Printing	
FAX	_	Registering	51
FILE		Resetting All Counters	49
		Resetting Counter	60
GENERAL	_	Department Code List	155
INTERNET FAX		DEPARTMENT COUNTER	
LIST/REPORT	142	DEPARTMENT MANAGEMENT	
NETWORK		DEPARTMENT REGISTRATION	
ADMIN. MESSAGE		DEPT	
Administrator Password		DESIRED ZONE	
Advice	3	DEVICE INFORMATION	
ALL LIMIT	62	DEVICE NAME	
APPLETALK		DHCP Server	
AppleTalk Protocol	112	DIAL TYPE	
AUTO 2-SIDE MODE	120	DIAL TYPE (LINE2)	
AUTO CLEAR	64	DIRECT TX	
Auto Clear Mode	64	DISABLE FILE SHARE	
AUTO POWER SAVE	95	DISABLE PRINT SHARE	
Auto Power Save Mode	95	DISCARD	
Auto-IP	100	Discard Printing	
AUTOMATIC CHANGE OF PAPER SC	URCE	Display Language	
121,	150	DRAWER	
,		DRAWER DRAWER SET POP-UP	
В			
BODY		DUPLEX PRINT	
Body String Transmission		Duplex Printing	
BYPASS FEED	68	DYNAMIC	101
C CHANGE LANGUAGE	65	E ECM	9, 71
CHECK OF GROUP MEMBER		E-MAIL	8
CHECKING E-MAIL	,	ENABLE APPLETALK	
CLOCK		ENABLE BINDERY	
COMM. REPORT		ENABLE HTTP SERVER	
Communication Report		ENABLE IPX/SPX	
COMPLETION TONE VOLUME		ENABLE NDS	
CONTACT INFORMATION		ENABLE SSL	
	04	ENERGY SAVER	
Contacts		ETHERNET	
Deleting		EXPOSURE	
Editing	10	EXPOSURE MODE	
Registering	7	EAPUSURE WIDDE	08
Searching		F	
CONTEXT		FAX COMMUNICATION	44
CORP.		Fax Initial Setup	
COLINITED MENUL	5	EAV NO	0

INDEX

FAX NUMBER	123	M	
FIRST NAME	8	MAXIMUM COPIES	
FRAGMENT MESSAGE SIZE	138	MEMORY TX	
FRAGMENT PAGE SIZE	140	Message Properties	
Fragmentation	138, 140	MONITOR VOLUME	
FRAME TYPE	105	MULTI TX	145
FROM ADDRESS	137, 139		
FROM NAME		N NAME SORT	7.4
FUNCTION	76. 149		
Function List (Administrator)		NetBIOS NAME	
Function List (User)		NETWARE	
r drietion List (Osci)		NetWare Settings	
G		NIC CONFIGURATION PAGE	
GATEWAY	104	NIC Configuration Page	
Group		NO AUTO IP	102
Creating	10	NOTIFICATION	86
Deleting		0	
Editing		ORIGINAL MODE	
Searching		OTHER	
GROUP NAME		Output Limitations	62
GROUP NO. EDIT	22	_	
GROUP NO. REGISTRATION	19	P	404 450
GROUP NUMBERS	75	PAPER OF DIFFERENT DIRECTION	
Group Numbers List		PASSWORD SETUP	
	-, -	PCL FONT LIST	
H		PCL Font List	
HTTP		POLLING	
HTTP Network Service	114	PREFACE	
-		PRIMARY PORT NUMBER	115
	400	PRINT COUNTER	36, 40
ID NAME		PRINT OUT DEPARTMENT CODES .	
ID SORT		PRINT OUT TOTAL COUNTER	
IMAGE DIRECTION		PRINTER/E-FILING	
INITIAL SETUP		PS3 FONT LIST	
IP ADDRESS		PS3 Font List	
IPX/SPX	105	PWD	
IPX/SPX Protocol	105	FWD	9
J		Q QUALITY TX	0
JOURNAL	143	QUALITY IX	9
K		R	4.40
KEYWORD	8	Reception Journal	
KNOWN ID		RECEPTION LIST	
	11, 20, 00	Reception List	
L		Recovery Transmission	
LAST NAME	8	RECOVERY TX	
LDAP Network Service	118	REDUCTION	131
LDAP PROTOCOL	119	Reduction Printing	130
LINE SELECT		RELAY DESTINATION	146
LINE-2 MODE		RELAY ORIGINATOR	
Line-2 Mode		RELAY STATION	
LINE2 NUMBER		REMOTE	
LIST		REPORT SETTING14	
		RESET ALL COUNTERS	
LOCAL		RESET COUNTERS	
LOCATION			
LOGON	110	RESOLUTION	
		REVERSED DISPLAY	66

Reversed Display Mode ROTATE SORT Rotate Sort ROTATION RTI RX JOURNAL RX MODE RX ONLY (24HR) RX ONLY (TIMER) RX PRINT RX Printing	133 132 72 71 143 126 128 129 133
SCAN COUNTER	137 5, 26 31 108 115 9 84 9 72 97 109 110 119 120 104 103 136 9 104
T TCP/IP	100 122 122 3 36 154 142 108 71 143 0, 70

U	
ÜSER	
COPY	68
FAX	
GENERAL	64
LIST	
SCAN	72
W WEEKLY TIMER	
WINS PRIMARY	
WINS SECONDARY	110

TOSHIBA TEC GERMANY IMAGING SYSTEMS GMBH