SGH-T349 Series

PORTABLE Tri-BAND MOBILE PHONE

User Manual
Please read this manual before operating your
phone, and keep it for future reference.



Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the "Phone System"), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Samsung Telecommunications America (STA), LLC

Headquarters: Customer Care Center:

1301 E. Lookout Drive 1000 Klein Rd. Richardson, TX 75082 Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Internet Address: http://www.samsungusa.com

©2009 Samsung Telecommunications America, LLC is a registered trademark of Samsung Electronics America, Inc. and its related entities

Do you have questions about your Samsung Mobile Phone?

For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at: www.samsungtelecom.com/support

GH68-21670A

Printed in Korea

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437; U.S. Pat. 5,953,541; U.S. Pat. 6,011,554 and other patents pending.

The Bluetooth[®] word mark, figure mark (stylized "B Design"), and combination mark (Bluetooth word mark and "B Design") are registered trademarks and are wholly owned by the Bluetooth SIG.

microSD™ and the microSD logo are Trademarks of the SD Card Association.

Openwave® is a registered Trademark of Openwave, Inc.

Open Source Software

Some software components of this product incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit:

http://www.samsungnetwork.com/Home/opensource.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT "AS IS", AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Table of Contents

Section 1: Getting Started	5
Activating Your Phone	
Switching the Phone On or Off	
Setting Up Your Voice Mail	
Section 2: Understanding Your Phone	13
Features of Your Phone	
Front View of Your Phone	
Keys	
Back View of Your Phone	16
Side Views of Your Phone	
Display Layout	18
View Tab	
Backlight	20
Section 3: Call Functions	22
Making a Call	
Adjusting the Call Volume	
Answering a Call	24
Call History	24
Vibration Mode	26
Selecting Functions and Options	26
Section 4: Menu Navigation	33
Menu Navigation	
Section 5: Entering Text	35
Changing the Text Input Mode	
Using T9 Mode	
Using Alpha	
Using Number Mode	39
Using Symbol Mode	39
Section 6: People	40
Using Contacts List	
Finding a Contact Entry	41

	Dialing a Number from People	42
	Editing a Caller Group	43
	Speed Dialing	44
	Block list	45
	Management	45
	FDN List	48
Se	ection 7: Messaging	49
	Types of Messages	
	Display Icons for Messages	
	Text Messages	
	Picture Messages	
	Inbox	55
	E-mail Messages	59
	Audio Postcard	59
	Instant Messaging (IM)	61
	Sentbox	62
	Drafts	62
	Templates	63
	Voice mail	64
	Settings	65
	Delete all	66
	Memory Status	66
	Voice Recording	67
Se	ection 8: Media	69
	web2go	69
	Take Photo	73
	Music Player	75
	Videos	79
	Games and Apps	81
	Voice recorder	82
	Others	83
Se	ection 9: Changing Your Settings	
	Personalize your Settings	
	Sound settings	
		50

	Vibration mode	8	3
	Display settings	8	3
	Phone settings	9	9
	My Account	9	9
	Help	9	9
	Bluetooth	9	9
	Call settings	.10)
	Menu Design	.10),
	Advanced	.10),
S	ection 10: Organizer	10)
	Organizer		
	Calendar	.10)
	Alarm	.1	11
	To do	.11	1
	Notes	.11	1
	Calculator	.11	1
	Tip calculator	.11	1
	World Time	.11	1
	Unit conversion	.11	1
	Timer	.11	1
	Stopwatch	.11	1
S	ection 11: Camera	11	į
	Using the Camera	.11	1
	Take Photo	.11	1
	Photos	.1	1
	Record video	.11	1
	Videos	.12	2
	My Album	.12	2
Sı	ection 12: Health and Safety Information	12	2
_	Health and Safety Information		
	Samsung Mobile Products and Recycling		
	UL Certified Travel Adapter		
	Consumer Information on Wireless Phones		
	Road Safety		

Responsible Listening	132
Operating Environment	134
Using Your Phone Near Other Electronic Devices	134
Potentially Explosive Environments	136
Emergency Calls	136
FCC Notice and Cautions	137
Other Important Safety Information	137
Product Performance	138
Availability of Various Features/Ring Tones	139
Battery Standby and Talk Time	139
Battery Precautions	
Care and Maintenance	140
Section 13: Warranty Information	142
Standard Limited Warranty	142
End User License Agreement for Software	144
Index	

Section 1: Getting Started

This section explains how to start using your phone by first configuring your hardware, activating your service, and then setting up your voice mail.

Activating Your Phone

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, available optional services, and many others features.

Installing the SIM Card

Important!: The plug-in SIM card and its contacts information can be easily damaged by scratching or bending, so be careful when handling, inserting, or removing the card. Keep all SIM cards out of reach of small children.


If necessary, switch off the phone by holding down the key until the power-off image displays.

1. Remove the battery cover by sliding the battery cover in the direction of the arrow.



2. Carefully lift the battery cover away from the bottom of the phone.

3. Lift up and remove the battery.

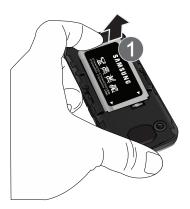

4. Carefully slide the SIM card under the metal bracket and into the SIM card socket until the card locks into place. Make sure that the card's gold contacts face into the phone and that the upper-left angled corner of the card is positioned as shown below.



Note: If the card is not inserted correctly, the phone does not detect the SIM card. Remove the battery and re-orient the card back into the slot.

5. Replace the battery:

- Slide the battery back into the compartment so that the tabs on the end align with the slots at the bottom of the phone.
- · Press the battery down until it clicks into place.



Reinstall the battery cover by sliding it back onto the phone until you hear it securely click. Make sure the battery is properly installed before switching on the phone.



Installing the Memory Card

Your phone supports an optional memory card (microSD™) for data storage of such things as music, pictures, video or other files. This type of memory card is designed for use with this mobile phone and other devices.

Note: This phone supports up to a 4 Gigabyte memory card.

- To unlock the memory cover, use your thumb to slide the memory card cover to the Unlock position (as indicated) until you hear a slight clicking sound.
- 2. Gently lift upward on the edge of the memory card cover.
- Place the microSD card into the slot (as shown). Ensure the microSD's gold contact pins face downward and the card is placed so that the indentations on the card face the same direction as those illustrated.



- 4. Close and lock the memory card cover:
 - (1) close the memory card cover using your thumb to push the cover down.
 - (2) slide the memory card cover back into the Lock position.

Removing the memory card

- Unlock the memory cover by using your thumb to slide the memory card cover to the Unlock position (as indicated) until you hear a slight clicking sound.
- 2. Gently lift upward on the edge of the memory card cover.
- 3. Carefully remove the memory card.

- 4. Close and lock the memory card cover:
 - (1) close the memory card cover using your thumb to push the cover down.
 - (2) slide the memory card cover back into the Lock position.

Charging a Battery

Your phone is powered by a rechargeable Li-ion battery. A travel adapter, which is used for charging the battery, is included with your phone. Use only approved batteries and chargers. Ask your local Samsung dealer for further details

You can use the phone while the battery is charging, but doing so requires additional charging time.

Note: You must fully charge the battery before using your phone for the first time. A discharged battery recharges fully in approximately 4 hours.

 With the battery installed, temporarily remove the plastic cover on the right side of the phone and plug in the travel adapter's connector into the jack.

Important!: Verify that the handset battery is installed prior to connecting the travel adapter. If the battery is not installed and the travel adapter is connected the handset continuously power cycles and prevents proper operation.

2. Plug the adapter's power plug into a standard AC wall outlet.



Note: The previous illustration displays the incorrect method for connecting the charger, If attempted, damage to the accessory port occurs therefore voiding the phone's warranty.

- When charging is finished, unplug the adapter's power plug from the AC wall outlet and then disconnect the travel adapter's connector from the phone.
- Resecure the plastic cover over the interface jack on the phone.

Warning!: Failure to unplug the travel adapter before you remove the battery, can cause damage to the phone.

Low Battery Indicator

When the battery is weak and only a few minutes of talk time remain; a warning tone sounds and the "Battery low" message repeats at regular intervals on the display. In this condition, your phone conserves its remaining battery power, not by turning off the backlight, but by entering the dimming mode.

When the battery level becomes too low, the phone automatically turns off.

Switching the Phone On or Off

- 1. Press and hold the key until the phone switches on.
- If the phone asks you to enter the phone password, use the keypad to enter this password and press either the **OK** soft key or the **OK** key.

Note: For more information, refer to "Change password" on page 93.

If the phone asks for a PIN, use the keypad to enter the PIN and press either the **OK** soft key or the lock key. 3. For further details, see "Check PIN code" on page 94.



The phone searches for your network and after finding it, you can make or receive calls.

Note: The display language is preset to Automatic at the factory. To change the language, use the Language menu. For more information, refer to "Language" on page 96.

When you wish to switch off the phone, press and hold the key until the power-off image displays.

Setting Up Your Voice Mail

For new users, follow the instructions below to set up voice mail:

- In Idle mode, press and hold the keypad.
 You may be prompted to enter a password.
- 2. Follow the tutorial to create a password, a greeting, and your name.

Note: These steps may be different depending on your network.

Accessing Your Voice Mail

You can press and hold the Reynold or use the phone's menu to access your voice mail. To access voice mail using the menu:

- 1. In Idle mode, press Menu → Messaging → Voice mail and press the Select soft key or the ok key.
- 2. Press Call. Your phone dials the specified voice mail number.
- 3. When connected, follow the voice prompts from the voice mail center.

Section 2: Understanding Your Phone

This section outlines some key features of your phone. It also displays the screen and the icons that display when the phone is in use.


Features of Your Phone

Your phone is lightweight, easy-to-use and offers many significant features. The following list outlines a few of the features included in your phone.

- · Partial QWERTY keypad
- 1.3 Megapixel camera and video with multi shot & 4x digital zoom
- Bluetooth® Wireless Technology
- Multiple Messaging Options: Email, Audio Postcard, Instant Messaging, Picture Messaging, Video Messaging, Text Messaging, Predictive Text T9
- . Instant Messaging Capability
- MP3 Player
- · Web enabled
- Organizer feature provides calendar, alarm, to do, notes, calculator, tip calculator, world time, unit conversion, timer, and stopwatch.

Front View of Your Phone

The following illustrations show the main elements of your phone:

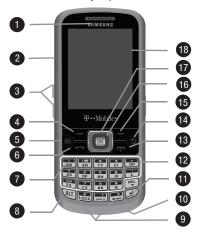

Keys

The following list correlates to the illustrations.

- 1. **Earpiece** allows you to hear the other caller and the different ring tones or sounds offered by your phone.
- 2. Memory card slot used to install an optional microSDTM (memory) card for additional data storage.

Note: This handset supports up to a 4 Gigabyte memory card.

3. Volume keys allow you to adjust the Ringer volume in standby mode (with the phone open) or adjust the Speaker volume during a call. When receiving an incoming call, if you press the volume key, you can mute the ring tone. If you press and hold the volume key, you can reject the call.

- Left Soft key allows you to select soft key actions or menu items corresponding to the bottom left line on the display screen.
- 5. Messaging key allows you to program this key as a shortcut to your favorite messaging tool. You can reprogram the key at any time.
- Send key allows you to make or answer a call. In Idle mode, recalls the last number dialed or received when held down.
- Voice mail key allows you to quickly access your voice mail. Press and hold this key for two seconds to automatically dial your voice mail's phone number.
- Shift key allows you to toggle between numeric and alpha keys. You can also shift case from lower to uppercase while creating a text message.
- 9. Special Function keys allow you activate unique features while in Idle mode. In Idle mode, if you press and hold the * key, the keypad locks. In Idle mode, if you press and hold the # key, you can turn on the Vibration Mode.
- 10. Microphone is used during phone calls and allows other callers to hear you clearly when you are speaking to them. It is also used in making voice note recordings.
- 11. Enter key allows you to perform the highlighted function in a menu or submenu. Press to enter a new paragraph.
- 12. Alphanumeric keys allow you to enter numbers, letters, and some special characters.
- 13. Power On/Off (Exit) key ends a call. Press and hold this key for two seconds to turn your phone on or off. While in the Menu mode, it returns the phone to Idle mode and then cancels your input.
- 14. Cancel/Clear key deletes characters from the display. In Menu mode, this key returns you to the previous menu level.
- 15. Right Soft key allows you to select soft key actions or menu items corresponding to the bottom right line on the display screen. It also provides quick access to your Phonebook.

- 16. Navigation key scrolls through the phone's menu options and acts as a shortcut key from Idle mode.
 In Idle mode:
 - Up key: allows you to directly access the Call history.
 - Down key: allows you to directly accesses Contacts.
 - Left key: displays the Create message screen so you can compose a new message. Note: if you subscribe to myFaves, your favorites rotate one place counter-clockwise.
 - Right key: launches the Audio postcard feature. Note: if you subscribe to myFaves, your favorites rotate one place clockwise.
- 17. OK (Select) key allows you to accept the choices offered when navigating through a menu.
- 18. Display shows all the information needed to operate your phone, such as the received signal strength, phone battery level, and time.

This phone also offers the convenience of a partial QWERTY keyboard.

Back View of Your Phone

The following illustration shows the back, open view of the phone.



1. Camera lens allows you to aim and shoot a picture using the camera.

Side Views of Your Phone


The following illustrations show the external elements of your phone



- 1. Earpiece allows you to hear the other caller and the different ring tones or sounds offered by your phone.
- 2. Memory card slot used to install an optional microSD™ (memory) card for additional data storage.
- 3. Volume keys allow you to adjust the Ring volume in standby mode (with the phone open) or adjust the Speaker volume during a call. When receiving an incoming call, if you press the volume key, you can mute the ring tone. If you press and hold the volume key, you can reject the call.
- 4. Camera key allows you to take pictures when you are in camera mode. Launches the camera with a press.
- 5. **Display** shows the received signal strength, phone battery level, and the time.
- 6. Power/Accessory Interface connector allows you to connect a power cable or optional accessories, such as a USB/data cable or a hands-free headset for convenient, hands-free conversations.

Display Layout

Your phone's display screen provides a wealth of information about your phone's status and options. The display has three areas:

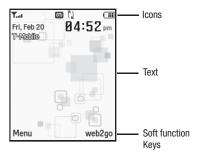

View Tab

When you receive new messages, icons display in two locations: on the phone's screen, View Tab, and in the icon bar at the top of the screen.



Icons

*

ത

This list identifies the symbols you'll see on your phone's display screen:

ال٣	Shows the received signal strength. The greater the number of bars, the stronger the signal.

Shows the level of your battery. The more bars you see, the more power remains.

Shows the level of your battery. The more bars you see, the more power remains.

Displays when a call is in progress.

Displays when the phone is not receiving a signal.

Displays when the phone is in Airplane mode.

Displays when Bluetooth wireless technology is active.

Displays when Vibration Mode is active.

Displays when you missed a call.

Displays when a new text message is received.

Displays when a new voice mail is received.

Displays when a new picture message is received.

Displays when a new Audio postcard is received.

Displays when you set an alarm to ring at a specified time.

For more details, see "Alarm" on page 110.

Displays when the Call Forwarding feature is active. For more details, see "Call forwarding" on page 101.



Displays when Incoming call is set to Vibration.



Displays when Incoming call is set to Melody and Vibration.



Displays when Incoming call is set to Vibration then Melody.



Displays when Incoming call is set to Melody then Vibration.

Backlight

A backlight illuminates the internal display and the keypad. When you press any key, the backlight comes on. It goes off when no keys are pressed within a given period of time, depending on the setting within the **Backlight** menu. The display turns off after one minute to conserve battery power.

The **Duration** setting is how long the keypad backlight is on. The **Dim** option is how much longer after the keypad backlight goes off that the display remains lit.

To specify the length of time the backlight is active, access the Backlight menu:

- 1. In Idle mode, press Menu → Settings and press the Select soft key or OK
- 2. Select Personalize → Display settings → Backlight and press the Select soft key or OK.
- Highlight Duration and press OK. Select the duration from the On field, choose between 10 sec, 15 sec, 30 sec. 1 min. 3 min. or 10 min.
- Press the Down key to set the Dim option. Select the time the Dimming mode is on. Choose between Off, 5 sec, 15 sec, 30 sec, 1min, or 3 min.
- 5. Press the **Save** soft key to retain your settings.

Brightness

You can adjust the display brightness to see it better in different lighting conditions.

- 1. Press the Left or Right Navigation keys to change your settings.
- 2. Press Save to save your changes, or Cancel to cancel.

Display

Your phone has a display on the front of the phone. The display indicates when you receive an incoming call or message and also displays any alarms for the specified time. The backlight turns on and the corresponding icon displays on the screen.

The display shows the current time on a digital clock.

Section 3: Call Functions

This section describes how to make or answer a call. It also explains the features and functionality associated with making or answering a call. For more information on Ringtones see "Ring tone" on page 85. For more information on Call Forwarding see "Call forwarding" on page 101.

Making a Call

When the idle screen displays, enter the number you wish to dial and press the key.

Note: When you activate the Call settings option in the Auto redial menu, the phone automatically redials up to 10 times when the person does not answer the call or is already on the phone, provided your call is not sent to voice mail. For more information, refer to "Auto redial" on page 101.

Making an International Call

- 1. From Idle mode, press and hold the space key. The + character displays.
- 2. Enter the country code, area code, and phone number.
- 3. Press the key to make the call.

Correcting the Number

- 1. To clear the last digit displayed, press the (5) key.
- To clear any other digit in the number, press the Left or Right Navigation key until the cursor is immediately to the right of the digit to clear and then press the key. You can also enter a missing digit.
- 3. To clear the entire display, press and hold the 🕥 key.

Ending a Call

Briefly press the key when you want to end your call.

Redialing the Last Number

The phone stores the numbers of the calls you've dialed, received, or missed if the caller is identified.

To recall any of these numbers:

1. If you typed characters on the display, press the key to return to Idle mode.

- Press the Up Navigation key to display a list of the most recent numbers used in the order you dialed or received them.
- 3. Use the Up and Down Navigation keys to scroll through the numbers and highlight the number you want.
- 4. To view call time for this number press View ok.

Before you dial the number, you may also press the **Options** soft key to display the following options:

- Call back: Places a call back to the number.
- **Send message**: Allows you to send a Message, or Audio Postcard to the number.
- Save to contacts: Stores the number to the Contacts list.
- Delete: Allows you to delete the selected number or All call history.
- Add to Block list: Adds the selected number to the blocked calls list.
- View contact details: Displays details of the missed call including name, number, dates and times of the calls (this option only
 displays if the number is stored in the Contacts).
- 5. Press Call ok to dial the number.

Making a Call from Contacts

You can store regularly used phone numbers into the phone's memory (Contacts).

Once you store a number in Contacts, you can press only a few key to dial the stored number. By using the Speed Dial feature you can also assign your most frequently-used numbers to number keys.

For further details about the Contacts feature, see "People" on page 40.

Adjusting the Call Volume

During a call, use the Volume keys on the left side of the phone, to adjust the speaker volume.

Press the Up volume key to increase the volume level and the Down volume key to decrease the level. In Idle mode, you can also adjust the ring volume using these keys.

Important!: For safety information related to Call Volume, see "Responsible Listening" on page 132.

Answering a Call

When somebody calls you, the phone rings and displays the incoming call image.

The caller's phone number, or name if stored in Contacts, displays.

1. Press the key or the **Accept** soft key to answer the incoming call.

If the **Any key** answer option in the **Answer options** menu is activated, you can press any key to answer a call except for the **Reject** soft key.

Note: To reject an incoming call, press the Reject soft key or



2. Press the key to end the call.

Note: You can answer a call while using the Contacts or menu features. After ending the call, the phone returns to the function screen you were previously using.

Call History

All answered, dialed and missed calls are listed in the Call History.

1. In Idle mode, press Menu → Call history and press the Select soft key or the ok key to enter the menu.

Note: While in Idle mode, press the Up Navigation key to access All calls, Missed calls, Dialed calls, or the Answered calls call history.

The following Call Record options are available:

All calls

This menu lets you view the 90 most recent calls you received, dialed, and missed.

The name or number, if already stored in your Contacts, displays with the number of occurrences for each number.

Note: At any time while you are in Call History, you may use the Left or Right Navigation keys to scroll between All calls, Missed calls, Dialed calls, or the Answered calls call history.

Missed calls

This menu lets you view the 30 most recent calls you received, but did not answer. The name and number, if already stored in your Contacts, displays with the number of occurrences for each number.

Viewing Missed Calls

When you are unable to answer a call for any reason, you can find out who is calling you, if this service is available, so that you can call the person back.

The number of calls you missed displays on the idle screen on the Missed Call tab, immediately after a call is missed.

To view a missed call immediately:

- If the display is off, press the volume key to turn on the display.
 The Missed Call tab displays the last missed call.
 - or -
- Press the Up Navigation key to view the Call history, then press the Right Navigation key to view the Missed calls.

The number corresponding to the most recently missed call displays, if available.

- 3. To scroll through the missed calls, press the **Up** or **Down** Navigation key.
- **4.** Press **—** to call the displayed number.
 - or —

Press View OK to display call details.

- 5. Press the **Options** soft key for the following options:
 - Call back: Places a call back to the number.
 - **Send message**: Allows you to send a message, or Audio Postcard back to the missed number.
 - Save to contacts: Allows you to save the number to your Contacts list as a New or Existing contact.
 - **Delete**: Allows you to delete the selected number or delete all call history.
 - Add to Block list: Adds the selected number to the blocked calls list.
 - View contact details: Displays details of the missed call including name, number, dates and times of the calls (this option only
 displays if the number is stored in the Contacts).



Note: You can press the key at any time to exit the Missed Call feature.

Answered calls

This menu lets you view the 30 most recent calls you received.

The name and number, if already stored in your Contacts, is then displayed with the number of occurrences for each number.

Dialed calls

This menu allows you to view the 30 most recent calls you dialed. The name and number, if already stored in your Contacts, displays with the number of occurrences for each number.

Delete all

This menu allows you to delete all of the records in each call record separately, or you can delete all of your call history at one time.

1. Highlight the type of calls you want to delete and press the ok key to make a check mark.

Note: Selecting the All calls check box automatically selects all the entries in the Delete all menu.

- Press the **Delete** soft key to delete the calls.
- When a confirmation message displays, press the **Yes** soft key or **OK** key to confirm.

Vibration Mode

Vibration Mode is convenient when you wish to stop the phone from making any noise, (in a theater for example).

In Idle mode, press and hold the easy key until the "Vibration mode on" message and the Vibration Mode icon (| display. In Vibration Mode, instead of sounds, your phone vibrates.

To exit and reactivate the previous sound settings, press and hold the Fig. key again until the "Vibration mode off" message displays. The Vibration Mode icon () no longer displays.

Selecting Functions and Options

Your phone offers a set of customizable functions. These functions are arranged in menus and sub-menus, and accessed using the two soft keys. Each menu and sub-menu allows you to view and alter the settings of a particular function.

Soft Keys

The roles of the soft keys vary depending on the function you are currently using. The labels on the bottom line of the display just above each key indicate their current role.



Selecting Options

To view the various functions and options available, you must select the one you want by:

- Pressing the appropriate soft key.
- 2. Selecting the displayed function or the highlighted option, press the **Select** soft key or the **OK** key.
- 3. Viewing the next function or highlighting the next option on a list, by pressing the Down Navigation key.
- 4. Moving back to the previous function or option on a list, by pressing the **Up** key.
- 5. Moving back up one level in the menu structure, by pressing the Back soft key.
- **6.** Pressing the key to exit the menu structure without changing the settings.

In some functions, you are asked for a password or PIN. Enter the correct code and press the **OK** soft key or the **OK** key.

When you access a list of options, your phone highlights the currently active option. If, however, there are only two options, such as **On/Off** or **Enable/Disable**, your phone highlights the option that is not currently active, so that you can select it.

Options During a Call

Your phone provides a number of control functions that are available for use during a call.

Switching off the Microphone (Mute)

You can temporarily switch your phone's microphone off, so that the other person cannot hear you.

Example: You wish to say something to a person in the room but do not want the person on the phone to hear you.

To switch the microphone off temporarily:

Press the Mute ork key. The other person can no longer hear you. The Mute icon () displays at the bottom left of the screen.

To switch the microphone back on:

▶ Press the **Unmute OK** key. The other person can hear you again.

Putting a Call on Hold

You can place the current call on hold whenever you want. If your network supports this service, you can also make another call while a call is in progress.

To place a call on hold:

- 1. Press the **Options** soft key, highlight the **Hold** option, then press the **Select** soft key or the **OK** key.
- 2. Press the Resume soft key to reactivate the call.

To make a new call while a call is in progress:

- 1. Enter the new phone number that you wish to dial or look it up in Contacts.
- 2. Press the key to dial the second call.

The first call is then automatically put on hold.

- or -
- Press the Options soft key, select Hold, and press the ow key. This places the currently active call on hold and allows to make a new call.
- 4. Make the second call in the normal way.

When there is an active call and a call on hold, you may switch between the two calls by placing the current held call to active and then placing the other call on hold.

To switch between the two calls:

- Press the Options soft key, select Swap, and press the ok key. The current active call is placed on hold and the call on hold is then reactivated so that you can continue conversing with that person.
- 2. Press the key when you are finished or want to end the call.

Using the Speakerphone

While on a call, you can use your Speakerphone by following these steps:

- 1. Press the Spkr on soft key.
- 2. To turn the Speakerphone off, press the Spkr off soft key.

Important!: For safety information related to speakerphone use, see "Responsible Listening" on page 132.

Muting or Sending Key Tones

These options allow you to turn the key tones off or on. If the **Keypad tone** option is Off, your phone does not transmit the DTMF (Dual Tone Multi-Frequency) tones of the keys, which then allows you to press keys without hearing annoying key tones during a call.

Note: To communicate with answering machines or computerized telephone systems, the Send DTMF option must be selected.

Searching for a Number in Contacts

You can search for a number in Contacts during a call.

- Press the Options soft key.
- Press the **Down** Navigation key to highlight **Contacts** and press the **Select** soft key or the ok key.

With the Contacts entries displayed:

- Enter the name that you wish to find in the textbox located above the entries. If you enter the first few letters of the name, the Contacts entries display, starting with the first entry that matches your input.
 - Or, use the **Up** or **Down** Navigation key to highlight the contact that you desire.

4. To view the highlighted entry, press **View** or. The Contact information displays.

Tip: For further details about the Contacts feature, see "Finding a Contact Entry" on page 41.

Call Waiting

The **Call waiting** option must be set to **Activate** before you can answer an incoming call while another call is in progress. For more information, refer to "Call waiting" on page 103.

You are then notified of an incoming call with a call waiting tone.

To answer a new call while another call is in progress:

- Press either the Accept soft key or the key to answer the incoming call. The first call is automatically put on hold.
- To switch between the two calls, press the Options soft key, highlight Swap and press the Select soft key or the ok
- To end a call on hold, press the Options soft key and select the End held call option. Then press the Select soft key or the ok key.
- 4. To end the current/remaining call, press the key.

Making a Multi-Party Call

A multi-party call is a network service that allows up to six people to take part simultaneously in a multi-party or conference call.

For further details about subscribing to this service, contact T-Mobile customer service.

Setting up a Multi-Party Call

- 1. Call the first participant in the normal way.
- 2. Press the Options soft key and select the New call option.
- 3. Call the second participant in the normal way. The first call is automatically placed on hold.
- To join the first participant to this multi-party call, press the Options soft key and select Join. Press the Select soft key or the ok key.

Note: These first two calls are then grouped together on screen and displayed with an adjacent number corresponding to the order in which the calls were made.

Note: There are a maximum of two callers that can be joined to a single multi-party line. You cannot create two multi-party calls.

Having a Private Conversation With One Participant

When there are two participants in a multi-party session, it might be necessary to place one of those participants on hold so that a private conversation can be held with a single caller. While you are in a multi-party call:

- Press the Options soft key and choose the Split option. Press the Select soft key or the key.
 The short list of call participants then displays with the first caller selected.
- Press the Up or Down Navigation key to highlight the person with which you want to talk privately, and press the Select soft key or the ok key.

Note: You can now talk privately to that person while the other participant is on hold.

To return to the multi-party call, press the Options soft key and select Join. Press the Select soft key or the
 key. The other participant can now hear your conversation.

Dropping One Participant

- Press the Options soft key and choose the Split option. Press the Select soft key or the ok key. The short list of call participants displays.
- 2. Highlight the person you want to keep and press the **Select** soft key or the **OK** key.
- Press the Options soft key and highlight Remove. Press the Select soft key or the ok key. The remaining participant on hold is highlighted.
- Press the Select soft key or the ork key to drop the selected participant. This option allows you to continue talking to the other participants.
- 5. When you want to end the multi-party call, press the key.

Section 4: Menu Navigation

This section explains the menu navigation for your phone. It also includes an outline of all the available menus associated with your phone.

Menu Navigation

You can tailor the phone's range of functions to your needs using menus and sub-menus. Menus and sub-menus can be accessed by scrolling using the Navigation keys.

Accessing a Menu Function by Scrolling

- 1. In Idle mode, press Menu.
- Scroll using the Navigation keys to reach a main menu (for example: Settings). Press the Select soft key or the ok key to enter the menu.
- If the menu contains sub-menus, (for example, Security), after highlighting the sub menu, press the Select soft key or the or key to access it.

If the menu you selected contains further options, repeat this step.

- 4. To scroll through the menus, press the **Up** or **Down** Navigation keys.
- 5. To confirm the chosen setting, press the **Select** soft key, or the **OK** key.
- 6. To return to the previous menu level, press the **Back** soft key, or the **Example 1** key.
- 7. To exit the menu without changing the settings, press the key.

Menu design

Your handset has two Idle display modes: Circle view (default) and Grid view. The default for the handset is Circle view, meaning that the menu icons display one at a time. When in the Circle view, you press either the left or right navigation key to view the previous or next menu item. If your phone settings are set to Grid view, all the menu icons display at one time.

Navigation on the handset varies, depending on the setting you select (Circle view or Grid view). For example: In Circle view, to navigate to web2go:

1. From Idle mode, press Menu \rightarrow Media \rightarrow web2go and press the Select soft key, or the \bigcirc key.

In Grid view, to navigation to web2go:

1. From Idle mode, press Menu \rightarrow web2go and press the Select soft key, or the \bigcirc key.

Note: This user manual describes all the procedures using the default, Circle view.

Section 5: Entering Text

This section outlines how to select the desired text input mode when entering characters into your phone. This section also describes how to use the T9 predictive text system to reduce the number of key strokes associated with entering text.

Changing the Text Input Mode

When using your phone, you often need to enter text, such as when storing a name in your Contacts, creating your personal greeting or scheduling events on your calendar. You can enter alphanumeric characters by using your phone's keypad.

Your phone has the following text input modes:

- **19 mode**: this mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter; for example, you press to enter J, or K. However, the T9 mode automatically compares the series of keystrokes you make with an internal linguistic dictionary to determine the most likely word, thus requiring fewer keystrokes than the traditional ABC mode.
- Alpha: this mode allows you to enter letters by pressing the key labeled with the corresponding letter.
- Number: this mode allows you to enter numbers.
- Symbol: this mode allows you to enter symbols, such as punctuation marks.

Note: When you are in a field where you can enter characters, the text input mode indicator displays at the bottom right of the screen.

Example: Writing a text message.



1. Press the **Right** soft key () to change the text input mode.

The following options are available:

- T9 (English)
- Alpha
- Number
- Symbol
- Enter text in the text message box using the selected text input mode when the Text input mode indicator that you desire displays.

Using T9 Mode

T9 is a predictive text input mode that allows you to key in any character using single keystrokes. This text input mode is based on a built-in dictionary.

To enter a word in T9 mode:

 When you are in T9 mode, press any one of the letter keys to enter a word. Press each key only once for each letter. **Example:** To enter "Hello" in T9 mode, press the , , , , , and , and keys.

The word that you type displays on the screen. The word may change with each consecutive key that you press.

- 2. Enter the whole word before editing or deleting the keystrokes.
- 3. Press the key to insert a space and begin entering the next word.

To enter periods, hyphens, apostrophes, and other special characters press the key or press the key, then press the associated symbol.

To shift case in T9 mode:

Press the key.

There are 3 cases: Capital lock, Initial capital, and Lower case.

Tip: You can move the cursor by using the Navigation keys.

To delete characters:

Press the key. Press and hold the key to clear the display.

Using Alpha

To use Alpha mode, use the letter keys to enter your text.

- 1. Press the key labeled with the letter you want:
 - Once for the first letter, twice for the second letter, and so on.
- 2. Select the other letters in the same way.
 - To enter periods, hyphens, apostrophes, and other special characters, press and hold the
 key, then press the key that contains the associated symbol.
 - To shift case in ABC mode, press the 🔝 key. There are 3 cases: Capital lock, Initial capital, and Lower case.

Note: You can move the cursor by using the Navigation keys.

To delete letters:

Press . Press and hold to clear the display.

Note: The cursor moves to the right when you press a different key. When entering the same letter twice or a different letter on the same key, just wait for a few seconds for the cursor to automatically move to the right, and then select the next letter.

Keys

By default, the first letter of an entry is capitalized and all consecutive letters are kept in lowercase (unless the set is used). After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.

Characters scroll in the following order (lowercase characters shown in parentheses):

QW	QW! (qw!)	JK	JK6 (jk6)
1 oo ER	ER1 (er1)		L. (l.)
TY	TY2 (ty2)	SYN Z X	ZX (zx) Press and hold to display the Symbol table.
3	UI3 (ui3)	Z EV	CV7 (cv7)
OP OP	OP. (op.)	BN	BN8 (bn8)
? A5	AS? (as?)	e M	M9 (m9)
4 DF	DF4 (df4)	SPACE	Inserts zero when held
5 GH	GH5 (gh5)	- @ ♠ aH	Press to toggle input modes. Press and hold to display the # sign.
ALT	Press to select alternate characters.	DEL	Press to delete characters.

	Lock	Inserts the asterisk symbol in text creation mode. Press and hold to Lock/ Unlock the phone.	ENTER	Inserts a line return in text creation mode.
--	------	--	-------	--

Using Number Mode

The Number mode enables you to enter numbers into a text message.

Press the keys corresponding to the digits you want to enter.

Using Symbol Mode

Symbol mode enables you to insert symbols and punctuation marks into text. To display a list of symbols press the key until the symbols display on the screen, or press the **Right** for the symbol select **Symbol**.

- 1. To select a symbol, press the corresponding number key.
- 2. To display more symbols, press the Navigation keys.
- To clear the symbol(s), press the key. When the input field is empty, this key returns the display to the previous mode.
- 4. To insert the symbol(s) into your message, press the **OK** soft key or the **OK** key.

Section 6: People

This section explains how to use and manage your Contacts.

Using Contacts List

Use the following procedures to store a new contact to your Phone.

Storing a Number in the Phone's Memory

The default storage location for saving phone numbers to your contacts is your phone's built-in memory. As soon as the SIM card is inserted into the handset, the phone synchronizes the Contacts (using the Mobile backup feature) to the T-Mobile network. Additional, new contact information stores directly to the phone's memory and synchronizes with T-Mobile's network during predetermined, timed intervals.

- In Idle mode, press Menu → People → Add new contact and press the Select soft key or the |ok| key.
- Enter a first name in the **First Name** text box. Press the **Down** key to tab to the next text box.

For further details about how to enter characters, see "Using Alpha" on page 37.

- Enter a last name in the Last Name text box.
- Highlight a number type by pressing the **Up** or **Down** Navigation key, then enter a number in the text box. The following types are available:
 - Mobile: assigns the number to the Mobile entry.
 - Home: assigns the number entered to the Home entry.
 - Office: assigns the number entered to the Office entry.
 - Picture ID: allows you to add a Picture ID assigned to the contact.
 - Ringtone: allows you to assign a Ringtone by choosing from one of the following locations: Default melodies. Voice list. Sounds, or Music.
 - E-mail: allows you to enter the e-mail address for the contact.
 - Fax: assigns the number entered to the Fax entry.
 - Other: allows you to enter an additional phone number for this entry.
 - **Group**: allows you to assign this contact to a group.

- **Notes**: allows you to enter additional information about the contact. Up to 50 characters are allowed.
- Press or to save you selections. The number saves to your selected destination and the new contact information displays.
- **6.** Press the key to return to Idle mode.

Finding a Contact Entry

You can store phone numbers and their corresponding names in the phone's built-in memory (Contacts).

1. In Idle mode, press Menu → People → Contacts and press the Select soft key or the ok key.



Note: A Phone icon displays to the left of the entry.

Enter the first few letters of the name in the text box.

The Contacts entries are listed, starting with the first entry matching your input.

- If needed, press the **Up** or **Down** Navigation key until the entry you want highlights.
- Once you locate the entry, press the key to dial the number, or press the **Options** soft key to access the following entry options:
 - Edit: allows you to edit the Name and number for the selected contact.
 - Send message: allows you to send a message to the selected number. You may choose between message, or Audio postcard.
 - New contact: takes you to the Add new contact menu.
 - Call: places the call to the selected phone number.
 - Assign speed dial: allows you to assign a speed dial key number to the selected Contacts entry.
 - Send name card via: allows you to send your name card via Message. E-mail, or to a Bluetooth enabled device.
 - Delete: allows you to delete the selected or multiple names and numbers from your Contacts or delete all numbers. You are asked to confirm your name and number deletion by pressing the **Yes** soft key. To cancel, press the **No** soft key.
 - Add to Block list: adds the selected contact to block (call) list.
 - Copy to phone/SIM card: copies the selected or all of the contacts to the phone or SIM card. Depends on where the contact was previously saved.
 - Mobile backup: allows you to view the Last sync you performed, or view the About mobile backup information.

- Select language: allows you to select between English, Français, and Español.
- 5. Press View to view contact information and select one of the following options:
 - Edit: allows you to edit the name and number fields in the entry. You can also add an e-mail address and notes.
 - Send message: allows you to send a message to the selected number. You may choose between Message or Audio postcard.
 - Assign speed dial: allows you to assign a speed dial key number to the selected Contacts entry.
 - Send name card via: allows you to send your name card via Message, E-mail, or to a Bluetooth enabled device.
 - Delete: allows you to delete the selected name and number from your Contacts. You are then asked to confirm the name and number deletion by pressing the Yes soft key. Press the No soft key to cancel the deletion.
 - Copy to phone/SIM card: copies the selected or all of the contacts to the phone or SIM card. Depends on where the contact
 was previously saved.
 - Add to Block list: adds the selected contact to block (call) list.
 - Print via Bluetooth: sends the contents of the selected contact to a Bluetooth enabled printer.
- 6. Press Call ok to dial the selected number. There are three View tabs that display icons

Dialing a Number from People

Once you store phone numbers in the People, you can dial them easily and quickly by using the location numbers assigned to them and listed in the Contacts.

Note: If you cannot remember a location number, you must go into the **Contacts** menu in the **People** menu to search for the entry by name. For more information, refer to "Finding a Contact Entry" on page 41.

Adding a New Caller Group

- 1. In Idle mode, press Menu → People → Groups and press the Select soft key or the ok key.
- 2. Press the **Options** soft key and select the **Create new group** option.
- 3. Enter a name for the new group in the Name field.
- 4. Highlight the Picture ID field and press the ok key to create a Picture ID for this new caller group. Select from one of the following options:
 - Take picture: allows you to take a picture to use as a Caller ID photo.

- Photos: displays a list of photos from which to select as a Caller ID.
- **Downloaded images**: displays a list of downloaded images from which to select as a Caller ID.
- Icons: displays a list of predefined Caller ID icons. Press the Right and Left Navigation key to display pages of icons from which
 to choose.
- 5. Highlight the Ringtone field and press the ok key to create a ringtone for this new caller group. Select from one of the following options:
 - **Default melodies**: displays a list of default melodies from which to select as a ringtone.
 - Voice list: displays a list of voice messages from which to select as a ringtone.
 - Sounds: displays a list of sounds from which to select as a ringtone.
 - Music: displays a list of music from which to select as a ringtone.
- Press the Save soft key when you are finished.
- 7. Press the key to return to Idle mode.

Editing a Caller Group

- In Idle mode, press Menu → People → Groups and press the Select soft key or the |OK| key.
- 2. Scroll through the group list, highlight the group you want, and press the **Options** soft key.
- 3. Highlight Edit and press the Select soft key or the ok key.
- 4. To edit the Caller group name, modify the text in the **Name** text box.
- To change the image associated with the Caller group, press the **Down** navigation key to highlight the **Picture**ID icon. Press the **OK** key.

The following options are available:

- Take Picture: allows you to take a picture with your camera.
- Photos: allows you to choose a photo from Photos folder.
- **Downloaded images**: allows you to choose a photo from your Downloaded images folder.
- Icons: allows you to choose from pre-defined icons.
- To change the ringtone associated with the Caller group, press the **Down** key to highlight the **Ringtone** icon. Press the **OK** key.

The following options are available:

- Default melodies: allows you to choose between 14 different melodies.
- Voice list: allows you to assign a voice clip to this group.
- Sounds: allows you to choose a sound from your Sounds folder.
- Music: allows you to choose music from Music folder.
- Press the Save soft key when you are finished. Your Caller group settings save.
- 8. Press the key to return to Idle mode.

Speed Dialing

Once you store phone numbers from your Contacts list, you can set up to 8 speed dial entries and then easily dial them whenever you want, by pressing the associated numeric key.

▶ In Idle mode, to speed dial the numbers assigned to keys (2 to 9), press and hold the appropriate key.

Setting Up Speed Dial Entries

- 1. In Idle mode, press Menu → People → Speed dial and press the Select soft key or the ok key.
- 2. Use the Up or Down Navigation key to select the keypad number key to where you wish to assign the new speed-dialing number and press the Add soft key or the OK key.
 - Select from the 2 to 9 keys, and press the Add soft key.
- 3. Highlight a contact entry number from the list and press the **Select** soft key or the **OK** key.
- You receive a Saved confirmation and the Speed dial menu displays the number assigned to the number key you selected.
- 5. Press the key to return to Idle mode.

Note: Memory location 1 is reserved for your Voice mail server number and this speed dial location can not be changed.

Block list

The **Block list** menu allows you to add or remove contacts from the blocked list of callers.

Creating a Block list

- 1. In Idle mode, press Menu → People → Block list and press the Select soft key or the OK key.
- 2. Highlight [Add to Block list] and press the **OK** soft key.
- Select one of the following options:
 - Number: allows you to block the number you enter.
 - Contacts: allows you to select contacts from the Contacts to block.
 - Recent contacts: allows you to select a recent contact from the Recent contacts list to block.
 - Unknown numbers: adds all unrecognized numbers (numbers not in the Contacts or on the FDN list) to the block list.
 - FDN contacts: allows you to identify FDN contacts to block.

The selected contact(s) display and are added to the Block list.

Removing contacts from the Block list

- 1. In Idle mode, press Menu → People → Block list and press the Select soft key or the ok key.
- 2. Highlight the number to remove and press Remove OK).
- At the Remove from block list? prompt, press Yes to delete the selected contact, or press No to cancel.
 The selected contact(s) are removed from the Block list.

Management

To access the Management menu:

▶ In Idle mode, press Menu → People → Management and press the Select soft key or the ok key.

View Contacts

This option allows you to view all the contacts stored on the SIM, Phone, or the Phone and SIM card.

Default saving

The **Default saving** option allows you to choose where your contacts are saved. The following options are available:

- **Phone**: new contacts are saved to your phone. Your phone comes with the default set to Phone.
- SIM card: new contacts are saved to your SIM card.
- Ask on saving: you are prompted to choose between Phone or SIM Card whenever you save a new contact.

Copying all Contacts Entries

You can copy all Contacts entries to the SIM card.

Note: When storing an Address Book entry on the SIM card, only the Name, Address, and slot location are saved.

- Highlight Phone or SIM card and press the Select soft key or the ok key.By default, all the entries in Contacts on the Phone or SIM card are selected.
- If there are any contacts in the list that you do not want to copy to the Phone or SIM card, press the ok key to remove the check mark displayed next to the contact, otherwise, by default, all the entries copy.
- Press Copy to copy the selected contacts to the Phone or SIM card.

Sort by contacts

The **Sort by contacts** menu option allows you to set the sort function to alphabetize the contacts by **First name** or **Last name**.

Delete all

Important!: Once contact entries are deleted, they cannot be recovered.

This option allows you to delete all your contacts from the Contacts.

Deleting all of the Contact Entries

Perform the following procedure to delete all your entries from your phone's memory.

Important!: Once contact entries are deleted, they cannot be recovered.

- In Idle mode, press Menu → People → Management → Delete all and press the Select soft key or the ok key.
- 2. When the Delete? confirmation message displays, press the Yes soft key to delete or press No to cancel.
- 3. Press the **Back** soft key or the key to return to Idle mode.

Memory status

You can check how many names and numbers are stored in the Contacts, within the Phone, SIM and FDN. You can also see the current storage capacity of the memory.

- In Idle mode, press Menu → People → Management → Memory status and press the Select soft key or the
 OK
 key.
- 2. Press the **Back** soft key or the key to return to Idle mode.

My number

This function is a memory aid, which you can use to edit or remove your own phone number. You can also edit the default name assigned to your phone number.

- 1. In Idle mode, press Menu → People → My number and press the Select soft key or the ok key.
- 2. Press the **OK** key. The cursor displays in the **Name** field.
- 3. Press the **Down** Navigation, press the **S** key to erase the current entry, and type in a new number if desired.
- 4. Press the **Save** soft key when finished.

FDN List

FDN (Fixed Dial Number) mode, if supported by your SIM card, allows you to restrict your dialed calls to a limited set of phone numbers.

The FDN List allows you to set up a list of numbers that your phone may dial.

FDN mode must first be enabled in the Security settings. For more information on changing this setting, see "Set FDN mode" on page 94.

To enable FDN mode, a PIN2 number is required. You can obtain your PIN2 from

T-Mobile customer service.

- In Idle mode, press Menu → People → FDN list and press the Select soft key or the ok key.
- 2. Press Options → New FDN contact and press the Select soft key or the ok key.
- 3. Enter the PIN2 code (obtained from T-Mobile's customer service center) and press the OK soft key.

Section 7: Messaging

This section describes how to send or receive different types of messages. It also explains the features and functionality associated with messaging.

Types of Messages

Your phone provides the following message types:

- · E-mail Messages
- Text Messages
- · Picture Messages
- Audio Postcard
- · Instant Messaging
- Voice Mail

Display Icons for Messages


When your handset receives new messages, icons display on the screen in two locations: on the View Tab that displays on the lower portion of the screen, and on the top of the screen (see "Display Layout" on page 18.)

Message Icons on the Icon Line

The icon displayed at the top of the screen indicates that a new text message or email message was received. The icon indicates a new picture message was received. The icon indicates a new voice mail message was received.

View Tab

The View Tab is an area that displays on the screen when a missed call, message, or voicemail is sent to the phone.

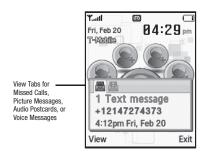

There are three View tabs that display icons:

- 1. Text message
- 2. Missed Calls
- 3. Voicemail
- 4. Picture message
- 5. Audio Postcard

You can search through missed calls or unviewed messages by using the **Right** and **Left** navigation keys to select the associated message tab, then pressing the **Play, Connect, Call,** or **View** soft key.

Text Messages

Short Message Service (SMS) allows you to send and receive short text messages to and from other mobile phones. In addition, your phone supports the Enhanced Messaging Service (EMS), which enables you to include simple graphics, melodies, and animated images in your messages. To use this feature, you must subscribe to T-Mobile's message service.

The Message icon (() displays when you receive a new text message. When the memory is full, the message icon flashes on your phone and you cannot receive any new messages. You must delete a message before you can receive additional messages.

Create message

In this menu, you can write and send a text message.

Creating a Simple Text Message

- 1. In Idle mode, press Menu → Messaging → Create message and press the Select soft key or the OK
- 2. Highlight the To field and press Add OK. Select one of the following:
 - **Recent recipients**: allows you to select from recipients of your previous messages.
 - Contacts: allows you to enter the phone number you want from Contacts.
 - **Group**: allows you to select a group.

The selected number displays in the To field.

- or -

Press the Options soft key and select one of the following:

- Add recipients: allows you to add Recent recipients, Contacts, or a Group.
- Add Cc/Bcc: allows you to Cc or Bcc a recipient or recipients.
- More: allows you to add a subject, an attachment, change to a picture message, configure sending options, or select a language.
- Exit composer: exits the composer and displays the Create new screen.

Note: Your recipient must reside in Contacts before you can add the recipient to this message.

3. Press the **Down** Navigation key and create your message.

Note: For further details about entering characters, see "Changing the Text Input Mode" on page 35.

You can enter up to 160 standard Alphabet characters per page in your message. The message can be up to 12 pages long for a total of 1920 characters.

4. Press the **Options** soft key when you finish entering your message. The following options are available:

- Send: allows you to send this message to the recipient entered.
- Insert: allows you to insert a Text template, Contact, or Bookmark. The Text templates allow you to apply one of the preset
 message templates to the text. Select one of the 10 items stored in the Text messages Template menu. Contact allows you to
 add names and phone numbers to your message. Bookmarks allows you to add Internet addresses to your message.
- More: allows you to add a page, subject, attachment, edit style, change the type of message to a picture message, access sending options, or select a language for this message.
- Save to: save the message to your Drafts or Templates folder.
- Copy & Paste: turns on the Text selection tool.
- Exit composer: exits the composer and displays the Create new screen.
- 5. Press **Send** to send this message.

Picture Messages

This menu allows you to use the Multimedia Message Service (MMS).

Picture Messaging is a messaging service that provides delivery of personal picture messages from phone to phone or from phone to e-mail.

In addition to the familiar text content available via traditional text messages, picture messages can contain images, graphics, voice, and audio clips.

A Picture Messaging message is a multimedia presentation contained in a single file. It is not a text file with attachments.

You must first retrieve a picture message from T-Mobile's voice mail server before you can view the message. The displays in your Inbox list to indicate any not yet retrieved Picture messages. The Message icon (Highland) displays once you successfully retrieve a new picture message from the voice mail server.

Using the Picture Messaging feature, your phone can receive and send messages that contain multimedia files, such as photos, sounds and images that you downloaded from the Internet and Audio Postcards you recorded. This function is available only if it is supported by your service provider. Only phones that offer picture messaging features can receive and display picture messages.

Create new

This menu allows you to create a new picture message and then send it to one or more destinations.

Creating and Sending a Picture Message

1. In Idle mode, press Menu → Messaging → Create message and press the Select soft key or the ok key.

- Highlight the **To** field and press **Add OK**. Select one of the following:
 - Recent recipients: allows you to select from recipients of your previous messages.
 - **Contacts**: allows you to enter the phone number you want from Contacts.
 - Group: allows you to select a group.
 - or —

Press the **Options** soft key and select one of the following:

- Add recipients: allows you to add Recent recipients. Contacts, or a Group.
- Add Cc/Bcc: allows you to Cc or Bcc a recipient or recipients.
- More: allows you to add a subject, an attachment, change to a picture message, configure sending options, or select a language.
- Exit composer: exits the composer and displays the Create new screen.

Note: Your recipient must reside in Contacts before you can add the recipient to this message.

Press the **Down** Navigation key and create your message.

Note: For further details about entering characters, see "Changing the Text Input Mode" on page 35. You can enter up to 1000 standard Alphabet characters per page in your message. The message can be up to 10 pages long for a total of 10000 characters.

Press Options → More → Change to picture message to picture message and press OK



— or —

Select one of the following options:

- Preview: allows you to view the message prior to sending.
- Insert: allows you to insert a Text template, Contact, or Bookmark. The Text templates allow you to apply one of the preset message templates to the text. Select one of the 10 items stored in the Text messages **Template** menu. Contact allows you to add names and phone numbers to your message. Bookmarks allows you to add Internet addresses to your message.
- More: allows you to add a page, subject, attachment, edit style, change the type of message to a picture message, access sending options, or select a language for this message.
- Save to: save the message to your Drafts or Templates folder.

- Copy & Paste: turns on the Text selection tool.
- Exit composer: exits the composer and displays the Create new screen.
- 5. Press the **Down** Navigation key to highlight one of the following:
 - Record sound: allows you to record and attach a sound.
 - Add sound
 - Voice list: allows you to select and add a file from the Voice list.
 - **Downloaded sounds**: allows you to select and add a sound from the Downloaded sounds folder.
 - Memory card: allows you to select a nd add a sound from the memory card.
 - · Add picture
 - Photos: allows you to select a photo from the Photos folder.
 - **Download images**: allows you to attach an image stored in the Downloaded images folder.
 - myFaves icons: (displays if you subscribe to this service). Allows you to select and add a myFaves icon.
 - Memory card: allows you to attach an image stored on the memory card.
 - Camera: allows you to take a picture with the camera.
 - · Add video
 - Get from files: allows you to attach a video file from the Videos or Downloaded videos folder.
 - Record video: allows you to record and attach a video.
- 6. Press OK.
- 7. Press Options and select one of the following:
 - Send: allows you to send this message to the recipient entered.
 - More: allows you to add a subject, attachment, change the type of message to a text message, changed the sending options, or select a language.
 - Save to: save the message to your Drafts or Templates folder.
 - Exit composer: exits the composer and displays the Create new screen.
- Press Send to send this message.

Inbox

The Inbox stores received messages. You can tell what kind of message was received by the icon displayed. If the icon envelope is open then the message was read, otherwise a closed envelope displays.

The following types of messages may display in your inbox:

- Text messages
- 2. Picture messages
- 3. Audio Postcard

When you enter the Inbox, the list of messages displays with the sender's phone numbers, or names, if available in your Contacts. After you read the message, the open envelope icon displays.

Tip: Press the Left or Right Navigation keys to scroll between Inbox, Sentbox, and Drafts.

▶ In Idle mode, press Menu →Messaging → Inbox and press the Select soft key or the ok key.

Viewing a Text Message from the Inbox

- 1. In Idle mode, press Menu → Messaging → Inbox and press the Select soft key or the ok key.
- Select a text message from the list and press the Options soft key.

The following options display:

- **Reply**: allows you to send a reply to the sender by sending a message.
- Call back: Places a call back to the number.
- Forward: allows you to forward the text message to another person.
- **Delete**: deletes the selected text message or multiple messages.
- Move to phone/SIM card: allows you to move the message from the SIM card into the phone's memory or from the phone onto the SIM card. Depends on where the current message was saved.
- Sort by: allows you to sort messages by Read/Unread, Date, Name, Type, Size, or Subject.
- Lock/Unlock: allows you to protect the message from deletion or unlock it for deletion.

- Press View ok to read the message contents.
- 4. To scroll through the contents, press the **Up** or **Down** Navigation key.

Press the **Options** soft key while reading a text message to display the following:

- Reply: allows you to send a reply to the sender by sending a message.
- Call back: Places a call back to the number.
- Forward: allows you to forward the message to another number.
- Save address: allows you to extract the sender's number and URL, e-mail addresses or phone numbers from the message text, so that you can save them in your phone's memory.
- **Delete**: allows you to delete the message.
- **Print via Bluetooth**: allows you to print the message using a Bluetooth enabled printer.
- Move to phone/SIM card: allows you to move the message from the SIM card into the phone's memory or from the phone
 onto the SIM card. Depends on where the current message was saved.
- Lock/Unlock: allows you to protect the message from deletion or unlock it for deletion.

Viewing a Picture Message from the Inbox

- 1. In Idle mode, press **Menu → Messaging → Inbox** and press the **Select** soft key or the **OK** key.
- 2. Highlight an unretrieved picture message if from the list and press the **Options** soft key.

The following options display:

- Reply via: allows you to send a reply to the sender by sending a Message or Audio Postcard.
- Reply all via: allows you to send a reply to the sender by sending a Picture message or Audio Postcard.
- Call back: allows you to call the sender back.
- Forward: allows you to forward the message to another number.
- **Delete**: allows you to delete the Selected picture message or Multiple messages.
- Sort by: allows you to sort your messages by Read/Unread, Date, Name, Type, Size, or Subject.
- Lock/Unlock: allows you to protect the message from deletion or unlock it for deletion.
- Properties: displays information about the message, such as Subject, Received date, From, To, Cc, Size, and Priority
- 3. Press View ok to read the message contents.

- 4. To scroll through the contents, press the Up or Down Navigation key.
- 5. Press the **Options** soft key while reading a text message to display the following:
 - **Reply**: allows you to send a reply to the sender by sending a Message or Audio Postcard.
 - Reply all via: allows you to send a reply to the sender by sending a Picture message or Audio Postcard.
 - Call back: allows you to call the sender back.
 - Forward: allows you to forward the message to another number.
 - **Replay**: allows you to review the picture message.
 - Save address: allows you to cut and paste the address to send a text message, or picture message.
 - Save media: allows you to save message media to your Image folder, Video folder, Sound folder, vCard, vCalendar. vNote, or Other file folder.
 - Delete: deletes the selected picture message.
 - Lock/Unlock: allows you to protect the message from deletion or unlock it for deletion.
 - Properties: shows you information about the message, such as Subject, Received date, From, To, Cc, Size, and Priority.

Viewing a Picture Message When You Receive It

When a new picture message comes in, the Missed messages tab displays the missed Picture Messaging Message icon.

1. From the Missed messages tab, press the **View OK** key to view the picture message.

Note: The message actually displays as a missed Picture message.

- 2. Press the Exit soft key if you want to view the message later in the Inbox.
- 3. Press the **Options** soft key or the **OK** key to access the various options described above.
- 4. Press the key when you are finished.

Listening to an Audio Postcard from the Inbox

- 1. In Idle mode, press Menu → Messaging → Inbox and press the Select soft key or the ok key.
- 2. Select an Audio Postcard of from the list and press the Options soft key.

The following options display:

- Reply via: allows you to send a reply to the sender by sending a Message or Audio Postcard.
- Reply all via: allows you to send a reply to the sender by sending a Picture message or Audio Postcard.
- Call back: allows you to call the sender back.
- Forward: allows you to forward the message to another number.
- **Delete:** allows you to delete the Selected Audio Postcard or Multiple Audio Postcards.
- Sort by: allows you to sort your messages by Read/Unread, Date, Name, Type, Size, or Subject.
- Lock/Unlock: allows you to protect the message from deletion or unlock it for deletion.
- · Properties: shows you information about the Audio Postcard, such as Subject, Received date, From, To, Cc, Size, and Priority.
- 3. Press Play ok to listen to the message.
- 4. Press the **Options** soft key while listening to the Audio Postcard and choose from the following:
 - Reply via: allows you to send a reply to the sender by sending a Message or Audio Postcard.
 - Reply all via: allows you to send a reply to the sender by sending a Picture message or Audio Postcard.
 - Call back: allows you to call the sender back.
 - Forward: allows you to forward the message to another number.
 - Replay: plays back your Audio Postcard.
 - Save address: allows you to cut and paste the address to send a text message, or picture message.
 - Save media: allows you to save message media to your Image & Video folder, Sound folder, vCard, vCalendar, vNote, or Other files folder.
 - **Delete:** deletes the selected Audio Postcard message.
 - Lock/Unlock: allows you to protect the message from deletion or unlock it for deletion.
 - Properties: shows you information about the Audio Postcard, such as Subject, Received date, From, To, Cc, Size, and Priority.
- 5. Press Reply to create an Audio Postcard for this sender.

E-mail Messages

The E-mail option allows you to send or receive pop e-mail from AIM, AOL, Yahoo! or you can select from a list of other predefined broadband e-mail providers.

E-mail Setup

This options allows you to select the e-mail accounts you want to use.

- In Idle mode, press Menu → Messaging → E-mail and press the Select soft key or the ok
- 2. After reading the displayed text, press Next.
- 3. Highlight an account, and press the $\bf Select$ soft key or the $\bf OK$ key.
 - or –
- If you selected More accounts, press the ok key, select an account, and press the Select soft key or the ok key.
- 5. Enter the E-mail address and Password.
- 6. Press Sign In OK.
- When the Congratulation! e-mail setup message displays, press the OK soft key to confirm your selection.
 The handset restarts after setup.

E-mail Settings

This option allows you to modify your e-mail account settings.

Note: Account settings vary depending on your e-mail account.

Audio Postcard

In this menu you can select a frame, take a picture and then record a voice message up to one minute long and send it as an Audio Postcard.

- 1. In Idle mode, press Menu → Messaging → Audio postcard and press the Select soft key or the ok key.
- 2. Prior to capturing the picture you can touch the Menu soft key and change the Camera settings. Options are:
 - Choose frame: displays a frame on the screen so you can center the photo in your shot like a postcard.

- Timer: allows you to set a time delay before the camera takes the photo. Select the length of delay you want. When you press
 the Camera or ok key, the camera takes the photo after the specified time has elapsed (Off, 3 seconds, 5 seconds, 10
 seconds).
- White balance: allows you to set this option from the following choices: Auto, Daylight, Incandescent, Fluorescent, or Cloudy.
- Effects: allows you to change the color tone or apply special effects to the photo. Choices are: Black & White, Negative, Sepia, Emboss, Sketch, Antique, Moonlight, or Fog.
- Shortcuts: allows you to view a guick list of shortcuts such as Brightness control, Shooting mode, or Viewfinder mode.
- Settings:

General settings: There are two types of general settings: Zoom sound (creates a sound when you zoom the camera) and Brightness sound (creates a sound when you adjust the brightness). You can activate (turn On) or deactivate (turn Off) these sounds.

Camera settings: consist of the following:

- Shutter sound: allows you to select a tone to play when the camera's shutter opens and closes. Sound selections are Shutter1, Shutter2, and Shutter3.
- Viewfinder mode: allows you to set the view finder to Full screen. Full screen & Indicator, or Full screen & Guideline.
- **Scene program**: allows you to set the camera options to capture normal or night scene.
- Exposure metering: allows you to set how the camera measures or meters the light source: Normal, Center-weighted, or Spot.
- Hold the phone in landscape mode, and center a subject in the frame, then press the Camera key (a) to take a photo for the postcard.

The photo saves to the Photos folder.

- 4. Press the Add voice ok key to add a voice note to this postcard.
- 5. Press the **Stop** soft key when you are finished recording the voice message.
- **6.** Press the **Send to OK** key and select one of the following options:
 - Recent recipients: allows you to select a number or an address from the last 20 destinations you entered.
 - Contacts: allows you to enter the phone number you want from your contacts.
 - **New recipient**: allows you to manually enter a phone number.
 - My Album: allows you to save this Audio Postcard to My Album.
- 7. Press the Select soft key and continue adding additional recipients.
 - or -
- 8. Press the Send soft key after you select a recipient.

Instant Messaging (IM)

Instant Messaging is a way of sending short, simple messages that are delivered real time to users online.

Before using this feature, you need to subscribe to a messenger service. Your handset has 3 pre-loaded Messaging services (AIM, Windows Live, and Yahoo!).

Note: Contact T-Mobile customer service for further details.

Starting your Instant Messaging

- 1. In Idle mode, press Menu → Messaging → IM and press the Select soft key or the ok key.
- 2. Highlight IM and press the **Select** soft key or the **OK** key.
- Highlight the messenger service to which you are subscribed using the Up or Down Navigation key and press
 the Select soft key or the OK key.
- Highlight the Sign in option, depending on your messenger service and press the Select soft key or the ok key.
- 5. Enter the required sign on information such as ID and password, then press the Down Navigation key.

Note: The information required for sign on varies depending on the Instant Messaging provider you use.

- 6. Fill in all the appropriate fields and press the Sign in soft key or the ok key.
- 7. If you use Windows Live, agree to the terms and conditions of use for this service and press the I Accept soft key or the key.
- Follow the on-screen instructions to read, reply to, compose, send, and manage your Instant Messaging account.

Using the Instant Messenger Options

After selecting an Instant Messaging service, the following options display:

- . Sign in: allows you to login to your Instant Messaging account.
- Saved conversations: displays permanent records of your Instant Messaging conversations.
- Offline conversations: shows a listing of the last 10 IM conversations made while you were offline.

- Preferences: Allows you to Power on Sign In, Auto-sign In, change Sound settings, or create Favorite IDs
- Help: provides helpful information about each service provider (such as Provider name, Provider description, and Provider URL), or provides Help text for the selected service provider.

Sentbox

This message box stores unsent messages.

When you enter this menu, the list of messages in the Sentbox displays with the recipients' phone numbers or names, if available in your Contacts.

1. In Idle mode, press Menu → Messaging → Sentbox and press the Select soft key or the ok key.



Note: Press the Left or Right Navigation keys to scroll between Inbox, Drafts, and Sentbox.

- Select a message from the list and press the **View** ok key to view or play the message contents.
- Press the **Up** or **Down** Navigation keys to scroll through the contents.

Tip: Press the Options soft key while reading a message to select alternate options.

Drafts

This message box stores messages that you may want to edit or send at a later time.

When you enter this menu, the list of messages in the box displays.

1. In Idle mode, press Menu → Messaging → Drafts and press the Select soft key or the lock key.

Note: Press the Left or Right Navigation keys to scroll between Inbox, Drafts, and Sentbox.

Select a message from the list and press the **Options** soft key.

The following options display:

- Edit: allows you to edit the message.
- **Delete**: deletes the selected draft message.
- Move to SIM card/Phone: moves the selected draft message to the SIM card (if stored on the phone) or to the Phone (if stored on the SIM card).

- Sort by: allows you to sort the messages stored in this folder by Date, Name, Type, Size, or Subject.
- Lock/Unlock: locks the selected message to protect it from deletion, or unlocks the message to allow deletion.
- 3. Highlight Edit and press the Select soft key or the OK key to edit the message contents.
- 4. Press the **Send** ok key (while viewing the message) to send the message.
- 5. Press to return to the Idle screen.

Tip: Press the Options soft key while reading a message to select alternate options.

Templates

Besides entering message text using the keypad keys, you can speed message composition by including copies of stored text (Templates) in your message.

▶ In Idle mode, press Menu →Messaging → Templates and press the Select soft key or the ok key.

The following options are available:

- Text templates
- Picture message templates

Sending a Text template

- Select a template from the Text Templates list and press View OK
 The template displays on the screen.
- 3. Press the Send to OK soft key, and press Add OK
- 4. Select one of the following:
 - Recent recipients: allows you to select a number or an address from the last 30 destinations you entered.
 - Contacts: allows you to enter the phone number you want from your Contacts.
 - Group: allows you to select a group.

5. After selecting a recipient, press Options → Send.

The template message sends to the select recipient(s).

Sending a Picture message template

- In Idle mode, press Menu → Messaging → Templates → Picture message templates and press the Select soft key or ok.
- Select a template from the **Picture message templates** list and press **Options** →**Send message**.
- Select one of the following options:
 - Recent recipients: allows you to select a number or an address from the last 30 destinations you entered.
 - Contacts: allows you to enter the phone number you want from your Contacts.
 - **New recipient**: allows you to manually enter a phone number or e-mail address.
 - My Album: allows you to send the selected Picture template to My Album.
- After you select the recipient, or My Album press Send OK. The template message sends to the select recipient(s), or selected destination.

Voice mail

This menu provides you with a way of accessing your voice mailbox, if provided by your network.

In Idle mode, press Menu → Messaging → Voice mail and press the Select soft key or the ok key.

Note: Before you can use the Voice Mail feature, you must obtain the voice server number from T-Mobile customer service.

2. Press the Call soft key to call your voice mail number.

Tip: In Idle mode you can also press and hold the Rep key to connect to the voice server.

Voice mail is a network feature. Please contact T-Mobile customer service for further details.

Settings

The **Settings** menu allows you to select where your contacts are saved, delete your contacts, sort by contacts, or check your memory status.

In Idle mode, press Menu →Messaging → Settings and press the Select soft key or the lock key.



Messages Settings

In this menu, you can set up a default text message or a picture message. The last setting you accessed is automatically activated for sending subsequent messages.

▶ In Idle mode, press Menu → Messaging → Settings → Messages settings and press the Select soft key or the OK kev.

Settings

In this menu, you can set up a default text message, or picture message. The last setting you accessed is automatically activated for sending subsequent messages.

Text message

- Service center: displays the phone number of your message center, which is required when sending messages. You cannot modify this number.
- Reply path: allows the recipient of your message to send you a reply message using your message center, if your network supports this service.
- Delivery report: allows you to activate or deactivate the report function. When this function is activated, the network informs you whether or not your message was delivered.

Picture message

Use the following options to set Send and Receive settings for Picture messages.

Send Settings

- Delivery report: when this option is enabled, the network informs you whether or not your message was delivered.
- Read reply: when this option is enabled, your phone sends a request for a reply along with your message to the recipient.
- Priority: you can select the priority level of your messages.
- Expiry: set the length of time your messages are stored in the message center while the network attempts to deliver them. Selections are: 1 hour. 6 hours. 1 day. 1 week. or Maximum.

Delivery time: you can set a delay time before the phone sends your messages. Selections are: Immediately, 1 hour later, 6
hours later, 12 hours later, 1 day later, 3 days later, 1 week later, or 1 month later.

Receive Settings

- Anonymous reject: you can set your phone to automatically reject anonymous messages.
- Ads allowed: you can set your phone to automatically receive advertising messages.
- Report allowed: you can set the option to receive a delivery report.

Delete all

This menu allows you to delete all of the messages in each message box. Or, you can also delete all of your messages in all message boxes at one time.

Important!: Once messages are deleted, they cannot be recovered.

- 1. In Idle mode, press Menu \rightarrow Settings \rightarrow Delete all and press the Select soft key or the |OK| key.
- Press the Up or Down Navigation key to select a message box to clear. To delete all of your messages, select the All option.
- 3. Press the **ok** key to place or remove a check mark.
- Press the **Delete** soft key to delete the marked objects.
- After you receive the Delete all unlocked messages? confirmation, press Yes to delete or press No to cancel.

Memory Status

To view the memory status:

In Idle mode, press Menu → Messaging → Settings → Memory status and press the Select soft key or the ok key.

You can view the amount of the allocated memory and the memory available for picture messages.

The display shows the total space including the used and free space. You can also view how much space and the number of messages currently occupying each message box type:

- Text Message (saved on the phone)
 - Phone
 - SIM card
 - Inbox
 - Sentbox
 - Draft
- · Picture message
 - Inbox
 - Sentbox
 - Draft
 - Template
- · Push messages

Voice Recording

In this menu, you can record a voice note up to one minute long, using the Voice recorder, then immediately send it via Picture Messaging.

Creating and sending a Voice List

When you access this menu, a timer displays on the screen.

- In Idle mode, press Menu → Media → Voice recorder and press OK.
- 2. Press the Record soft key to begin recording.
- 3. Record a memo by speaking into the phone's microphone.

The display simultaneously shows the elapsed time and the remaining time.

Press the Stop soft key when you are finished recording. Or, when the recording time is expired, the display advances to the next screen.

Note: Your voice note automatically saves in the Voice list.

- 5. Press the **Options** soft key for the following options:
 - Send in message: allows you to send the Voice note as a message.
 - Re-record: discards the previous Voice note and enables you to record a new voice note.
 - Set as: allows you to save the voice note as a myFaves ringtone, Ringtone, Individual ringtone, or Alarm tone.
 - . Go to voice list: displays the voice list.
 - **Delete**: allows you to deleted this voice note.
- 6. To send the Voice note, press Options → Send in Message.
- Enter a phone number in the To field then press the Down Navigation key and compose your message (see "Create message" on page 51.)
 - or —

Press the Add soft key and select one of the following send options:

- Recent recipients: allows you to select either a number or an address from the last 30 destinations you entered.
- **Contacts**: allows you to enter the phone number you want from your contacts.
- Group: allows you to select a group.
- My Album: allows you to send the message to My Album.
- 8. After entering your phone number or selecting a number from the Contacts, press **Options** → **Send** and press



Your phone sends the message. The message saves to the Sentbox after it successfully sends.

Section 8: Media

web2go

This section outlines the web2go features available on your phone. For more information, contact T-Mobile.

Your phone is equipped with a WAP (Wireless Application Protocol) browser which provides you wireless access and navigation to the Web using your phone.

Tip: Press the web2go soft key while in Idle mode to bypass the web2go menu.

To access web2go via the menu, follow these steps:

In Idle mode, press Menu → Media → web2go and press the Select soft key or the ok key to enter the menu.

To access web2go directly, follow these steps:

▶ In Idle mode, press the web2go soft key to access the web2go menu.

The following options are available:

Home

Selecting this menu connects the phone to the network and loads the web2go homepage.

The content of the web2go startup homepage depends on your Wireless Web service provider. To scroll through the screen, use the **Up** and **Down** keys.

To go to the startup homepage from any other screen in the web2go, use the **Home** option. For more information on the web2go menus, see "Selecting and Using Menu Options" on page 70.

In Idle mode, press Menu → Media → web2go → Home.

Exiting web2go

▶ To exit the browser at any time, simply press the key.

Navigating web2go

- 1. To scroll through browser items, press the **Up** or **Down** Navigation key.
- 2. To select browser items, press the ok key.

- 3. To return to the previous page, press the **Back** soft key or the **Example 1** key.
- 4. Press the **Back** soft key until the startup **Home** page displays.

Entering Text in web2go

When you are prompted to enter text, the currently active text input mode is indicated on the screen. The following modes are available:

- Upper-case character mode (A): allows you to enter upper-case English characters.
- Lower-case character mode (a): allows you to enter lower-case English characters.
- Number mode (1): allows you to enter numbers.

To change the text input mode, use the following procedures:

- 1. Press the **Right** soft key one or more times.
- To enter a space, press space.
- 3. To edit text, set the cursor to the right of the character(s) to be corrected.
- Press the key as required.
- Enter the correct character(s).

Selecting and Using Menu Options

Various menus are available when you are using web2go to navigate the Wireless Web.

To access the browser options menu:

1. Press the Options soft key.

Note: The menus may vary, depending on your version of web2go.

The following options are available:

- Home: displays the Home page.
- Clear Search Box: clears the search box contents so you can re-enter another search.
- **About**: displays information about the web client version, and XML version.
- Help: provides information about web2go.
- Exit: exits the current screen and returns you to the web2go screen.

Enter URL

This menu allows you to manually enter the URL address of a web site that you wish to access.

For further details about entering characters, see "Entering Text" on page 35.

Bookmarks

This menu stores up to 15 URL addresses.

To store a URL address:

- In Idle mode, press Menu → Media → web2go → Bookmarks and press the Select soft key or the ok key.
- Press Options → Add to bookmark and press the Select soft key or the ok key.
- 3. Enter a name for the bookmark in the **Title** text box and press the **Down** key.

Note: For further details about how to enter characters, see "Entering Text" on page 35.

- 4. Enter the address in the URL text box and press Save OK.
- 5. Highlight an item after saving a bookmark, then press the **Options** soft key to access the following:
 - Edit bookmark: allows you to edit the address.
 - Delete: allows you to delete the selected address, or multiple addresses.
 - Add bookmark: allows you to enter a new bookmark URL.
 - Send URL via message: allows you to send the selected bookmark as a text message.
- 6. Select a URL and press Go OK. Your browser displays the site.

Saved Pages

This option displays a list of the pages that were saved while navigating the browser.

History

This option provides you with a list of the most recently visited web sites. You can use these entries to return to previously visited, but not bookmarked, web pages.

Browser Settings

Various settings are available when you are using the web2go browser to navigate the wireless web.

Clear cache

You can clear the information stored in the cache, which is the phone's temporary memory and stores the most recently accessed Web pages.

▶ Press the **Yes** soft key to confirm the deletion. Otherwise, press the **No** soft key.

Cookies

The Cookie mode allows you to define how your browser handles cookies. Options are: Accept all, Reject all, or Prompt before receiving a cookie.

Cookie Mode

Cookie mode allows you to Accept all cookies, Reject all cookies, or Prompt you when a site wants to deposit a cookie.

Delete Cookies

Cookies identify who you are when you visit favorite web sites; however, they are also used to track your web surfing habits. Deleting all the cookies provides security.

- 1. Highlight Delete cookies and press the Select soft key or the ok key.
- 2. At the Delete cookies? prompt press Yes.

Preferences

The Preferences option allows you to set web2go preferences such as Run JavaScript, Display images, Play sound, View mode, and Revalidate Cache.

Certificates

The Certificates option allows you to view internet certificates.

- Root Certificate: provides several root certificates from which to choose.
- CA Certificate: provides several CA certificates from which to choose.

About Browser

About Browser displays information about the browser such as the type and version.

My Album

My Album is a private online picture album that you can use to store and share pictures, videos, voice messages. and text. For more information, see "My Album" on page 122.

Use the following procedures to access My Album.

Note: When accessing My Album, charges may apply.

- In Idle mode, press Menu → Media → Photos → My Album and press the Select soft key or the ok key. 1.
- In your browser, select the My Albums Menu link and press the Select soft key or the key. 1.
- Photos sent to this folder are stored in the **Inbox Album**. 2.
- Use the **Up** or **Down** key to highlight a particular image and press the **OK** key to view the photos. 3.
- Press the key to exit web2go and return to the Idle screen.

Take Photo

Your camera produces photos in JPEG format.

Note: When you take a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

In Idle mode, press Menu → Media → Photos → Take photo and press the Select soft key or the key.



Tip: Press the Camera key (on the right side of the phone as a shortcut access to the camera module.

- 2. Adjust the image by aiming the camera at the subject.
- Press the Left soft key to access the camera options. For details, see "Configuring Camera Options" on 3. page 117.

Tip: You can use the keypad to quickly change the camera options.

Press the Camera key or ok key to take the photo. The photo automatically saves to the Photos folder.

Note: For more information about taking photos, see "Take Photo" on page 115.

Photos

Using the Photos option you can view your photos.

To change the background image:

- In Idle mode, press Menu → Media → Photos → Photos and press the Select soft key or the ok key.
- 2. Make a selection and press the Options soft key.
- Highlight Set as →Wallpaper and press the Select soft key or the ok key.
 Your wallpaper selection updates.

Photos Options

- ▶ While viewing a photo, press the **Options** soft key to choose from the following options:
 - Send to My Album: allows you to send the selected photo to Recent recipients, Contacts, New recipient, or My Album.
 - Send via: allows you to send the photo as a Picture message, E-mail or to another Bluetooth compatible device.
 - Set as: allows you to set the photo as a myFaves icon, Wallpaper or as a Picture ID.
 - **Delete**: allows you to delete the selected photo or multiple photos.
 - **Default destination**: allows you to Change or Remove where your photos are sent after you take them.
 - Move to memory card: allows you to move the Selected or Multiple photo(s) to the Memory card.
 - Copy to memory card: allows you to copy the Selected or Multiple photo(s) to the Memory card.
 - Edit image: allows you to choose a new photograph for an outgoing message.
 - **Rename**: allows you to rename the photo.
 - Display mode: allows you to view the photos in Line view or Thumbnail view.
 - Slide show: allows you to set the time for the slide show to cycle through the images. Choose 1 second or 3 seconds.
 - Bluetooth visibility: allows you to select one or multiple photos to share with other Bluetooth devices.
 - Print via Bluetooth: sends the selected photo to a Bluetooth enabled device.
 - Lock/Unlock: allows you to lock the photo to protect it from deletion or unlocks it to allow deletion.
 - Properties: displays the image name, date, format, resolution, size, and Lock/Unlock.

Music Player

You can add music files, or play music stored in your playlist.

Important!: Before you can play music you must organize a playlist. For more information, refer to "Creating a Playlist" on page 76.

- 1. In Idle mode, press Menu → Media → Music player and press the Select soft key or the ok key.
- 2. Create a playlist. For more information, refer to "Creating a Playlist" on page 76.
- 3. Highlight a music file, then press the **Options** soft key and select one of the following options:
 - Add music from: allows you to add a music file stored on the Phone or on the Memory card.
 - Move to: allows you move the selected music file to one of the ten available playlists.
 - Copy to: allows you copy the selected music file to one of the ten available playlists.
 - Remove: allows you to remove a selected music file, or all of the music files from this playlist.
 - Set as: allows you to set this music file as a myFaves ringtone, Ringtone, Individual ringtone, or Alarm tone.
 - Send via Bluetooth: allows you to send the selected music file to a Bluetooth enabled device.
- 4. Select a music file and press Play or to play the music.

Music Player Shortcut Keys

- 1. In Idle mode, press Menu → Media → Music player and press the Select soft key or the [OK] key.
- 2. Select a music file and press Play ok to play the music.
- 3. While playing a music file, the following keys act as shortcuts:

Up Navigation key toggles the music player's **Shuffle** feature: **On** (enable this feature), or toggles to the repeat mode and replays this music file.



Down Navigation key stops the playback of the music file.

Left Navigation key plays the previous music file in the playlist.

Right Navigation key plays the next music file in the playlist.

4. Press the key to exit and return to Idle mode.

Creating a Playlist

Before music can be played directly via the Music Player, it is necessary that the desired playlist be active before music is added. Unless otherwise selected, Playlist 1 is the default playlist when new music is added from either the phone or memory card.

- In Idle mode, press Menu → Media → Music player.
- 2. If this is the first time you are creating a playlist, press Next or skip to step 3.
- 3. Select a playlist and press Open.
- 4. Press Options → Add music from and press the Right Navigation key.
- 5. Select Phone or Memory card.
- Select a music file and press Add.The song is added to the selected playlist.

Music

In this menu you can review the Music you've downloaded or you can view music stored on the memory card.

- In Idle mode, press Menu → Media → Music.
- 2. Highlight a music file and press the **Options** soft key to choose from the following options:
 - Send via Bluetooth: allows you to send the selected music file to a Bluetooth enabled device.
 - Set as: allows you to set the music file as a myFaves ringtone, Ringtone, Individual ringtone, or Alarm tone.
 - **Delete**: allows you to delete the selected music file or multiple music files.
 - Move to Memory card: allows you to move the Selected or Multiple music files to the Memory card.
 - Copy to Memory card: allows you to copy the Selected or Multiple music files to the Memory card.
 - Rename: allows you to change the name of the music file.
 - Bluetooth visibility: allows you to select one or multiple music files to share with other Bluetooth devices.
 - Lock/Unlock: allows you to lock the music file to protect it from deletion or unlocks it to allow deletion.
 - Properties: displays the properties for the selected music file such as name, date, format, bitrate, length, size, and lock/unlock. Properties displayed depend on the format of the music file.

Images

 
In this menu, you can view the list of images downloaded from the web server, taken with the built-in camera, or received in messages. You can set an image as the current background image.

▶ In Idle mode, press Menu → Media → Images.

The following options are available:

Browse wallpapers

Using the **Browse Wallpapers** option, allows you to access the T-Mobile website and download new images using the browser.



Note: When downloading Wallpapers, charges may apply.

Browse myFaves icons

This feature allows you to navigate to the web in order to download additional myFaves icon types.

Downloaded images

This menu allows you to access your downloaded images on your phone.

- ▶ Scroll to the image you want to view and press the **Options** soft key to access the following options:
 - **Download new**: opens your web browser where you can download new images.
 - Send via: allows you to send an image via a Picture message, e-mail or to a Bluetooth enabled device.
 - Set as: allows you to set the image as a myFaves icon, Wallpaper, or Picture ID.
 - **Delete**: allows you to delete the selected image or multiple images.
 - Move to memory card: allows you to move the Selected or Multiple image(s) to the Memory card.
 - Copy to memory card: allows you to copy the Selected or Multiple image(s) to the Memory card.
 - **Rename**: allows you to change the name of the image.
 - Display mode: allows you to set the display mode to Line view or Thumbnail view.
 - Slide show: allows you to set the time for the slide show to cycle through the images. Choose 1 second or 3 seconds.
 - Bluetooth visibility: allows you to select one or multiple images to share with other Bluetooth devices.
 - Print via Bluetooth: allows you to send the selected image to a Bluetooth enabled device.

- **Lock/Unlock**: allows you to lock the image to protect it from deletion or unlock it to allow deletion.
- **Properties**: displays the image name, date, format, resolution, size, quality, and Lock/Unlock.

myFaves icons

This menu allows you to personalize your favorite numbers with downloadable myFaves icons.

Sounds

In this menu, you can view the list of sounds downloaded from the web server or received in picture messages. You can also set a downloaded sound as the current ring tone.

1. In Idle mode, press Menu → Media → Sounds.

Note: When downloading MegaTones® or HiFi RingersTM, charges may apply.

The following options are available:

Browse HiFi Ringers

Using the **Browse HiFi Ringers** option on the sounds list, you can quickly access T-Mobile website and use the t-zone browser to download new HiFi Ringers.

Press the Select soft key to purchase additional ringtones.

Browse MegaTones

Using the **Browse MegaTones** option on the sounds list, you can quickly access the T-Mobile website and download new sounds by using the browser. Press the **Select** soft key to purchase additional MegaTones.

Sounds

Highlight an item in the **Sounds** menu and press the **Options** soft key. The following options are available:

- Download new: opens your web browser where you can download new sounds.
- Send via: allows you to send the sound file as a Picture message, E-mail or to a Bluetooth compatible device.
- Set as: allows you to set the sound as a myFaves ringtone, Ringtone, Individual ringtone, or Alarm tone.
- Delete: allows you to delete the selected sound or multiple sounds.
- Move to memory card: allows you to move the Selected or Multiple sound(s) to the Memory card.
- Copy to memory card: allows you to copy the Selected or Multiple sound(s) to the Memory card.
- Rename: allows you to change the name of the sound.

- Bluetooth visibility: allows you to select one or multiple sounds to share with other Bluetooth devices.
- Lock/Unlock: allows you to lock the sound to protect it from deletion or unlock it to allow deletion.
- Properties: displays the sound name, date, format, length, size, and Lock/Unlock status.

Voice list

The Voice list contains your recorded audio messages. Highlight an item and press the **Options** soft key. The following options are available:

- Send via: allows you to send the audio message as a Picture message, E-mail or to a Bluetooth compatible device.
- Set as: allows you to set the audio message as a myFaves ringtone, Ringtone, Individual ringtone, or Alarm tone.
- Delete: allows you to delete the selected audio message or multiple audio messages.
- Move to memory card: allows you to move the Selected or Multiple audio message to the Memory card.
- Copy to memory card: allows you to copy the Selected or Multiple audio message to the Memory card.
- Rename: allows you to change the name of the audio message.
- Bluetooth visibility: allows you to select one or multiple voice messages to share with other Bluetooth devices.
- Lock/Unlock: allows you to lock the audio message to protect it from deletion or unlocks it to allow deletion.
- Properties: displays the audio name, date, format, length, size, and Lock/Unlock status.

Videos

Record video

Tip: When shooting video in direct sunlight or in bright conditions, it is recommended that you provide your subject with sufficient light by putting the light source behind you.

- In Idle mode, press Menu → Media → Videos and press the Select soft key or the OK key.
- 2. Select Record video.
- 3. Before filming the video, press **Menu** to access camcorder options (see below).
- 4. Adjust the image by aiming the camcorder at the subject.
- 5. Press the **ok** key to begin shooting video.
- 6. Press the **Stop** soft key or **OK** to stop the recording.
- 7. Once the file saves, press the ok key to play back your video for review.

Note: For more information about how to use the Camcorder, see "Record video" on page 119.

Downloaded videos

The Downloaded videos option displays a list of videos downloaded from the web server or videos received in picture messages.

- In Idle mode, press Menu → Media → Videos → Downloaded videos and press the Select soft key or the ok key.
- 2. Scroll to the video you want to view and press the Options soft key to access the following options:
 - Send via: allows you to include a video and send it via Picture message, E-mail, or to a Bluetooth device.
 - **Delete**: allows you to delete the selected video or multiple videos.
 - Move to memory card: moves the selected video or multiple videos to the memory card.
 - Copy to memory card: copies the selected video or multiple videos to the memory card.
 - Rename: allows you to change the name of the video.
 - Display mode: allows you to set the display mode to Line view or Thumbnail view.
 - Bluetooth visibility: allows you to share all the downloaded videos with other Bluetooth enabled devices.
 - Lock/Unlock: allows you to lock the video to protect it from deletion, or unlock an already locked video.
 - Properties: displays the video name, date, format, resolution, size, quality, and Lock/Unlock status.

Videos

The Videos option displays a list of videos stored in your Videos folder.

- In Idle mode, press Menu → Media → Videos → Videos and press the Select soft key or the ok/key.
- 2. Highlight a video and press the Options soft key to choose from the following options:
 - Send to My Album: allows you to send the selected video to My Album.
 - **Send via**: allows you to send the video via Picture message, by E-mail, or to a Bluetooth enabled device.
 - **Delete**: allows you to delete the selected video or delete Multiple videos.
 - **Default destination**: allows you to remove or change the default destination.
 - Move to memory card: allows you to move the selected video or multiple videos to the memory card.
 - Copy to memory card: allows you to copy the selected video or multiple videos to the memory card.

- Rename: allows you to change the name of the video.
- Display mode: allows you to see your videos displayed in a Line view or in Thumbnail view.
- Bluetooth visibility: allows you to share the selected or multiple video files visible with other Bluetooth devices.
- Lock/Unlock: allows you to lock the video to protect it from deletion, or unlock an already locked video.
- Properties: displays the video Name, Date, Format, Resolution, Size, Length, Quality, and Lock/Unlock status.

Games and Apps

You can download MIDlets (Java applications that run on mobile phones) from various sources using web2go browser and then storing them in your phone.

- In Idle mode, press Menu → Media → Games and Apps and press the Select soft key or the ok key.
- Highlight the My Games.

When you access the **Games** menu, the list of default games displays. Once you download new games, they are then added to the list.

Browse Games

You can download more games from the T-Mobile website by using the **Browse Games** option.

In Idle mode, press Menu → Media → Games and Apps → Browse Games and press the Select soft key or the
 (ok) key.

The web2go screen displays with options.

Note: When downloading games, charges may apply. MIDlet game options differ depending on the MIDlet selected.

My games

You can download MIDlets (Java applications that run on mobile phones) from various sources using web2go browser and then storing them in your phone.

- In Idle mode, press Menu → Media → Games and Apps and press the Select soft key or the ok key.
- 2. Highlight My Games and press OK

When you access the **Games** menu, the list of default games displays. Once you download new games, they are then added to the list.

MIDIet Options

- $\textbf{1.} \quad \text{In the My Games} \ \text{menu, scroll to the MIDlet application you want and press the $Options$ soft key}.$
 - The following options are available:
 - Move to: allows you to move the Selected or Multiple midlets to another folder.
 - **Delete**: allows you to delete a MIDlet.
 - Lock/Unlock: allows you to lock the game to prevent deletion, or unlock the game to allow deletion.
 - **Properties**: displays information about the selected Midlet such as: version, size, authorized, and vendor.
 - Memory status: displays the remaining memory for game files.
- To exit and return to the Games list, press the Back soft key or the key.

Voice recorder

In this menu, you can record an audio file up to one minute long and then immediately send it as a message.

- 1. In Idle mode, press Menu → Media → Voice recorder and press the Select soft key or the ok key.
- 2. Press Record and speak into the microphone.
- 3. Press Stop when you are finished recording.

Note: The recording automatically saves to the voice list.

- 4. Press **Options** and select one of the following options:
 - Send in Message: allows you to send this voice recording in a message.
 - Re-record: allows you to re-record the audio note.
 - Set as: allows you to save this recording as a myFaves ringtone, Ringtone, Individual ringtone, or Alarm tone.
 - Go to voice list: displays the voice list.
 - Delete: allows you to delete this voice recording.

Others

This menu allows you to view or store other types of files, and check the amount of memory used or remaining for applications.

In Idle mode, press Menu → Media → Others and press the Select soft key or the ok key. The following options display:

Other files

In this menu you can view or store other types of files without corruption, various document files and files stored in the phone's memory, or on a memory card.

Available file formats are Microsoft Word, Adobe PDF, or Plain text.

- In Idle mode, press Menu → Media → Others and press the Select soft key or the (ok) key.
- 2. Select Other files or Memory card and press OK.
- 3. Select a file and press the **Options** soft key to choose from the following options:
 - Send via: allows you to send an other file via a Picture message, e-mail or to a Bluetooth enabled device.
 - Delete: allows you to delete the selected other file or multiple other files.
 - Move to memory card: allows you to move the selected file or multiple files to the Memory card.
 - Copy to memory card: allows you to copy the selected file or multiple files to the Memory card.
 - Rename: allows you to change the name of the selected file.
 - Bluetooth visibility: allows you to enable Bluetooth so you can share the selected file or multiple files with other Bluetooth devices.
 - Lock/Unlock: allows you to lock the file to protect it from deletion or unlocks it to allow deletion.
 - Properties: displays the Name, Date, Format, Size, and Lock/Unlock status for the selected file.

Memory Status

You can check the amount of memory being used and memory remaining for Sounds, Images, myFaves icons, Videos, Music, or Other files.

- In Idle mode, press Menu → Media → Others → Memory status and press the Select soft key or the (ok) key.
- 2. Press the Left or Right navigation keys to scroll between the memory status of Media or Memory card.

Section 9: Changing Your Settings

This section explains the sound and phone settings for your phone. It includes such settings as: display, security, memory, and any extra settings associated with your phone.

Personalize your Settings

You can customize various phone settings such as sounds, the display, phone settings, messaging key, language, greeting message, and time and date.

Sound settings

You can customize various sound settings.

In Idle mode, press Menu → Settings → Personalize → Sound settings and press the Select soft key or the ok key.

The following options display:

Incoming call

Note: When downloading Mega Tones® or HiFi RingersTM, charges may apply.

Browse MegaTones

Using the **Browse MegaTones** option on the sounds list, you can quickly access the T-Mobile website and download new sounds by using the browser.

▶ Press Connect ok to purchase additional sound files.

Browse HiFi Ringers

Using the **Browse HiFi Ringers** option on the sounds list, you can quickly access the T-Mobile website and use the browser to download new HiFi Ringers.

▶ Press **Connect OK** to purchase additional ringtones.

Ring tone

This menu allows you to select a ring melody.

1. Highlight the Ringtone field and press Change OK

- Use the Navigation keys to highlight a ring tone or press the Left or Right Navigation key to select a file from either the Default Melodies, Voice list, Sounds, or Music folders.
- 3. Press Play or to listen to a sample of the selection. Press Stop or when finished.
- 4. Press Select to enter the new ringtone.

Volume

This menu allows you to adjust the ring volume to one of 7 levels. Or, you can set the ring volume to Silent mode or Vibration mode.

- 1. Use the **Right** or **Left** Navigation key to increase or decrease the volume.
- 2. Press Save to confirm your selection.

Alert type

This menu allows you to specify how you are to be informed of incoming calls.

▶ Use the **Right** or **Left** Navigation key to select a Alert type.

The following options are available:

- **Melody**: the phone rings using the ring melody selected in the Ringtone menu.
- Vibration: the phone vibrates but does not ring.
- Melody and vibration: the phone plays the melody and vibrates simultaneously.
- Vibration then melody: the phone vibrates 3 times and then starts ringing.
- Melody then vibration: the phone plays the melody and then vibrates.

Message tone

This menu allows you to set up the ringer for incoming messages. You can set the Tone, Alert type, and Repetition.

- In Idle mode, press Menu → Settings → Personalize → Sound settings and press the Select soft key or the OK key.
- 2. Highlight Message tone and press ok
- 3. Highlight the Tone filed and press Change OK
- 4. Select a tone and press Play ok to listen to a sample of the tone. Press Stop ok when finished.

- 5. Press Select to enter the new message tone.
- 6. Scroll to Alert type and Repetition, make the selection, then press Save.

Keypad tone

This menu allows you to select the key tone and volume that the phone sounds when you press a key.

- 2. Highlight Keypad tone and press OK.
- 3. Highlight the Key tone field and press Change OK.
- Highlight a selection: Glossy, Beep, or Voice and press Play ok to listen to a sample of the tone. Press Stop ok when finished.
- 5. Press Select to enter the new keypad tone.
- Scroll to Volume and press the Left or Right Navigation keys to adjust the volume.
- Press Save to confirm your selections.

Power on/off tone

This menu allows you to select the melody that the phone sounds when it is switched on and off.

- 2. Highlight Power on/off tone and press OK
- 3. To turn the sound on select Tone 1 or Tone 2. Select Off to turn the sound off.
- 4. Press Play or to listen to a sample of the tone. Press Stop or when finished.
- 5. Press Save to confirm your selection.

Extra tones

You can customize additional tones for the phone.

- In Idle mode, press Menu → Settings → Personalize → Sound settings and press the Select soft key or the OK key.
- 2. Highlight Extra tones and press OK.
- 3. Press the ok key to select a tone. A check mark displays in front of the option.
- 4. Press Save to confirm your selection.

The following options are available:

- Minute minder: sets whether or not the phone beeps every minute during an outgoing call to keep you informed of the length of
 your call.
- Connection tone: sets whether or not the phone beeps when your call is connected to the system.
- Alerts on call: sets whether or not you receive tones when a message arrives while you are on a call.

Vibration mode

Vibration Mode is convenient when you wish to stop the phone from making any noise, (in a theater for example).

- In Idle mode, press and hold the skey until the "Vibration mode On" message and the Vibration Mode icon (1) display.
- Press and hold the see key until the "Vibration mode off" message displays. The Vibration Mode icon (In no longer displays.

Display settings

In this menu, you can change various settings for the display or backlight.

In Idle mode, press Menu → Settings → Personalize → Display settings and press the Select soft key or the ok key.

The following options display:

Wallpaper

This menu allows you to change the background image to be displayed in Idle mode.

In Idle mode, press Menu → Settings → Personalize → Display settings → Wallpaper and press the Select soft key or the ok key.

The following options are available:

- Browse wallpapers: allows you to download additional wallpapers from web2go.
- Default wallpapers: allows you to choose from a list of wallpapers included with your phone.
- . Photos: allows you to choose a photo from Photos folder.
- Downloaded images: allows you to choose a photo from your downloaded images folder.

To change the background image:

- Select Browse wallpapers, or Default wallpapers, make a wallpaper selection and press Save.
 Your wallpaper selection updates.
- 2. Press Back to return to the Display settings menu.

Home Screen

This option allows you to display the Calendar as a background wallpaper or select None.

Info display

This menu allows you to select the text and color for your font.

In Idle mode, press Menu → Settings → Personalize → Display settings → Info display and press the Select soft key or the ok key.

To change the size of the font:

- Highlight the Text style option and press the Left or Right Navigation key to select between: Outline, Shadow, or Normal.
- 2. Press **Save** to save your change. Otherwise, press the **Cancel** soft key.

To change the color of the font:

- Highlight the Text color option and press the Left or Right Navigation key to select between: White, Yellow, Blue, Green, Red or Black.
- 2. Press Save to save your change. Otherwise, press the Cancel soft key.

Themes

This menu allows you to change the background color to Black or White.

In Idle mode, press Menu → Settings → Personalize → Display settings → Themes and press the Select soft key or the ok key.

Dialing display

This menu allows you to select the size and color of your dialing font and the background color.

In Idle mode, press Menu → Settings → Personalize → Display settings → Dialing display and press the Select soft key or the ok key.

To change the size of the font:

- 1. Highlight Font size and press the Select soft key or the ok key.
- 2. Use the Left or Right Navigation key to select between: Large, Medium, or Small.
- Press Save to save your change. Otherwise, press the Cancel soft key.

To change the color of the font:

- 1. Highlight Font color and press the Select soft key or the ok key.
- 2. Use the Left or Right Navigation key to select either Basic (black or white), Monochrome, or Gradation. If you select Monochrome or Gradation, select another option by using the Down Navigation key and then scroll through the available choices. Choose from up to 15 different options.
- 3. Press Save to save your change. Otherwise, press the Cancel soft key.

To change the background color:

- 1. Highlight **Background color** and press the **Select** soft key or the **OK** key.
- 2. Use the **Left** or **Right** Navigation key to select between 19 different colors or **None**.
- Press Save to save your change. Otherwise, press the Cancel soft key.

Backlight

In this menu, you can select the length of time that the keypad backlight is on and how much longer the display is illuminated before going off.

In Idle mode, press Menu → Settings → Personalize → Display settings → Backlight and press the Select soft key or the ok key.

Duration

The On setting is how long the keypad backlight is on. You can select 10 sec, 15 sec, 30 sec, 1 min, 3 min, or 10 min.

The **Dim** option is how much longer after the keypad backlight goes off that the display remains lit. You can select **5 sec**, **15 sec**, **30 sec**, **1 min**, **3 min** or **0ff**.

- 1. Press the **Left** or **Right** Navigation keys to change each field's settings.
- 2. Press Save to save your changes, or Cancel to cancel.

Brightness

You can adjust the display brightness to see it better in different lighting conditions.

- Press the Left or Right Navigation keys to change your settings.
- 2. Press **Save** to save your changes, or **Cancel** to cancel.

Phone settings

You can customize various phone settings.

The following options display:

Airplane mode

Airplane Mode allows you to use many of your phone's features, such as Games, Voice Notes, etc., when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When your phone is in Airplane Mode, it cannot send or receive any calls or access online information.

▶ Highlight On or Off and press Save.

Auto key lock

- 1. In Idle mode, press Menu → Settings → Personalize → Phone settings → Auto key lock.
- Select On or Off and press Select.

Security

The Security feature enables you to restrict the use of your phone by others and to restrict dialed calls. Various codes and passwords are used to protect the features of your phone.

In Idle mode, press Menu → Settings → Personalize → Phone settings → Security and press the Select soft key or the or key.

Lock phone

When the Lock phone feature is enabled, the phone is locked and you must enter the 4- to 8-digit phone password each time the phone is switched on.

Once the correct password is entered, you can use the phone until you switch it off.

In Idle mode, press Menu → Settings → Personalize → Phone settings → Security → Lock phone and press the Select soft key or the ok key.

The following options are available:

- Disable: you are not asked to enter the phone password when you switch on the phone.
- **Enable**: you are required to enter the phone password when you switch on the phone.

Lock applications

With this feature you can lock your applications which provide access to information such as call history, IM, E-mail, Messages, Files, Calendar and To do, Notes, and People. Once you lock the contents, you must enter the phone's password to access the associated menus.

- In Idle mode, press Menu → Settings → Personalize → Phone settings → Security → Lock applications and press the Select soft key or ok.
- Highlight one of the applications or highlight All application and press OK. A check mark displays next to the selection.
- 3. Press Save to save you selections and lock the selected applications.

Change password

The Change password feature allows you to change your current phone password to a new one. You must enter the current password before you can specify a new one.

Once you enter a new password, you are asked to confirm the change by entering the password again.

- In Idle mode, press Menu → Settings → Phone settings → Security → Change password and press the Select soft key or the OK key.
- 2. Enter a password in the Enter new password field and press OK.
- 3. Enter the new password again.

Note: If you change your password, be sure to record it and keep it in a safe place. If you forget your password, contact your Service Provider for assistance.

Check PIN code

When the Check PIN code feature is enabled, you must enter your PIN each time you switch on the phone. Consequently, any person who does not have your PIN cannot use your phone without your approval.

Note: Before enabling or disabling the PIN Check feature, you must enter your PIN.

The following options are available:

- **Disable**: the phone connects directly to the network when you switch it on.
- **Enable**: you must enter the PIN each time the phone is switched on.

Change PIN code

This feature allows you to change your current PIN, provided that the Check PIN code feature is enabled. You must enter the current PIN before you can specify a new one.

Once you enter a new PIN, you are asked to confirm the PIN number by re-entering it.

Set FDN mode

FDN (Fixed Dial Number) mode, if supported by your SIM card, allows you to restrict your dialed calls to a limited set of phone numbers.

The following options are available:

- Disable: you can call any number.
- Enable: you can only call phone numbers stored in Contacts. You must enter your PIN2. You can obtain your PIN2 from T-Mobile's customer service.

Change PIN2 code

The Change PIN2 feature allows you to change your current PIN2 to a new one. You must first enter the current PIN2 (obtained from T-Mobile) before you can specify a new one. Once you enter a new PIN2, you are asked to reenter the new PIN2 to as confirmation.

Note: Not all SIM cards have a PIN2. This menu does not display if your SIM card does not have the PIN2 feature.

USB Mode

In Idle mode, press Menu → Settings → Personalize → Phone settings → USB mode and press the Select soft key or OK.

This menu selects the method of communication for the USB port, the options include:

- Modem: allows you to use the phone as a wireless modem for communication between a computer and the Internet.
- Mass storage: allows you to utilize the onboard storage capacity of the phone to store and upload files. This option allows your
 computer to detect the phone as a removable storage drive.

Note: You are unable to connect to PC Studio when the Mass Storage option is selected.

Memory status

You can check the amount of the memory being used and the memory remaining for Shared memory, IM and E-mail, Messages, Files, Games and Apps, Organizer, and Contacts.

The display shows the total space including the used and free space. You can also view how much space is currently occupied by each message box.

You can also check how many names and numbers are stored on the Phone, on the SIM card, and the FDN list.

- In Idle mode, press Menu → Settings → Personalize → Phone settings → Memory status and press the ok key.
- 2. Select a category from the menu and press the **OK** key to view the memory status for that category.

Messaging key

You can program the Messaging key and use it as a shortcut to your favorite messaging tool. You can reprogram the key at any time.

- Press the Messaging key.
 If this is the first time to program the key an on-screen message provides information about this key.
- 2. Press Next.

- Highlight one of the following options then press Assign:
 - · Create message
 - Inhox
 - Audio postcard
 - F-mail
 - IM

Language

▶ In Idle mode, press Menu → Settings → Personalize → Language and press the Select soft key or the OK key.



This menu allows you to select a display language for Text language and Input mode. Choose from **Automatic**, English, Français, and Español.

Greeting message

▶ In Idle mode, press Menu → Settings → Personalize → Greeting Message and press the Select soft key or the ok kev.

This menu allows you to set a greeting to be displayed briefly when the phone is switched on.

For details about entering characters, see "Entering Text" on page 35.

Time and Date

This menu allows you to change the current time and date displayed.

▶ In Idle mode, press Menu → Settings → Personalize → Time and Date and press the Select soft key or the **ok** key.

The following options are available:

- Time zone updating: allows you to receive time information from T-Mobile's network.
 - Automatic: the phone automatically updates the time and date according to the current time zone using the network service.
 - Manual only: you need to manually set the time and date according to the current time zone using the Set time menu.
 - Prompt first: the phone asks for a confirmation before the update.
- Time zone: displays a selectable list of 30 different time zones. Displays only if Manual only or Prompt first is selected.
- Daylight saying time: allows you to activate or deactivate Daylight Saying Time.
- Time: allows you to change the hour and minute.

- Date: allows you to enter the month, day, and year.
- Time format: allows you to select whether your time displays in either a 12 hour or 24 hour format.
- Date format: allows you to select MM/DD/YYYY, DD/MM/YYYY, or YYYY/MM/DD format.

To change your time and date settings:

- 1. Use the **Up** or **Down** Navigation key to select the option you wish to change.
- To set the Time or Date, edit the field as you would text. For more information, refer to "Using Number Mode" on page 39.
- Enter the desired number.
- 4. To change other options, use the **Left** or **Right** Navigation key to select the desired setting.
- 5. Press Save to save your changes, or Cancel to cancel.

Note: Automatic updates of time and date do not change the time set for alarm settings or calendar memos.

My Account

► From Idle mode, press Menu → Settings → My Account and press the Select soft key or the OK key.

Selecting My Account launches web2go and then displays account specific information such as your current status, current activity, Bill Summary, Plan & Services, Voicemail settings, Find a Retail Store, and FAQ's & Info.

Note: The menus may vary, depending on your web2go subscription.

Help

Help is designed to work with web2go to show you some of the unique features of your phone.

- 1. From Idle mode, press Menu → Settings and press the Select soft key or the ok key.
- 2. Select Help and press the Select soft key or the ok key.

The Help menu displays with the following options available:

- Browse Help Topics: this option gives you a list of different topics from which to choose.
- Enter a Search: this option allows you to search based on a keyword.
- About: this option offers general information about T-Mobile Help including concept and site design, copyright information, and contact e-mail address.

Bluetooth

About Bluetooth

Bluetooth is a short-range wireless communications technology capable of exchanging information over a distance of about 30 feet without requiring a physical connection.

Unlike infrared, you don't need to line up the devices to beam information with Bluetooth. If the devices are within a range of one another, you can exchange information between them, even if they are located in different rooms.

1. From Idle mode, press Menu → Settings → Bluetooth and press the Select soft key or the ok key.

The following Bluetooth options are available:

Turn Bluetooth On/Off

This option allows you to turn Bluetooth On or Off.

▶ Make a selection and press the **Select** soft key or the **⊙** key.

My devices

This option allows you to search for new Bluetooth devices.

▶ Highlight the **Search new device** option and press the **Select** soft key or the **OK** key.

The phone searches for available devices.

My visibility

When the Bluetooth Visibility is turned on, your phone is wirelessly transmitting its phone name and status. This can be useful if you are attempting to connect additional Bluetooth devices. Allowing your phone to promote its visibility can pose a security risk and incite unauthorized connection. This feature should be paired with a Bluetooth security option.

▶ Highlight the option (On/Off/Custom) and Select (Left) soft key or the Key.

My phone name

When your phone's Bluetooth visibility is turned On, it identifies itself using the name entered into this text field. This name can be altered by selecting the pre-existing text and selecting a new text string in its place. This feature should be paired with a Bluetooth security option.

- **2.** Press the key to erase the previous name.
- Use the phone's keypads to enter a new name. The default input entry method is Abc, where the initial character is Uppercase and each consecutive character in that same word is left as lowercase text.
- 4. Press the **Save** soft key or the **OK** key to save the new name.

Security modes

When the Bluetooth Visibility is turned on, your phone is wirelessly transmitting its phone name and status. This transmission can pose a security risk and incite unauthorized connection to your phone. It is recommended that you active your phone's Bluetooth security.

- Highlight On or Off and press the Select soft key or the ok key.

Features

Actually, the Bluetooth specification is a protocol that describes how the short-range wireless technology works, whereas individual profiles describe the services supported by individual devices. Profiles reduce the chance that different devices integrate.

 From Idle mode, press Menu → Settings → Bluetooth → Features and press the Select soft key or the OK key.

The following Service profiles are available:

- Headset: the remote Bluetooth headset enables both incoming and dialed calls.
- Handsfree: the remote Bluetooth car kit enables both incoming and dialed calls.

- Bluetooth stereo headset: used to make calls and listen to music through the Bluetooth stereo headset.
- File transfer: used to transfer files to and from Bluetooth devices.
- Object push: used to exchange personal data (namecards, Contacts contacts, etc.) with Bluetooth devices.
- Basic printing: used to print images, text messages, personal data such as namecards and appointments, etc. through a
 remove Bluetooth printer.
- Dial-up networking: used to provide Internet access for Bluetooth devices through the phone's modem.
- Serial port: used to connect to other Bluetooth devices through a virtual serial port.

Help

This options takes you to the T-Mobile Help menu in web2go.

From Idle mode, press Menu → Settings → Bluetooth → Help and press the Select soft key or the ok key.

Call settings

▶ In Idle mode, press Menu → Settings → Call settings and press the Select soft key or the ok key.

The following options display:

Answer options

This option allows you to set the answering options. The settings determine whether you use the Send key or Any key press to answer a call.

- Press the ok key to make your selection then press the Save soft key to save your new selection. Options include:
 - Send key: answers the call when the Send key is pressed.
 - Any key: answers the call when any key on the keypad is pressed.

Auto redial

In this menu, you can automatically redial the last number if the call was either cut off or you were unable to connect.

- Press the ok key to make your selection then press the Save soft key to save your new selection.
 - Off: keeps the phone from automatically redialing the last number if the call was disconnected or the call was cut off.
 - On: causes the phone to automatically redial the number.

Show my number

In the Show my number menu you can select how your ID is handled when an outgoing call is initiated.

- In Idle mode, press Menu → Settings → Call settings → Show my number and press the Select soft key or the ok key.
- 2. Press ok to make your selection then press the Save soft key to save your new selection. Options include:
 - **Set by network**: uses the default network information to identify you to the other party.
 - **Hide number**: hides your identifying information from the other recipient.
 - Show number: displays your identifying information to the other recipient.

Call forwarding

The T-Mobile network is not functional. Cannot confirm procedure.

This network service enables incoming calls to be re-routed to a secondary number that you specify.

Example: You may wish to forward your business calls to a colleague while you are on holiday.

To set your call forwarding options:

- In Idle mode, press Menu → Settings → Call settings → Call forwarding and press the Select soft key or the ok key.
- Select a call forwarding option and then press the Select soft key or the ok key.

The following options are available:

- . Always: all calls are forwarded until this feature is cancelled.
- If busy: calls are forwarded when you are already on another call.
- If no reply: calls are forwarded when you do not answer the phone.
- If out of reach: calls are forwarded when you are not in an area covered by T-Mobile or when your phone is switched off.
- Cancel all: all call forwarding options are canceled.
- 3. Select Voice calls or Data calls and then press the Select soft key or the owk key. The current status displays. If the option was already set, the number to which the calls are forwarded displays.
- Activate Call forwarding.
 - The Forward to field activates.
- Enter the number in which to forward the calls in the Forward to text box and press the Select soft key or the ok key.

Tip: To enter an international code, press and hold the employed key until the + sign displays.

- 6. To deactivate call forwarding, select **Deactivate** by using the **Left** or **Right** Navigation key.
- 7. When you select If No reply in step 2, select the length of time the network waits for before forwarding a call. The phone sends your settings to the network and the network's acknowledgement displays.

Call barring (SIM Card Dependent)

Call Barring allows you to restrict specific types of incoming and dialed calls on your phone. This is useful if you allow someone to use your phone for a short period of time.

Call waiting

This network service informs you when someone is trying to reach you during another call.

You can specify individual call waiting options for voice calls and/or data calls.

To set your call waiting options:

- 2. Select Voice calls, or Data calls and press the Select soft key or the ok key.
- Highlight Deactivate or Activate and press the Select soft key or the OK key.
 Call waiting is either activated or deactivated for that type of call.
- Select the Cancel all option to deactivate Call waiting on all voice and data calls.

Management

This menu allows you to manage your call logs. You can view time logs for all call made and received, as well as delete call history.

Call time

This menu lets you view the time log for calls both made and received.

Important!: The actual time invoiced by T-Mobile may differ from times displayed due to network features and service plan.

In Idle mode, press Menu → Settings → Call settings → Management → Call time and press the Select soft key or OK.

The following time logs are available:

- . Last call time: shows the length of your last call.
- Total outgoing: shows the total length of all calls you have made since the timer was last reset.
- Total incoming: shows the total length of all calls you have received since the timer was last reset.
- Life time: shows the total length of time for both incoming and dialed calls. The length of call time must be at least 1 minute to
 increment this field. This information cannot be cleared.

Delete all history

This menu allows you to delete all of the call history, or you can delete missed calls, dialed calls, or answered calls.

- 1. In Idle mode, press Menu → Settings → Call settings → Management and press the Select soft key or OK.
- Select Delete all history and press the Select soft key or OK.
- Highlight one of the following options, then press OK.
 A check mark displays next to your selection(s).
 - All calls: deletes all call history.
 - · Missed calls: deletes all missed call history.
 - Dialed calls: deletes all dialed call history.
 - · Answered calls: deletes all answered call history.
- 4. Press Delete to delete the selected records.

Menu Design

In this menu you can select whether to display the Idle screen in Circle view or Grid view.

Advanced

Advanced features allow you to select and manage your networks, update software, and reset all your settings.

▶ In Idle mode, press Menu → Settings → Advanced and press the Select soft key or the Key.

Network

The Network feature enables you to automatically or manually select the network used when roaming outside of your home area.

Note: You can select a network other than your home network only if there is a valid roaming agreement between the two.

To change the Network Selection mode:

- In Idle mode, press Menu → Settings → Advanced → Network and press the Select soft key or the ok key.
- 2. Select **Search now** and press the **Select** soft key or the **OK** key.
- Highlight the network to which you want to connect and press the Select soft key or the ok key.
 The phone scans for that network and, if available, you are connected.

To change your Default setup:

- 1. Select **Default setup** and press the **Select** soft key or the **OK** key.
- Highlight one of the following options and press the Select soft key or the ok key:
 - Automatic: you are connected to the first available network when roaming.
 - Manual: the phone begins searching for available networks. Press the Up or Down Navigation key until the network you want highlights and then press the Select soft key or the ok key.
 The phone scans the selected network and attempts to connect. If a connection is available, you are connected.

Software Update

The Software Update feature enables you to use your phone to connect to the network and upload any new phone software directly to your phone.

- In Idle mode, press Menu → Settings → Advanced → Software update and press the Select soft key or the
 (ok) key.
- 2. Follow the on-screen instructions.

Reset settings

From this menu you can reset your phone and sound settings to the default settings.

The following options are available:

- All: Phone, Display, Sound, Bluetooth, and Call settings are returned to default values.
- Phone settings: only phone settings are returned to default values.
- Display settings: only display settings are returned to default values.
- Sound settings: only sound settings are returned to default values.
- Bluetooth settings: only Bluetooth settings are returned to default values.
- Call settings: only Call settings are returned to default values.

To reset your settings:

- In Idle mode, press Menu → Settings → Reset settings and press the Select soft key or the okl key.
- 2. Highlight one of the options or highlight All and press the ok key to place a check mark next to the option.

- 3. Press Reset.
- 4. At the Reset settings? prompt, press Yes to reset the selection or No to cancel.

Master reset

From this menu you can reset your phone and sound settings to the factory default settings.

- In Idle mode, press Menu → Settings → Reset settings → Master reset and press the Select soft key or the ok key.
- 2. Select one of the following options:
 - Clear user data: deletes all the information saved to the phone including Picture messages and contact entries.
 - Restore settings: changes your device settings to factory default values.
 - Restore and clear: restores your device to factory default settings.
- Enter six zeros into the field on the screen and press OK.The selected category resets.

Section 10: Organizer

This section outlines the various applications that are available on your phone.

Organizer

The Organizer allows you to set alarms, schedule appointments, view the calendar, create Tasks, perform simple math calculations, check world time, perform unit conversions, set a timer, and use a stopwatch.

Calendar

With the Calendar feature, you can:

- · Consult the calendar by month, week, or day.
- · Set schedules and note anniversaries
- Write memos to keep track of your schedule.
- Set an alarm to act as a reminder, if necessary.
- · Check your memory status.

To navigate to the Calendar:

1. In Idle mode, press Menu → Organizer → Calendar and press the Select soft key or OK.



When you select the **Calendar** menu, the following options are available:

Month view

When you select this option, the calendar displays the selected month with today's date highlighted.

At the bottom of the calendar, the following icons are displayed along with the number of entries for each:



The number of entries next to each icon reflects the number of entries for the selected day on the calendar.

The following options are available when you press the **Options** soft key:

- **View mode**: displays the Day view or Week view for the selected day.
- **Create new**: allows you to create a Schedule, Anniversary, Miscellaneous, or To do.
- **Go to**: takes you to the Today's date or the date you entered.
- Delete: allows you to delete all events for a selected date, delete all events for a specified period, delete all events for this month.
 You can also delete all events.

Week view

When you select this option, the calendar displays the selected week with today's date and time highlighted. The following options are available when you press the **Options** soft key:

- View mode: takes you to the Day view or Month view for the selected day.
- Create new: allows you to create a Schedule, Anniversary, Miscellaneous, or To do.
- Go to: takes you to today's date or the date you entered.
- Delete: allows you to delete all events for a selected date, delete all events for a specified period, delete all events for this week.
 You can also delete all events.

Day view

When you select this option, the Day view displays the selected day with any events listed.

- 1. Press **Options** to view the following options:
 - Create new: allows you to create a Schedule, Anniversary, Miscellaneous, or To do.
 - Send via: allows you to send this event via Message, E-mail or to a Bluetooth enabled device.
 - View mode: allows you to choose between Month, or Week view.
 - **Delete**: allows you to delete the selected event, or delete all events.
 - Print via Bluetooth: allows you to send the selected image to a Bluetooth enabled device.
- 2. Press View ok to view the information about the selected event.

Schedule

This option allows you to write memos to a schedule.

- 1. In Idle mode, press Menu → Organizer → Calendar → Schedule and press the ok key.
- 2. Press Options → Create new and press the Select soft key or the ok key.
- 3. Enter the subject in the **Subject** text box then press the **Down** soft key.

- Continue to enter other information including Details, Start date, Start time, AM/PM, End date, End time, AM/PM, Location, Alarm, before, Alarm tone, Repeat and until.
- 5. Press Save OK. Your Schedule information saves to the Calendar.

Anniversary

This option allows you to record Anniversaries in your calendar. You can also set an alarm to remind you of important anniversaries.

- 1. In Idle mode, press Menu \rightarrow Organizer \rightarrow Calendar \rightarrow Anniversary and press the $\bigcirc \kappa$ key.
- 2. Press Options → Create new and press the Select soft key or the ok key.
- Enter the occasion in the Occasion text box then press the Down soft key.
- Continue to enter other information including Date, Alarm, before, Alarm time, AM/PM, Alarm tone, and Repeat every year.
- 5. Press Save OK . Your Anniversary information saves to the Calendar.

Miscellaneous

This option allows you to record miscellaneous dates or events in your calendar.

- In Idle mode, press Menu → Organizer → Calendar → Miscellaneous and press the
 OK
 key.
- 2. Press Options → Create new and press the Select soft key or the ok key.
- 3. Enter the subject in the **Subject** text box then press the **Down** soft key.
- Continue to enter other information including Details, Start date, Start time, AM/PM, End date, End time, AM/PM, Alarm, before, and Alarm tone.
- 5. Press Save OK. Your Miscellaneous information is then saved to the Calendar.

Missed alarm events

You can display all the events where an alarm was set, but was not turned off.

 In Idle mode, press Menu → Organizer → Calendar → Missed alarm events and press the Select soft key or the ok key.

- 2. To view event information, highlight an event and press the ok key.
 - The missed alarm event information displays.
- To acknowledge and remove the event, press the Confirm soft key or the ok key. The event is removed from the Missed alarm events menu.

Memory status

This menu item shows the number of calendar events you presently have and how many more you memory space for. It displays your events such as Schedule, Anniversary, and Miscellaneous.

In Idle mode, press Menu → Organizer → Calendar → Memory status and press the Select soft key or the lock key.

Alarm

This feature allows you to:

- Set up to 3 alarms to ring at specified times.
- Set the phone to switch on automatically and ring the alarm even if the phone is switched off.

The following options are available:

- Alarm1: set the day, time, and tone for this alarm.
- Alarm2: set the day, time, and tone for this alarm.
- Alarm3: set the day, time, and tone for this alarm.
- Auto power-up: alarm rings at the specified time even if the phone is turned off.
 If the option is set to Off and the phone is switched off at the specified time, the alarm does not ring.

To set the alarm:

- In Idle mode, press Menu → Organizer → Alarm and press the Select soft key or the (ok) key.
- 2. Select an alarm and press the **Select** soft key or the **OK** key.
- 3. Press the Right navigation key to set Alarm to On.
- 4. Press the **Down** key to highlight the **Alarm time** option. Enter the time you want the Alarm to sound.
- 5. Press ok to toggle to pm. When you highlight am (the default) pm displays and is assigned to the ok key.

- 6. Press the **Down** key to highlight the Alarm day checkboxes. Press the **Down** key to display a list of days.
- Press ok to place a checkmark next to the days you want the alarm to sound. To place or remove a check mark, press the ok key. Press the ok soft key to confirm your selections.
- Press the **Down** key to highlight the **Alarm tone** option. Press the **OK** key to display a list of Basic alarm tones.

Tip: Press the Left or Right Navigation key to toggle to Basic Alarm, Default melodies, Voice list, Sounds, or Music. Any of these tones or melodies can be used as the alarm tone.

- 9. Highlight a default alarm tone or melody and press Select.
- 10. Press Save to confirm your settings or Cancel to return to the Alarm screen.
- **11.** Press the key to return to Idle mode.

Note: Your phone is preset to a 12-hour format. To change the time format, see "Time and Date" on page 96.

12. To stop the alarm when it rings, press any key or press the **Snooze** soft key.

To do

This feature allows you to enter a To do list.

- ▶ In Idle mode, press Menu → Organizer → To do and press the Select soft key or the ok key.
 - 1. Press **OK** to create a new To do item.
 - 2. Enter a short description of the item in the **To do** text box then press the **Down** Navigation key.
 - Continue to enter other information including Start date, Due date, Priority, Alarm, before, Alarm time, AM/PM, and Alarm tone.
 - 4. Press Save when you are finished. Your Task list saves to the Calendar.

Editing the To do list

When you select the To do list menu, the current contents display with a status checkbox and a priority marker. If the item was done, a check displays in the checkbox.

- 1. In Idle mode, press Menu → Organizer → To do and press the Select soft key or the ok key.
- 2. Highlight a task from the list, then press View ok.
- 3. Highlight a field to edit and press Edit OK.
- 4. Edit the items you wish to change and press Save ok when your edits are complete.

Notes

This option allows you to create notes to add to your events.

- 1. In Idle mode, press Menu → Organizer → Notes and press the Select soft key or the ok key.
- Press **0K** to create a new note. A blank Notes screen displays.
- 3. Enter your text and press Save OK.

Calculator

With this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions; addition, subtraction, multiplication, and division.

- 2. Enter the first number using the numeric keys.
- 3. Use the Navigation keys to select the calculation method, according to the illustration on the display.
- 4. Enter the second number using the numeric keys.

Note: The em key is used for the decimal. The em key is also used to create brackets.

- 5. Press the ok key to view the result.
 - Repeat steps 1 to 4 as many times as required.
- Press Options and select a math function from the list or select Go to Converter to display the Unit conversion screen.

Tip calculator

This feature provides the percentage amount for tip. Use the following procedures to calculate a tip amount.

- In Idle mode, press Menu → Organizer → Tip calculator and press the Select soft key or the ok key.
- In the Bill field, enter the check amount. 2.

Note: To enter the decimal point for the exact dollar amount, use the seekey.

Use the **Down** Navigation key to highlight **Tip(%)** percentage. 15 is the default value but you can change this value.

The **Tip(\$)** field value calculates according to the values entered.

- Use the **Down** Navigation key to move to the **# paying** field to change the number of people contributing to the tip amount.
- The **You pay** field displays the total for each individual.

World Time

This feature allows you to find out what time it is another part of world, using the **Left** and **Right** Navigation keys.

There are two time lines available. You can set the first setting to your home city and then use the second setting to check other city times.

- In Idle mode, press Menu → Organizer → World time and press the Select soft key or the ok key. 1.

- Press the Left or Right Navigation key to locate the desired time zone. 2.
- Press **Set DST** to view Daylight Saving Time for the selected time zone. 3.

Unit conversion

The conversion menu provides the following conversion categories:

- Currency
- Length
- Weight
- Volume
- Area
- Temperature

To convert a currency, length, weight, volume, area, or temperature, do the following:

- 1. In Idle mode, press Menu → Organizer → Unit conversion and press the Select soft key or the ok key.
- 2. Scroll to the conversion feature you wish to use and press the **Select** soft key or the **OK** key.
- Use the Up, Down, Left, and Right navigation keys to select the From and To units of measure for the quantity you want converted.

Note: To include a decimal point, press the same key.

4. Press the Back soft key to return to the Unit conversion menu.

Timer

You can use this menu to set a timer. To enable the Timer, use the following options:

- In Idle mode, press Menu → Organizer → Timer and press the Select soft key or the |OK| key.
- 2. Press the Set soft key and enter the length of time as HH:MM and press OK.
- 3. Press **Start OK** key to start the timer. Press **Stop OK** to stop the timer.
- 4. Press Reset to reset the counter and enter a new time.
 - Press when you are finished.

Stopwatch

This feature allows you to use a stopwatch. Press **Start** (or key to start the stopwatch. Press **Reset** to erase all previously recorded stopwatch times. Press **Lap** (or key to view the lap time. You can view up to 3 lap times.

Section 11: Camera

This section explains how to use the camera on your phone. You can take photographs by using the built-in camera functionality.

Using the Camera

Using the camera module in your phone, you can take photos of people or events while on the move. Additionally, you can send these photos to other people in a Picture Messaging message or set a wallpaper or picture ID image.

Note: Do not take photos of people without their permission.

Do not take photos in places where cameras are not allowed.

Do not take photos in places where you may interfere with another person's privacy.

Take Photo

Your camera produces photos in JPEG format.

Note: When you take a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

1. In Idle mode, press Menu → Media → Photos and press the Select soft key or the ok key.

Tip: Press the Camera key on the right side of the phone as a shortcut access to the camera module.

- 2. Highlight Take photo and press the Select soft key or the key.
- Adjust the image by aiming the camera at the subject.
- Press the Left soft key to access the camera options. For details, see "Configuring Camera Options" on page 117.

Tip: You can use the keypad to quickly change the camera options.

Press the Camera key or ok key to take the photo.The photo automatically saves to the Photos folder.

Note: To change the default destination for your pictures, press the Options soft key when Send to: My Album Online? displays on the screen. Highlight the Default destination option and the Change option. You can then change your default destination to Recent recipients, Contacts, PHone number, E-mail address, or My Album Online.

- 6. Press Options to view the following options:
 - Take another: allows you to take another picture.
 - Send to: allows you to send this photo to Recent recipients, Contacts, New recipient, or My Album Online.
 - **Send in Message**: allows you to send this photo as a picture message.
 - Default destination: allows you to Remove a current destination location or Change the current location by establishing a new
 folder in which to send the photo(s). Select from the following options: Recent recipients, Contacts, Phone number, E-mail
 address. or Mv Album Online.
 - Set as: allows you to set this photo as myFaves icon, Wallpaper, or a Picture ID.
 - Go to Photos: displays the Photos folder.
 - **Delete**: allows you to delete this photo.
- 7. Press the Add voice soft key to add a voice note to this photo.
- 8. Press the **Stop** soft key when you are finished recording the voice message.
- **9.** Press **Send to** send this message to one of the following:
 - Recent recipients: allows you to send to one of the recent recipients.
 - **Contacts**: allows you to select a recipient from the contacts.
 - **New recipient**: allows you to enter the phone number or the E-mail address for a new recipient.
 - My Album: sends the message to My Album.
- 10. To return to Capture mode, press the Back soft key.
- 11. Press the Yes soft key to send the photo the My Album Online.
- 12. Press the Options soft key and select Take another.
- 13. Press ok to take another picture.
- **14.** Press to return to the Idle mode.

Configuring Camera Options

1. In Capture mode, press **Menu** to use various options for the camera module.

The following options are available:

- Camera/Camcorder: allows you to take a picture or record a video.
- Shooting Mode: takes a photo in various modes. Once you change the mode, the corresponding indicator displays at the top left of the display.
 - Single shot: takes a single photo and allows you view it before returning to the shooting mode.
 - Multi-shot takes a succession of consecutive photos.
 - **Mosaic shot** takes up to four photos and then groups them together into a single final photo.
- Size: allows you to set the image size to either: 1280x1024, 1024x768, 800x600, 640x480, 320x240 and 220x165. The selected image size displays on the capture screen.
- Timer: allows you to set a time delay before the camera takes the photo. Select the length of delay you want, selections are: Off,
 3 seconds, 5 seconds, or 10 seconds. When you press the Camera key or okey, the camera takes the photo after
 the specified time has elapsed.
- White balance: allows you to set this option from the following choices: Auto, Daylight, Incandescent, Fluorescent, or Cloudy.
- Effects: allows you to change the color tone or apply special effects to the photo.
 - Options include: No effects, Black & White, Negative, Sepia, Emboss, Sketch, Antique, Moonlight, and Fog.
- Default destination: allows you to Remove a current destination location or Change the current location by establishing a new
 folder in which to place the photo(s). Select from the following options: Recent recipients, Contacts, Phone number, E-mail
 address. or My Album Online.
- Shortcuts: allows you to view a quick list of shortcuts such as Mode, Shooting mode, Timer and Viewfinder mode.
- Settings:
 - General settings: There are two types of general settings: Zoom sound (creates a sound when you zoom the camera) and Brightness sound (creates a sound when you adjust the brightness). You can activate (turn On) or deactivate (turn Off) these sounds.
 - Camera settings: consist of the following:
 - Shutter sound: allows you to select a tone to play when the camera's shutter opens and closes. Sound selections are Shutter1, Shutter2, and Shutter3.
 - Viewfinder mode: allows you to set the view finder to Full screen, Full screen & Indicator, or Full screen & Guideline.
 - Scene program: allows you to set the camera options to capture normal or night scene.
 - Exposure metering: allows you to set how the camera measures or meters the light source: Normal, Center-weighted, or Spot.
 - Single shot: allows you to select whether you want the single shot option set to Take and Send or Take and Preview.

Camera Shortcuts

You can change options using your keypad in capture mode. The following short cuts are available:



takes the photograph.



 
Up volume key zooms in.



Down volume key zooms out.



Up and Down navigation keys zoom in and out.





toggles between camera and video mode.



takes a photo in various modes. Also displays custom frame borders for your photo.



sets the delay timer.



changes the viewfinder mode.

Photos

In Capture mode, press the Photos soft key.

When you access this menu, your phone displays the photos in Line view, which shows them as small images. Use the Navigation keys to scroll through the photos.

- To view the photos on the full screen, press the ok key. To go back to Line view, press the Back soft key or the key.
- Press the **Options** soft key to use the following options:
 - Send to Mv Album: allows you to send your photos to Mv Album.
 - Send via: allows you to send the selected photo as a Picture message. E-mail, or to a Bluetooth enabled device.
 - Set as: allows you to set the photo as, myFaves icon, Wallpaper or as a Picture ID.

- **Delete**: allows you to deleted the selected image, or multiple images.
- **Default destination**: allows you to Change or Remove where your photos are sent after you take them.
- Move to memory card: allows you to move the selected photo or multiple photos to the memory card.
- Copy to memory card: allows you to copy the selected photo or multiple photos to the memory card.
- Edit image: allows you to edit the selected image.
- **Rename**: allows you to rename the photo.
- Display mode: allows you to view photos in Line view or Thumbnail view.
- Slide Show: allows you to see all of your photos in a slide show presentation. Choose from 1 or 3 seconds intervals.
- Bluetooth visibility: allows you to enable the selected photo or multiple photos so they are visible to other Bluetooth devices.
- **Print via Bluetooth**: allows you to send the selected photo to a Bluetooth enabled printer.
- Lock/Unlock: allows you to lock the photo to protect it from deletion, or unlock it to allow deletion.
- Properties: shows the properties of the photo, such as the name, date, format, resolution, size, and lock/unlock.

Deleting a Photo

You can delete photos one by one or all at one time.

- 1. From the **Photos** menu, highlight the photo you want to delete.
- 2. Press the **Options** soft key and select **Delete** then press **OK**.
- 3. Press the Yes soft key to confirm the deletion.
- 4. Press the **Back** soft key to until you return to Idle mode.

Record video

Tip: When shooting video in direct sunlight or in bright conditions, it is recommended that you provide your subject with sufficient light by putting the light source behind you.

- In Idle mode, press Menu → Media → Videos and press the Select soft key or the ok
- 2. Select Record video and press the Select soft key or the ok key.
- 3. Before filming the video, press **Menu** to access camcorder options (see below).
- Adjust the image by aiming the camera at the subject.

- Press the ok key to begin shooting video.
- Press the Stop soft key or ok to stop the recording.Your video saves to the Videos folder
- 7. Once the file saves, press the ok key to play back your video for review.

Camcorder Options

- 1. Press the **Left soft** key to access the camcorder options.
 - Camera/Camcorder: allows you to take a picture or record a video.
 - Limit: allows you to select No limit, Limit for message, or Limit for e-mails.
 - Size: allows you to set the video size to either: 176x144, 160x120 or 128x96. The selected image size displays on the capture screen.
 - Timer: allows you to set a time delay before the video starts to record. Select the length of delay you want (Off, 3 seconds, 5 seconds, or 10 seconds) and press the Select soft key. When you press the ok, the video begins recording after the specified time has elapsed.
 - · White balance: allows you to set this option from the following choices: Auto, Daylight, Incandescent, Fluorescent, or Cloudy.
 - Effects: allows you to change the color tone or apply special effects to the photo. Options include: No Effects, Black & White, Negative, Sepia, Emboss, Sketch, Antique, Moonlight, and Fog.
 - Sound: allows you to turn audio On or Off.
 - Default destination: allows you to Remove a current destination location or Change the current location by establishing a
 new folder in which to place the videos.
 - Shortcuts: allows you to view a guick list of shortcuts such as Mode, Recording mode, and Timer.
 - General settings: allows you to turn the Zoom and Brightness sound On or Off.
- Press Back to return to the picture viewer.

Tip: You can use the keypad to quickly change the camera options using the camera shortcut keys. For more information about Camcorder Shortcut Keys see "Camcorder Shortcuts" on page 121.

Camcorder Shortcuts

chaote vidoo

Shortcut keys allow you to change options using your keypad, Navigation keys, and Volume key in capture mode. The following options are available.

OK	Silous video.
	Up and Down navigation keys zoom in and out.
	Left and Right navigation keys adjust the image brightness.
1 00 ER	switches the handset between camcorder and camera mode.
TY	changes the recording mode.

allows you to set a time delay before the camera takes the video.

Videos

In Idle mode, press Menu → Media → Videos → Videos and press the Select soft key or the OK
 When you access this menu, your phone displays the videos in Line view, which shows them as small images.
 Use the Navigation keys to scroll through the photos.

In this menu, you can view a list of videos downloaded from the web server or received in multimedia messages. You can select a video clip from your Videos folder by scrolling to the video you want to view, highlighting a video and pressing the **Options** soft key to choose from the following options:

- Send to My Album: allows you to send your videos to My Album.
- Send via: sends the video using a Picture message, E-mail, or to a Bluetooth enabled device.
- Delete: deletes the selected video or multiple videos.
- Default destination: allows you to change where your videos are sent after you take them: Recent recipients, Contacts, Phone number, Email address, or My Album Online.
- Move to memory card: allows you to move the Selected or Multiple videos to the Memory card.

- Copy to memory card: allows you to copy the Selected or Multiple videos to the Memory card.
- Rename: changes the name of the video.
- Display mode: allows you to view the pictures in Line view or Thumbnail view.
- Bluetooth visibility: allows you to enable this video so it is visible to selected, or multiple Bluetooth devices.
- Lock/Unlock: allows you to lock the video to protect it from deletion, or unlock it to allow deletion.
- Properties: shows the properties of the video, such as the Name, Date, Format, Resolution, Size, Length, Quality, and Lock/Unlock.

My Album

My Album is a private online picture album that you can use to store and share pictures, videos, voice messages, and text.

Use the following procedures to access My Album.

Note: When accessing My Album, charges may apply. The feature is not activated until you send your first image to the remote My Album location.

- In Idle mode, press Menu → Media → Photo and press the Select soft key or the ok key.
- Select My Album and press the Select soft key or the ok key. The web2go browser launches and the T-Mobile Web page displays.
- 3. Scroll down to the My Album link and press the Select soft key or the ok key.
- 4. Select the My Albums Menu link and press the Select soft key or the ok key.
- 5. Photos sent to this folder are stored in the Inbox Album. Press the Select soft key to view the photos.
- **6.** Press the key to exit web2go and return to the Idle screen.

Section 12: Health and Safety Information

This section outlines the safety precautions associated with using your phone. These safety precautions should be followed to safely use your phone.

Health and Safety Information

Exposure to Radio Frequency (RF) Signals

Certification Information (SAR)

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the exposure limits for radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. government.

These FCC exposure limits are derived from the recommendations of two expert organizations, the National Counsel on Radiation Protection and Measurement (NCRP) and the Institute of Electrical and Electronics Engineers (IEEE).

In both cases, the recommendations were developed by scientific and engineering experts drawn from industry, government, and academia after extensive reviews of the scientific literature related to the biological effects of RF energy.

The exposure limit set by the FCC for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR is a measure of the rate of absorption of RF energy by the human body expressed in units of watts per kilogram (W/kg). The FCC requires wireless phones to comply with a safety limit of 1.6 watts per kilogram (1.6 W/kg).

The FCC exposure limit incorporates a substantial margin of safety to give additional protection to the public and to account for any variations in measurements.

SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each model phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this phone has been tested and meets FCC RF exposure guidelines when used with an accessory that contains no metal and that positions the handset a minimum of 1.5 cm from the body.

Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

The FCC has granted an Equipment Authorization for this mobile phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. The maximum SAR values for this model phone as reported to the FCC are:

• Head: 1.05 W/Kg.

· Body-worn: 0.956 W/Kg.

SAR information on this and other model phones can be viewed online at http://www.fcc.gov/oet/ea. To find information that pertains to a particular model phone, this site uses the phone FCC ID number which is usually printed somewhere on the case of the phone.

Sometimes it may be necessary to remove the battery pack to find the number. Once you have the FCC ID number for a particular phone, follow the instructions on the website and it should provide values for typical or maximum SAR for a particular phone. Additional product specific SAR information can also be obtained at www.fcc.gov/cgb/sar.

Samsung Mobile Products and Recycling

Samsung cares for the environment and encourages its customers to recycle Samsung mobile phones and genuine Samsung accessories.

Go to: https://fun.samsungmobileusa.com/recycling/index.jsp for more information.

UL Certified Travel Adapter

The Travel Adapter for this phone has met applicable UL safety requirements. Please adhere to the following safety instructions per UL guidelines.

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE.

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS.

DANGER - TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS.

FOR CONNECTION TO A SUPPLY NOT IN NORTH AMERICA, USE AN ATTACHMENT PLUG ADAPTOR OF THE PROPER CONFIGURATION FOR THE POWER OUTLET. THIS POWER UNIT IS INTENDED TO BE CORRECTLY ORIENTATED IN A VERTICAL OR HORIZONTAL OR FLOOR MOUNT POSITION.

Consumer Information on Wireless Phones

The U.S. Food and Drug Administration (FDA) has published a series of Questions and Answers for consumers relating to radio frequency (RF) exposure from wireless phones. The FDA publication includes the following information:

What kinds of phones are the subject of this update?

The term wireless phone refers here to hand-held wireless phones with built-in antennas, often called "cell," "mobile," or "PCS" phones. These types of wireless phones can expose the user to measurable radio frequency energy (RF) because of the short distance between the phone and the user's head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies.

When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person's RF exposure decreases rapidly with increasing distance from the source. The so-called "cordless phones," which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures well within the FCC's compliance limits.

Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radio frequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the stand-by mode. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radio frequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- . Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some interagency working group activities, as well.

FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones.

FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than those they can get from wireless phones.

Base stations are thus not the primary subject of the safety questions discussed in this document.

What are the results of the research done already?

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radio frequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be pre-disposed to develop cancer in absence of RF exposure. Other studies exposed the animals to RF for up to

22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don't know with certainty what the results of such studies mean for human health.

Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phones RF exposures.

However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

What research is needed to decide whether RF exposure from wireless phones poses a health risk?

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but ten or more years' follow-up may be needed to provide answers about some health effects, such as cancer.

This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held. or which model of phone is used.

What is FDA doing to find out more about the possible health effects of wireless phone RF?

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radio frequency energy (RF).

FDA has been a leading participant in the World Health Organization international Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues.

FDA and Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations.

CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

What steps can I take to reduce my exposure to radio frequency energy from my wireless phone?

If there is a risk from these products - and at this point we do not know that there is - it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radio frequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

If you must conduct extended conversations by wireless phone every day, you could place more distance between your body
and the source of the RF, since the exposure level drops off dramatically with distance. For example, you could use a headset
and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna.

Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

What about children using wireless phones?

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radio frequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure.

Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000.

They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

Do hands-free kits for wireless phones reduce risks from exposure to RF emissions?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that hands-free kits reduce risks. Hands-free kits can be used with wireless phones for convenience and comfort. These systems reduce the absorption of RF energy in the head because the phone, which is the source of the RF emissions, will not be placed against the head. On the other hand, if the phone is mounted against the waist or

other part of the body during use, then that part of the body will absorb more RF energy. Wireless phones marketed in the U.S. are required to meet safety requirements regardless of whether they are used against the head or against the body. Either configuration should result in compliance with the safety limit.

Do wireless phone accessories that claim to shield the head from RF radiation work?

Since there are no known risks from exposure to RF emissions from wireless phones, there is no reason to believe that accessories that claim to shield the head from those emissions reduce risks. Some products that claim to shield the user from RF absorption use special phone cases, while others involve nothing more than a metallic accessory attached to the phone. Studies have shown that these products generally do not work as advertised. Unlike "hand-free" kits, these so-called "shields" may interfere with proper operation of the phone. The phone may be forced to boost its power to compensate, leading to an increase in RF absorption. In February 2002, the Federal trade Commission (FTC) charged two companies that sold devices that claimed to protect wireless phone users from radiation with making false and unsubstantiated claims.

According to FTC, these defendants lacked a reasonable basis to substantiate their claim.

What about wireless phone interference with medical equipment?

Radio frequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a compatible phone and a compatible hearing aid at the same time. This standard was approved by the IEEE in 2000.

FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.

Additional information on the safety of RF exposures from various sources can be obtained from the following organizations (Updated 12/9/2008):

- FCC RF Safety Program:
 - http://www.fcc.gov/oet/rfsafety/
- Environmental Protection Agency (EPA): http://www.epa.gov/radiation/
- Occupational Safety and Health Administration's (OSHA): http://www.osha.gov/SLTC/radiofrequencyradiation/index.html
- National Institute for Occupational Safety and Health (NIOSH): http://www.cdc.gov/niosh/homepage.html
- World Health Organization (WHO):
 - http://www.who.int/peh-emf/
- International Commission on Non-Ionizing Radiation Protection: http://www.icnirp.de
- Health Protection Agency: http://www.hpa.org.uk/radiation
- US Food and Drug Administration: http://www.fda.gov/cellphones

Road Safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips:

- Get to know your wireless phone and its features, such as speed dial and redial. If available, these features
 help you to place your call without taking your attention off the road.
- When available, use a hands-free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.
- Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.

- 4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
- Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.
- 6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
- Use your wireless phone to call for help. Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies.
- 9. Use your wireless phone to help others in emergencies. If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.
- 10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency number.

"The wireless industry reminds you to use your phone safely when driving."

For more information, please call 1-888-901-SAFE, or visit our web-site www.ctia.org.

Important!: If you are using a handset other than a standard numeric keypad, please call 1-888-901-7233.

Provided by the Cellular Telecommunications & Internet Association.

Responsible Listening

Caution!: Avoid potential hearing loss.

Damage to hearing occurs when a person is exposed to loud sounds over time. The risk of hearing loss increases as sound is played louder and for longer durations. Prolonged exposure to loud sounds (including music) is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, such as portable music players and cellular telephones, at high volume settings for long durations may lead to permanent noise-induced hearing loss. This includes the use of headphones (including headsets, earbuds, and Bluetooth or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound and distorted hearing.

Individual susceptibility to noise-induced hearing loss and potential hearing problem varies. Additionally, the amount of sound produced by a portable audio device varies depending on the nature of the sound, the device settings, and the headphones that are used. As a result, there is no single volume setting that is appropriate for everyone or for every combination of sound, settings and equipment.

You should follow some commonsense recommendations when using any portable audio device:

- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to
 you can hear what you are listening to.
- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy
 environment, use noise-cancelling headphones to block out background environmental noise. By blocking background
 environment noise, noise cancelling headphones should allow you to hear the music at lower volumes than when using
 earbuds.
- Limit the amount of time you listen. As the volume increases, less time is required before you hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as rock concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech or
 experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your
 doctor.

You can obtain additional information on this subject from the following sources:

American Academy of Audiology

11730 Plaza American Drive, Suite 300

Reston, VA 20190

Voice: (800) 222-2336

Email: info@audiology.org

Internet: http://www.audiology.org

National Institute on Deafness and Other Communication

Disorders

National Institutes of Health

31 Center Drive, MSC 2320

Bethesda, MD 20892-2320

Email: nidcdinfo@nih.gov

Internet: http://www.nidcd.nih.gov/

National Institute for Occupational Safety and Health (NIOSH)

395 E Street, S.W.

Suite 9200

Patriots Plaza Building Washington, DC 20201

Voice: 1-800-35-NIOSH (1-800-356-4647)

1-800-CDC-INFO (1-800-232-4636)

Outside the U.S. 513-533-8328

Email: cdcinfo@cdc.gov Internet: http://www.cdc.gov 1-888-232-6348 TTY

Internet: http://www.cdc.gov/niosh/topics/noise/

default.html

Operating Environment

Remember to follow any special regulations in force in any area and always switch your phone off whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder if you are using an external antenna).

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Implantable Medical Devices

A minimum separation of six (6) inches should be maintained between a handheld wireless phone and an implantable medical device, such as a pacemaker or implantable cardioverter defibrillator, to avoid potential interference with the device.

Persons who have such devices:

- Should ALWAYS keep the phone more than six (6) inches from their implantable medical device when the phone is turned ON;
- · Should not carry the phone in a breast pocket;
- Should use the ear opposite the implantable medical device to minimize the potential for interference;
- Should turn the phone OFF immediately if there is any reason to suspect that interference is taking place;
- Should read and follow the directions from the manufacturer of your implantable medical device. If you have any questions
 about using your wireless phone with such a device, consult your health care provider.

For more information see:

http://www.fcc.gov/oet/rfsafety/rf-fags.html

Hearing Aid Compatibility with Mobile Phones

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch your phone off in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted Facilities

Switch your phone off in any facility where posted notices require you to do so.

Potentially Explosive Environments

Switch your phone off when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch the phone off while at a refueling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency Calls

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

- 1. If the phone is not on, switch it on.
- Key in the emergency number for your present location (for example, 911 or other official emergency number). Emergency numbers vary by location.
- 3. Press the key.

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

Restricting Children's access to your Phone

Your phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

FCC Notice and Cautions

FCC Notice

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association:

NFPA (National Fire Protection Agency)

1 Batterymarch Park

Quincy, Massachusetts

USA 02169-7471

Internet: http://www.nfpa.org

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment, and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and void the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Other Important Safety Information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be
 dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.

- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both
 installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is
 improperly installed and the air bag inflates, serious injury could result.
- Switch your phone off before boarding an aircraft. The use of wireless phone in aircraft is illegal and may be dangerous to the aircraft's operation.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Product Performance

Getting the Most Out of Your Signal Reception

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current signal strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

Understanding the Power Save Feature

If your phone is unable to find a signal after searching, a Power Save feature is automatically activated. If your phone is active, it periodically rechecks service availability or you can check it yourself by pressing any key.

Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to standby mode.

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Maintaining Your Phone's Peak Performance

For the best care of your phone, only authorized personnel should service your phone and accessories. Faulty service may void the warranty.

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

 To ensure that the Hearing Aid Compatibility rating for your phone is maintained, secondary transmitters such as Bluetooth and WLAN components must be disabled during a call. For more information, refer to the "Disabling Bluetooth or WLAN" section.

- If your phone is equipped with an external antenna, hold the phone with the antenna raised, fully-extended and over your shoulder.
- Do not hold, bend or twist the phone's antenna, if applicable.
- . Do not use the phone if the antenna is damaged.
- If your phone is equipped with an internal antenna, obstructing the internal antenna could inhibit call performance.
- Speak directly into the phone's receiver.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off
 and remove the battery. If it is inoperable, call Customer Care for service.

Availability of Various Features/Ring Tones

Many services and features are network dependent and may require additional subscription and/or usage charges. Not all features are available for purchase or use in all areas. Downloadable Ring Tones may be available at an additional cost. Other conditions and restrictions may apply. See your service provider for additional information.

Battery Standby and Talk Time

Standby and talk times will vary depending on phone usage patterns and conditions. Battery power consumption depends on factors such as network configuration, signal strength, operating temperature, features selected, frequency of calls, and voice, data, and other application usage patterns.

Battery Precautions

- Avoid dropping the cell phone. Dropping it, especially on a hard surface, can potentially cause damage to the phone and battery.
 If you suspect damage to the phone or battery, take it to a service center for inspection.
- · Never use any charger or battery that is damaged in any way.
- Do not modify or remanufacture the battery as this could result in serious safety hazards.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Follow battery usage, storage and charging guidelines found in the user's guide.
- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be
 charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time)
 is noticeably shorter than normal, it is time to buy a new battery.
- . If left unused, a fully charged battery will discharge itself over time.

- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is
 not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since
 overcharging may shorten its life.
- Do not use incompatible cell phone batteries and chargers. Some Web sites and second-hand dealers, not associated with
 reputable manufacturers and carriers, might be selling incompatible or even counterfeit batteries and chargers. Consumers
 should purchase manufacturer or carrier recommended products and accessories. If unsure about whether a replacement
 battery or charger is compatible, contact the manufacturer of the battery or charger.
- Misuse or use of incompatible phones, batteries, and charging devices could result in damage to the equipment and a possible
 risk of fire, explosion, leakage, or other serious hazard.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity
 and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may
 temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below
 0 °C (32 °F).
- Do not place the phone in areas that may get very hot, such as on or near a cooking surface, cooking appliance, iron, or radiator.
- Do not get your phone or battery wet. Even though they will dry and appear to operate normally, the circuitry could slowly
 corrode and pose a safety hazard.
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct
 connection between the + and terminals of the battery (metal strips on the battery), for example when you carry a spare
 battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Do not permit a battery out of the phone to come in contact with metal objects, such as coins, keys or jewelry.
- Do not crush, puncture or put a high degree of pressure on the battery as this can cause an internal short-circuit, resulting in overheating.
- Dispose of used batteries in accordance with local regulations. In some areas, the disposal of batteries in household or business trash may be prohibited. For safe disposal options for Li-lon batteries, contact your nearest Samsung authorized service center. Always recycle. Do not dispose of batteries in a fire.

Care and Maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

• Keep the phone and all its parts and accessories out of the reach of small children.

- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp
 or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside
 the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly
 dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when
 overheated.
- If your phone is equipped with an external antenna, use only the supplied or an approved replacement antenna. Unauthorized
 antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The
 personnel there will assist you, and if necessary, arrange for service.

Section 13: Warranty Information

Standard Limited Warranty

What is Covered and For How Long?

SAMSUNG TELECOMMUNICATIONS AMERICA, LLC ("SAMSUNG") warrants to the original purchaser ("Purchaser") that SAMSUNG's Phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone 1 Year
Batteries 1 Year
Leather Case 90 Days
Holster 90 Days
Other Phone Accessories 1 Year

What is Not Covered? This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical, electrical or electromechanical stress, or modification of any part of Product, including antenna, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) any plastic surfaces or other externally exposed parts that are scratched or damaged due to normal use; (d) malfunctions resulting from the use of Product in conjunction with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (e) defects or damage from improper testing, operation, maintenance, installation, or adjustment; (f) installation, maintenance, and service of Product, or (g) Product used or purchased outside the United States or Canada.

This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery, (ii) any of the seals on the battery are broken or show evidence of tampering, or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's obligations? During the applicable warranty period, SAMSUNG will repair or replace, at SAMSUNG's sole option, without charge to Purchaser, any defective component part of Product. To obtain service under this Limited Warranty, Purchaser must return Product to an authorized phone service facility in an adequate container for shipping, accompanied by Purchaser's sales receipt or comparable substitute proof of sale showing the date of purchase, the serial number of Product and the sellers' name and address. To obtain assistance on where to deliver the Product, call Samsung Customer Care at 1-888-987-4357. Upon receipt, SAMSUNG will promptly repair or replace the defective Product. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product or replace Product with a rebuilt, reconditioned or new Product. Repaired/replaced leather cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Product will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for 90 days, whichever is longer. All replaced parts, components, boards and equipment shall become the property of SAMSUNG.

If SAMSUNG determines that any Product is not covered by this Limited Warranty, Purchaser must pay all parts, shipping, and labor charges for the repair or return of such Product.

WHAT ARE THE LIMITS ON SAMSUNG'S WARRANTY/LIABILITY? EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED HEREIN, PURCHASER TAKES THE PRODUCT "AS IS," AND SAMSUNG MAKES NO WARRANTY OR REPRESENTATION AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO:

- THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE;
- · WARRANTIES OF TITLE OR NON-INFRINGEMENT:
- DESIGN, CONDITION, QUALITY, OR PERFORMANCE OF THE PRODUCT:
- THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN: OR
- COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO.

NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES AND CONDITIONS THAT MAY ARISE BY OPERATION OF LAW, INCLUDING IF APPLICABLE THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE HEREBY LIMITED TO THE SAME DURATION OF TIME AS THE EXPRESS WRITTEN WARRANTY STATED HEREIN. SOME STATES/PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE, USE, OR MISUSE OF, OR

INABILITY TO USE THE PRODUCT OR ARISING DIRECTLY OR INDIRECTLY FROM THE USE OR LOSS OF USE OF THE PRODUCT OR FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL, CONSEQUENTIAL OR SIMILAR DAMAGES. OR LOSS OF ANTICIPATED PROFITS OR BENEFITS. OR FOR DAMAGES ARISING FROM ANY TORT (INCLUDING NEGLIGENCE OR GROSS NEGLIGENCE) OR FAULT COMMITTED BY SAMSUNG, ITS AGENTS OR EMPLOYEES. OR FOR ANY BREACH OF CONTRACT OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. SOME STATES/PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. AND YOU MAY ALSO HAVE OTHER RIGHTS. WHICH VARY FROM STATE TO STATE/PROVINCE TO PROVINCE. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS HELD ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY FOR THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS. THE PARTIES UNDERSTAND THAT THE PURCHASER MAY USE THIRD-PARTY SOFTWARE OR EQUIPMENT IN CONJUNCTION WITH THE PRODUCT. SAMSUNG MAKES NO. WARRANTIES OR REPRESENTATIONS AND THERE ARE NO CONDITIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRDPARTY SOFTWARE OR EQUIPMENT. WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE, INCLUDING THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT. THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR FOLIPMENT LIF SOLELY WITH THE PURCHASER AND THE DIRECT VENDOR, OWNER OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT, AS THE CASE MAY BE.

This Limited Warranty allocates risk of Product failure between Purchaser and SAMSUNG, and SAMSUNG's Product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of SAMSUNG are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on SAMSUNG. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by SAMSUNG and should not be relied upon.

End User License Agreement for Software

IMPORTANT. READ CAREFULLY: This End User License Agreement ("EULA") is a legal agreement between you (either an individual or a single entity) and Samsung Electronics Co., Ltd. for software owned by Samsung

Electronics Co., Ltd. and its affiliated companies and its third party suppliers and licensors that accompanies this EULA, which includes computer software and may include associated media, printed materials, "online" or electronic documentation ("Software"). BY CLICKING THE "I ACCEPT" BUTTON (OR IF YOU BYPASS OR OTHERWISE DISABLE THE "I ACCEPT", AND STILL INSTALL, COPY, DOWNLOAD, ACCESS OR OTHERWISE USE THE SOFTWARE), YOU AGREE TO BE BOUND BY THE TERMS OF THIS EULA. IF YOU DO NOT ACCEPT THE TERMS IN THIS EULA, YOU MUST CLICK THE "DECLINE" BUTTON, DISCONTINUE USE OF THE SOFTWARE.

- 1. GRANT OF LICENSE. Samsung grants you the following rights provided that you comply with all terms and conditions of this EULA: You may install, use, access, display and run one copy of the Software on the local hard disk(s) or other permanent storage media of one computer and use the Software on a single computer or a mobile device at a time, and you may not make the Software available over a network where it could be used by multiple computers at the same time. You may make one copy of the Software in machine-readable form for backup purposes only; provided that the backup copy must include all copyright or other proprietary notices contained on the original.
- 2. RESERVATION OF RIGHTS AND OWNERSHIP. Samsung reserves all rights not expressly granted to you in this EULA. The Software is protected by copyright and other intellectual property laws and treaties. Samsung or its suppliers own the title, copyright and other intellectual property rights in the Software. The Software is licensed, not sold.
- 3. LIMITATIONS ON END USER RIGHTS. You may not reverse engineer, decompile, disassemble, or otherwise attempt to discover the source code or algorithms of, the Software (except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation), or modify, or disable any features of, the Software, or create derivative works based on the Software. You may not rent, lease, lend, sublicense or provide commercial hosting services with the Software.
- 4. CONSENT TO USE OF DATA. You agree that Samsung and its affiliates may collect and use technical information gathered as part of the product support services related to the Software provided to you, if any, related to the Software. Samsung may use this information solely to improve its products or to provide customized services or technologies to you and will not disclose this information in a form that personally identifies you.
- 5. UPGRADES. This EULA applies to updates, supplements and add-on components (if any) of the Software that Samsung may provide to you or make available to you after the date you obtain your initial copy of the Software, unless we provide other terms along with such upgrade. To use Software identified as an upgrade, you must first be licensed for the Software identified by Samsung as eligible for the upgrade. After upgrading, you may no longer use the Software that formed the basis for your upgrade eligibility.

- 6. SOFTWARE TRANSFER. You may not transfer this EULA or the rights to the Software granted herein to any third party unless it is in connection with the sale of the mobile device which the Software accompanied. In such event, the transfer must include all of the Software (including all component parts, the media and printed materials, any upgrades, this EULA) and you may not retain any copies of the Software. The transfer may not be an indirect transfer, such as a consignment. Prior to the transfer, the end user receiving the Software must agree to all the EULA terms.
- 7. EXPORT RESTRICTIONS. You acknowledge that the Software is subject to export restrictions of various countries.
 You agree to comply with all applicable international and national laws that apply to the Software, including the U.S. Export Administration Regulations, as well as end user, end use, and destination restrictions issued by U.S. and other governments.
- 8. TERMINATION. This EULA is effective until terminated. Your rights under this License will terminate automatically without notice from Samsung if you fail to comply with any of the terms and conditions of this EULA. Upon termination of this EULA, you shall cease all use of the Software and destroy all copies, full or partial, of the Software.
- 9. DISCLAIMER OF WARRANTIES. You expressly acknowledge and agree that use of the Software is at your sole risk and that the entire risk as to satisfactory quality, performance, accuracy and effort is with you. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW. THE SOFTWARE IS PROVIDED "AS IS" AND WITH ALL FAULTS AND WITHOUT WARRANTY OF ANY KIND. AND SAMSUNG AND ITS LICENSORS (COLLECTIVELY REFERRED TO AS "SAMSUNG" FOR THE PURPOSES OF SECTIONS 9, 10 and 11) HEREBY DISCLAIM ALL WARRANTIES AND CONDITIONS WITH RESPECT TO THE SOFTWARE, EITHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO. THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY. OF SATISFACTORY QUALITY OR WORKMANLIKE EFFORT, OF FITNESS FOR A PARTICULAR PURPOSE, OF RELIABILITY OR AVAILABILITY, OF ACCURACY, OF LACK OF VIRUSES, OF QUIET ENJOYMENT, AND NON-INFRINGEMENT OF THIRD PARTY RIGHTS. SAMSUNG DOES NOT WARRANT AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE SOFTWARE, THAT THE FUNCTIONS CONTAINED IN THE SOFTWARE WILL MEET YOUR REQUIREMENTS, THAT THE OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT DEFECTS IN THE SOFTWARE WILL BE CORRECTED. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY SAMSLING OR A SAMSLING ALITHORIZED. REPRESENTATIVE SHALL CREATE A WARRANTY. SHOULD THE SOFTWARE PROVE DEFECTIVE, YOU ASSUME THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR LIMITATIONS ON APPLICABLE STATUTORY RIGHTS OF A CONSUMER. SO THESE EXCLUSIONS AND LIMITATIONS MAY NOT APPLY TO YOU.

- 10. EXCLUSION OF INCIDENTAL, CONSEQUENTIAL AND CERTAIN OTHER DAMAGES. TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT SHALL SAMSUNG BE LIABLE FOR PERSONAL INJURY, OR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES WHATSOEVER, OR FOR LOSS OF PROFITS, LOSS OF DATA, BUSINESS INTERRUPTION, OR FOR ANY PECUNIARY DAMAGES OR LOSSES, ARISING OUT OF OR RELATED TO YOUR USE OR INABILITY TO USE THE SOFTWARE, THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT OR OTHER SERVICES, INFORMATION, SOFTWARE, AND RELATED CONTENT THROUGH THE SOFTWARE OR OTHERWISE ARISING OUT OF THE USE OF THE SOFTWARE, OR OTHERWISE UNDER OR IN CONNECTION WITH ANY PROVISION OF THIS EULA, HOWEVER CAUSED, REGARDLESS OF THE THEORY OF LIABILITY (CONTRACT, TORT OR OTHERWISE) AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME JURISDICTIONS DO NOT ALLOW THE LIMITATION OF LIABILITY FOR PERSONAL INJURY, OR OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THIS LIMITATION MAY NOT APPLY TO YOU.
- 11. LIMITATION OF LIABILITY. Notwithstanding any damages that you might incur for any reason whatsoever (including, without limitation, all damages referenced herein and all direct or general damages in contract or anything else), the entire liability of Samsung under any provision of this EULA and your exclusive remedy hereunder shall be limited to the greater of the actual damages you incur in reasonable reliance on the Software up to the amount actually paid by you for the Software or US\$5.00. The foregoing limitations, exclusions and disclaimers (including Sections 9, 10 and 11) shall apply to the maximum extent permitted by applicable law, even if any remedy fails its essential purpose.
- 12. U.S. GOVERNMENT END USERS. The Software is licensed only with "restricted rights" and as "commercial items" consisting of "commercial software" and "commercial software documentation" with only those rights as are granted to all other end users pursuant to the terms and conditions herein.
- 13. APPLICABLE LAW. This EULA is governed by the laws of TEXAS, without regard to conflicts of laws principles. This EULA shall not be governed by the UN Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded. If a dispute, controversy or difference is not amicably settled, it shall be finally resolved by arbitration in Seoul, Korea in accordance with the Arbitration Rules of the Korean Commercial Arbitration Board. The award of arbitration shall be final and binding upon the parties.
- 14. ENTIRE AGREEMENT; SEVERABILITY. This EULA is the entire agreement between you and Samsung relating to the Software and supersedes all prior or contemporaneous oral or written communications, proposals and representations with respect to the Software or any other subject matter covered by this EULA. If any provision of this EULA is held to be void, invalid, unenforceable or illegal, the other provisions shall continue in full force and effect.

Precautions for Transfer and Disposal

If data stored on this device is deleted or reformatted using the standard methods, the data only appears to be removed on a superficial level, and it may be possible for someone to retrieve and reuse the data by means of special software.

To avoid unintended information leaks and other problems of this sort, it is recommended that the device be returned to Samsung's Customer Care Center for an Extended File System (EFS) Clear which will eliminate all user memory and return all settings to default settings. Please contact the **Samsung Customer Care Center** for details.

Important!: Please provide warranty information (proof of purchase) to Samsung's Customer Care Center in order to provide this service at no charge. If the warranty has expired on the device, charges may apply.

Customer Care Center:

1000 Klein Rd.

Plano, TX 75074

Toll Free Tel: 1.888.987.HELP (4357)

Samsung Telecommunications America, LLC:

1301 East Lookout Drive

Richardson, Texas 75082

Phone: 1-800-SAMSUNG (726-7864)

Important!: If you are using a handset other than a standard numeric keypad, dial the numbers listed in brackets.

Phone: 1-888-987-HELP (4357)

©2009 Samsung Telecommunications America. All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice.

Index

Α	Vibration Mode 26
ABC mode 35	Call History
Accessing a Menu Function 33	All calls 24
Alert type 86	Answered calls 26
Audio Postcard 59	Delete all 26
В	Dialed calls 26
Backlight	Missed calls 25
description 20	Call Waiting 30
settings 91	Caller Group
Battery	Adding 42
charging 10	Editing 43
installing 7	Camcorder Options 120
low indicator 11	Camera 115
removing 5	taking photos 73, 115
Bluetooth	Camera Shortcuts
About 98	Shortcut Keys 121
features 99	Charging battery 10
Searching for new devices 98	Contacts
Turning Bluetooth On and Off 98	Searching for a Number 29
C	D
Calendar 107	Dialing a Number
Call Functions 22	People 42
Adjusting the Call Volume 23	Dialing display 90
Answering a Call 24	Background color 91
Call History 24	Font color 90
Correcting the Number 22	Font size 90
Ending a Call 22	Display 21
Making a Call 22	backlight 20
Making a Call from Contacts 23	icons 19
Redialing Last Number 22	DTMF 29

E	Menu Navigation 33
Entering Text 35	Message
Changing the Text Entry Mode 35	Viewing an Incoming Picture Message 57
Using ABC Mode 37	Message settings 65
Using Number Mode 39	Picture message 65
Using Symbol Mode 39	Receive settings 66
Using T9 Mode 36	Send settings 65
Extra tones 88	Text message 65
F	Message Tone 86
Functions and Options 26	Messages 49
G	Messaging
Games 81	Types of Messages 49
Getting Started 5	Missed Call
Activating Your Phone 5	Viewing 25
Voice mail 12	Multi-Party Call 30
Н	Dropping One Participant 32
Health and Safety Information 123	Private Conversation 31
HiFi Ringers 78, 85	Setting up 31
In Thingers 70, 03	Mute 28
•	My Album 73, 122
Icons, description 19	N
Information display Font color 90	Number mode 35
	0
Text style 89	On/off switch, phone 11
Instant Messaging 61 International Call 22	Options
	During a Call 27
K	Making a New call while in a call 28
Keypad Tone 87	Putting a Call on Hold 28
M	Organizer 107
Making a Call	Calculator 112
Contacts 23	Calendar 107
Mega tones 85	Stopwatch 114
MegaTones 78	Timer 114

Tip calculator 113	Extra tones 88
Unit Conversion 113	HiFi Ringers 85
World time 113	Incoming call 85
P	Keypad tone 87
Personalize Settings	Mega tones 85
Time and Date 96	Power on/off tone 87
Phone	Ring tone 85
icons 19	Ring volume 86
switching on/off 11	Vibration mode 88
Phone Keys 14, 16	Speakerphone 29
Phone Safety 134	Speed Dial
Phone Settings 91	Setting Up Entries 44
Photos	Standard Limited Warranty
Accessing pictures 118	142
Deleting pictures 119	Stopwatch 114
Picture Messages 52	Storing a Number
R	phone's memory 40
Recording Video 79, 119	Switching on/off
Ring tone 85	phone 11
Ring Volume 86	Symbol mode 35
S	Т
SAR values 123	T9 mode 35
Settings 85	Take Photo 73, 115
Bluetooth 98	Task List 111
Display 88	Text input mode
Phone 91	changing 35
Sound 85	Text Messages 50
SIM card	Timer 114
installing 5	Travel adapter 10
Soft Keys 27	U
Sound Settings	UL Certification 124
Alert type 86	Understanding People
**	Finding a Contact Entry 41

Understanding Your Phone 13

Back View 16

Features of Your Phone 13

Front View 14

Side Views 17

Understanding Your Phonebook 40

Using Contacts List 40

V

Vibration mode 88

Voice Mail 12, 64

Voice Recorder 67

W

Warranty Information 142

web2go 69

Bookmarks 71

Browser settings 71

Clear cache 72

Enter URL 71

Entering Text 70

Exiting 69

History 71

Home 69

Navigating 69

Saved pages 71