

# New Holland Industrial Dryer Specifications

K-11 K-24 K-90 K-94



| MODEL                       | K-11 Tabletop Dryer                       | K-24  | K-90  | K-94  |
|-----------------------------|---|---|---|---|
|                             | <b>6 in. x 6 in.</b>                      | <b>12 in. x 12 in.</b>  | <b>18 in. x 18 in.</b>  | <b>18 in. x 24 in.</b>  |
| Overall Height              | 19.5 in.                                  | 36.5 in.  | 40.5 in.  | 46.5 in.  |
| Work Height                 | 16 1/8 in.                                | 30 1/2 in.  | 37 in.  | 43 in.  |
| Table Space Required        | 9 3/8 in. x 14 in.                        | —   | —   | —   |
| Floor Space Required        | —   | 24 in. x 37 in.   | 31 in. x 40 in.   | 31 in. x 40 in.   |
| Weight                      | 79 lbs.                                   | 400 lbs.  | 615 lbs.  | 690 lbs.  |
| Operating Speed             | 1,100 rpm                                 | 825 rpm   | 625 rpm   | 625 rpm   |
| Motor Size                  | 1/8 hp                                    | 1 hp  | 2 hp  | 3 hp  |
| Basket Size                 | 6 in. x 6 in.                             | 12 in. x 12 in.   | 18 in. x 18 in.   | 18 in. x 24 in.   |
| Capacity                    | 7 lbs.                                    | 75 lbs.   | 150 lbs.  | 250 lbs.  |
| Bearings                    | 2, sealed ball                            | 2, tapered roller   | 2, tapered roller   | 2, tapered roller   |
| Reversible Control          | No  | Yes   | Yes   | Yes   |
| Drive                       | Direct coupled                            | 2 V-belts   | 2 V-belts   | 2 V-belts   |
| Construction                | Arc-welded steel plate                    | Arc-welded steel plate  | Arc-welded steel plate  | Arc-welded steel plate  |
| Electrical System           | 110/120 VAC 50/60Hz                       | 208, 220, 440, or<br>550 VAC at 60Hz;<br>380 VAC at 50Hz; 3-phase<br>(Optional) electric; steam | 208, 220, 440, or<br>550 VAC at 60Hz;<br>380 VAC at 50Hz; 3-phase<br>(Optional) electric; steam | 208, 220, 440, or<br>550 VAC at 60Hz;<br>380 VAC at 50Hz; 3-phase<br>(Optional) electric; steam |
| Heating Unit                | 600 watts switchable electric             | (Optional) electric; steam  | (Optional) electric; steam  | (Optional) electric; steam  |
| Amperage                    | Starting: 10.1/10.4<br>Operating: 6.7/7.1 | Starting and operating amperage<br>varies with voltage selected                                 | Starting and operating amperage<br>varies with voltage selected                                 | Starting and operating amperage<br>varies with voltage selected                                 |
| Meets N.E.C. Specifications | Yes                                       | Yes   | Yes   | Yes   |
| U.L. Recognized             | Yes                                       | Yes   | Yes   | Yes   |
| Grease Fittings             | None                                      | Exposed   | Exposed   | Exposed   |
| Meets J.I.C. Specifications | —   | Yes   | Yes   | Yes   |
| <b>OPTIONS</b>              |   |   |   |   |
| Soft Start                  | —   | Yes   | Yes   | Yes   |
| Variable Speed              | —   | Yes   | Yes   | Yes   |
| Timer                       | —   | Yes   | Yes   | Yes   |
| Temperature Control         | —   | Yes   | Yes   | Yes   |

For more information or to find an authorized New Holland industrial dryer distributor, contact us at:

**CNH America LLC**  
**P.O. Box 1895, M.S. 237**  
**New Holland, PA 17557-0903**

**Phone: 717-355-4747**  
**Fax: 717-355-3440**

or visit our Web site at [www.newholland.com/na](http://www.newholland.com/na)

Design, materials and/or specifications are subject to change without notice and without liability therefor. Specifications are applicable to units sold in Canada, the United States, its territories and possessions, and may vary outside these areas.



Safety begins with a thorough understanding of the equipment. Always make sure you and your operators read the Operator's Manual before using the equipment. Pay close attention to all safety and operating decals and never operate machinery without all shields, protective devices and structures in place.