


COBY®


Digital AM/FM Alarm Clock Radio CR-A58

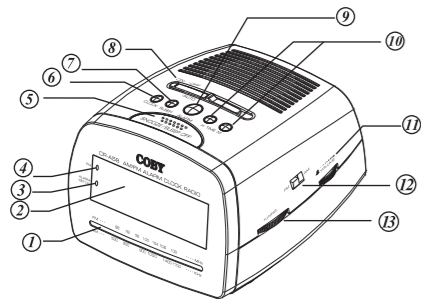

- ① FREQUENCY DISPLAY
- ② LED DISPLAY
- ③ ALARM INDICATOR
- ④ PM INDICATOR
- ⑤ SNOOZE/SLEEP OFF
- ⑥ CLOCK
- ⑦ SLEEP
- ⑧ FUNCTION BUTTON (ON/OFF/AUTO)
- ⑨ ALARM
- ⑩ H TIME M
- ⑪ VOLUME CONTROL
- ⑫ AM/FM SWITCH
- ⑬ AM/FM TUNING

POWER SUPPLY:

CR-A58 operates on AC 110V/60Hz or AC 220V/50Hz household mains supply. Before connecting to the power supply, ensure that the rated voltage of this unit matches your local voltage. And slide the switch inside the battery compartment to choose 220V/50Hz or 110V/60Hz correctly.

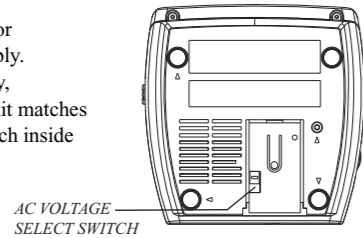

Warning: Disconnect the mains plug from the power supply socket when it is not in use. To avoid the risk of electric shock, do not remove the cover of the apparatus. To prevent fire or shock hazard, do not expose the apparatus to rain or moisture.

BATTERY BACK-UP

The 9V type 006P battery is to be put in the battery compartment for clock back-up (not for radio operation) purpose in case of power failure or breakdowns. Replace

the battery every six months for the best performance. Remove the battery if the player will not be in use for a long period of time.

RADIO OPERATION:

1. To turn radio on, slide the FUNCTION SWITCH to "ON" position.
2. Select AM or FM from AM/FM switch.
3. Adjust the volume control to the desired volume level.
4. Turn the tuning control to the desired radio station.
5. To turn radio off, slide the FUNCTION SWITCH to "OFF" position.

CLOCK SETTING

1. To set hour, while holding the CLOCK button, press H TIME until the desired hour is displayed. Then, release both buttons.
2. To set minute, while holding the CLOCK button, press TIME M until the desired minute is displayed. Then, release both buttons.

WAKE TO RADIO OR BUZZER

1. Select the desired radio station and volume level.
2. To set alarm, while holding the ALARM button, press H TIME to set hour and TIME M to set minute.
3. Slide the FUNCTION SWITCH to "AUTO" position. The alarm indicator will be lit up. And the radio will be turned on to wake you up at the preset time.
4. To wake to buzzer, turn the VOLUME/BUZZER CONTROL to "BUZZER" position.
5. To turn alarm off, slide the FUNCTION SWITCH to "OFF" position.

SNOOZE TO REPEAT ALARM

1. When alarm is turned on, it will be temporarily off by pressing SNOOZE/SLEEP OFF button. Approximately 7 minutes later, it will be on again. This operation cycle will be repeated up to five times within an hour, and then automatically release the wake up function.
2. To cancel the snooze operation, slide the FUNCTION SWITCH to "OFF" position.

SLEEP TO RADIO

1. Select the desired radio station and volume level.
2. Slide the FUNCTION SWITCH to "AUTO" or "OFF" position.
3. Press SLEEP button and clock display will show 59 minutes as default sleep period.
4. The sleep period can be reduced as desired by pressing the TIME M button while holding the SLEEP button.
5. The sleep period can also be set up to 1 hour and 59 minutes by pressing the H TIME button while holding the SLEEP button.
6. Radio will be on for the desired period and then off automatically.
7. To turn radio off before the preset time out, just simply press the SNOOZE/SLEEP OFF button.

SLEEP AND WAKE TO RADIO

1. Select your desired radio station and volume level.
2. Slide the FUNCTION SWITCH to "AUTO" position.
3. Set the desired wake-up time and sleep period as described above.
4. Radio will be turned on at the preset wake-up time, and keep playing before the preset sleep period out, then automatically turned off.

WARNING: THE UNIT MUST NOT BE EXPOSED TO DRIPPING AND SPLASHING!

Specifications:

Power supply: 110V/60Hz or 220V/50Hz

Back-up battery: DC 9V

FM: 88-108MHz

AM: 530-1700KHz

Power consumption: 5W

Output power: 0.5W

Speaker: 8 Ohm

COBY® 90 DAYS LIMITED WARRANTY

COBY ELECTRONICS CORP. ("COBY") warrants this product to the original purchaser to be free from defects in material or workmanship under normal use for 90 DAYS from the date of original purchase. COBY agrees under this warranty, to repair or replace it with a new or reconditioned product at no additional charge. Our warranty does not cover any product which has been subject to neglect, unreasonable use, accident, violation of operating instruction or any product that has been repaired or modified by an unauthorized service agent. To obtain factory service, return this unit freight-prepaid to the address shown below within the duration of this warranty. Enclose \$6.00 for each item in the form of money order made payable to COBY ELECTRONICS CORP. to cover the cost of shipping and handling. Also, include a copy of the sales receipt to show proof of purchase and a detailed description of the problem. The unit(s) must be packaged in such a way as to reasonably protect it from possible shipping damage. For further information write to.

COBY ELECTRONICS CORP.
Customer Service Dept.
56-65 Rust Street
Maspeth, N.Y. 11378

COBY'S liability under any legal theory for any loss damage in any way related to this product shall not exceed the sales price of this product. In no event shall COBY be liable for any incidental or consequential damages resulting from the use of this product, or inability to use this product. Repair or replacement as provided under this warranty is the exclusive right of the consumer.

Except to the extent prohibited by law, no express or implied warranty of merchant ability or fitness for a particular purpose on this product shall be extended beyond the period of this warranty. Some States prohibit the exclusion or limitation of incidental or consequential damages, so that the above limitation or exclusion may not apply to you. This warranty gives you specific rights, and you may also have other rights which may vary from State to State.