

Inserting the Batteries

Before using your LED-45 insert Five 1.5V AAA alkaline batteries:

- 1. Remove back cover
- Insert batteries, following polarity diagram
- 3. Replace the cover

Note: Three batteries are for LIGHT Two batteries are for CLOCK

To Reset the Clock Insert paper clip into RESET Hole

Back Side

Set the Time

Note: To select Millitary Time Press 12/24 Button Before Setting Time (Clock will only speak in regular Time Mode)

- 1. Press SET.
- 2. Press **H** and **M** to set hour and minute
- 3. Press **SET** twice.

Set the Alarm



- 1. Press **SET** twice.
- 2. Press **H** and **M** to adjust the Alarm hour and minute.
- 3. Press iTALK button to choose a *Chirping* or *Beeping* sound.
- 4. Press SET.
- 5. Press ALARM to turn on the Alarm.
- 6. Press ALARM to turn off the Alarm.

When Alarm sounds:

Press iTALK button to snooze, Press iTALK button twice to stop alarm.

Hourly Chime (((*))

Press **CHIME** for an hourly time and temperature report.

Save Battery Power

- Turn off Chime and Alarm when not used.
- When voice slows, replace Batteries.

www.datexx.com

TELEDEX Limited U.S.A. Warranty

TELEDEX INC. warrants these products to the original purchaser to be free from defective material and workmanship. The product will be repaired or replaced at our option, for up to one year when returned with proof of purchase to the address below. Include a check or money order for \$5.00 to cover postage.

TELEDEX INC. 1 Atlas st. Kenilworth, NJ 07033

Warranty valid only in the U.S.A.

Printed in China 2/04