

connector fork “seats” itself on the inside “point” on the nylon bracket. Push upper blade slightly to opposite side of bracket on the connector fork. Place lower blade on top of the upper blade and align the screw holes of blade to blade pad (see Diagram H) and replace screws. Do not tighten down screws completely. Turn clipper over and align lower blade so teeth of both blades are parallel but with lower blade teeth slightly above the upper blade teeth (see Diagram I). Failure to do this may result in nipping the skin of your customer when cutting the hair.

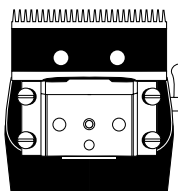


Diagram H


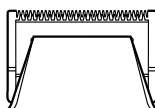




Diagram I

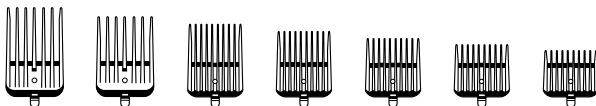

ATTACHING THE CLIPPER COMBS

(Not always included with purchase of clipper)


The clipper comb blade attachments mount easily. Just snap them on. Snap them off. Combs help guide hair to cutting blades and give you precise control of hair lengths. Each comb allows a different length of cut which is indicated on the combs: 1/16", 1/8", 1/4", 3/8", 1/2", 3/4" & 1". You can always set the blades for a coarser cut by attaching any of the snap-on blade attachments made for your Andis Clipper/Trimmer.

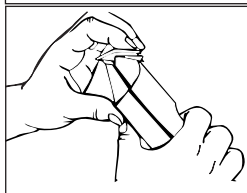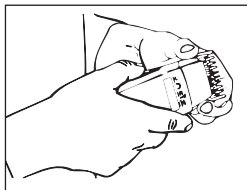

To use blade attachment, slip the cutter blade teeth into blade attachment. Snap the blade attachment down, they snap on and off easily. These attachments guide hair into the clipper blades and give you precise control of hair lengths. The length of trim is indicated on the blade attachment: 1/16", 1/8", 1/4", 3/8", 1/2", 3/4" & 1". Use the following chart to find the approximate lengths of cut. Different blade angles in relation to the skin, thickness and texture of the hair will vary the cutting length.

CLIPPER BLADE ADJUSTMENT

Your Andis Adjustable Clipper Blade set is easy to adjust. From coarse to fine cuts, all that's needed is a flick of the adjustment lever with your thumb. In the upright position, blades are set for the finest, or shortest cuts.

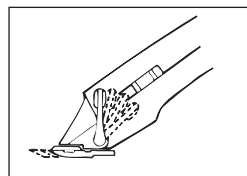

CLIPPING GUIDE				
Description	Clipping Directions	Approx. Length of Cut		
		Fine		Coarse
Standard Andis Blade	With hair grain	1/16"	to	3/16"
	Against hair grain	1/32"	to	1/8"
1/16" Blade Attachment	With hair grain	3/16"	to	5/16"
	Against hair grain	3/32"	to	5/32"
1/8" Blade Attachment	With hair grain	1/4"	to	3/8"
	Against hair grain	1/8"	to	1/4"
1/4" Blade Attachment	With hair grain	3/8"	to	1/2"
	Against hair grain	1/4"	to	3/8"
3/8" Blade Attachment	With hair grain	1/2"	to	5/8"
	Against hair grain	3/8"	to	1/2"
1/2" Blade Attachment	With hair grain	5/8"	to	7/8"
	Against hair grain	1/2"	to	5/8"
3/4" Blade Attachment	With hair grain	7/8"	to	1-1/8"
	Against hair grain	3/4"	to	1"
1" Blade Attachment	With hair grain	1-1/8"	to	1-3/8"
	Against hair grain	1"	to	1-1/4"

MEASUREMENT OF ADJUSTABLE CLIPPER BLADE WHEN CUTTING					
Position	000	•	•	•	1
ON EDGE	.030	.060	.090	.150	.180
FLAT	.030	.040	.050	.060	.080

andis®

Please see enclosed slip sheet for all Andis Authorized repair stations

FACTORY REPAIR SERVICE

When the blades of your Andis clipper/trimmer become dull after repeated use, it is advised to purchase a new set of blades available through your Andis Supplier or through an Andis Authorized Repair Station listed in this manual. (On Models ML, & SM, only blade sets can be resharpened by an Authorized Andis Repair Service Station. Please check the blades for missing teeth, as this is considered a broken blade and not resharpenable). If you wish your clipper/trimmer to be serviced as well, it should be carefully packed and mailed either Parcel Post Insured, or U.P.S. to any of the Service Centers listed in this manual.



Model ML

LIMITED WARRANTY

This Andis product is warranted against defective material or workmanship for one year from the date of purchase. All implied warranties arising and by virtue of State law shall also be limited to one year. Any Andis product determined to be defective in material or workmanship during the warranty period will be repaired or replaced without cost to the consumer for parts and labor. The defective product must be returned with proof of purchase and \$6.50 to cover cost of handling, to any Authorized Andis Repair Station or to: Andis, 1800 Renaissance Blvd, Sturtevant, Wisconsin 53177 USA or **IN CANADA** to: A & AG AGENCIES (CANADA), INC. 10050 Côte de Liesse, Lachine, Québec, H8T 1A3 CANADA. Enclose or attach a letter describing the nature of the problem. Due to foreign matter sometimes found in hair, clipper blades, or resharpening of blades, are not subject to the one year warranty. Andis will not be liable under this warranty for any defect, failure or malfunction of any of its products caused by normal wear, abuse, misuse, unauthorized adjustments or disassembling. Andis will not be liable for any consequential damages resulting from any defect in material or workmanship of any of its products. Some States do not allow limitations on how long an implied warranty lasts or exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. The Warranty gives you specific legal rights, and you may also have other rights which may vary from State to State.

Date Purchased _____ Model _____

Congratulations –

You just went First Class when you bought this Andis Product. Careful workmanship and quality design have been the hallmarks of Andis products since 1922.

KEEP THIS FOR YOUR RECORDS

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following: Read all instructions before using the Andis Clipper/Trimmer.

DANGER: To reduce the risk of electric shock:

1. Do not reach for an appliance that has fallen into water. Unplug immediately.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Always unplug this appliance from the electrical outlet immediately after using.
5. Unplug this appliance before cleaning, removing, or assembling parts.

WARNING: To reduce the risk of burns, fire, electric shock, or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on, or near children or invalids.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Andis.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to an Andis Service Center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Never drop or insert any object into any opening.
7. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
8. Do not use this appliance with a damaged or broken blade or comb, as injury to the skin may occur.
9. To disconnect turn control to “off” then remove plug from outlet.
10. If this clipper/trimmer has means for grounding, connect to a properly grounded outlet only. See Grounding Instructions.
11. If used as an animal clipper/trimmer or shear: during use, do not place or leave appliance where it may be:
(1) damaged by an animal or (2) exposed to the weather.

SAVE THESE INSTRUCTIONS

THIS PRODUCT INTENDED FOR PROFESSIONAL USE


(These instructions only apply for trimmers that have a 2-prong plug). To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

GROUNDING INSTRUCTIONS

(These instructions only apply for clipper/trimmers that have a 3-prong plug). This appliance should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with an appropriate grounding plug. The plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER: Improper use of the grounding plug can result in a risk of electric shock.

If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat-blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire. Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the appliance is properly grounded. Do not modify the plug provided; if it will not fit the outlet, have the proper outlet installed by a qualified electrician. This appliance is for use on a nominal 120-volt circuit, and has a grounding plug that looks like the plug illustrated in Diagram A. A temporary adapter, which looks like the adapter illustrated in Diagrams B and C, may be used to connect this plug to a 2-pole receptacle as shown in Diagram B if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet (Diagram A) can be installed by a qualified electrician. The green colored rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet-box cover. Whenever the adapter is used, it must be held in place by a metal screw.

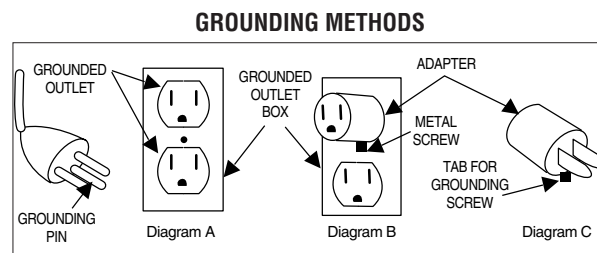

OPERATING INSTRUCTIONS

Please read the following instructions before using your new Andis clipper/trimmer. Give it the care that a fine precision built instrument deserves and it will give you years of service. Before starting clipper/trimmer remove blade guard (some models may

not have a blade guard). Plug cord into electrical outlet, operate at 120 volt, 60 cycle AC electrical current or as noted on the unit. To start clipper/trimmer move switch button to on position, to stop, move switch button back to original position. After using your Andis clipper/trimmer, rewrap cord and store in a safe place.

USER MAINTENANCE



The internal mechanism of your clipper/trimmer has been permanently lubricated at the factory. Other than the recommended maintenance described in this manual, no other maintenance should be performed, except by Andis Company or an Andis Authorized Repair Service Station.

POWER ADJUSTMENT FOR MODELS ML, & GC


Your Andis clipper/trimmer has been adjusted to line voltage at the factory. However, because of voltage variations it may be necessary to adjust the power setting for your area. If the power adjustment is off, you will usually notice a “clatter”, when the clipper/trimmer is “on” or introduced into the hair. (It is normal for your clipper/trimmer to “clatter” for an instant when initially turned on).

TO ADJUST YOUR CLIPPER/TRIMMER:

1. Oil the blades (see Diagram D).
2. The power screw is located in the lower part of the housing opposite the switch (see Diagram E).
3. Turn your clipper/trimmer “on”.
4. Using a standard screwdriver that fits the slot, turn the power screw counter clockwise until the clipper/trimmer clatters continuously. Then turn the screw clockwise carefully until the clatter ceases.
5. Your clipper/trimmer is now adjusted to its optimum power setting.

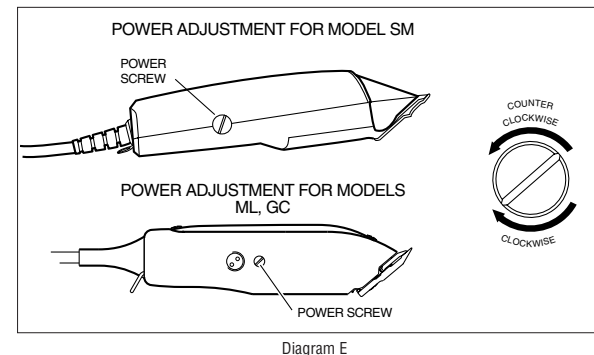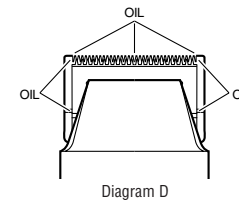

CARE AND SERVICING OF YOUR ANDIS CLIPPER/TRIMMER BLADES

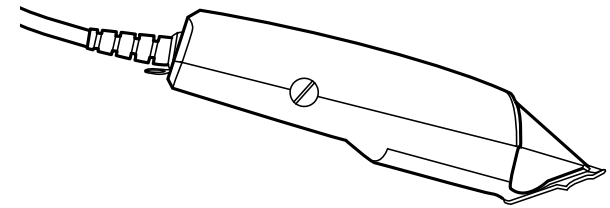

Blades should be oiled before, during, and after each use. If your clipper/trimmer blades leave streaks or slow down, it's a sure sign blades need oil. The clipper/trimmer should be held in a position shown at right to prevent oil from getting into motor. Place a few drops of Andis Clipper Oil on the front and side of the cutter blades (see Diagram D). Wipe excess oil off blades with a soft dry cloth. Spray lubricants contain insufficient oil for good lubrication, but are an excellent clipper coolant. Always replace broken or nicked blades to prevent injury. You can clean the excess hair from your blades by using a small brush or worn out toothbrush. To clean the blades we suggest to immerse the **blades only** into a shallow pan of Andis Clipper Oil, while the clipper is running. Any excess hair and dirt that has accumulated between the blades should come out. After cleaning, turn your clipper/trimmer off and dry blades with a dry cloth and start clipping again.

PLEASE NOTE:

Persons familiar with replacing and adjusting ANDIS Models ML, & GC, blades, please read the following blade replacement instructions. Those persons not familiar with this procedure, please return clipper/trimmer to your supplier or Andis Authorized Repair Station for blade replacement and adjustment.

FOR MODELS ML & GC

Unplug clipper, turn clipper/trimmer over around and place on hard, flat surface so teeth of clipper face down. Unscrew blade screws with standard screwdriver (see Diagram F). Remove lower blade. Place thumb and forefinger on upper blade (see Diagram G) push upper blade with thumb to one side of clipper/trimmer while your forefinger unsnaps blade from the connecting fork. (cover of clipper/trimmer removed in picture to show detail only. It is not necessary to remove cover when changing blades.) To install new blade set (keep clipper unplugged) remove upper blade (smaller of the set)

from the wrapped package. Place the upper blade towards the connector fork. Slant the blade slightly so one side of the upper angle (white nylon bracket on upper blade) “hooks” onto one prong of the connector fork, making sure the small indentation on

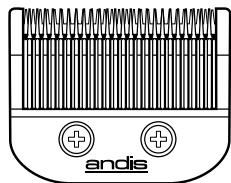


Diagram F

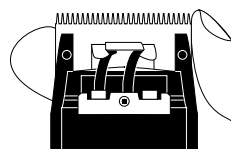


Diagram G