

Sunrise Wake-up Clock Model: WS902

USER MANUAL



Sunrise Wake-up Clock Model: WS902 USER MANUAL

CONTENTS

Contents	1
Introduction	2
Overview	2
Front View	2
Bottom View	2
LCD Display	2
Getting Start	2
Replacing Lamp	2
Connect to Power Source	3
Clock	3
Manually Set Clock	3
Radio	3
Soothing Nature Sounds	3
Adjust Volume	
Alarm	3
Alarm with Wake up Light	4
Sleep Timer	4
Reading Lamp	4
Play Music	4
LCD Backlight	4
Reset	4
Spectifications	4
Main Unit	4
Troubleshooting	5
Precaution	6
EU-Declaration of Conformity	6
About Oregon Scientific	6

INTRODUCTION

Thank you for selecting the Oregon Scientific TM Sunrise Wake-up Clock

Our body clock is often not in sync with the demands and rhythm of modern life.

Our biological clock is affected by external cues, such as sunlight. Light at dawn stimulates production of cortisol, which gets the body ready to work and wake up. By simulating dawn, Oregon Scientific's Sunrise Wake-up Clock (WS902) prepares the body to wake up by gradually increasing brightness to the set level in the 20 minutes prior to desired (set) alarm time.


Start your day better and feel energised to tackle the day. Wake up as nature intended!

NOTE Please keep this manual handy as you use your new product. It contains practical step-by-step instructions. as well as technical specifications and warnings you should know about.

IMPORTANT

This device does not reduce the hours of sleep needed.

OVERVIE

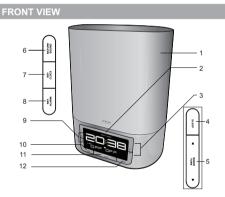

1. Lamp Holder

2. SNOOZE SENSOR: Motion sensor for snooze function

3. +/-: Adjust volume (only when radio / nature sound is playing); change values of the setting

4. SLEEP: View remaining time; enable sleep function with radio / nature sound / light; set sleep timer

5. **<RADIO TUNE**: Enable auto-search for radio station; adjust radio frequency marginally (by 0.05MHz)

6. NATURE SOUND: Toggle through selection (Crickets / Brook / Ocean / Rain)

7. SET CLOCK: Enter clock settings

8. SET ALARM: View alarm status; enter alarm settings 9. Q / Q : Adjust brightness (only when LAMP function

has been activated)

10. LAMP: Turn on/off light

11. ALARM: Enable / disable alarm function

12. RADIO: Turn on / off radio

BOTTOM VIEW



- 1. Battery compartment
- 2. WAKE UP LIGHT ON-OFF: Enable / disable light for alarm sequence

3. DISPLAY BRIGHTNESS LOW-HIGH: Select LCD display brightness LOW / HIGH

4. AUDIO LINE-IN: Socket for connecting to external music storage device

5. RESET: Reset unit to default settings

LCD DISPLAY



- 1. AM/PM
- Beep / Radio / S Bird chirp alarm selected 2.
- 3. Alarm with wake up light enabled
- 4. Batteries low / no battery
- 5. Alarm time
- 6. Radio Mode is ON and frequency is displayed
- Volume is displayed 7
- 8. Sleep mode is ON and remaining time is displayed
- 9. Nature sound selected (1-4)
- 10. Sound from external source plugged into unit

GETTING STARTED

REPLACING LAMP

For first time use, take out provided light bulb and go directly to step 2.

Unplug unit from wall socket and allow unit (bulb) to 1. cool for approx. 15 minutes.

CAUTION Always allow unit to cool for 15 minutes prior to cleaning, storing, replacing parts as unit can be very hot.

2. Turn the unit around to view back of the product (UNLOCK COVER tab facing you)

3. Using left thumb, press and hold UNLOCK COVER tab.

4. While continuously pressing on **UNLOCK COVER** tab, place right hand around the side of the product. Push in the side of the cover (area above tab and hook) and lift up to release cover.

(Left handed individuals can use right thumb and left hand if more comfortable).



- 5. Unscrew old light bulb.
- 6. Screw in new light bulb.

7. Holding cover, with the top part at a slight angle away from you, align the 2 front plastic tabs to the allotted space.

8. Tilt cover down and towards you until lamp cover clicks back into place.

NOTE This unit uses **60 W** light bulbs. The built-in protection feature will automatically shut down the unit when the temperature inside the lamp cover is too high. Remove the power plug from the socket, and only plug in again after unit has cooled down sufficiently.

IMPORTANT Please allow this unit to cool until the temperature inside is within a safe range.

CONNECT TO POWER SOURCE

Memory backup:

- 1. Remove the battery compartment cover.
- 2. Insert the batteries (2xAAA), matching the polarities.
- 3. Replace the battery compartment cover.

NOTE Batteries should not be exposed to excessive heat such as sunshine or fire.

Before selecting a location to place the unit, consider the following:

• Ensure there is approximately 15 cm between unit and closest object, such as walls or other objects.

• Ensure there is at least 40 cm space above the top of the unit for ventilation purposes.

• Ensure distance between unit location and wall socket is not longer than the power cord itself.

Batteries serve as a back-up power supply. To fully utilize all features, plug into wall socket.

To completely disconnect from power, the unit should be disconnected from the wall socket.

NOTE The main unit should not be exposed to wet conditions. No objects filled with liquid, such as vases, should be placed on the main unit.

CLOCK

MANUALLY SET CLOCK

- 1. Press SET CLOCK to enter setting mode.
- 2. Press + or to change the settings or press and hold
- + / to rapidly change the settings.

3. Press SET CLOCK to confirm and move to next setting.

The settings order is: 12/24 hr format, time.

RADIO

To activate / deactivate radio:

· Press RADIO to turn radio on / off.

To set radio station:

1. Press RADIO to turn radio on.

2. Press and hold **■ RADIO TUNE** to auto search or press **■ RADIO TUNE** to manually select frequency.

For your convenience, the volume and radio frequency will be stored in memory for the next time radio is turned on.

SOOTHING NATURE SOUNDS

NOTE Deactivate radio first. **RADIO OFF** will be displayed on screen.

To activate / deactivate soothing sounds:

1. Press NATURE SOUND to play sounds.

2. Press **NATURE SOUND** repeatedly to select desired sound (1-4) or to turn sound off.

ADJUST VOLUME

To adjust volume:

• Press + / – when radio or nature sound is turned on. TIP Press and hold + / – to rapidly adjust volume.

ALARM

- To set the alarm:
- 1. Press **SET ALARM** to enter setting mode.
- 2. Press + / to change the settings or press and hold +
- I to rapidly change the settings.

3. Press SET ALARM to confirm and move to next setting.

4. Repeat steps 2-3 for all setting options.

The settings order is: time, alarm sound (select from **beep** / **radio** / **bird** sound).

NOTE If radio alarm is selected, radio will play for 60 minutes at set alarm time at maximum volume level.

If bird sound alarm is selected, bird sound will gradually increase in volume to maximum and play for 2 minutes at set alarm time .

To activate / deactivate alarm:

Press ALARM.

-:- - indicates alarm function has been disabled.

To silence the alarm:

 Wave your hand up to 8 cm (3 inches) in front of the SNOOZE SENSOR to silence it for 8 minutes ()/)/
will continue flashing to indicate snooze function has been activated)

ALARM WITH WAKE UP LIGHT

To activate / deactivate wake up light:

• Slide **WAKE UP LIGHT** switch to **ON / OFF**. When wake up light has been activated, will be displayed next to **ALARM** on the LCD screen.

NOTE Light will fade-in (gradually increase in brightness to maximum) 20 minutes prior to set alarm time. Light Will stay on (even after **SNOOZE** has been activated) after set alarm time for 60 minutes.

SLEEP TIMER

To adjust sleep timer setting:

1. Turn on desired option:

OPTION	PRESS:
Radio	RADIO
Light	LAMP
Nature sound	NATURE SOUND

2. Press SLEEP to activate.

3. Press **SLEEP** repeatedly to change the sleep timer setting (120, 90, 60, 30, 15, 0 min).

After $\bar{5}$ seconds of inaction, the timer will automatically be confirmed and set.

TIP Press **SLEEP** again to change sleep timer (120, 90, 60, 30, 15, 0 min).

NOTE Ensure radio or sound and/or light has been selected to activate sleep timer.

NOTE If light option has been chosen for sleep timer, light will fade out.

READING LAMP

To turn on / off light:

· Press LAMP.

To adjust level of brightness:

Press ☆/☆ to increase or decrease brightness.
TIP Press and hold ☆/☆ to rapidly change level of brightness (1-20).

For your convenience, the level of brightness will be stored in memory for the next time reading lamp is turned on.

NOTE Do not look directly at the light.

PLAYING MUSIC

Using a cable, plug one end to your music storage device and one end to **AUDIO LINE-IN** located at the back of unit.

When cable has been successfully connected, [""] will be displayed on the LCD screen and sound will emit from speakers.

LCD BACKLIGHT

To adjust brightness:

RESET

- 1. Remove and reinsert the batteries.
- 2. Press RESET to return to the default settings.

SPECIFICATIONS

TYPE	DESCRIPTION
MAIN UNIT	
LxWxH	257 x 199 x 140 mm (10.12 x 7.84 x 5.51 in)
Weight	386 g (13.6 oz) without battery
FM	87.5 to 108 MHz
Power	Input: AC 230V 50Hz (EU version) Input: AC 100-120V 50/60Hz (US/Canada/Japan version) 2 x UM-4 (AAA) 1.5V batteries (for backup)

NOTE

Connection type of the switch: E

· Range of lamp load: (Lamp) 20W - 60W

• The apparatus shall not be exposed to dripping or splashing.

• To be completely disconnect the power input, the mains plug of apparatus shall be disconnected from the mains.

• The mains plug of apparatus should not be obstructed OR should be easily accessed during intended use.

• No naked flame sources such as lighted candles should be placed on the apparatus.

Slide DISPLAY BRIGHTNESS switch to LOW / HIGH.

TROUBLESHOOTING

The below table lists out some of the problems you could encounter. If you are unable to solve the problem, contact the Customer Care Centre in your country. Contact us via www2.oregonscientific.com/service/support.asp

Problem	Possible cause	Solution / Remarks
The unit does not work	Power supply?	Ensure plug has been properly inserted into the wall socket Ensure there is no power failure. Check by connecting another appliance to the wall socket
The unit does not work	Normal use	This is normal as the light bulb generates heat. However, ensure there is enough ventilation and vents are not covered as this can pose a fire hazard.
When setting functions, the unit does not respond	Normal use	Press RESET at the base of the unit or remove and reinsert plug into wall socket. The appliance will then be reset to factory default settings.
The light does not	Light intensity is too low?	Press O to increase light intensity
The light does not work	Alarm function disabled?	Ensure alarm time is displayed on LCD screen. Press ALARM to enable.
	Light bulb is defective?	Replace the light bulb.
	Light bulb not properly screwed in?	Unscrew and screw in the light bulb again.
Lamp does not turn on again immediately after it has been switched off	Normal operations	Allow 3 seconds for the lamp to dim. Please wait until the lamp reaches the preset intensity level
No sound when the alarm goes on	Alarm function disabled?	Ensure alarm time is displayed on LCD screen. If -: is displayed, press ALARM to enable.
	Radio is defective?	If radio has been selected for alarm mode, check that radio works. Press RADIO after you disable the alarm or press ALARM.
The radio is defective / produces a crackling sound	Positioning of external antenna?	Change position of external antenna if necessary.
	Broadcast signal is weak?	Press ◀RADIO TUNE to search for the correct signal.
Alarm did not activate today, but it did yesterday	Alarm function disabled?	Ensure alarm time is displayed on LCD screen. If -: is displayed, press ALARM to enable.
	Power failure?	Perhaps there was a power failure which lasted longer than the capacity of the back up system? The display will show an incorrect time and alarm will be 00:00. Do settings again.
The light wakes me too early / late	Location of unit is not suitable?	It is recommended that the unit is not placed too far and not lower than your head while in a sleeping position. Make sure the light is not blocked by bed, duvet or pillow.
Snooze does not work	Distance?	Wave your hand in front of the SNOOZE SENSOR at a distance range of approx. 1cm to 8cm (0.5 to 3 in).
LCD backlight is too weak to see	Display brightness?	Slide DISPLAY BRIGHTNESS to HIGH .
There is no sound	External device?	Make sure external device is playing.
after plugging to an external source	Connection?	Make sure cable is firmly connected with the external device and the unit.

PRECAUTIONS

• Do not subject the unit to excessive force, shock, dust, temperature or humidity.

• Do not cover the ventilation holes with any items such as newspapers, curtains etc.

• Remove dust regularly with a dry cloth. Accumulated dust poses a potential fire hazard.

• Do not immerse the unit in water. If you spill liquid over it, dry it immediately with a soft, lint-free cloth.

• Do not clean the unit with abrasive or corrosive materials.

• Do not tamper with the unit's internal components. This invalidates the warranty.

Only use fresh batteries. Do not mix new and old batteries.

Images shown in this manual may differ from the actual display.

• When disposing of this product, ensure it is collected separately for special treatment.

 Placement of this product on certain types of wood may result in damage to its finish for which Oregon Scientific will not be responsible. Consult the furniture manufacturer's care instructions for information.

• The contents of this manual may not be reproduced without the permission of the manufacturer.

Do not dispose old batteries as unsorted municipal waste.
Collection of such waste separately for special treatment is necessary.

 Please note that some units are equipped with a battery safety strip. Remove the strip from the battery compartment before first use.

NOTE The technical specifications for this product and the contents of the user manual are subject to change without notice.

NOTE If the external flexible cable or cord of this luminair is damaged, it shall be exclusively replaced by manufacturer or his service agent or a similar qualified person in order to avoid hazard.

NOTE For indoor use only.

EU-DECLARATION OF CONFORMITY

Visit our website (www.oregonscientific.com) to learn more about Oregon Scientific products. If you're in the US and would like to contact our Customer Care department directly, please visit:

www2.oregonscientific.com/service/support.asp For international inquiries, please visit:

www2.oregonscientific.com/about/international.asp



COUNTRIES RTTE APPROVAL COMPLIED

All EC countries, Switzerland CH

and Norway N

ABOUT OREGON SCIENTIFIC

Hereby, Oregon Scientific, declares that this Sunrise Wake-Up Clock (Model: WS902) is in compliance with EMC directive 2004/108/EC. A copy of the signed and dated Declaration of Conformity is available on request via our Oregon Scientific Customer Service.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

MANUALLY SET CLOCK

The following information is not to be used as contact for support or sales. Please call our customer service number (listed on our website at www.oregonscientific.com), or on the warranty card for this product) for all inquiries instead.

We

Name:	Oregon Scientific, Inc.
Address:	19861 SW 95th Ave., Tualatin,
	Oregon 97062 USA

declare that the product Product No.: WS902 Product Name: Sunrise Wake-Up Clock Manufacturer: iPM Concepts Limited Address: Block C, 9/F, Kaiser Estate, Phase 1, 41 Man Yue St., Hung Hom, Kowloon, Hong Kong

is in conformity with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference. 2) This device must accept any interference received, including interference that may cause undesired operation.