



1800W Cordless Steam Iron



First Use Safety Recommendation

Please read through this booklet for safe and efficient use of the appliance. We urge you to read the "Hint's" section and also follow all detailed instructions even if you are familiar with using this appliance.

Keep this guide handy for future reference.

English Page 02
Farsi Page
Arabic Page

X1060

 
IMPORTANT SAFEGUARDS




While using electrical appliances, in order to reduce the risk of fire, electric shock, and / or injury to persons, basic safety precautions should be followed, including the following:

- Read all instructions carefully.
- To protect against electric shock, **DO NOT IMMERGE** the appliance, cord set or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use. Unplug before cleaning, changing accessories or approaching parts which move in use.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return the complete appliance to your nearest authorized service facility for examination, electrical repair, mechanical repair or adjustment to avoid any hazard.
- Never pull the cord when unplugging from the power outlet.
- Do not abuse the cord. Never carry the appliance by the cord or pull it to disconnect it from the power outlet. Always grip the plug & pull to disconnect.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not operate appliance while empty.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot food or water or other hot liquids.
- Do not use the appliance for other than the intended use.
- The use of accessory attachments not recommended by this appliance manufacturer may cause hazards.
- This product is intended for travel use only.
- Do not leave this appliance unattended in use.
- To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
- If an extension cord is used, please ensure it is correctly wired and rated for use with this appliance. If in doubt consult a qualified electrician. The extension cord should be arranged so that it will not drape over the counters or table tops where it could be pulled by children or tripped over.

SAVE THESE INSTRUCTIONS

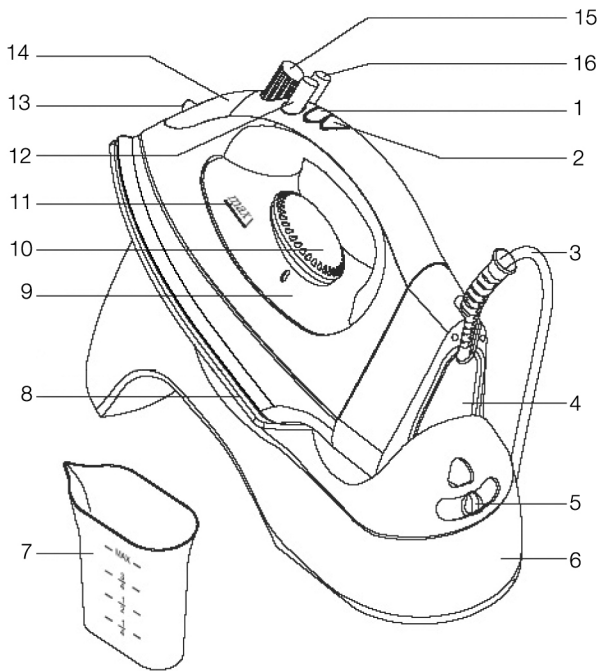Parts Identification



1. Heating lamp
2. Power lamp
3. Power cord
4. Cord adaptor
5. Slider lock
 - a. Cordless Ironing 
 - b. Storage position 
 - c. Corded Ironing 
6. Base
7. Measuring jug
8. Soleplate
9. Water tank
10. Temperature control dial
11. Water tank maximum mark
12. Burst of steam button
13. Spray nozzle
14. Water tank cover
15. Variable steam / self-clean control
16. Spray button

Intended use

Your Black & Decker iron has been designed for ironing garments made of linen, cotton, silk, wool and synthetic materials. This product is intended for household use only.

Safety Instructions

- **Warning!** When using mains-powered appliances, basic safety precautions, including the following, should always be followed to reduce the risk of fire, electric shock, personal injury and material damage.
- Read all of this manual carefully before using the appliance.
- The intended use is described in this manual. The use of any accessory or attachment or the performance of any operation with this appliance other than those recommended in this instruction manual may present a risk of personal injury.
- Retain this manual for future reference.

Using your appliance

- Always take care when using the appliance.
- Do not use the appliance outdoors.
- Do not operate the appliance if your hands are wet.
- Do not operate the appliance if you are barefoot.
- Guide the power supply cord neatly so it does not hang over the edge of a worktop and cannot be caught accidentally or tripped over.
- Never pull the power supply cord to disconnect the plug from the socket- Keep the power supply cord away from heat, oil and sharp edges.
- If the power supply cord is damaged during use, disconnect the appliance from the power supply immediately. Do not touch the power supply cord before disconnecting from the power supply.
- Disconnect the appliance from the power supply when not in use and before cleaning.

Safety of others

- Do not allow children or any person unfamiliar with these instructions to use the appliance.
- Do not allow children or animals to come near the work area or to touch the appliance or power supply cord. Close supervision is necessary when the appliance is used near children.

After use

- Switch off, remove the plug from the socket and let the appliance cool down before leaving it unattended and before changing, cleaning or inspecting any parts of the appliance.
- When not in use; the appliance should be stored in a dry place- Children should not have access to stored appliances.

Inspection and repairs

- Before use, check the appliance for damaged or defective parts- Check for breakage of parts, damage to switches and any other conditions that may affect its operation.
- Do not use the appliance if any part is damaged or defective.
- Have any damaged or defective parts repaired or replaced by an authorised repair agent.
- Before use, check the power supply cord for signs of damage, ageing and wear.
- Do not use the appliance if the power supply cord or mains plug is damaged or defective.
- If the power supply cord or mains plug is damaged or defective it must be repaired by an authorised repair agent in order to avoid a hazard- Do not cut the power supply cord and do not attempt to repair it yourself.
- Never attempt to remove or replace any parts other than those specified in this manual.



Electrical Safety

This product must be earthed- Always check that the power supply corresponds to the voltage on the rating plate

Extension cables & class 1 product

- A 3-core cable must be used as your appliance is earthed and of class 1 construction.
- Up to 30m(100 ft) can be used without loss of power.
- This appliance is not intended for use by young or infirm person without supervision. Children must be supervised to ensure they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer or an authorised Black & Decker Service Centre in order to avoid a hazard.

Additional safety instructions for irons

- Always route the cord carefully to avoid a tripping hazard.
- Do not use the appliance near water.
- Do not place the appliance near heat sources or directly under cabinets. Do not use the appliance in the presence of explosive or flammable materials.
- The filling aperture must not be opened during use.
- Steam may escape from the soleplate.
- Surfaces may be hot during use and during the cooldown period.
- Set the temperature control dial to the min position before plugging in or out.
- Let the appliance cool down before leaving it unattended and before cleaning or inspecting any parts of the appliance.
- The power supply cord should not touch the hot soleplate during use or during the cool down period.
- Do not touch the sole plate until it has cooled down.
- Wait until the appliance has cooled down before emptying the water tank as the water may still be hot.
- Always disconnect the appliance from the supply before tilling; emptying; cleaning; or carrying out any maintenance on the appliance.

Before first use

Cleaning the sole plate

- Do not immerse the appliance, plug or cord set in liquids.
- Make sure that the appliance is unplugged.
- Fill the appliance with water as described below.
- Use the self-clean system as described below- When finished, wipe the sole plate and steam vents with a cloth.


Some parts of the appliance have been lightly greased and as a result the appliance may smoke slightly when switched on for the first time- This will cease after a short while.


Assembly


Warning! Before assembly, make sure that the appliance is switched off and unplugged.

Fitting the Iron to the Base

The Iron should be stored on the base between uses.

To use it as a corded Iron, move the slider lock (5) to the right position.  The cord adaptor and power cord will be attached to the Iron during use, allowing for longer Ironing times.

To use the Iron without the cord, move the slider lock to the left position.  The cord adaptor (4) and power cord (3) will be attached to the base during ironing. Due to this, the Iron must be returned to the base to re-heat periodically.

Moving the slider lock (5) to the middle position  locks the Iron onto the base for storage.

Filling the water tank

In order to be able to use the steam function or the spray feature; you will first need to fill the water tank (9) with water.

- Make sure that the appliance is unplugged. Move the slider (5) lock to the left position so the cord (3) is not attached to the Iron.
- Open the water tank cover (14).
- Fill the appliance with water using the Jug (7) provided.
- Close the water tank cover & return the Iron to the stand (6).

Warning! Never fill above the maximum filling level (11)- Normal tap water can be used, but if you live in a hard water area the use of distilled water is recommended- Do not use chemically descaled water.

Use

Warning! Do not leave the appliance unattended while it is connected to the power supply and during the cool down period.

Temperature setting

 
The required temperature setting depends on the garment fabric.

Adjust the temperature control dial (10) to the required setting:

- Silk • Acrylic • Polyester • Wool • Cotton • Linen

If you are unsure of the fibre content of a garment, start with a low temperature setting and test on a small area (seam or inside hem).

If wrinkles remain, gradually increase the heat setting until you find the optimum setting.

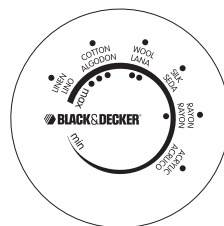

Using as a dry iron

- Fit the Iron to the stand (6), so the cord adaptor (4) & power cord (3) are connected to the Iron.
- Plug the appliance in and switch on.
- Set the Variable Steam / Self Clean Control (15) to the "0" position (Fig 1).
- Adjust the temperature control dial (10) to the required setting.

The Heating Lamp (1) will switch off when the appliance has reached the required temperature.

Using as a steam iron

- Fill the water tank as described above.
- Fit the Iron to the stand, so the cord adaptor & power cord are connected to the Iron.
- Rotate the variable steam / self clean control to the steam position (Fig 2).
- Plug the appliance in and switch on.
- Adjust the temperature control dial (10) to the required setting.

The Heating Lamp (1) will switch on. When the heating light switches off the iron will be ready for use as a steam iron. The heating light will regularly switch on and off whilst ironing. The power lamp (2) will stay on for as long as the iron is connected to the electrical supply.

- To create steam, set the Variable Steam / Self Clean Control (15) to the required steam position (Fig 2).

English

Using the steam burst button

The steam burst (12) feature can only be used whilst ironing on a high temperature setting.

- Make sure that there is water in the tank and the temperature control dial (10) is set to the required steam position.
- Lift the appliance and press the Burst of Steam Button (12) (Fig 3). You may need to press a few times to activate the pump.

Using the spray button

The spray feature (16) can be used at any temperature setting when either steam or dry ironing.

- Make sure that there is water in the tank;
- Press the button (16) several times to activate the pump while you are ironing.

Using the self clean control

The self-clean function (15) must be used before using the appliance for the first time and then regularly to remove scale.

- Fill the tank to the maximum filling level (11).
- Set the temperature control dial (10) to the max position.
- Plug the appliance in and switch on.
- Allow the appliance to heat up until the Heating / Auto Shut-Off Lamp (1) switches off and then on again.
- Unplug the appliance. Move the slider lock (5) to the storage position position so the cord adaptor & power cord are connected to the base, then take the cordless iron and hold it over the sink.
- Rotate the variable steam / self clean position (Fig 4). Hot water and steam will come out of the vents- Impurities and scale will be washed away.
- Move the iron backwards and forwards while this is happening.
- Release the self-clean (15) button. The control has a spring return mechanism and will shut off once released.
- Return the Iron to the base.
- Plug the appliance in and switch on.
- Iron an old cloth or towel to dry the sole plate (8).

Hints for optimum use

- Sort the articles to be ironed according to the fabric- Start ironing with the fabrics requiring the lowest heat setting.
- The appliance can be used as a dry iron even if there is water in the tank. Do not fill the tank with water if the appliance is to be used as a dry iron for an extended period.
- Avoid ironing over zippers, rivets on jeans etc. as they will scratch the soleplate.

Cleaning and storage

Warning! Before cleaning and storing, unplug the appliance and allow it to cool down.

- Pour out any remaining water after each use by tilting the appliance forward.
- Clean the body with a soft damp cloth.
- Wipe scale and other residues off the soleplate with a damp cloth.
- Store in an upright position.

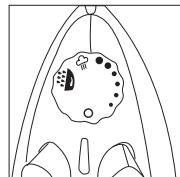 


Figure 1: Variable Steam/
Self clean control

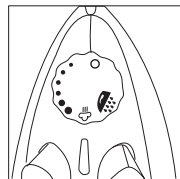 


Figure 2:
Steam position

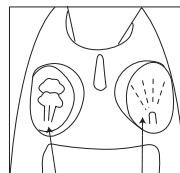 


Figure 3:
Burst and spray

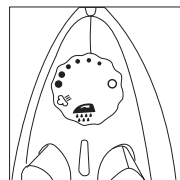 


Figure 4:
Self clean position

Protecting the environment



Separate collection. This product must not be disposed of with normal household waste.

Should you find one day that your Black & Decker product needs replacement, or if it is of no further use to you, do not dispose it off with other household waste. Make this product available for separate collection.



Separate collection of used products and packaging allows materials to be recycled and used again. Use of recycled materials helps prevent environmental pollution and reduces the demand for raw materials.

Local regulations may provide for separate collection of electrical products from the household, at municipal waste sites or by the retailer when you purchase a new product.

Black & Decker provides a facility for the collection and recycling of Black & Decker products once they have reached the end of their working life. To take advantage of this service please return your product to any authorised repair agent who will collect them on our behalf. You can check the location of your nearest authorised repair agent by contacting your local Black & Decker office at the address indicated in this manual. A list of authorised Black & Decker repair agents and full details of our after-sales service and contact are available on the Internet at: www.2helpU.com

BLACK & DECKER HOME APPLIANCE 2 YEAR WARRANTY

Black & Decker provides a 2 Year Warranty for this product from the date of purchase against defects due to defective materials or workmanship. Motor/element burn-outs due to voltage fluctuations are not covered under warranty. If the product should become defective within the warranty period, Black & Decker will repair or (at Black & Decker's discretion) replace it free of charge.

The warranty provisions do not cover failure due to accident, misuse, abuse, negligence or non observation of local regulations on the part of the user. Equally, the warranty provisions do not apply where the appliance has been serviced by a person not authorized by Black & Decker or serviced with non-approved parts and this has contributed to the fault of the product. Superseded models without a replacement equivalent will either be repaired or (at Black & Decker's discretion) replaced with another product of similar retail value.

UPON PURCHASE

Fill in the Warranty Registration Card with the original Authorized Dealer's stamp (indicating date of purchase) and attach your purchase receipt to it. Retain in case of claims in the future.

MAKING A CLAIM

Take your defective product together with the Warranty Registration Card & purchase receipt to your local service Centre. You can either do this in person or send it freight prepaid. If mailing or shipping your appliance, ensure that it is packed carefully in a sturdy carton with enough packing material to prevent damage. Include a note describing the problem to the service Centre and be sure to give your return address.

DESIGNED FOR DOMESTIC PURPOSES ONLY.

Names & Addresses for Black & Decker Service Concessionaries

Afghanistan: Ishan National Co., Opp. Ministry of Justice, Kabul. Tel.: +93-2-2101727. **Algeria:** SARL Outillage Corporation, 04 Route De Dely Brahim Cheraga, Alger. Tel.: +213-21-364363/508, Fax: +213-21-369667. **Bahrain:** Fawaz Al Zayani, P.O.Box 26563, Adliya, Manama. Tel.: +973-17-715252/712756, Fax: +973-17-713789. **Bangladesh:** Ultra Corporation, 8, Kushol Centre, Uttara, Dhaka 1230. Tel.: +880-2-8919272/9756 Ext.28, Fax: +880-2-9887167. **Egypt:** Anasia Egypt for Trading S. A. E., P.O.Box 2443, 110 Mostafa Refaat Street, Sheraton Heliopolis 11361, Cairo. Tel.: +20-2-2684159, Fax: +20-2-2684169. **Ethiopia:** Tewfik Sherif & Co. Ltd., P.O.Box 5583, Debre Zeit Road, Addis Ababa. Tel.: +251-1-651700/601, Fax: +251-1-650570. **India:** Gryphon Impex Pvt. Ltd., D-6/4, Okhla Industrial Area, Phase-I, New Delhi-110020. Tel.: +91-11-26372602-4, Fax: +91-11-26372601. **Iran:** Tehran - Service Centre of Iran, No 510, South Kargar Ave, Below Pasteur Sq. Tehran. Tel.: +98-21-6490608/0656/6407672. **Kish Island:** Cayhan Electric Co., No. 69, Paradise Shopping Centre, Kish Island. Tel.: +98-76444-22894. **Jordan:** Bashitli Hardware, P.O.Box 1564, TLA Ali, Amman. Tel.: +962-6-5350009/4770741, Fax: +962-6-5350012/4789783. **Kenya:** Zylong Enterprises, IPS Building, Kuanda Street, P.O.Box 40877, Nairobi. Tel.: +254-2-338188/199, Fax: +254-2-330642. **Kuwait:** Al Omar Technical Co., P.O.Box 4062, 13041 Safat, Kuwait. Tel.: +965-4848595/0039, Fax: +965-4845652. **Lebanon:** Est. F.A. Kettaneh SA, P.O.Box 110242, Dora Highway, Kettaneh Building, Beirut. Tel.: +961-1-255860/6, Fax: +961-1-255891. **Libya:** El Ghoul Brothers, P.O.Box 348, Islamic Call Bldg., Office 201-202, Benghazi. Tel.: +218-61-9097681/4183, Fax: +218-61-9094123. **Madagascar:** Group Tana Confort S. A. R. L., B. P. 1770, Antananarivo. Tel.: +261-20-2264505, Fax: +261-20-2264244. **Malta:** John G. Cassar Ltd., 36 Victory Str, Oormi QRM 06, Malta. Tel.: +356-21-493251, Fax: +356-21-483231. **Mauritius:** Happy World Marketing Ltd., Block 2, Industrial Estate, Coromandel, P.O.Box 429, Port Louis. Tel.: +230-2076700, Fax: +230-2337330/7400. **Nepal:** Universal Trading Centre, P.O.Box 1947, Tripureswor, Kathmandu. Tel.: +977-1-262192/260587/785, Fax: 261154. **Nigeria:** Amin Bros. Eng. Co. Ltd., 30A (Plot 1291), Akin Adesola Street, Victoria Island, Lagos. Tel.: +234-1-3201778, Fax: +234-1-2613667. **Oman:** Oman Mktg. & Service Co., P.O.Box 2734, Ruwi, Muscat. Tel.: +968-560232, Fax: +968-560255. **Pakistan:** Karachi - Ammar Service & Spares, 60, Bank Arcade, Serai Road, Karachi. Tel.: +92-21-2426905, Fax: 2427214/5243. **Pakistan:** Lahore - Electronics Inn, 212-G Raja Centre, Main Market, Gulberg, Lahore. Tel.: +92-42-5756750. **Philippines:** Modern House International Enterprises, 213 Rizal Ave. Extension, between 2nd and 3rd Ave. Kalookan City. Tel.: +632 366-4487, Fax: +632 366-4489. **Qatar:** Al Muftham Trading & Cont., P.O.Box 875, Doha. Tel.: +974-4650880/4446868, Fax: +974-4441415. **Saudi Arabia:** Dammam - Ebrahim Fawaz Al Zayani, P.O.Box 76026, Al Raka, Dammam. Tel.: +966-3-8140914, Fax: +966-3-8140824. **Jeddah:** Anasia Trading Co. Ltd. Caravan Shopping Centre, Hail Street. P. O. Box 50959, Jeddah-21477, Tel. 02 650 0948/02 636 3825, Fax 02 638 0720. **Madina:** Garziz Trdg. for Bldg. Mat.&Decor., P.O.Box 3364, Madina. Tel.: +966-4-8261490/82227636, Fax: +966-4-8265741. **Riyadh:** Anasia Trading Co Ltd. New Akaria Building, 60th St., 3rd Floor, Building # 4, Office # 3402, Malaz. P. O. Box. 18689, Riyadh-11425, Tel.: 01 478 2549, Fax: 01 478 2761. **Yanbu:** Bin Afif, P.O.Box 530 Yanbu, Al Bahr. Tel.: +966-4-3222626/8867, Fax: +966-4-3222210. **Sri Lanka:** Delmege Gen. Equip. Pvt. Ltd., No. 428/IAT. B., Jaya Mawatha (Darley Road), Colombo-10. Tel.: +94-11-2665914, Fax: +94-11-2665915. **Sudan:** United Distribution Company, P.O.Box 325, Sayed Abdul Rehman Street, Khartoum. Tel.: +249-11-772612/777296, Fax: +249-11-770919. **Tanzania:** General Motors Investment, P. O Box 16541, 14 Vingunguti Nyerere Road, Dar Es Salaam. Tel.: +255-22-2862661/5022, Fax: +255-22-2862667/5412/3. **Tunisia:** STE Tunisienne De Quincaillerie Stq., Nvelle ZI 2013, Ben Arous, Tunis, Tunisia, Tel: +216 71386102, Fax: +216 71380412. **UAE:** Abu Dhabi - Light House Electric., P.O.Box 120, Abu Dhabi. Tel.: +971-2-6726131, Fax: +971-2-6720667. Dubai - Black & Decker (O) A.G., P.O.Box 5420, Dubai. Tel.: +971-4-7028234/233, Fax: +971-4-2822765. Ideal Mach. & Equipt. R. W/shop P.O.Box 37116, Al Quoz, Dubai. Tel.: +971-4-3474160, Fax: +971-4-3474157. Sharjah - McCoy Middle East LLC, P.O.Box 20228, Sharjah. Tel.: +971-6-5336321, Fax: +971-6-5336320. **Uganda:** The Building Centre, Kitgum House, 52 Station Road, P.O.Box 7436, Kampala. Tel.: +256-41-234567, Fax: +256-41-236413. **Yemen:** Aden - Middle East Trad. Co. Ltd., Mulla Dakka, Aden. Tel.: +967-2-240950, Fax: +967-2-240952. **Sana'a:** Middle East Trad. Co. Ltd., P.O.Box 12363, Hayel Street, Sana'a. Tel.: +967-1-204201, Fax: +967-1-204204. **Taiz:** Middle East Trad. Co. Ltd., Campa area near Al-Kair mosque, Taiz. Tel.: +967-4-231610/232033, Fax: +967-4-219869. **Zimbabwe:** J.D.Distributors, P.O.Box 226, 17 Bessemer Road, Graniteside, Harare. Tel.: +263-4-753913-7, Fax: 753918. **Cyprus:** G. Kyrianiou Trading Co Ltd., 51 Prodromou Ave. Strovolos, 1681, P.O. Box 23318 Nicosia Cyprus. Tel.: 00357 22 468170/1, Fax: 00357 22 468186, Email gklttd@spidernet.com.cy



BLACK & DECKER®

WARRANTY REGISTRATION CARD

YOUR NAME / الإسم _____

YOUR ADDRESS / العنوان _____

POSTCODE / الرمز البريدي _____

DATE OF PURCHASE / تاريخ الشراء _____

DEALER'S NAME & ADDRESS / اسم و عنوان البائع _____

PRODUCT MODEL NO. X1060