




How to use

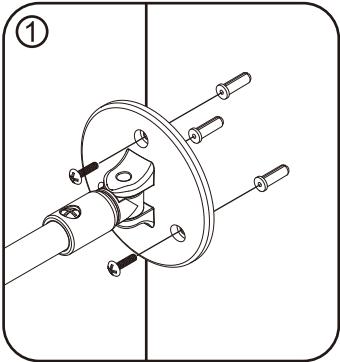


Fasten onto wall using the 3 screws provided

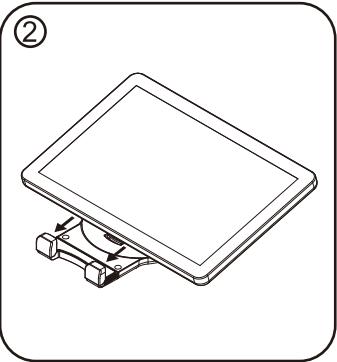

Place tablet on one side of bracket

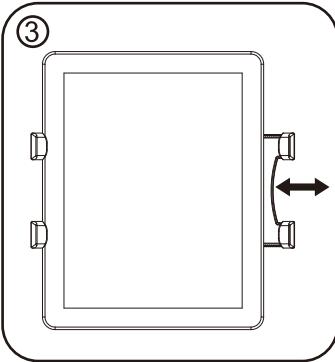


Pull the bracket, place the tablet and release

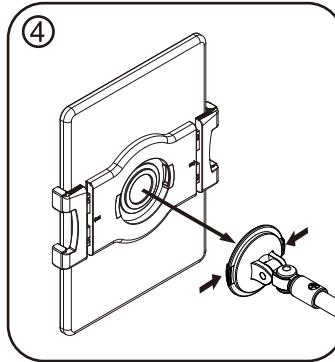


Attach, press and release, spin it to secure it's in position


Caution: Please ensure that tablet is securely fixed in.

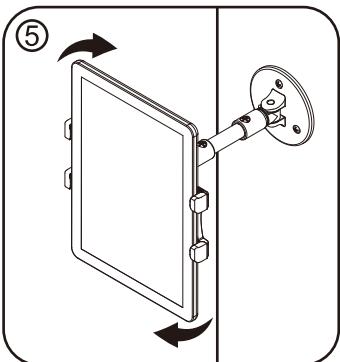


Horizontal / vertical view
360° rotation

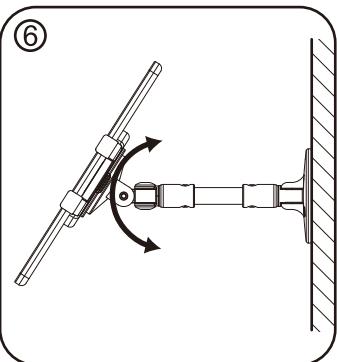

Tilts up and down 180°

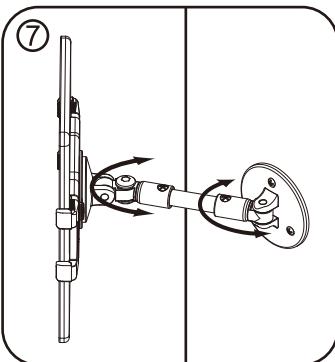

Dual swivel hinges
each with 180° arch

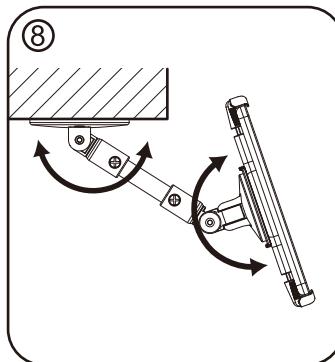


Able to fasten under wooden surfaces like tables or kitchen cabinets

"Universal bracket and iPad shell not included"


Imported by BAF - 14730 Giberville - FRANCE

CRT2112


Manuel d'utilisation

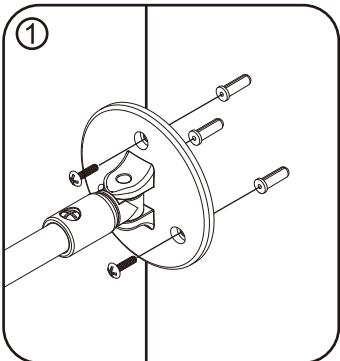


Fixez au mur avec les 3 vis fournies

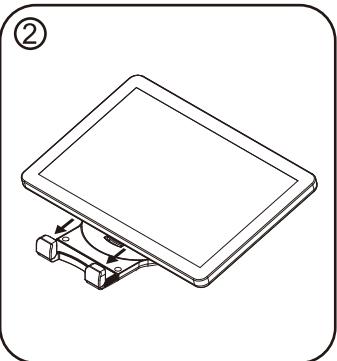

Disposez la tablette sur un côté de la fixation

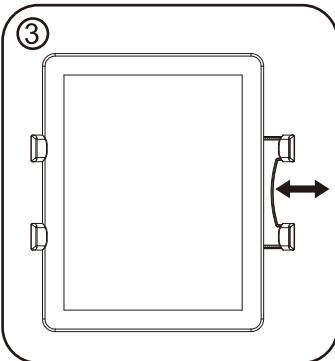


Ouvrez la fixation au-delà de la tablette et relâchez

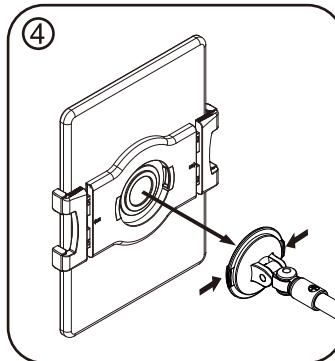


Pressez les côtés de la fixation, disposez la tablette et relâchez


Attention : Assurez-vous que la tablette soit fixée correctement

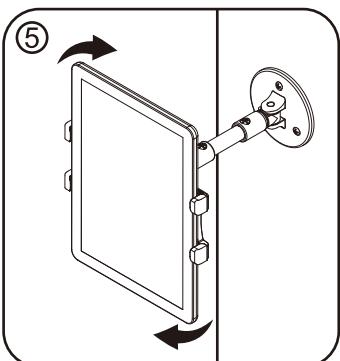


Mode portrait / paysage
Rotation 360°

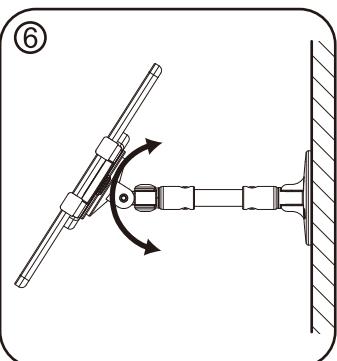

Inclinaison haut et bas 180°

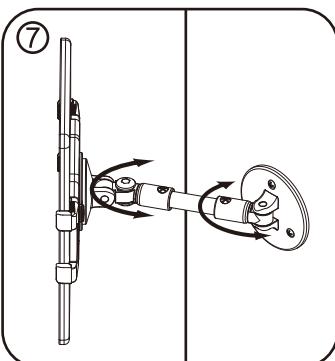

Double pivot 180°

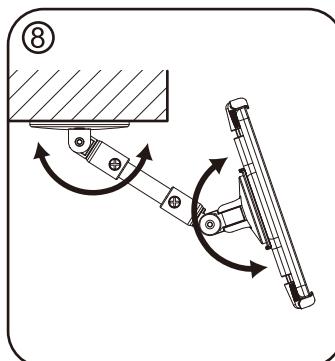

Peut être fixé sous des surfaces en bois telles que table ou meuble cuisine

"Fixation universelle et coque iPad non incluses"

Imported by BAF - 14730 Giberville - FRANCE

CRT2112