



Food Prep / Beverage System

Instructions for use

© 2006 The Coleman Company, Inc.
www.coleman.com



This unit is an accessory for Coleman® Propane Grill Models 9993 and 9998. Also read the additional instructions and warnings that are provided in the manual that came with your Coleman® Grill.

 
IMPORTANT

CONSUMER/USER: This instruction manual contains important information necessary for the proper assembly and safe use of the appliance. Read and follow all warnings and instructions before assembling and using the appliance. Follow all warnings and instructions when using the appliance. Keep this manual for future reference.

If you have questions about assembly, operation, servicing or repair of this appliance, please call Coleman at 1-800-835-3278 or TDD: 316-832-8707. In Canada call 1-800-387-6161.

Features

1. Frame
2. Beverage Tray
3. Condiment Tray
4. Snap-tight Lid
5. Lid w/ Cutting Board

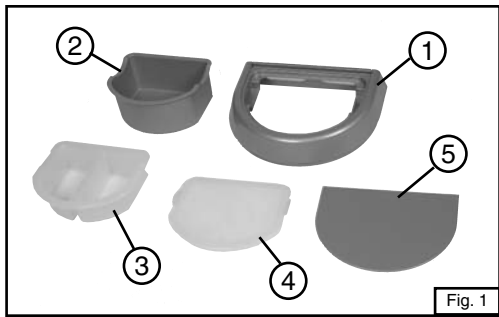


Food Prep / Beverage Assembly

Attach the Food Prep / Beverage System to the Grill

NOTE: This Side Solution™ Food Prep / Beverage System attachment is designed for use only when properly attached to Coleman® grill models 9993 and 9998. Attempted use or setup in a manner not described in this manual is prohibited and will void the warranty.

- Remove the components from the carton and discard all packing components.
- Wash the food contact surfaces with hot soapy water and dry completely. Wipe the inside and outside surfaces with a clean damp cloth and dry completely.
- For outdoor use only.

 
1. Align the tabs on the Food Prep frame with the slots on the side of the grill (Fig. 2).

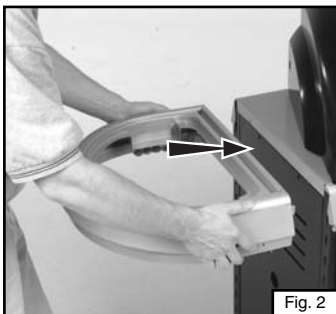

2. Use firm pressure to push the Food Prep frame down and into place (Fig. 3). The joint between the Food Prep frame and the Grill will be even.



 3. Engage the locks by firmly pushing the tabs into the slots (Fig. 4). Be sure to engage two locks on the Food Prep frame.

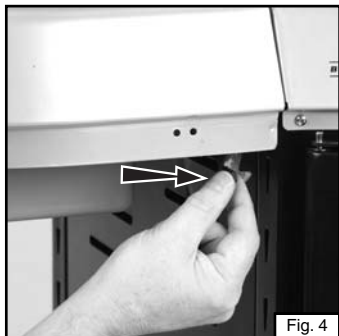

Setup

1. Place the plastic Beverage Tray into the unit (Fig. 5).

NOTE: When used for beverages; simply fill with ice to keep beverages cold.



2. Place the plastic Condiment Tray into the unit (Fig. 6).

 
 
NOTE: Fill with favorite condiments; store in refrigerator with snap-tight lid (Fig. 7) until ready to take to the grill.



3. Place the plastic Snap-tight Lid onto the Condiment Tray (Fig. 7).



4. Place the Lid onto the Food Prep / Beverage System when not in use or when more prep area is needed (Fig. 8) or turn over to use as a cutting board (Fig. 9).

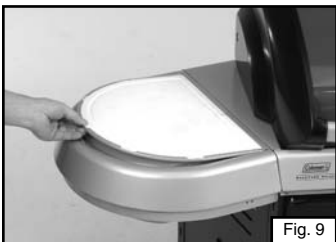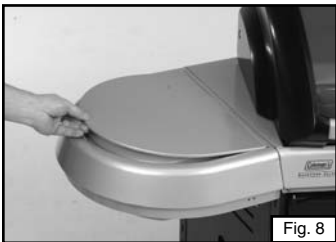

Care, Maintenance and Cleaning

⚠ CAUTION

All cleaning and maintenance should be done only when the grill is cool and with the fuel supply turned off at the cylinder. (See instruction manual or labels that were supplied with the grill.)

Suggested Cleaning Materials:

- Mild dishwashing liquid detergent
- Hot water
- Nylon cleaning pad
- Soft, dry cloth

Component Cleaning:

- **DISHWASHER SAFE:** All plastic components are dishwasher safe.
- **FOOD PREP SURFACES:** Wash the food contact surfaces with hot soapy water. These items include the lid. Remove stubborn residue with a mild cleanser and a nylon cleaning pad. **DO NOT** use commercial cleaners. Wipe dry with a soft, dry cloth.
- **EXTERIOR SURFACES:** Clean exterior surfaces with mild soap and hot water. Remove stubborn residue with a mild cleanser and a nylon cleaning pad. **DO NOT** use abrasive cleaners. Wipe dry with a soft, dry cloth.


To Store

- Always make sure all surfaces that came or will come in contact with food items are thoroughly cleaned and dry before storing the Food Prep / Beverage System.

Parts List

No.	Part Number	Description
1	9989-2091	Beverage Tray
2	9989-2041	Condiment Tray
3	9989-2101	Snap-tight Lid

No.	Part Number	Description
4	9989-2111	Lid Lock
5	9989-5021	Lid w/ Cutting Board

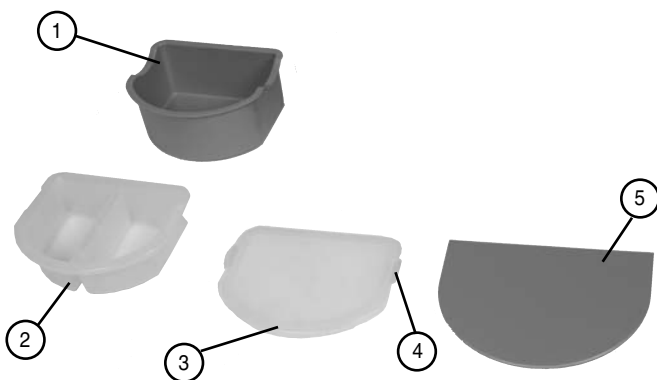 

Notes:

Warranty

Limited One Year Warranty

The Coleman Company, Inc. ("Coleman") warrants that for a period of one year from the date of original retail purchase, this product will be free from defects in material and workmanship. Coleman, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. Coleman dealers, service centers, or retail stores selling Coleman® products do not have the right to alter, modify or in any way change the terms and conditions of this warranty.

What This Warranty Does Not Cover

This warranty does not cover normal wear of parts, parts that are not genuine Coleman® parts, or damage resulting from any of the following: negligent use or misuse of the product; use on improper voltage or current; commercial use of the product; use contrary to the operating instructions; disassembly, repair or alteration by anyone other than Coleman or an authorized service center. Further, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes. Warranty void if damage to product results from the use of a part other than a genuine Coleman® part.

COLEMAN SHALL NOT BE LIABLE FOR DEFECTS THAT ARE CAUSED BY THE USE OF UNAUTHORIZED PARTS OR SERVICE. COLEMAN SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE BREACH OF ANY EXPRESS OR IMPLIED WARRANTY OR CONDITIONS. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN DURATION TO THE DURATION OF THE ABOVE WARRANTY OR CONDITIONS. SOME STATES, PROVINCES, OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE.

How to Obtain Warranty Service

Take the product to an authorized Coleman service center. You can find the nearest authorized Coleman service center by visiting www.coleman.com or calling 1-800-835-3278 or TDD 316-832-8707 in the United States or 1 800 387-6161 in Canada. If a service center is not conveniently located, attach to the product a tag that includes your name, address, daytime telephone number and description of the problem. Include a copy of the original sales receipt. Carefully package the product and send either by **courier** or **insured mail** with shipping and insurance prepaid to:

For products purchased in the United States:

The Coleman Company, Inc.
3600 North Hydraulic
Wichita, KS 67219

For products purchased in Canada:

Sunbeam Corporation (Canada) Limited
DBA Jarden Consumer Solutions
5975 Falbourne Street
Mississauga, Ontario
Canada L5R 3V8

The costs of transporting the product to Coleman or an authorized service center for warranty service is the responsibility of the purchaser.

Do not mail products with fuel in tanks, or with disposable propane cylinders. Remove glass globes from lanterns and wrap separately.

DO NOT RETURN THIS PRODUCT TO THE PLACE OF PURCHASE.

If you have any questions regarding this warranty please call 1-800-835-3278 or TDD 316-832-8707 in the United States or 1 800 387-6161 in Canada.



The Coleman Company, Inc. • 3600 North Hydraulic • Wichita, KS 67219 U.S.A.
1-800-835-3278 • TDD: 316-832-8707

© 2006 The Coleman Company, Inc. All rights reserved. Coleman® and
are registered trademarks of The Coleman Company, Inc.



www.coleman.com

9989-050 (20070112)