



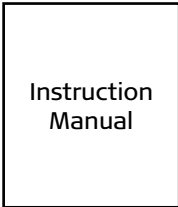






# Combi

## Easy Glider 9800 Series Easy Glider Plus 9810 Series Deluxe Easy Glider 9850 Series Instruction Manual



Read all instructions BEFORE assembly and USE of product. **KEEP INSTRUCTIONS FOR FUTURE USE.** Record the following information for quick reference. Note: Illustrations are only representative and not actual. Attach copy of sales receipt.

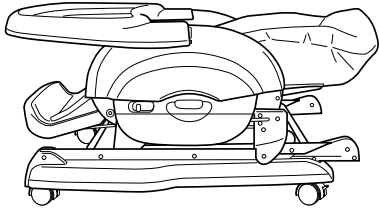Date Purchased: \_\_\_\_\_ Model Number: 98 \_\_\_\_\_ - \_\_\_\_\_ Color \_\_\_\_\_  
Located near the rear right leg.
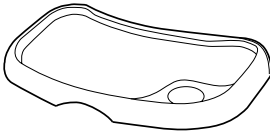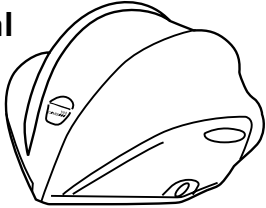
### Parts List

<p>Make sure you have all the parts listed below before using your high chair. If any parts are missing, call Consumer Affairs at 1-800-992-6624.</p> <p><b>9800/9810/9850 Series Parts</b></p>  <p>Main Body with Tray</p>  <p>Warranty Card</p>  <p>Instruction Manual</p>  <p>2 Front Swivel Wheels</p>  <p>2 Rear Stationary Wheels</p>	<p><b>9810 Series</b></p> <p><b>Easy Glider Plus</b></p> <p><b>Additional Part</b></p>  <p>Snap-On-Tray</p>	<p><b>9850 Series</b></p> <p><b>Deluxe Easy Glider</b></p> <p><b>Additional Parts</b></p>  <p>Canopy</p>  <p>Speakers in a Box</p>  <p>Combi Catcher Mat</p> <p>Basket comes attached to base unit</p>
-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

### Name of Parts
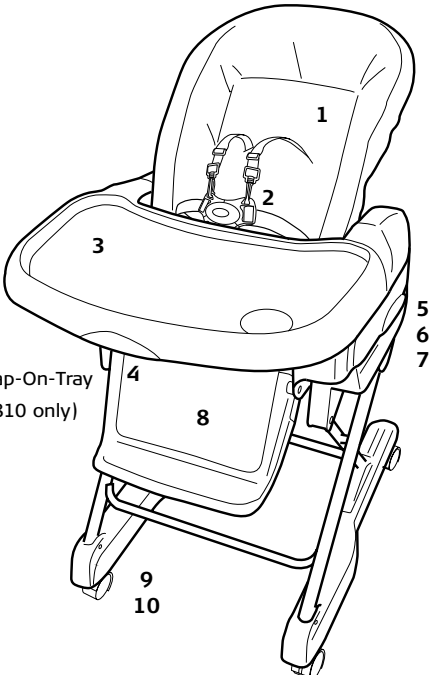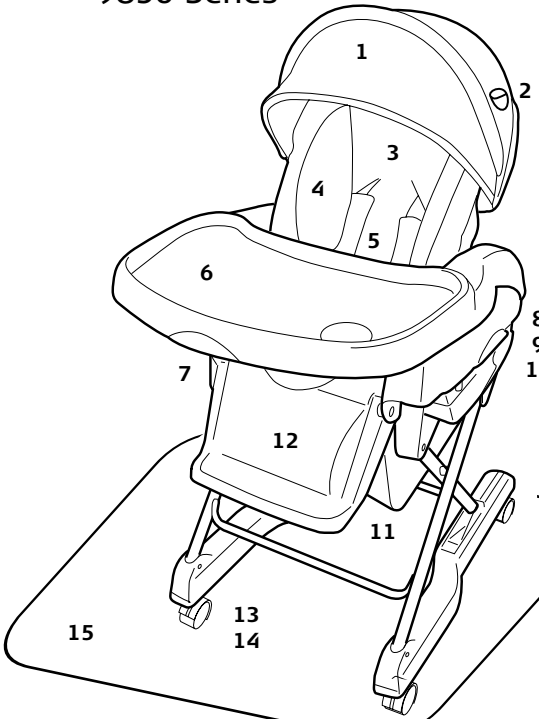
<p><b>Easy Glider</b> 9800 and 9810 Series</p> 	<p>Canopy . . . . . 1 Speaker Pocket . . . . . 2 1 . . . . . Seat Cushion . . . . . 3 Infant Body Pillow . . . . . 4 2 . . . . . 5-Point Harness . . . . . 5 3 . . . . . Tray . . . . . 6 4 . . . . . Tray Release Lever . . . . . 7 5 . . . . . Reclining Lock Lever . . . . . 8 6 . . . . . Folding Lever . . . . . 9 7 . . . . . Glide Lock Lever . . . . . 10</p> <p>Basket . . . . . 11 8 . . . . . Foot Rest . . . . . 12</p> <p>9 . . . . . Wheels . . . . . 13 10 . . . . . Brake Lever . . . . . 14 Combi Catcher Mat . . . . . 15 16 . Snap-On-Tray (9810 only)</p>	<p><b>Deluxe Easy Glider</b> 9850 Series</p> 
---------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------

# **WARNINGS** For your child's safety:

For safe and proper use of all the features of this product, please read this manual for a thorough understanding of the functions.

## **CAUTIONS:**

### **ALL OPERATING AND ASSEMBLY PROCEDURES SHOULD BE PERFORMED BY AN ADULT.**

1. Improper usage or lack of knowledge regarding the instructions can result in dangerous situations, personal injury, or damage to the high chair.
2. Completely remove all plastic bags and packing materials before using this product to prevent a possible choking hazard.

If your high chair is not used in compliance with these instructions, serious injury may occur. In the event of damage or problems, discontinue use and contact:


Combi Consumer Affairs  
1-800-992-6624.


**Maximum weight of child:  
45 lbs. (20 kg)**


## **WARNING**


The child should be secured in the high chair at all times by the restraining system, either in the reclining or the upright position. The tray is not designed to hold the child in the chair. It is recommended that the high chair be used in the upright position only by children capable of sitting upright unassisted.


## **WARNINGS**


 Prevent serious injury or death from falls or sliding out.


 Always secure child in the restraint.


 Always keep child in view while in high chair.


 Never leave child unattended.


 Never use a high chair that has fallen, been exposed to strong impact, has deformation or cracks, or damaged parts.


 Keep your child from crawling under the high chair.


 Always pay attention that other children do not touch or play with the high chair while a child is in it.


 Never use near flames or fire.


 Never use by places where items may fall onto the child in the high chair.


 Do not allow your child to stand in or on the high chair.


 Do not lift and carry high chair with a child in it.


 Do not allow children to lean over the sides of the high chair. It may become unbalanced and tip over.


 Do not use on steep slopes, stairs, escalators, beaches, mud, etc.


 Do not over fill basket in the Deluxe Easy Glider.


 Recommended maximum weight is 6 lbs.

 Always use the 5-point harness when using the full recline position.

 Adjust the 5-point harness according to the size of your child. Adjust for every reclining position.

 Do not adjust the height or use the folding lever with your child in the high chair.

 Do not allow a child to ride or sit on areas of the high chair other than seat.

 Always engage brakes when parking the high chair.

The gliding feature can be used in any recline position up to a maximum of 22 lbs.

The automatic headrest is for your child's protection. Please discontinue use in the fully reclined position when the child's head touches the headrest.

## Opening/Storing the High Chair

### CAUTION


Remove child before adjusting heights.

### Opening

1. Pull up the left and right height adjustment levers and then lift the main body up.
2. Release your fingers from the left and right lever when the desired height is fixed. At this time, check to see that the left and right height adjustment indications are in matching positions before using.

### Storing

Pull up the left and right height adjustment levers and pull main body up slightly to unlock, then slowly lower the high chair.

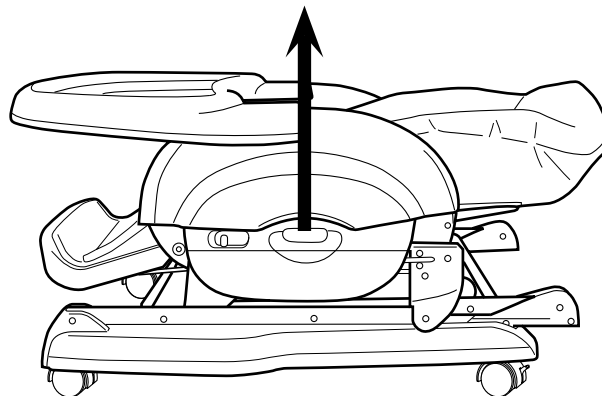

## Attaching/Removing the Seat Cushion

### CAUTION

Do not use a seat cushion that is ripped or torn.

### Removing the Seat Cushion

1. Unbuckle the 5-point harness and pull the straps out from seat cushion.
2. Grasp the seat cushion and carefully remove.

Always use the high chair with the cushion attached. Failure to do so may injure your child.

### Attaching the Seat Cushion

1. Pass the 5-point harness straps through the appropriate openings in the seat cushion.
2. Shape the cushion to the seat frame and velcro into position.
3. Loop the right and left side bands around the hooks located behind the seat of the main unit.

## Attaching/Removing the Tray

### CAUTION

Before using, check to see that the tray is locked into the position you set.


### Attaching the Tray

1. Insert the tray along the guides on the sides of the main unit.
2. Pull the lever located under the front of the tray and slide the tray back until a comfortable position is found for your child. Position the tray so that the sides are locked into matching positions.

Pay attention so that the child's fingers are not in the guide on the side of the main unit to avoid injury.

### Removing the tray


Locate the tray release lever and pull off.

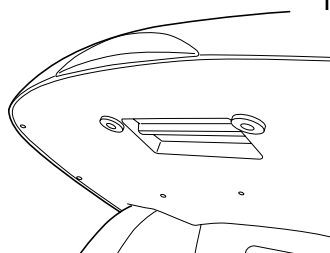

## Using the Reclining Backrest

- Use the high chair with the backrest in the full recline position to carry 2-3 month old babies without a strong neck.
- The backrest can be adjusted to 5 positions.
- The footrest angle changes along with the recline.

1. To recline the backrest, pull and hold the reclining lock lever located on the back of the seat.
2. After the recline position is determined, always lock the reclining lock lever by releasing it to its original position.

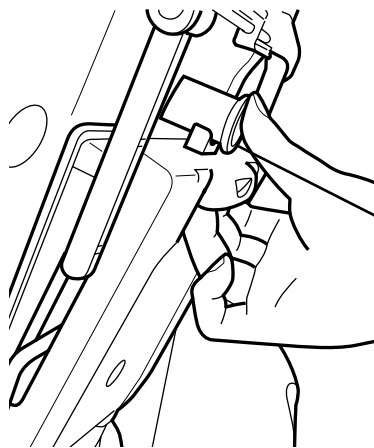

To return the backrest to the upright position, pull and hold the reclining lock lever and push the seat forward. The seat will lock into place again by releasing the reclining lock lever.


Reclining Lock Lever

### CAUTION

Always adjust the harness when changing the reclining angle.


Always keep the reclining lock lever in the lock position.

Be careful that there are no obstacles in front of it before using since the footrest will move during the recline.

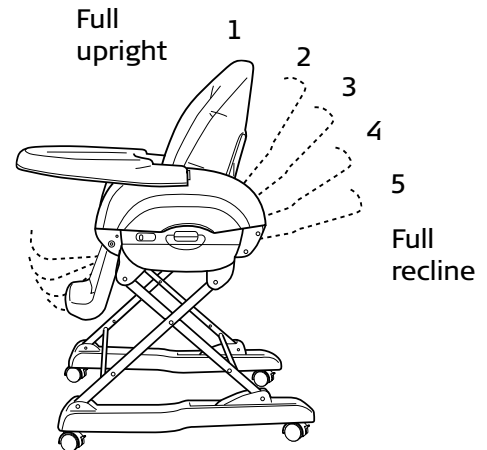

## Using and Adjusting the 5-Point Harness

1. Place the crotch belt between the child's legs.
2. Insert both waist belt buckles into the middle plastic piece.
3. Attach each shoulder strap hooks to the top of the waist belt clips.
4. To adjust the harness or waist belt, loosen the slack on both sides of each buckle.

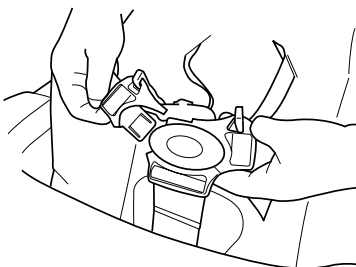

### ⚠ WARNING

Avoid serious injury from falling or sliding out. Always use harness for security.

### CAUTION

Even when the harness is fastened, be careful not to let the child slip out or stand.

## Attaching & Using the Wheels

### Front Swivel Wheels

Insert the swivel wheels, with the **circular** shaft, into the circular hole in the base of the front legs.


### Rear Stationary Wheels

Insert the rear wheels, with the **square** shaft, into the square hole in the base of the rear legs.

### CAUTION

Always keep the wheels locked other than when moving the high chair. Failure to do so may cause the high chair to move unexpectedly.

Wheels must be locked when using the glide feature.

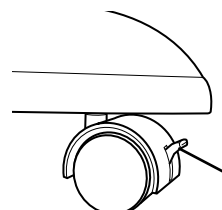


To lock wheels, lower the brake lever. (Down position.)

To unlock wheels, lift the brake lever. (Up position.)

Brake Lever

## Using the Gliding Feature

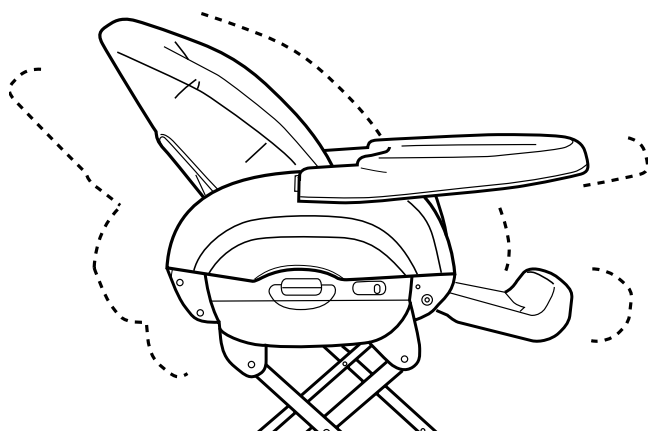

## **! WARNING**

Never push the high chair like a swing. It may fall over and cause your child to fall out.

### **CAUTION**

The gliding feature can be used in any recline position up to a maximum of 22 lbs.


Always watch your child when using the glide. Immediately stop if you sense something is wrong.

Check to make sure obstacles are not within its gliding path.

1. Always lock the front wheels. Keep wheels locked.
2. Adjust the reclining position to the appropriate position for your child's age and strength.
3. Slide the left and right glide lock levers into glide position. Use a smooth and gentle motion never a hard push.
4. To lock the glide feature slide the glide lock levers into the lock position.

## Deluxe Easy Glider 9850 Series Additional Instructions

## Attaching the Canopy

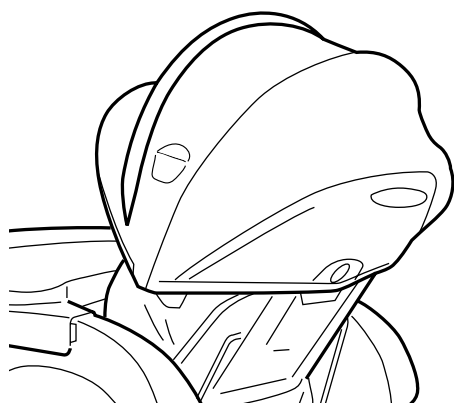

### **CAUTION**

Failure to fully secure the canopy holders can cause the holders to bend. When storing the high chair by laying it down, be sure the canopy is off the ground to prevent it from bending.

### Attaching the Canopy

1. Confirm the canopy is facing in the proper direction.
2. To attach the canopy place the pins in the clamps of the canopy holders into the holes on the sides of the backrest.

Note: Clamp must be turned to be positioned behind the canopy holder in order to insert into the frame.

### Using the Canopy


Open the canopy by pulling on the visor with one hand until fully opened.

### Removing the Canopy

Grasp the canopy holders on each side, one at a time, and pull out from the frame.

## Installing the Speakers

1. The canopy comes with a small pocket on each side. Insert a speaker in each pocket.
2. A storage pocket is located on the back of the seat under the canopy. Place your portable CD, cassette, or MP3 player inside the pocket. There is an opening in the back of the canopy to accommodate the speaker cords.
3. Insert the (2.8mm) mini plug into the player.

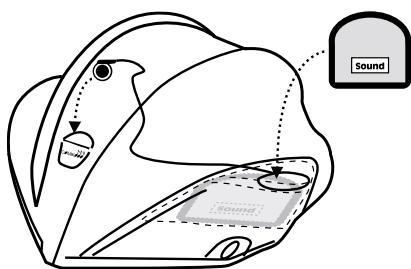

Turn on your player.

### CAUTION

Be sure to test the volume on your player. Set it at a comfortable level so that it does not startle your child when turning it on. Loud volume can hurt your child's ears. If you notice that the sound has become weak or distorted or if tracks do not change, this is an indication that your batteries are low. Replace the batteries and set the volume at a comfortable level.

### CAUTION

**Before folding your high chair, be sure to remove your player from the back pocket of the canopy.**

This will make it easier to fold the high chair.

When you fold the high chair, you may leave the speakers in the Acoustic Canopy, but only for short periods of time.

In the summer, the temperature may get as high as 212°F/100°C or more. Do not leave your high chair, with the speakers in the Acoustic Canopy pockets, in your car trunk where the temperature may reach high levels. Store speakers in a cool and dry area.




## WARNING

To avoid serious injury keep stereo speakers and cords out of reach of children.

## Using the Basket and Combi Catcher Mat



Clips

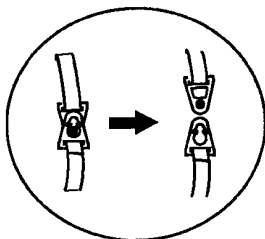

### Removing

Unfasten clips on front and side of basket.

### Attaching

Reverse the procedures for removing.

### Combi Catcher Mat

Open and place the Combi Catcher Mat at under the high chair. Always engage brakes when parking the high chair.


## Removing the Infant Pillow

1. Remove the tray.
2. Unbuckle the 5-point harness.
3. Pull off the infant pillow.

# Easy Glider 9810 Series

## Additional Instructions

### Attaching the Snap-On-Tray

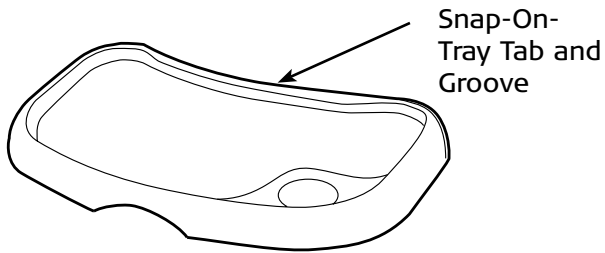

#### Attaching

Place Snap-On-Tray over the standard tray and push down making sure the "snap tab and groove" snaps into place.

#### Removing

Grasp the Snap-On-Tray tab and pull up gently, then lift the tray upwards.

### Routine Maintenance

**STORE IN A COOL AND DRY AREA**, especially in the summer. Do not store the high chair in the trunk of a vehicle.

#### SEAT CUSHION AND INFANT BODY PILLOW

Machine wash on gentle cycle in cold water using a mild detergent. Do not use bleach. Lay flat to dry in shaded area. If the seat cushion is frayed or unraveling, discontinue use and call Consumer Affairs for further instruction.

#### CANOPY

Brush off any food and dirt. For stubborn dirt, dilute a mild detergent then apply directly to the dirty area. Wipe out the detergent. Do not use bleach. Wipe out excess water with a dry cloth and dry in a shaded area. Lay in shaded area until dry.

#### FRAME

Briskly wipe off any food and dirt. To clean the body, wipe with a damp cloth then wipe out any traces of moisture on the body with a dry cloth. The main body might become moldy and musty if not wiped dry. **Excessive exposure to the sun could cause premature color fading of frame and fabric.**

#### WHEELS

After prolonged normal use, the wheels of your high chair may not swivel as easily as when it was new. This is usually due to a buildup of dirt in the swivel mechanism. Before adding lubrication, test the swivel action to determine whether lubrication is necessary. Using compressed air\* blow dirt from the mechanisms. **Do not use soap and water to wash wheels.** Periodically check.

#### ADDING LUBRICANT

Avoid lubricating the wheels whenever possible. Excessive lubrication or adding lubricant to wheels when new may cause them to develop a shimmy or wobble that may quicken their deterioration. Add lubricant (silicone\*) to **the shaft** in small amounts.

**Do not use cooking oil or WD-40 because oil attracts dust and would hinder the movement rather than improve it.**\*Compressed air and silicone spray are available in varying size cans at most hardware stores.

### Trouble Shooting

#### HIGH CHAIR WON'T FOLD

- Check to see that the harness is not caught in the side.
- Make sure wheels are locked.
- Make sure the backrest is in the full recline position.
- Remove all items from the basket.
- Remove your player from back pocket of the seat.

#### DIFFICULT TO GLIDE

- Make sure weight in basket is distributed evenly.
- Check that the brakes are in the locked position.



**Easy Glider 9800 Series**  
**Easy Glider Plus 9810 Series**  
**Deluxe Easy Glider 9850 Series**  
**Instruction Manual**

If you would like to place an order for the following parts, please fill out the form below and return it to the following:

**Combi USA, Inc.**

Attn: Consumer Affairs Department  
 1962 Highway 160 W, Suite 100  
 Fort Mill, SC 29708-8027

or Fax this completed form to us at  
**803-548-3663**

**IMPORTANT: We must have this information to process your order:**

Model Number: 98 \_\_\_\_ - \_\_\_\_ Color & Pattern of Fabric:

**Parts List** for the Easy Glider 9800, 9810 and Deluxe Easy Glider 9850 high chair.

	Price	Quantity	Total
1. Seat Cushion	\$ 20.00		
2. Standard Tray	25.00		
2. Snap-On-Tray	20.00		
3. Canopy (Deluxe Model Only)	15.00		
4. Acoustic Canopy Speaker Set (Deluxe Model Only)	10.00		
5. Infant Body Pillow (Deluxe Model Only)	15.00		
6. Basket (Deluxe Model Only)	10.00		
7. Front Wheel (Single Only)	5.00		
8. Rear Wheel (Single Only)	5.00		
9. Full Set of Wheels (4)	15.00		
10. Catcher Mat	15.00		
11. Seat Cover (Butter Cream Model Only)	10.00		

If you need to order other parts for your Play Yard, please call us toll-free at 1-800-992-6624.

**Shipping and Handling Fees:** Add \$8.00 for orders \$34.99 and under. Add \$13.00 for orders \$35.00 and over. Note: Additional shipping charges will apply outside of the Continental U.S. Combi USA reserves the right to change pricing at any time.

**Ship To:**

\_\_\_\_\_  
 Consumer Name

\_\_\_\_\_  
 Street Address

\_\_\_\_\_  
 Street Address

\_\_\_\_\_  
 City, State, Zip

\_\_\_\_\_  
 Telephone Number

Amount of Order		
ADD Shipping & Handling		
Sales Tax (6%) (SC residents only)		
<b>Total</b>		

**Charge to my credit card:**

VISA                       MASTERCARD  
 AMERICAN EXPRESS     DISCOVER

\_\_\_\_\_  
 Card Number

Expiration Date \_\_\_\_\_ - \_\_\_\_\_ - \_\_\_\_\_

\_\_\_\_\_  
 Cardholder's Signature

**Check enclosed**

02/2005