

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using this Appliance

DANGER

To reduce the risk of electric shock:

1. Do not reach for appliance if it has fallen into the water. Unplug immediately.
2. Do not use while bathing or in the shower.
3. Do not place or store the appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or any other liquid.
4. Always unplug the appliance from electrical outlet immediately after using.
5. Unplug the appliance before cleaning.

WARNING: TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS:

1. The appliance should never be left unattended when plug is in and power is on.

2. This appliance should not be used by, on or near children or the physically challenged.
3. Use the appliance only for its intended purpose as described in the Instruction Booklet. Do not use attachments not recommended by the manufacturer. Do not pull or twist cord, or wrap cord around appliance.
4. Never operate the appliance if it has a damaged plug or cord, if it is not working properly, or if it has been dropped or damaged, or dropped into water. Return appliance to a service center for examination and repair.
5. Never drop or insert objects into openings.
6. Do not use outdoors. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
7. Use only on level surface.
8. Unplug the appliance before attaching to shaving cream/gel cans.
9. Keep cord away from heated surfaces.
10. Never use a tool to remove anything from the dispenser.
11. To disconnect, turn all controls to “off,” then remove plug from outlet.
12. **FOR HOUSEHOLD USE ONLY**
13. Make sure gel nozzle is used for gel and lather nozzle is used for lather.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTION

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way.

If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way. Do not attempt to defeat this safety feature. Any other servicing should be performed by an authorized service representative or that the appliance has no user serviceable parts.

VARIABLE TEMPERATURE CONTROL

This unit is equipped with a variable temperature control dial. Adjust it until the gel or lather is heated to a comfortable temperature.

NOTE: At the same temperature control position, the gel temperature would be higher than the lather temperature.

GETTING TO KNOW THE HOT GEL/LATHER MACHINE




- 1) Gel nozzle
- 2) Gel release button
- 3) Adjustment switch
- 4) Power “OFF” button
- 5) Ready indicator light
- 6) Power “ON” button
- 7) Variable temperature control
- 8) Locking tab
- 9) Lather nozzle
- 10) Protective cylinder
- 11) 120v power cord
- 12) Top of machine: press down here to dispense lather or press down here and slide (3) adjustment switch to press down and lock for gel use.
- 13) Cap removal key (stored at the bottom of the protective cylinder)

5 SIMPLE STEPS TO A GREAT HOT SHAVE

VERY IMPORTANT SET-UP INSTRUCTIONS

STEP 1

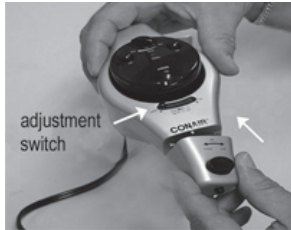

- Attach proper nozzle, lather or gel, by twisting into place
- Be sure the “adjustment switch” is in the “lather” position for lather or gel set-up

Caution: always use the gel nozzle for gel and lather nozzle for lather

STEP 2



- Use “cap removal tool” found in the bottom of base to remove plastic cap on can

STEP 3



- Turn unit upside down, as shown
- Depress “locking tab”
- Carefully line up lather or gel valve with center seal
- Gently insert can valve into seal and release “locking tab”
- Press can until it locks in place

***IMPORTANT NOTE:** If can valve is not properly inserted into center seal, gel will leak out of unit.

STEP 4



To use with gel:

- Depress black “control cap” firmly and slide the “adjustment switch” as far as possible towards the gel side. This step holds the “control cap” down in the gel position

To use with lather:

- Move adjustment switch into lather position

NOTE: Slide adjustment switch as far as possible, it may not all the way to the gel position

Lea todas las instrucciones antes de usarlo

PELIGRO

Para reducir el riesgo de muerte o herida por descarga:

1. Si el aparato cae al agua, desconéctelo inmediatamente. No toque el agua.

2. No lo use mientras se está bañando.

3. No coloque el aparato donde puede caer o ser empujado a una bañera o un lavabo. No coloque el aparato ni lo deje caer al agua u otro líquido.

4. Siempre desconecte el aparato inmediatamente después de usarlo.

5. Desconecte el aparato antes de limpiarlo.

ADVERTENCIA:

PARA REDUCIR EL RIESGO DE QUEMADURAS, ELECTROCUCIÓN, INCENDIO O LESIONES PERSONALES:

1. Nunca deje el aparato desatendido mientras está conectado.

2. Este aparato no debería ser utilizado por, sobre o cerca de niños o personas

3. Use este aparato únicamente con el propósito para el cual fue diseñado y tal como se describe en este manual. Solo use accesorios recomendados por el fabricante. No jale, retuerza ni enrolle el cable alrededor del aparato.
4. Nunca utilice el aparato si el cable o el enchufe están dañados, si no funciona correctamente, si ha caído, si está dañado o si ha caído al agua. Llévelo donde lo ha comprado o a un centro de servicio autorizado para que lo examinen y lo reparen.
5. Nunca deje caer ni inserte un objeto en ninguna de las aberturas.
6. No lo utilice al aire libre, ni donde se estén usando productos en aerosol (spray) o donde se está administrando el aparato.
7. Use lo únicamente sobre una superficie plana.
8. Desconecte el aparato antes de ponerlo sobre la lata de gel o de crema.
9. Mantenga el cable alejado de superficies calientes.
10. Nunca use una herramienta para remover algo de la boquilla.
11. Para desconectar el aparato, oprima el botón de apagado y saque el cable de la toma de corriente.
12. **PARA USO DOMÉSTICO SOLAMENTE.** Asegúrese que está usando la boquilla para gel con gel y la boquilla para crema con crema.
13. Asegúrese que está usando la boquilla para gel con gel y la boquilla para crema con crema.

APRENDA A CONOCER SU DISPENSADOR DE ESPUMA CALIENTE

NOTA: Al mismo ajuste de temperatura, el gel estará más caliente que la crema.

El aparato está dotado de un ajuste de temperatura variable, el cual le permitirá ajustar la temperatura del gel o de la crema de afeitado a su gusto.

AJUSTE DE TEMPERATURA VARIABLE

Este aparato no tiene piezas que puedan ser reparadas por el usuario. En caso de problema, llévelo al centro de servicio autor- izado para que lo revisen y lo reparen.

Para reducir el riesgo de choque eléctrico, este aparato tiene un enchufe polarizado (un polo es más ancho que otro). Como medida de seguridad, se podrá enchufar de una sola manera en la toma de corriente polarizada. Si no entra por completo, invértelo. Si aún no entra por completo, llame a un electricista calificado. No intente vencer esta función de seguridad.

5 PASOS SENSILLOS PARA UNA EXCEPCIONAL AFEITADA CON GEL O CREMA CALIENTE MUY IMPORTANTES




PASO 1
Precución: Siempre use la boquilla para gel cuando esté usando crema

- Instale la boquilla desead (gel o crema).
- Asegúrese que el selector de afeitada gel/crema esté en la posición “Crema” durante la instalación.



PASO 2

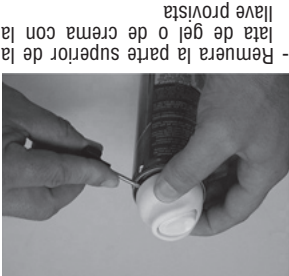

- Remueva la parte superior de la lata de gel o de crema con la llave provista



PASO 3

NOTA IMPORTANTE: El gel saldrá de la máquina si no se inserta el obturador correctamente en el sello central.

- Abra la máquina y ponga la cabeza al revés, tal como enseñado
- Oprima y mantenga oprimida la lengüeta de bloqueo
- Alinee el obturador de la lata de gel o de crema con el sello central
- Inserte cuidadosamente el obturador en el sello central y afloje la lengüeta de bloqueo
- Presione la lata hasta que quede asegurada



PASO 4

NOTA: Deslice el selector Gel/Crema para completar hasta el final. Es posible que éste no llegue completamente hasta el final.

Para usar la máquina con gel:
Oprima la cabeza de la máquina firmemente, luego cambie la posición del selector de afeitada a la posición Gel. Esto bloqueará la cabeza.

GEL & LATHER
heating system

MODEL HGL1/HGL5/HGL11 INSTRUCTION BOOKLET

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

CONAIR®

© 2006 Conair Corporation
150 Milford Road, East Windsor, NJ 08520
7475 North Glen Harbor Blvd., Glendale, AZ 85307

Para usar la máquina con crema: Coloque el selector de afeitada en la posición Crema.

ETAPA 5

- Inserte la cabeza, junta con la lata, en la base. Gire para sujetar.

- Instalación correcta para usar con gel

- Instalación correcta para usar con crema

ALWAYS UNPLUG

SMALL APPLIANCES

Public Service ad from Association of Home Appliance Manufacturers and Underwriters Laboratories, Inc.

KEEP AWAY FROM WATER

Everyone knows that electricity and water are a dangerous combination. But did you know that an electrical appliance is still electrically alive even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

WARNING: IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU'RE WRONG.

LIMITED ONE YEAR WARRANTY

Conair will repair or replace (at our option) your purchase if the appliance is defective in workmanship or materials. To obtain service under this warranty, return the defective product to the service center listed below that is nearest you, together with your purchase receipt and \$3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER, SHALL BE LIMITED IN DURATION TO THE 12 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Service Center
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

© 2006 Conair Corporation
150 Milford Road, East Windsor, NJ 08520
7475 North Glen Harbor Blvd., Glendale, AZ 85307

IB-6171B

SACAR LA LATA DE CREMA/GEL

Cuando la lata está vacía o cuando desea viajar con la máquina:

- Desconecte la máquina.
- Coja la lata con una mano y saque la lata y la boquilla del cilindro protector. Oprima la lengüeta de cierre para poder quitar la máquina de la lata.
- Limpe la máquina con un paño húmedo. **¡NO PONGA LA MÁQUINA EN AGUA!**

RESOLUCIÓN DE PROBLEMAS

Problema: El gel o la crema está demasiado líquido.

Solución: Escoja un nivel de temperatura más bajo.

Problema: La máquina no calienta.

Solución: Asegúrese que la máquina está enchufada y encendida. El indicador rojo se encenderá cuando la máquina esté lista.

Problema: La máquina no dispensa crema caliente.

Solución: La máquina no está instalada correctamente sobre la lata. Quite la máquina de la lata y vuelva a instalarla, asegurándose de que esté bien fijada a la parte superior de la lata. Averigüe que está usando la boquilla para crema.

Problema: La máquina no dispensa gel caliente.

Solución: La máquina no está instalada correctamente sobre la lata. Quite la máquina de la lata y vuelva a instalarla, asegurándose de que esté bien fijada a la parte superior de la lata. Averigüe que está usando la boquilla para gel.

Problema: El gel o la crema está demasiado caliente o la máquina produce demasiado vapor.

Solución: Escoja un nivel de temperatura más bajo o reemplace la lata si el nivel de gel o de crema está bajo.

ADVERTENCIA: SI CREE QUE NO HAY CORRIENTE CUANDO EL APARATO ESTÁ APAGADO, SE EQUIVOCA

MANTENGA ESTE APARATO ALEJADO DEL AGUA

TO REMOVE CAN

When can is empty or when using for travel, it will be necessary to remove the can from the machine.

- Be sure the machine is unplugged from the outlet.
- With one hand holding the can, remove the machine and can from the protective cylinder. Then depress the locking tab with the other hand and pull the machine off the top of the can.
- Clean the machine with a damp cloth. **DO NOT IMMERSE THE MACHINE IN WATER!**

TROUBLESHOOTING GUIDE

Problem: Gel or lather is too runny.

Solution: Adjust temperature control dial to a lower setting.

Problem: Unit will not dispense lather.

Solution: Unit is not properly mounted to the can. Remove unit from can, then reattach, making sure that the unit is securely attached to the top of can or check the lather can is using the lather nozzle and perfectly locked.

Problem: The gel/lather is too hot or too much steam emitted.

Solution: Adjust temperature control dial to lower setting, or replace can if it has a low amount of gel/lather.

IMPORTANT:

Over-size lather can may not fit into the base provided. The cap will work on the lather can without the base. Caution: Do not block dispenser nozzle with hand, as hot steam may be emitted during use or when the can of gel is low. Replace can when gel is running low. Hold hand to side and under, not in front of dispenser.

Once you have shaved, turn the unit off, by pressing the Off button. Be sure to unplug the unit when not in use.

USING LATHER

- Make sure Lather Nozzle for Lather and insert Lather can into machine as "VERY IMPORTANT SET-UP INSTRUCTION"
- Push the power 'on' button on the top of the machine.
- After a few minutes, the ready indicator will light.
- Press down on the top of the machine to dispense heated lather into the palm of your hand.
- Spread lather over your face as usual for a comfortable hot shave.

USING GEL

- Make sure Gel Nozzle for Gel and insert Gel can into Machine as "VERY IMPORTANT SET-UP INSTRUCTION"
- Push down on the top of the machine. At the same time, slide the #3 "adjustment switch" until the top is locked in place; this will release gel into the machine to be heated
- Push the power 'on' button on the top of the machine.
- After a few minutes, the ready indicator will light.
- Press the gel release button on the nozzle to release heated gel into the palm of your hand.
- Spread gel over your face as usual for a comfortable hot shave.

Properly installed gel unit

Properly installed lather unit

STEP 5

- Insert cap with can attached into base and turn to lock

GEL & CREMA

dispensador de espuma caliente

MODELO HGL1/HGL5/HGL11 MANUAL DE INSTRUCCIONES

Para su seguridad y para seguir disfrutando de este producto durante años, siempre lea las instrucciones cuidadosamente antes de usarlo.

CONAIR®

9/29/06 5:12:35 PM