

OPERATING and MAINTENANCE INSTRUCTIONS For CCB-96A and CCB-120A Banquet Warming Cabinets

ELECTRICAL SPECIFICATIONS:

Volts	Watts	Amps	Hertz	Phase	Serv.	NEMA	*NEMA
120	1650	13.8	60	1	AC	5-15	5-20
240	1650	6.9	60	1	AC	6-15	6-15



*For Canadian use.

Models are: Listed by *Underwriters' Laboratories* under file E27846.

HOW TO INSTALL:

1. Remove all packing material from inside the cabinet.
2. Install all angles and shelves before the unit is turned on.
3. Plug the power cord into the proper wall outlet.


HOW TO START UNIT:

1. Push power switch to "ON": *yellow* light will turn on.
2. Turn thermostat to #10 (220° F/105° C).
3. Preheat (assuming a "cold" cabinet of 75° F/25° C):
 - (a) To 150° F/65° C takes 20 minutes.
 - (b) To 200° F/95° C takes 40 minutes.
 - (c) To 220° F/105° C takes 1 hour.
4. Put food into the cabinet.
5. Turn thermostat to the temperature you need.

NOTES: No. 5 setting is approximately 150° F/65° C. Proper food holding temperature is 140° F/60° C or higher.

HOW TO TURN OFF UNIT:

Push power switch to "OFF."

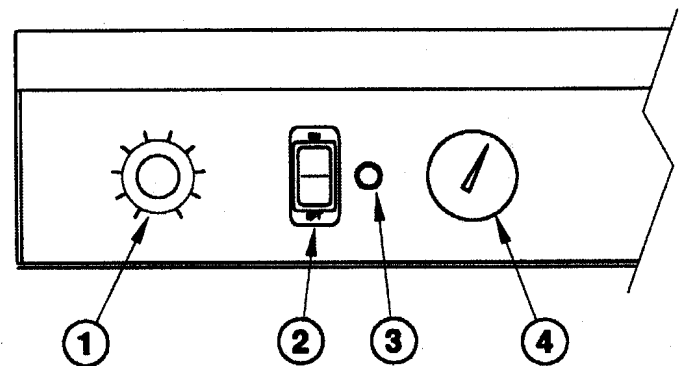

REMOVABLE HOT UNIT:

Parts Identification

1. Thermostat
2. Power Switch
3. Yellow Indicator Light
4. Temperature Display

OPERATING and MAINTENANCE INSTRUCTIONS

For CCB-96A and CCB-120A Banquet Warming Cabinets

HOW TO CLEAN UNIT:

⚠ WARNING

BEFORE CLEANING CABINET:


1. Allow cabinet to cool.
2. Remove Hot Unit **BEFORE** cleaning.
(Unit is designed to lift off from front and rear.)
3. Do **NOT** use abrasives or harsh chemicals.

Cleaning Hints:

1. Wipe up spills as soon as possible.
2. Clean cabinet regularly to avoid heavy dirt build-up.
3. Make a test spot with cleaner.
4. Follow cleaner manufacturer's directions.
5. Do not mix cleaners.
6. Avoid drips and splashes.

	Soil	Cleaner	Method
CABINETS <i>(Stainless Steel)</i>	Routine cleaning.	Soap, ammonia, or detergent* and water.	1. Sponge on with cloth. 2. Rinse.
	Stubborn spots and stains.	Mild abrasive made for stainless steel.	1. Apply with damp sponge or cloth. 2. Rub lightly.
	Burnt-on foods or grease.	Chemical oven cleaner.	1. Apply generous coating. 2. Allow to stand for 10-15 minutes. 3. Rinse. 4. Repeat application if necessary.
	Hard water spots and scale.	Vinegar	1. Swab or wipe with cloth. 2. Rinse and dry.

**Mild detergents include soaps and non-abrasive cleaners.*

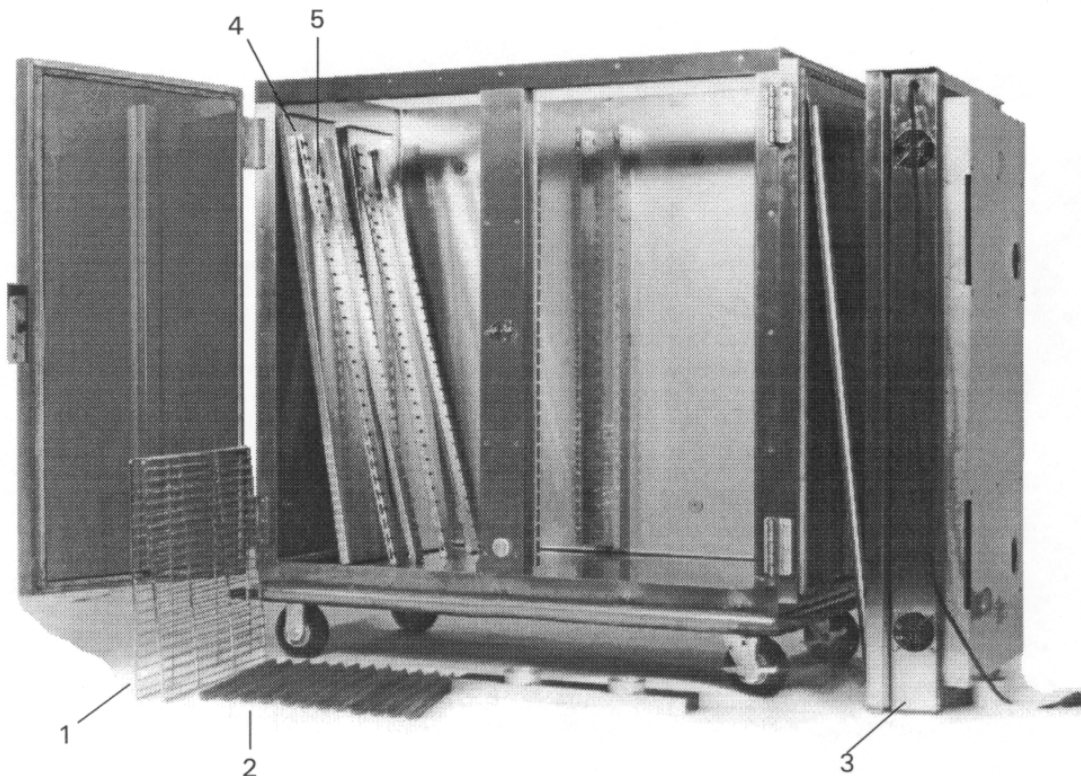

REMOVABLE PARTS IDENTIFICATION

1. Wire Grids
2. Pan Slides
3. Hot Unit
4. Air Tunnels
5. Posts for Pan Slides



5925 Heisley Road • Mentor, OH 44060-1833
 877/CRES COR (273-7267) • 440/350-1100
 Fax: 440/350-7267 • www.crescor.com

Insulated Banquet Cabinets	FL-2247
Rev. 0 (12/00)	Page 3 of 4

OPERATING and MAINTENANCE INSTRUCTIONS For CCB-96A and CCB-120A Banquet Warming Cabinets

TROUBLE-SHOOTING:

FAILURE:

1. Yellow light at switch does NOT light.
2. Unit does not get hot.
3. Unit gets too hot or won't shut off.
4. Blower does not work or makes noise.
5. Excess moisture in cabinet.

Possible Cause:

- 1a. Circuit breaker/fuse to wall outlet is blown.
- 1b. Cord is unplugged from wall outlet.
- 1c. Switch turned *OFF*.
- 2a. Thermostat set too low or is *OFF*.
- 2b. Switch turned *OFF*.
- 3a. Defective electrical parts. **UNPLUG UNIT FROM WALL OUTLET.**
- 4a. Defective blower.
- 5a. Foods taken from oven or fryer should be "slacked out" for 5 minutes before placing in hot cabinet.

If cause is none of the above, refer to our list of Authorized Service Centers, FL-1400.

REPLACEMENT PARTS:

DESCRIPTION	120 Volt	240 Volt
Hot Unit	HU18671-184*	HU18671-185
Terminal Block	0852-091	0852-091
Blower Kit	0769-005-K	0769-006-K1
Heater Kit	0811-214-01	0811-215-01
Thermostat Kit.....	0848-062-K	0848-062-K
Thermometer Kit	5238-030-K	5238-030-K
Power Cord	0810-029-02*	0810-039-03
Switch Kit	0808-118-K	0808-118-K

For Canadian Use:*

Hot Unit (120 Volt).....	HU18671-184C
Power Cord Plug	0713-017
Thermometer Kit, °C.....	5238-024-01

CABINET PARTS:


DESCRIPTION	CMP Part No.
Door Latch Kit	1006-143-K
Latch Strike	1006-144-K
Door Gasket, CCB-96A	0861-173
Door Gasket, CCB-120A	0861-172
Door Hinge	0519-084
Push Handle	1072-089
Wire Grid	1170-095
Door Ass'y, CCB-96A	1221-460-K
Door Ass'y, CCB-120A	1221-461-K

OPERATING and MAINTENANCE INSTRUCTIONS

For CCB-96A and CCB-120A Banquet Warming Cabinets

ELECTRICAL SPECS

HOT UNIT #0671-184
 1650W, 120V, 60Hz, 1Ph
 AC SERVICE

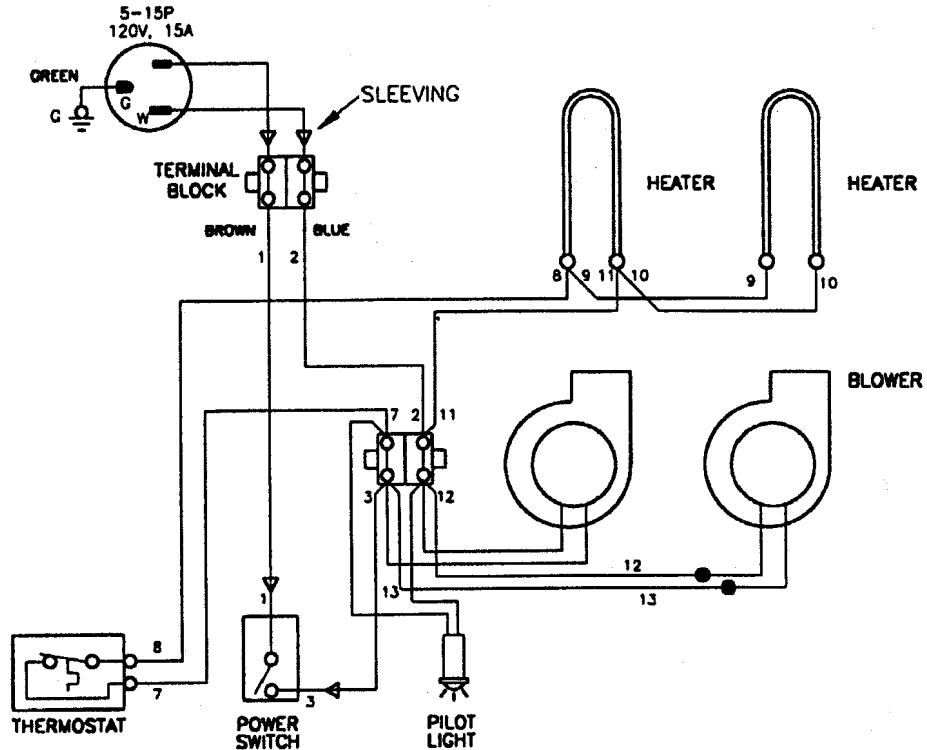

HOT UNIT #0671-185
 1650W, 240V, 60Hz, 1Ph
 AC SERVICE

