



SP100

## **SMART-PART™ Programmable Module**



### **Owner's Guide**

**READ AND SAVE THESE INSTRUCTIONS**


## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. To protect against electrical shock do not immerse the appliance, cord or plugs in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use and before cleaning.
5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact Customer Service (See Warranty) to return, for examination, repair, or adjustment.
6. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
7. Do not use outdoors.
8. Do not let the cord of the slow cooker hang over edge of table or counter, or touch hot surfaces.
9. Do not place on or near a hot gas or electric burner, or heated oven.
10. Do not use with an extension cord.
11. Always turn appliance off before connecting or disconnecting a slow cooker. To disconnect, press appliance "OFF" button and remove from wall outlet.
12. Do not use appliance for other than intended use.

## SAVE THESE INSTRUCTIONS

This appliance is for **HOUSEHOLD USE ONLY**. No user-serviceable parts inside. Do not attempt to service this product. Do not immerse in any liquid.

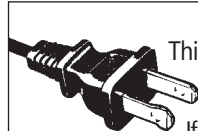

### POLARIZED PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

*Congratulations on the purchase of your Rival® Smart-Part™ Programmable Module! Now it's as simple as 1, 2, 3 to turn your ordinary slow cooker into a programmable slow cooker.*

## PROGRAMMING YOUR SMART-PART™ PROGRAMMABLE MODULE

4 step Quick-Start:

1. Set your Slow Cooker\* control knob to the Highest setting.
2. Plug your slow cooker into the Smart-Part™ Module.
3. Plug the Smart-Part™ Module into the electrical outlet.
4. Select the Smart-Part™ Module settings and cook time.

## CHOOSING YOUR COOK TIMES AND SETTINGS

1. Working from left to right on your Smart-Part™ Module, first choose setting C, B or A depending on your model.

Below are some examples of Rival slow cookers and which setting to use. Look on the bottom of your unit for the model number.

Group "A"	Group "B"	Group "C"
3040	3060	3745
3100	3140	3751
3120	3150	3755
3130	3154	3760
3145	3164	3780
5065	3355	5025
	3656	
	3670	
	3730	
	3735	
	5055	
	5060	
	5070	
	5445	
	6445	

## CHOOSING YOUR COOK TIMES AND SETTINGS (CONT.)

If you can not find your slow cooker model on the chart above or your unit is a brand other than Rival, set your Smart-Part™ Module to Setting C on first use. Cooking "doneness" varies by personal preference. If you feel your food cooks for too long or at too high a temperature on Setting C, adjust your Smart-Part™ Module to Setting B or A on next use. Always make sure food is fully cooked before serving.

2. Select the cook time by pressing the cook time button until it reaches your desired time and temperature.
3. When the cook time expires, the Smart-Part™ Module will automatically switch your slow cooker to the Keep Warm setting, until turned off. When you are finished using the Smart-Part™ Module, press the Off button. Make sure to remove the Smart-Part™ Module from the electrical outlet when not in use.

\* Slow cooker must be rated less than 400 Watts (3.3 Amps). Not for use with slow cookers that have their own electronic or mechanical timers or special features.

## HOW TO USE YOUR SMART-PART™ PROGRAMMABLE MODULE

- For use only with ceramic-type slow cookers.
- Do not overload. For use only with slow cookers rated 400 watts (3.3 amps) or less.
- Not for use with slow cookers that have their own electronic or mechanical timers or other electrical features or accessories.
- This appliance is provided with a polarized receptacle for a slow cooker. If the slow cooker plug does not fit fully into the receptacle, reverse the slow cooker plug.

**Never Immerse your Smart-Part™ Module in water or any other liquid.**

## CLEANING YOUR SMART-PART™ PROGRAMMABLE MODULE

If you need to remove food or other stains from your Smart-Part™ Module gently wipe it with a damp cloth. **Make sure the Smart-Part™ Module is thoroughly dry before use.**

## QUESTIONS AND ANSWERS

- Q** *“What if the food isn’t done after cooking the amount of time recommended in the recipe?”*
- A** This is due to voltage variations which are commonplace everywhere; altitude; or even extreme humidity. Personal preference also plays a part in the “doneness” of food. The slight fluctuations in power do not have a noticeable effect on most appliances; however, it can slightly alter the cooking times in the Smart-Part™ Module due to extended cooking times. If this happens, simply adjust the Smart-Part™ Module setting on next use.
- 
- Q** *“Must the slow cooker be covered? Is it necessary to stir?”*
- A** Cook with the cover on. The slow cooker will not recover heat losses quickly when cooking. Significant amounts of heat escape whenever the lid is removed; therefore the cooking time must be extended. Avoid frequent removal of the cover for checking cooking progress or stirring. Never remove cover during the first 2 hours when baking breads or cakes. It is not necessary to stir while cooking.
- 
- Q** *“My Rival or other brand model number is not listed on your model number chart. What should I set it on?”*
- A** Start on setting “C”, and adjust to “B” or “A” if needed on your next cooking cycle.

## LIMITED ONE-YEAR WARRANTY

Rival® warrants this product to be free from defects in materials or workmanship for one (1) year from date of original purchase. If you have a claim under this warranty please follow these procedures:

- 1) Within the first 45 days from date of original purchase, defective product should be returned to original place of purchase for replacement (with proof-of-purchase).
- 2) Within the first 12 months from date of purchase Rival will repair or replace (at no charge) the defective product if it is delivered freight prepaid during that period to an authorized service station. To obtain warranty service visit:

**[www.crockpot.com](http://www.crockpot.com)**

Or, you may write to Rival c/o The Holmes Group, attention: Consumer Returns, 32 B Spur Drive, El Paso, TX 79906. Proof of purchase is required when requesting warranty service - SAVE YOUR SALES RECEIPT. This warranty is extended only to the original purchaser and does not apply to commercial use, unreasonable use, or to damage to the product (not resulting from defect or malfunction) while in the possession of the consumer. **Rival disclaims all responsibility for consequential, incidental, or commercial losses caused by the use of this product.** Some states do not allow this exclusion or limitation of incidental or consequential losses, so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state.



©2002, Rival  
A Division of The Holmes Group