

# Musical Cake Tray

Battery Operated


deni<sup>®</sup>

Model #4100

## IMPORTANT!

Please keep these instructions and your original box packaging.

[www.deni.com](http://www.deni.com)

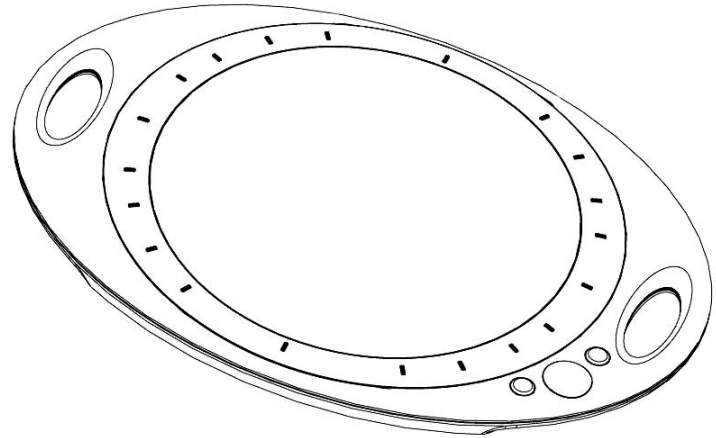

**INSTRUCTIONS**  
**FOR PROPER USE AND CARE**

# Musical Cake Tray


## IMPORTANT SAFEGUARDS

When using this appliance, safety precautions should always be observed, including the following:

- **Read all of the instructions.**
- This unit is recommended for household, indoor use only. Do not use outdoors.
- Do not operate cake tray under a blanket or pillow.
- Use this appliance only for its intended use as described in this manual.
- Close supervision is necessary when this appliance is used by or near children and disabled persons.
- If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to Keystone Manufacturing Company, Inc. for proper service, replacement or repair.
- All servicing of this unit must be preformed by an authorized service personnel only.

## SAVE THESE INSTRUCTIONS

## FEATURES

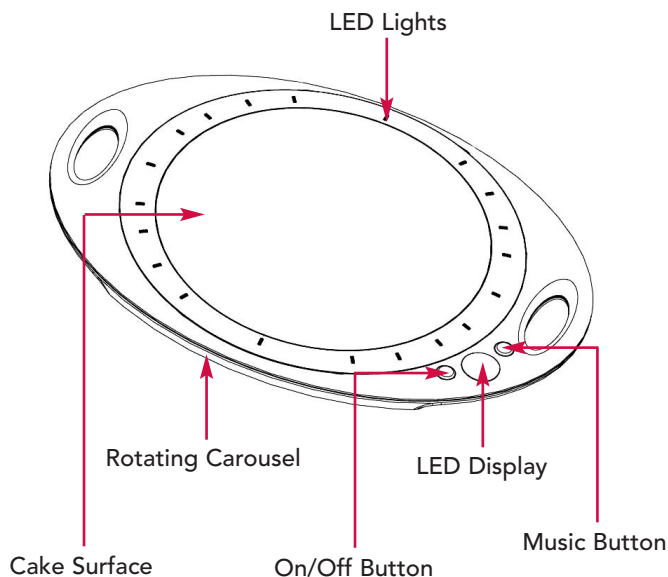

## BEFORE USING YOUR CAKE TRAY

1. Remove all packing materials wipe the with a soft, damp cloth. DO NOT immerse the unit in water or any other liquid.
2. The cake tray requires 4 AA batteries (not included). Open the battery door on the bottom of the unit and install batteries.

## HOW TO OPERATE

1. Press the "On/Off" button. The display will read "02" for the number of slices.
2. Select the desired number of slices by pushing the "On/Off" button until you reach the number of slices. Select 2, 4, 6, 8, 10, or 12 slices. The display will show the number of slices and the LED lights around the edge of the unit will light up to show the cutting path.
3. Push the "Music" button to play Happy Birthday. The song will repeat 5 times and automatically stop. If you want to stop the music early, press the "Music" button again.
4. To turn the unit off, press and hold the "On/Off" button for 2 seconds. The unit will automatically shut-off after 15 minutes if it has not been touched.

## HOW TO CLEAN

1. Clean only with a soft, slightly damp cloth. Never allow water or any other liquids to come in contact with the unit.
2. Do not immerse in any liquid to clean.
3. Never use abrasive cleaners, brushes, gasoline, kerosene, glass/furniture polish or paint thinner to clean.

## HINTS AND TIPS

- To store, place cake tray in its box or in a safe, dry, cool place; out of the reach of children.

## **CUSTOMER SERVICE**

If you have any questions or problems regarding the operation of your Deni Cake Tray, call our customer service department toll free:

Monday through Friday  
8:30 a.m. to 5:00 p.m.  
(Eastern Standard Time)  
**1-800-DENI-822**  
or email us at  
[custserv@deni.com](mailto:custserv@deni.com)

Visit our website at  
[www.deni.com](http://www.deni.com)

Deni by Keystone Manufacturing Company, Inc.®

## **ONE-YEAR LIMITED WARRANTY**

Your Deni Cake Tray is warranted for one year from date of purchase or receipt against all defects in material and workmanship. Should your appliance prove defective within one year from date of purchase or receipt, return the unit, freight prepaid, along with an explanation of the claim. If purchased in the U.S.A. or other country, please send to: Keystone Manufacturing Company, Inc., 33 Norris Street, Buffalo, NY 14207. If purchased in Canada, please send to: Keystone Manufacturing Company, Inc., 151 Cushman Road, St. Catharines, Ontario L2M 6T4. (Please package your appliance carefully in its original box and packing material to avoid damage in transit. Keystone is not responsible for any damage caused to the appliance in return shipment.) Under this warranty, Keystone Manufacturing Company, Inc. undertakes to repair or replace any parts found to be defective.

This warranty is only valid if the appliance is used solely for household purposes in accordance with the instructions. This warranty is invalid if the unit is connected to an unsuitable electrical supply, or dismantled or interfered with in any way or damaged through misuse.

We ask that you kindly fill in the details on your warranty card and return it within one week from date of purchase or receipt.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state or province to province.