

SAMSUNG

OWNER'S INSTRUCTIONS


AW0801B

AW1001B

AW1201B

AW1801B

Window-type Room Air Conditioner (Cool)

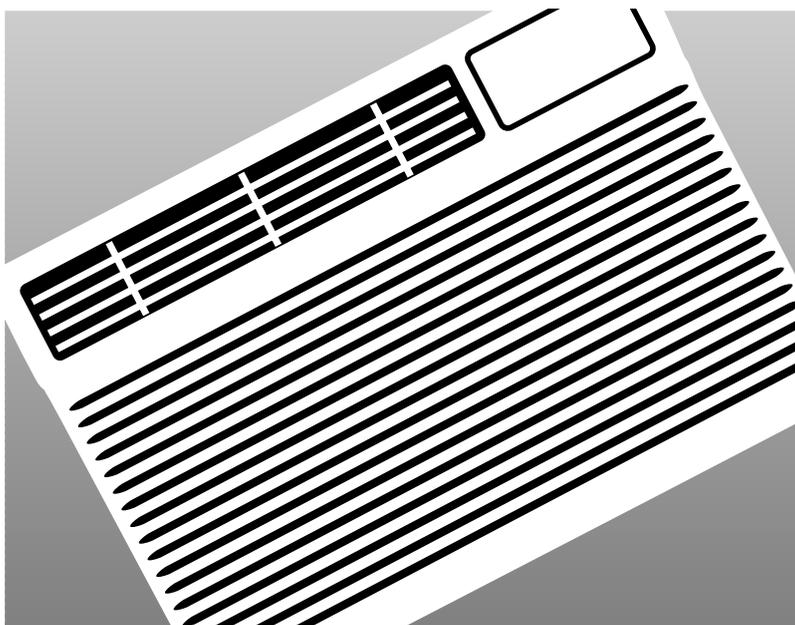

Safety Precautions

The following safety precautions must be taken when installing and using your air conditioner.

1 The air conditioner must be plugged into its own specific power source, which must be installed in compliance with national wiring, earthing and safety regulations.

Depending on national regulations and your specific installation, you may need to install:

- ◆ A circuit breaker

For further information on electrical requirements, contact a professional electrician.

This device must be installed according to the national electrical rules.

2 Make sure that the unit is correctly ventilated at all times; do NOT place clothing or other materials over it.

3 NEVER spill liquids of any kind into the unit. Should this happen, unplug the unit and contact your installation specialist.

4 Do NOT insert anything between the air outlet blades, as it may damage the inner fan and you may be hurt. Keep children away from the unit.

5 If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

6 Do NOT attempt to repair the unit yourself. If it is damaged in any way, contact:

- ◆ An authorized service center
- ◆ The dealer from whom you purchased the air conditioner.

7 Do NOT place any blocking objects in front of the unit.

8 If the remote control will not be used for a long time, remove the batteries.

9 Before throwing out the device, it is necessary to pull back the battery cells and get rid of them safely.

10 The appliance is not intended for use by young children or infirm person without supervision; young children should be supervised to ensure that they do not play with the appliance.

11 Do NOT use an extension cord with this product.

CAUTION



The manufacturer does not assume responsibility for accidents or injury caused by an incorrectly installed air conditioner. If you are unsure about installation, contact an installation specialist.

Contents


| | |
|---|----|
| ◆ PREPARING YOUR AIR CONDITIONER | |
| ■ Safety Precautions | 2 |
| ■ Description of Each Component | 4 |
| ■ Remote Control - Buttons | 5 |
| ■ Getting Started | 6 |
| ■ Inserting the Remote Control Batteries | 7 |
| ◆ OPERATING YOUR AIR CONDITIONER | |
| ■ Cooling Your Room | 8 |
| ■ Ventilating Your Room | 9 |
| ■ Removing Excess Humidity | 10 |
| ■ Adjusting the Air Flow Direction Horizontally | 11 |
| ■ Adjusting the Air Flow Direction Vertically | 11 |
| ◆ PROGRAMMING YOUR AIR CONDITIONER | |
| ■ Setting the On Timer | 12 |
| ■ Setting the Off Timer | 13 |
| ■ Setting the Sleep Timer | 14 |
| ■ Selecting Energy Saving mode | 15 |
| ◆ RECOMMENDATIONS FOR USE | |
| ■ Temperature and Humidity Ranges | 16 |
| ■ Cleaning Your Air Conditioner | 17 |
| ■ Solving Common Problems | 18 |
| ■ Technical Specifications | 19 |

Description of Each Component

* The design and shape are subject to change, depending on the model.

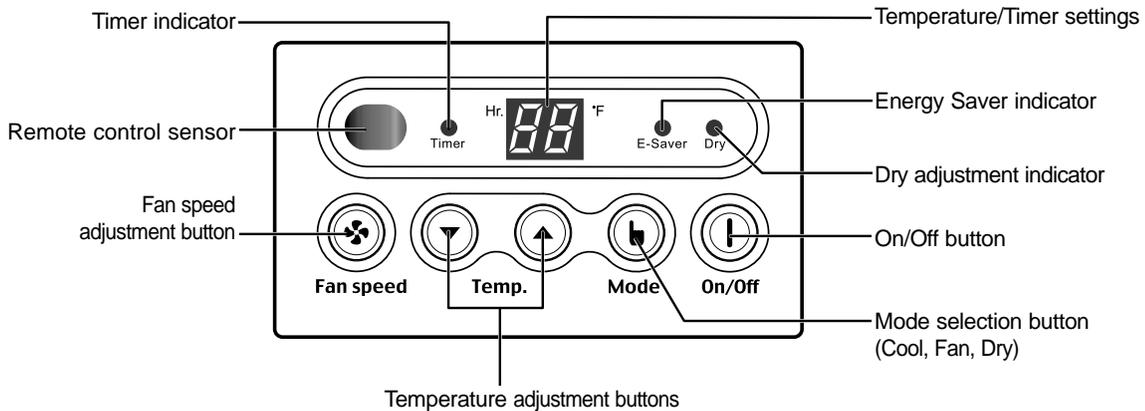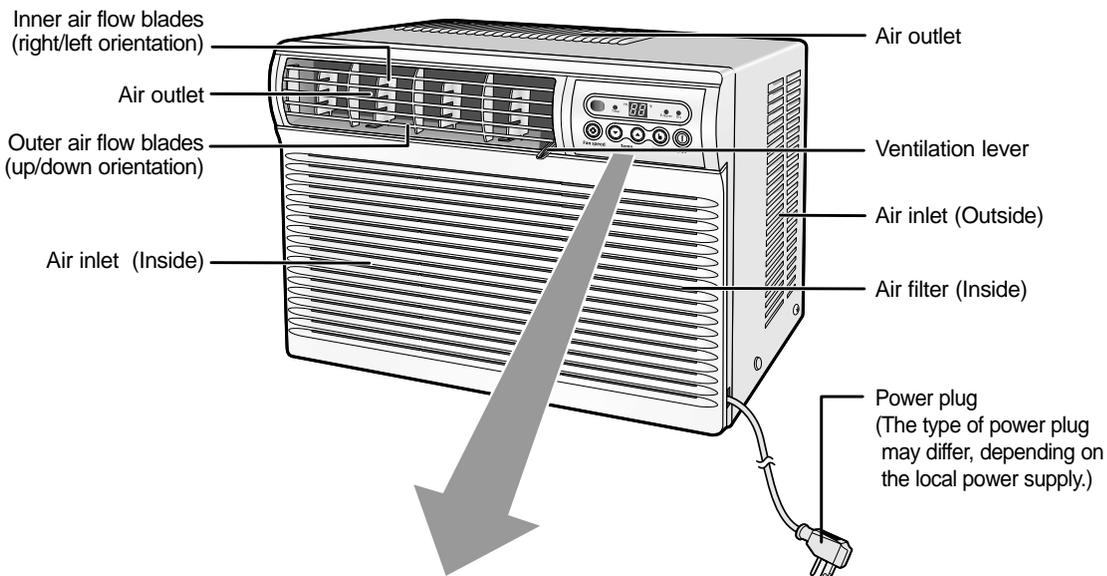

Remote Control - Buttons

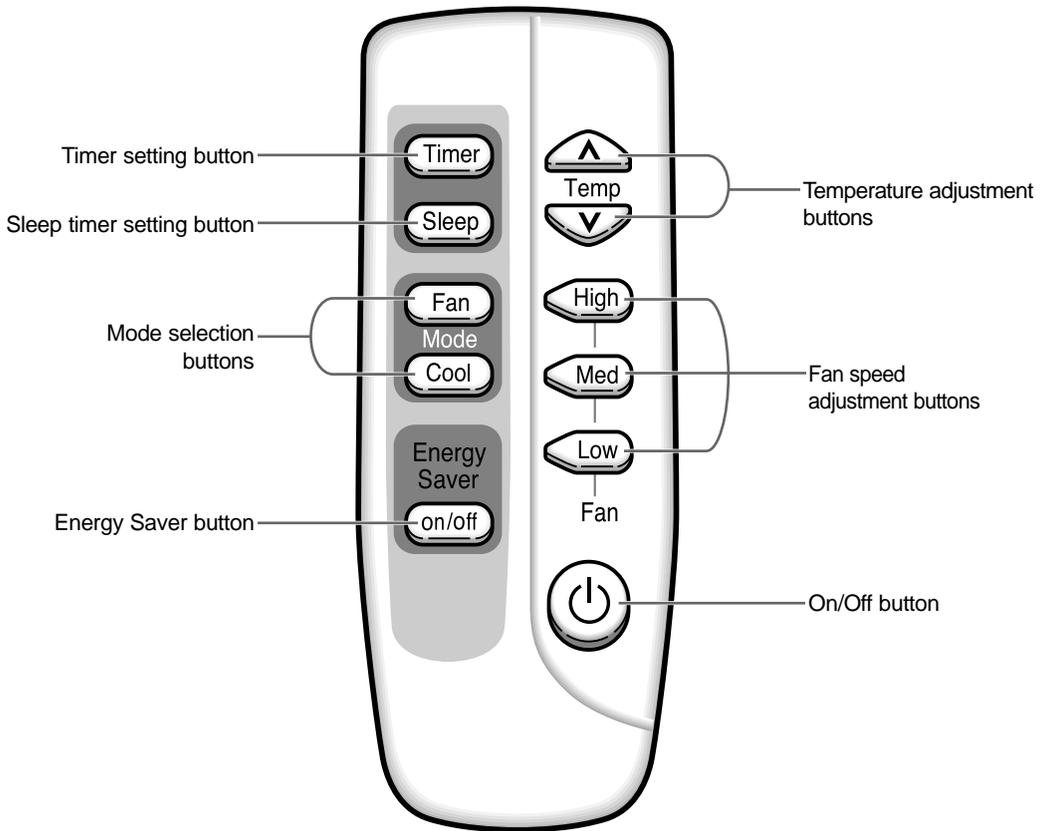

Getting Started

You have just purchased a Samsung window-type room air conditioner which should be installed following your installation manual.

Your Owner's Instructions contain much valuable information on using your air conditioner. Please take the time to read them as they will help you take full advantage of the unit's features.

The booklet is organized as follows.


◆ ***The following figures are shown on pages 4 and 5:***

- ***Description of Each Component***
- ***Remote control (buttons)***

They will help you find the buttons and understand the symbols displayed.

◆ ***In the manual, you will find a series of step-by-step procedures for each function available.***

The illustrations in the step-by-step procedures use four different symbols:

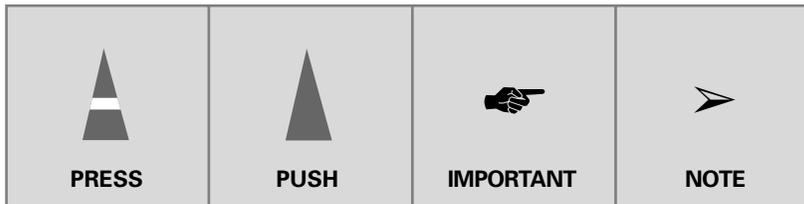

Inserting the Remote Control Batteries

You must insert or replace the remote control batteries when :



- ◆ **You purchase the air conditioner**
- ◆ **The remote control does not work correctly**

-
- ◆ Use two AAA, LR03 1.5V batteries.
 - ◆ Do not use old batteries or different kinds of batteries together.
 - ◆ Batteries may be completely discharged after 12 months, even if they have not actually been used.

1 Push the battery cover on the rear of the remote control with your thumb in the direction of the arrow and remove it.

2 Insert the two batteries, taking care to respect the polarities :
◆ + on the battery with + on the remote control.
◆ - on the battery with - on the remote control.

3 Close the cover by sliding it back until it clicks into place.


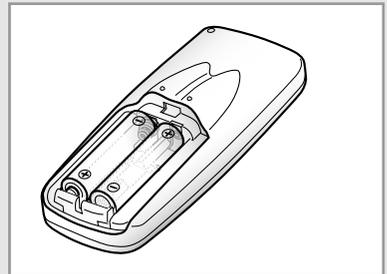
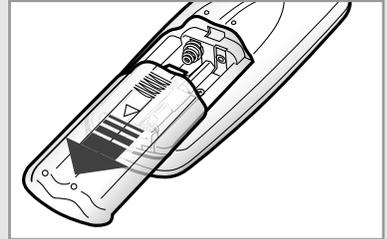


Cooling Your Room

Remote Control



Control Panel

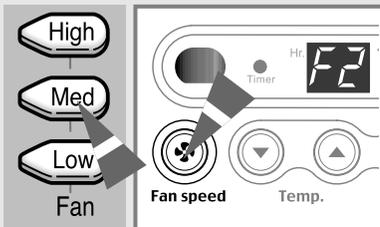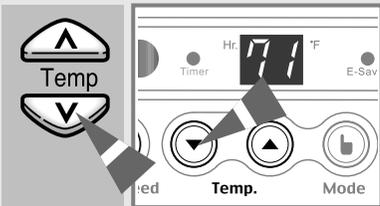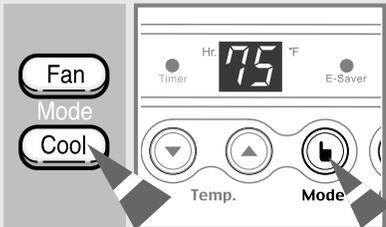

You must select the Cool mode if you wish to lower the temperature in your room. You can also set the Fan speed.

- 1 Press the (On/Off) button.

Result: ◆ The air conditioner starts up in the mode selected when the unit was last used.
◆ The unit beeps twice.

The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:

- ◆ Plugged in
- ◆ Stopped

It will start up normally after three minutes.

- 2 If the temperature is not displayed on the control panel:

◆ Press the button on the remote control

or

◆ Press the button on the unit one or more times until the temperature is displayed.

Result: ◆ The unit beeps each time you press the / button.
◆ The air conditioner starts up in the Cool mode.

➤ You can change modes at any time.

- 3 To adjust the temperature, press the or buttons on the remote control or unit one or more times until the desired temperature is displayed.

The temperature can be set between 64°F and 86°F.

Result: ◆ Each time you press the or buttons:
– The temperature is adjusted by 1°F and displayed on the control panel
– The unit beeps

- ◆ The air conditioner starts cooling, if the room temperature is higher than the selected temperature.
- ◆ If the room temperature reaches the set temperature, the air conditioner stops cooling, but the fan is still operating.

- 4 To set the fan speed:

◆ Press the , or button on the remote control as desired.

or

◆ Press the button on the unit one or more times until the desired Fan speed (F1, F2 or F3) is displayed.

| | |
|-----|--------|
| F 1 | Low |
| F 2 | Medium |
| F 3 | High |

- 5 To control the direction of the air flow, refer to page 11.

Ventilating Your Room

If the air in your room is stale, you can ventilate the room using the Fan feature.

- 1 If you wish to discharge stale air, push the ventilation lever on the front of the unit to the right and open position ().

Result: ◆ The air inside the room circulates and stale air is discharged outside.

Otherwise, push the ventilation lever to the left and closed position ().

Result: ◆ The air simply circulates inside the room.

- 2 If necessary, press the  (On/Off) button.

Result: ◆ The air conditioner starts up in the mode selected when the unit was last used.
◆ The unit beeps twice.

- 3 If the fan speed(F1, F2 or F3) is not displayed on the control panel:

◆ Press the  button on the remote control

or

◆ Press the  button on the unit one or more times until the fan speed (F1, F2 or F3) is displayed.

Result: ◆ The unit beeps each time you press the  /  button.
◆ The air conditioner starts up in Fan mode.

➤ ◆ You can change modes at any time.
◆ When the air conditioner is in the Fan mode, the temperature cannot be set or displayed.

- 4 To set the fan speed:


◆ Press the ,  or  button on the remote control as desired.

or

◆ Press the  button on the unit one or more times until the desired fan speed(F1, F2 or F3) is displayed.

| | |
|---|--------|
|  | Low |
|  | Medium |
|  | High |




- 5 To control the direction of the air flow, refer to page 11.

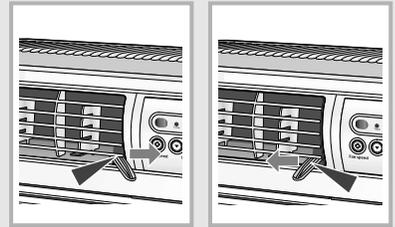

Remote Control



Control Panel

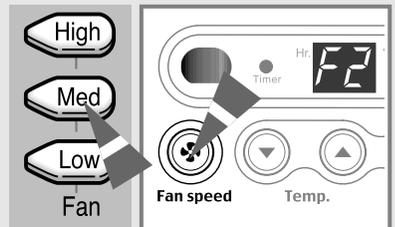
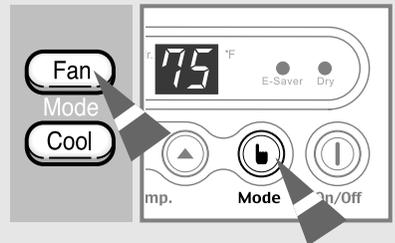
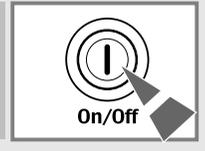


Removing Excess Humidity

Remote Control



Control Panel

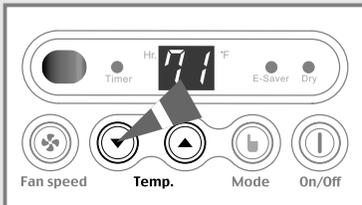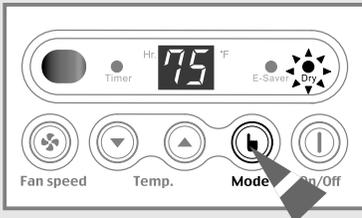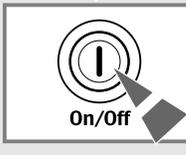

If the atmosphere in your room is very humid or damp, you can remove excess humidity without lowering the room temperature too much. You can operate the Dry mode only by using the control panel.

- 1 If necessary, press the  (On/Off) button.

Result: ◆ The air conditioner starts up in the mode selected when the unit was last used.

- ◆ The unit beeps.



The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:

- ◆ Plugged in
- ◆ Stopped

It will start up normally after three minutes.

- 2 If the dry indicator is not displayed at the top of the control panel, press the  button on the control panel one or more times until it appears.

Result: ◆ The unit beeps each time you press the  button.
◆ The air conditioner runs in Dry mode.



You can change modes at any time.

- 3 To adjust the temperature, press the  or  buttons one or more times until the required temperature is displayed. Possible temperatures are between 64°F and 86°F inclusive.

Result: ◆ Each time you press the  or  buttons:
- The temperature is adjusted by 1°F
- The unit beeps


- ◆ The air conditioner starts removing the excess humidity; the quantity of air is adjusted automatically.

- 4 To control the direction of the air flow, refer to page 11.

Adjusting the Air Flow Direction Horizontally

Depending on the position of the unit in your room, you can adjust the orientation of the inner air flow blades on the unit.

- 1 Adjust the air flow blades to the desired position by pushing them side to side.

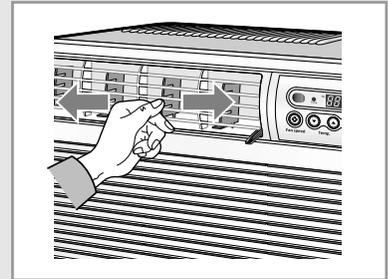


Adjusting the Air Flow Direction Vertically


Again depending on the position of the unit in your room, you can adjust the orientation of the outer air flow blades on the right-hand side of the unit.

| RECOMMENDATION | When... | Adjust the blades to face... |
|-----------------------|----------------|-------------------------------------|
| | Cooling | Upwards. |

- 1 Adjust the air flow blades to the desired position, by pushing them upwards or downwards.
 - If you orient the air flow blades downwards and the unit operates in Cool mode for long periods of time, dew may:
 - ◆ Form on the surface of the blades
 - ◆ Drip from the blades

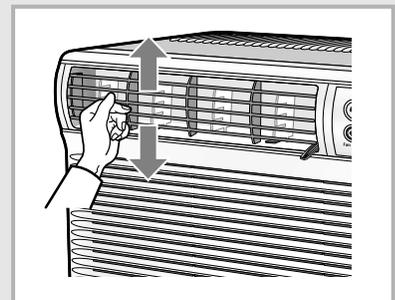


Setting the On Timer

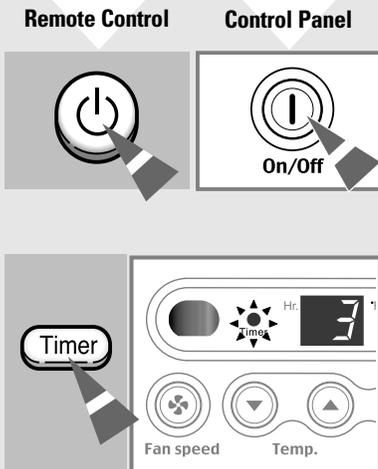

The On Timer enables you to switch on the air conditioner automatically after a given time. You can select the On timer only when the air conditioner is off. You can select the On timer only when the air conditioner operates in the Cool mode.

- 1 Check that the air conditioner has been switched off; if necessary, press the  (On/Off) button.
- 2 Set the operating time by pressing the  button on the remote control one or more times until the desired time is displayed. The operating time can be set between 1 and 24 hours.
Result:
 - ◆ Each time you press the  button:
 - The time is adjusted by 1 hour and displayed on the control panel
 - The unit beeps
 - ◆ The operating time is displayed and decreases automatically to indicate the remaining time.
 - ◆ The air conditioner starts up in the Cool mode automatically when the operating time reaches zero.

➤ You can select the fan speed, temperature and Energy saving mode after setting the On timer and Off timer mode. However, when you change the mode, the On timer and Off timer mode is canceled.

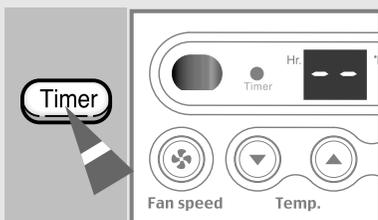

To Cancel the On Timer

To cancel the timer, press:

- ◆ The  button on the remote control one or more times until "--" is displayed.
or
- ◆ The  (On/Off) button on the remote control or unit (The air conditioner operates in the mode selected when the unit was last used.)

Setting the Off Timer

The Off Timer enables you to switch off the air conditioner automatically after a given time. You can select the Off timer only when the air conditioner is on. You can select the Off timer only when the air conditioner operates in the Cool mode.

- 1 Check that the air conditioner has been switched on; if necessary, press the  (On/Off) button.

- 2 Set the operating time by pressing the  button on the remote control one or more times until the desired time is displayed. The operating time can be set between 1 and 24 hours.


- Result:**
- ◆ Each time you press the  button:
 - The time is adjusted by 1 hour and displayed on the control panel
 - The unit beeps
 - ◆ The operating time is displayed and decreases automatically to indicate the remaining time.
 - ◆ The air conditioner switches off automatically when the operating time reaches zero.

- You can select the fan speed, temperature and Energy saving mode after setting the On timer and Off timer mode. However, when you change the mode, the On timer and Off timer mode is canceled.

Remote Control




Control Panel

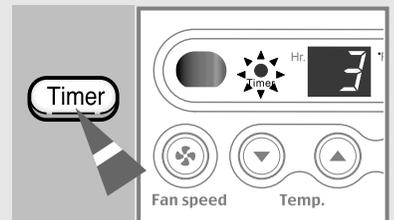

To Cancel the Off Timer

To cancel the timer, press:

- ◆ The  button on the remote control one or more times until "--" is displayed.
- or
- ◆ The  (On/Off) button on the remote control or unit.

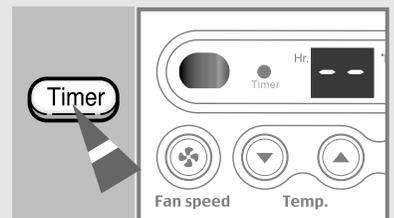



Setting the Sleep Timer

The Sleep Timer can be used when you are cooling your room to switch the air conditioner off automatically after 8 hours.

➤ *If you wish to switch the unit off at a specific time, refer to page 13.*

Remote Control

Control Panel

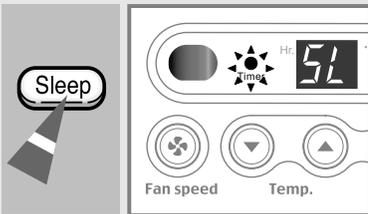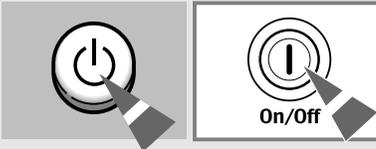


- 1 Make sure that you have selected the Cool mode.

- 2 Press the **Sleep** button on the remote control

- Result:
- ◆ Each time you press a button, the unit beeps.
 - ◆ The "SLEEP" passes through the control panel for about 15 seconds and the "S" will be displayed.
 - ◆ The remaining time is displayed and decreased by 1 hour automatically to indicate the remaining time.
 - ◆ The air conditioner will be controlled as illustration below.

Cooling When the temperature has been increased by 2°F (after 1 hour), it is maintained for 7 hours.

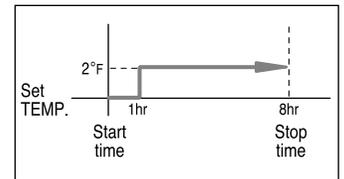

To Cancel the Sleep Timer

To cancel the timer, press:

- ◆ The **Sleep** button on the remote control.

- Result:
- ◆ The unit beeps.
 - ◆ The SLEEP indicator is no longer displayed.
 - ◆ The air conditioner operates in the mode selected last.

➤ If you select the Energy Saving mode in the Sleep Timer mode, the Sleep Timer will be cancelled and the air conditioner will start up in the Energy Saving mode.

Selecting Energy Saving Mode

If you wish to save energy when using your air conditioner, select the energy saving mode.

- 1 To select the energy saving mode, press the  button on the remote control one or more times until the Energy Saver indicator lights up.

Result:

- ◆ The fan and compressor cycle on and off together.
- ◆ The fan will continue to run for a short time after the compressor cycles off.

- If you would like the air conditioner to run in Fan mode, do not press the  button. You cannot use the Fan mode in the energy saving mode.



- 2 To stop the energy saving mode, press the  button on the remote control again.

Result: The fan runs at all times, while the compressor cycles on and off.

- If you select the Sleep Timer in the Energy Saving mode, the Energy Saving will be cancelled and the air conditioner will start up in the Sleep Timer mode.

Remote Control

Control Panel

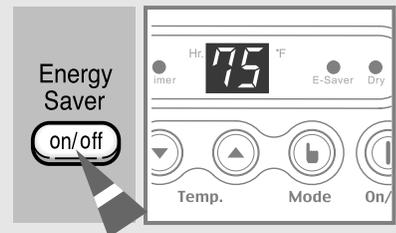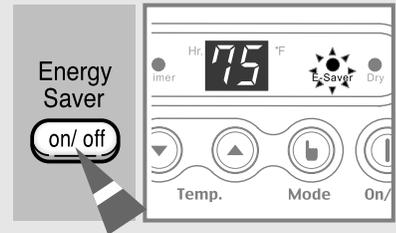

Temperature and Humidity Ranges

The following table indicates the temperature and humidity ranges within which the air conditioner can be used.

| Mode | Indoor Temperature | Outdoor Temperature | Indoor Humidity |
|-------------|---------------------------|----------------------------|------------------------|
| Cooling | 70°F to 90°F approx. | 70°F to 110°F approx. | 80% or less |

| If the air conditioner is used at... | Then... |
|---|---|
| Higher temperature | The automatic protection feature may be triggered and the air conditioner stopped. |
| Lower temperature | A water leakage or some other malfunction may happen if the heat exchanger freezes. |
| Higher humidity levels | Water may condense on and drip from the surface of the unit if it is used for long periods. |

Cleaning Your Air Conditioner

Be sure to clean the air filter periodically to maintain the air conditioner in the best condition for a long period of time.

 **When cleaning the air conditioner, turn it off and pull out the power plug.**




1 Open the front grille by pulling the tabs on both sides of the grille. Then lift it up slightly to open the front grille completely.

2 Grab the tabs on the filter and pull it up and out.

3 Remove all dust on the air filter with a vacuum cleaner or brush.

4 When you have finished, insert the air filter back into its original position.

5 Wipe the surface of the unit with a neutral detergent and then wipe it again with dry cloth.
(Be sure not to use benzene, solvent or other chemical products.)

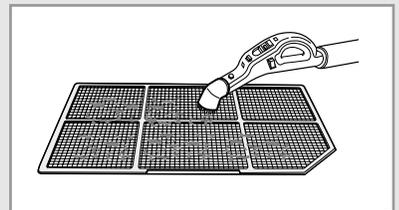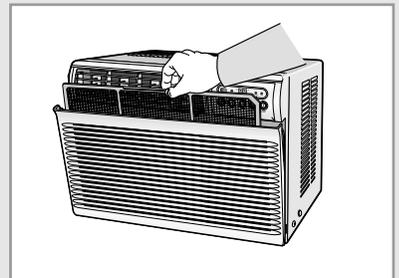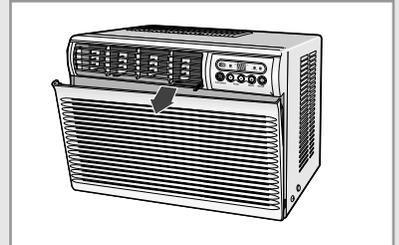

| ➤ | If you... | Then... |
|---|---|--|
| | Will not be using the air conditioner for a long period of time | <ul style="list-style-type: none">◆ Set the fan going for a few hours to dry the inside of the air conditioner thoroughly.◆ Switch the air conditioner off and unplug it from the wall socket.◆ Clean the filter and outer surfaces. |
| | Have not used the air conditioner for a long period of time | Set the fan going for a few hours to dry the inside of the air conditioner thoroughly. |

Solving Common Problems

Before contacting an authorized service center, perform the following simple checks. They may save you the time and expense of an unnecessary call.

| Problem | Explanation / Solution |
|---|---|
| The air conditioner does not operate at all | <ul style="list-style-type: none">◆ Check that the circuit breaker used for the air conditioner has not been triggered.◆ Check that the power cable is plugged into a wall socket and the socket is switched on, if necessary.◆ Check that the temperature indicator on the unit is lit; if necessary, press the  (On/Off) button on the remote control or unit. |
| The air conditioner does not operate with the remote control | <ul style="list-style-type: none">◆ Check that there are no obstacles between you and the unit.◆ Replace the remote control batteries if necessary.◆ Check that you are close enough to the unit (seven metres/yards or less). |
| No beep is heard when you press the  (On/Off) button on the remote control | <ul style="list-style-type: none">◆ Check that you are pointing the remote control at the remote control sensor on the unit.◆ Replace the remote control batteries if necessary. |
| The air conditioner does not cool | <ul style="list-style-type: none">◆ Check that the correct operating mode has been selected(Cool).◆ The room temperature may be too low.◆ Dust may be blocking the air filter; refer to page 17 for cleaning instructions.◆ Check that there is no obstacle blocking the air flow into or out of the unit. |
| The timer is not correctly triggered | <ul style="list-style-type: none">◆ Check that the timer has been programmed correctly; refer to page 12~14. |
| Odors are permeating the room during air conditioning | <ul style="list-style-type: none">◆ Ventilate the room. |

Technical Specifications

Design and specifications are subject to change without notice.

| Model | Power Supply |
|-------------------------------|-----------------|
| AW0801B AW1001B AW1201B | 115V~, 60Hz |
| AW1801B | 230-208V~, 60Hz |

SAMSUNG ROOM AIR CONDITIONER

LIMITED WARRANTY TO ORIGINAL PURCHASER

This SAMSUNG brand product, as supplied and distributed by SAMSUNG ELECTRONICS AMERICA, INC. (SAMSUNG) and delivered new, in the original carton to the original consumer purchaser, is warranted by SAMSUNG against manufacturing defects in materials and workmanship for a limited warranty period of:

One (1) Year Parts and Labor, Five (5) Years Parts Warranty for Compressor

This limited warranty begins on the original date of purchase, and is valid only on products purchased and used in the United States. Warranty repairs must be performed by SAMSUNG's authorized service center. To receive warranty service, the original dated bill of sale must be presented upon request as proof of purchase to SAMSUNG or SAMSUNG's authorized service center.

SAMSUNG will repair or replace any part found to be defective at no charge, as stipulated herein, with new or reconditioned parts during the limited warranty period specified above. To request warranty service, the purchaser must contact SAMSUNG for problem determination and service procedures. SAMSUNG does not warrant uninterrupted or error-free operation of the product. All replaced parts and products become the property of SAMSUNG and must be returned to SAMSUNG. Replacement parts and products assume the remaining original warranty, or ninety(90) days, whichever is longer.

In - Home Service: During the warranty labor period, in-home service will be provided subject to availability within the contiguous United States. In-home service is not available in all areas. If during in-home service repair can not be completed, it may be necessary to remove, repair and return the product. If in-home service is unavailable, SAMSUNG may elect, at our option, to provide for transportation of our choice to and from a SAMSUNG authorized service center. Otherwise, transportation to and from the SAMSUNG authorized service center is the responsibility of the purchaser.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, noncommercial use of this product and shall not apply to the following, including, but not limited to: delivery and installation; damage which occurs in shipment; applications and uses for which this product was not intended; failures or problems which are caused by products or equipment not supplied by SAMSUNG; accidents, misuse, abuse, neglect, misapplication, fire, water, lightning or other acts of nature; incorrect electrical line voltage, fluctuations or surges; damage caused by improper or faulty installation; product alteration or modification; improper or unauthorized repair; cosmetic damage or exterior finish; product with altered serial numbers; failure to follow operating and environmental instructions that are covered and prescribed in the instruction book; customer adjustments, routine maintenance and cleaning; consumable items such as filters; use of non-SAMSUNG or unauthorized parts, supplies, accessories or equipment which damage this product or result in service problems.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON SAMSUNG. SAMSUNG SHALL NOT BE LIABLE FOR LOSS OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST SAMSUNG BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY SAMSUNG AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING, PURCHASER ASSUMES ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO PURCHASER AND PURCHASERS PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT SOLD BY SAMSUNG NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF SAMSUNG. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT, IS NONTRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

To obtain warranty service, please contact SAMSUNG at:

SAMSUNG ELECTRONICS AMERICA, INC. - CONSUMER ELECTRONICS CUSTOMER SERVICE

400 Valley Road, Suite 201 Mount Arlington, NJ 07856

Tel: 973-601-6000, Fax: 973-601-6001

1-800-SAMSUNG (1-800-726-7864)

www.sosimple.com