


COMPETENCE 61016VI

Free standing electric cooker

Installation and Operating Instructions

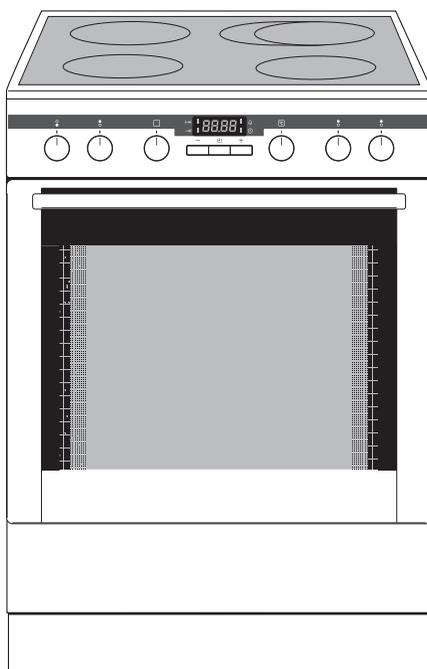

Dear Customer,

Please read these user instructions carefully and keep them to refer to later.

Please pass the user instructions on to any future owner of the appliance.

The following symbols are used in the text:



Safety instructions

Warning! Information that affects your personal safety.

Important! Information that prevents damage to the appliance.



Useful tips and hints



Environmental information

Contents

Operating Instructions	5
Safety instructions	5
Disposal	7
Description of the Appliance	8
General Overview.....	8
Control Panel	9
Cooking surface	9
Oven Features.....	10
Oven accessories	10
Before Using for the first time	11
Setting and changing the time	11
Initial Cleaning.....	12
Operating the hob	13
Setting the heat setting	14
Switching on the dual fry/cook area.....	14
Residual heat indicator	14
Using the Oven	15
Switching the Oven On and Off.....	15
Oven Functions.....	16
Inserting the shelf, baking tray and roasting pan	17
Inserting/Removing the Grease Filter	18
Clock Functions	19
Switching Off the Time Display	20
Uses, Tables and Tips	25
Pans.....	25
Cooking table.....	26
Baking.....	28
Baking table	30
Table for Bakes and Gratins.....	34
Frozen Ready Meals Table	34
Roasting	35
Roasting table.....	36
Grill Sizes	38
Grilling table.....	38
Defrosting.....	39
Defrosting table	39
Making Preserves.....	40

Cleaning and Care	42
Outside of the appliance	42
Cooking surface	42
Hob Frame	44
Oven interior	44
Accessories	44
Fat Filter	44
Shelf Support Rails	45
Oven Lighting	46
Oven Ceiling	47
Oven Door	48
Oven door glass	49
Pan drawer	50
What to do if	51
Instruction on setting up	52
Setting up	52
Making the appliance level	52
Safety information for the installer	53
Service	55

Operating Instructions

Safety instructions

- CE** This appliance conforms with the following EU Directives:
- 73/23/EEC dated 19.02.1973 Low Voltage Directive
 - 89/336/EEC dated 03.05.1989 EMC Directive inclusive of Amending Directive 92/31/EEC
 - 93/68/EEC dated 22.07.1993 CE Marking Directive

Electrical safety

- This appliance must be only connected by a **registered electrician**.
- In the event of faults with the appliance or damage to the glass ceramic (cracks, scratches or splits), the appliance must be switched off and disconnected from the electrical supply, to prevent the possibility of an electric shock.
- **Repairs** to the appliance must only be carried out by **qualified service engineers**. Considerable danger may result from improper repairs. If repairs become necessary, please contact our Customer Services or your dealer.

Child Safety

- Never leave children unsupervised when the appliance is in use.

Safety during use

- This appliance should be used only for normal domestic cooking, roasting and baking of food.
- Do not use the cooking surface to heat up the room.
- Overheated fats and oils can ignite quickly. If you are cooking foods in fat or oil (e. g. chips), you should watch the cooking process.
- If you are using cookware with a long handle, turn the handle so that it does not project over the ring. Make sure that the handle is not positioned over a hot or warm cooking zone.
- Be careful if connecting electrical appliances to sockets near to this appliance. Electrical leads should not be allowed to come near the rings or to become caught under the hot oven door.
- Switch the cooking zones off after each use.
- **Warning: Danger of burns!** The interior surfaces of the oven become very hot during use.

- If you use ingredients containing alcohol in the oven, a slightly flammable mixture of alcohol and air may ensue. In this case, be careful when opening the door. Do not handle any sources of heat, sparks or naked flames when doing so.



Information on acrylamides

According to the latest scientific knowledge, intensive browning of food, especially in products containing starch, can constitute a health risk due to acrylamides. Therefore we recommend cooking at the lowest possible temperatures and not browning foods too much.

How to avoid damage to the appliance

- The cooking surface must not be used as a work surface or as a storage surface.
- Do not operate the cooking zones with empty cookware or without cookware.
- Make sure that no acidic liquids, e. g. vinegar, lemon or limescale removing agents, get onto the edges of the cooking surface, as otherwise this will cause matt patches.
- Pointed objects and hard objects that fall onto the cooking surface can damage it.
- Keep all objects and materials that might melt well away from the glass ceramic surface, e. g. plastics, tin foils or oven foils. If, however, something should melt onto the glass ceramic surface, this must be removed immediately with the scraper.
- Do not line the oven with aluminium foil and do not place baking trays, pots, etc. on the oven floor, as the heat that builds up will damage the oven enamel.
- Fruit juices dripping from the baking tray will leave stains, which you will not be able to remove. For very moist cakes, use a deep tray.
- Do not put any strain on the oven door when open.
- Never pour water directly into the oven when it is hot. This could cause damage to or discoloration of the enamel.
- Rough handling, especially around the edges of the front panel, can cause the glass to break.
- Do not store any flammable materials inside the oven. These could ignite when the oven is switched on.
- Do not store any moist foods inside the oven. This could cause damage to the enamel.

Disposal



Packaging material

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities.



Old appliance

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.




Warning: So that the old appliance can no longer cause any danger, make it unusable before disposing of it.


To do this, disconnect the appliance from the mains supply and remove the mains cable from the appliance.

Description of the Appliance


General Overview

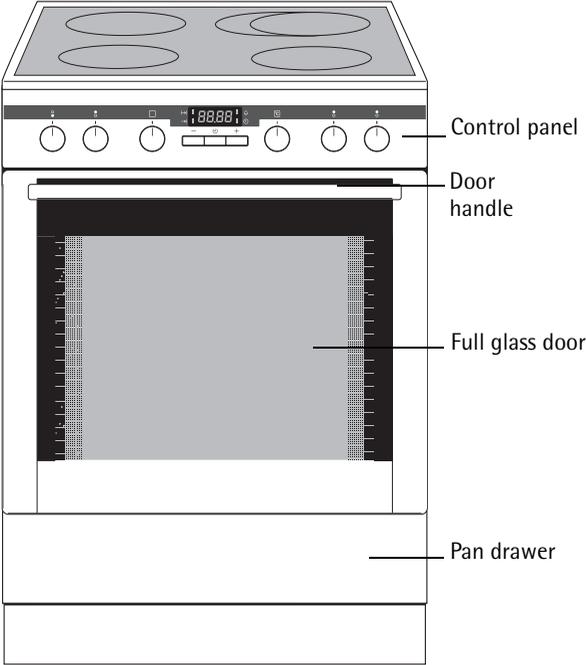


Control Panel

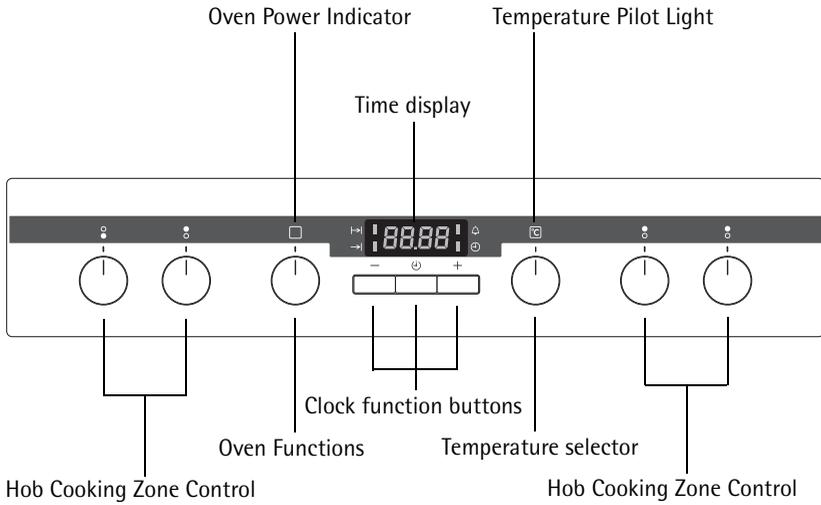

Cooking surface

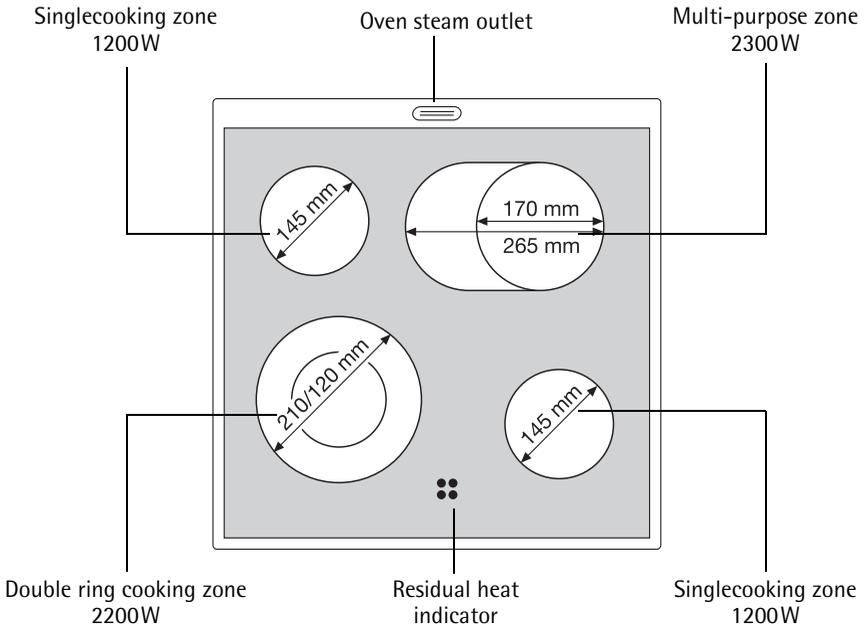


Oven Features

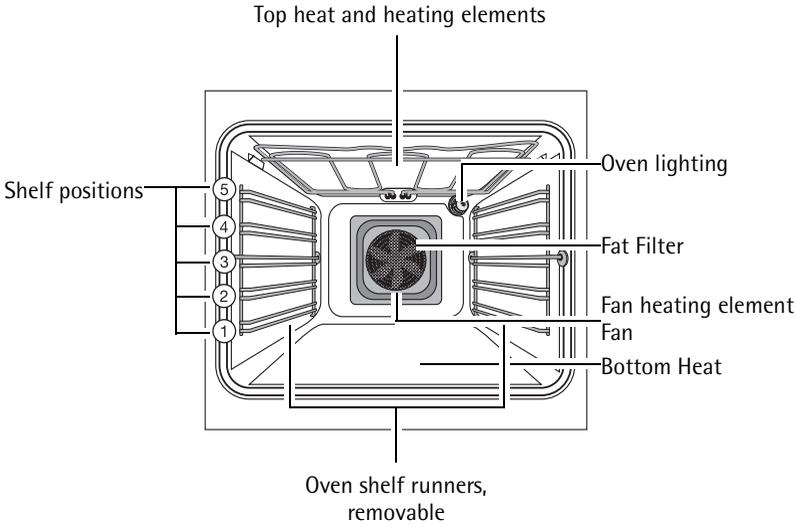


Oven accessories


Combination shelf
For dishes, cake tins, items for roasting and grilling.

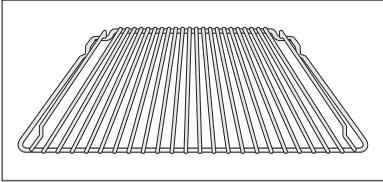

Baking tray
For cakes and biscuits.

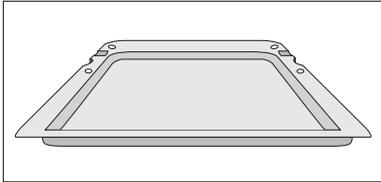

Drip pan
For roasting or for collecting fat

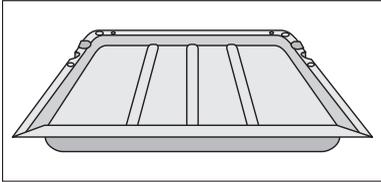



Before Using for the first time

Setting and changing the time

i The oven only operates when the time has been set.

When the appliance has been connected to the electrical supply or when there has been a power cut, the function indicator Time  flashes automatically.


1. To change a time that has already been set, press the Selection  button repeatedly until the function indicator Time  flashes.
2. Using the **+** or **-** button, set the current time.

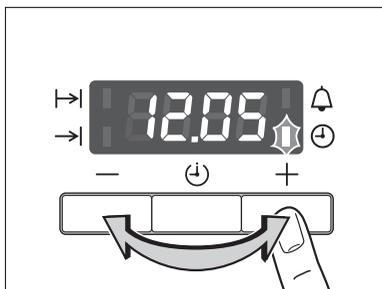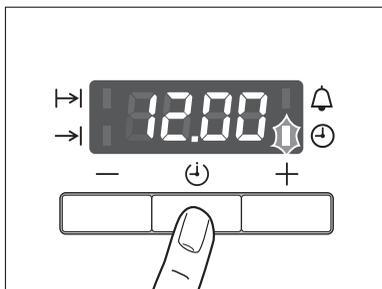

After approx. 5 seconds, the flashing stops and the clock displays the time set.

The appliance is now ready to use.

i The time can only be changed if no automatic function (Cook time  or End time ) has been set.

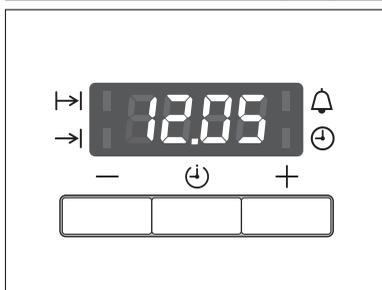

Initial Cleaning

You should clean the appliance thoroughly before using for the first time.

Wipe the glass ceramic cooking surface with a damp cloth.



Attention: Do not use sharp or abrasive cleaning materials. These could damage the surface.



For appliances with metal fronts, use normal commercially available cleaning agents.

1. Turn the oven functions dial to Light .
2. Remove all accessories and the side rails and clean with warm water and washing-up liquid.
3. Wash the oven in the same way, with warm water and washing-up liquid, and dry it.
4. Wipe the front of the appliance with a damp cloth.

Operating the hob

i When a cooking zone is switched on, it may hum briefly. This is a characteristic of all ceramic glass cooking zones and does not impair either the function or the life of the appliance.

Heat settings

- Heat settings can be set from 1-9.
- Intermediate positions are possible for settings 2-7.


1 = lowest output

9 = highest output

⊙ = double ring switching



Switch the cooking zone off approx. 5-10 minutes before cooking is finished to make use of the residual heat. This saves electricity.

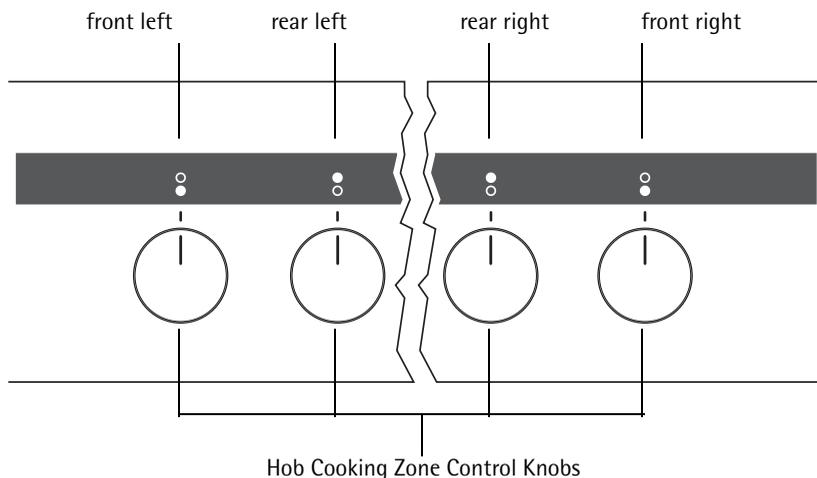


The cooker has **pop-up ring switches**.

Press the ring switch to use it. The switch will then pop up.


Setting the heat setting

1. Select the heat setting.

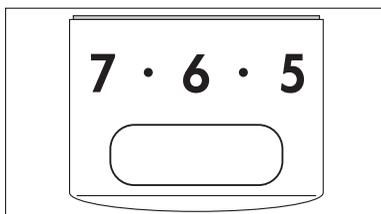

2. To end the cooking process, turn back to the Off position.


-  The corresponding ring pilot light is lit while the ring is operating.

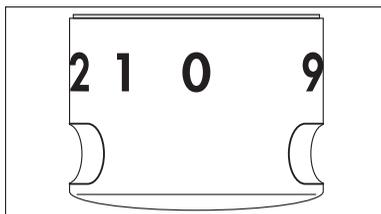

Switching on the dual fry/cook area

-  The control for the dual fry/cook area is switched on by turning to the right, and cannot be turned past the stop!

1. Turn the dual fry/cook control to the right. Continue turning to Position 9, and onto the  symbol (you will feel a slight resistance). The stop position will then be clearly detectable.
2. Finally, turn back to the desired setting.
3. After cooking, turn back to the OFF position.

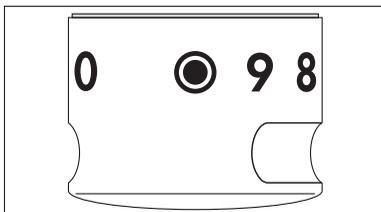

-  To use the dual fry/cook area again afterwards, the larger ring must be switched back on.

Residual heat indicator

The residual heat indicator lights up, as soon as the corresponding cooking zone is hot.


-  **Danger!** Risk of burns from residual heat. After being switched off, the cooking zones need some time to cool down. Look at the residual heat indicator.

-  Residual heat can be used for melting and keeping food warm.

Using the Oven

i The oven is equipped with **retractable buttons** for "Oven functions" and "Temperature selection". To use, press the relevant button. The button then sticks out.

Switching the Oven On and Off

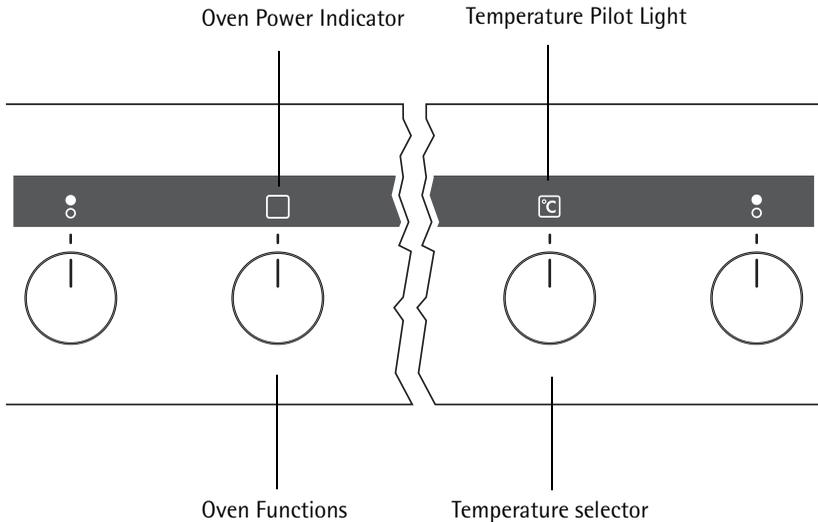

1. Turn the oven functions dial to the desired function.
2. Turn the temperature selector to the desired temperature.
The power indicator is lit as long as the oven is in operation.
The temperature pilot light is lit as long as the oven is heating up.
3. To turn the oven off, turn the oven functions dial and the temperature selector to the OFF position.

i **Cooling fan**
The fan switches on automatically in order to keep the appliance's surfaces cool. When the oven is switched off, the fan continues to run to cool the appliance down, then switches itself off automatically.

Oven Functions

The oven has the following functions:

Oven function	Application	Heating element/ fan
 Light	Using this function you can light up the oven interior, e.g. for cleaning.	---
 Fan-assisted circulation	For baking on up to two oven levels . Set the oven temperatures 20-40 °C lower than when using Conventional.	Top heat, bottom-heat, fan
 Fan cooking	For baking on up to three oven levels at the same time. Set the oven temperatures 20-40 °C lower than when using Conventional.	Rear heating element, fan
 Conventional	For baking and roasting on one oven level .	Top heat, bottomheat
 Bottom heat	For baking cakes with crispy or crusty bases .	Bottom heat
 Defrost	For defrosting e. g. flans and gateaux, butter, bread, fruit or other frozen foods .	Fan
 Grill	For grilling flat foodstuffs placed in the middle of the grill and for toasting .	Grill
 Dual grill	For grilling flat foodstuffs in large quantities and for toasting .	Grill, top heat
 Rotitherm	For roasting larger joints of meat or poultry on one level. The function is also suitable for gratinating and browning .	Grill, top heat, fan

Inserting the shelf, baking tray and roasting pan




Anti-tip device

All insertable components have a small curved indentation on their left and right edges. This indentation serves as an anti-tip device and must always point towards the back of the oven.


Inserting the baking tray or roasting pan:

The anti-tip device must point towards the back of the oven.

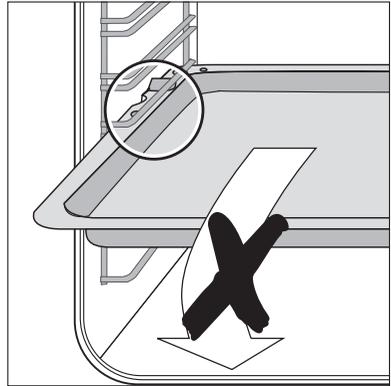


Inserting the shelf:

Insert the shelf so that the two guide bars point upwards. The anti-tip device must point downwards and be at the back of the oven interior.

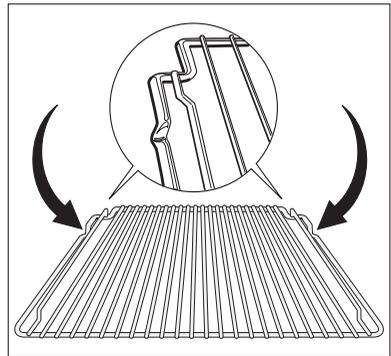

Inserting the shelf and the baking tray or the roasting pan:

When using the shelf and the baking tray or the roasting pan together, insert the shelf's anti-tip device exactly into the indentations in the baking tray or the roasting pan.

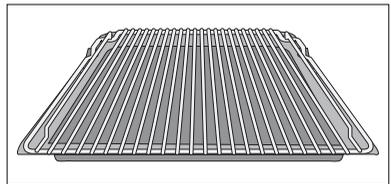


Inserting/Removing the Grease Filter


Only use the grease filter when roasting to protect the rear heating elements from fat splashes.

Inserting the grease filter
Hold the grease filter by the grip and insert the two mounts downwards into the opening on the rear wall of the oven (fan opening).

Taking out the grease filter
Hold the grease filter by the grip and unhook it.

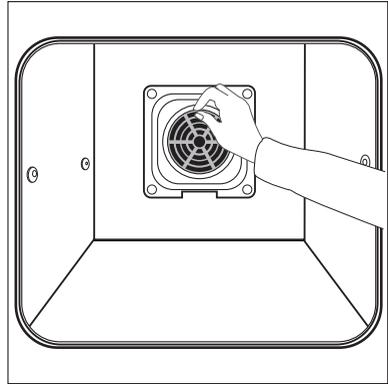

Clock Functions

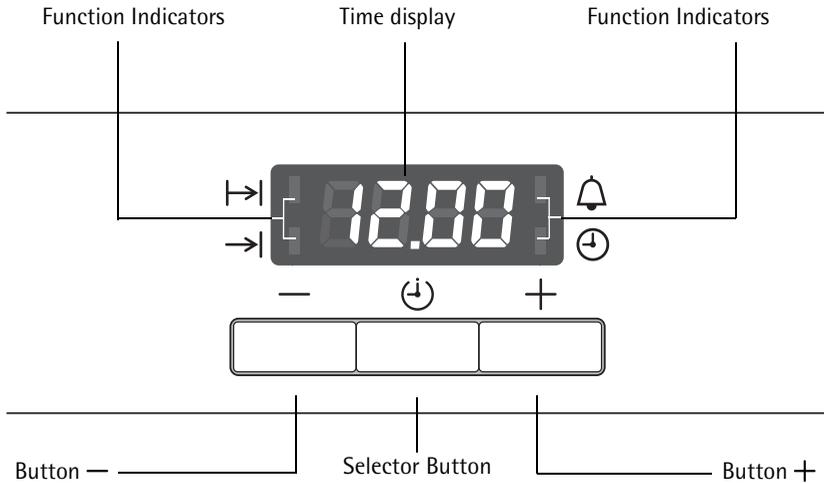

Countdown

To set a countdown. A signal sounds after the time has elapsed. This function does not affect the functioning of the oven.

Cook time

To set how long the oven is to be in use.

End time

To set when the oven is to switch off again.

Time

To set, change or check the time
(See also section "Before Using for the First Time").



How to use the clock functions

- After a function has been selected, the corresponding function indicator flashes for about 5 seconds. During this period, the desired times can be set using the + or — button.
- When the desired time has been set, the function indicator continues to flash for approx. 5 seconds. After that the function indicator is then lit. The set time begins to run.
- Press any of the buttons to stop the audible signal.
- The desired oven function and temperature can be selected before or after the clock functions Cook time  and End time  are set.
- When the cooking process is completed, turn the oven function dial and the temperature selector back to the OFF position.



Switching Off the Time Display

By switching off the time display you can save energy.

Switching off the time display

Press and hold down any two buttons until the display becomes dark (approx. 10 seconds).

Switching on the time display


Press and hold down any two buttons until the time reappears in the display (approx. 10 seconds).




The display can only be switched off if none of the clock functions Cook time , End time  or Countdown  is in use.

Countdown


1. Press the Selection  button repeatedly until the function indicator Countdown  flashes.

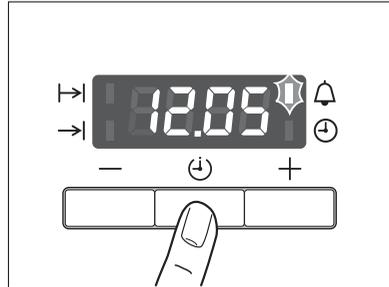


2. Using the + or - button set the desired Countdown (max. 2 hours 30 minutes).

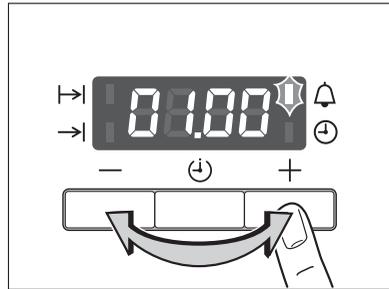

After approx. 5 seconds the display shows the time remaining. The function indicator Countdown  lights up.

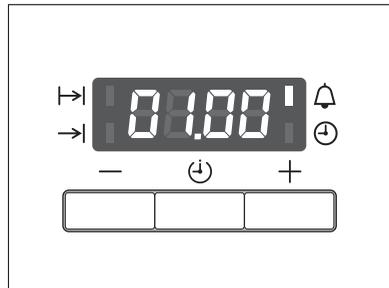


When the time has elapsed, the function indicator flashes and an audible signal sounds for 2 minutes. The signal can be stopped by pressing any button.

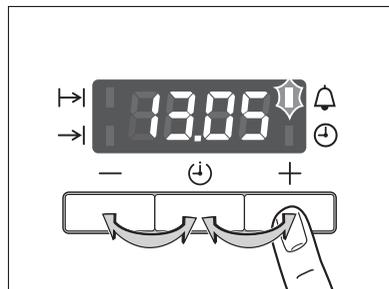


Cook time


1. Press the Selection  button repeatedly until the function indicator Cook time  flashes.

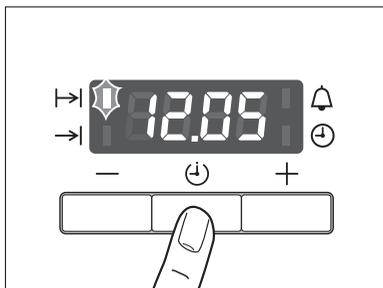

2. Using the + or - button set the desired cooking time.

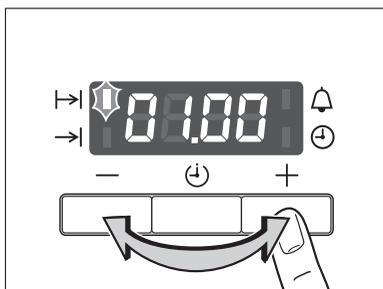


After approx. 5 seconds the display returns to showing the current time. The function indicator Cook time  lights up.

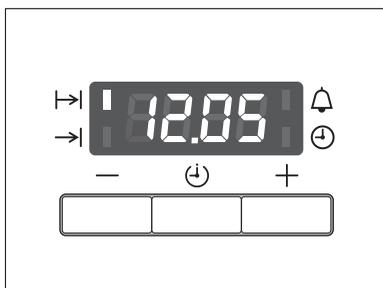


When the time has elapsed, the function indicator flashes, an audible signal sounds for 2 minutes and the oven switches itself off.

3. The signal and the programme can be stopped by pressing any button.

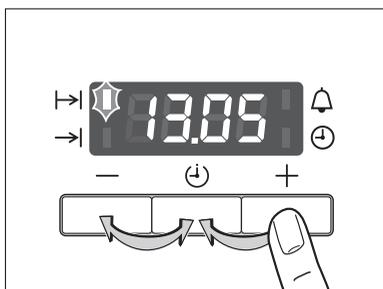


End time


1. Press the Selection  button repeatedly until the function indicator End time  flashes.

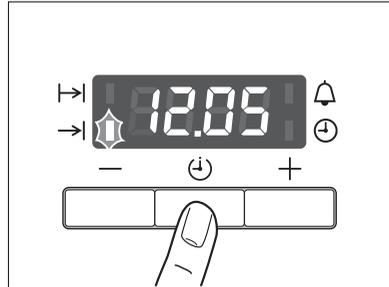

2. Using the + or - button set the desired switch-off time.

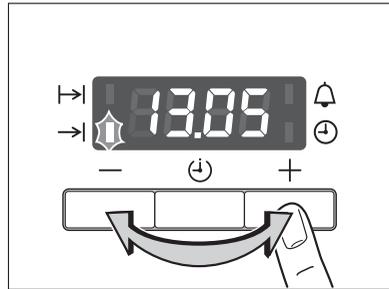


After approx. 5 seconds the display returns to showing the current time. The function indicator End time  lights up.

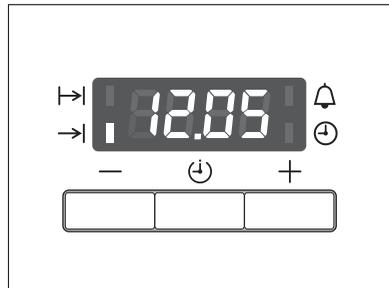

When the time has elapsed, the function indicator flashes, an audible signal sounds for 2 minutes and the oven switches itself off.

3. The signal and the programme can be stopped by pressing any button.

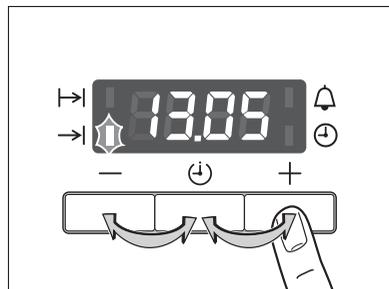


Cook time and End time combined



Cook time  and End time  can be used simultaneously, if the oven is to be switched on and off automatically **at a later time**.


1. Using the Cook time  function, set the time required for cooking the dish.

In this example, 1 hour.

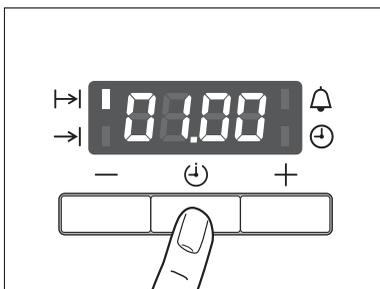


2. Using the End time  function, set the time at which the dish should be ready.

In this case 14:05:00.

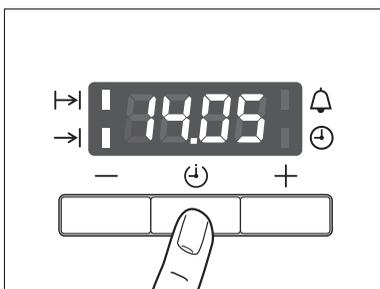

The function indicators Cook time  and End time  light up and the current time is shown in the display.

In this case 12:05.

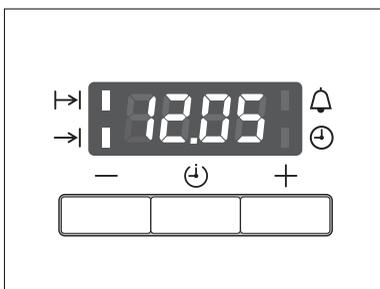

The oven switches on automatically at the time calculated.

In this case, at 13:05:00.


And switches itself off again when the cooking time entered has elapsed.

In this case, at 14:05.

Uses, Tables and Tips



Pans

- You can recognise good pans by their bases. The base should be as thick and flat as possible.
- Pay particular attention when buying new pans to the diameter of the base. Manufacturers often give only the diameter of the upper rim.
- Pots with aluminium or copper bases can cause metallic discolouring on the ceramic glass surface, which is very difficult or impossible to remove.
- Do not use cast iron pans or pans with a rough, burred or damaged base. This can produce permanent scratching if the pan is slid across the surface.
- When cold, pan bases are normally bowed slightly inwards (concave). They should never be bowed outwards (convex).
- If you wish to use special types of pan (e.g. a pressure cooker, simmering pan, wok, etc.), please observe the manufacturer's instructions.

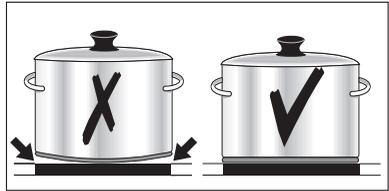

Energy saving tips

- Always position pots and pans before switching on the cooking zone.
- Whenever possible always position the lids firmly on pots and pans to cover completely.
- Switch off the cooking zones before the end of the cooking time to use the residual heat such as to keep foods warm or for melting.
- The base of the pan should be the same size as the cooking zone.

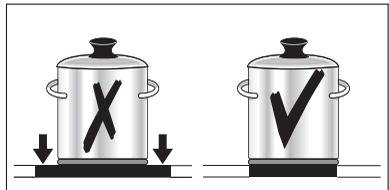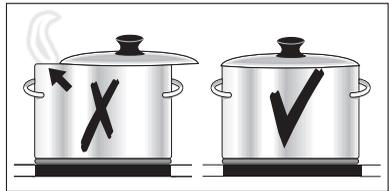

Cooking table

The information given in the following table is for guidance only.

Heat setting	Cooking-process	suitable for	Cooking time	Tips/Hints
0		Residual heat, Off position		
1	Keeping food warm	Keeping cooked foods warm	as required	Cover
1-2	Melting	Hollandaise sauce, melting butter, chocolate, gelatine	5-25 mins.	Stir occasionally
	Solidifying	Fluffy omelettes, baked eggs	10-40 mins.	Cook with lid on
2-3	Simmering on low heat	Simmering rice and milk-based dishes Heating up ready-cooked meals	25-50 mins.	Add at least twice as much liquid as rice, stir milk dishes part way through cooking
3-4	Steaming Braising	Steaming vegetables, fish braising meat	20-45 mins.	With vegetables add only a little liquid (a few tablespoons)
4-5	Boiling	Steaming potatoes	20-60 mins.	Use only a little liquid, e. g.: max. 1/4 l water for 750 g potatoes
		Cooking larger quantities of food, stews and soups	60-150 mins.	Up to 3 l liquid plus ingredients
6-7	Gentle Frying	Frying escalopes, veal cordon bleu, cutlets, rissoles, sausages, liver, roux, eggs, pancakes, doughnuts	Steady frying	Turn halfway through cooking
7-8	Heavy Frying	Hash browns, loin steaks, steaks, Flädle (pancakes for garnishing soup)	5-15 mins. per pan	Turn halfway through cooking
9	Boiling Searing Deep frying	Boiling large quantities of water, cooking pasta, searing meat (goulash, pot roast), deep frying chips		



We recommend when boiling or searing foods using the highest heat setting at first and then letting foods requiring a longer cooking time finish cooking on the desired heat setting.



Overheated fats and oils can ignite quickly. If you are cooking foods in fat or oil (e.g. chips), remain nearby.

Baking

Oven function: Fan-assisted circulation , Fan cooking  or Conventional 


Baking tins

- For Conventional , dark metal and non-stick tins are suitable.
- For Fan-assisted circulation  or Fan cooking , bright metal tins are also suitable.


Oven levels

- Baking with Conventional  and Fan-assisted circulation  is possible on one oven level.
- With Fan cooking  you can bake on up to 3 baking trays at the same time:


1 baking tray:
e.g. oven level 3

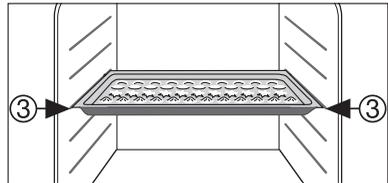


1 baking tin:
e.g. oven level 1

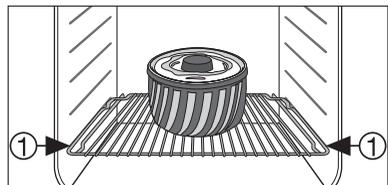

2 baking trays:
e. g. oven levels 1 and 3

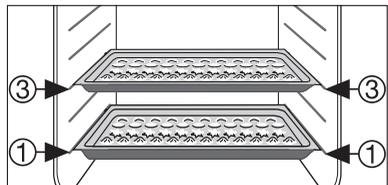

3 baking trays:
oven levels 1, 3 and 5

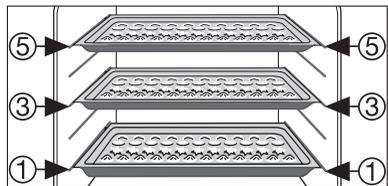

General Instructions

- Insert the tray with the bevel at the front.
- With Conventional  or Fan-assisted circulation  you can also bake with two tins next to one another on the oven shelf at the same time. This does not significantly increase baking time.



When frozen foods are used the trays inserted may distort during cooking. This is due to the large difference in temperature between the freezing temperature and the temperature in the oven. Once the trays have cooled the distortion will disappear again.

How to use the Baking Tables

The tables give the required temperature settings, baking times and oven shelf levels for a selection of typical dishes.

- Temperatures and baking times are for guidance only, as these will depend on the consistency of pastry or mixture, the number and the type of cake tin.
- We recommend using the lower temperature the first time and then if necessary, for example, if a deeper browning is required, or baking time is too long, selecting a higher temperature.
- If you cannot find the settings for a particular recipe, look for the one that is most similar.
- If baking cakes on baking trays or in tins on more than one level, baking time can be extended by 10-15 minutes.
- Moist recipes (for example, pizzas, fruit flans, etc.) are baked on one level.
- Cakes and pastries at different heights may brown at an uneven rate at first. If this occurs, **please do not change the temperature setting**. Different rates of browning even out as baking progresses.



With longer baking times, you can switch the oven off about 10 minutes before the end of the baking time, in order to utilise the residual heat.

Unless otherwise stated, the values given in the tables assume that cooking is started with the oven cold.

Baking table

Type of baking	Ovenfunction	Shelf position	Temperature °C	Time Hours mins.	
Baking in tins					
Ring cake or brioche		Fan-assisted circulation	1	150-160	0:50-1:10
Madeira cake/Fruitcakes		Fan-assisted circulation	1	140-160	1:10-1:30
Sponge cake		Fan-assisted circulation	1	140	0:25-0:40
Sponge cake		Conventional	2	160	0:25-0:40
Flan base - short pastry		Conventional	3	180-200	0:10-0:25
Flan base - sponge mixture		Fan-assisted circulation	3	150-170	0:20-0:25
Apple pie		Conventional	1	170-190	0:50-1:00
Apple pie (2 tins Ø20cm, diagonally off set)		Fan-assisted circulation	1	160	1:10-1:30
Apple pie (2 tins Ø20cm, diagonally off set)		Conventional	1	180	1:10-1:30
Savoury flan (e. g. quiche lorraine)		Conventional	1	180-200	0:30-1:10
Cheesecake		Conventional	1	170-190	1:00-1:30
Cakes/pastries/breads on baking trays					
Plaited bread/bread crown		Conventional	3	170-190	0:30-0:40
Christmas stollen		Conventional	3	160-180 ¹⁾	0:40-1:00
Bread (rye bread) -first of all -then		Conventional	2	250 ¹⁾ 160-180	0:20 0:30-1:00
Cream puffs/Eclairs		Fan-assisted circulation	3	160-170 ¹⁾	0:15-0:30
Swiss roll		Conventional	3	180-200 ¹⁾	0:10-0:20
Cake with crumble topping(dry)		Fan-assisted circulation	3	150-160	0:20-0:40
Buttered almond cake/sugar cakes		Conventional	3	190-210 ¹⁾	0:15-0:30

Type of baking	Ovenfunction	Shelf position	Temperature °C	Time Hours mins.
Fruit flans (made with yeast dough/sponge mixture) ²⁾	 Fan-assisted circulation	3	150	0:35-0:50
Fruit flans (made with yeast dough/sponge mixture)	 Conventional	3	170	0:35-0:50
Fruit flans made with short pastry	 Conventional	3	170-190	0:40-1:20
Yeast cakes with delicate toppings (e. g. quark, cream, vanilla cream)	 Conventional	3	160-180	0:40-1:20
Pizza (with a lot of topping) ²⁾	 Conventional	1	190-210 ¹⁾	0:30-1:00
Pizza (thin crust)	 Conventional	1	230-250 ¹⁾	0:10-0:25
Unleavened bread	 Conventional	1	250-270	0:08-0:15
Tarts (CH)	 Conventional	1	200-220	0:35-0:50
Biscuits				
Short pastry biscuits	 Fan-assisted circulation	3	150-160	0:06-0:20
Short pastry biscuits	 Fan-assisted circulation	1 / 3	150-160	0:06-0:20
Viennese whirls	 Fan-assisted circulation	3	140	0:20-0:30
Viennese whirls	 Fan-assisted circulation	1 / 3	140	0:25-0:40
Viennese whirls	 Conventional	3	160 ¹⁾	0:20-0:30
Biscuits made with sponge mixture	 Fan-assisted circulation	3	150-160	0:15-0:20
Biscuits made with sponge mixture	 Fan-assisted circulation	1 / 3	150-160	0:15-0:20
Pastries made with egg white, meringues	 Fan-assisted circulation	3	80-100	2:00-2:30
Macaroons	 Fan-assisted circulation	3	100-120	0:30-0:60
Biscuits made with yeast dough	 Fan-assisted circulation	3	150-160	0:20-0:40
Puff pastries	 Fan-assisted circulation	3	170-180 ¹⁾	0:20-0:30

Type of baking	Ovenfunction	Shelf position	Temperature °C	Time Hours mins.
Rolls	 Fan-assisted circulation	3	160 ¹⁾	0:20-0:35
Rolls	 Conventional	3	180 ¹⁾	0:20-0:35
Small cakes (20 per tray)	 Fan-assisted circulation	3	140 ¹⁾	0:20-0:30
Small cakes (20 per tray)	 Fan-assisted circulation	1 / 4	140 ¹⁾	0:25-0:40
Small cakes (20 per tray)	 Conventional	3	170 ¹⁾	0:20-0:30

1) Pre-heat the oven

2) Use the drip tray or roasting tray

Baking on more than one oven level

Type of baking	Fan-assisted circulation 	Fan cooking 	Temperature in °C	Time Hours: Mins.
	Shelf positions from bottom			
	2 levels	3 levels		
Cakes/pastries/breads on baking trays				
Cream puffs/Eclairs	1 / 4	---	160-180 ¹⁾⁾	0:35-0:60
Dry streusel cake	1 / 3	---	140-160	0:30-0:60
Biscuits/small cakes/pastries/rolls				
Short pastry biscuits	1 / 3	1 / 3 / 5	150-160	0:15-0:35
Viennese whirls	1 / 3	1 / 3 / 5	140	0:20-0:60
Biscuits made with sponge mixture	1 / 3	---	160-170	0:25-0:40
Biscuits made with egg white, meringues	1 / 3	---	80-100	2:10-2:50
Macaroons	1 / 3	---	100-120	0:40-1:20
Biscuits made with yeast dough	1 / 3	---	160-170	0:30-0:60
Puff pastries	1 / 3	---	170-180 ¹⁾	0:30-0:50
Rolls	1 / 4	---	160	0:30-0:55
Small cakes (20 per tray)	1 / 4	---	140 ¹⁾	0:25-0:40

1) Pre-heat the oven

Tips on Baking

Baking results	Possible cause	Remedy
The cake is not browned enough underneath	Wrong oven level	Place cake lower
The cake sinks (becomes soggy, lumpy, streaky)	Oven temperature too high	Use a slightly lower setting
	Baking time too short	Set a longer baking time Baking times cannot be reduced by setting higher temperatures
	Too much liquid in the mixture	Use less liquid. Pay attention to mixing times, especially if using mixing machines
Cake is too dry	Oven temperature too low	Set oven temperature higher.
	Baking time too long	Set a shorter baking time
Cake browns unevenly	Oven temperature too high and baking time too short	Set a lower oven temperature and a longer baking time
	Mixture is unevenly distributed	Spread the mixture evenly on the baking tray
	Grease filter is inserted	Take out the grease filter
Cake does not cook in the baking time given	Temperature too low	Use a slightly higher oven setting
	Grease filter is inserted	Take out the grease filter

Table for Bakes and Gratins

Dish	Oven function	Shelf position	Temperature °C	Time Hours mins.	
Pasta bake		Conventional	1	180-200	0:45-1:00
Lasagne		Conventional	1	180-200	0:25-0:40
Vegetables au gratin ¹⁾		Rotitherm	1	160-170	0:15-0:30
Baguettes topped with melted cheese ¹⁾		Rotitherm	1	160-170	0:15-0:30
Sweet bakes		Conventional	1	180-200	0:40-0:60
Fish bakes		Conventional	1	180-200	0:30-1:00
Stuffed vegetables		Rotitherm	1	160-170	0:30-1:00

1) Pre-heat the oven

Frozen Ready Meals Table

Food to be cooked	Oven function	Shelf position	Temperature °C	Time
Frozen pizza		Conventional	3	as per manufacturer's instructions
Chips ¹⁾ (300-600 g)		Rotitherm	3	200-220
Baguettes		Conventional	3	as per manufacturer's instructions
Fruit flans		Conventional	3	as per manufacturer's instructions

1) Comments: Turn chips 2 or 3 times during cooking

Roasting

Oven function: Conventional  or Rotitherm 

Insert the grease filter when roasting!

Roasting dishes

- Any heat-resistant ovenware is suitable to use for roasting (please read the manufacturer's instructions).
- Large roasting joints can be roasted **directly in the roasting tray or on the oven shelf with the roasting tray placed below it.**
- For all lean meats, we recommend **roasting these in a roasting tin with a lid.** This will keep the meat more succulent.
- All types of meat, that can be browned or have crackling, can be roasted in the **roasting tin without the lid.**



Tips on using the roasting chart

The information given in the following table is for guidance only.

- We recommend cooking meat and fish **weighing 1 kg and above in the oven.**
- To prevent escaping meat juices or fat from burning on to the pan, we recommend placing some liquid in the roasting pan.
- If required, turn the roast (after 1/2 - 2/3 of the cooking time).
- Baste large roasts and poultry with their juices several times during roasting. This will give better roasting results.
- You can switch the oven off about 10 minutes before the end of the roasting time, in order to utilise the residual heat.

Roasting table

Type of meat	Quantity	Ovenfunction	Shelf position	Temperature °C	Time Hours mins.	
Beef						
Pot roast	1-1.5 kg		Conventional	1	200-250	2:00-2:30
Roast beef or fillet						per cm. of thickness
- rare	per cm. of thickness		Rotitherm	1	190-200 ¹⁾	0:05-0:06
- medium	per cm. of thickness		Rotitherm	1	180-190	0:06-0:08
- well done	per cm. of thickness		Rotitherm	1	170-180	0:08-0:10
Pork						
Shoulder, neck, ham joint	1-1.5 kg		Rotitherm	1	160-180	1:30-2:00
Chop, spare rib	1-1.5 kg		Rotitherm	1	170-180	1:00-1:30
Meat loaf	750 g-1 kg		Rotitherm	1	160-170	0:45-1:00
Porkknuckle (pre-cooked)	750 g-1 kg		Rotitherm	1	150-170	1:30-2:00
Veal						
Roast veal	1 kg		Rotitherm	1	160-180	1:30-2:00
Knuckle of veal	1.5-2 kg		Rotitherm	1	160-180	2:00-2:30
Lamb						
Leg of lamb, roast lamb	1-1.5 kg		Rotitherm	1	150-170	1:15-2:00
Saddle of lamb	1-1.5 kg		Rotitherm	1	160-180	1:00-1:30
Game						
Saddle of hare, leg of hare	up to 1 kg		Conventional	3	220-250 ¹⁾	0:25-0:40
Saddle of venison	1.5-2 kg		Conventional	1	210-220	1:15-1:45
Haunch of venison	1.5-2 kg		Conventional	1	200-210	1:30-2:15

Type of meat	Quantity	Ovenfunction	Shelf position	Temperature °C	Time Hours mins.	
Poultry						
Poultry portions	200-250g each		Rotitherm	3	200-220	0:35-0:50
Half chicken	400-500g each		Rotitherm	3	190-210	0:35-0:50
Chicken, poulard	1-1.5 kg		Rotitherm	1	190-210	0:45-1:15
Duck	1.5-2 kg		Rotitherm	1	180-200	1:15-1:45
Goose	3.5-5 kg		Rotitherm	1	160-180	2:30-3:30
Turkey	2.5-3.5 kg		Rotitherm	1	160-180	1:45-2:30
	4-6 kg		Rotitherm	1	140-160	2:30-4:00
Fish (steamed)						
Whole fish	1-1.5 kg		Conventional	2 / 3	210-220	0:45-1:15

1) Pre-heat the oven

Grill Sizes

Oven function: Grill  or Dual grill  with maximum temperature setting



Important: Always grill with the oven door closed.



The empty oven should **always be pre-heated with the grill functions for 5 minutes.**

- For grilling, use both the oven shelf and the roasting tray together.
- The grilling times are guidelines.
- Grilling is particularly suitable for flat pieces of meat or fish.

Grilling table

Food to be grilled	Oven level	Grilling time	
		1. Side	2. Side
Burgers	4	8-10 mins.	6-8 mins.
Pork fillet	4	10-12 mins.	6-10 mins.
Sausages	4	8-10 mins.	6-8 mins.
Filet steaks, veal steaks	4	6-7 mins.	5-6 mins.
Filet of beef, roast beef (approx. 1 kg)	3	10-12 mins.	10-12 mins.
Toast ¹⁾	3	2-3 mins.	2-3 mins.
Toast with topping	3	6-8 mins.	---

1) Use the grill without the roasting tray

Defrosting

Oven function: Defrost  (no temperature setting)

- Unwrap the food and place it on a plate on the oven shelf.
- Do not cover with a plate or bowl, as these can substantially lengthen the defrosting time.
- For defrosting, place the shelf in the **1st oven level from the bottom**.

Defrosting table

Dish	Defrosting time mins.	Further defrosting time (mins.)	Comments
Chicken, 1000 g	100-140	20-30	Place the chicken on an upturned saucer placed on a large plate Turn halfway through
Meat, 1000 g	100-140	20-30	Turn halfway through
Meat, 500 g	90-120	20-30	Turn halfway through
Trout, 150g	25-35	10-15	---
Strawberries, 300g	30-40	10-20	---
Butter, 250g	30-40	10-15	---
Cream, 2 x 200g	80-100	10-15	Cream can also be whipped when still slightly frozen in places
Gateau, 1400g	60	60	---

Making Preserves

Oven function: Bottom heat

- For preserving, use only commercially available preserve jars of the same size.
- **Jars with twist-off or bayonet type lids and metal tins are not suitable.**
- When making preserves, the **first shelf position from the bottom** is the one most used.
- Use the shelf for making preserves. There is enough room on this for up to six 1-litre preserving jars.
- The jars should all be filled to the same level and clamped shut.
- Place the jars on the baking tray in such a way that they are not touching each other.
- Pour approx. 1/2 litre of water into the baking tray so that sufficient moisture is produced in the oven.
- As soon as the liquid starts to pearl in the first jars (after about 35-60 minutes with 1 litre jars), switch the oven off or reduce the temperature to 100°C (see table).

Preserves table

The times and temperatures for making preserves are for guidance only.

Preserve	Temperature in °C	Cooking time until simmering in mins.	Continue to cook at 100°C in mins.
Soft fruit			
Strawberries, blueberries, raspberries, ripe gooseberries	160-170	35-45	---
Unripe gooseberries	160-170	35-45	10-15
Stone fruit			
Pears, quinces, plums	160-170	35-45	10-15
Vegetables			
Carrots ¹⁾	160-170	50-60	5-10
Mushrooms ¹⁾	160-170	40-60	10-15
Cucumbers	160-170	50-60	---
Mixed pickles	160-170	50-60	15
Kohlrabi, peas, asparagus	160-170	50-60	15-20
Beans	160-170	50-60	---

1) Leave standing in oven when switched off

Cleaning and Care



Warning: For cleaning, the appliance must be switched off and cooled down.

Warning: For safety reasons, **do not** clean the appliance with steam jet or high-pressure cleaning equipment.

Attention: Do not use any scouring agents, sharp cleaning tools or scourers.

Outside of the appliance

- Wipe the front of the appliance with a soft cloth and warm water and washing up liquid.
- For metal fronts, use normal commercially available cleaning agents.

Cooking surface



Important: Cleaning agents must not be used on **hot** glass ceramic surfaces. All cleaning agents must be removed with plenty of clean water, as they can have a corrosive effect when the cooking surface is heated up. Only clean when the surface is cold.

Do not use any aggressive cleaning materials, such as grill or oven sprays, rough scouring agents or scratchy pan cleaners.



Clean the glass ceramic cooking surface after every use, when it is hand-hot or cold. This prevents food residues from being burnt on. Limestone and water rings, fat splashes and shiny metallic discolorations can be removed with a standard commercially available cleaner for glass ceramic or stainless steel. Follow the manufacturer's instructions.

Light soiling

1. Wipe glass ceramic surface with a damp cloth and a little washing up liquid.
2. Then rub dry using a clean cloth. No cleaning agent residues must remain on the surface.

Stubborn residues

1. Use a scraper to remove foods that have boiled over or stubborn splashes.
2. Place the scraper on the glass ceramic surface at an angle.
3. Remove residues by sliding the blade over the surface.



You can get scrapers and glass ceramic cleaners from specialist shops.



Special residues

1. Remove burnt on sugar, melted plastic, tin foil or other materials that melt **immediately, while still hot** with a scraper.



Attention: There is a risk of burns when using the scraper on the hot cooking zone.

2. Then clean the cooking surface in the normal way when it has cooled down.



If the cooking zone that has the melted materials on it has already cooled down, heat it up again before cleaning it.

Scratches or dark stains on the glass ceramic surface, that have been made e. g. by pot and pan bottoms with sharp edges, cannot be removed. However they do not affect the cooking surface's ability to function.

Hob Frame



Important! Do not put vinegar, lemon-juice or scale removers on the hob frame, otherwise dull spots will appear.

1. Wipe the frame with a damp cloth and a little washing up liquid.
2. Soften dried dirt with a wet cloth. Then wipe off and rub dry.

Oven interior

Clean the appliance after each use. In this way, dirt is easier to clean off and is not allowed to burn on.

1. For cleaning, turn the oven light on.
2. After every use, wipe the oven with a solution of washing-up liquid and allow to dry.



Clean stubborn dirt with a special oven cleaner.



Important: If using an oven spray, please follow the manufacturer's instructions exactly.

Accessories

Wash all slide-in units (shelf unit, baking tray, shelf support rails etc.) after each use and dry well. Soak briefly to make them easier to clean.

Fat Filter



1. Clean the fat filter in hot water and washing up liquid or in the dishwasher.
2. Badly burned on soiling can be removed by boiling the filter in a little water to which 2-3 tablespoonsful of dishwasher cleaner has been added.

Shelf Support Rails

The shelf support rails on the left and right hand sides of the oven can be removed for cleaning the side walls.

Removing the shelf support rails


First pull the front of the rail away from the oven wall (1) and then unhitch at the back (2).

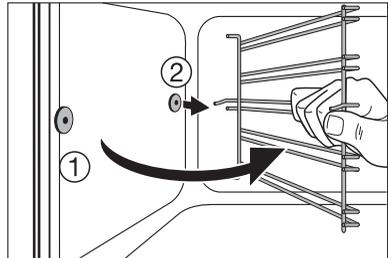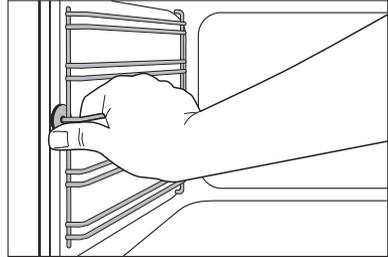


Fitting the shelf support rails



Important! The rounded ends of the guide rails must be pointing forwards!

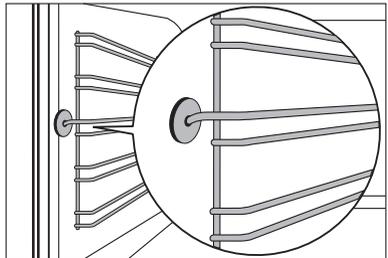

To re-insert, first hook the rail into place at the back (1) and then insert the front and press into place (2).

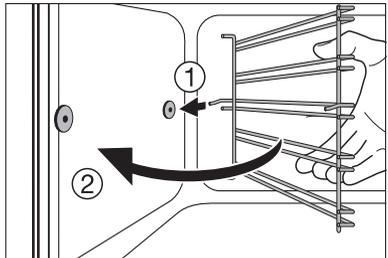

Oven Lighting



Warning: There is a danger of electric shock! Prior to changing the oven light bulb:


- Switch off the oven!
- Remove the fuses in the fuse box or switch off the circuit breaker.



Place a cloth on the oven floor to protect the oven light and glass cover.

Replacing the oven light bulb/ cleaning the glass cover

1. Remove the glass cover by turning it anti-clockwise and then clean it.
2. If necessary:
**Replace bulb with a 40 watt,
230 V, 300 °C heat-resistant
oven light bulb.**
3. Refit the glass cover.

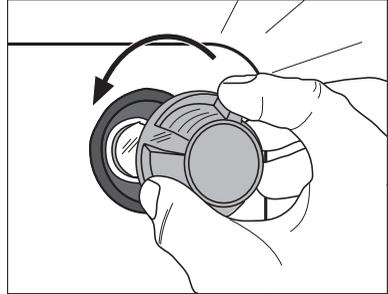

Oven Ceiling

The upper heating element can be folded down to make it easier to clean the oven ceiling.

Folding down the heating element




Warning: Only fold down the heating element when the oven is switched off and there is no risk of being burnt!

1. Remove the side shelf support rails.
2. Grip the heating element at the front and pull it forwards and out over the support lug on the inner wall of the oven.
3. The heating element will now fold down.



Caution: Do not use force to press the heating element down! The heating element might break.

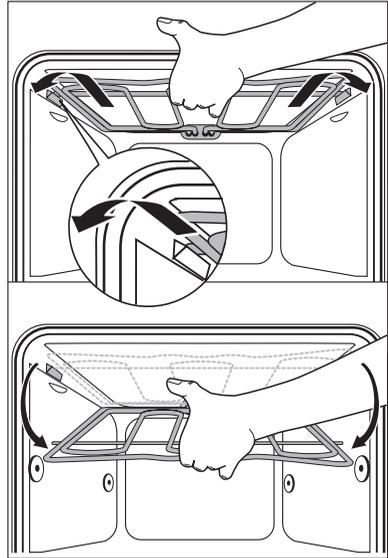


Cleaning the oven ceiling

Repositioning the heating element

1. Move the heating element back up towards the oven ceiling.
2. Pull the heating element forwards against the spring pressure and guide it over the oven support lug.
3. Settle it onto the support.
4. Insert shelf support rail.



Important: The heating element must be positioned correctly and securely on both sides above the support lug on the inner wall of the oven.

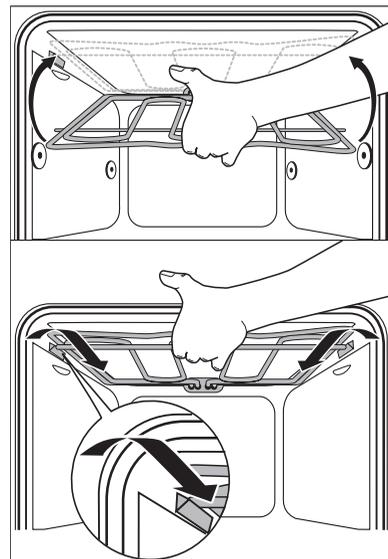


Oven Door

The door of your appliance may be removed for cleaning.


Removing the oven door

1. Open the oven door completely.
2. **Completely** fold back the **clamping levers** on both door hinges.
3. Grip the oven door with both hands and close it about 3/4 **going past the point of resistance**.
4. Pull the door away from the oven (**Caution:** the door is heavy!)
5. Place the door, outer surface downwards, on a soft, flat surface, (for example on a blanket) to avoid scratches.

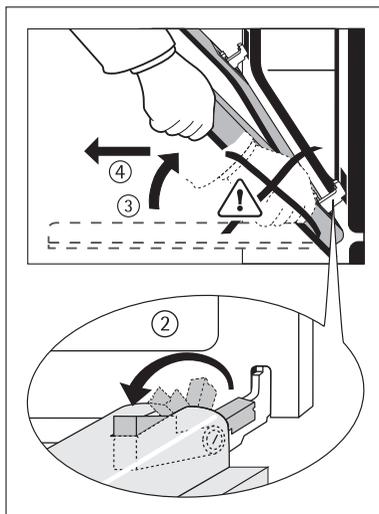

Hanging the oven door

1. From the side of the door on which the handle is positioned, take hold of the sides of the door with both hands.
2. Hold the door at an angle of approx. 60°.
3. Insert the door hinges as far as possible into the two slots on the right and left at the bottom of the oven **at the same time**.
4. Lift the door up until resistance is met and then open it fully.
5. Fold the clamping levers on both door hinges back into their original position.
6. Close the oven door

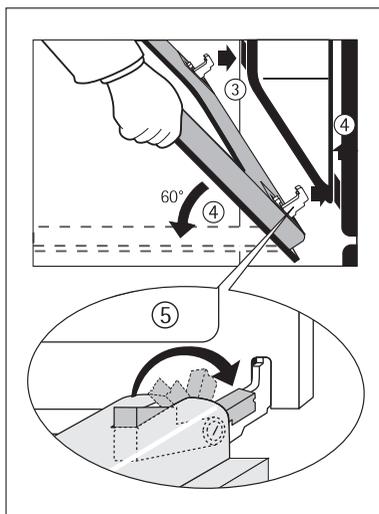

Oven door glass

The oven door has two glass plates, set next to each other. The inner plate can be removed for cleaning.




Caution: the following steps must be performed only with the oven door removed! If the glass is removed while the door is attached, the lighter weight may cause it to spring up and cause injury.



Important! Rough handling of the glass, especially at the edges of the front plate, may cause it to break.

Removing the glass from the door


1. Detach the door and, with the handle downwards, lower it onto a soft, even surface.
2. Grasp the top glass plate underneath, and push it towards the door handle against the pressure spring, until it comes free (①).
3. Hold the plate **gently** underneath, and slide it out (②).

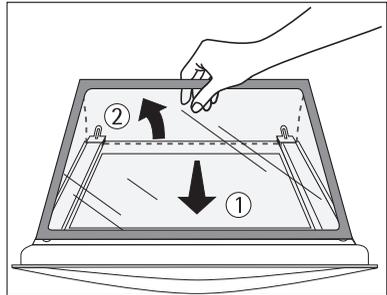

Cleaning the glass

Attaching the glass to the door

1. Insert the plate obliquely into the retaining frame at the handle (①).
2. Lower the plate. Place the glass against the pressurespring at the handle, and in front of the retaining frame at the bottom of the door, then push it **into the frame** (②). The glass plate must be firmly attached!

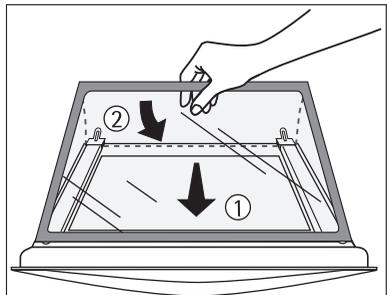

Re-attach the door to the oven.

Pan drawer

The pan drawer underneath the oven can be removed for easier cleaning.


Removing / Replacing the pan drawer

1. Pull the pan drawer out of the cooker as far as possible.
2. Lift the pan drawer slightly, so that it can be lifted upwards at an angle out of the drawer guides.
3. When re-inserting the drawer, make sure that the pan drawer's middle guide engages into the middle guide rails.
4. Lower the pan drawer to the horizontal and push it in.



Warning: When the oven is in use, heat can build up in the pan drawer. For this reason, do not keep flammable things in there such as e. g. cleaning materials, plastic bags, oven gloves, paper, etc.

On no account store oven cleaning sprays there!

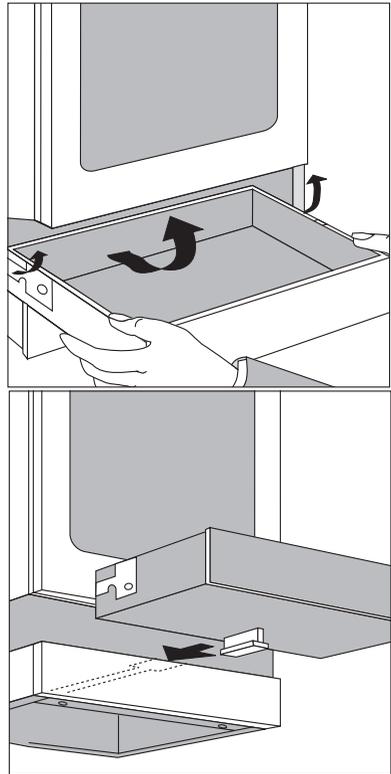

What to do if ...

Fault	Possible cause	Remedy
The cooking zones are not functioning.	The relevant cooking zone is not switched on.	Switch on the cooking zone.
	The fuse in the domestic wiring system (fuse box) has been tripped.	Check the fuse.
The oven will not heat.	The oven has not been switched on.	Switch the oven on.
	The correct time has not been set.	Set the correct time.
	The required settings have not been made.	Check the settings.
	The fuse in the domestic wiring system (fuse box) has been tripped.	Check the fuse. If the fuses are tripped repeatedly, please call a qualified electrician.
The oven light will not come on.	The bulb has blown.	Replace the bulb.

If you cannot remedy the fault using the measures described above, please contact your local dealer or our Customer Service.



Caution: repairs to the appliance should only be carried out by specialised repair technicians. Inappropriate repairs may result in serious injury to the user.

In the event of damage caused by inappropriate repairs, the guarantee may not cover the work carried out by Customer Service technicians or by your dealer.



Advice on cookers with metal fronts:

Because of the cold surface at the front of the cooker, opening the oven door during (or just after) baking or roasting may cause the glass to steam up.

Instruction on setting up



Important! The new appliance may only be installed and connected by **qualified personnel**.

Please observe this instruction, otherwise the warranty will not cover any damage that may occur.

Setting up

- In the units or furniture surrounding the appliance, veneers or plastic coatings must have been made up using heat-resistant bonding agents (100°C). If plastic coatings or cements are not sufficiently heat-resistant, the coating may be deformed or loosened.
- The appliance may be installed up against tall units or walls on one side only.
- The distance between the cooking surface and the cooker hood must as a minimum be as great as that indicated in the installation instructions for the cooker hood.
- If the appliance is being placed on a base, measures must be taken to prevent the appliance from sliding off the base.


Making the appliance level

Underneath the appliance there are 4 adjustable feet, which can be used to even out small unlevelnesses in the floor.

1. Remove the pan drawer.
2. Turn the adjustable feet to make them higher or lower as required, until the cooker is standing level.
3. Re-insert the pan drawer.



The adjustable feet are easier to turn, if the cooker is tilted slightly to take the weight off the foot.

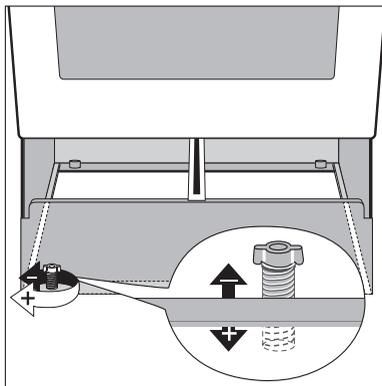



Safety information for the installer

- The set-up of the electrical installation is arranged so that the appliance can be isolated from the mains with a minimum 3 mm all-pole contact separation.
Suitable separation devices include e. g. cut-outs, fuses (screw fuses are to be taken out of the holder), RCD's and contactors.
- Avoid installing the appliance next to doors and under windows. Otherwise hot cookware may be knocked off the rings when doors and windows are opened.
- The appliance must be connected to the electricity according to the connection schematic on the outside of the terminal cover.
- The cable which connects the appliance to the mains must correspond to insulation standard H05VV-F (=227 IEC 53) as a minimum.


Service

In the event of technical faults, please first check whether you can remedy the problem yourself with the help of the operating instructions (section "What to do if...").

If you were not able to remedy the problem yourself, please contact the Customer Care Department or one of our service partners.

In order to be able to assist you quickly, we require the following information:

- Model description
- Product number (PNC)
- Serial number (S No.)
(for numbers see rating plate)
- Type of fault
- Any error messages displayed by the appliance

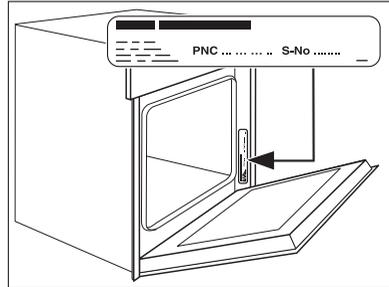

So that you have the necessary reference numbers from your appliance at hand, we recommend that you write them in here:

Model description:

PNC:

S No:

 **From the Electrolux Group. The world's No. 1 choice.**

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

AEG Hausgeräte GmbH
Postfach 1036
D-90327 Nürnberg

<http://www.aeg.hausgeraete.de>

© Copyright by AEG

822 926 294-A-050405-02

Subject to change without notice