Rosemount 3300 Series

Guided Wave Radar Level and Interface Transmitters





EMERSON. Process Management

www.rosemount.com

Rosemount 3300 Series

Guided Wave Radar Level and Interface Transmitters

NOTICE

Read this manual before working with the product. For personal and system safety, and for optimum product performance, make sure you thoroughly understand the contents before installing, using, or maintaining this product.

Within the United States, Rosemount Inc. has two toll-free assistance numbers.

Customer Central: 1-800-999-9307(7:00 a.m. to 7:00 p.m. CST) Technical support, quoting, and order-related questions.

North American Response Center:

Equipment service needs.

1-800-654-7768 (24 hours a day – Includes Canada)

For equipment service or support needs outside the United States, contact your local Rosemount representative.

The products described in this document are NOT designed for nuclear-qualified applications.

Using non-nuclear qualified products in applications that require nuclear-qualified hardware or products may cause inaccurate readings.

For information on Rosemount nuclear-qualified products, contact your local Rosemount Sales Representative.

This product is designed to meet FCC and R&TTE requirements for a non-intentional radiator. It does not require any licensing whatsoever and has no tank restrictions associated with telecommunications issues.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Rosemount and the Rosemount logotype are registered trademarks of Rosemount Inc. HART is a registered trademark of the HART Communication Foundation. Teflon, VITON, and Kalrez are registered trademarks of DuPont Performance Elastomers. Asset Management Solutions is a trademark of Emerson Process Management. Cover Photo: CoverPhoto_08/CoverPhoto_07



ROSEMOUNT[®]

Reference Manual 00809-0100-4811, Rev CA

February 2006

Table of Contents

SECTION 1	Safety Messages
Introduction	Manual Overview
	Service Support
SECTION 2	Theory of Operation
Transmitter Overview	Applications
	Components of the Transmitter
	System Architecture
	Probe Selection Guide
	Dead Zones
	Process Characteristics
	Coating
	Bridging
	Foam
	Vapor
	Measuring Range 2-9
	Interface
	Vessel Characteristics
	Heating Coils, Agitators 2-11
	Tank Shape
SECTION 3	Safety messages
Installation	Installation Procedure
	Before You Install
	Alarm and Write Protection Switches
	Mounting Considerations
	Process Connection
	Installation of Single Lead Probes in Non-metallic Tanks
	Mounting in Still pipes/by-pass pipes
	Free Space
	Recommended Mounting Position
	Insulated Tanks
	Mechanical Installation
	Shortening the Probe
	Anchoring
	Mounting a Centering Disc for Pipe Installations
	Cable/conduit entries
	Grounding
	Cable Selection
	Hazardous Areas
	Power Requirements
	Maximum Loop Resistance
	Connecting the Transmitter





	Non-Intrinsically Safe Output Intrinsically Safe Output Optional Devices Tri-Loop Using More than one transmitter on the bus 751 Field Signal Indicator	3-25 3-26 3-26 3-27
SECTION 4 Start-Up	Safety messages . Configuration Parameters . Basic Configuration . Volume Configuration . Configuration using a 375 Field Communicator. Basic Configuration . Transmitter Variables . Measurement Units . Reference Gauge Height . Probe Length . Probe Type . Product Dielectric . Vapor Dielectric . Waasurement Mode . Probe Angle . Maximum Upper Product Thickness. Damping . Display Panel . 4 and 20 mA Points . Volume Configuration . Transmitter Variables . Volume Configuration . Trank Type . Tank Dimensions . Strapping Table . Configuration using The Radar Configuration Tool . Installing the RCT software . Specifying the COM Port . Help In RCT . Using the Setup Function . Setup - Info . Setup - Info . Setup - Info . Setup - Info . Setup - Tank Config . Setup - Volume . Setup - LCD . Special Functions .	$\begin{array}{c} . \ 4-2 \\ . \ 4-2 \\ . \ 4-5 \\ . \ 4-7 \\ . \ 4-9 \\ . \ 4-9 \\ . \ 4-9 \\ . \ 4-9 \\ . \ 4-9 \\ 4-10 \\ 4-10 \\ 4-10 \\ 4-11 \\ 4-11 \\ 4-11 \\ 4-11 \\ 4-11 \\ 4-11 \\ 4-11 \\ 4-11 \\ 4-13 \\ 4-13 \\ 4-13 \\ 4-13 \\ 4-13 \\ 4-13 \\ 4-13 \\ 4-14 \\ 4-15 \\ 4-16 \\ 4-17 \\ 4-18 \\ 4-19 \\ 4-20 \\ 4-22 \\ 4-23 \\ 4-24 \end{array}$
SECTION 5 Operating the Display Panel	TriLoop Display Functionality Error Messages Alarm and Write Protection	. 5-1 . 5-2

Reference Manual

00809-0100-4811, Rev CA February 2006

SECTION 6 Service and Troubleshooting	Safety messages6-1Advanced Configuration6-2User defined Upper Reference Point6-2Plotting the Measurement Signal6-3Interface Measurements for Semi-Transparent Bottom Products6-5High Level Rates6-7Interface Measurements with Fully Immersed Probes6-8Service6-9Analog Output Calibration6-9Level and Distance Calibration6-10Disturbances at the Top of the Tank6-11Amplitude Threshold Settings6-13Logging Measurement Data6-16Saving the Transmitter Configuration6-17Removing the Probe6-20Diagnostic Messages6-21Troubleshooting6-21Errors6-22Warnings6-23
APPENDIX A Reference Data	Specifications.A-1Process Temperature and Pressure Rating.A-4Ambient Temperature.A-6Dimensional drawings.A-7Ordering InformationA-12Spare PartsA-18
APPENDIX B Product Certifications	Safety MessagesB-1EU ConformityB-2European ATEX Directive InformationB-3Intrinsic SafetyB-3FlameproofB-4Hazardous Locations CertificationsB-5Factory Mutual (FM) ApprovalsB-5Canadian Standards Association (CSA) ApprovalB-6IECEx ApprovalB-7Combination of ApprovalsB-8Approval DrawingsB-11

Reference Manual

00809-0100-4811, Rev CA February 2006

Section 1 Introd

Introduction

Safety Messages page 1-1	
Manual Overviewpage 1-2	
Service Supportpage 1-3	

SAFETY MESSAGES

Procedures and instructions in this manual may require special precautions to ensure the safety of the personnel performing the operations. Information that raises potential safety issues is indicated by a warning symbol (\triangle). Refer to the safety messages listed at the beginning of each section before performing an operation preceded by this symbol.

AWARNING

Failure to follow these installation guidelines could result in death or serious injury.

- Make sure only qualified personnel perform the installation.
- Use the equipment only as specified in this manual. Failure to do so may impair the protection provided by the equipment.

Explosions could result in death or serious injury.

- Verify that the operating environment of the transmitter is consistent with the appropriate hazardous locations certifications.
- Before connecting a HART[®]-based communicator in an explosive atmosphere, make sure the instruments in the loop are installed in accordance with intrinsically safe or non-incendive field wiring practices.

Electrical shock could cause death or serious injury.

• Use extreme caution when making contact with the leads and terminals.

AWARNING

Any substitution of non-recognized parts may jeopardize safety. Repair, e.g. substitution of components etc., may also jeopardize safety and is under no circumstances allowed.





MANUAL OVERVIEW

This manual provides installation, configuration and maintenance information for the Rosemount 3300 Series Radar Transmitter.

Section 2: Transmitter Overview

- Theory of Operation
- Description of the transmitter
- Process and vessel characteristics

Section 3: Installation

- Mounting considerations
- Mechanical installation
- Electrical installation

Section 4: Start-Up

- Configuration instructions
- Configuration using the HART Communicator
- Configuration using the RCT software

Section 5: Operating the Display Panel

- Display functionality
- Error messages

Section 6: Service and Troubleshooting

- Advanced Configuration
- Error and Warning Codes
- Communication Errors

Appendix A: Reference Data

- Specifications
- Ordering Information

Appendix B: Product Certifications

- Examples of labels
- European ATEX Directive information
- FM approvals
- CSA approvals
- Drawings

SERVICE SUPPORT

To expedite the return process outside of the United States, contact the nearest Rosemount representative.

Within the United States, call the Rosemount National Response Center using the 1-800-654-RSMT (7768) toll-free number. This center, available 24 hours a day, will assist you with any needed information or materials.

The center will ask for product model and serial numbers, and will provide a Return Material Authorization (RMA) number. The center will also ask for the process material to which the product was last exposed.

Rosemount National Response Center representatives will explain the additional information and procedures necessary to return goods exposed to hazardous substance can avoid injury if they are informed of and understand the hazard. If the product being returned was exposed to a hazardous substance as defined by OSHA, a copy of the required Material Safety Data Sheet (MSDS) for each hazardous substance identified must be included with the returned goods.

Reference Manual

00809-0100-4811, Rev CA February 2006

Section 2 Transmitter Overview


Theory of Operation	. page 2-1
Applications	. page 2-2
Components of the Transmitter	. page 2-4
System Architecture	. page 2-5
Probe Selection Guide	. page 2-6
Process Characteristics	. page 2-8
Vessel Characteristics	. page 2-11

THEORY OF OPERATION

The Rosemount 3300 Series Radar Transmitter is a smart, two-wire continuous level transmitter that is based on Time Domain Reflectometry (TDR) principles. Low power nano-second-pulses are guided along a probe immersed in the process media. When a pulse reaches the surface of the material it is measuring, part of the energy is reflected back to the transmitter, and the time difference between the generated and reflected pulse is converted into a distance from which the total level or interface level is calculated (see below).

The reflectivity of the product is a key parameter for measurement performance. A high dielectric constant of the media gives better reflection and a longer measuring range. A calm surface gives better reflection than a turbulent surface.

Figure 2-1. Measurement Principle.

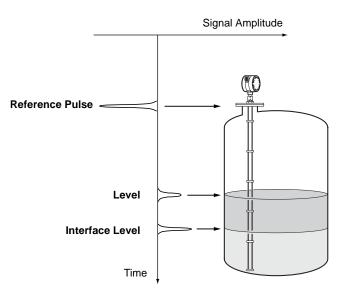

EMERSON. Process Management

TDR_PRINCIPLES



APPLICATIONS

The Rosemount 3300 Series Radar Transmitter program is suited for aggregate (total) level measurements on most liquids, semi-liquids, and liquid/liquid interfaces.

Guided microwave technology offers highest reliability and precision which ensure measurements are virtually unaffected by temperature, pressure, vapor gas mixtures, density, turbulence, bubbling/boiling, low level, varying dielectric media, pH, and viscosity.

Guided wave radar technology in combination with advanced signal processing make the 3300 transmitters suitable for a wide range of applications:


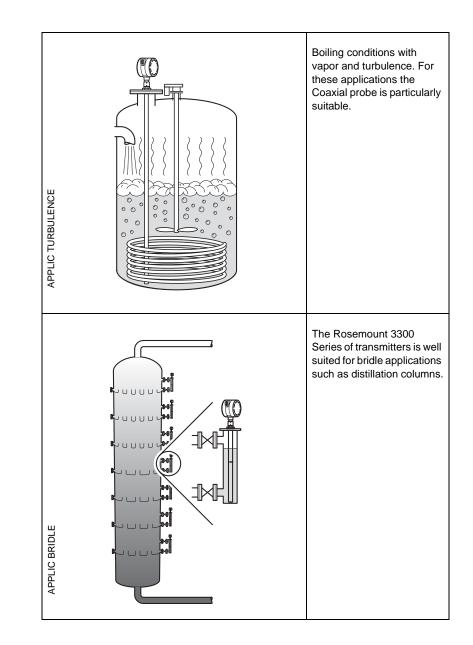


Figure 2-2. Application examples

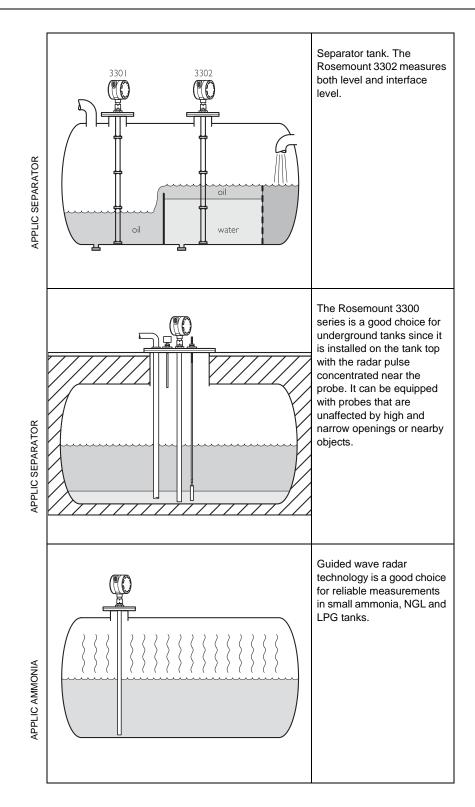


COMPONENTS OF THE TRANSMITTER

The Rosemount 3300 Series Radar Transmitter has an aluminum *transmitter housing* which contains advanced electronics for signal processing.

The *radar electronics* produces an electromagnetic pulse which is guided by the *probe*.

There are different probe types available for various applications: Rigid Twin Lead, Flexible Twin Lead, Rigid Single Lead, Flexible Single Lead, and Coaxial.

Figure 2-3. Transmitter components.

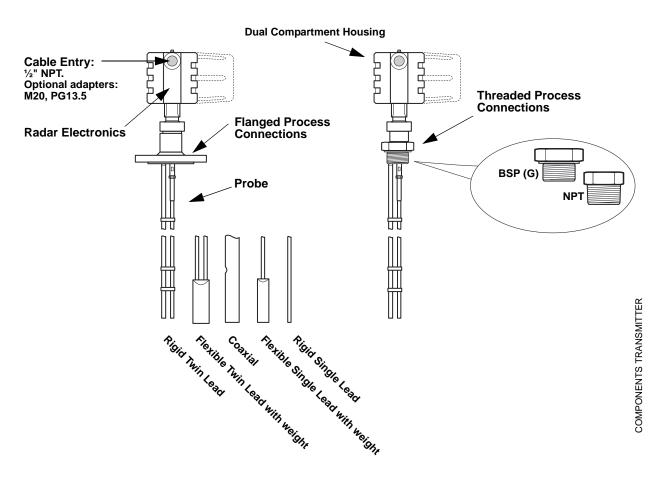


NOTE

Flexible and Rigid probes require different radar electronics and can not be used with the same transmitter head.

SYSTEM The Rosemount 3300 Series Radar Transmitter is loop-powered which means it uses the same two wires for both power supply and output signal. ARCHITECTURE The output is a 4-20 mA analog signal superimposed with a digital HART signal. By using the optional HART Tri-loop, it is possible to convert the HART signal to up to three additional 4-20 mA analog signals. With the HART protocol it is possible to use multidrop configuration. In this case communication is restricted to digital since current is fixed to the 4 mA minimum value. The transmitter can be connected to display Rosemount 751 Field Signal Indicator or it can be equipped with an integral display. The transmitter can easily be configured by using a Field Communicator or a PC with the Radar Configuration Tool software. Rosemount 3300 Series transmitters are also compatible with the AMS Suite software which also can be used for configuration. For HART communication a minimum load resistance of 250 Ohm within the loop is required.

Figure 2-4. System architecture.

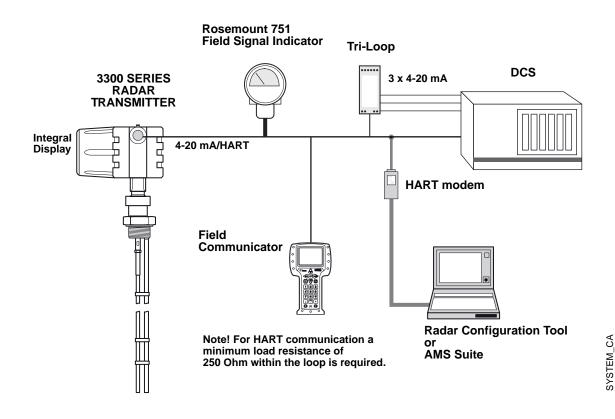

PROBE SELECTION GUIDE

Use the following guidelines to choose appropriate probe for your 3300 transmitter:

Table 2-1. Probe selection guide. G=Good, NR=Not Recommended, AD=Application Dependent (consult factory)

	Coaxial	Rigid Twin Lead	Flexible Twin Lead	Rigid Single Lead	Flexible Single Lead
		Measurem	ents		
Level	G	G	G	G	G
Interface (liquid/liquid)	G ⁽¹⁾	G	G	NR	NR
		Process Medium C	haracteristics		
Changing density	G	G	G	G	G
Changing dielectric ⁽²⁾	G	G	G	G	G
Wide pH variations	G	G	G	G	G
Pressure changes	G	G	G	G	G
Temperature changes	G	G	G	G	G
Condensing vapors	G	G	G	G	G
Bubbling/boiling surfaces	G	G	AD	G	AD
Foam (mechanical avoidance)	AD	NR	NR	NR	NR
Foam (top of foam measurement)	NR	AD	AD	AD	AD
Foam (foam and liquid measurement)	NR	AD	AD	NR	NR
Clean liquids	G	G	G	G	G
Liquid with dielectric<2.5	G	AD	AD	AD ⁽³⁾	NR
Coating liquids	NR	NR	NR	AD	AD
Viscous liquids	NR	AD	AD	AD	G
Crystallizing liquids	NR	NR	NR	AD	AD
Solids/Powders	NR	NR	NR	AD	AD
Fibrous liquids	NR	NR	NR	G	G
		Tank Environment C	Considerations		
Probe is close (<12 in./30 cm) to tank wall / disturbing objects	G	AD	AD	NR	NR
High turbulence	G	G	AD	G	AD
Turbulent conditions causing breaking forces	NR	NR	AD	NR	AD
Long and small mounting nozzles (diameter <6 in./15 cm, height>diameter + 4 in./10 cm)	G	AD	NR	NR	NR
Probe might touch nozzle / disturbing object	G	NR	NR	NR	NR
Liquid or vapor spray might touch probe	G	NR	NR	NR	NR
Disturbing EMC environment in tank	AD	NR	NR	NR	NR

(1) Not in fully immersed applications.

(2) For overall level applications a changing dielectric has no effect on the measurement. For interface measurements a changing dielectric of the top fluid will degrade the accuracy of the interface measurement.

(3) OK when installed in pipe.

February 2006

Dead Zones

The measuring range depends on probe type and properties of the product. The **Upper Dead Zone** is the minimum measurement distance between the upper reference point and the product surface. The Upper Dead Zone varies between 4 - 20 in. (0.1 and 0.5 m) depending on probe type and product.

At the end of the probe the measuring range is reduced by the **Lower Dead Zone**. The **Lower Dead Zone** also varies depending on probe type and product.

Figure 2-5 illustrates how the measuring range is related to the Dead Zones:

Figure 2-5. Dead Zones

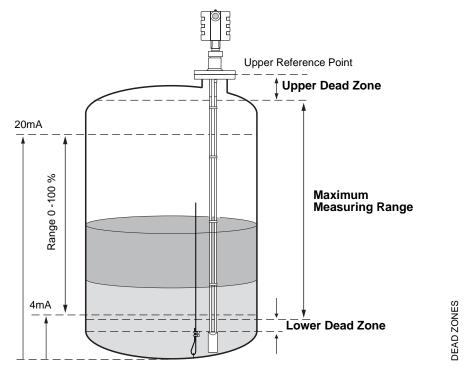


Table 2-2. Dead Zones for different probe types

	Dielectric Constant	Coaxial Probe	Rigid Twin Lead Probe	Flexible Twin Lead Probe	Rigid Single Lead Probe	Flexible Single Lead Probe
Upper	2	4 in. (10 cm)	4 in. (10 cm)	8 in. (20 cm)	4 in. (10 cm)	20 in. (50 cm)
Dead Zone	80	4 in. (10 cm)	4 in. (10 cm)	5.9 in. (15 cm)	4 in. (10 cm)	5.9 in. (15 cm)
Lower	2	2 in. (5 cm)	2.8 in. (7 cm)	5.9 in. (15 cm)	4 in. (10 cm) ⁽¹⁾	4.7 in. (12 cm)
Dead Zone	80	1.2 in. (3 cm)	2 in. (5 cm)	2 in. (5 cm)	2 in. (5 cm)	2 in. (5 cm)

(1) Dead Zone=8 inch (20 cm) when SST centering disc is mounted. The PTFE centering disc does not affect the Dead Zone.

NOTE

The measurement accuracy is reduced in the Dead Zones. It may even be impossible to make any measurements at all in those regions. Therefore the 4-20 mA set points should be configured outside the Dead Zones.

PROCESS CHARACTERISTICS

Coating

Bridging

The Rosemount 3300 Series has a high sensitivity due to its advanced signal processing and high signal to noise ratio, which makes it able to handle various disturbances. However, the following circumstances should be considered before mounting the transmitter.

Coating on the probe should be avoided since the sensitivity of the transmitter may be decreased leading to measurement errors. In viscous or sticky applications, periodic cleaning may be required.

For viscous or sticky applications, it is important to choose a suitable probe:

Table 2-3. Probe type guide for different product viscosity

Coaxial	Twin Lead	Single Lead		
Maximum viscosity				
500 cP	1500 cP	8000 cP ⁽¹⁾⁽²⁾		
	Coating/Build-up			
Coating not recommended	Thin coating allowed, but no bridging	Coating allowed		

⁽¹⁾ Consult factory if agitation/turbulence and high viscous products.

(2) HTHP and HP single probes should be used with precaution in viscous or crystallizing media. Cooling of high temperature vapor in the upper part of the probe may lead to condensation and deposition that blocks the measurement signal.

Maximum measurement error due to coating is 1-10% depending on probe type, dielectric constant, coating thickness and coating height above product surface.

Heavy coating that results in product bridging across the two probes for twin lead versions, or between the pipe and the inner rod for coaxial probes, will cause erroneous level readings and must be prevented. Single lead probes are preferred in this case. If a Twin Lead probe is required, regular cleaning may be necessary.

Foam How well the Rosemount 3300 Series Radar Transmitter measures in foamy applications depends upon the properties of the foam; light and airy or dense and heavy, high or low dielectrics, etc. If the foam is conductive and creamy the transmitter will probably measure the surface of the foam. If the foam is less conductive the microwaves will probably penetrate the foam and measure the liquid surface.

Vapor In some applications, as ammonia, there is heavy vapor above the product surface that will influence the level measurement. The Rosemount 3300 Series Radar Transmitter can be configured to compensate for the influence of vapor.

Measuring Range

The measuring range differs depending on probe type and characteristics of the application. The values given in *Table 2-4* can be used as a guideline for clean liquids.

Table 2-4. Measuring Range

Coaxial	Rigid Twin Lead	Flexible Twin Lead	Rigid Single Lead	Flexible Single Lead	
	I	Maximum Measuring Rang	le		
19 ft 8 in. (6 m)	9 ft 10 in. (3 m)	77 ft 1in. (23.5 m)	9 ft 10 in. (3 m)	77 ft 1in. (23.5 m)	
	Minimum Dielectric Constant at Maximum Measuring Range				
Standard & HP:	1.9	1.6 up to 33 ft (10 m)	2.5	2.5 up to 36.1 ft (11 m)	
1.4		2.0 up to 66 ft (20 m)	(1.7 if installed in a	5.0 up to 66 f (20 m)	
HTHP:		2.4 up to 77 ft 1 in. (23.5 m)	metallic bypass or stilling	7.5 up to 77 ft 1 in. (23.5 m)	
2.0 up to 13 ft (4 m)			well)		
2.5 up to 19 ft 8 in. (6 m)					


The maximum measuring range differs depending on application according to:

- Disturbing objects close to the probe.
- Media with higher dielectric constant (ϵ_r) gives better reflection and allows a longer measuring range.
- A calm surface gives better reflection than a turbulent surface. For a turbulent surface the measuring range might be reduced.
- Surface foam and particles in the tank atmosphere are also circumstances that might affect measuring performance.
- Coating/contamination can reduce the measuring range.
- Disturbing EMC environment in tank.

Rosemount 3302 is the ideal choice for measuring the interface of oil and water, or other liquids with significant dielectric differences. It is also possible to measure interface with a Rosemount 3301 in applications where the probe is fully immersed in the liquid.

Figure 2-6. Interface measurement with a Rosemount 3302 and a Rosemount 3301 (fully immersed probe).

Interface

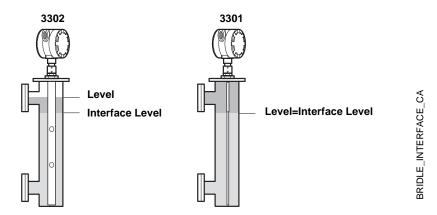

Coaxial, Rigid twin, Flexible twin and Rigid Single lead probes can be used for measuring interfaces. The coaxial probe is the preferred choice for clean liquids and when the bridle is not fully immersed. In applications with a fully immersed probe, the twin lead probes are recommended for nozzle installations, and the rigid single lead probe is best for bridle mounting.

2-9

For measuring the interface level, the transmitter uses the residual wave of the first reflection. Part of the wave, which was not reflected at the upper product surface, continues until it is reflected at the lower product surface. The speed of this wave depends fully on the dielectric constant of the upper product.

If interface is to be measured, the following criteria have to be fulfilled:


- The dielectric constant of the upper product must be known. The Radar Configuration Tools software has a built-in dielectric constant calculator to assist users in determining the dielectric constant of the upper product (see "Dielectrics" on page 4-21).
- The dielectric constant of the upper product must have a lower dielectric constant than the lower product in order to have a distinct reflection.
- The difference between the dielectric constants for the two products must be larger than 10.
- Maximum dielectric constant for the upper product is 10 for the coaxial probe and 5 for twin lead probes.
- The upper product thickness must be larger than 8 inches (0.2 m) for the flexible twin lead probe and 4 inches (0.1 m) for the rigid twin lead and coaxial probes in order to distinguish the echoes of the two liquids.

The maximum allowable upper product thickness/measuring range is primarily determined by the dielectric constants of the two liquids.

Target applications include interfaces between oil/oil-like and water/water-like liquids. For such applications the upper product dielectric constant is low (<3)and the lower product dielectric constant is high (>20), and the maximum measuring range is only limited by the length of the coaxial and rigid twin lead probes.

For the flexible twin lead probe, the reduction of maximum measuring range (65 ft/20 m), can be gained from Figure 2-7 on page 2-10.

However, characteristics varies widely between different applications. For other product combinations, consult factory.

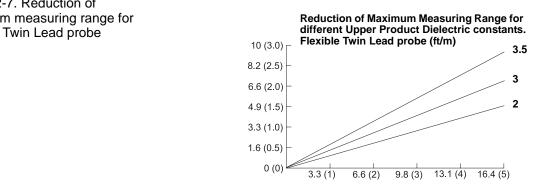

Maximum Upper Product Thickness (ft/m)

Figure 2-7. Reduction of maximum measuring range for Flexible Twin Lead probe

Emulsion Layers

Sometimes there is an emulsion layer (mix of the products) between the two products which, depending on its characteristics, will affect interface measurements.

Please consult factory for guidelines on how to handle emulsion layers.

VESSEL CHARACTERISTICS	
Heating Coils, Agitators	The Rosemount 3300 Series Radar Transmitter is relatively insensitive to objects in the tank since the radar signal is transmitted along a probe.
	Avoid physical contact between probes and agitators as well as applications with strong fluid movement unless the probe is anchored. If the probe can move within 1 ft (30 cm) away from any object, such as an agitator, during operation then probe tie-down is recommended.
	In order to stabilize the probe for side forces, it is possible to hang a weight at the probe end (flexible probes only) or fix/guide the probe to the tank bottom.
Tank Shape	The guided wave radar transmitter is insensitive to the tank shape. Since the radar signal travels along a probe, the shape of the tank bottom has virtually no effect on the measurement performance. The transmitter handles flat or dish-bottom tanks equally well.

Reference Manual

00809-0100-4811, Rev CA February 2006

Section 3 In

Installation

Safety messages	page 3-1
Installation Procedure	page 3-3
Before You Install	page 3-4
Mounting Considerations	page 3-6
Mechanical Installation	page 3-13
Electrical Installation	page 3-21
Optional Devices	page 3-26

SAFETY MESSAGES

Procedures and instructions in this section may require special precautions to ensure the safety of the personnel performing the operations. Information that raises potential safety issues is indicated by a warning symbol (\triangle). Please refer to the following safety messages before performing an operation preceded by this symbol.

Explosions could result in death or serious injury:

Verify that the operating environment of the transmitter is consistent with the appropriate hazardous locations certifications.

Before connecting a HART-based communicator in an explosive atmosphere, make sure the instruments in the loop are installed in accordance with intrinsically safe or non-incendive field wiring practices.

Do not remove the gauge cover in explosive atmospheres when the circuit is alive.

Failure to follow safe installation and servicing guidelines could result in death or serious injury:

Make sure only qualified personnel perform the installation.

Use the equipment only as specified in this manual. Failure to do so may impair the protection provided by the equipment.

Do not perform any service other than those contained in this manual unless you are qualified.

Process leaks could result in death or serious injury.

Make sure that the transmitter is handled carefully. If the Process Seal is damaged, gas might escape from the tank if the transmitter head is removed from the probe.





AWARNING

High voltage that may be present on leads could cause electrical shock:

Avoid contact with leads and terminals.

Make sure the main power to the 3300 transmitter is off and the lines to any other external power source are disconnected or not powered while wiring the gauge.

Probes covered with plastic and/or with plastic discs may generate an ignition-capable level of electrostatic charge under certain extreme conditions. Therefore, when the probe is used in a potentially explosive atmosphere, appropriate measures must be taken to prevent electrostatic discharge.

Review Installation Considerations (see page 3-6) Check switches for 4-20 mA AlarmOutput (see page 3-4) Mount the transmitter (see page 3-13) Wire the transmitter (see page 3-21) Make sure covers and cable/conduit connections are tight. Power Up the transmitter Configure the transmitter (see page 4-1) Verify measurements • Set the Write **Protection Switch** L Ш _ _ _ _

INSTALLATION PROCEDURE

Follow these steps for proper installation:

NOTE!

Disconnect power supply before setting the Write Protection.

BEFORE YOU INSTALL

Alarm and Write Protection Switches

Electronic boards are electrostatically sensitive. Failure to observe proper handling precautions for static-sensitive components can result in damage to the electronic components. Do not remove the electronic boards from the 3300 Radar Transmitter.

NOTE

To ensure long life for your radar transmitter, and to comply with hazardous location installation requirements, tighten covers on both sides of the electronics housing.

Table 3-1. 3300 Radar Transmitter Switch Settings

Switch Bank	Description	Default Setting	Position Settings
Alarm	4–20 mA Alarm Output	High	High, Low
Write Protect	Security Write Protection	Disabled (OFF)	ON = Enabled, OFF = Disabled

Table 3-2. Analog Output: Standard Alarm Values vs. Saturation Values

Level	4–20 mA Saturation Values	4–20 mA Alarm Value
Low	3.9 mA	3.75 mA
High	20.8 mA	21.75 mA

Table 3-3. Analog Output: NAMUR-Compliant Alarm Values vs. Saturation Values

Level	4–20 mA Saturation Values	4–20 mA Alarm Value
Low	3.8 mA	3.6 mA
High	20.5 mA	22.5 mA


The transmitter monitors its own operation. This automatic diagnostic routine is a timed series of checks repeated continuously. If the diagnostic routine detects a failure in the transmitter, the 4–20 mA output is driven upscale (high) or downscale (low) depending on the position of the Alarm switch.

Security write protection prevents unauthorized access to configuration data through the Rosemount Configuration Tool (RCT) software, a Field Communicator or AMS Suite software.

Reference Manual

00809-0100-4811, Rev CA February 2006

Figure 3-1. Switches for Alarm and Write Protection

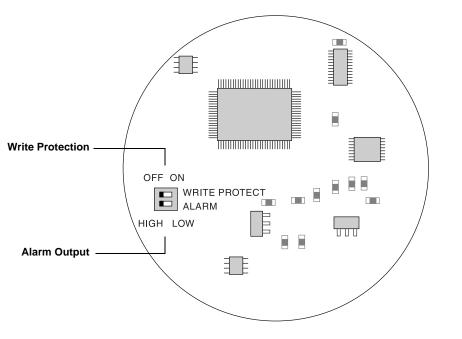

To set the Alarm and Write Protect switches do the following:

- 1. Remove the cover on the circuit side (see main label).
- 2. To set the 4-20 mA alarm output to Low, move the Alarm switch to the LOW position. HIGH is the factory default setting (see Figure 3-1).
- 3. To enable the security write protection feature, move the Write Protect switch to the ON position. The OFF position is the factory default setting (see Figure 3-1).
- 4. Replace and tighten the cover.

SWITCH WRP ALARM

MOUNTING CONSIDERATIONS


Process Connection

Before you install the Rosemount 3300 Series Radar Transmitter, be sure to consider specific mounting requirements, vessel characteristics and process characteristics.

The 3300 Series has a threaded connection for easy mounting on the tank roof. It can also be mounted on a nozzle by using different flanges.


Threaded Connection

Figure 3-2. Mounting on tank roof using threaded connection

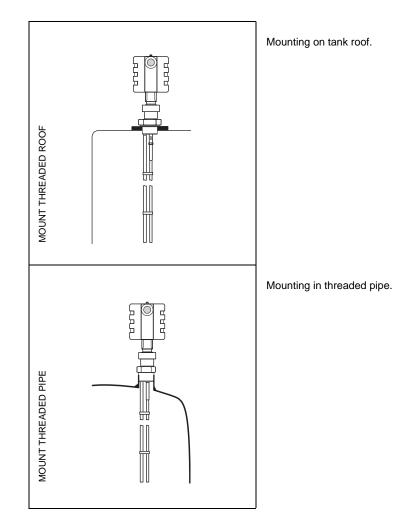

Flange Connection on Nozzles

Figure 3-3. Mounting in nozzles

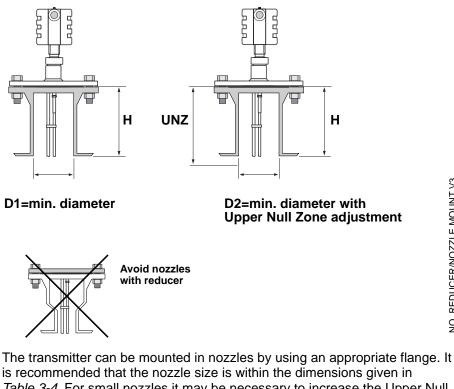

is recommended that the nozzle size is within the dimensions given in Table 3-4. For small nozzles it may be necessary to increase the Upper Null Zone (UNZ) in order to reduce the measuring range in the upper part of the tank. By setting the UNZ equal to the nozzle height, the impact on the measurement due to interfering echoes from the nozzle will be reduced to a minimum. See also section "Disturbances at the Top of the Tank" on page 6-11. Amplitude Threshold adjustments may also be needed in this case.

NOTE

Except for the Coaxial Probe the probe must not be in contact with the nozzle.

Tahla 3-4	Minimum nozzle	diameter D1/D2	2 and maximum	nozzle height H	(inch/mm)
					(111011/11111).

	Rigid Twin Lead	Flexible Twin Lead	Coaxial	Single Lead	Flexible Single
D1 ⁽¹⁾	4/100	4/100	> Probe diameter	6/150	6/150
D2 ⁽²⁾	2/50	2/50	> Probe diameter	2/50 ⁽³⁾ 1.5/38 ⁽⁴⁾	2/50
H ⁽⁵⁾	4/100 + D ⁽⁶⁾	4/100 + D ⁽⁶⁾	-	4/100 + D ⁽⁶⁾	4/100 + D ^{(6) (7)}

Upper Null Zone=0. (1)

(2) Upper Null Zone>0.

(3) Process connection 1.5 inch.

(4) Process connection 1 inch.

(5) Recommended maximum nozzle height. For coaxial probes there is no limitation on nozzle height.


(6) Nozzle diameter.

(7) For tall nozzles the Long Stud version is recommended (option code LS).

Installation of Single Lead Probes in Non-metallic Tanks

For optimal single lead probe performance in non-metallic tanks the probe must be mounted with a metal flange, or screwed in to a metal sheet (d>8 in./200 mm) if the threaded version is used.

Figure 3-4. Mounting in non-metallic tanks.

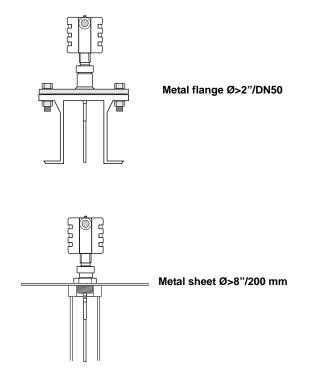


Avoid disturbing EMC environment near the tank. Installation in metallic tank is recommended.

Mounting in Still pipes/by-pass pipes

In order to prevent the probe from contacting the bridle wall when replacing displacers or installing in pipes, **centering discs** are available for the Rigid Single, Flexible Single and Flexible Twin Lead probes. The disc is attached to the end of the probe and thus keeps the probe centered in the bridle. The discs are available in stainless steel and teflon (PTFE). See also *"Mounting a Centering Disc for Pipe Installations" on page 3-20.*

Figure 3-5. Mounting in Still Pipes.

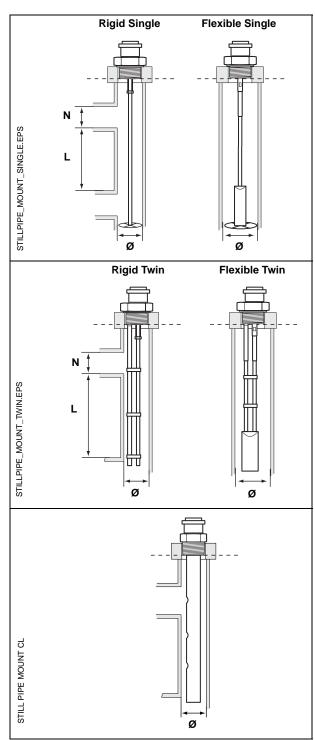

Note! It is not recommended that flexible probes are installed in by-pass pipes.

Rigid Single Lead.

Pipe diameter $\emptyset \ge 2$ inch (50 mm). Inlet pipe diameter N< \emptyset . L \ge 12 inch (300 mm).

Flexible Single Lead.

Pipe diameter $\emptyset \ge 4$ inch (100 mm). **Note!** For smaller pipes please consult factory.

Make sure that the probe is at the center of the Still pipe by, for example, using a centering disc.

Note! It is not recommended that flexible probes are installed in by-pass pipes.

Rigid Twin Lead.

Pipe diameter $\emptyset \ge 2$ inch (50 mm). Inlet pipe diameter N< \emptyset . L \ge 12 inch (300 mm). The center rod must be placed more than 0.6 inch/15 mm away from the pipe wall.

Flexible Twin Lead.

Pipe diameter $\emptyset \ge 4$ inch (100 mm). **Note!** For smaller pipes please consult factory.

The center rod must be placed more than 0.6 inch/15 mm away from the pipe wall. The probe may under no circumstances get into contact with the pipe wall. It is recommended that a centering disc is used.

Coaxial Lead.

Pipe diameter Ø≥1.5 inch (38 mm).

Rosemount 3300 Series

Free Space

For easy access to the transmitter make sure that it is mounted with sufficient service space. For maximum measurement performance the transmitter should not be mounted too close to the tank wall or other objects in the tank.

If the probe is mounted close to a wall, nozzle or other tank obstruction noise might appear in the level signal. Therefore the following minimum clearance, according to the table below, must be maintained:

Figure 3-6. Free Space Requirement

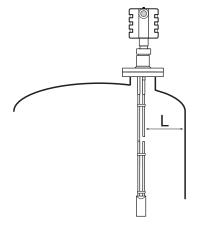


Table 3-5. Recommended minimum free space L to tank wall or other objects in the tank.

Coaxial	Rigid Twin	Flexible Twin
0 in. (0 mm)	4 in. (100 mm)	4 in. (100 mm)

Table 3-6. Recommended minimum free space ${\bf L}$ to tank wall or other objects in the tank for Single Lead probes.


Rigid Single/Flexible Single		
4 in. (100 mm)	Smooth metal wall.	
12 in. (300 mm)	Disturbing objects such as pipes and beams, concrete or plastic tank walls, rugged metal tank walls.	

Recommended Mounting Position

When finding an appropriate mounting position for the transmitter the conditions of the tank must be carefully considered. The transmitter should be mounted so that the influence of disturbing objects is reduced to a minimum.

In case of turbulence the probe may need to be anchored to the bottom. See *"Mechanical Installation" on page 3-13* for more information.

Figure 3-7. Mounting Position

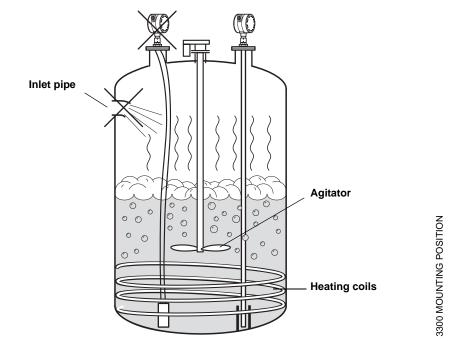

The following guidelines should be considered when mounting the transmitter:


- Do not mount close to inlet pipes.
- Do not mount close to agitators. If the probe can move to within 30 cm away from an agitator a probe tie-down is recommended.
- If the probe tends to sway due to turbulent conditions in the tank, the probe should be anchored to the tank bottom.
- Avoid mounting close to heating coils.
- Make sure that the nozzle does not extend into the tank.
- Make sure that the probe does not come into contact with the nozzle or other objects in the tank.
- Position the probe such that it is subject to a minimum of lateral force.


NOTE!

Violent fluid movements causing high sideway forces may break rigid probes.

Insulated Tanks

For insulated tanks the permitted ambient temperature is limited above a certain process temperature. Limitations depend on the thickness of the tank insulation, see "Ambient Temperature" on page A-6 for more information.

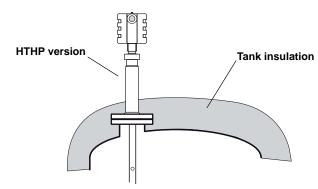

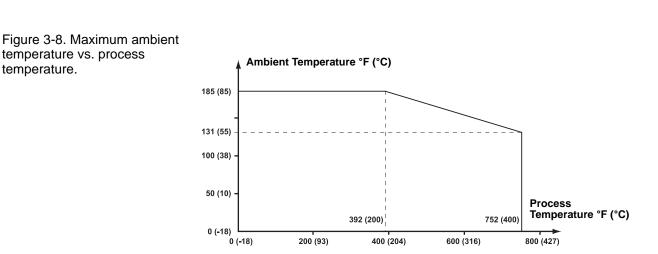

AMBIENT_PROC_TEMP.EPS

INSULATEDTANK.EPS

MECHANICAL INSTALLATION

Mount the transmitter with flange on a nozzle on top of the tank. The transmitter can also be mounted on a threaded connection. Make sure only qualified personnel perform the installation.

NOTE

If you need to remove the transmitter head from the probe, make sure that the Process Seal is carefully protected from dust and water. See *"Service"* on page 6-9 for further information.

Figure 3-9. Tank connection with flange.


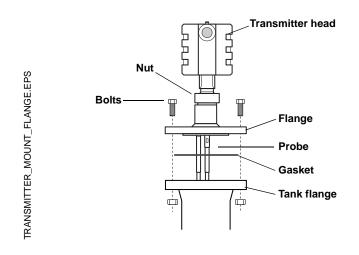


Figure 3-10. Tank connection with loose flange ("plate design").

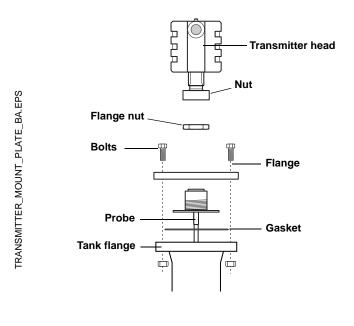

- 1. Place a gasket on top of the tank flange.
- 2. Lower the transmitter and probe with flange into the tank.
- 3. Tighten the bolts.
- 4. Loosen the nut that connects the transmitter housing to the probe slightly.
- 5. Rotate the transmitter housing so the cable entries/display face the desired direction.
- 6. Tighten the nut.


NOTE!

PTFE covered probes must be handled carefully to prevent damage to the coating.

The transmitter is delivered with head, flange and probe assembled into one unit. If, for som reason, these parts have been disassembled mount the transmitter as described below:

- 1. Place a gasket on top of the tank flange.
- 2. Mount the flange on the probe and tighten the flange nut.
- 3. Mount the transmitter head.
- 4. Lower the transmitter and probe with flange into the tank.
- 5. Tighten the bolts.
- 6. Loosen the nut that connects the transmitter housing to the probe slightly.
- 7. Rotate the transmitter housing so the cable entries/display face the desired direction.
- 8. Tighten the nut.

Figure 3-11. Threaded tank connection.

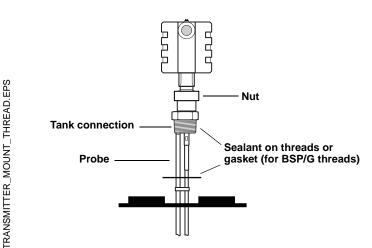



- 1. For tank connections with BSP/G threads, place a gasket on top of the tank flange, or use a sealant on the threads of the tank connection.
- 2. Lower the transmitter and probe into the tank.
- 3. Screw the adapter into the process connection.
- 4. Loosen the nut that connects the transmitter housing to the probe slightly.
- 5. Rotate the transmitter housing so the cable entries/display face the desired direction.
- 6. Tighten the nut.

NOTE!

For adapters with NPT threads, pressure-tight joints require a sealant.

 Shortening the Probe



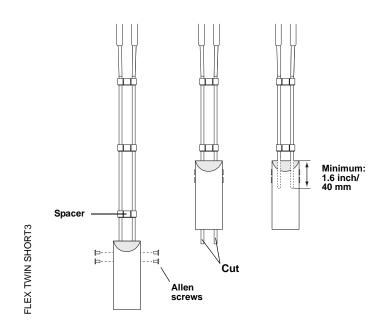

- Mark off the required probe length. Add at least 1.6 inch/40 mm to the required probe length to be inserted into the weight.
- 2. Loosen the Allen screws.
- 3. Slide the weight upwards as much as needed in order to cut the probe.
- 4. Cut the probe. If necessary, remove a spacer to make room for the weight.
- 5. Slide the weight down to the required cable length.
- 6. Tighten the screws.
- 7. Update the transmitter configuration to the new probe length, see "Probe Length" on page 4-9.

If the weight was removed from the cables when cutting, make sure that at least 1.6 inch/40 mm of the cable is inserted when the weight is replaced.

Rigid Single Lead

- 1. Cut the Single Lead probe to the desired length.
- 2. Update the transmitter configuration to the new probe length, see "Probe Length" on page 4-9.


NOTE!


The PTFE covered probes must not be cut in field.

Rigid Twin Lead

The spacers are put closer together at the probe end. The maximum amount that can be cut away is related to the ordering length L.


To cut a Rigid Twin Lead probe do the following:

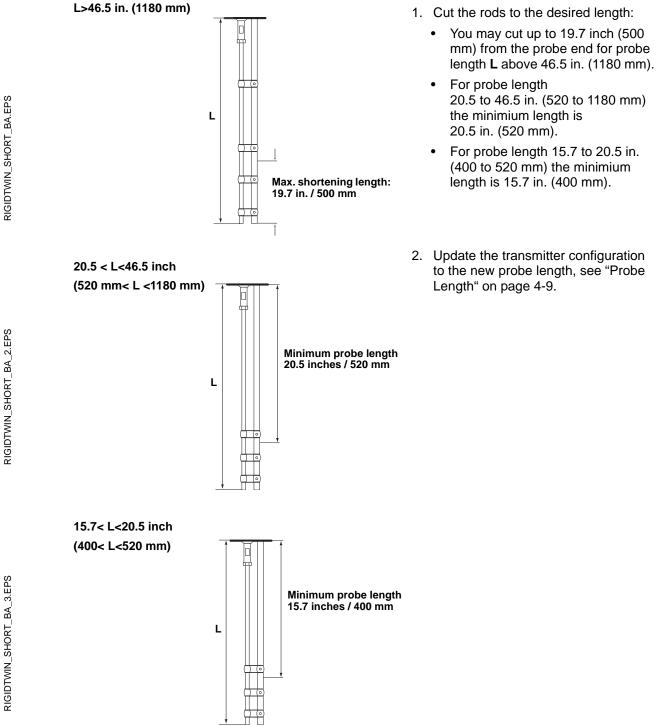


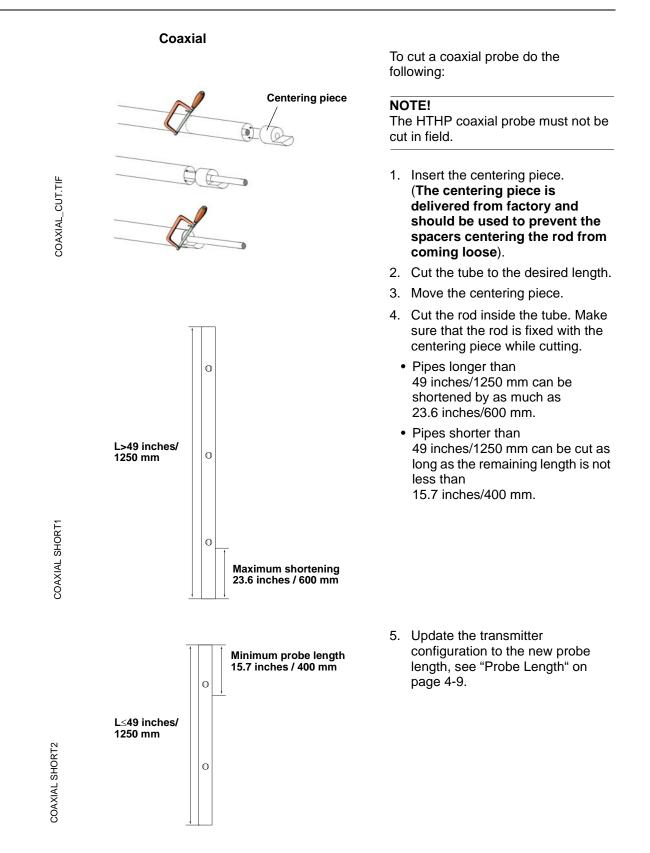


Anchoring

In turbulent tanks it may be necessary to fix the probe. Depending on the probe type different methods can be used to guide the probe to the tank bottom. This may be needed in order to prevent the probe from hitting the tank wall or other objects in the tank, as well as preventing a probe from breaking.

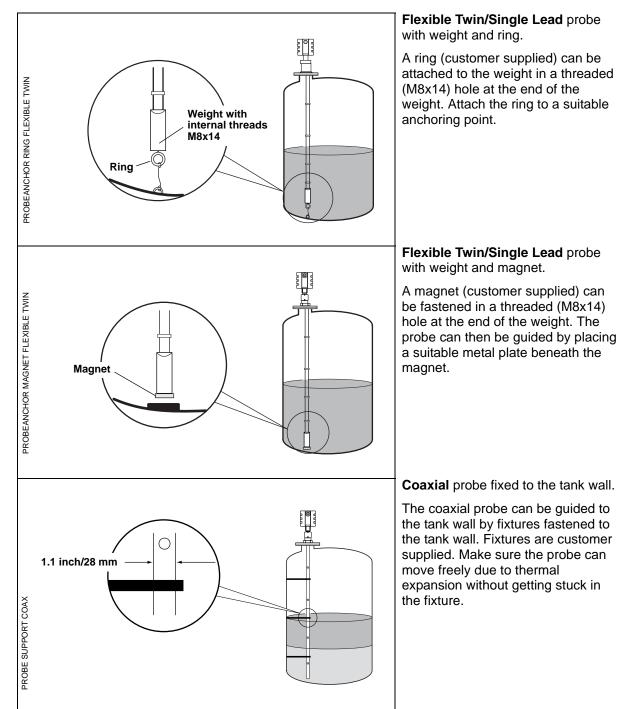

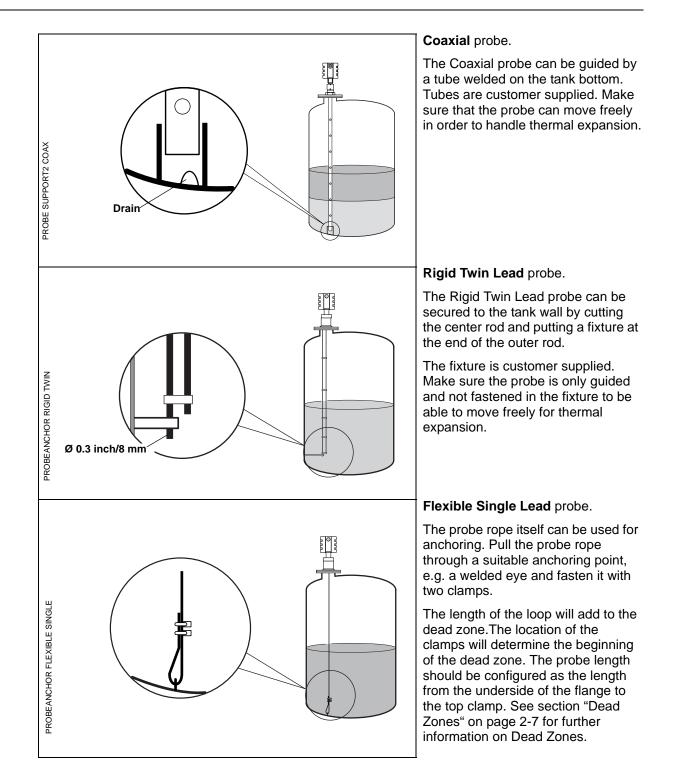

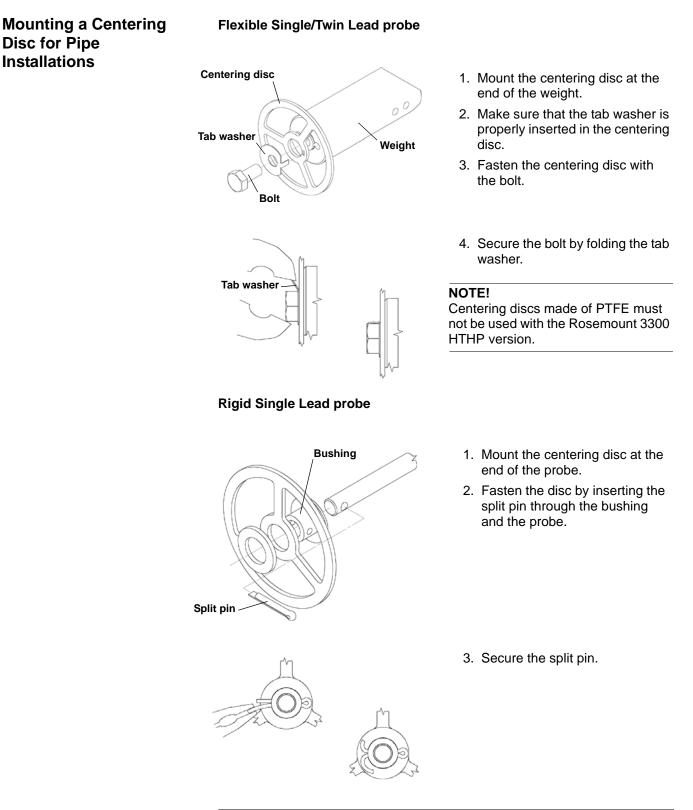

NOTE! Centering discs may not be used with PTFE covered probes.

ELECTRICAL INSTALLATION

Cable/conduit entries	 The electronics housing has two entries for ½ - 14 NPT. Optional M20×1.5 and PG 13.5 adapters are also available. The connections are made in accordance with local or plant electrical codes. Make sure that unused ports are properly sealed to prevent moisture or other contamination from entering the terminal block compartment of the electronics housing. NOTE! Use the enclosed metal plug to seal the unused port. The housing should always be grounded in accordance with national and local electrical codes. Failure to do so may impair the protection provided by the equipment. The most effective grounding method is direct connection to earth ground with minimal impedance. There are two grounding screw connections provided. One is inside the Field Terminal side of the housing and the other is located on top of the housing. The internal ground screw is identified by a ground symbol: ().
	NOTE! Grounding the transmitter via threaded conduit connection may not provide sufficient ground. NOTE! In the Explosion-proof/Flame-proof version the electronics is grounded via the transmitter housing. After installation and commissioning make sure that no ground currents exist due to high ground potential differences in the installation.
Cable Selection	Use shielded twisted pair wiring for the Rosemount 3300 Series in order to comply with EMC regulations. The cables must be suitable for the supply voltage and approved for use in hazardous areas, where applicable. For instance, in the U.S., explosion-proof conduits must be used in the vicinity of the vessel. For the ATEX flame proof approval version of the 3300 Series, suitable conduits with sealing device or flame proof (EEx d) cable glands must be used depending on local requirements. Use 18 AWG to 12 AWG in order to minimize the voltage drop to the transmitter.
Hazardous Areas	When the 3300 transmitter is installed in hazardous area, local regulations and specifications in applicable certificates must be observed.

Power Requirements


Terminals in the transmitter housing provide connections for signal cables.

The 3300 transmitter is loop-powered and operates with power supplies ranging from 11 to 42 VDC. For Intrinsically Safe output the supply voltage must be within 11 to 30 VDC. For Explosion-proof/Flame-proof the supply voltage must be within 16 to 42 VDC.


Maximum Loop Resistance


The maximum current loop resistance can be gained from the following diagrams:

Figure 3-12. Explosion-proof /Flame-proof installations

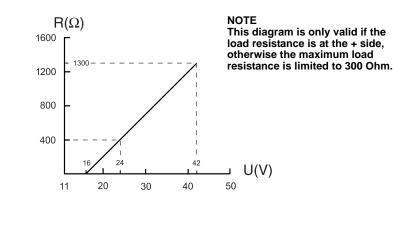



MAX_LOAD_EX

 

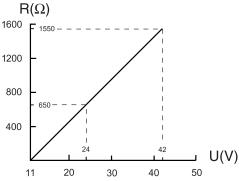

MAX_LOAD_NON_INTIRNSIC

 

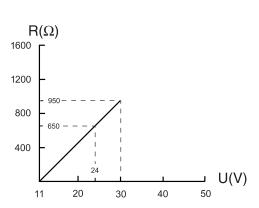


MAX_LOAD_INTIRNSIC

Connecting the Transmitter

The 3300 Series is a two-wire loop powered transmitter accepting power supplies ranging from 11 VDC to 42 VDC. It uses 4-20 mA power superimposed with a HART signal.

To connect the transmitter:

- 1. Make sure that the power supply is disconnected.
- 2. Remove the cover on the transmitter housing terminal side (see label).

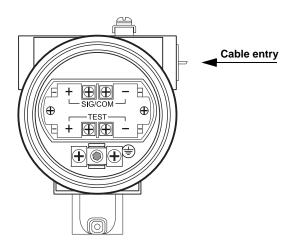

- 3. Pull the cable through the cable gland/conduit.
- 4. Connect wires according to Figure 3-15 for non-intrinsically safe output and according to Figure 3-16 for Intrinsically safe output. Make sure that the transmitter housing is grounded (see "Grounding" on page 3-21).
- 5. Replace the cover, tighten the cable gland and connect the power supply.


Non-Intrinsically Safe Output

For non-intrinsically safe installations, wire the transmitter as shown in Figure 3-15.

NOTE!

Make sure that the power supply is off when connecting the transmitter.

Figure 3-15. Wiring diagram for non-intrinsically safe installations.

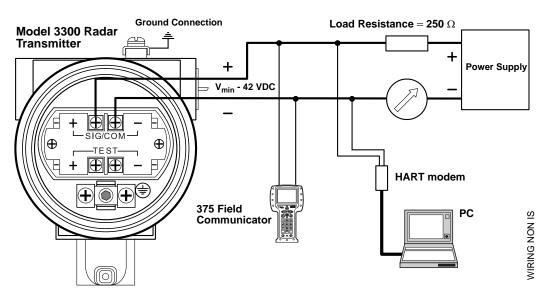

For HART communication a minimum load resistance of 250 Ohm within the loop is required. For maximum load resistance see Figure 3-12 (Explosion/Flame Proof) and Figure 3-13 (Non-hazardous installations).

The power supply voltage ranges from V_{min} VDC to 42 VDC where V_{min} is the minimum voltage given by:

11 V	Non-hazardous locations certification
16 V	Explosion-proof/flame-proof certification

For Explosion-proof/Flame-proof applications the resistance between the negative terminal on the transmitter and the power supply must not exceed 300 Ohm.

NOTE!

EEx d version: If there is a risk for a difference in voltage potential between transmitter ground an power supply ground, a galvanic isolator is required.

Reference Manual 00809-0100-4811, Rev CA February 2006


Intrinsically Safe Output

For intrinsically safe installations wire the transmitter as shown in Figure 3-16.

NOTE!

Make sure that the instruments in the loop are installed in accordance with intrinsically safe field wiring practices and System Control Drawings when applicable.

Figure 3-16. Wiring diagram for intrinsically safe installations

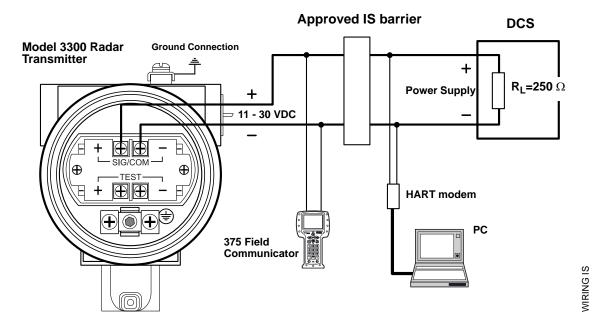

For HART communication a minimum load resistance of 250 Ohm within the loop is required. For maximum load resistance see Figure 3-14.

The power supply voltage ranges from 11 V to 30 V.

IS parameters

Ui=30 V.

li=130 mA.

Pi=1 W.

Ci=0.


Li=0.

OPTIONAL DEVICES

Tri-Loop

The Model 3300 transmitter outputs a HART signal with four process variables. By using the Model 333 HART Tri-Loop up to three additional analog 4-20 mA outputs are provided.

Figure 3-17. Wiring diagram for HART Tri-Loop

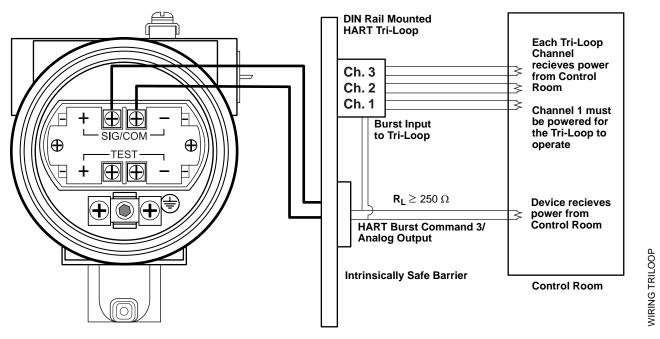


Configure Channels 1, 2, and 3 to reflect the units as well as Upper Range Values and Lower Range Values for your secondary, tertiary and fourth variables (variable assignment is configured in the Model 3300). It is also possible to enable or disable a channel from this menu. See "Special Functions" on page 4-24 for further information on how to install a Tri-Loop.

Using More than one transmitter on the bus

The 3300 transmitter can be run in multidrop mode. In the multidrop mode each transmitter has a unique HART address.

Figure 3-18. Multidrop connection

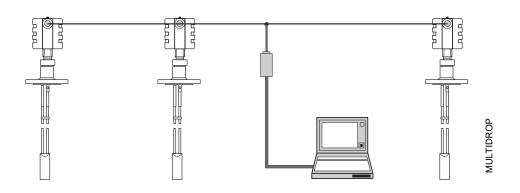


The poll address can be changed by using a 375 Field Communicator or by using the Rosemount Configuration Tools software.

To change the poll address using a 375 Field Communicator choose HART command [1, 4, 5, 2, 1].

To change the poll address using the Rosemount Configuration Tools (RCT) software do the following:

- 1. Choose the View>Device Commands option.
 - or

choose the Device Commands icon from the Project Bar Advanced section.

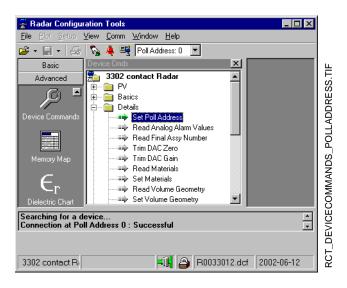

- 2. Open the Details folder.
- 3. Choose the Set Poll Address option.
- 4. Set the desired address.

751 Field Signal Indicator

Figure 3-19. Wiring diagram for 3300 transmitter with 751 Field Signal Indicator


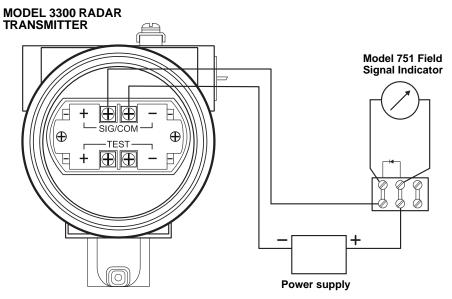


Figure 3-20. Alternative wiring diagram for 3300 transmitter with 751 Field Signal Indicator

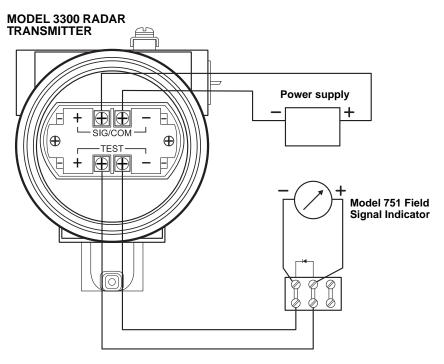

WIRING_751.EPS

WIRING_751_ALTERNATIVE.EPS

Reference Manual

00809-0100-4811, Rev CA February 2006

Section 4 Star

Start-Up

Safety messages
Configuration Parameterspage 4-2
Configuration using a 375 Field Communicator page 4-7
Configuration using The Radar Configuration Tool page 4-14
Special Functionspage 4-24

SAFETY MESSAGES

Procedures and instructions in this section may require special precautions to ensure the safety of the personnel performing the operations. Information that raises potential safety issues is indicated by a warning symbol (\triangle). Refer to the safety messages listed at the beginning of each section before performing an operation preceded by this symbol.

Explosions could result in death or serious injury:

Verify that the operating environment of the gauge is consistent with the appropriate hazardous locations certifications.

Before connecting a HART-based communicator in an explosive atmosphere, make sure the instruments in the loop are installed in accordance with intrinsically safe or non-incendive field wiring practices.

Do not remove the gauge cover in explosive atmospheres when the circuit is alive.

Failure to follow safe installation and servicing guidelines could result in death or serious injury:

Make sure only qualified personnel perform the installation.

Use the equipment only as specified in this manual. Failure to do so may impair the protection provided by the equipment.

Do not perform any service other than those contained in this manual unless you are qualified.





Rosemount 3300 Series

CONFIGURATION PARAMETERS

The Rosemount 3301 transmitter can be configured for level and volume measurements. The Rosemount 3302 is designed to measure interface level and interface distance as well.

The 3300 transmitter can be pre-configured according to the ordering specifications in the Configuration Data Sheet.

Basic Configuration The basic transmitter configuration includes setting the tank geometry parameters. For interface measurements the dielectric constant of the top liquid must also be given. For some applications with heavy vapor, the vapor dielectric must be given as well.

Figure 4-1. Tank Geometry


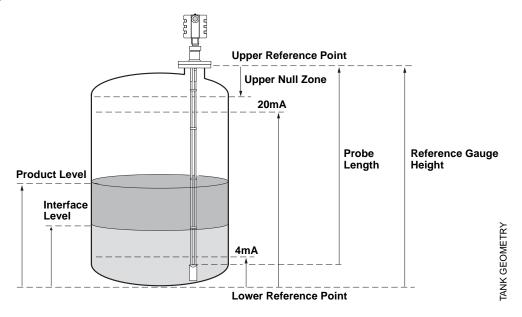


Figure 4-2. Upper Reference Point

For the different tank connections the Upper Reference Point is located at the underside of the threaded adapter or at the underside of the welded flange, as illustrated in Figure 4-2:

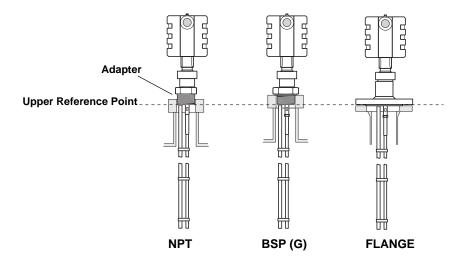

3300_UPPERREFERENCE_BA.EPS

Reference Gauge Height

The Reference Gauge Height is the distance from the Upper Reference Point to the bottom of the tank. The transmitter measures the distance to the product surface and subtracts this value from the Reference Gauge Height to determine the level.

Probe Length

The probe length is the distance between the Upper Reference Point and the end of the probe. If a weight is used at the end of the probe it shall not be included.

For Flexible Single Lead probes anchored with clamps, the probe length should be configured as the distance between the underside of the flange and the upper clamp (see "Anchoring" on page 3-18).

This parameter is pre-configured at factory. It must be changed if the probe is shortened.

Probe Type

The transmitter is designed to optimize measurement performance for each probe type.

This parameter is pre-configured at factory. This value needs to be changed if the probe type is changed.

Flexible and Rigid probes require different radar electronics and can not be used with the same transmitter head.

Dielectric Constant of Upper Product

For interface measurements the dielectric constant of the upper product is essential in order to obtain good accuracy. See section "Interface" on page 2-9 for further information on dielectric constants.

If the dielectric constant of the lower product is significantly smaller than the dielectric constant of water, you may need to make special adjustments. See section "Interface Measurements for Semi-Transparent Bottom Products" on page 6-5 for further information.

For level measurements the Upper Product Dielectric parameter corresponds to the actual dielectric constant of the product in the tank. Normally this parameter does not need to be changed even if the actual dielectric constant of the product deviates from the Upper Product Dielectric parameter value. However, for some products measurement performance can be optimized by setting the proper product dielectric constant.

Dielectric Constant of Vapor

In some applications there is heavy vapor above the product surface having a significant influence on the level measurement. In such cases the vapor dielectric can be entered to compensate for this effect.

The default value is equal to 1 which corresponds to the dielectricity of vacuum. Normally this value does not need to be changed since the effect on measurement performance is very small for most vapors.

Upper Null Zone

This parameter should only be changed if there are measurement problems in the upper part of the tank. Such problems may occur if there are disturbing objects close to the probe. By setting the Upper Null Zone the measuring range is reduced. See *Section 6: Disturbances at the Top of the Tank* for further information.

4 mA point

The 4 mA point should be set above the Lower Dead Zone (see Section 2: Dead Zones). If the 4 mA point is set to a point within the Dead Zone or below the probe end, the full range of the analog output is not used.

20 mA point

Make sure that the 20 mA point is below the Upper Null Zone.

The 20 mA point should be set below the Upper Dead Zone (see *"Dead Zones" on page 2-7*). If the 20 mA point is set to a point within the Dead Zone the full range of the analog output is not used.

Probe angle

If the transmitter is not mounted vertically, the angle from the vertical position must be given.

00809-0100-4811, Rev CA February 2006

Volume Configuration

For volume calculations you can choose one of the standard tank shapes or the strapping option. Choose None if volume calculation is not used.

Tank Type

You can choose one of the following options:

- Strap table
- Vertical Cylinder
- Horizontal Cylinder
- Vertical Bullet
- Horizontal Bullet
- Sphere
- None

Strapping Table

Use a strapping table if a standard tank type does not provide sufficient accuracy. Use most of the strapping points in regions where the tank shape is non-linear. A maximum of 10 points can be added to the strapping table.

Figure 4-3. Strapping points



Actual tank bottom may look like this.



Using only 3 strapping points results in a level-to-volume profile that is more angular than the actual shape.




Using 6 of the points at the bottom of the tank yields a level-to-volume profile that is similar to the actual tank bottom.

Rosemount 3300 Series

Standard Tank Shapes

Figure 4-4. Standard tank shapes

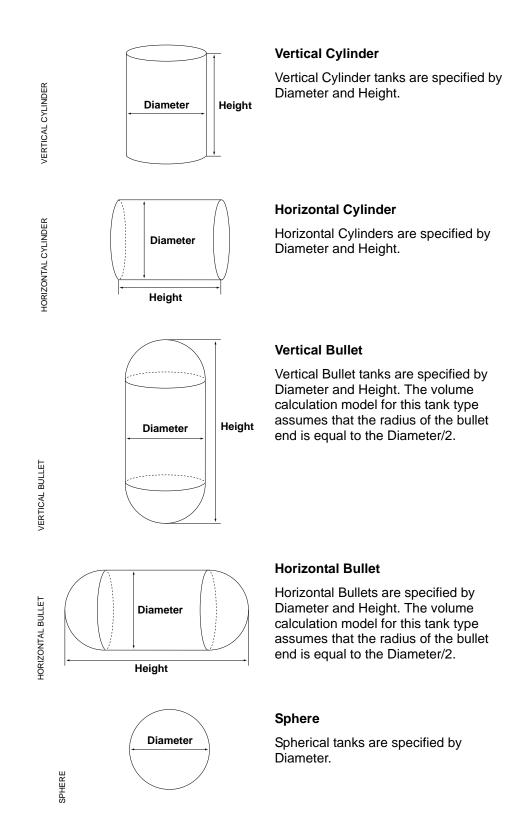

CONFIGURATION USING A 375 FIELD COMMUNICATOR

This section describes how to configure the 3300 transmitter by using a 375 Field Communicator. A 275 HART Communicator may also be used.


For information on all the capabilities, refer to the 375 Field Communicator Product Manual (document 00809-0100-4276).

Figure 4-5. The 375 Field Communicator.



Rosemount 3300 Series

Figure 4-6. HART Communicator Menu Tree corresponding to Device Revision 2.

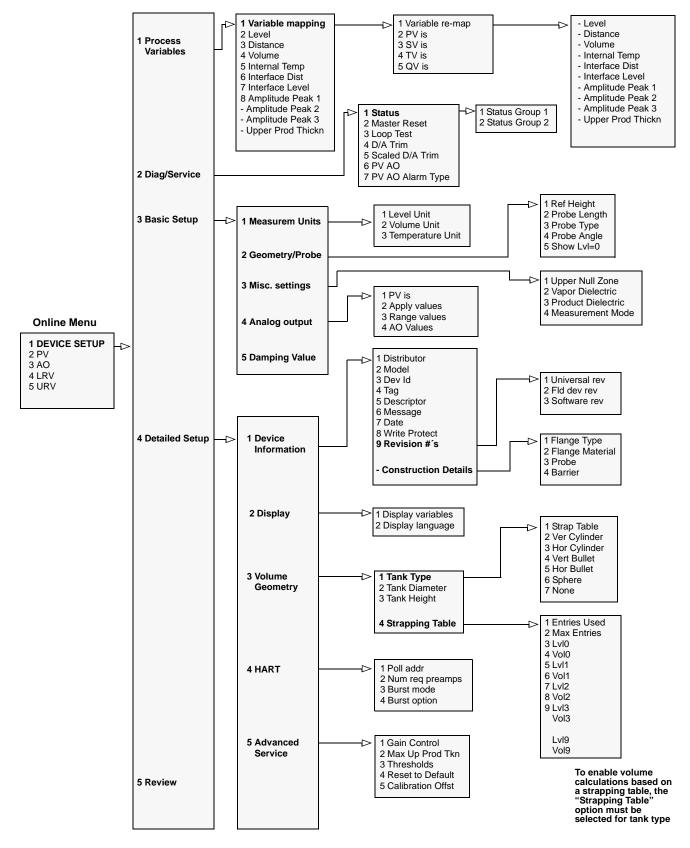

BASIC CONFIGURATION This section describes the various HART commands used to configure the 3300 Series of transmitters for level measurements. The transmitter outputs a 4 - 20 mA signal proportional to the primary variable. Three additional variables are available through the HART signal.

Transmitter Variables

|--|

You may assign up to four transmitter variables. Typically, the primary variable (PV) is configured to be Aggregate Level, Interface Level or Volume.

For the model 3301 the primary variable is typically set to be Level. If the transmitter is in the Immerse Probe mode (see section Measurement Mode) the PV is normally set to Interface Level.

For the model 3302 the PV is typically set to Interface Level, but Level and other options may also be used.

Measurement Units

HART Comm	1, 3, 1
-----------	---------

Set transmitter units for level and temperature.

Reference Gauge Height

HART Comm 1, 3, 2, 1

The Reference Gauge Height is the distance from the Upper Reference Point to the bottom of the tank (see Figure 4-1 on page 4-2). When setting the Reference Gauge Height, keep in mind that this value is used for all level measurements performed by the 3300 Series transmitter.

The Reference Gauge Height must be set in linear (level) units, such as feet or meters, regardless of primary variable assignment.

Probe Length

HART Comm	1, 3, 2, 2
-----------	------------

The probe length is the distance from the Upper Reference Point to the end of the probe, see Figure 4-1. If the probe is anchored to a weight do not include the height of the weight. This parameter is pre-configured at factory. The Probe Length needs to be changed if, for example, the probe is shortened.

Probe Type

HART Comm	1, 3, 2, 3
-----------	------------

The transmitter automatically makes an initial calibration based on the type of probe that is used. This parameter is pre-configured at factory and only needs to be set if the probe is changed to another type. Choose one of the following options:

- Rigid Twin
- Flexible Twin
- Coaxial, Coaxial HP, Coaxial HTHP
- Rigid Single, Rigid Single HTHP, Rigid Single PTFE
- Flexible Single, Flexible Single HTHP, Flexible Single PTFE

NOTE

Flexible and Rigid probes require different radar electronics and can not be used with the same transmitter head.

Product Dielectric

HART Comm	1, 3, 3, 3
-----------	------------

For interface measurements the dielectric constant of the upper product is essential for calculating the interface level and the upper product thickness. By default the Product Dielectric parameter is about 2.

If the dielectric constant of the lower product is significantly smaller than the dielectric constant of water, you may need to make special adjustments. See section *"Interface Measurements for Semi-Transparent Bottom Products" on page 6-5* for further information. The dielectric constant of the product is used for setting the appropriate signal amplitude thresholds, see *Section 6: Service and Troubleshooting* for more information on amplitude threshold settings. Normally this parameter does not need to be changed for level measurements. However, for some products measurement performance can be optimized by setting the proper product dielectric constant.

The Rosemount Configuration Tool (RCT) software includes a Dielectric Chart which lists the dielectric constants of a wide range of products. RCT also includes a tool which allows you to calculate dielectric constants based on measurements of the Upper Product Thickness.

Vapor Dielectric

HART Comm 1, 3, 3, 2

In some applications there is heavy vapor above the product surface having a significant influence on the level measurement. In such cases the vapor dielectric can be entered to compensate for this effect.

The default value is equal to 1 which corresponds to the dielectric constant of vacuum. Normally this value does not need to be changed since the effect on measurement performance is very small for most vapors.

Measurement Mode

HART Comm	1, 3, 3, 4
-----------	------------

Normally the Measurement Mode does not need to be changed. The transmitter is pre-configured according to the specified model:

Table 4-1. Measurement Mode

Model	Measurement Mode	
3301	Level ⁽¹⁾ , Interface Immersed probe	
3302	Level, Level and Interface ⁽¹⁾ , Interface Immersed probe	

(1) Default setting

Interface Immersed Probe is used for applications where the probe is fully immersed in liquid. In this mode the transmitter ignores the upper product level. See *Section 6: Interface Measurements with Fully Immersed Probes* for more information.

NOTE!

Only use *Interface Immersed Probe* for applications where interface is measured for a fully immersed probe.

Probe Angle

HART Comm	1, 3, 2, 4
-----------	------------

Maximum Upper Product Thickness

HART Comm	1, 4, 5, 2
-----------	------------

Enter the angle between the probe and the vertical line. The default value is equal to zero. Do not change this value if the transmitter is mounted with the probe along the vertical line (which is normally the case).

For interface measurements the Maximum Upper Product Thickness parameter may be used in special cases when the dielectric constant of the upper product is relatively high. By setting this parameter you can avoid that interface measurements are getting out of range.

Damping

HART Comm	1, 3, 5
-----------	---------

The default Damping value is 10. Normally this value does not need to be changed. The Damping parameter determines how quickly the transmitter responds to level changes and how robust the measurement signal is against noise. See *"High Level Rates" on page 6-7* for more information.

Display Panel

HART Comm	1, 4, 2
-----------	---------

Choose which variables to be displayed and the desired language to be used. The display toggles between the selected variables every two seconds.

4 and 20 mA Points

HART Comm 1, 3, 4, 3

When setting the range values, it is possible to enter the values directly using the keypad on the Field Communicator, or you may use actual values (HART command [1, 3, 4, 2]). Keep in mind that the 20 mA value should be below the Upper Dead Zone. If the 20 mA point is set to a point within the Dead Zone the full range of the analog output is not used.


Also make sure that the 20 mA value is below the Upper Null Zone (UNZ). (This parameter may be used if there are measurement problems in the upper part of the tank, see *Section 6: Disturbances at the Top of the Tank*). The UNZ is equal to zero in the default configuration.

The 4 mA point should be above the Lower Dead Zone. If the 4 mA point is set to a point within the Dead Zone or below the probe end (tank bottom for example), the full range of the analog output is not used.

See *Section 2: Dead Zones* for more information on the size of Upper and Lower Dead Zones.

Figure 4-7. Range Values

4-12

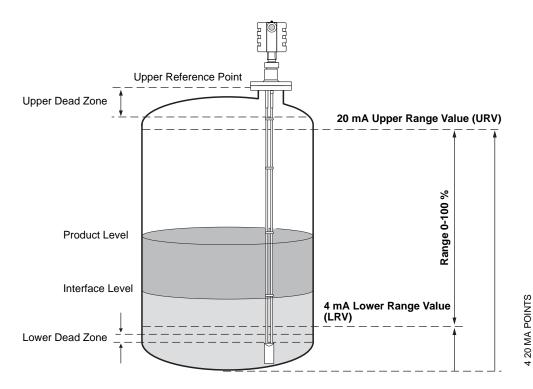

VOLUME CONFIGURATION

Transmitter Variables

HART Comm	1, 1, 1, 1
-----------	------------

Select the Volume option in order to configure the transmitter for volume measurements.

Volume Units

HART Comm	1, 3, 1, 2
-----------	------------

Choose one of the following units:

- Gallons
- Liters
- Imperial Gallons
- Cubic Meters
- Barrels
- Cubic Yards
- Cubic Feet
- Cubic Inch

Tank Type

HART Comm 1, 4, 3, 1

Choose a standard tank shape, or select the strapping option. Standard shapes are: Vertical Cylinder, Horizontal Cylinder, Vertical Bullet, Horizontal Bullet or Sphere. (If Primary Variable is Level choose None for Tank Type).

If your tank does not correspond to any of the above tank shapes, select Strap Table.

Tank Dimensions

If a standard tank type was chosen, enter the diameter and height of the tank. See "Volume Configuration" on page 4-5 for information on how to specify tank dimensions.

Strapping Table

HART Comm	1, 4, 3, 4
-----------	------------

If tank type Strapping Table was chosen, enter how many entries you will use and the actual level and volume points. You can enter from 2 to 10 points. The strapping points must be entered such that the first point corresponds to the lowest level, and the last point corresponds to the topmost level of the tank.

CONFIGURATION USING THE RADAR CONFIGURATION TOOL	R allows you to configure the Rosemount 3300 transmitter. You can choose					
Installing the RCT	To install the Rosemount Configuration Tool:					
 software 1. Insert the installation CD into your CD-ROM drive. 2. If the installation program is not automatically started, from the wind Start Bar choose Run and type D:\Setup.exe where D is the CD-RO drive. 3. Follow the instructions on the screen. 4. For optimum performance set COM Port Buffers to 1, see "To set th COM port buffers" on page 4-26. To start the RCT: From the Start menu click Programs>RCT Tools>RCT. In the RCT Status Bar check that RCT communicates with the transmitter: 						
			Communication is established (green symbol)			
			3300 Contact Radar found; Tag is 👫 🕒 R0033011.dcf 2001-11-01 09:08			
			Communication is not established (red symbol)			

CONNECTION FAILURE...A DEFAULT FILE IS BEING USED!

Specifying the COM Port

If communication is not established open the HART Communication Server window and check that the right COM Port is selected.

To check the current COM port settings do the following:

1. Locate the HART Server icon in the lower right corner of the screen.



- HART Server icon
- 2. Double-click the HART Server icon.

Figure 4-8. RHCS Server window

	RHCSServer	X
	Rosemount Hart Communication Software - Server	
Check that the selected COM port matches the	Version: 1.5.3	Busy Retries: 5
connected port on the PC.	Com Port: COM 1	Error Retries: 5
	Addressing Mode: Use Address 💌	Preambles: 5
	Messages: 2002-03-06 10:47:15 Message: The HART	driver was initialized withou
		Si serv
	Clear Messages	Frame Analyst

- 3. Check the COM port.
- 4. Choose the COM Port option that matches the COM Port connected to the transmitter.
- 5. If communication is intermittent, increase *Busy Retries* and *Error Retries* to 5 and 5 respectively.
- 6. Click the Search for a device icon in the RCT tool bar:

	Search f	or a device	
R	Radar Configu	ation Tools	
E	ile <u>P</u> lot <u>S</u> etup	⊻iew <u>C</u> omm <u>W</u> indow <u>H</u> elp	
	÷• 🖬 • / 🚑	📮 • 🕎 • 🇞 🦂 🖽	Poll Address: 0
Г	Basic	Device Cmds	X
H		- 2200 Cartersh Darder	


Help In RCT

Help is accessed by pressing the F1 key or by selecting the Contents option from the Help menu. If the F1 key is pressed a help text appears with information about the window that is currently open. If a menu option is selected a help text appears with information about that particular menu.

Using the Setup Wizard

To install a 3300 transmitter by using the installation Wizard do the following:


Figure 4-9. RCT workspace

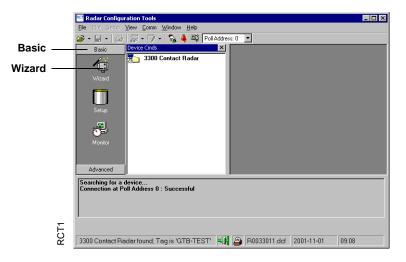

- 1. Start the RCT software.
- 2. In the RCT workspace click the Wizard icon (make sure that the Basic section is open), or choose the Views Wizard menu

choose the View>Wizard menu option.

Figure 4-10. RCT Wizard

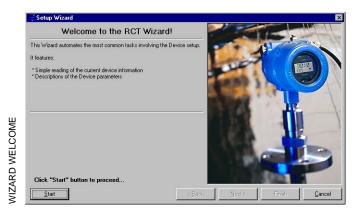


3. Click the **Start** button and follow the instructions. Now you will be guided through a number of dialogs allowing you to configure the transmitter.

Using the Setup Function

To install a 3300 transmitter by using the **Setup** function do the following:

Figure 4-11. RCT workspace

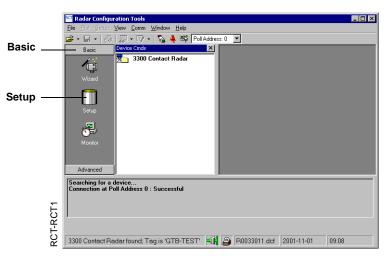

1. Start the RCT software.

2. In the RCT workspace click the Setup icon (make sure that the Basic area is open), or

choose the View>Setup menu option.

Figure 4-12. Setup Info



3. Choose the appropriate tab:

Info: information about the device.

Basics: Set Probe Type and measurement units.

Analog: Variable assignment and range value settings.

Tank Config: Tank height and other geometry settings, dielectric constants for vapor and upper product.

Volume: specification of tank geometry for volume calculations.

LCD: display panel settings.


NOTE

When working with the Setup window keep in mind that for all tabs except the Info tab, data is updated by clicking the Receive button. To download data to the transmitter click the Send button.

Setup - Info

Figure 4-13. Setup Title tab

The Title tab shows information about the connected transmitter.

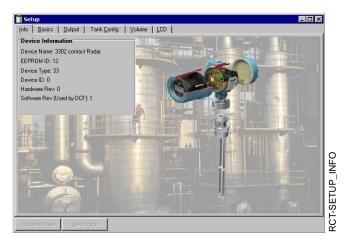

Device Name: designation of the current transmitter model.

EPROM ID:current transmitter database version.

Device Type: designates the transmitter type. 33 is used for the Rosemount 3300.

Device ID: a unique identifier for each Rosemount 3300 Series transmitter.

Hardware Rev: the current revision of the transmitter electronic board.

Software Rev: the current revision of the transmitter software that controls measurement, communication, internal checks etc.

Setup - Basics

The **Basics** tab lets you choose **Measurement Units** for Level, Volume and Temperature. These units are used wherever measurement and configuration data is presented.

Figure 4-14.	Setup	Basic tab
--------------	-------	-----------

ifo <u>B</u> asics <u>O</u> utp Variable Units	out Tank <u>C</u> onfig ⊻olur	ne LCD Optional Parameters	
	neter 💌	Message Tag Descriptor Date Day Month Y'ear	TR2 22 2 2
Seceive Page			

This window also allows you to enter some general information about the transmitter like Message, Tag, Descriptor and Date. This information is not required for the operation of the transmitter and can be left out if desired.

Setup - Output

The **Output** tab lets you assign up to four transmitter variables.

Figure 4-15. Setup output tab

🗍 Setup					_ 🗆 ×
Info Basics Dutpu	it Tank <u>C</u> onfig)	<u>V</u> olume Ì <u>L</u>	,CD)		
Variables Assignme	nt		-Alarm Mode Sw	itch	% Range
Primary Variable	Product Level	•	High Ala	rm (21mA)	
Secondary Variable	Product Level	-			
Tertiary Variable	Product Level	-	Damping		
Quadrinary Variable	Product Level	-	Damping Value	10	32 %
					0,945
Range Values					meter
Upper Range Value	3,000 "	neter			
Lower Range Value	0,000 "	neter			
Receive Page Se	end Page				
Tensive Lage 26	anuraye				

Typically, the **Primary Variable** (PV) is configured to be Product Level, Interface Level or Volume.

Other variables like Product Distance, Interface Distance, Upper Product Thickness, etc. are available as well.

For the Rosemount 3301 the primary variable is typically set to be Level. If the transmitter is in the Immersed Probe mode (see section Measurement Mode) the PV is normally set to Interface Level.

For the Rosemount 3302 the PV is typically set to Interface Level, but Level and other options may also be used.

Set the **Lower Range Value** (4 mA) and the **Upper Range Value** (20 mA) to the desired values. Keep in mind that the 20 mA value should be below the Upper Dead Zone, and the 4 mA point should be above the Lower Dead Zone if you want to use the full 4-20 mA range within the measuring range of the transmitter.

Also make sure that the 20 mA value is set below the Upper Null Zone (UNZ). (the UNZ parameter may be used if there are measurement problems in the upper part of the tank, see *Section 6: Disturbances at the Top of the Tank*). The UNZ is equal to zero in the default configuration.

See Section 2: Dead Zones for more information on Upper and Lower Dead Zones.

See Section 4: Basic Configuration for more information on setting the Upper and Lower Range values.

The default **Damping** value is 10. Normally this value does not need to be changed. The Damping parameter may be changed if there are high filling rates, see *"High Level Rates" on page 6-7* for more information.

Setup - Tank Config

Figure 4-16. Setup Tank Configuration tab

The **Tank Configuration** tab contains information on tank geometry parameters and dielectrics.

🛄 Setup							ĺ
Info Basics Dutput] Tank <u>C</u> onfig ⊻olun	ne <u>L</u> CD					
Geometry Reference Gauge Height Upper Null Zone	3.000	meter meter			Upper Rel	ference Point	
Probe Probe Type Probe Length	Rigid Twin Lead Probe	 meter	Distance	Probe Length	Vapor		
Probe Angle Misc. Settings Measurement Mode	0,000 Product Level	Degrees		8	Upper Product	Reference Gauge	
Vapor Dielec Upper Prod Dielec	1,000 1,960 Present level=0 when probe end	level below	Level Interface		Lower Product Lower Re	LRV (4 mA)	
	d Page Dielectric Calc	culator					

Tank Geometry

The **Reference Gauge Height** is the distance from the Upper Reference Point to the bottom of the tank (see Figure 4-1 on page 4-2). When setting the Reference Gauge Height, keep in mind that this value is used for all level and volume measurements performed by the 3300 transmitter.

The Reference Gauge Height must be set in linear (level) units, such as feet or meters, regardless of primary variable assignment.

The **Upper Null Zone** (UNZ) should not be changed unless there are disturbances at the top of the tank. By increasing the Upper Null Zone value measurements in this region can be avoided. See *Section 6: Disturbances at the Top of the Tank* for more information on how to use the UNZ. The UNZ is equal to zero in the factory configuration.

Probe

The 3300 Series transmitter automatically makes some initial calibrations based on the chosen **Probe Type**. The following Probe Types are available:

- Rigid Twin
- Flexible Twin
- Coaxial, Coaxial HP, Coaxial HTHP
- Rigid Single, Rigid Single HTHP, Rigid Single PTFE
- Flexible Single, Flexible Single HTHP, Flexible Single PTFE

NOTE

Flexible and Rigid probes require different radar electronics and can not be used with the same transmitter head

The **Probe Length** is the distance from the Upper Reference Point to the end of the probe, see Figure 4-1. If the probe is anchored to a weight do not include the height of the weight.

The **Probe Angle** is the angle between the probe and the vertical line. Set this value equal to zero if the transmitter is mounted with the probe along the vertical line (which is normally the case).

Measurement Mode

Normally the Measurement Mode does not need to be changed. The transmitter is pre-configured according to the specified model:

Table 4-2. Measurement Mode

Model	Measurement Mode
3301	Level ⁽¹⁾ , Interface Immersed probe
3302	Level, Level and Interface ⁽¹⁾ , Interface Immersed probe

(1) Default setting

Interface Immersed Probe is used for applications where the probe is fully immersed in liquid. In this mode the transmitter ignores the upper product level. See "Section 6: Interface Measurements with Fully Immersed Probes" for more information.

NOTE!

Only use *Interface Immersed Probe* for applications where interface is measured for a fully immersed probe.

Dielectrics

In some applications there is heavy vapor above the product surface having a significant influence on the level measurement. In such cases the **Vapor Dielectric** can be entered to compensate for this effect.

The default value is equal to 1 which corresponds to the dielectric constant of vacuum. Normally this value does not need to be changed since the effect on measurement performance is very small for most vapors.

For interface measurements the dielectric constant of the upper product is essential for calculating interface level and the upper product thickness. By default the **Upper Product Dielectric** parameter is about 2.

If the dielectric constant of the lower product is significantly smaller than the dielectric constant of water, you may need to make special adjustments. See section *"Interface Measurements for Semi-Transparent Bottom Products" on page 6-5* for further information.

The dielectric constant of the product is used for setting the appropriate signal amplitude thresholds, see *Section 6: Service and Troubleshooting* for more information on amplitude threshold settings. Normally this parameter does not need to be changed for level measurements. However, for some products measurement performance can be optimized by setting the proper product dielectric constant.


RCT contains tools to estimate the dielectric constant of the current product:

- The Dielectric Chart lists the dielectric constant of a large number of products. Use one of the two following methods to view the Dielectric Chart:
 - Choose the View>Dielectric>Dielectric Chart menu option.
 - Click the Dielectric Chart icon in the Project Bar Advanced section.
- The Dielectric Calculator lets you calculate the dielectric constant of the Upper Product based on the following input:
 - actual upper product thickness,
 - the dielectric constant value stored in the transmitter, and
 - the upper product thickness presented by the transmitter.

Measurements Below Probe End

The *Present Level=0...* check box controls how the level value is presented when the tank is almost empty. By selecting this check box the Level is set equal to zero as long as the product surface is below the probe.

If the check box is not selected, the Level value is equal to the difference between Reference Gauge Height **R** and Probe Length **L** when the product surface is below the probe (see "Basic Configuration" on page 4-2 for information on tank geometry).

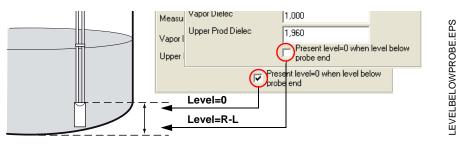

Setup - Volume

The Volume tab lets you configure the transmitter for volume calculations.

TSetup				
Info Basics Ou	utput Tank <u>C</u> onfig <u>V</u> olume	LCD		
Volume will be ca	lculated based on:			
Volume Geometr	y			
Tank Type:	Vertical Cylinder]		
Tank Height	0,900	meter		
Tank Diameter	0,700	meter		
			│ └───D───┾││ │	
				ш
				Ξ
				Ę
				5
			,, _,, _	₽
				Ĕ
				Ň
Beceive Page	Send Page			RCT-SETUP VOLUME
Liecewe Fage	Jenu i age			Ř

You can choose one of the standard tank shapes or the strapping option. Choose None if volume calculation is not used at all.

Choose one of the following options:


- Vertical Cylinder
- Horizontal Cylinder
- Vertical Bullet
- · Horizontal Bullet
- Sphere
- Strap table
- None

See Section 4: Volume Configuration for more information on Volume configuration.

Figure 4-17. Setup Volume tab

Setup - LCD

 The **LCD** tab lets you specify which parameters to appear on the display panel. The display has two rows, the upper row with five characters is for the measured value and the lower row with six characters for the value name. The display toggles between the different variables every 2 seconds.





Choose one of the following options:

Table 4-3. LCD parameters

Parameter	Description
Level	Product level.
Distance	Distance from the upper reference point to the product surface.
Volume	Total product volume.
Internal Temperature	Temperature inside the transmitter housing.
Interface Distance	Distance between the upper reference point and the interface between the upper and lower product.
Interface Level	Level of the lower product.
Interface Thickness	Thickness of the upper product.
Amplitude Peak 1	Signal amplitude of the reflected signal from the reference pulse.
Amplitude Peak 2	Signal amplitude of the reflected signal from the product surface.
Amplitude Peak 3	Signal amplitude of the reflected signal from the surface of the bottom product (interface measurements).
Percent Range	Level value in percent of total measurement range.
Analog Output Current	4 -20 mA current.

SPECIAL FUNCTIONS

TriLoop

The Rosemount 333 HART Tri-Loop HART-to-Analog Signal Converter is capable of converting a digital HART burst signal into three additional 4-20 mA analog signals.

To set the Rosemount 3300 transmitter up for the HART Tri-Loop do the following:

- 1. Make sure that the 3300 transmitter is properly configured.
- 2. If RCT is used for the 3300 setup, it is recommended that the Receive Buffer and Transfer Buffer for the selected COM port are adjusted as described below in section "To set the COM port buffers." Otherwise the Burst Mode can not be turned off by RCT (for further information on other options for turning off the Burst Mode see "To turn off the Burst Mode."
- Assign transmitter variables Primary Variable, Secondary Variable etc. HART command [1,1,1,1]. RCT: Setup>Output tab.


	🗍 Setup			
	Info Basics Dutput	Tank <u>C</u> onfig ∐olume ∐	CD)	
Variables ——	Variables Assignment	t	Alarm Mode Switch	% Range
Assignment	Primary Variable	Product Level	High Alarm	
-	Secondary Variable	Interface Level		
	Tertiary Variable	Total Volume	Damping	
	Quadrinary Variable	Amplitude Peak 1	Damping Value 10	32 %
				0,945
	Range Values			0,945 meter OII
	Upper Range Value	3,000 meter		RI
	Lower Range Value	0,000 meter		
				5
				5
				о v
	<u>R</u> eceive Page <u>S</u> en	nd Page		RCT-SETUP
				<u> </u>

 Configure variable units: Length, Volume and Temperature. HART command [1,3,2,1-3]. RCT: Setup>Basics tab.

]	🗍 Setup					
		Info Basics	<u>O</u> utput Tank <u>C</u> i	onfig Ì ⊻olume	∍ LCD		
Variable		Variable Units			Optional Parameters		
Units		Length Units	meter	•	Message	TR2	
		Volume Units	cubic meter	•	Tag		
		Temp Units	°C	-	Descriptor		
					Date		
					Day	22	
					Month	2	
					Year	2	
							S
							BASICS
							B
							<u>م</u>
							12
							SE
							RCT-SETUP
		Beceive Page	<u>S</u> end Page				RO

- Set the 3300 in Burst mode. HART command [1, 4, 5, 2, 3]. RCT: Device Commands>Details>Set Burst Mode option.
- 6. Select Burst option 3=Process variables and current (Process vars/crnt). HART command [1,4,5,2,4].
- 7. Install the Tri-Loop. Connect Channel 1 wires, and optionally wires for Channel 2 and Channel 3.
- 8. Configure Tri-Loop Channel 1:
 - a. Assign variable: Tri-Loop HART command [1,2,2,1,1]. Make sure that the SV, TV, and QV match the configuration of the 3300 transmitter.
 - b. Assign units: Tri-Loop HART command [1,2,2,1,2]. Make sure that the same units are used as for the 3300 transmitter.
 - c. Set the Upper Range Value and the Lower Range Value: Tri-Loop HART command [1,2,2,1,3-4].
 - d. Enable the channel. Tri-Loop HART command [1,2,2,1,5].
- 9. (Optional) Repeat steps a-d for Channels 2 and 3.
- 10. Connect wires to Tri-Loop Burst Input.
- 11. Enter the desired tag, descriptor and message information: Tri-Loop HART command [1,2,3].
- (Optional) If necessary, perform an analog output trim for Channel 1 (and Channel 2 and 3 if they are used). Tri-Loop HART command [1,1,4].

Figure 4-19. Tri-Loop wiring.

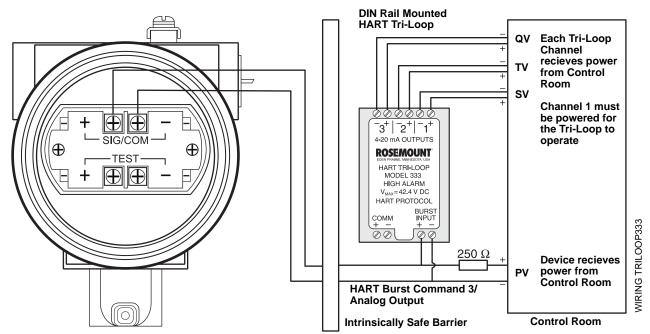

See the reference manual for the *Model 333 HART Tri-Loop HART-to-Analog Signal Converter* for further information on how to install and configure the Tri-Loop.

To turn off the Burst Mode

In order to turn off the Burst Mode use one of the following options:

- The RCT program (requires that the Receive and Transfer Buffers for the selected COM Port is adjusted)
- The Rosemount Burst Mode Switch software
- A 375 Field Communicator
- The AMS software

To set the COM port buffers

In order to be able to communicate with the 3300 in Burst Mode the Receive and Transfer Buffers need to be adjusted as follows:

- 1. In the MS Windows Control Panel open the System option.
- 2. Choose the **Hardware** tab and click the **Device Manager** button.
- 3. Expand the **Ports** node in the tree view.
- 4. Click the right mouse button on the selected COM port and choose **Properties**.
- 5. Select the **Port Settings** tab and click the **Advanced** button.
- 6. Drag the Receive Buffer and Transfer Buffer slides to 1.
- 7. Click the **OK** button.
- 8. Reboot the computer.

Reference Manual

00809-0100-4811, Rev CA February 2006

Section 5


Operating the Display Panel

Display Functionality	 page 5-1
Error Messages	 page 5-2

DISPLAY FUNCTIONALITY

The Rosemount 3300 transmitter uses the display for presentation of measurement variables. The display has two rows, the upper row with five characters is for the measured value and the lower row with six characters for the value name and measurement unit. The display toggles between the different variables every 2 seconds. Variables to be presented are configurable by using a Field Communicator or by using the Radar Configuration Tools software.

Figure 5-1. Presentation of measurement data

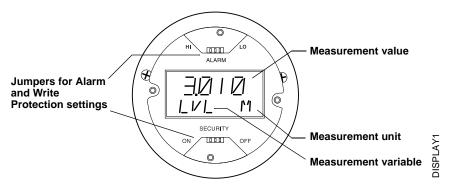

Model 3300 can display the following variables:

- Level
- Distance
- Volume
- Internal Temperature
- Interface Distance
- Interface Level
- Amplitude 1, 2 and 3 (see chapter 6 for more information)
- Interface Thickness
- Percent of range
- Analog current out






ERROR MESSAGES

The display can also be used for presentation of software errors. The upper row shows error codes and the lower row shows 'ERROR'.

Figure 5-2. Presentation of error messages

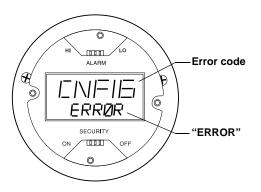

DISPLAY ERROR

The following errors can be displayed:


Code	Error
CNFIG	Invalid Configuration
00001	Ram Failure
00002	ROM Checksum
00006	Waveform Acquisition Failure
00007	EEprom Factory Checksum
80000	EEprom User Checksum
00010	Software Error
00013	Probe Failure

See also "Errors" on page 6-22.

ALARM AND WRITE PROTECTION

When mounting the Integral Display panel it is important that the Alarm and Write Protection switches on the transmitter mother board are correctly set. Make sure that the Alarm switch is in the HIGH position and the Write Protection switch is in the OFF position, see Figure 5-3. See also Section 3: Before You Install for more information.

Figure 5-3. Alarm and Write Protection switches.

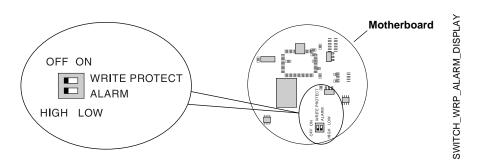

Once the mother board positions are set, then the display positions become the master.

Reference Manual

00809-0100-4811, Rev CA February 2006

Section 6	Service and Troubleshooting
	Safety messages page 6-1 Advanced Configuration page 6-2 Service page 6-9 Diagnostic Messages page 6-21
SAFETY MESSAGES	Procedures and instructions in this section may require special precautions to ensure the safety of the personnel performing the operations. Information tha raises potential safety issues is indicated by a warning symbol (\triangle). Please refer to the following safety messages before performing an operation preceded by this symbol.
	 ∕∆WARNING
	Explosions could result in death or serious injury.
	Verify that the operating environment of the gauge is consistent with the appropriate hazardous locations certifications.
	Before connecting a HART-based communicator in an explosive atmosphere, make sure the instruments in the loop are installed in accordance with intrinsically safe or non-incendive field wiring practices.
	Do not remove the gauge cover in explosive atmospheres when the circuit is alive.
	Failure to follow safe installation and servicing guidelines could result in death or serious injury.
	Make sure only qualified personnel perform the installation.
	Use the equipment only as specified in this manual. Failure to do so may impair the protection provided by the equipment.
	Do not perform any service other than those contained in this manual unless you are qualified.
	High voltage that may be present on leads could cause electrical shock.
	Avoid contact with leads and terminals.
	Make sure the main power to the Rosemount 3300 Transmitter is off and the lines to any other external power source are disconnected or not powered while wiring the gauge.
	Probes covered with plastic and/or with plastic discs may generate an ignition-capable level of electrostatic charge under certain extreme conditions. Therefore, when the probe is used in a potentially explosive atmosphere, appropriate measures must be taken to prevent electrostatic discharge.

Process leaks could result in death or serious injury.

Make sure that the transmitter is handled carefully. If the Process Seal is damaged, gas might escape from the tank if the transmitter head is removed from the probe.





Rosemount 3300 Series


ADVANCED CONFIGURATION

This section covers non-standard configuration.

User defined Upper Reference Point

If you want to specify your own Upper Reference Point you can do this by setting the *Calibration Offset* parameter.

Figure 6-1. Tank Geometry

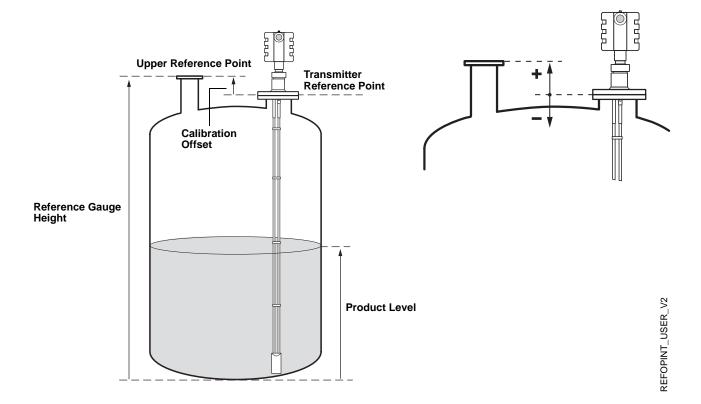

To set the desired upper reference point do the following:

- 1. Adjust the **Reference Gauge Height** to the distance from the tank bottom to the desired **Upper Reference Point**.
- Add the distance between the Upper Reference Point and the Transmitter Reference Point to the Calibration Offset value that is stored in the transmitter database.
 With the HART Communicator the Calibration Offset is available as HART Fast Key sequence [1, 4, 5, 5].
 In Radar Configuration Tool (RCT) the Calibration Offset is available under the Advanced section in the RCT Project Bar: Device Commands>Basic>Set Calibration Offset.


Plotting the Measurement Signal

The Radar Configuration Tool (RCT) has powerful tools for advanced troubleshooting. By using the Waveform Plot function you get an instant view of the tank signal. Measurement problems can be solved by studying the position and amplitude of the different pulses.

To plot the measurement signal:

- 1. Start the Radar Configuration Tool program.
- Choose the View>Plotting menu option, or choose the Plotting icon in the RCT workspace (Advanced page at the left side of the workspace) and click the Read button.

Figure 6-2. Waveform plot in RCT

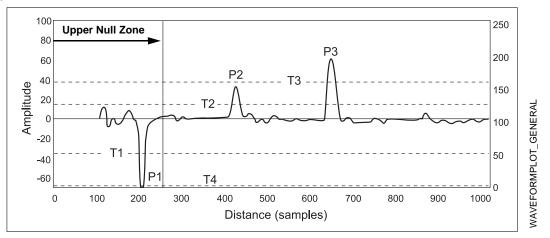

In a typical measurement situation the following pulses appear in the diagram:

P1 - Reference pulse. This pulse is caused by the transition between transmitter head and probe. It is used by the transmitter as a reference at level measurements.

P2 - Product surface. This pulse is caused by a reflection on the product surface. In Measurement Mode=Interface when Immersed Probe however, P2 indicates the interface since the surface of the upper product is ignored.

P3 - Interface or probe end. This pulse is caused by reflection on the interface between an upper product and a bottom product with a relatively high dielectric constant. It may also be caused by the probe end if there is no product above. This pulse is shown when the transmitter is in Measurement Mode=Level & Interface.

Different amplitude thresholds are used in order to filter out unwanted signals. The following amplitude thresholds are used for the 3300 transmitter:

T1 - amplitude threshold for detection of the Reference pulse P1.

T2 - amplitude threshold for detection of the product level peak P2.

T3 - amplitude threshold for detection of the interface level peak P3.

T4 - amplitude threshold that is used to detect whether the probe is fully immersed in the upper product or not.

Normally the thresholds are adjusted to approximately 50% of the signal peak amplitude. To adjust the **Amplitude Thresholds** open the Advanced section in the RCT Project Bar and choose Device Commands>Details>Set Nominal Thresholds. To reset the default values set Amplitude Threshold=0 (zero).

Logging and saving to disk

The Waveform plot can be automatically logged and saved to file by specifying the read plot interval and the number of plots to log.

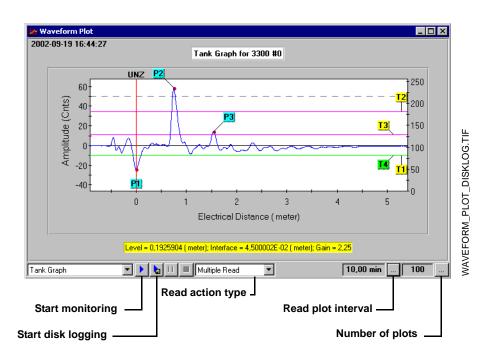


Figure 6-3. Disk logging Waveform plot

The **Read Plot Interval** entry field specifies the time interval between plots that are saved to disk. For example, type 10 if you want the waveform plot to be updated every ten minutes.

Number of plots to log specifies the maximum number of plot files that will be stored. The default value is 100.

Click the **Start Disk Logging** button to start the log. Make sure that Read Action type is set to Multiple Read. Otherwise RCT will only save one log file. Choose a destination folder and enter a file name. For each new file the corresponding number is appended to the end of the file name.

Interface Measurements for Semi-Transparent Bottom Products

In interface applications where the bottom product has a low dielectric constant, or if the signal is attenuated in the upper product, the amplitude of the reflected signal is relatively low and difficult for the transmitter to detect. In such a case it may be possible to detect the reflected signal if the corresponding amplitude threshold is adjusted.

The Radar Configuration Tool (RCT) lets you view a waveform plot to analyze the measurement signal. The plot shows the signal and the thresholds used for the different amplitude peaks. By adjusting amplitude threshold T3 it is possible to detect even weak interface signals.

 
Guidelines for amplitude threshold settings:


- The amplitude threshold T3 should be approximately 50 % of the interface signal amplitude.
- Threshold T3 should not be less than 3.
- If possible, T3 should be higher than T2.

You can use the RCT software or a 375 Field Communicator to change the amplitude thresholds. For the Field Communicator use the HART command [1, 4, 5, 3]. See also "Amplitude Threshold Settings" on page 6-13.

RCT lets you view a plot of the measurement signal along with the current thresholds:

- 1. From the **View** menu choose the **Plotting** option, or double-click the Plotting icon in the Advanced section of the RCT Project Bar.
- 2. Click the Read button **)**.
- To adjust the Amplitude Thresholds open the Advanced section in the RCT Project Bar and choose Device Commands>Details>Set Nominal Thresholds.




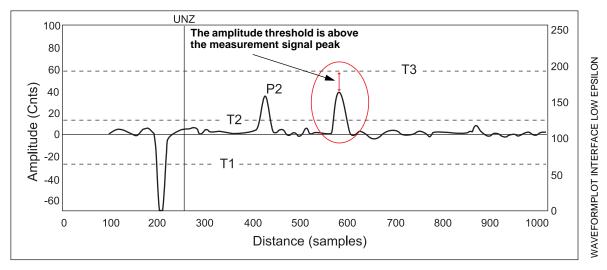

Rosemount 3300 Series

Figure 6-4 illustrates a situation where amplitude threshold T3 is too high. The signal amplitude peak at the interface between the upper and lower products is not detected in this case. By adjusting amplitude threshold T3, the peak at the interface between the upper and lower products is detected as illustrated in Figure 6-5:

Figure 6-5. After changing the amplitude threshold the transmitter detects the interface

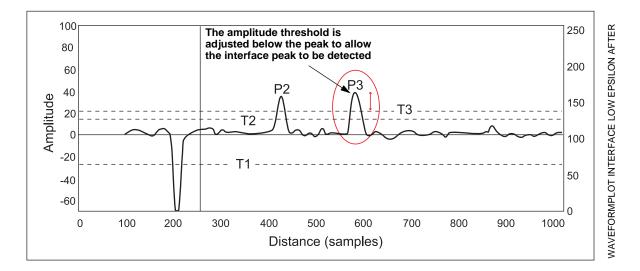

High Level Rates

The measurement signal is filtered in order to minimize the influence of disturbing noise. In most measurement situations this does not have a noticeable effect on the response time to level changes. If high level rates occur it may however be necessary to reduce the damping value in order to allow the transmitter to respond quicker. If there is too much noise the damping value may be increased in order to get a stable measurement signal.

You can use the RCT software or a 375 Field Communicator to change the Damping value. For the HART Communicator use the key sequence [1, 3, 5].

In the RCT software open the **Setup>Output** tab and enter the desired Damping value:

Dutput tab	Setup	
	Info Basics Output Tank Config Volume LCD Variables Assignment Alarm Mode Primary Variable Product Level Image: Secondary Variable Product Level Image: Secondary Variable Image: S	h Alarm (21mA)
Damping —	Range Values Upper Range Value 3,000 meter Lower Range Value 0,000 meter	0,345 meter
	Eeceive Page	

The Damping parameter determines how quickly the transmitter responds to level changes and how robust the measurement signal is against noise. Technically, a damping value of 10 means that in 10 seconds the output from the transmitter is about 63% of the new level value. Consequently, when there are rapid level changes in the tank, it may be necessary to decrease the Damping value for the transmitter to be able to track the surface. On the other hand, in noisy environments, and if level rates are low, it may be better to increase the damping value to have a stable output signal.

Interface Measurements with Fully Immersed Probes

The 3300 series has a measurement option which makes it possible to handle interface measurements when the product level is not visible, for example in a full bridle pipe as illustrated in Figure 6-6. In this case the probe is fully immersed into the upper product, and only the interface level is detected by the transmitter. Even if the upper product level drops, it is ignored by the transmitter which continues to measure only the interface level, but the measurement accuracy is reduced since the transmitter does not take into account the influence of the air gap above the product surface.

The Measurement Mode parameter is available via the HART command [1, 3, 3, 4]. Choose the *Interface when Immersed Probe* option.

Measurement mode *Interface when Immersed Probe* can also be activated in the RCT software:


- 1. Open the Setup window.
- 2. Select the Tank Config tab.
- 3. Choose Measurement Mode Interface when Immersed Probe.
- 4. Click the Send Page button.


NOTE!

Do not use Measurement Mode *Interface when Immersed Probe* in "standard" applications when both Interface Level and Product Level are measured.

If the product level drops, the air filled region in the upper part of the pipe will slightly reduce the measurement accuracy of the interface level. To achieve high accuracy in this measurement mode the probe must be fully immersed.

 Figure 6-6. Interface Level measurements in a full bridle pipe.

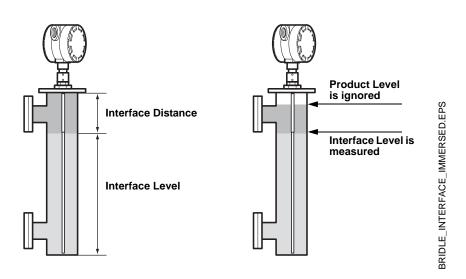



SERVICE


Analog Output Calibration

To calibrate the Analog Output current do the following:

- 1. Start RCT and make sure that the transmitter communicates with the PC (see Section 4: Installing the RCT software).
- Open the Advanced section in the RCT workspace Project Bar and click the Device Commands icon, or

choose the Device Commands option from the View menu.

3. Open the folder named Diag and double-click the Fixed Current Mode option.

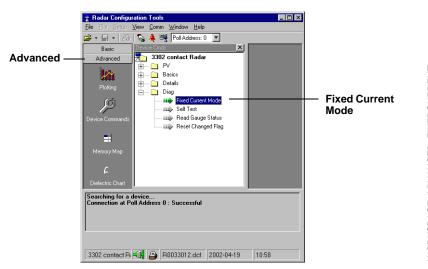

4. Set the output current to 4 mA.

Output Current	4	0 <u>K</u>
		<u>C</u> ancel

- 5. Measure the output current.
- 6. Open the folder named Details.
- 7. Choose the Trim DAC Zero option and enter the measured output current.
- 8. In the Diag folder double-click the Fixed Current Mode option and set the output current to 20 mA.
- 9. Measure the output current.
- 10. In the Details folder double-click the Trim DAC Gain option and enter the measured output current.
- 11. In the Diag folder double-click the Fixed Current Mode option and set the output current to 0 mA in order to leave the Fixed Current mode.

Level and Distance Calibration

When calibrating the transmitter it is important that the product surface is calm and that the tank is not being filled or emptied.

A complete calibration is performed in two steps:

- 1. Calibrate the Distance measurement by adjusting the Calibration Offset parameter.
- 2. Calibrate the Level measurement by adjusting the Reference Gauge Height.


Distance calibration

- 1. Measure the actual distance between the Upper Reference Point and the product surface.
- Adjust the Calibration Offset so that the Distance measured by the transmitter corresponds to the actual distance. The Calibration Offset parameter is available via HART command [1, 4, 5, 5], or
 - RCT: open the Advanced section in the Project Bar and choose Device Commands>Basics>Set Calibration Offset.

Level calibration

- 1. Measure the actual Product Level.
- 2. Adjust the Reference Gauge Height so that the measured Product Level corresponds with the actual level.

Figure 6-7. Distance and Level calibration

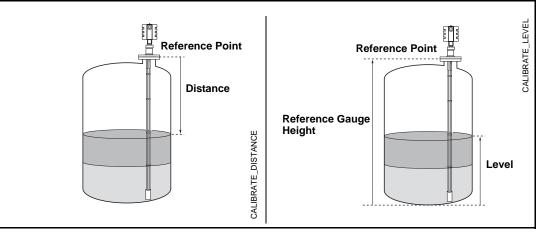

Disturbances at the Top of the Tank

Using the Trim Near Zone Function

For transmitters using the Guided Wave Radar technology the performance In the Near Zone (referred to as the region between 0-1.6 ft (0-0.5 m) below the Upper Reference Point) is normally somewhat limited. However, the 3300 transmitter is equipped with software functionality that minimizes the Upper Dead Zone. The factory setting is normally sufficient and doesn't need to be repeated after installation.

However, since the setting is optimized depending on actual installation, further trimming may be necessary in the case of unfavorable conditions. This may for example be the case if a Single Lead probe is mounted in a small nozzle, or if there are disturbing obstacles in the Near Zone. The trimming means that the measurement performance in the Near Zone is maintained even under these conditions and prevents false echo indication.

To trim the Near Zone perfomance do the following:

- 1. Make sure that the product level is below the Near Zone region (0-1.6 ft (0-0.5 m) below the Upper Reference Point).
- 2. Start the Radar Configuration Tools (RCT).
- 3. Choose the **Device Commands** option from the View menu.
- 4. Open the Details folder.
- 5. Click the Trim Near Zone option.
- 6. Select the **Update** option and click the OK button.

NOTE!

The Trim Near Zone function should only be used for reducing impact from constant disturbances. It is not suitable for occasional disturbances.

To reset the transmitter to factory settings do the following:

- 1. Start the Radar Configuration Tools (RCT).
- 2. Choose the **Device Commands** option from the View menu.
- 3. Open the Details folder.
- 4. Click the Trim Near Zone option.
- 5. Select the Reset to Factory Settings option and click the OK button.

Changing the Upper Null Zone

Measurements are not performed within the Upper Null Zone (UNZ). By setting the UNZ parameter to zero, measurements can be performed in the region close to the flange (Near Zone). However, it is very important that there are no disturbances in that region if UNZ is set to zero.

If there are measurement problems in the upper part of the tank you may use the Trim Near Zone function as described above.

If the desired measurement range is below the Near Zone, or if disturbing objects are located below the Near Zone, the Upper Null Zone parameter can be used to avoid measurements above a certain level.

To set the Upper Null Zone do one of the following:

- 1. Select the HART command [1, 3, 3, 1].
- 2. Enter the desired value,

or

- 1. Start the Radar Configuration Tool (RCT).
- 2. Click the Setup icon in the RCT workspace Project Bar.
- 3. Choose the Tank Config tab in the Setup window.
- 4. Click the Receive Page button.
- 5. Type the desired value in the Upper Null Zone field.
- 6. Click the Send Page button. Now the Upper Null Zone is stored in the transmitter memory.

Figure 6-8. Upper Null Zone


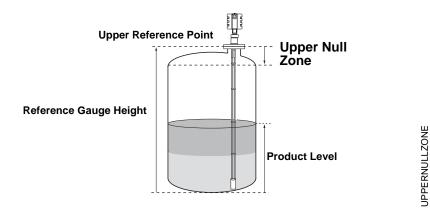


Figure 6-9. Identifying the Upper Null Zone in the RCT Waveform Plot

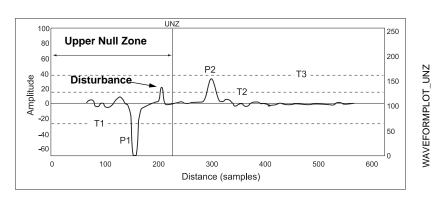

00809-0100-4811, Rev CA February 2006

Amplitude Threshold Settings

Figure 6-10. Example 1: amplitude threshold T2 is too


high.

The amplitude thresholds are automatically adjusted to appropriate values in order to filter out noise and other non-valid measurements from the measurement signal.

The amplitude of the measurement signal, i.e. the amplitude of the signal that is reflected by the product surface, is related to the actual dielectric constant of the product. The amplitude threshold that is used by the transmitter is based on the parameter configuration of the current product dielectric constant (see *Section 4: Basic Configuration*). Normally no other threshold adjustment is needed, but if the transmitter still does not track the product surface correctly it may be necessary to adjust the threshold values.

The Radar Configuration Tool (RCT) has a plot function allowing you to view the reflections along the probe.

If the amplitude threshold is too high the product level is not detected as illustrated in Figure 6-10.

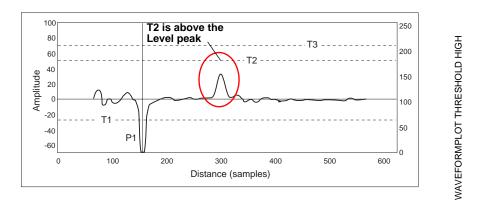

If there are disturbing objects in the tank the threshold must be carefully set in order to avoid locking on the wrong amplitude peak. In Figure 6-11 the transmitter has locked on a peak above the actual product surface, i.e. a disturbance was interpreted as the product surface, whereas the actual product surface was interpreted as an interface or the probe end.

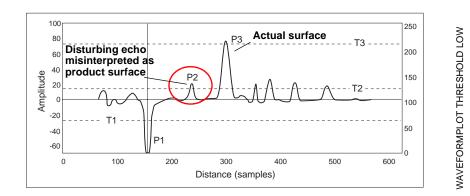


Figure 6-11. Example 2: amplitude threshold T2 is too low.

WAVEFORMPLOT THRESHOLD ADJUSTED

By adjusting the amplitude threshold T2 the product surface is detected correctly as illustrated in Figure 6-12.

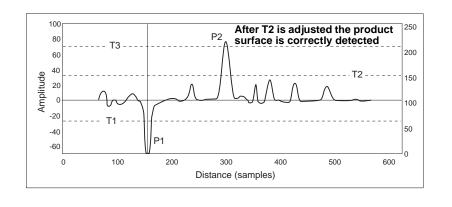


Figure 6-12. Waveform plot after threshold T2 was adjusted

To adjust the amplitude thresholds select HART command [1, 4, 5, 3]

or

- 1. Start the Radar Configuration Tool (RCT).
- 2. Choose the **Device Commands** option from the View menu.
- 3. Open the Details folder.
- 4. Click the Set Nominal Thresholds option.

The thresholds T2 and T3 should be set to about 50% of the measured signal amplitude for the product surface and the interface peaks, respectively.

NOTE

Amplitude thresholds should not be set to values less than 3.

NOTE

Check that the dielectric constant parameter setting is reasonably close to the actual dielectric constant value of the upper product before changing the amplitude thresholds.

NOTE

Default Amplitude thresholds can be set by typing 0 as the new threshold value.


Using the 375 Field Communicator

To adjust amplitude threshold value:

1. Select HART command [1, 4, 5, 3]. The different amplitude thresholds appear on the display.

Signal amplitude Amplitude threshold	3300:1 Thresholds 1 Amp 1 2 T-hold1 3 T-hold4 4 Amp2 5 T-hold2	-23.0 -12 -13 -29.0 10
	6 Amp3 7 T-hold3 HELP SAVE	HOME

2. Open the desired amplitude threshold for editing.

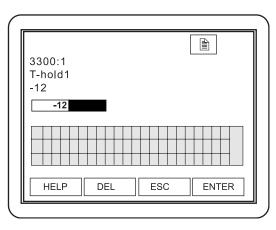

- 3. Type the desired threshold value and click the ENTER button.
- 4. Click the SAVE button to store the new value in the transmitter database.

375_DISPLAY_SET_THRESHOLDS.EPS

Logging Measurement Data

To start logging do the following:

1. Click the Monitor icon in the RCT workspace or choose the *Monitor* option from the *View* menu.

Variables Product Level Product Distance Total Volume Internal Temp Interface Distance Digital Counter Interface Level Amplitude Peak 1 Amplitude Peak 2
Amplitude Peak 3
Upper Product Thickness Log File Time Indication Image:
Start monitoring Log interval Counter

2. Choose the desired variables to be monitored and click the Start Monitor



Saving the log to disk

- 1. Choose the desired variables to be monitored.
- 2. Click the Log interval button ____ and enter a time interval. For example, type 10 if you want data to be logged every tenth second.
- 3. Click the Counter button and enter the maximum number of files to be stored. The Counter is used to limit the amount of data stored on the hard disk. Each time the maximum number of entries in a log file is reached, the current log file is saved and a new file is created. This procedure continues up to the maximum number of files given by the Counter value. The file size is limited to 60,000 entries which can easily be handled by spreadsheet programs like MS Excel.
- 4. Select the desired options for Timer, Time and Date. By selecting a check box the corresponding time indication is stored for each log entry in the log file.
- 5. Click the Start disk logging 👌 button.
- 6. Choose a destination folder and enter a file name.

00809-0100-4811, Rev CA February 2006

Saving the Transmitter Configuration

The Radar Configuration Tool offers different methods to save the current transmitter configuration:

- Save only the configuration specified in the Setup window.
- Use the more extensive function in the Memory Map window.

You can use a stored configuration file as a backup of the current configuration, or it can be distributed for service purposes.

To save the current transmitter setup do the following:

1. Click the Setup icon in the RCT workspace or choose the *Setup* option from the *View* menu to open the Setup window.

	Setup Info Basics Dutput Tank Config Volum	
	Variable Units meter Length Units meter Volume Units cubic meter Temp Units *C	Optional Parameters Message TR2 Tag
Save Setup —	Open Setup Save Setup BeceivePage Receive <u>A</u> ll Send Page Send All	Descriptor Day 22 Month 2 2 Control Co
	<u>R</u> eceive Page <u>S</u> end Page	

2. Click the right mouse button and choose the **Receive All** option, or

from the Setup menu choose the Receive All option.

Alternatively, you can use the Receive Page option on each individual page.

NOTE!

All pages must be received before the setup can be saved.

3. Click the right mouse button and choose the Save Setup option.


	Save Setup	File				? ×	
	Save jn:		-	Ē	Ċ		
	BIN Old Backup TestSetup	⊾stp					RCT-SAVESETUPFILE
File name ——	File <u>n</u> ame:	Setup_T1.stp	_			<u>S</u> ave	/ESI
	Save as <u>t</u> ype:	Setup files (*.stp)		•		Cancel	SA/
		Dpen as read-only					RCT

- 4. Choose a destination folder and enter a file name.
- 5. Click the Save button.

RCT-SETUP_BASICS_SAVESETUP

To load a setup

1. Click the Setup icon in the RCT workspace or choose the *Setup* option from the *File* menu.

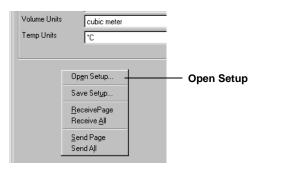

- In the Setup window click the right mouse button and choose the Open Setup option, or from the File menu choose the Open Setup option.
- 3. Open the source folder and select the desired setup file.
- 4. Click the **Open** button.


Memory Map


The Memory Map window lets you view the current transmitter database registers. It is also possible to save the current database for backup or service purposes, and it is also possible to download a backup database to the transmitter. To save configuration data in the Memory Map window:

- 1. Start the RCT program.
- Choose the View>Memory option, or click the Memory Map icon in the RCT workspace (Advanced section at the left side of the workspace window).
- 3. Choose the All EE option from the drop-down list.
- 4. Click the Receive button. (It may take a few minutes to read the database).
- 5. Click the right mouse button and choose the Save Memory As option.
- 6. Type the desired file name and click the OK button. Now the current database is stored.

See the Online Help in RCT for further information on how to open a saved database and how to download a database to the transmitter.

Removing the Transmitter Head

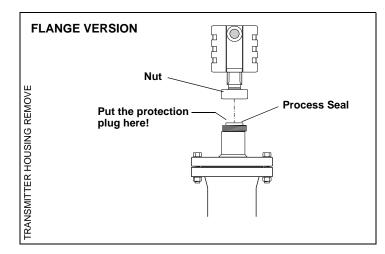

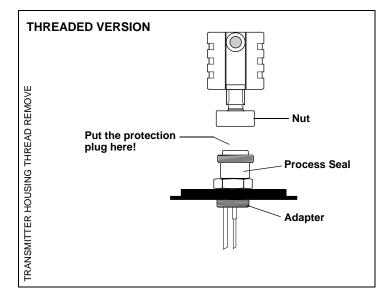


- 1. Loosen the nut that connects the transmitter housing to the Process Seal.
- 2. Carefully lift the transmitter head.
- 3. Make sure that the upper surface of the Process Seal is clean and the spring-loaded pin at the center of the Process Seal is properly inserted (the pin should move back when pushed into the hole).
- 4. Attach the protection plug to the Process Seal.

NOTE

Do not remove the Process Seal from the adapter!

Changing the Probe

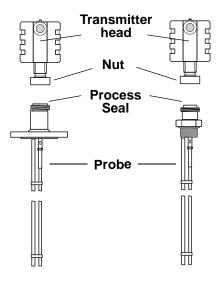

PROBE CHANGE FL_BA/PROBE CHANGE THREAD_BA

- 1. Loosen the nut.
- Remove the transmitter head from the old probe.
 - 3. On the new probe, make sure that the protection plug is removed and the upper surface of the Process Seal is clean. Also make sure that the spring-loaded pin at the center of the Process Seal is properly inserted.
 - 4. Mount the transmitter head on the new probe.
 - 5. Fasten the nut again.
 - If the new probe is not of the same type as the old one, update the transmitter configuration by setting the Probe Type parameter to the appropriate value: HART Fast Key sequence [1, 3, 2, 3], or

RCT Setup/Tank Config.

- 7. Measure the probe length and enter the measured value: HART Fast Key sequence [1, 3, 2, 2], or
 - RCT Setup/Tank Config.
- 8. Verify that the transmitter is calibrated.

NOTE

Flexible and Rigid probes require different radar electronics and can not be used with the same transmitter head.

DIAGNOSTIC MESSAGES

Troubleshooting

If there is a malfunction despite the absence of diagnostic messages, see Table 6-1 for information on possible causes.

Table 6-1. Troubleshooting chart

Symptom	Possible cause	Action
No HART communication.	 COM Port configuration does not match the connected COM Port. Cables may be disconnected. Wrong HART address is used. Hardware failure. 	 Check that correct COM Port is selected in the HART server (see "Specifying the COM Port" on page 4-14. Check wiring diagram. Verify that the 250 Ohm resistor is in the loop. Check cables. Make sure that correct HART short address is used. Try address=0. Check Analog Output current value to verify that transmitter hardware works.
Analog Out is set in Alarm.		Use the command "Read Gauge Status" in order to check active errors.
Both P2 and P3 are detected but Interface Level is reported as Not A Number (NAN) in the waveform plot.	Measurement Mode is set to "Level Only".	Set Measurement Mode to "Level and Interface" (see "Basic Configuration" on page 4-9).
Both Level and Interface Level are reported as NAN.	Probe is not connected.	Use the command "Read Gauge Status" and check if error "Probe Failure" is active. If this is the case, check the probe connection.
Both P2 and P3 are detected but the interface level is equal to the product Level.	P3 is identified as a double bounce.P2 and P3 are very close.	Adjust thresholds T2 and T3, see "Amplitude Threshold Settings" on page 6-13 for more information.
P2 is detected but Level is incorrectly reported as Full or Empty.		 Use the command "Read Gauge Status" and check if the warning "Probe Immersed" is active. If this is the case check that: the transmitter is configured with correct probe type, the reference pulse (P1) is below amplitude threshold T4. If not, adjust T4 to an appropriate value.
The reference pulse is not detected.	 The tank is full. The transmitter is configured with wrong probe type. Amplitude Threshold T1 is not correct. 	 Check the product level. Check that correct probe type is configured. Check Amplitude Threshold T1.
Level accuracy seems off.	Configuration error.	 Check the Reference Gauge Height parameter. Check status information and diagnostic information.
Integral display does not work.		Check the display configuration.Check loop power.Check Display connection.

Rosemount 3300 Series

Errors

Table 6-2 is a list of diagnostic messages that may be displayed on the Integral Display, on the 375 Field Communicator, in AMS Suite or by the Radar Configuration Tools (RCT) software. Errors normally result in Analog Output alarm.

Errors are indicated in RCT by the message "Transmitter malfunction":

Level Pulse Not Found Volume Computation Error Probe Failure FpromCheckSum = 27956		MALFUNCTION
J Configuration Changed	Transmitter Malfunction – Error indication	MITTER
3302 Contact Radar found; Tag is ' '		TRANSN

To see the error message do one of the following:

- Click the Read Gauge Status icon RCT workspace.
- 1. Open the Advanced section in the RCT workspace Project Bar and click the Device Commands icon,

or choose the Device Commands option from the View menu. 2. Open the folder named Diag and double-click the Read Gauge Status option.

Table 6-2. Error messages.

Message	Description	Action
Invalid configuration. LCD error code: CNFIG.	At least one configuration parameter is outside allowed range. NOTE: the default values are used until the problem is solved.	 Load default database and restart the transmitter. Contact Saab Rosemount service department if the problem persists.
RAM failure was detected during startup test. LCD error code: 00001.	The transmitter performs an immediate reset.	Contact Rosemount service department.
FPROM failure was detected during startup test.	The transmitter performs an immediate reset.	Contact Rosemount service department.
Waveform acquisition failure. LCD error code: 00006.	This error is probably caused by hardware failure.	Contact Rosemount service department.
EEPROM factory checksum. LCD error code: 00007.	Checksum error in the factory configuration parameters. Can be caused by power failure during configuration or by hardware error. NOTE: the default values are used until the problem is solved.	Contact Rosemount service department.
EEprom user checksum error. LCD error code: 00008.	Caused by error in the User Configuration parameters. Can be caused by power failure during configuration or by hardware error. NOTE: the default values are used until the problem is solved	 Load default database and restart the transmitter. Contact Saab Rosemount service department if the problem persists.
Software error. LCD error code: 00010.		Contact Rosemount service department.
Probe failure. LCD error code: 00013.	Probe is not detected.	Check that the probe is correctly mounted (see "Changing the Probe" on page 6-20).

00809-0100-4811, Rev CA February 2006

Warnings

Table 6-3 is a list of diagnostic messages that may be displayed on the Integral Display, on the Model 375 Field Communicator or by the Radar Configuration Tools (RCT) software. Warnings are less serious than errors and in most cases do not result in Analog Output alarms.

Warnings are indicated by a message at the bottom of the RCT workspace. To see the warning message do one of the following:

- Click the Read Gauge Status icon RCT workspace.
- 1. Open the Advanced section in the RCT workspace Project Bar and click the Device Commands icon, or

choose the Device Commands option from the View menu. 2. Open the folder named Diag and double-click the Read Gauge Status option.

Table 6-3. Warning messages.

Message	Description	Action
Reference pulse not found.	 Possible cause: Reference pulse immersed in high dielectric liquid. Wrong threshold level T1. Hardware error. 	View the waveform plot and check amplitude threshold T1.Check that the tank is not overfull.
No level pulse is found.	Possible cause:Wrong threshold level T2.Liquid level in Dead Zone or below probe end.	 View the waveform plot and check amplitude threshold T2.
Interface pulse not found.	 Possible cause: Wrong threshold level T3. Interface level too close to the upper product level. No level pulse detected. 	 View the waveform plot and check amplitude threshold T3.
Internal temperature out of range.	-40 °C <internal td="" temperature<85="" °c.<=""><td>Contact Rosemount service department.</td></internal>	Contact Rosemount service department.
Volume computation warning.	 Volume configuration error. Strapping table error. 	 Check that correct tank type is selected for volume configuration. Check that tank dimensions for volume are correct. If strapping table is used, check the level vs. volume points.
Immersed probe.	 Wrong threshold level T4. Reference pulse immersed in liquid. 	View the waveform plot and check amplitude threshold T4.

Reference Manual

00809-0100-4811, Rev CA February 2006

Rosemount 3300 Series

Appendix A Reference Data

Specifications	page A-1
Dimensional drawings	page A-7
Ordering Information	page A-12
Spare Parts	page A-18

SPECIFICATIONS

General	
Product	Rosemount Series 3300 Guided Wave Radar Level and Interface Transmitter; Model 3301 for Level (Interface available for fully immersed probe). Model 3302 for Level and Interface.
Measurement principle	Time Domain Reflectometry (TDR).
Reference Conditions	Twin Lead probe, 77 °F (25 °C) water
Microwave Output Power	Nominal 50 µW, Max. 2 mW.
CE-mark	Complies with applicable directives (R&TTE, EMC, ATEX)
Start-up time	< 10 s
Display / Configuration	
Integral Display	The integral display toggles between the following variables: level, distance, volume, internal temperature, interface distance, interface level, peak amplitudes, interface thickness, percent of range, analog current output. Note! The Display can not be used for configuration purposes.
Output Units	For Level, Interface and Distance: ft, inch, m, cm or mm. For Volume: ft ³ , inch ³ , US gals, Imp gals, barrels, yd ³ , m ³ or liters.
Output Variables	Model 3301: Level, Distance (to product surface) and Volume. With fully immersed probe: Interface Level and Interface Distance. Model 3302: Level, Distance (to product surface), Volume, Interface Level, Interface Distance and Upper Product Thickness.
HART [®] device for remote configuration	Rosemount hand-held communicator Model 375.
PC for remote configuration	Radar Configuration Tools software package. Rosemount AMS software.
Damping	0-60 s (10 s, default value)
Electric	
Power supply	Loop-powered (2-wire), 11 - 42 VDC (11 -30 VDC in IS applications, 16-42 VDC in Explosion-proof/Flame-proof applications).
Output	Analog 4 - 20 mA, HART.
Signal on alarm	Standard: Low=3.75 mA. High=21.75 mA. Namur NE 43: Low=3.60 mA. High=22.50 mA.
Saturation levels	Standard: Low=3.9 mA. High=20.8 mA. Namur NE 43: Low=3.8 mA. High=20.5 mA.
IS parameters	U _i = 30 V,I _i = 130 mA, P _i = 1 W, L _i =0, C _i =0.
Cable entry	¹ / ₂ - 14 NPT for cable glands or conduit entries. Optional: M20 x 1.5 conduit/cable adapter or PG 13.5 conduit/cable adapter.
Output Cabling	Twisted shielded pairs, 18-12 AWG.





Rosemount 3300 Series

Mechanical	
Probes	Coaxial: 1.3 ft (0.4 m) to 19.7 ft (6 m).
110063	Rigid Twin Lead: 1.3 ft (0.4 m) to 9.8 ft (3 m).
	Flexible Twin Lead: 3.3 ft (1 m) to 77.1 ft (23.5 m).
	Rigid Single Lead: 1.3 ft (0.4 m) to 9.8 ft (3 m).
	Flexible Single Lead: 3.3 ft (1 m) to 77.1 ft (23.5 m).
	For further information see "Probe Selection Guide" on page 2-6.
Tensile strength	Flexible Single Lead probe: 2698 lb (12 kN).
	Flexible Twin Lead probe: 2023 lb (9 kN).
Collapse load	Flexible Single Lead probe: 3597 lb (16 kN).
Sideway capacity	Coaxial probe: 73.7 ft lbf, 3.7 lb at 19.7 ft (100 Nm, 1.67 kg at 6 m).
	Rigid Twin Lead: 2.2 ft lbf, 0.22 lb at 9.8 ft (3 Nm, 0.1 kg at 3 m).
	Rigid Single Lead: 4.4 ft lbf, 0.44 lb at 9.8 ft (6 Nm, 0.2 kg at 3 m).
Material exposed to tank atmosphere	• 316/316L SST (EN 1.4404), PTFE, PFA ⁽¹⁾ and O-ring materials (model code 1)
	 Hastelloy[®] C276 (UNS N10276), PTFE, PFA⁽¹⁾ and O-ring materials (model code 2) Monel[®] 400 (UNS N04400), Teflon (PTFE, PFA) and O-ring materials (model code 3)
	• PTFE ⁽²⁾ (model code 7)
	• PTFE ⁽²⁾ , 316L SST (EN 1.4404) and O-ring materials (model code 8)
	• 316L SST (EN 1.4404), Ceramics (Al2O3), Graphite, (HTHP probe, model code H)
	• 316L SST (EN 1.4404), Ceramics (Al2O3), Graphite, PFA (HP probe, model code P)
	(See "Ordering Information" on page A-12).
Dimensions	See "Dimensional drawings" on page A-7.
Probe angle	0 to 90 degrees from vertical axis.
Housing / Enclosure	Polyurethane-covered Aluminium.
Flanges, Threads	See "Ordering Information" on page A-12.
Height above flange	See "Dimensional drawings" on page A-7.
Environment	
Ambient temperature	-40 °F to +185 °F (-40 °C to +85 °C), depends on approval (see App. B).
	For the LCD display the temperature range is -4 °F to +185 °F (-20 °C to +85 °C).
	See temperature diagrams on page A-6.
Storage temperature	-40 °F to + 176 °F (-40 °C to +80 °C).
Process temperature ⁽³⁾	Standard: -40 °F to +302 °F (-40 °C to +150 °C).
	HTHP: -76 °F to +752 °F (-60 °C to +400 °C).
	HP: -76 °F to +392 °F (-60 °C to +200 °C).
(2)	See temperature and pressure diagrams on page A-4.
Process pressure ⁽³⁾	Standard ⁽⁴⁾ : Full vacuum to 580 psig (-1 to 40 Bar).
	HTHP: Full vacuum to 5000 psig (-1 to 345 Bar). HP: Full vacuum to 5000 psig (-1 to 345 Bar).
	See temperature and pressure diagrams on page A-4.
Humidity	0 - 100 % relative humidity
Ingress protection	NEMA 4X, IP 66.
Telecommunication (FCC and R&TTE)	FCC part 15 (1998) subpart B and R&TTE (EU directive 97/23/EC). Considered to be
releconfindincation (FCC and R&TTE)	FCC part 15 (1996) subpart b and R&TTE (ED directive 97/25/EC). Considered to be
	an unintentional radiator under the Part 15 rules
Factory sealed	an unintentional radiator under the Part 15 rules. Yes.
Factory sealed Vibration resistance	Yes.
Vibration resistance	Yes. IEC 721-3-4 Class 4M4.
	Yes. IEC 721-3-4 Class 4M4. Emission and Immunity: meets EN 61326-1 (1997) and amendment A1, class A
Vibration resistance	Yes. IEC 721-3-4 Class 4M4.
Vibration resistance	Yes. IEC 721-3-4 Class 4M4. Emission and Immunity: meets EN 61326-1 (1997) and amendment A1, class A equipment intended for use in industrial locations if installed in metallic vessels or still-pipes. When rigid/flexible single and twin lead probes are installed in non-metallic or open
Vibration resistance Electromagnetic compatibility	Yes. IEC 721-3-4 Class 4M4. Emission and Immunity: meets EN 61326-1 (1997) and amendment A1, class A equipment intended for use in industrial locations if installed in metallic vessels or still-pipes.
Vibration resistance	Yes. IEC 721-3-4 Class 4M4. Emission and Immunity: meets EN 61326-1 (1997) and amendment A1, class A equipment intended for use in industrial locations if installed in metallic vessels or still-pipes. When rigid/flexible single and twin lead probes are installed in non-metallic or open
Vibration resistance Electromagnetic compatibility	Yes. IEC 721-3-4 Class 4M4. Emission and Immunity: meets EN 61326-1 (1997) and amendment A1, class A equipment intended for use in industrial locations if installed in metallic vessels or still-pipes. When rigid/flexible single and twin lead probes are installed in non-metallic or open vessels, influence of strong electromagnetic fields might affect measurements.
Vibration resistance Electromagnetic compatibility Built-in Lightning Protection	Yes. IEC 721-3-4 Class 4M4. Emission and Immunity: meets EN 61326-1 (1997) and amendment A1, class A equipment intended for use in industrial locations if installed in metallic vessels or still-pipes. When rigid/flexible single and twin lead probes are installed in non-metallic or open vessels, influence of strong electromagnetic fields might affect measurements. Meets EN 61000-4-4 Severity Level 4 and EN 61000-4-5 Severity Level 4.

Measuring Performance	
Reference accuracy	\pm 0.2 inch (5 mm) for probes \leq 16.4 ft (5 m).
	\pm 0.1% of measured distance for probes >16.4 ft (5 m).
Repeatability	± 0.04 inch (1 mm).
Ambient Temperature Effect	Less than 0.01 % of measured distance per °C.
Update interval	1 per second
Measuring range	16 inch (0.4 m) to 77 ft (23.5 m).

(1) PFA is a fluoropolymer with properties similar to PTFE.
 (2) 1 mm PTFE cover.
 (3) Final rating may be lower depending on flange and O-ring selection.
 (4) For PTFE Covered Probe and Flange (model code 7) max pressure is 232 psig (16 Bar).

Process Temperature and Pressure Rating

The tank connection consists of tank seal and a flange (EN, ANSI, Fisher or Masoneilan) or NPT or BSP/G threads (1 or 1.5 in. depending on probe type, see "Ordering Information".).


Flange dimensions follows standard ANSI B 16.5 and EN 1092-1 type 05 (DIN 2527 type B) blind flanges if the transmitter is ordered with a flange.

The tables below show temperature and pressure ratings for the following tank connection types:

- Standard (Std)
- High Temperature and High Pressure (HTHP)
- High Pressure (HP)

NOTE!

Final rating may be lower depending on flange and o-ring selection.

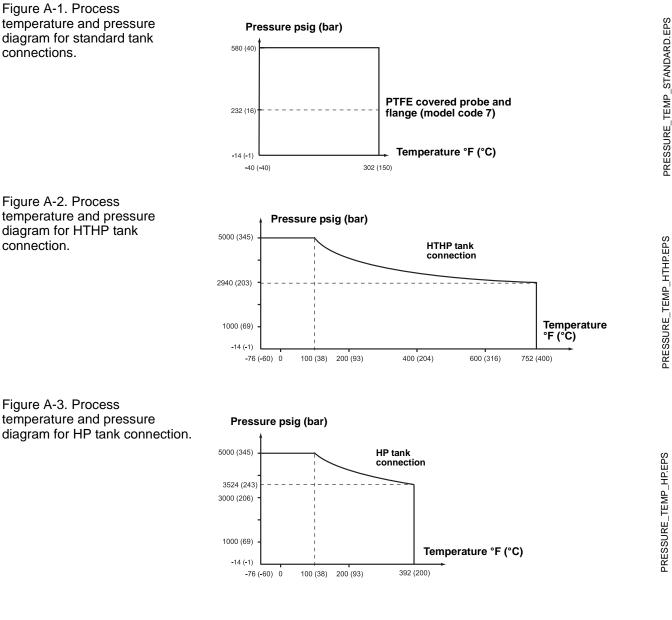

A-4

Table A-1. Temperature range for different tank seal material.

The HP and HTHP versions have a ceramic tank seal, and graphite gaskets - no O-rings are used.

The difference between the HP and HTHP versions is spacer material; PFA for HP, and ceramics for HTHP. Ceramic spacers allow for usage in applications with higher temperature.

The following table gives the temperature ranges for tank seal with different O-ring material (applicable for the Standard Tank Connection):

Tank Seal with different Min. Temperature Max. Temperature O-ring material °F (°C) in air °F (°C) in air 302 (150) Viton 5 (-15) Ethylene Propylene (EPDM) -40 (-40) 266 (130) Kalrez 6375 14 (-10) 302 (150) Buna-N -31 (-35) 230 (110)

Flange connection rating

Flange strength calculations are made with the following conditions:

	Bolting material	Gasket		Flange material	Hub material
		Standard/HTHP	HP/HTHP		
ANSI	Stainless steel SA193 B8M C1.2	Soft (1a) with min. thickness 1.6 mm.	Spiral wound gasket with nonmetallic filler (1b)	Stainless steel A182 Gr. F316L and	Stainless steel A479M 316L or
EN	EN 1515-1/-2 group 13E0, A4-70.	Soft (EN 1514-1) with min. thickness 1.6 mm.	Spiral wound gasket with nonmetallic filler (EN 1514-2)	EN 10222-5-1.4404.	EN 10272-1.4404.

Calculations show that the following rating applies:

ANSI

According to ANSI B16.5 Table 2-2.3.

Standard: max. 302 °F/580 psig (150 °C/40 Bar).

HP/HTHP: Class 2500.

EN

According to EN 1092-1 Table 18, material group 13E0. Standard: maximum 302 °F/580 psig (150 °C/40 Bar). HP/HTHP: PN 320.


Rosemount 3300 Series

Ambient Temperature

When the Rosemount 3300 is installed in high temperature applications, it is important that the maximum ambient temperature is considered. Tank insulation should not exceed 4 inches (10 cm).

The diagram below shows the maximum ambient temperature vs. process temperature:

Figure A-4. Maximum ambient temperature vs. process temperature.

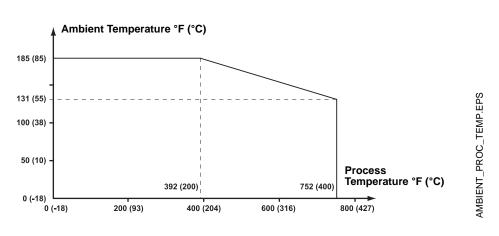


NOTE!

Maximum ambient temperature also depends on hazardous locations certifications.

DIMENSIONAL DRAWINGS

Figure A-5. Rigid Twin Lead

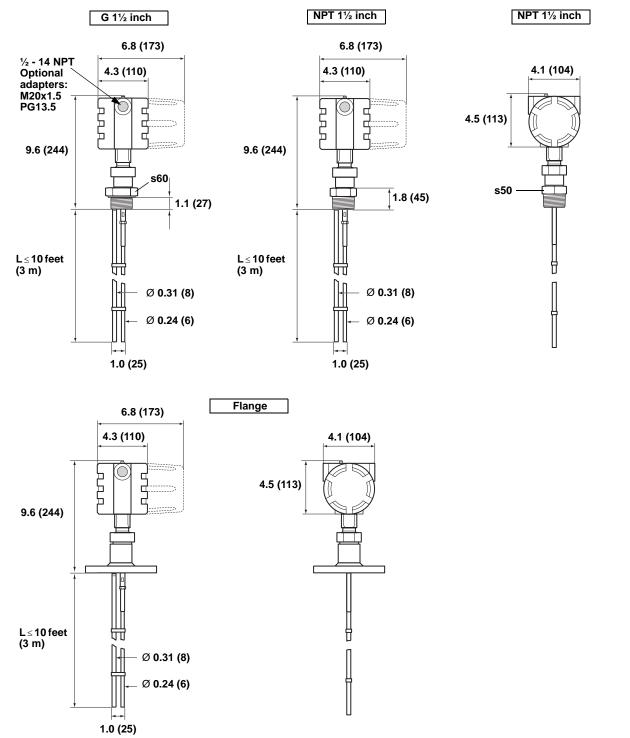


Dimensions are in inches (millimeter).

RIGID_TWIN_LEAD.EPS

TWIN-LEAD-FLANGE_CA.EPS

Figure A-6. Flexible Twin Lead

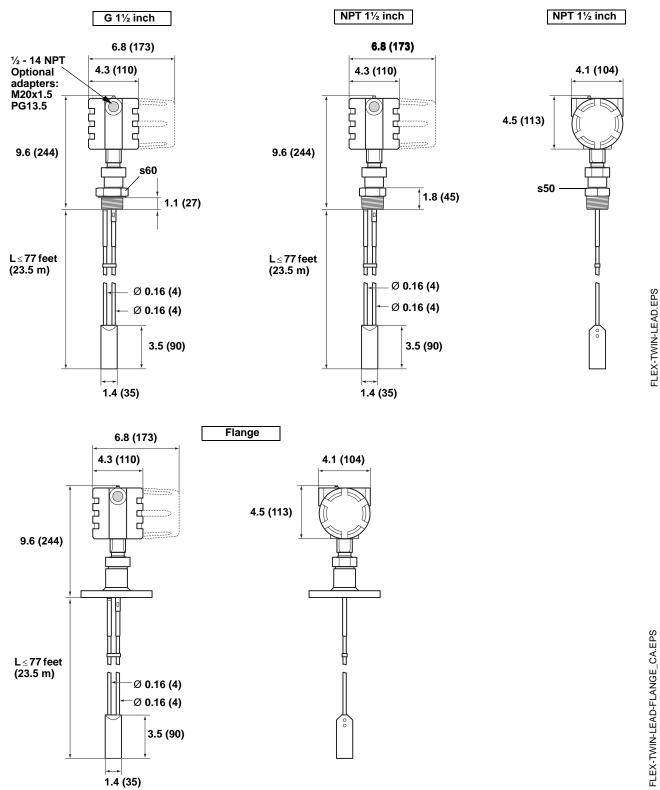


Dimensions are in inches (millimeter).

Reference Manual 00809-0100-4811, Rev CA


February 2006

Figure A-7. Coaxial

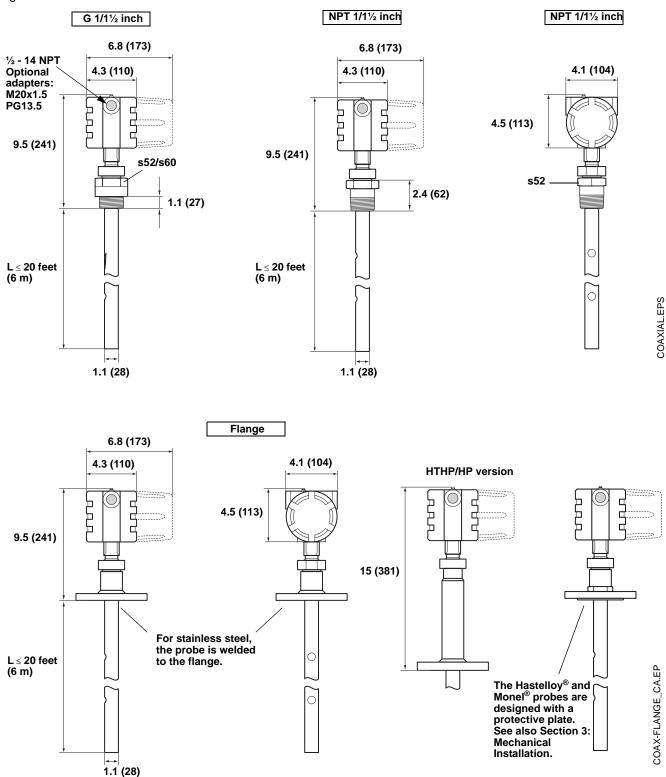


Dimensions are in inches (millimeter).




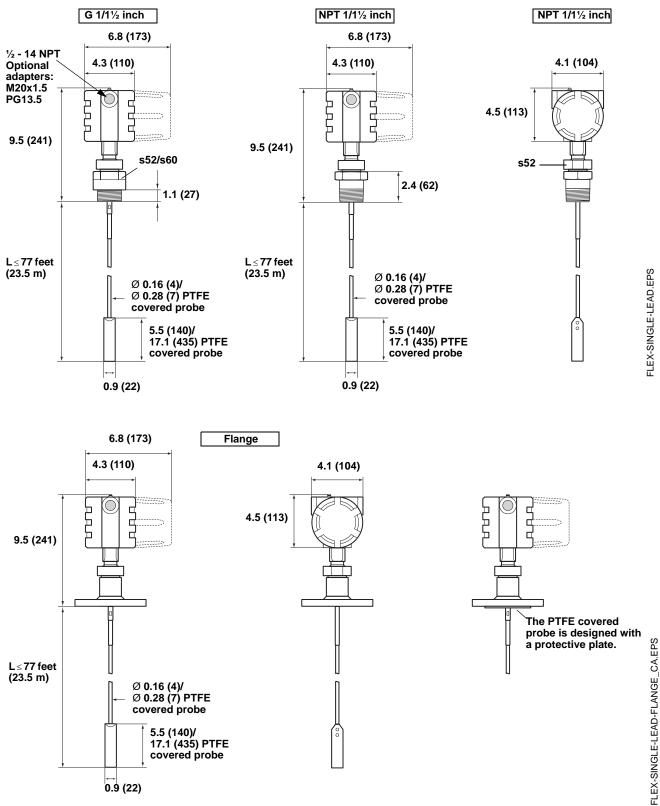

Dimensions are in inches (millimeter).

 Figure A-9. Rigid Single Lead

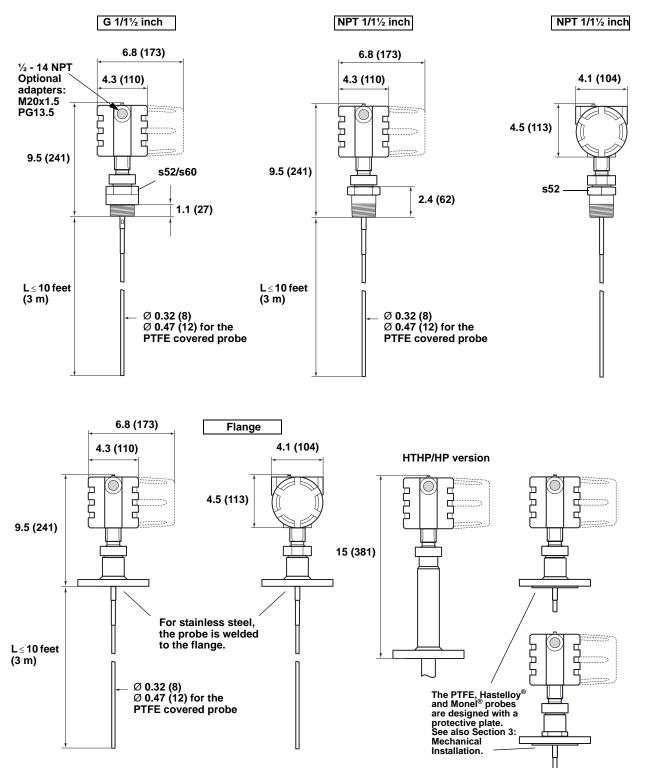



RIGID-SINGLE-LEAD.EPS

RIGID-SINGLE-LEAD-FLANGE.EPS

ORDERING INFORMATION

Model Code 3301, Level in Liquids

Model	Product Description				
3301	Guided Wave Radar Level Transmitter (interface available for fully immersed probe)				
Code	Signal Output				
Н	4-20 mA with HART [®] communication				
Code	Housing Material				
А	Polyurethane-covered Aluminum				
Code	Conduit / Cable Threads				
1	½ - 14 NPT				
2	M20 x 1.5 adapter				
3	PG 13.5 adapter				
Code	Operating Temperature and Pressure				
S	- 15 psig (-1bar) to 580 psig (40 bar) @ 30	2 °F (150 °C) ⁽¹⁾			
Н	High Temp / High Pressure ⁽²⁾ : 2940 psi @ 7 to ANSI Class 2500 (Probe Type 3A, 3B at		203 bar @ 400 °C and 345 bar @ 38 °C) according		
Р	High Pressure ⁽²⁾ . Max 500 °F (200 °C): 350 according to ANSI Class 2500 (Probe Type		2 100 °F (243 bar @ 200 °C and 345 bar @ 38 °C)		
Code	Material of Construction ⁽³⁾ : Process Col	nnection / Probe			
1	316 / 316 L SST (EN 1.4404)				
2	Hastelloy [®] C-276 (UNS N10276). Available	e for probe type 3A, 3B and 4A.			
3	Monel [®] 400 (UNS N04400). Available for p	probe type 3A, 3B and 4A			
7	PTFE covered probe and flange. Available	for probe type 4A and 5A, Flan	ged versions		
8	PTFE covered probe. Available for probe t	ype 4A and 5A			
Code	Sealing, O-ring Material (Consult factor	y for other o-ring materials)			
Ν	None ⁽⁴⁾				
V	Viton [®] fluoroelastomer				
E	Ethylene Propylene				
К	Kalrez [®] 6375 perfluoroelastomer				
В	Buna-N				
Code	Probe Type	Process Connection	Probe Lengths		
1A	Rigid Twin Lead	Flange or 1.5 inch Thread	Min: 1 ft 4 in. (0.4 m). Max: 9 ft 10 in. (3 m)		
2A	Flexible Twin Lead with weight	Flange or 1.5 inch Thread	Min: 3 ft 4 in. (1 m). Max: 77 ft 1 in. (23.5 m)		
ЗA	Coaxial	Flange, 1 or 1.5 inch Thread	Min: 1 ft 4 in. (0.4 m). Max: 19 ft 8 in. (6 m)		
3B	Coaxial, perforated for easier cleaning	Flange, 1 or 1.5 inch Thread	Min: 1 ft 4 in. (0.4 m). Max: 19 ft 8 in. (6 m)		
4A	Rigid Single Lead	Flange, 1 or 1.5 inch Thread	Min: 1 ft 4 in. (0.4 m). Max: 9 ft 10 in. (3 m)		
5A	Flexible Single Lead with weight	Flange, 1 or 1.5 inch Thread	Min: 3 ft 4 in. (1 m). Max: 77 ft 1 in. (23.5 m)		
5B	Flexible Single Lead with chuck ⁽⁵⁾	Flange, 1 or 1.5 inch Thread	Min: 3 ft 4 in. (1 m). Max: 77 ft 1 in. (23.5 m)		
Code	Probe Length Units				
E	English (feet, inch)				
М	Metric (meters, centimeters)				
Code	Total Probe Length ⁽⁶⁾ (feet/m)				
хх	0 - 77 ft or 0-23 m				
Code	Total Probe Length ⁽⁶⁾ (inch/cm)				
хх	0 - 11 inch or 0-99 cm				

Reference Manual

00809-0100-4811, Rev CA February 2006

Code	Process Connection - Size / Type (consult factory for other process connections)
ANSI Flanges	in 316L SST (ASME A182)
AA	2 inch ANSI, 150 lb
AB	2 inch ANSI, 300 lb
AC	2 inch ANSI, 600 lb (HTHP / HP units)
AD	2 inch ANSI, 900 lb (HTHP / HP units)
AE	2 inch ANSI, 1500 lb (HTHP / HP units)
BA	3 inch ANSI, 150 lb
BB	3 inch ANSI, 300 lb
BC	3 inch ANSI, 600 lb (HTHP / HP units)
BD	3 inch ANSI, 900 lb (HTHP / HP units)
BE	3 inch ANSI, 1500 lb (HTHP / HP units)
CA	4 inch ANSI, 150 lb
СВ	4 inch ANSI, 300 lb
CC	4 inch ANSI, 600 lb (HTHP / HP units)
CD	4 inch ANSI, 900 lb (HTHP / HP units)
CE	4 inch ANSI, 1500 lb (HTHP / HP units)
DA	6 inch ANSI, 150 lb
EN (DIN) Flan	ges in 316L SST (EN 1.4404)
НВ	DN50, PN40
HC	DN50, PN64 (HTHP / HP units)
HD	DN50, PN100 (HTHP / HP units)
IA	DN80, PN16
IB	DN80, PN40
IC	DN80, PN64 (HTHP / HP units)
ID	DN80, PN100 (HTHP / HP units)
JA	DN100, PN16
JB	DN100, PN40
JC	DN100, PN64 (HTHP / HP units)
JD	DN100, PN100 (HTHP / HP units)
KA	DN150, PN16
Threaded Cor	
RA	1 ½ inch NPT thread
RB	1 inch NPT thread (only available for probe type 3A, 3B, 4A, 5A, 5B)
SA	1 ½ inch BSP (G 1 ½ inch) thread
SB	1 inch BSP (G 1 inch) thread (only available for probe type 3A, 3B, 4A, 5A, 5B)
Proprietary FI	
TF	Fisher - proprietary 316 Stainless Steel (for 249B cages) Torque Tube Flange
тт	Fisher - proprietary 316 Stainless Steel (for 249C cages) Torque Tube Flange
ТМ	Masoneilan - proprietary 316 Stainless Steel Torque Tube Flange

 Process seal rating. Final rating depends on flange and O-ring selection. See "Process Temperature and Pressure Rating" on page A-4.
 Requires option None for sealing (no O-ring). Only for SST (Material of Construction model code 1).
 For other materials, consult factory.
 Requires High Temperature High Pressure (code H) or High Pressure (code P) probe.
 Extra length for fastening is added in factory.
 Probe weight included if applicable. Give the total probe length in feet and inches or meters and centimeters, depending on selected probe length unit. If tank height is unknown, please round up to an even length when ordering. Probes can be cut to exact length in field. Maximum allowable length is determined by process conditions.

	Hazardous Locations Certifications
NA	No Hazardous Locations Certifications
E1	ATEX Flameproof
E5	FM Explosion Proof
E6	CSA Explosion Proof
E7	IECEx Flameproof
l1	ATEX Intrinsic Safety
15	FM Intrinsic Safety and Non-Incendive
16	CSA Intrinsic Safety and Non-Incendive
17	IECEx Intrinsic Safety
KA	ATEX and CSA Flameproof/Explosionproof
KB	FM and CSA Explosionproof
KC	ATEX and FM Flameproof/Explosionproof
KD	ATEX and CSA Intrinsic Safety
KE	FM and CSA Intrinsic Safety
KF	ATEX and FM Intrinsic Safety
Code	Options
M1	Integral digital display
BT	Bar Code Tag with tag number and purchase order number
P1	Hydrostatic testing
N2	NACE material recommendation per MR 01-75 ⁽¹⁾
LS	Long stud 9.8 in (250 mm) for flex. single lead probe to prevent contact with wall/nozzle.Standard height is 3.9 in (100 mm)
CP	Centering disc PTFE ⁽²⁾⁽³⁾
CS	Centering disc SST ⁽²⁾⁽³⁾
T0	Terminal block without transient protection
Cx - S	pecial Configuration (Software)
C1	Factory configuration (CDS required with order)
C4	Namur alarm and saturation levels, high alarm
C5	Namur alarm and saturation levels, low alarm
C8	Low alarm ⁽⁴⁾ (standard Rosemount alarm and saturation levels)
	pecial Certs
Q4	Calibration Data Certification
Q8	Material Traceability Certification per EN 10204 3.1B ⁽⁵⁾
(1)	/alid for probe type 3A, 3B and 4A.

Valid for probe type 3A, 3B and 4A.
 Not available with PTFE covered probes.
 Valid for probe type 2A, 4A and 5A. Flanged connections only.
 The standard alarm setting is high.
 Option available for pressure retaining wetted parts.

Example Model String: 3301-H-A-1-S-1-V-1A-M-02-05-AA-I1-M1C1. E-02-05, means 2 ft and 5 inch probe length. M-02-05, means 2.05 m.

Model Code 3302, Level and Interface in Liquids

Model	Product Description				
3302	Guided Wave Radar Level and Interface Transmitter				
Code	Signal Output				
1	4-20 mA with HART [®] communication				
Code	Housing Material				
A	Polyurethane-covered Aluminum				
Code	Conduit / Cable Threads				
1	½ - 14 NPT				
2	M20 x 1.5 adapter				
3	PG 13.5 adapter				
Code	Operating Temperature and Pressure				
6	- 15 psig (-1bar) to 580 psig (40 bar) @	302 °F (150 °C) ⁽¹⁾			
4	High Temp / High Pressure ⁽²⁾ : 2940 psi (to ANSI Class 2500 (Probe Type 3A, 3E	⊉ 750 °F and 5000 psi @ 100 °F (₅ and 4A)	203 bar @ 400 °C and 345 bar @ 38 °C) accordir		
C	High Pressure ⁽²⁾ . Max 500 °F (200 °C): according to ANSI Class 2500 (Probe T	3500 psi @ 500 °F and 5000 psi @ ype 3A, 3B and 4A)	⊉ 100 °F (243 bar @ 200 °C and 345 bar @ 38 °0		
Code	Material of Construction ⁽³⁾ : Process (Connection / Probe			
	316 / 316 L SST (EN 1.4404)				
2	Hastelloy [®] C-276 (UNS N10276). Availa	ble for probe type 3B and 4A.			
	Monel [®] 400 (UNS N04400). Available fo	r probe type 3B and 4A			
	PTFE covered probe and flange. Availal	ole for probe type 4A, Flanged ver	rsion		
3	PTFE covered probe. Available for prob	e type 4A			
Code	Sealing, O-ring Material (Consult fact	ory for other o-ring materials)			
N	None ⁽⁴⁾				
/	Viton [®] fluoroelastomer				
Ξ	Ethylene Propylene				
<	Kalrez [®] 6375 perfluoroelastomer				
3	Buna-N				
Code	Probe Type	Process Connection	Probe Lengths		
A	Rigid Twin Lead	Flange or 1.5 in. Thread	Min: 1 ft 4 in. (0.4 m). Max: 9 ft 10 in. (3 m)		
A	Flexible Twin Lead with weight	Flange or 1.5 in. Thread	Min: 3 ft 4 in. (1 m). Max: 77 ft 1 in. (23.5 m)		
B	Coaxial for interface measurements	Flange, 1 or 1.5 in. Thread	Min: 1 ft 4 in. (0.4 m). Max: 19 ft 8 in. (6 m)		
A	Rigid Single Lead	Flange, 1 or 1.5 in. Thread	Min: 1 ft 4 in. (0.4 m). Max: 9 ft 10 in. (3 m)		
Code	Probe Length Units				
Ξ	English (feet, inch)				
Л	Metric (meters, centimeters)				
Code	Total Probe Length ⁽⁵⁾ (feet/m)				
x	0 - 77 ft or 0-23 m				
Code	Total Probe Length ⁽⁵⁾ (inch/cm)				
κx	0 - 11 inch or 0-99 cm				
 (2) Require (3) For othe (4) Require (5) Probe w 	s seal rating. Final rating depends on flange and O s option None for sealing (no O-ring). Only for SS er materials, consult factory. s High Temperature High Pressure (code H) or Hig yeight included if applicable. Give the total probe le ght is unknown, please round up to an even lengt	^C (Material of Construction model code of Pressure (code P) probe. ngth in feet and inches or meters and	1). centimeters, depending on selected probe length unit. If		

Probe weight included if applicable. Give the total probe length in feet and inches or meters and centimeters, depending on selected probe length unit. If tank height is unknown, please round up to an even length when ordering. Probes can be cut to exact length in field. Maximum allowable length is determined by process conditions.

Rosemount 3300 Series

Code	Process Connection - Size / Type (consult factory for other process connections)	
ANSI Flanges	in 316L SST (ASME A182)	
AA	2 inch ANSI, 150 lb	
AB	2 inch ANSI, 300 lb	
AC	2 inch ANSI, 600 lb (HTHP / HP units)	
AD	2 inch ANSI, 900 lb (HTHP / HP units)	
AE	2 inch ANSI, 1500 lb (HTHP / HP units)	
BA	3 inch ANSI, 150 lb	
BB	3 inch ANSI, 300 lb	
BC	3 inch ANSI, 600 lb (HTHP / HP units)	
BD	3 inch ANSI, 900 lb (HTHP / HP units)	
BE	3 inch ANSI, 1500 lb (HTHP / HP units)	
CA	4 inch ANSI, 150 lb	
СВ	4 inch ANSI, 300 lb	
CC	4 inch ANSI, 600 lb (HTHP / HP units)	
CD	4 inch ANSI, 900 lb (HTHP / HP units)	
CE	4 inch ANSI, 1500 lb (HTHP / HP units)	
DA	6 inch ANSI, 150 lb	
EN (DIN) Flan	ges in 316L SST (EN 1.4404)	
HB	DN50, PN40	
HC	DN50, PN64 (HTHP / HP units)	
HD	DN50, PN100 (HTHP / HP units)	
IA	DN80, PN16	
IB	DN80, PN40	
IC	DN80, PN64 (HTHP / HP units)	
ID	DN80, PN100 (HTHP / HP units)	
JA	DN100, PN16	
JB	DN100, PN40	
JC	DN100, PN64 (HTHP / HP units)	
JD	DN100, PN100 (HTHP / HP units)	
KA	DN150, PN16	
Threaded Co		
RA	1 ½ inch NPT thread	
RB	1 inch NPT thread (only available for probe type 3B and 4A)	
SA	1 ½ inch BSP (G 1 ½ inch) thread	
SB	1 inch BSP (G 1 inch) thread (only available for probe type 3B and 4A)	
Proprietary F		
TF	Fisher - proprietary 316 Stainless Steel (for cage 249B) Torque Tube Flange	
тт	Fisher - proprietary 316 Stainless Steel (for cage 249C) Torque Tube Flange	
ТМ	Masoneilan - proprietary 316 Stainless Steel Torque Tube Flange	

Reference Manual

00809-0100-4811, Rev CA February 2006

Rosemount 3300 Series

Code	Hazardous Locations Certifications
NA	No Hazardous Locations Certifications
E1	ATEX Flameproof
E5	FM Explosion Proof
E5 E6	
E0 E7	CSA Explosion Proof IECEx Flameproof
	•
11	ATEX Intrinsic Safety
15	FM Intrinsic Safety and Non-Incendive
16	CSA Intrinsic Safety and Non-Incendive
17	IECEx Intrinsic Safety
KA	ATEX and CSA Flameproof/Explosionproof
KB	FM and CSA Explosionproof
KC	ATEX and FM Flameproof/Explosionproof
KD	ATEX and CSA Intrinsic Safety
KE	FM and CSA Intrinsic Safety
KF	ATEX and FM Intrinsic Safety
Code	Options
M1	Integral digital display
BT	Bar Code Tag with tag number and purchase order number
P1	Hydrostatic testing
N2	NACE material recommendation per MR 01-75 ⁽¹⁾
CP	Centering disc PTFE ⁽²⁾
CS	Centering disc SST ⁽²⁾
то	Terminal block without transient protection
Cx - Special (Configuration (Software)
C1	Factory configuration (CDS required with order)
C4	Namur alarm and saturation levels, high alarm
C5	Namur alarm and saturation levels, low alarm
C8	Low alarm ⁽³⁾ (standard Rosemount alarm and saturation levels)
Qx - Special (Certs
Q4	Calibration Data Certification
Q8	Material Traceability Certification per EN 10204 3.1B ⁽⁴⁾

Valid for probe type 3B and 4A.
 Valid for probe type 2A, 4A and 5A. Flanged connections only.
 The standard alarm setting is high.
 Option available for pressure retaining wetted parts.

Example Model String: 3302-H-A-1-S-1-V-1A-M-02-05-AA-I1-M1C1. E-02-05 means 2 ft and 5 inch probe length. M-02-05 means 2.05 m.

SPARE PARTS

Spare parts list Transmitter head Model 3301/3302

Model	Product Description			
3301	Transmitter head Model 3301			
3302	Transmitter head Model 3302			
Code	Signal Output			
Н	4-20 mA with HART communication			
Code	Housing Material			
Α	Polyurethane-covered Aluminum			
Code	Conduit Threads/Cable Threads			
1	1/2 - 14 NPT			
2	M20x1.5 adapter			
3	PG 13.5 adapter			
Code	Operating Temperature and Pressu	Ire		
Ν	Not applicable			
Code	Material of Construction: Process	Connection/Probe		
0	Not applicable			
Code	Sealing, O-ring Material (Consult fa	actory for other o-ring materials)		
N	Not applicable			
Code	Probe Type	Applicable for Model	Allowable Process Connection	
9R	For rigid probes	3301 & 3302	Flange or 1.5 " Thread	
9F	For flexible probes	3301 & 3302	Flange or 1.5 " Thread	
Code	Probe Length Unit			
Ν	Not applicable			
Code	Total Probe Length (feet/m)			
00	Not applicable			
Code	Total Probe Length (inch/cm)			
00	Not applicable			
Code	Hazardous Locations Certifications	6		
NA	No hazardous Locations Certifications	3		
E1	ATEX Flame-proof			
E5	FM Explosion-proof			
E6	CSA Explosion-proof			
E7	IECEx Flame-proof			
11	ATEX Intrinsic Safety	-		
15 16	FM Intrinsic Safety and Non-Incendive CSA Intrinsic Safety and Non-Incendi			
16	IECEX Intrinsic Safety	VC		
KA	ATEX and CSA Flame-proof/Explosio	n-proof		
KB	FM and CSA Explosion-proof			
KC	ATEX and FM Flame-proof/Explosion	-proof		
KD	ATEX and CSA Intrinsic Safety			
KE	FM and CSA Intrinsic Safety			
KF	ATEX and FM Intrinsic Safety			

Code	Options
M1	Integral Digital Display
BT	Bar Code Tag
Т0	Terminal block without transient protection
Cx - Sp	ecial Configuration (Software)
C1	Factory configuration (CDS required with order)
C4	Namur alarm and saturation levels, high alarm
C5	Namur alarm and saturation levels, low alarm
C8	Low alarm ⁽¹⁾ (standard Rosemount alarm and saturation levels)
Cx - Sp	ecial Certs
Q4	Calibration Data Certification

(1) The standard alarm setting is high.

Spare parts list Probe Model 3301/3302

Model	Product Description				
3309	Spare probe				
Code	Signal Output				
Ν	Not applicable				
Code	Housing Material				
Ν	Not applicable				
Code	Conduit Threads/Cable Threads				
0	Not applicable				
Code	Operating Temperature and Pressure				
S	Standard: -15 psig (-1 Bar) to 580 psig (40 I	Bar) @ 302 °F (1	50 °C) ⁽¹⁾		
Н	High Temp / High Pressure				
Р	High Pressure				
Code	Material of Construction: Process Conne	ection/Probe			
1	316 / 316L SST (EN 1.4404), Teflon (PTFE)				
2	Hastelloy C276, Teflon (PTFE, PFA). Availa			-	
3	Monel 400, Teflon (PTFE, PFA). Available for			,	
7 8	PTFE Covered Probe and Flange valid for p PTFE Covered Probe and Flange valid for p		iged version only (with plate of	design)	
o Code	Sealing, O-ring Material (Consult factory				
Code	o-ring materials)	tor other			
V	Viton				
E	Ethylene Propylene				
K	Kalrez 6375				
В	Buna-N				
Ν	None (HP/HTHP)				
Code	Probe Type	Applicable for Model	Allowable Process Connection	Probe Length	
1A	Rigid Twin Lead.	3301 & 3302	Flange or 1.5 " Thread	Min: 1 ft 11 inch (0.6 m) Max: 9 ft 10 inch (3 m)	
2A	Flexible Twin Lead with weight	3301 & 3302	Flange or 1.5 " Thread		
2 \				Min: 3 ft 3 inch (1 m) Max: 65 ft 7 inch (20 m)	
3A	Coaxial	3301	Flange or 1", 1.5 " Thread	Max: 65 ft 7 inch (20 m) Min: 1 ft 3 inch (0.4 m)	
			0	Max: 65 ft 7 inch (20 m) Min: 1 ft 3 inch (0.4 m) Max: 19 ft 8 inch (6 m)	
3A 3B	Coaxial Coaxial perforated, for interface or easier cleaning	3301 3301 & 3302	Flange or 1", 1.5 " Thread Flange or 1", 1.5 " Thread	Max: 65 ft 7 inch (20 m) Min: 1 ft 3 inch (0.4 m)	
	Coaxial perforated, for interface or easier		0	Max: 65 ft 7 inch (20 m) Min: 1 ft 3 inch (0.4 m) Max: 19 ft 8 inch (6 m) Min: 1ft 3 inch (0.4 m)	
3B	Coaxial perforated, for interface or easier cleaning	3301 & 3302	Flange or 1", 1.5 " Thread	Max: 65 ft 7 inch (20 m) Min: 1 ft 3 inch (0.4 m) Max: 19 ft 8 inch (6 m) Min: 1 ft 3 inch (0.4 m) Max: 19 ft 8 inch (6 m) Min: 1 ft 11 inch (0.6 m)	
3B 4A	Coaxial perforated, for interface or easier cleaning Rigid Single Lead	3301 & 3302 3301	Flange or 1", 1.5 " Thread Flange or 1", 1.5 " Thread	Max: 65 ft 7 inch (20 m) Min: 1 ft 3 inch (0.4 m) Max: 19 ft 8 inch (6 m) Min: 1ft 3 inch (0.4 m) Max: 19 ft 8 inch (6 m) Min: 1 ft 11 inch (0.6 m) Max: 9 ft 10 inch (3 m) Min: 3 ft 3 inch (1 m)	
3B 4A 5A	Coaxial perforated, for interface or easier cleaning Rigid Single Lead Flexible Single Lead with weight d=4 mm	3301 & 3302 3301 3301	Flange or 1", 1.5 " Thread Flange or 1", 1.5 " Thread Flange or 1", 1.5 " Thread	Max: 65 ft 7 inch (20 m) Min: 1 ft 3 inch (0.4 m) Max: 19 ft 8 inch (6 m) Min: 1ft 3 inch (0.4 m) Max: 19 ft 8 inch (6 m) Min: 1 ft 11 inch (0.6 m) Max: 9 ft 10 inch (3 m) Min: 3 ft 3 inch (1 m) Max: 65 ft 7 inch (20 m) Min: 3 ft 3 inch (1 m)	
3B 4A 5A 5B	Coaxial perforated, for interface or easier cleaning Rigid Single Lead Flexible Single Lead with weight d=4 mm Flexible Single Lead with chuck d=4 mm ⁽²⁾	3301 & 3302 3301 3301	Flange or 1", 1.5 " Thread Flange or 1", 1.5 " Thread Flange or 1", 1.5 " Thread	Max: 65 ft 7 inch (20 m) Min: 1 ft 3 inch (0.4 m) Max: 19 ft 8 inch (6 m) Min: 1ft 3 inch (0.4 m) Max: 19 ft 8 inch (6 m) Min: 1 ft 11 inch (0.6 m) Max: 9 ft 10 inch (3 m) Min: 3 ft 3 inch (1 m) Max: 65 ft 7 inch (20 m) Min: 3 ft 3 inch (1 m)	
3B 4A 5A 5B Code	Coaxial perforated, for interface or easier cleaning Rigid Single Lead Flexible Single Lead with weight d=4 mm Flexible Single Lead with chuck d=4 mm ⁽²⁾ Probe Length Unit	3301 & 3302 3301 3301	Flange or 1", 1.5 " Thread Flange or 1", 1.5 " Thread Flange or 1", 1.5 " Thread	Max: 65 ft 7 inch (20 m) Min: 1 ft 3 inch (0.4 m) Max: 19 ft 8 inch (6 m) Min: 1ft 3 inch (0.4 m) Max: 19 ft 8 inch (6 m) Min: 1 ft 11 inch (0.6 m) Max: 9 ft 10 inch (3 m) Min: 3 ft 3 inch (1 m) Max: 65 ft 7 inch (20 m) Min: 3 ft 3 inch (1 m)	
3B 4A 5A 5B Code E	Coaxial perforated, for interface or easier cleaning Rigid Single Lead Flexible Single Lead with weight d=4 mm Flexible Single Lead with chuck d=4 mm ⁽²⁾ Probe Length Unit English (feet, inch)	3301 & 3302 3301 3301	Flange or 1", 1.5 " Thread Flange or 1", 1.5 " Thread Flange or 1", 1.5 " Thread	Max: 65 ft 7 inch (20 m) Min: 1 ft 3 inch (0.4 m) Max: 19 ft 8 inch (6 m) Min: 1ft 3 inch (0.4 m) Max: 19 ft 8 inch (6 m) Min: 1 ft 11 inch (0.6 m) Max: 9 ft 10 inch (3 m) Min: 3 ft 3 inch (1 m) Max: 65 ft 7 inch (20 m) Min: 3 ft 3 inch (1 m)	
3B 4A 5A 5B Code E M	Coaxial perforated, for interface or easier cleaning Rigid Single Lead Flexible Single Lead with weight d=4 mm Flexible Single Lead with chuck d=4 mm ⁽²⁾ Probe Length Unit English (feet, inch) Metric (meters, centimeters)	3301 & 3302 3301 3301	Flange or 1", 1.5 " Thread Flange or 1", 1.5 " Thread Flange or 1", 1.5 " Thread	Max: 65 ft 7 inch (20 m) Min: 1 ft 3 inch (0.4 m) Max: 19 ft 8 inch (6 m) Min: 1ft 3 inch (0.4 m) Max: 19 ft 8 inch (6 m) Min: 1 ft 11 inch (0.6 m) Max: 9 ft 10 inch (3 m) Min: 3 ft 3 inch (1 m) Max: 65 ft 7 inch (20 m) Min: 3 ft 3 inch (1 m)	
3B 4A 5A 5B Code E M Code	Coaxial perforated, for interface or easier cleaning Rigid Single Lead Flexible Single Lead with weight d=4 mm Flexible Single Lead with chuck d=4 mm ⁽²⁾ Probe Length Unit English (feet, inch) Metric (meters, centimeters) Total Probe Length ⁽³⁾ (feet/m)	3301 & 3302 3301 3301	Flange or 1", 1.5 " Thread Flange or 1", 1.5 " Thread Flange or 1", 1.5 " Thread	Max: 65 ft 7 inch (20 m) Min: 1 ft 3 inch (0.4 m) Max: 19 ft 8 inch (6 m) Min: 1ft 3 inch (0.4 m) Max: 19 ft 8 inch (6 m) Min: 1 ft 11 inch (0.6 m) Max: 9 ft 10 inch (3 m) Min: 3 ft 3 inch (1 m) Max: 65 ft 7 inch (20 m) Min: 3 ft 3 inch (1 m)	
3B 4A 5A 5B Code E M Code XX	Coaxial perforated, for interface or easier cleaning Rigid Single Lead Flexible Single Lead with weight d=4 mm Flexible Single Lead with chuck d=4 mm ⁽²⁾ Probe Length Unit English (feet, inch) Metric (meters, centimeters) Total Probe Length ⁽³⁾ (feet/m) 0-65 feet or 0-20 m	3301 & 3302 3301 3301	Flange or 1", 1.5 " Thread Flange or 1", 1.5 " Thread Flange or 1", 1.5 " Thread	Max: 65 ft 7 inch (20 m) Min: 1 ft 3 inch (0.4 m) Max: 19 ft 8 inch (6 m) Min: 1ft 3 inch (0.4 m) Max: 19 ft 8 inch (6 m) Min: 1 ft 11 inch (0.6 m) Max: 9 ft 10 inch (3 m) Min: 3 ft 3 inch (1 m) Max: 65 ft 7 inch (20 m) Min: 3 ft 3 inch (1 m)	

Process seal rating. Final rating depends on flange and O-ring selection, see "Process Temperature and Pressure Rating" on page A-4.
 Extra length for fastening is added in factory.
 Probe weight included if applicable. Give the total probe length in feet and inches or meters and centimeters, depending on selected probe length unit (see Model String Example). If tank height is unknown, please round up to an even length when ordering - probes can be cut to exact length in field. Maximum allowable length is determined by process conditions.

ANSI Flanges in ASME A182 Gr. F316L SST AA 2 inch ANSI, 150 lb AB 2 inch ANSI, 300 lb AC 2 inch ANSI, 600 lb (HTHP / HP) AD 2 inch ANSI, 900 lb (HTHP / HP) AE 2 inch ANSI, 1500 lb (HTHP / HP) AE 2 inch ANSI, 1500 lb (HTHP / HP) BA 3 inch ANSI, 1500 lb (HTHP / HP) BA 3 inch ANSI, 300 lb BC 3 inch ANSI, 600 lb (HTHP / HP) BD 3 inch ANSI, 900 lb (HTHP / HP) BE 3 inch ANSI, 1500 lb (HTHP / HP) BC 3 inch ANSI, 600 lb (HTHP / HP) CA 4 inch ANSI, 1500 lb (HTHP / HP) CB 4 inch ANSI, 150 lb CB 4 inch ANSI, 300 lb CC 4 inch ANSI, 600 lb (HTHP / HP)	
AA 2 inch ANSI, 150 lb AB 2 inch ANSI, 300 lb AC 2 inch ANSI, 600 lb (HTHP / HP) AD 2 inch ANSI, 900 lb (HTHP / HP) AE 2 inch ANSI, 1500 lb (HTHP / HP) BA 3 inch ANSI, 1500 lb (HTHP / HP) BB 3 inch ANSI, 300 lb BC 3 inch ANSI, 600 lb (HTHP / HP) BD 3 inch ANSI, 900 lb (HTHP / HP) BE 3 inch ANSI, 1500 lb (HTHP / HP) CA 4 inch ANSI, 1500 lb CB 4 inch ANSI, 300 lb	
AC 2 inch ANSI, 600 lb (HTHP / HP) AD 2 inch ANSI, 900 lb (HTHP / HP) AE 2 inch ANSI, 1500 lb (HTHP / HP) BA 3 inch ANSI, 150 lb BB 3 inch ANSI, 300 lb BC 3 inch ANSI, 600 lb (HTHP / HP) BD 3 inch ANSI, 900 lb (HTHP / HP) BE 3 inch ANSI, 900 lb (HTHP / HP) BE 3 inch ANSI, 1500 lb (HTHP / HP) CA 4 inch ANSI, 1500 lb CB 4 inch ANSI, 300 lb	
AD 2 inch ANSI, 900 lb (HTHP / HP) AE 2 inch ANSI, 1500 lb (HTHP / HP) BA 3 inch ANSI, 150 lb BB 3 inch ANSI, 300 lb BC 3 inch ANSI, 600 lb (HTHP / HP) BD 3 inch ANSI, 900 lb (HTHP / HP) BE 3 inch ANSI, 900 lb (HTHP / HP) BC 3 inch ANSI, 900 lb (HTHP / HP) BE 3 inch ANSI, 1500 lb (HTHP / HP) CA 4 inch ANSI, 150 lb CB 4 inch ANSI, 300 lb	
AE 2 inch ANSI, 1500 lb (HTHP / HP) BA 3 inch ANSI, 150 lb BB 3 inch ANSI, 300 lb BC 3 inch ANSI, 600 lb (HTHP / HP) BD 3 inch ANSI, 900 lb (HTHP / HP) BE 3 inch ANSI, 1500 lb (HTHP / HP) BE 3 inch ANSI, 1500 lb (HTHP / HP) CA 4 inch ANSI, 150 lb CB 4 inch ANSI, 300 lb	
BA 3 inch ANSI, 150 lb BB 3 inch ANSI, 300 lb BC 3 inch ANSI, 600 lb (HTHP / HP) BD 3 inch ANSI, 900 lb (HTHP / HP) BE 3 inch ANSI, 1500 lb (HTHP / HP) CA 4 inch ANSI, 150 lb CB 4 inch ANSI, 300 lb	
BB 3 inch ANSI, 300 lb BC 3 inch ANSI, 600 lb (HTHP / HP) BD 3 inch ANSI, 900 lb (HTHP / HP) BE 3 inch ANSI, 1500 lb (HTHP / HP) CA 4 inch ANSI, 150 lb CB 4 inch ANSI, 300 lb	
BC 3 inch ANSI, 600 lb (HTHP / HP) BD 3 inch ANSI, 900 lb (HTHP / HP) BE 3 inch ANSI, 1500 lb (HTHP / HP) CA 4 inch ANSI, 150 lb CB 4 inch ANSI, 300 lb	
BD 3 inch ANSI, 900 lb (HTHP / HP) BE 3 inch ANSI, 1500 lb (HTHP / HP) CA 4 inch ANSI, 150 lb CB 4 inch ANSI, 300 lb	
BE 3 inch ANSI, 1500 lb (HTHP / HP) CA 4 inch ANSI, 150 lb CB 4 inch ANSI, 300 lb	
CA 4 inch ANSI, 150 lb CB 4 inch ANSI, 300 lb	
CB 4 inch ANSI, 300 lb	
CC 4 inch ANSI, 600 lb (HTHP / HP)	
CD 4 inch ANSI, 900 lb (HTHP / HP)	
CE 4 inch ANSI, 1500 lb (HTHP / HP)	
DA 6 inch ANSI, 150 lb	
EN (DIN) Flanges in 10222-5-1.4404 SST	
HB DN50, PN40	
HC DN50, PN64 (HTHP / HP)	
HD DN50, PN100 (HTHP / HP)	
IA DN80, PN16	
IB DN80, PN40	
IC DN80, PN64	
ID DN80, PN100	
JA DN100, PN16	
JB DN100, PN40	
JC DN100, PN64 (HTHP / HP)	
JD DN100, PN100 (HTHP / HP)	
KA DN150, PN16	
Proprietary Flanges TF Fisher - Proprietary 316 Stainless Steel (for cage 249B) Torque Tube Flange. Outer dia	
TT Fisher - Proprietary 316 Stainless Steel (for cage 249B) forque Tube Flange. Outer dia TT Fisher - Proprietary 316 Stainless Steel (for cage 249C) Torque Tube Flange. Outer dia	
TM Masoneilan - Proprietary 316 Stainless Steel (for cage 249C) forque Tube Flange. Outer dia TM Masoneilan - Proprietary 316 Stainless Steel Torque Tube Flange. Outer diameter: 7.5 i	, , , , , , , , , , , , , , , , , , ,
Threaded	
RA 1.5 inch NPT thread	
RB 1 inch NPT thread (only available for probe type 3A, 3B, 4A, 5A, 5B)	
SA 11/2 inch BSP (G 11/2 inch) thread	
SB 1 inch BSP (G 1 inch) thread (only available for probe type 3A, 3B, 4A, 5A, 5B)	
Antenna with plate design for customer supplied flange	
PA Antenna with 2 in. / DN50 plate	
PB Antenna with 3 in. / DN80 plate	
PC Antenna with 4 in. / DN100 plate	
PD Antenna with 6 in. / DN150 plate	
PE Antenna with 8 in. / DN200 plate	

Code	Hazardous Locations Certifications
NA	Not applicable
Code	Options
P1	Hydrostatic testing
N2	NACE material recommendation per MR 01-75 ⁽¹⁾
LS	Long Stud 9.8 in. (250 mm) for Flexible Single Lead probe. Prevents the wire from contacting wall/nozzle. Standard height is 3.9 in. (100 mm).
CP	Centering disc PTFE ⁽²⁾
CS	Centering disc SST ⁽²⁾
Qx - Spe	cial Certs
Q8	Material Traceability Certification per EN 10204 3.1B ⁽³⁾

Valid for probe type 3A, 3B and 4A.
 Valid for probe type 2A, 4A and 5A. Flanged connections only.
 Option available for pressure retaining wetted parts

Spare parts list Other Spares and Accessories Model 3301/3302

Code	Process Connection - Size/Type (consult factory for other process connections)										
Display kit and cove											
03300-0670-0002	Integral Display Kit (including cover)										
03300-0670-0001	Integral Display Kit (does not include cover)										
03300-7002-0001	Integral Display Cover (long)										
03300-7002-0002	Electronics cover										
03300-7002-0003	O-ring for Electronics cover, Integral display cover (pkg of 12)										
Other spares											
03300-7003-0001	Transient Terminal block assembly										
03300-7001-0001	End piece kit Rigid Twin lead										
03300-7001-0002	Weight kit Flexible Twin lead										
03300-7001-0003											
Other accessories											
03300-7004-0001	Viatec HART Modem and cables (RS 232 connection)										
03300-7004-0002	Viatec HART Modem and cables (USB connection)										
00822-0100-4747	Rosemount Radar Configuration Tool (RCT)										
Cable glands											
03300-7000-0001	Cable Gland 8-15mm, 1/2NPT Mo Brass Nickel Plated, KV1										
03300-7000-0002	Cable Gland 4-8mm, 1/2NPT Brass, KVE7, EExd										
03300-7000-0003	Cable Gland 8-11mm, 1/2NPT Brass, KVE8, EExd										
03300-7000-0004	Cable Gland 6-12mm, 1/2 NPT Polyamide Grey										
Centering discs ⁽¹⁾											
03300-1655-0001	Kit, 2 Inch Centering Disk, SS, Rigid Single										
03300-1655-0002	Kit, 3 Inch Centering Disk, SS, Rigid Single										
03300-1655-0003	Kit, 4 Inch Centering Disk, SS, Rigid Single										
03300-1655-0004	Kit, 6 Inch Centering Disk, SS, Rigid Single										
03300-1655-0005	Kit, 8 Inch Centering Disk, SS, Rigid Single										
03300-1655-0006	Kit, 2 Inch Centering Disk, PTFE, Rigid Single										
03300-1655-0007	Kit, 3 Inch Centering Disk, PTFE, Rigid Single										
03300-1655-0008	Kit, 4 Inch Centering Disk, PTFE, Rigid Single										
03300-1655-0009	Kit, 6 Inch Centering Disk, PTFE, Rigid Single										
03300-1655-0010	Kit, 8 Inch Centering Disk, PTFE, Rigid Single										
03300-1655-1001	Kit, 2 Inch Centering Disk, SS, Single / Twin Flex Lead										
03300-1655-1002	Kit, 3 Inch Centering Disk, SS, Single / Twin Flex Lead										
03300-1655-1003	Kit, 4 Inch Centering Disk, SS, Single / Twin Flex Lead										
03300-1655-1004	Kit, 6 Inch Centering Disk, SS, Single / Twin Flex Lead										
03300-1655-1005	Kit, 8 Inch Centering Disk, SS, Single / Twin Flex Lead										
03300-1655-1006	Kit, 2 Inch Centering Disk, PTFE, Single / Twin Flex Lead										
03300-1655-1007	Kit, 3 Inch Centering Disk, PTFE, Single / Twin Flex Lead										
03300-1655-1008	Kit, 4 Inch Centering Disk, PTFE, Single / Twin Flex Lead										
03300-1655-1009	Kit, 6 Inch Centering Disk, PTFE, Single / Twin Flex Lead										
03300-1655-1010	Kit, 8 Inch Centering Disk, PTFE, Single / Twin Flex Lead										

(1) If a centering disc is required for a flanged probe the centering disc can be ordered with options CS or CP in the model code. If a centering disc is required for a threaded connection or as a spare part it should be ordered using the item numbers listed below.

Reference Manual

00809-0100-4811, Rev CA February 2006

Appendix B

Product Certifications

Safety Messages	. page B-1
EU Conformity	. page B-2
European ATEX Directive Information	. page B-3
Hazardous Locations Certifications	. page B-5
Combination of Approvals	. page B-8
Approval Drawings	. page B-11

SAFETY MESSAGES

Procedures and instructions in this section may require special precautions to ensure the safety of the personnel performing the operations. Information that raises potential safety issues is indicated by a warning symbol (\triangle). Please refer to the following safety messages before performing an operation preceded by this symbol.

AWARNING

Explosions could result in death or serious injury:

Verify that the operating environment of the gauge is consistent with the appropriate hazardous locations certifications.

Before connecting a HART-based communicator in an explosive atmosphere, make sure the instruments in the loop are installed in accordance with intrinsically safe or non-incendive field wiring practices.

Do not remove the gauge cover in explosive atmospheres when the circuit is alive.

Failure to follow safe installation and servicing guidelines could result in death or serious injury:

Make sure the transmitter is installed by qualified personnel and in accordance with applicable code of practice.

Use the equipment only as specified in this manual. Failure to do so may impair the protection provided by the equipment.

Do not perform any service other than those contained in this manual unless you are qualified.

A safety isolator such as a zener barrier is always is always needed for intrinsic safety.





Rosemount 3300 Series

AWARNING

High voltage that may be present on leads could cause electrical shock:

Avoid contact with leads and terminals.

Make sure the main power to the Radar Transmitter is off and the lines to any other external power source are disconnected or not powered while wiring the transmitter.

Probes covered with plastic and/or with plastic discs may generate an ignition-capable level of electrostatic charge under certain extreme conditions. Therefore, when the probe is used in a potentially explosive atmosphere, appropriate measures must be taken to prevent electrostatic discharge.

EU CONFORMITY


The EC declaration of conformity for all applicable European directives for this product can be found on the Rosemount website at www.rosemount.com. A hard copy may be obtained by contacting our local sales representative.

EUROPEAN ATEX DIRECTIVE INFORMATION

Intrinsic Safety

Figure B-1. Approval Label ATEX (BASEEFA) and Name Plate

The Rosemount 3300 Series Guided Wave Radar Level and Interface Transmitter that has the following label attached has been certified to comply with Directive 94/9/EC of the European Parliament and the Council as published in the Official Journal of the European Communities No. L 100/1 on 19-April-1994.

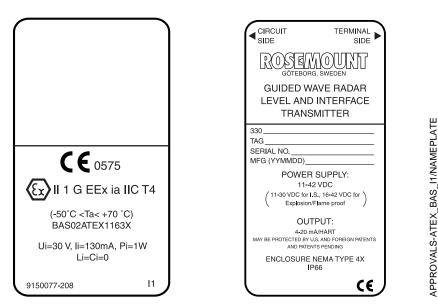

The following information is provided as part of the label of the transmitter:

- Name and address of the manufacturer (Rosemount).
- CE Conformity Marking



- Complete model number
- The serial number of the device
- Year of construction
- Marking for explosion protection:

€x **1** G

- EEx ia IIC T4 (-50 °C \leq Ta \leq +70 °C) Ui=30 V, Ii=130 mA, Pi=1 W, Ci=0, Li=0
- BASEEFA ATEX certificate number: BAS02ATEX1163X

Special Conditions for Safe Use (X):


The apparatus is not capable of withstanding the 500 V test as defined in clause 6.4.12 of EN 50020. This must be considered during installation.

When used in a potentially explosive atmosphere where the use of equipment-category 1 apparatus is required, appropriate measures must be taken to prevent electrostatic discharge.

Flameproof

The Rosemount 3300 Series Guided Wave Radar Level and Interface Transmitter that has the following label attached has been certified to comply with Directive 94/9/EC of the European Parliament and the Council as published in the Official Journal of the European Communities No. L 100/1 on 19-April-1994.

Figure B-2. Approval Label ATEX (KEMA) and Name Plate

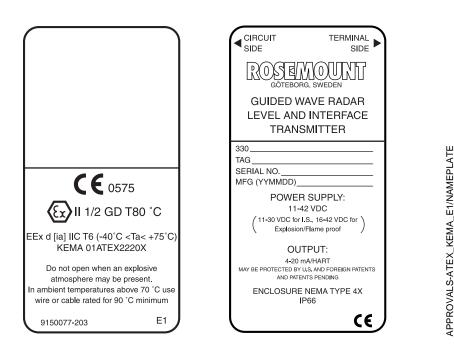

The following information is provided as part of the label of the transmitter:

- Name and address of the manufacturer (Rosemount).
- CE Conformity Marking



- Complete model number
- The serial number of the device
- Year of construction
- Marking for explosion protection:

(ξx)II 1/2 GD T80°C

- EEx d [ia] IIC T6 (-40 °C <Ta < +75 °C)
- KEMA ATEX certificate number: KEMA 01ATEX2220X
- U_m=250 V.

Special Conditions for Safe Use (X):


When used in a potentially explosive atmosphere where the use of equipment-category 1 apparatus is required, appropriate measures must be taken to prevent electrostatic discharge.

HAZARDOUS LOCATIONS CERTIFICATIONS

Factory Mutual (FM) Approvals

Figure B-3. Approval Labels Factory Mutual (FM) The Rosemount 3300 Series Guided Wave Radar Level and Interface Transmitters that have the following labels attached have been certified to comply with the requirements of the approval agencies noted.

Project ID: 3013394

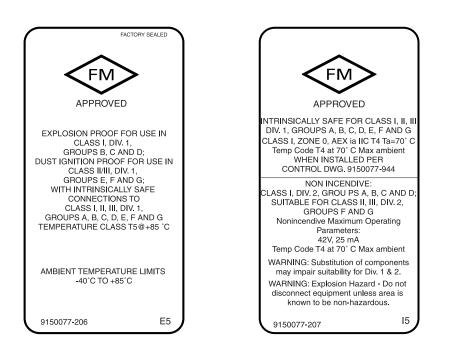

APPROVALS-FM_E5, FM_I5

For connection in ambients above 70 $^{\circ}\text{C},$ use wiring rated for 90 $^{\circ}\text{C}$ minimum.

E5 Explosion-Proof for Class I, Division 1, Groups B, C and D.

Dust-Ignition proof for Class II/III, Division 1, Groups E, F and G; with intrinsically safe connections to Class I, II, III, Div 1, Groups A, B, C, D, E, F AND G.

Temperature class T5 @+85 °C.

Ambient temperature limits: -40° C to $+ 85^{\circ}$ C

Factory Sealed.

I5 Intrinsically Safe for Class I, II, III, Division 1, Groups A, B, C, D, E, F and G.

Intrinsically Safe for Class I, Zone 0, AEX ia IIC T4 Ta=70°C.

Temperature code T4 at 70°C max ambient.

Control Drawing: 9150077-944.

Non-incendive for Class I, Division 2, Groups A, B, C and D.

Suitable for Class II, III, Division 2, Groups F and G.

Non-incendive maximum operating parameters: 42 V, 25 mA. Temperature code T4 at 70°C max ambient.

Canadian Standards Association (CSA) Approval

Cert. no. 2002.1250250.

Figure B-4. Approval Label Canadian Standards Association (CSA)



E6 Explosion-Proof for Class I, Division 1, Groups C and D.

Dust-Ignition proof for Class II, Division 1 and 2, Groups G and Coal Dust.

Dust-Ignition proof for Class III, Division 1, Hazardous Locations [Ex ia IIC T6].

Ambient temperature limits: -40° C to $+ 85^{\circ}$ C. Factory Sealed.


Intrinsically Safe: Ex ia IIC T4.
 Intrinsically Safe for Class I, Division 1, Groups A, B, C and D.
 Temperature code T4.
 Control Drawing: 9150077-945.
 Non-incendive for Class III, Division 1, Hazardous Locations.
 Non-incendive for Class I, Division 2, Groups A, B, C and D.
 Ambient temperature limits: -40 °C to + 70 °C.

Reference Manual 00809-0100-4811, Rev CA

February 2006

IECEx Approval

Figure B-5. Approval Labels IECEx.

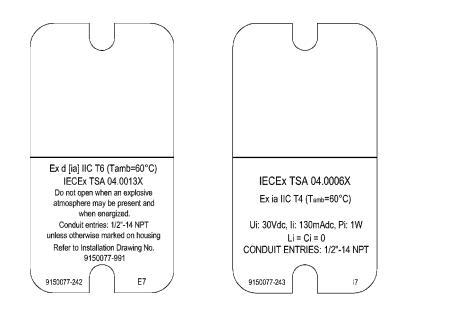

E7 Flameproof:

Ex d [ia] IIC T6 (T_{amb} = +60 °C). IECEx TSA 04.0013X.

Conditions of Certification

The apparatus metallic enclosure must be electrically bonded to earth. The conductor used for the connection shall be equivalent to a copper conductor of 4 mm^2 minimum cross-sectional area.

Where it is required that an unused conduit entry is to be closed by means of the blanking plug, the plug supplied by the equipment manufacturer with this equipment is certified for this purpose under this certification.

Maximum voltage U_m=250 V.

I7 Intrinsic Safety:

Ex ia IIC T4 (T_{amb} = +60 °C). IECEx TSA 04.0006X. Ui=30 V, Ii=130 mA, Pi=1 W, Ci=0 nF, Li=0 mH.

Conditions of Certification

The programming port must not be used in the hazardous area.

The apparatus metallic enclosure must be electrically bonded to earth. The conductor used for the connection shall be equivalent to a copper conductor of 4 mm^2 minimum cross-sectional area.

The input parameters stated above must be taken into consideration during the installation of the apparatus.


Rosemount 3300 Series

COMBINATION OF APPROVALS

Figure B-6. Approval Label ATEX Flame-Proof and Canadian Standards Association (CSA) Explosion-Proof.

Figure B-7. Approval Label CSA Explosion-Proof and FM Explosion-Proof.



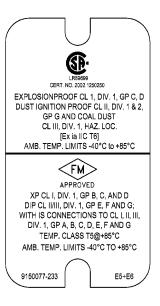

FM_CSA_E5_E6.TIF

Reference Manual

00809-0100-4811, Rev CA February 2006

Figure B-8. Approval Label ATEX Flame-Proof and FM Explosion-Proof.

FM APPROVED XP CL I, DIV. 1, GP B, C, AND D DIP CL I/IIII, DIV. 1, GP E, F AND G; WITH IS CONNECTIONS TO CL I, III, III, DIV. 1, GP A, B, C, D, E, F AND G TEMP. CLASS T5@+85°C AMB. TEMP. LIMITS -40°C TO +85°C C€ 0575 ⓒ II 1/2 GD T80°C EEx d [ia] IIC T6 (-40°C<Ta<+75°C)

KEMA 01ATEX2220X Do not open when an explosive atmosphere may be present In ambient temperatures above 70°C use wire or cable rated for 90°C minimum

E1+E5

9150077-232

Figure B-9. Approval Label ATEX Intrinsic Safety and CSA Intrinsic Safety.



ATEX_FM_E1_E5.TIF

ATEX_CSA_I1_I6.TIF

Rosemount 3300 Series

Figure B-10. Approval Label FM Intrinsic Safety and CSA Intrinsic Safety.

CL III, DIV	CONTROL WARNING mponents may . 1, HAZ. LOC; GP A, B, C, I	impair intrinsic safety CL I, DIV. 2,
has been sv	vitched off or an be non-hazardo VIP. LIMITS -40	rea is known to ous °C to +70°C
APPROVED	C, D, E, F AEx la IIC CC AMBIENT WH	II, III, DIV. 1, GP A, B, AND G. CL I, ZONE 0, C T4 Ta=70°C, TEMP. DDE T4 AT 70°C MAX IEN INSTALLED PER DL DWG 9150077-944
CL II, III, DIV. 2,	GP F & G. MA	D D. SUITABLE FOR X OPERATION 42 V, 70°C MAX AMBIENT
WARNING: Ex hazard - do not equipment unle is known to be non- hazardou:	disconnect ess area	WARNING: Substitution of components may impair suitability for DIV. 1 & 2
9150077-23	6	15+16

FM_CSA_I5_I6.TIF

Figure B-11. Approval Label ATEX Intrinsic Safety and FM Intrinsic Safety.



ATEX_FM_I1_I5.TIF

APPROVAL DRAWINGS

This section contains Factory Mutual installation drawings and Canadian Standards installation drawings. You must follow the installation guidelines presented in order to maintain certified ratings for installed transmitters.

This section contains the following drawings:

Saab Rosemount drawing 9150077-944, Issue 1:

System Control Drawing for hazardous location installation of intrinsically safe FM approved apparatus.

Saab Rosemount drawing 9150077-945, Issue 1:

System Control Drawing for hazardous location installation of CSA approved apparatus.

Saab Rosemount drawing 9150077-991, Issue 1:

IECEx Flameproof System Control Drawing.

System Control Drawing for hazardous location installation of SSA (IECEx) approved apparatus.

Rosemount 3300 Series

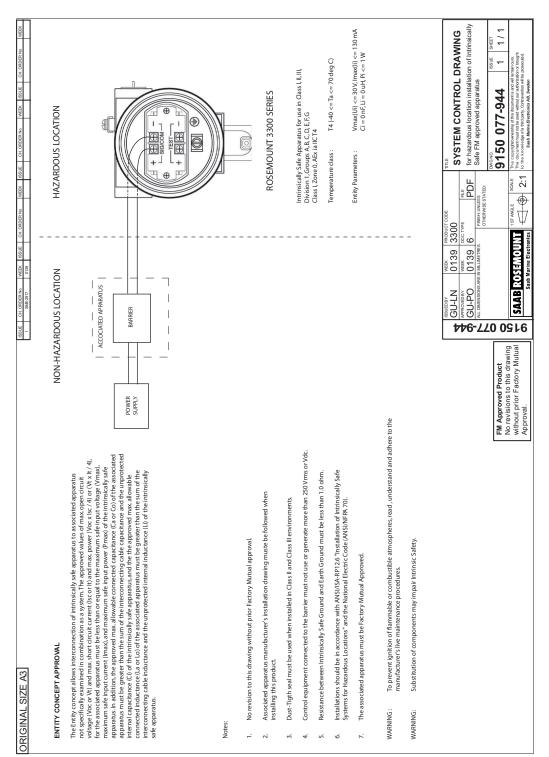


Figure B-12. System Control Drawing for hazardous location installation of intrinsically safe FM approved apparatus.

APPROVALS/077-944_1.EPS

Reference Manual 00809-0100-4811, Rev CA February 2006

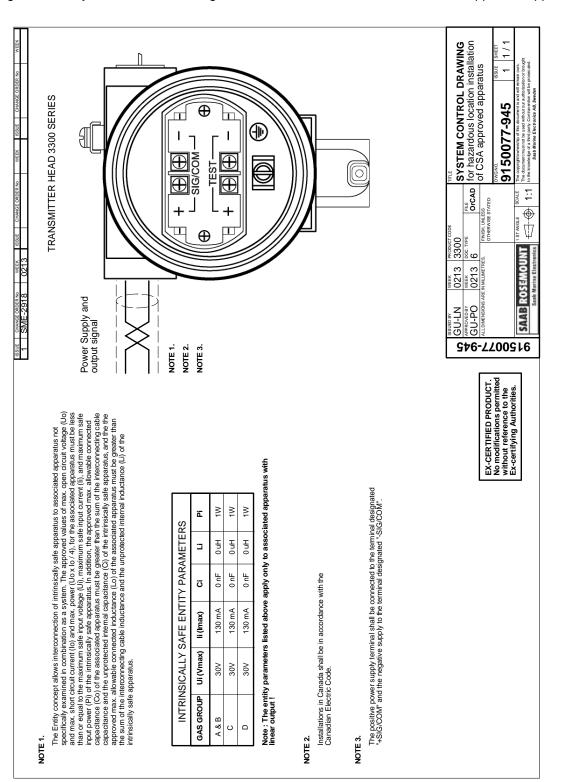


Figure B-13. System Control Drawing for hazardous location installation of CSA approved apparatus.

APPROVALS/077-945_1.EPS

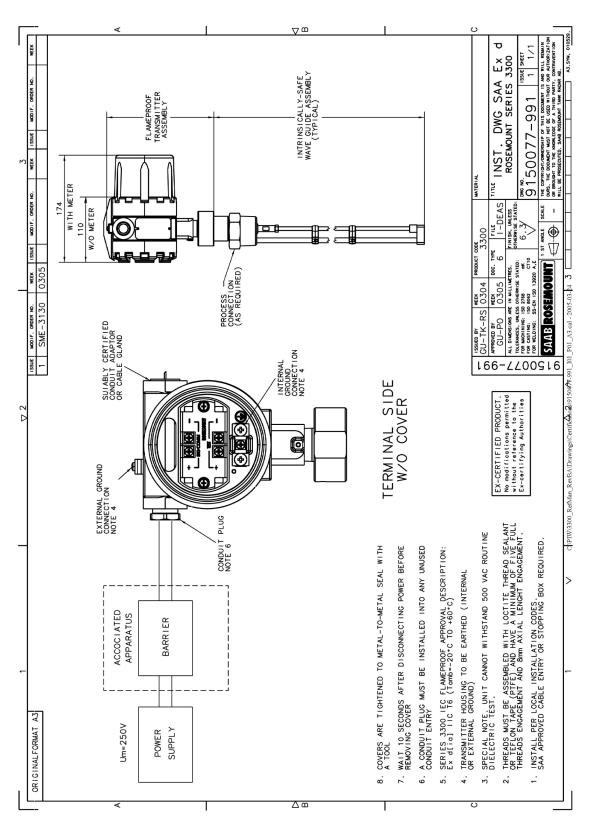


Figure B-14. System Control Drawing for hazardous location installation of IECEx approved apparatus.

9150077-991_101_P01_A3 (CAL) COPY.EPS

Reference Manual

00809-0100-4811, Rev CA February 2006

Numerics

20 mA point 4-4, 4-19
275 HART Communicator 4-7
375 Field Communicator 4-7
4 and 20 mA Points 4-12
4 mA point 4-4, 4-19
751 Field Signal Indicator 3-28

Α

Agitators2-11, 3-11Alarm switch3-5Amplitude Threshold Settings6-13Amplitude Thresholds6-3AMS Suite2-5Analog Output
alarm values

В

Bridging	. 2-8
BSP/G threads	3-14
Burst Mode	4-26
Burst mode	4-25
Burst option	4-25

С

Index

Configuration 4-2
basic 4-2
Handheld Communicator . 4-7
volume 4-5
Current loop resistance 3-22

D

Damping
Dielectric Chart 4-21
Dielectric Constant
Upper Product 4-3 Vapor 4-3
Dielectric constant 2-10
Dielectric Constant Calculator 4-21
Dielectric constant calculator 2-10
Disk Logging 6-4
Display
Alarm
Display Panel4-11, 5-1
Disturbances
Upper Null Zone 6-11

Е

Electrical installation 3-21 connecting the transmitter 3-23 Intrinsically Safe Output . 3-25 Non-Intrinsically Safe Output 3-24
Tri-Loop
Emulsion layers 2-11
EPROM ID 4-18
Errors 6-22
European ATEX Directive Information
B-3

F

Factory Mutual
approvalB-5
system control drawing . B-12
Field Communicator 4-7
Flange Connection 3-7

Foam										2-8
Free Sp	ba	Ce	Э							.3-10

G

Grounding							3-21
Grounding							.3-21

Н

••
Hardware Rev4-18
HART Communicator4-7
Hazardous Locations Certifications
B-5
Heating Coils2-11
Heating coils
High Level Rates6-7

I

L

LCD
Level and Distance Calibration 6-10
Logging
Loop-powered2-5
Lower Dead Zone
Lower Range Value4-19





Μ

Maximum load resistance 3-24, 3-25 Maximum Upper Product Thickness 4-11 4-11 4-21 Measurement Mode

weasurement woue 4-11, 4-21	
Measurement Principle 2-1	
Measurement Units 4-9, 4-18	
Measuring range2-9	
Memory Map 6-18	
Mounting Position	
Multidrop connection 3-27	
Multidrop Mode	

Ν

Ρ

Pipe Installations
Centering Disc 3-20
Plate design
Poll address
Power Requirements 3-22
Power supply 3-22
Primary Variable 4-9, 4-19
Probe
anchoring
changing
shortening
Probe Angle4-4, 4-11, 4-20
Probe Length 4-3, 4-9, 4-20
Probe Type 4-3, 4-10, 4-20
Probe types
Process connection
Product Dielectric 4-10

R

Radar Configuration Tool 2-5, 4-14
Range Values 4-12
RCT 4-14
COM Port 4-14
Installing 4-14
Logging
Logging the plot6-4
Saving the configuration . 6-17
Setup 4-17
Waveform Plot
Wizard 4-16
Receive Buffer 4-26
Recommended mounting position .
3-11

Reference Gauge Height 4-3, 4-9,
4-20, 6-2
RHCS Server 4-15
Rosemount 751 2-5

S
Save Setup 6-17
Set Poll Address 3-27
Setup
Basic 4-18
LCD 4-23
Output 4-19
Save configuration 6-17
Tank Config 4-20
Volume 4-22
Software Rev 4-18
Spacers 3-16
Standard Tank Shapes 4-6
Strapping Table4-5, 4-13
Switch Settings 3-4
System Architecture 2-5

Т

Tank connection 3-	13
flange 3-	13
threaded	14
Tank Dimensions 4-	
Tank Geometry	20
Tank shape 2-	11
Tank Shapes	
Tank Type	
Threaded connection 3	3-6
Threshold Settings 6-	
375 Field Communicator 6-	15
Time Domain Reflectometry 2	
Transfer Buffer 4-	26
Transmitter Head	
removing6-	
Transmitter housing 2	2-4
Transmitter Reference Point 6	
Transmitter Switch Settings 3	
Transmitter Variables 4-9, 4-	
Tri-Loop	
Tri-loop 2	
Trim Near Zone 6-	
Troubleshooting 6-	
Turbulent conditions 3-	11

U

UNZ	, 6-11
Upper Dead Zone	. 2-7
Upper Null Zone . 3-7, 4-4, 4	4-12,
4-20,	6-11
Upper Range Value	4-19
Upper Reference Point4-2	2, 6-2

Reference Manual 00809-0100-4811, Rev CA February 2006

۷

Vapor2-8
Vapor Dielectric 4-10, 4-21
Vessel characteristics2-11
Volume Configuration 4-5, 4-13, 4-22
Volume Units

W

Warnings
Waveform plot
Write Protect switch
Write Protection

Rosemount and the Rosemount logotype are registered trademarks of Rosemount Inc. PlantWeb is a registered trademark of one of the Emerson Process Management group of companies. Teflon, VITON, and Kalrez are registered trademarks of DuPont Performance Elastomers. Asset Management Solutions is a trademark of Emerson Process Management. All other marks are the property of their respective owners.

Emerson Process Management

Rosemount Inc. 8200 Market Boulevard Chanhassen, MN 55317 USA T (U.S.) 1-800-999-9307 T (International) (952) 906-8888 F (952) 949-7001

www.rosemount.com



Emerson Process Management Shared Services Ltd. Heath Place Bognor Regis West Sussex PO22 9SH England Tel 44 (1243) 863121 Fax 44 (1243) 867554 Emerson Process Management Asia Pacific Private Limited 1 Pandan Crescent Singapore 128461 Tel (65) 777-8211 Fax (65) 777-0947 Enquiries@AP.Emersonprocess.com



© 2006 Rosemount Inc. All rights reserved.