



13" COLOR TV WITH REMOTE CONTROL



TV/CATV MODE SELECTION

When shipped from the factory , the TV/CATV menu option is set to the "CATV"(Cable Television) mode.
If not using CATV, set this menu option to the "Air" position.

OWNER'S MANUAL HKTV13

Welcome to the world of the Hello Kitty. My friends at Emerson Radio Corp. are producing this Hello Kitty Color TV under license from Sanrio Company Ltd. Read this manual before operating this unit to become familiar with its features and obtain the performance that will bring you continued enjoyment for many years. In the event you require technical assistance, please call my friends at the Emerson Radio Consumer Affairs Department at: 800-898-9020.

For future reference, record the serial number in the space provided.
Serial Number: _____

| | | |
|--|---|---|
|  | CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN |  |
| CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. | | |



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing instructions in the literature accompanying the appliance.

WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION

CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE MANUFACTURER COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

NOTE TO CATV SYSTEM INSTALLER

THIS REMINDER IS PROVIDED TO CALL THE CATV SYSTEM INSTALLER'S ATTENTION TO ARTICLE 820-40 OF THE NEC THAT PROVIDES GUIDELINES FOR PROPER GROUNDING AND, IN PARTICULAR, SPECIFIES THAT THE CABLE GROUND SHALL BE CONNECTED TO THE GROUNDING SYSTEM OF THE BUILDING, AS CLOSE TO THE POINT OF CABLE ENTRY AS PRACTICAL.

CAUTION

The AC power cord provided with this product is polarized (one blade wider than the other). To prevent electrical shock, match wide blade of plug to wide slot, fully insert the AC plug into a standard 120V~, 60Hz polarized outlet.

NOTE

Never connect the plug to an electrical source other than one providing 120V~, 60Hz power. Use only the attached power cord. If the polarized AC cord does not fit into a non-polarized outlet, do not cut or file the blade. You are responsible for having the obsolete outlet replaced with a polarized outlet.

If you feel a static discharge when touching the unit, and the unit does not function, simply unplug the unit from the outlet. When you plug the unit back in, it should work normally.

Do not install power cords near any heating element or cooking appliances.



Table of Contents

Important Safeguards2

Chapter 1: Overview of Your Equipment4

 Your TV's Front Panel4

 Your TV's Back Panel5

 Your Remote Control6

 Installing your remote control batteries7

 Notes7

Chapter 2: Connecting an Antenna or Cable to Your TV8

 Connecting an Antenna8

 Connecting a Cable System9

 Connecting Other Pieces of Equipment10

 Safety Note10

Chapter 3: Operating Your TV11

 Turning your TV On11

 Programming Your TV's Channel Memory11

 Changing Channels12

 Changing the Volume12

 Changing the TV's Channel Memory13

 Adding/Deleting a channel to memory13

 Displaying the Current Channel13

 Changing the TV's Input14

 Adjusting Video Settings15

 Returning to the factory settings16

 Descriptions of video settings16

Chapter 4: Using Timer Functions17

 Setting the Clock17

 Setting the Wake-Up Time17

 Setting the Off Time18

 Canceling the Wake-Up Time or Off Time18

 Setting the Sleep Timer19

Chapter 5 : Additional Features20

 Changing the Language of the On-Screen Menus20

 Captioning20

 CC on Mute21

 Power Restore21

 Parental Control Settings22

 Description of Parental Control Settings23

Chapter 6 : Troubleshooting24

Warranty26



IMPORTANT SAFEGUARDS

PLEASE READ ALL THESE INSTRUCTIONS REGARDING YOUR TELEVISION EQUIPMENT AND RETAIN FOR FUTURE REFERENCE. FOLLOW ALL WARNINGS AND INSTRUCTIONS MARKED ON THE TV RECEIVER.

- 1 Read all of these instructions.
- 2 Save these instructions for later use.
- 3 Unplug this television equipment from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 4 Do not use attachments not recommended by the television equipment manufacturer as they may result in the risk of fire, electric shock or other personal injury.
- 5 Do not use this television equipment near water, for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, or the like.
- 6 Do not place this television equipment on an unstable cart, stand, or table. The television equipment may fall, causing serious injury to a child or adult, and serious damage to the equipment. Use only with a cart or stand recommended by the manufacturer, or sold with the television equipment. Wall or shelf mounting should follow the manufacturer's instructions, and should use a mounting kit approved by the manufacturer.
- 6A An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
- 7 Slots and openings in the cabinet and the back or bottom are provided for ventilation and to ensure reliable operation of the television equipment; and to protect it from overheating, these opening, must not be blocked or covered. The opening should never be blocked by placing the television equipment on a bed, sofa, rug, or other similar surface. (This equipment should never be placed near or over a radiator or heat register.) This television equipment should not be placed in a built-in installation such as a bookcase unless proper ventilation is provided.
- 8 This television equipment should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your television dealer or local power company.
- 9 This television equipment is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- 10 Do not allow anything to rest on the power cord. Do not locate this television equipment where the cord will be abused by persons walking on it.
- 11 Follow all warnings and instructions marked on the television equipment.
- 12 For added protection for this television equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the equipment due to lightning and power-line surges.

 


- 13** An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- 14** Do not overload wall outlets and extension cords as this can result in fire or electric shock.
- 15** Never push objects of any kind into this television equipment through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the television equipment.
- 16** Do not attempt to service this television equipment yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- 17** Unplug this television equipment from the wall outlet and refer servicing to qualified service personnel under the following conditions:
- (a) When the power-supply cord or plug is damaged or frayed.
 - (b) If liquid has been spilled, or objects have fallen into the television equipment.
 - (c) If the television equipment has been exposed to rain or water.
 - (d) If the television equipment does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the TV receiver to its normal operation.
 - (e) If the television equipment has been dropped or the cabinet has been damaged.

(f) When the television equipment exhibits a distinct change in performance - this indicates a need for service.

- 18** When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
- 19** Upon completion of any service or repairs to this television equipment, ask the service technician to perform safety checks to determine that the television is in a safe operating condition.
- 20** If an outside antenna or cable system is connected to the television receiver, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges.

Section 810 of the National Electrical Code, ANSI/NFPA N0.70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

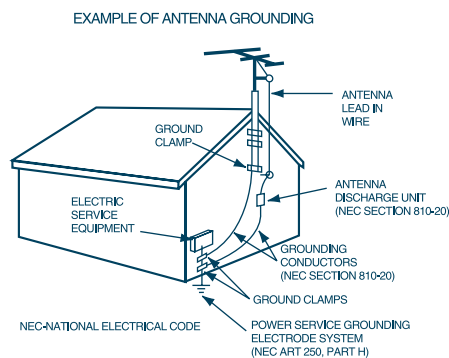




Overview of Your Equipment

Your TV comes with a remote control. The section below summarizes the buttons, controls, and terminals that you will use with your TV.

 Your TV's Front Panel

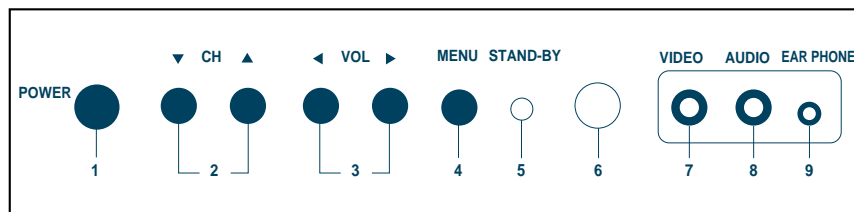

1 POWER

Use this button to turn your TV on or off.

2 ▼CH▲

Use these buttons to change channels on your TV, or to select items in the menu system.

3 ◀VOL▶

Use these buttons to change your TV's volume, to activate selections in the menu system, or to change audio and video settings.

4 MENU

Use this button to turn the TV's menu system on and off.

5 STAND-BY(red) indicator

This indicator lights up when the power is off.

6 Remote control receiver

This receiver receives a signal from your remote control. Do not block it.

7 VIDEO IN jack

Use this jack to receive a video signal from another A/V component.

 
8 AUDIO IN jack

Use this jack to receive an audio signal from another A/V component.

9 EAR PHONE jack

Connect an optional Earphone/Headphone (not included) to this jack for private listening.

Your TV's Back Panel

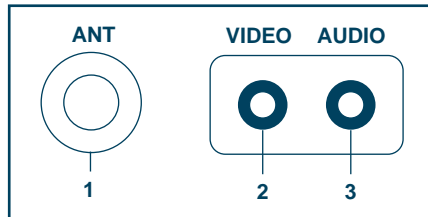

1 Antenna terminal(ANT)

Use this terminal to attach an antenna or cable system to your TV.

2 VIDEO IN JACK

This terminal allows the TV to receive a video signal from another component, such as a VCR.

 
3 AUDIO IN JACK

This terminal allows the TV to receive an audio signal from another component, such as a VCR.

NOTE

VIDEO IN and AUDIO IN on back panel are disconnected when VIDEO IN/AUDIO IN on front panel is connected.


Your Remote Controls

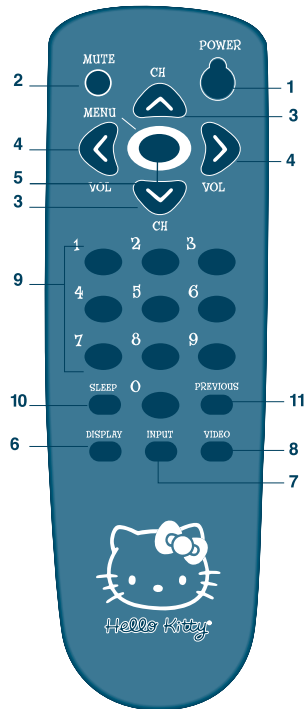

- 1. POWER**
Use this button to turn your TV on or off.
- 2. MUTE**
Use to turn the TV's sound on and off.
- 3. ▲CH▼**
Use these buttons to change channels on your TV, or select items in the menu system.
- 4. ◀VOL▶**
Use these buttons to change your TV's volume, to activate selections in the menu system, or to change audio and video settings.
- 5. MENU**
Use this button to turn the TV's menu system on and off.
- 6. DISPLAY**
Use this button to display the channel number and status.
- 7. INPUT**
Use this button to select TV or VIDEO mode.
- 8. VIDEO**
Use this button to display video adjustment items.
- 9. 0-9**
Use these buttons to change channels.
- 10. SLEEP**
Use this button to program the TV to turn off after a certain time.
- 11. PREVIOUS**
Use this button to return to the previous channel you were watching.

Installing your remote control batteries

 - 1 Open the battery compartment on the back of the remote control.
- 2 Install two AA-size batteries (not included) as shown. Make sure the “+” and “-” terminals are oriented correctly.
- 3 Replace the cover.

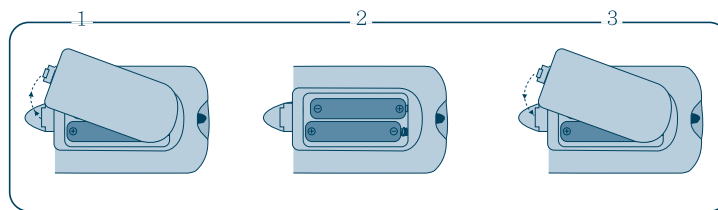

Notes

Do not mix different types of batteries, or mix an old and a new battery.

Remove and replace weak batteries. Weak batteries can leak and damage your controller. Dispose of batteries properly; never throw them into a fire.

Point your remote at the receiver on the center of the front of the TV. Make sure the receiver is not blocked.

 
The remote control can operate up to 30 feet away from the TV, if you are directly facing the front of the TV. Operating distance diminishes as you move to the sides of the TV.



Connecting an Antenna or Cable to Your TV

Connecting Rod Antenna (included)


Install Rod Antenna on top rear of cabinet and connect other end to the antenna terminal.

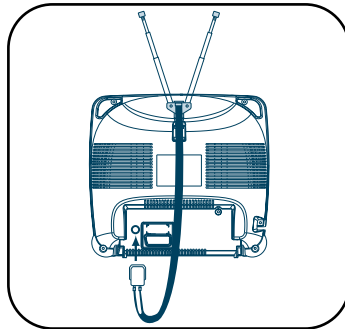

Your TV will provide you with the best performance if you connect it to an external antenna or cable system. Follow the directions below make this connection. Please note that you will normally only have to make one of the connections shown below, not all of them.


All connections will be made to the antenna terminal on the back of your TV. For help in locating the antenna terminal, see "Your TV's Back Panel" on page 5.

 Connecting an External Antenna

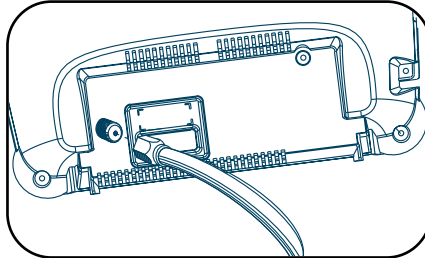

If your antenna ends in a single coaxial lead, simply press or screw the cable onto the antenna terminal on the back of your TV.

 
If your antenna ends in a pair of 300 ohm twin leads, you must use a 300-ohm/75-ohm adapter (included). Place the leads underneath the screws on the adapter, tighten the screws, then press the adapter onto the antenna terminal on the back of the TV.

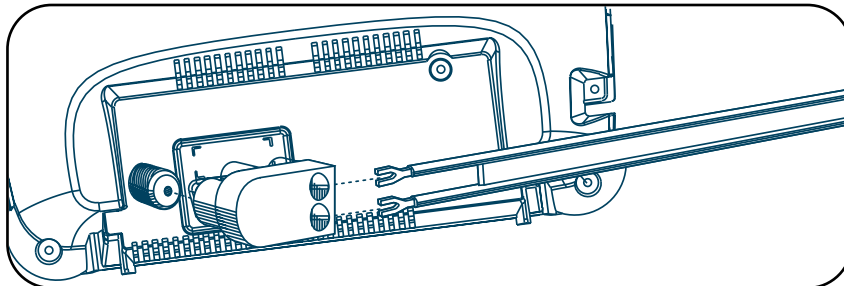


Antennas with two sets of leads

You might have two sets of leads from your antenna system, especially if you have one antenna for VHF signals and one antenna for UHF signals.

 
If your antenna system has both a coaxial lead and twin 300-ohm leads, you must obtain a combiner (available at your local electronics store). Press or screw the coaxial lead onto the combiner; place the twin leads underneath the screws on the combiner and tighten the screws. Press the cable from combiner onto the antenna terminal on the back of your TV.

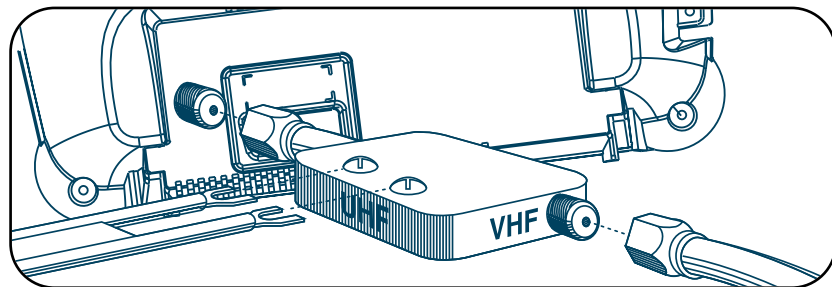

 
If your antenna system has two sets of twin 300-ohm leads, you must obtain a combiner (available at your local electronics store). Place one set of twin leads underneath the screws on the combiner and tighten the screws. Do the same with the other set of twin leads. Press the cable from the combiner onto the antenna terminal on the back of your TV.

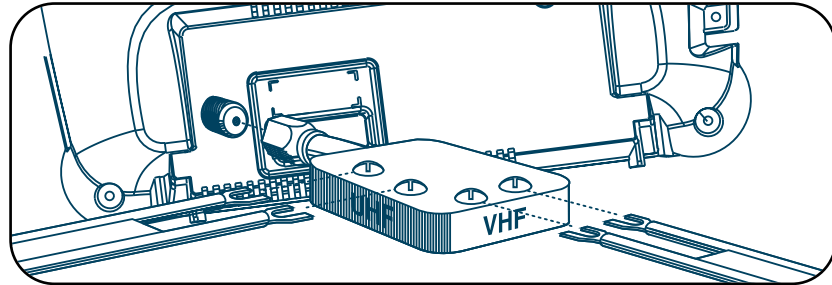

 If your cable system requires you to use a converter box for all channels, connect the incoming cable to the IN terminal on the converter box. Connect another cable between the OUT terminal on the converter box and the antenna terminal on the TV. You will need to keep your TV tuned to channel 3 or 4 and change channels using the converter box.

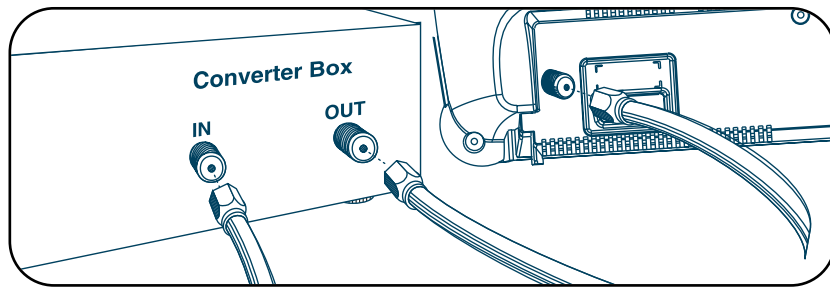

If your cable system only requires you to use a converter box for some channels (i. e. pay-TV channels), follow these steps: Find the primary incoming coaxial cable. Plug this cable into a splitter (available at your local electronics store). Connect one coaxial cable between one OUT terminal on the splitter and the IN terminal on the converter box. Connect another coaxial cable between the other OUT terminal on the splitter and the B-IN terminal on an A/B switch (available at your local electronics store.) Connect a third coaxial cable between the OUT terminal on the converter box and the A-IN terminal on the A/B switch. Finally, connect a coaxial cable between the OUT terminal on the A/B switch and the antenna terminal on the back of your TV.

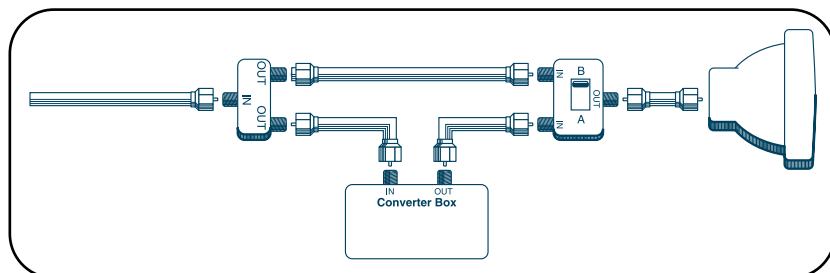 

When the A/B switch is in the A position, you need to change channels on the converter box (and your TV should be tuned to channel 3 or 4); when the A/B switch is in the B position you can change channels on the TV.

Connecting Other Pieces of Equipment

You may want to connect a VCR, laser disc player, satellite receiver, or another type of equipment to your TV. We recommend that you follow the instructions included with the piece of equipment you wish to connect.

Safety Note

If you plan on being away from your home for an extended period of time, or if a thunderstorm is approaching, you should unplug your television, and you may wish to disconnect your TV from a rooftop or satellite antenna. You do not need to disconnect your TV from a cable system.



Operating Your TV

Once you have connected your TV to an antenna or cable system, plugged the TV in, and put batteries in the remote, you are ready to use the TV. The first thing you should do is program your TV so it memorizes all of available channels.

Turning Your TV On

 


- 1 To turn your TV on, press the POWER button on the remote control. You can also use the POWER button on the front panel. Make sure your TV is plugged in before you try to turn it on.

Programming Your TV's Channel Memory

Your TV's memory determines the channels that are available using the ▲CH▼ buttons. If a channel is not in memory, you can tune to it with the number buttons, but not with the ▲CH▼ buttons. Follow these steps to program your TV's memory:

- 1 With the TV on, press the Menu button, then "MENU" screen will be displayed as follows.

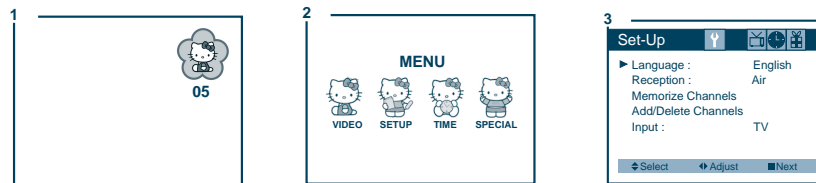


- 2 Use the ◀VOL▶ and ▲CH▼ buttons to select "SETUP", then "Set-up" menu will appear.
- 3 Use the ▲CH▼ buttons to select "Reception", then use the ◀VOL▶ buttons to select 'Air' or 'Cable'. If you connected an antenna to your TV, select 'Air'; If you connected a cable system, select 'Cable'.
- 4 Use the ▲CH▼ buttons to select "Memorize Channels", then use the ◀VOL▶ buttons to enter the "Memorize Channels" process. Again press the ◀VOL▶ buttons to begin. After your TV finishes memorizing the channel, it will return to normal TV viewing.
- 4 Press the MENU button to return to Set-Up menu.

Your TV's channel memory will not be affected by a power outage. You will not need to re-program the memory unless you change the type of cable or antenna connected to your TV.


Changing Channels

 You can change channels in three ways:

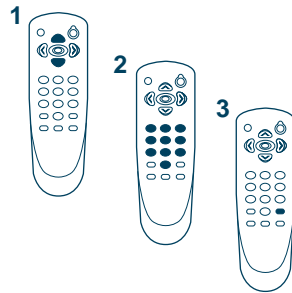

- 1 The **▲CH▼** buttons will take you through all memorized channels, one by one. The **▲CH▼** buttons will not access channels that have not been programmed into the TV's memory. For more information about programming channels into memory, see the section "Programming your TV's Channel Memory" on the previous page.
- 2 The number buttons (0-9) will take you to any channel, even if it has not been memorized. To change to a channel, enter its number; the TV will tune to the new channel when you enter the second digit of the channel.
- 3 The **PREVIOUS** button will take you instantly to the last channel you were watching.

 Changing the Volume

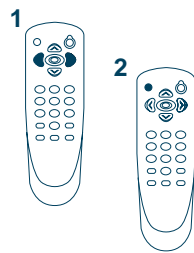

- 1 To change the volume of the TV set, use the **◀VOL▶** buttons on the remote or on the front panel.
- 2 To quickly turn off the sound, press the **MUTE** button on the remote. The 'MUTE' will appear on screen, colored green. To return the volume to its previous level, press **MUTE** again.

 
Changing the TV's Channel Memory

Your TV's memory determines the channels that are available using the ▲CH▼ buttons. You can add channels to this memory or remove them from memory. If a channel is removed from memory, you can tune to it with the number buttons, but you cannot tune to it with the ▲CH▼ buttons.

If just one channel is memorized, the Add/Delete Channels function will search the whole channels. But if two or more channels are memorized, the Add/Delete Channels function will search the memorized channels only.

Adding/Deleting a channel to memory

- 1 Use the number buttons to tune to the channel.
- 2 On "MENU" mode, select "SETUP" and enter "Set-Up" menu.
- 3 Use the ▲CH▼ buttons to select "Add/Delete Channels", then use the ◀VOL▶ buttons to enter the "Add/Delete Channels" process.
- 4 If the channel is not in memory, then use the ◀VOL▶ buttons to add the channel from memory.
- 5 If the channel is in memory, then use the ◀VOL▶ buttons to delete the channel from memory.
- 6 If you are going to delete other channels, then press the ▲CH▼ buttons until desired channel is selected, and press the ◀VOL▶ buttons to delete the channel.
- 7 Wait 10 seconds, or press the MENU button to return to normal TV viewing.

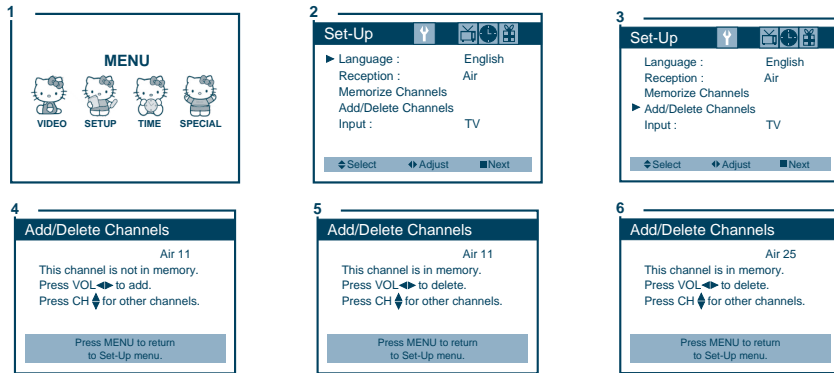

Displaying the Current Channel



- 1 To quickly see the current channel number and status, press DISPLAY button on the remote control.
The current channel number and status will be displayed.

Changing the TV's Input

Normally, your TV displays the signal coming through the antenna terminal. However, If you've connected another component to your TV(such as a VCR) using the Video/Audio input, you will want to be able to view the signal from the component.

To do this, you will need to switch from the 'TV' input to the 'Line' input. Simply press "INPUT" button on remote control. Or follow steps as below.

- 1 On "MENU" mode, select "SETUP" and enter "Set-Up" menu.
- 2 Use the ▲CH▼ buttons to select "Input".
- 3 Press the ◀VOL▶ buttons to change from 'TV' to 'Line'.
- 4 Wait 10 seconds, or press the MENU button to return to normal TV viewing.

 


If two separate AV components are connected at front and rear VIDEO IN/AUDIO IN jacks, the "SOURCE" from front inputs takes priority. To operate through rear input, make sure to disconnect front inputs.

Adjusting Video Settings

You may wish to adjust the video settings (e. g. contrast or color) to obtain the most pleasing picture. To do so, follow these directions:

- 1 On "MENU" mode, select "VIDEO" and enter "Video" menu for picture controls.
- 2 The "Settings" item will be selected. Use the ◀VOL▶ buttons to turn Settings to Preset or Custom.
- 3 Use the ▲CH▼ buttons to select the video setting you wish to adjust. Descriptions of the video settings are on the next page.
- 4 Use the ◀VOL▶ buttons to adjust the video setting to the level you prefer.
- 5 Use the ▲CH▼ buttons to select another video setting to adjust.
- 6 When you are finished, press the MENU button to return to normal TV viewing.

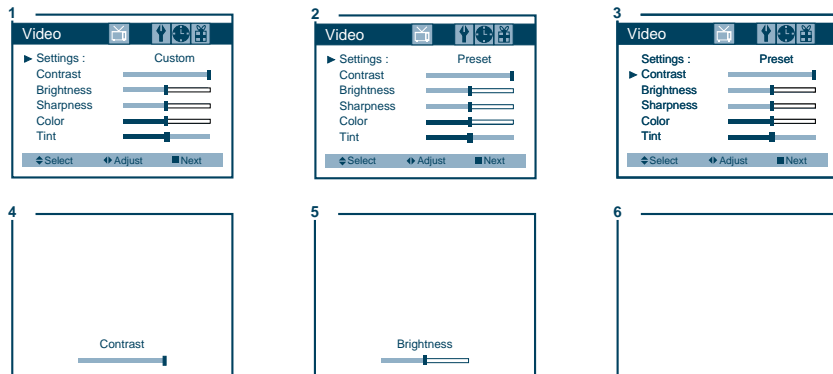


Returning to the factory settings

If you would like to return to the original video settings, as they were calibrated at the factory, follow these steps :

- 1 On "MENU" mode, select "VIDEO" and enter "Video" menu for picture controls.
- 2 Press the ◀VOL▶ buttons to set the "Settings" to 'Preset'.

 The TV will remember the 'Custom' settings you had previously chosen. When you set "Settings" to 'Custom' again, your previous custom settings will be restored.

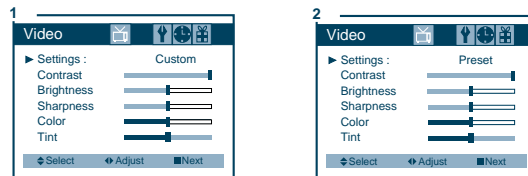

Descriptions of video settings

The contrast setting controls the relation between the light and black areas of the screen. If the light areas are too bright and are losing details, press the ◀VOL button; if the picture is gray and lacks contrast, press the VOL▶ button.

The brightness settings controls the overall amount of light in the picture. If the picture is too bright, press the ◀VOL button; if the picture is too dark, press the VOL▶ button.

Sharpness controls how the TV displays edges of objects on-screen. If the TV shows multiple vertical lines at the edges of an object, press the ◀VOL button; if the vertical edges of on-screen objects are fuzzy, press the VOL▶ button.

The color setting controls the intensity of color. If the color is over-saturated, press the ◀VOL button; if the color is washed out, press the VOL▶ button.

The tint setting controls the relationship of red and green in a picture. Tint is especially noticeable in flesh tones. If flesh tones seem too red or purple, press the VOL▶ button; if flesh tones are too green, press the ◀VOL button.

 


Using Timer Functions

Your TV has a built in-clock, and you can set the TV to turn on and off at times that you select. You can also set your TV to turn off after counting down a certain amount of time.

Setting the Clock

- 1 On "MENU" mode, select "TIME" and enter "Time" menu.
- 2 The "Set Clock" item will be selected. Press the ◀VOL▶ buttons to set the clock.
If you hold down either ◀VOL or VOL▶ button, the corresponding numbers will change more quickly.
- 3 When the clock is set correctly, use the ▲CH▼ buttons to select another "Time" function, or press the MENU button to return to normal TV viewing.

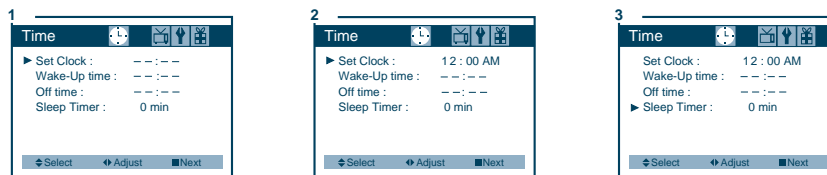


Settings the Wake-Up Time

If you enter a time in the "Wake-Up time" setting, your TV will automatically turn on at that time. Follow these instructions to set the "Wake-Up time".

After Wake-up Timer turns on the TV set, if you do not touch any controls (e.g. remote CH or VOL key) within 15 minutes, the TV set will turn off automatically. If you do touch any control within 15 minutes, the TV set will remain on continuously.

This is a safety feature. If you forget to cancel the alarm and the TV turns on while you are not at home, it will shut off automatically after 15 minutes.

 
- 1 On "MENU" mode, select "TIME" and enter "Time" menu.
- 2 Use the ▲CH▼ buttons to select "Wake-Up time" item.
- 3 If you hold down either ◀VOL or VOL▶ button, the corresponding numbers will change more quickly.
- 4 When the setting is correct, use the ▲CH▼ buttons to select another "Time" function, or press the MENU button to return to normal TV viewing.

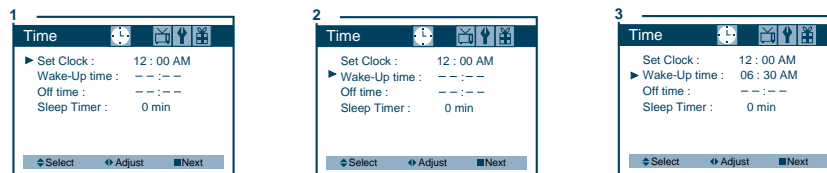

Setting the Off Time

If you enter a time in the “Off time” setting, your TV will automatically turn off at that time. Follow these instructions to set the “Off time”.

 - 1 On "MENU" mode, select "TIME" and enter "Time" menu.
- 2 Use the ▲CH▼ buttons to select “Off time” item.
- 3 If you hold down either ◀VOL or VOL▶ button, the corresponding numbers will change more quickly.
- 4 When the setting is correct, use the ▲CH▼ buttons to select another “Time” function, or press the MENU button to return to normal TV viewing.

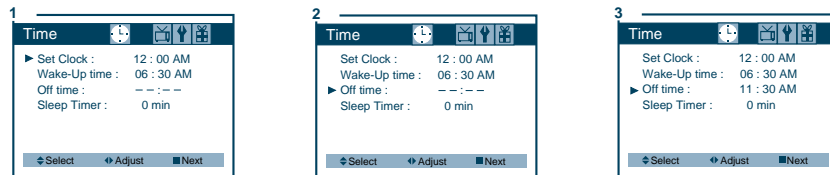

Canceling the Wake-Up Time or Off Time

If you would like to cancel the Wake-up Time or the Off Time, Press the ◀VOL▶ buttons until the time settings return to "-- : --".

The Wake-Up Time and Off Time will not function correctly unless the clock has been set.

 
Setting the Sleep Timer

The sleep timer allows you to set an amount of time from 15 minutes to 120 minutes. TV will count down the amount of time you set, then turn itself off.

To set the sleep timer:

- 1 On "MENU" mode, select "TIME" and enter "Time" menu.
- 2 Use the ▲CH▼ buttons to select "Sleep Timer" item.
- 3 Use the ◀VOL▶ buttons to set the sleep time. Each time you press VOL, you step between the available sleep times : 15min, 30min, 45min, 60min, 90min, and 120min.
- 4 When the setting is correct, use the ▲CH▼ buttons to select another "Time" function, or press the MENU button to return to normal TV viewing.
- 5 You can also set the "Sleep Timer" during normal TV viewing, simply by pressing the SLEEP button on the remote control. This button steps through the available sleep times (see step 3), one by one.

To cancel the Sleep timer, turn the TV off, or set the sleep time to "0" using one of the methods described above.

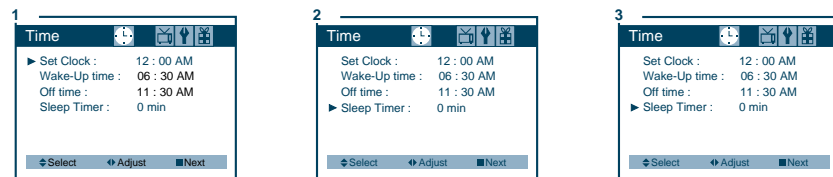



Additional Features

This section contains descriptions of the more advanced features of your TV.

Changing the Language of the On-screen Menus

You can choose to display the on-screen menus in English, Spanish, French.
To change the on-screen language:

- 1 On "MENU" mode, select "SETUP" and enter "Set-Up" menu.
- 2 The "Language" item will be selected. Press the ◀VOL▶ buttons to select the language you want to use: English, Spanish, French.
- 3 To return normal TV viewing, press the MENU button to return to normal TV viewing.

 


Captioning

Many TV shows contains "Closed Captions". These captions are hidden words that can be displayed on your TV screen. There are two types of these words : "captions" usually follow the action on-screen, providing a written version of the dialogue, narration, and sound effects ; "text" is not usually related to the action on-screen, often providing information such as news or weather. A TV program might be providing more than one set of captions or one set of text.

To set your TV to display captions or text.

- 1 On "MENU" mode, select "SPECIAL" and enter "Special" menu.
- 2 The "Closed Caption" item be selected. To turn captioning on, use the ◀VOL▶ buttons to select Captions (C1 or C2) or Text (T1 or T2).
Only C1 is commonly used and C2, T1 or T2 may not be available. Check your local station for more information.
- 3 Wait 10 seconds, or press the MENU button to return to normal TV viewing.
Your setting will remain intact until you change it.

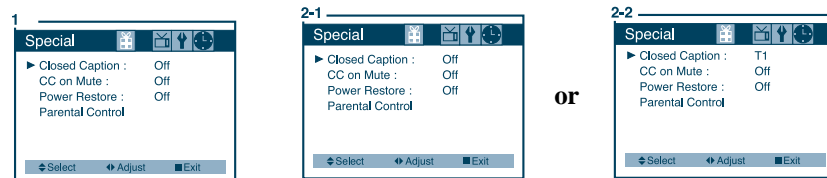

CC on Mute

You can choose following caption mode with combination of Closed Caption and CC on Mute.

- 1 Closed Caption is always on whether sound is ON or OFF.

Closed Caption : C1 (C2/T1/T2, if available)

CC on Mute : off or C1 (C2/T1/T2, if available)

- 2 Closed Caption is on, only in Mute.

Closed Caption : off

CC on Mute : C1 (C2/T1/T2, if available)

- 3 Closed Caption is always OFF.

 
Closed Caption : off , CC on Mute : off

To select item 2, follow steps as below.

- 1 On "MENU" mode, select "SPECIAL" and enter "Special" menu.

- 2 Use the ▲CH▼ buttons to select "CC on Mute" item.

- 3 Use the ◀VOL▶ buttons to select "C1" or "C2".

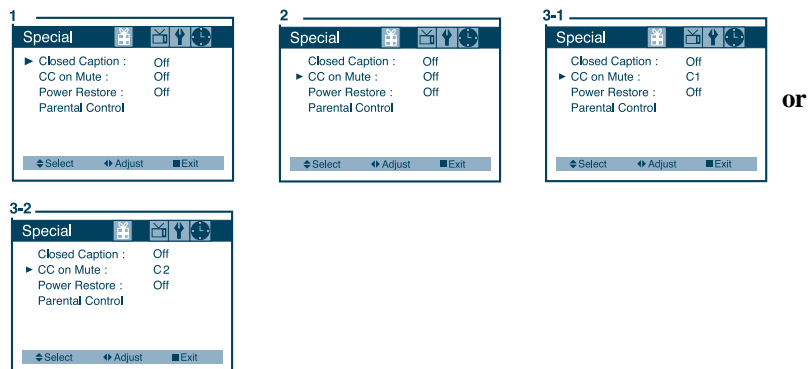

Power Restore

 
When TV is connected to the outlet which is controlled by the wall switch or a cable box

AC outlet with switch, the power can be turned on by turning those switches.

- 1 On "MENU" mode, select "SPECIAL" and enter "Special" menu.

- 2 Use the ▲CH▼ buttons select "Power Restore" item.





- 3 Use the ◀VOL▶ buttons to select "On" or "Off".

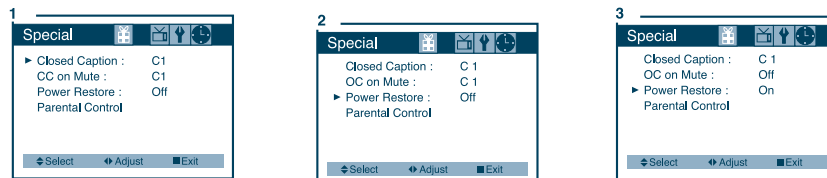

Parental Control Settings

This item helps parents to set the standard for the programs which their children are going to watch.

    - 1 On "MENU" mode, select "SPECIAL" and enter "Special" menu.
- 2 Use the ▲CH▼ buttons to select "Parental Control" item.
- 3 Use the ◀VOL▶ buttons to enter into "Parental Control" settings.
- 4 The initial password is set at "0000".
To change the password, use the number buttons(0-9) to enter your password, then "Parental Control" menu will be displayed. If this is the first time you are using your "Parental Control" menu, after entering your password you have to remember it.
- 5 The Parental Lock feature will be selected. Use the ◀VOL▶ buttons to toggle "On" or "Off".
- 6 Use the ▲CH▼ buttons to select the Parental Control settings you wish to adjust.
Descriptions of the Parental Control settings are on the next page.
- 7 Use the ◀VOL▶ buttons to adjust the Parental Control settings.
- 8 Use the MENU button to return to the one level up menu.

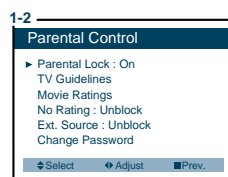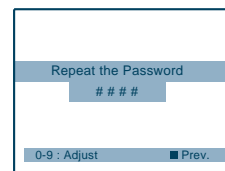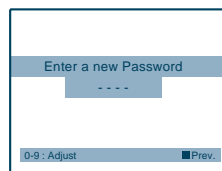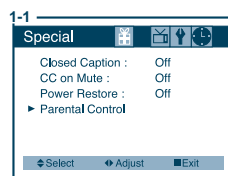

Description of Parental Control Settings

1. The TV Guidelines set the standard for TV programs excluding sports and news.

Use the ▲CH▼ buttons to select, ◀VOL▶ buttons to adjust. You can set individual settings with ◀VOL▶ buttons.

2. The Movie Ratings set the standard for movie, video, and other media excluding TV programs.

Use the ▲CH▼ buttons to select, ◀VOL▶ buttons to adjust.

 
 
 
 
 
 
3. The No Rating item toggles between “Unblock” and “Block”.

This item determines whether to block or not the programs which are not rated by “Movie Ratings ” and “TV Guidelines”.

Use VOL buttons to change the settings.

4. The initial password is set at "0000".

To change the password, use ◀VOL▶ buttons to select "Change Password", and use the number buttons(0-9) to enter new password. After you entered the new password, confirmation display will appear. Type again the password to confirm new number.

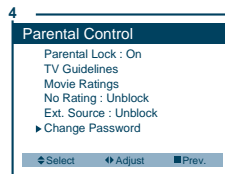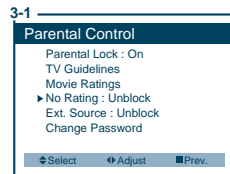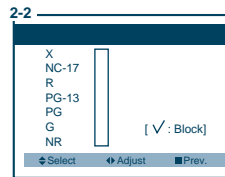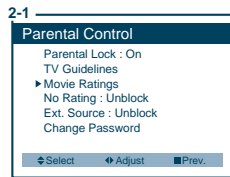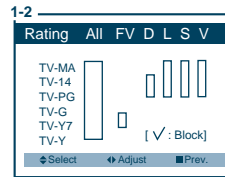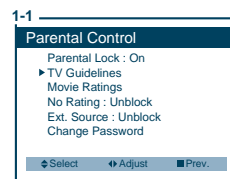



Troubleshooting

Your Hello Kitty television is designed to give you trouble-free performance for many years. If you have a problem with your TV, try the solutions listed below.

If the suggestions listed below do not solve your problem, contact your Emerson dealer or an authorized Emerson service center.

There is no picture or sound, or the TV doesn't turn on.

- Make sure the TV is plugged in.
- Make sure the MUTE is not set.
- Make sure the power is on.
- If there is neither picture or sound, unplug the TV for 30 seconds, then plug it in and try again.

There is no picture or sound on some UHF channels.

- Try another station. If the other stations are OK, it may be a station problem.
- Check that the antenna is connected, is in good working order, has no broken wires, and is adjusted correctly.
- See if anything is interfering with the antenna signal.
- Make sure the AIR/CABLE setting is correct.

The sound is OK, but the picture is poor.

- Try another station. If the other stations are OK, it may be a station problem.
- Check that the antenna is connected and is in good working order, has no broken wires, and is adjusted correctly.

The picture is OK, but the sound is poor.

- Try another station. If the other stations are OK, it may be a station problem.
- Check that the antenna is connected, is in good working order, has no broken wires, and adjusted correctly.

There is poor reception on some channels.

- Try another station. If the other stations are OK, it may be a station problem.
- Check that the antenna is connected, is in good working order, has no broken wires, and is adjusted correctly.

You cannot tune to a cable channel.

- Make sure the AIR/CABLE setting is correct.
- The channel may not be programmed into memory.

The picture rolls, slants, shows lines, is grainy, has poor color, or has ghosts.

- Try another station. If the other stations are OK, it may be a station problem.
- Check that the antenna is connected, is in good working order, has no broken wires, and is adjusted correctly.
- See if anything is interfering with the antenna signal.

The remote control does not work.


- Make sure the TV is plugged in.
- Make sure there are fresh batteries in the remote control.
- Make sure there is nothing blocking the remote control signal.

Cleaning the unit

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning
- If the cabinet becomes dusty wipe it with a soft dry dust cloth. Do not use any wax or polish sprays on the cabinet.
- If the cabinet becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution and wrung dry. Never use abrasive cloths or polishes as these will mar the finish of your unit.

Caution

Never allow any water or other liquids to get inside the unit while cleaning.

| | |
|--|--|
|  Emerson SERVICE | TO FIND THE LOCATION AND PHONE NUMBER OF YOUR NEAREST SERVICE CENTER PERMITTED TO PERFORM WARRANTY... |
| CALL TOLL FREE: 1-800-695-0098 | |
| FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE PLEASE CALL 1-800-898-9020 | |
| FOR CUSTOMER SERVICE PLEASE WRITE TO: Emerson Radio Corp. Consumer Affairs Dept. 1901 Diplomat Drive, Farmers Branch, TX 75234 | |



**EMERSON RADIO CORP.
HELLO KITTY – MODEL HKTV13
LIMITED WARRANTY**

What does this warranty cover? Any manufacturing defects in original material, including original parts and workmanship, under normal use and conditions.

For how long? One year parts and labor from date of original purchase. Two years on picture tube.

What will we do? If you need service under this warranty, and you provide us with the dated proof of purchase, we will provide repair service at no charge for labor and parts at an authorized Depot Repair Facility, or replace the product in our discretion.

How do you make your warranty claim? If it becomes necessary to repair your unit, you can obtain the name and mailing location of a Depot Repair Facility by dialing 1-800-695-0098. You should pack your unit in a well-padded heavy corrugated box, enclose your check or money order payable to the Depot Repair Facility in the amount of \$9.00 to cover the return shipping and handling costs, and enclose a copy of your proof of purchase (warranty service will not be provided without a dated proof of purchase). Finally, you should ship the unit prepaid via UPS or parcel post (insured).

What does your warranty not cover? Your warranty does not cover the following:

- Damage from negligence, misuse, abuse, accident, or failure to follow operating instructions.
- Use of product in a commercial application or rentals.
- Changes or repairs by anyone other than an authorized Depot Repair Facility.
- Damage because your unit is improperly connected to the equipment of other manufacturers.
- Units on which the serial number has been defaced, modified or removed.
- Damage to equipment not properly connected to the product.
- Cost incurred in shipping your unit to and from an authorized Depot Repair Facility.
- Ordinary adjustments which you can perform as outlined in the owner's manual.
- Signal reception problems caused by external antenna or cable systems.
- Products purchased, used, serviced or damaged outside of the United States.

What other limitations apply to your warranty?

THIS WARRANTY IS NON-TRANSFERABLE AND APPLIES ONLY TO THE ORIGINAL PURCHASER AND DOES NOT EXTEND TO SUBSEQUENT OWNERS OF THE PRODUCT. THIS WARRANTY IS VALID ONLY IN THE UNITED STATES OF AMERICA. ANY APPLICABLE IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD OF THE EXPRESSED WARRANTY AS PROVIDED ABOVE BEGINNING WITH THE DATE OF ORIGINAL PURCHASE AT RETAIL AND NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, SHALL APPLY TO THE PRODUCT THEREAFTER. WE MAKE NO WARRANTY AS TO THE FITNESS OF THE PRODUCT FOR ANY PARTICULAR PURPOSE OR USE.

THE EXTENT OF OUR LIABILITY UNDER THIS LIMITED WARRANTY IS THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND IN NO EVENT WILL OUR LIABILITY EXCEED THE PURCHASE PRICE PAID BY THE PURCHASER OF THE PRODUCT. UNDER NO CIRCUMSTANCES WILL WE BE LIABLE FOR ANY LOSS, DIRECT, INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE USE OF THIS PRODUCT.

How does state law apply to your warranty?

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, BUT YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES OR EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGE, SO THESE RESTRICTIONS MAY NOT APPLY TO YOU.

TV130

EMERSON RADIO CORP.

EMERSON
Part No. 21-2021
108-01
800.898.9020

Printed in Korea