



## Cordless Rechargeable Sweeper with No Touch Dust Cup

**OWNER'S MANUAL**  
**Model: V1925**  
**4.8 Volt DC**



**USA:** **EURO-PRO OPERATING LLC**  
94 Main Mill Street, Door 16  
Plattsburg, NY 12901

**Canada:** **EURO-PRO OPERATING LLC**  
4400 Bois Franc  
St. Laurent, QC H4S 1A7

Tel.: 1 (800) 798-7398  
[www.sharkcompany.com](http://www.sharkcompany.com)





## ONE (1) YEAR LIMITED WARRANTY

**EURO-PRO Operating LLC** warrants this product to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase, when utilized for normal household use, subject to the following conditions, exclusions and exceptions. If your appliance fails to operate properly while in use under normal household conditions within the warranty period, return the complete appliance and accessories, freight prepaid to:

In US: **EURO-PRO Operating LLC**, 94 Main Mill Street, Door 16, Plattsburgh, N.Y. 12901  
In Canada: **EURO-PRO Operating LLC**, 4400 Bois Franc, St Laurent, Qc, H9S 1A7

If the appliance is found to be defective in material or workmanship, **EURO-PRO Operating LLC** will repair or replace it free of charge. Proof of purchase date and \$ 7.95 to cover the cost of return shipping and handling must be included. \* Non-durable parts including, without limitation, dust cups and brushes which normally require replacement are specifically excluded from warranty.

The liability of **EURO-PRO Operating LLC** is limited solely to the cost of the repair or replacement of the unit at our option. This warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This limited warranty does not cover damage caused by misuse, abuse, negligent handling or damage due to faulty packaging or mishandling in transit. This warranty does not cover damage or defects caused by or resulting from damages from shipping or repairs, service or alterations to the product or any of its parts, which have been performed by a repair person not authorized by **EURO-PRO Operating LLC**.

This warranty is extended to the original purchaser of the unit and excludes all other legal and/or conventional warranties. The responsibility of **EURO-PRO Operating LLC** if any, is limited to the specific obligations expressly assumed by it under the terms of the limited warranty. In no event is **EURO-PRO Operating LLC** liable for incidental or consequential damages of any nature whatsoever. Some states/provinces do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

**\*Important: Carefully pack item to avoid damage in shipping. Be sure to include proof of purchase date and to attach tag to item before packing with your name, complete address and phone number with a note giving purchase information, model number and what you believe is the problem with item. We recommend you insure the package (as damage in shipping is not covered by your warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE". We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.**



## OWNERSHIP REGISTRATION CARD FOR CANADIAN CONSUMERS ONLY

Please fill out and mail the product registration card within ten (10) days of purchase. The registration will enable us to contact you in the unlikely event of a product safety notification. By returning this card you acknowledge to have read and understood the instructions for use, and warnings set forth in the accompanying instructions.

RETURN TO: **EURO-PRO Operating LLC**, 4400 Bois Franc, St Laurent, Qc, H9S 1A7

**V1925** \_\_\_\_\_  
Appliance model

---

Date purchased \_\_\_\_\_ Name of store \_\_\_\_\_

---

Owner's name \_\_\_\_\_

---

Address \_\_\_\_\_ City \_\_\_\_\_ Prov. \_\_\_\_\_ Postal Code \_\_\_\_\_

# IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic safety precautions should always be observed, including the following:

**READ ALL INSTRUCTIONS BEFORE USING YOUR CORDLESS SWEEPER.**

 
**WARNING:** To reduce the risk of fire, electrical shock, or injury:

- Do not** charge this unit outdoors.
- Do not** use outdoors or on wet surfaces.
- Do not** allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not** use with damaged cord or plug. **Do not** use cordless sweeper if it has been dropped, damaged, left outdoors, or dropped in water. Return it to **EURO-PRO Operating LLC** for examination, repair or adjustment.
- Do not** abuse the charger cord. **Never** carry the charger or base by the cord or yank to disconnect from an outlet; instead grasp the charger and pull to disconnect.
- Keep charger cord away from heated surfaces.
- This product includes rechargeable nickel cadmium batteries. Batteries must be recycled or disposed of properly. **Do not incinerate batteries or expose to high temperatures**, as they may explode.
- Do not** handle plug or appliance with wet hands.
- Do not** put any object into openings. **Do not** use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not** pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not** attempt to change accessories while unit is running.
- Use extra care when cleaning on stairs.
- Do not** use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
- Read and follow all label, operational and marking instructions.
- Do not** use charger with an extension cord. Plug charger directly into an electrical outlet. Use charger only in a standard (120V., 60Hz) electrical outlet.
- Do not use the cordless sweeper without dust cup container in place.**
- Store the cordless sweeper indoors. Store after use to prevent accidents.
- Leaks from battery cells can occur under extreme conditions. If the liquid, which is 20-35% solution of potassium hydroxide, gets on the skin – wash immediately with soap and water or neutralize with a mild acid such as lemon juice or vinegar. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of **10 minutes** and seek medical attention.
- Use only on dry, indoor surfaces.
- Do not** use for any purpose other than described in this user's guide.
- Do not** attempt to use the charger with any other product or attempt to charge this product with another charger. **Use only charger model K-TEC KA12D075015023U supplied with this appliance.**
- The appliance must be disconnected from the supply when removing the battery.

# SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

# GETTING TO KNOW YOUR CORDLESS RECHARGEABLE SWEEPER

with NO TOUCH DUST CUP

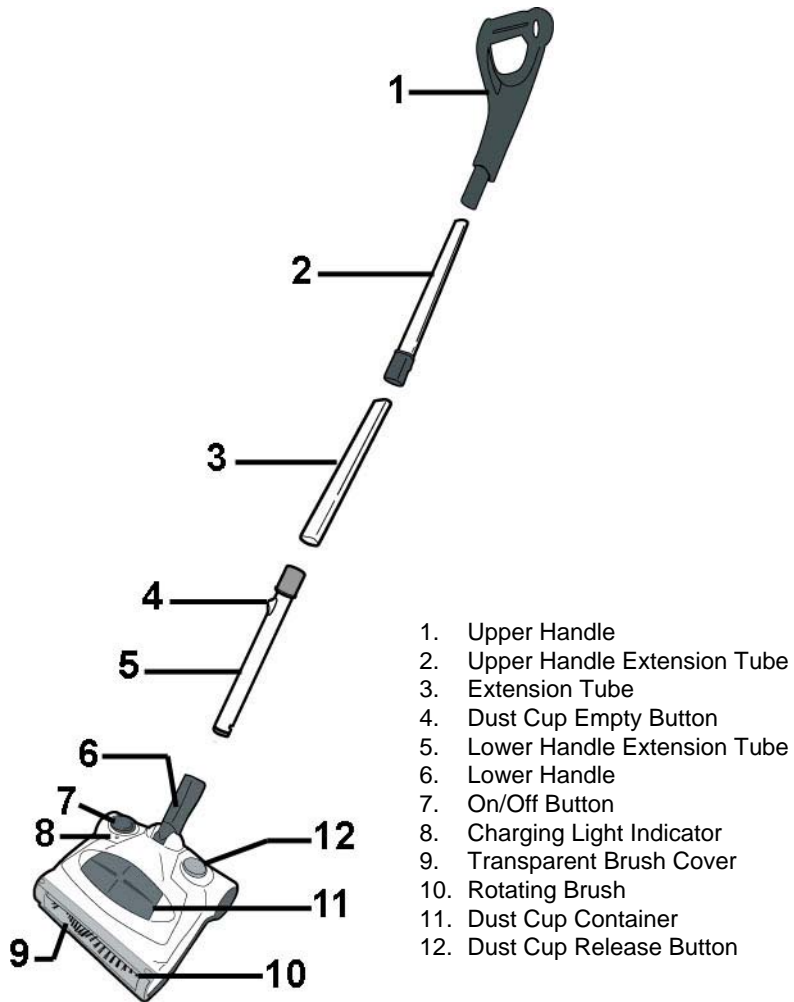

\* Illustrations may differ from actual product.

**NOTE:** The cordless sweeper is shipped with the batteries uncharged. Charging of the unit for 20 hours prior to first use is required. Use replacement battery # XBV1925 only.

# OPERATING INSTRUCTIONS

## TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
<b>SWEEPER WILL NOT OPERATE</b>	<ol style="list-style-type: none"> <li>1. Batteries discharged</li> <li>2. No power in electrical outlet supplying charging adapter.</li> <li>3. Unit needs servicing.</li> <li>4. Battery misplaced.</li> <li>5. Brush roll jammed.</li> </ol>	<ol style="list-style-type: none"> <li>1. Charge unit.</li> <li>2. Check fuse or breaker. Replace fuse/reset breaker.</li> <li>3. Call Customer Service at: <b>1 (800) 798-7398</b>.</li> <li>4. Ensure that the wire terminal connectors are securely attached.</li> <li>5. Clear any obstruction from the rotating brush. Turn unit off for 10 seconds, then restart.</li> </ol>
<b>SWEEPER WILL NOT PICK-UP</b>	<ol style="list-style-type: none"> <li>1. Dust container is full.</li> <li>2. Unit needs recharging.</li> </ol>	<ol style="list-style-type: none"> <li>1. Empty dust cup container.</li> <li>2. Charge unit.</li> </ol>
<b>DUST ESCAPING FROM SWEEPER</b>	<ol style="list-style-type: none"> <li>1. Dust container is full.</li> </ol>	<ol style="list-style-type: none"> <li>1. Empty dust container.</li> </ol>
<b>ROTATING BRUSH WILL NOT PICK UP</b>	<ol style="list-style-type: none"> <li>1. Unit clogged.</li> <li>2. Dust container is full.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check for excessive material on brush or in bottom of sweeper. Remove obstruction from brushes and/or sweeper.</li> <li>2. Empty and clean dust container.</li> </ol>
<b>SWEEPER WILL NOT CHARGE</b>	<ol style="list-style-type: none"> <li>1. Electrical outlet not working.</li> <li>2. Charging adapter not working.</li> <li>3. Batteries no longer functioning.</li> <li>4. Unit left in "On" position.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check to ensure outlet is working properly (easily checked by plugging in another appliance).</li> <li>2. Replace charging adapter.</li> <li>3. See battery disposal.</li> <li>4. Press switch to "Off".</li> </ol>
<b>DUST CUP WILL NOT FIT BACK INTO SWEEPER HOUSING</b>	<ol style="list-style-type: none"> <li>1. Dirt and dust build up in sweeper housing.</li> </ol>	<ol style="list-style-type: none"> <li>1. Clear area of dirt and dust.</li> </ol>

## Maintenance & Cleaning Instructions

### Maintenance and Cleaning Instructions

To improve the performance and life of your unit, we recommend you do the following:

1. Once a month clean the unit with a dry cloth, including the chamber which the dust cup container fits into. Remove any hair, fiber or other materials that may have built up in the chamber, and on the rotating brush.
2. **Do not** use abrasive materials to clean the sweeper. **Do not immerse the unit in water.**
3. **Do not** pick up liquids or use on wet floors.
4. **Do not** use on concrete, tar or similar rough surfaces.
5. **Do not** pick up pieces of string or fabrics with the sweeper.
6. **Do not** clean tasseled or frayed carpets with the sweeper.

## Operating Instructions

### Assembling Your Cordless Sweeper

Your cordless sweeper will require very little assembly. You should remove it from the carton and familiarize yourself with all the components listed per the exploded view drawing (page 2). This will help you in the assembly and operation of your cordless sweeper.

**Note:** The charging adapter is shipped inside the packaging.

**Note:** The lower extension tube has the dust cup empty button on it. This tube should be inserted into the lower handle.

1. Insert the lower handle extension tube into the lower handle. (Fig. 1a) Push until you hear it click into place. Push the extension tube into the lower handle extension tube. (Fig. 1b) Insert the upper handle extension tube into the extension tube. (Fig. 1) Insert the upper handle into the upper handle extension tube.

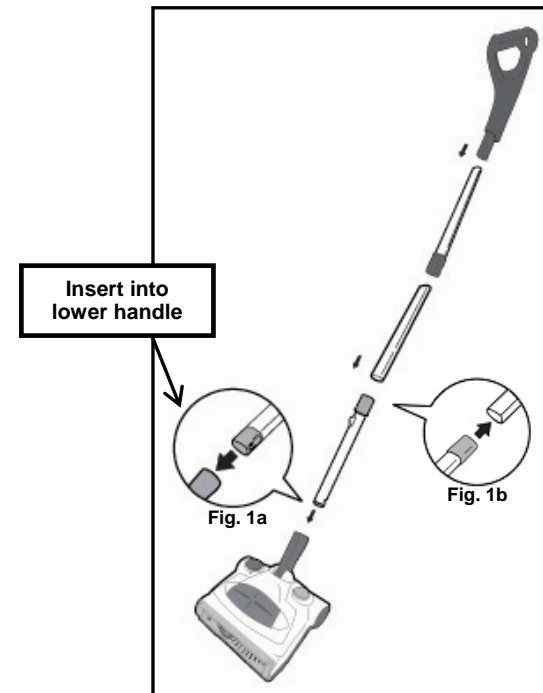


Fig. 1

2. Place the handle into the upward storage position.

## Operating Instructions

### Charging Instructions

1. Connect the charger plug to the charging jack or hole on the backside of the sweeper. Plug the charging adapter into the wall outlet. (120V., 60Hz.) Use only **K-TEC charger KA12D075015023U**. (Fig. 2)

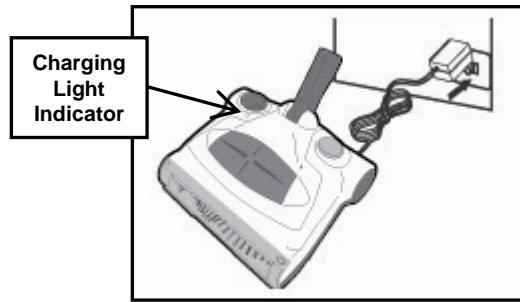


Fig. 2

2. This cordless sweeper is powered by Ni-Cd batteries. Before first use, they must be charged for a **minimum 20 hours**.
3. When recharging the unit, **the unit must be turned off**.
4. The charging light indicator on the top of the sweeper will illuminate to indicate that the sweeper is properly charging.
5. To recharge, repeat step #1 above. Charging times will vary depending upon the amount of usage between charging cycles.

**Note:** If when you place the sweeper to recharge and the charging indicator light does **NOT** illuminate, then press the **On/Off** button once to turn the sweeper off. The charging indicator light should now light up.

**Note:** Peak performance may only be realized after the unit has been charged and discharged two (2) or three (3) times.

**Important:** To maintain peak performance of your cordless sweeper, it is recommended that the unit be fully discharged, then completely re-charged at least once a month.

### Caution:

- Use only the adaptor supplied with the sweeper.
- **Do not** clean the sweeper while unit is charging.
- **Do not** attempt to remove the battery pack from the unit to charge it.
- **Never** attempt to throw the battery pack or unit into a fire or incinerate it.
- **Do not** attempt to remove or damage the battery casing.

## Operating Instructions

3. To close the dust cup container press firmly on the bottom panel until it snaps back into place. To replace the dust cup, position onto the sweeper power head and press down firmly until it snaps back into place.
4. Periodically remove the transparent brush cover on the front of the cordless sweeper and remove any build up of lint, hair or fiber on the rotating brush. To remove the cover - grip the cover from the bottom, pull out and upward until the cover unlocks from the side slots and tabs located on the top of the sweeper. Carefully cut away threads or hair with scissors. (Fig. 9)



Fig. 9

**Caution:** Do not accidentally turn unit on while cleaning.

**Caution:** Any electronic or electrical appliance should not be stored in or exposed to areas of high heat or humidity. Do not store your cordless sweeper close to stoves, radiators, furnaces or in a bathroom or bathing area.

## Operating Instructions

### Cleaning The Dust Cup Container

To achieve the best performance, empty the dust cup container after each use.

1. Press the **dust cup release button** with your foot. (Fig. 7)

**Note:** Be careful not to accidentally turn the unit on.



Fig. 7

2. Lift out the **dust cup container**, which is connected to the handle. Hold over a trash bin and push down on the **dust cup empty button** located on the handle. (Fig. 8)

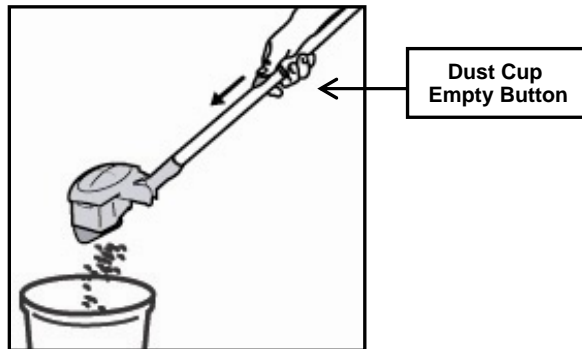


Fig. 8

## Operating Instructions

### To Maximize The Life Of Your Ni-cd Batteries

1. Charge for a **minimum of 20 hours** before initial use. Failure to do so will reduce the product's battery life significantly.
2. **Do not** store the unit with the charging adaptor attached and plugged in.
3. Only recharge when the batteries are fully discharged (or as close to fully discharged as possible).
4. **Do not** store in areas of high temperature or humidity.
5. After three (3) months of storage, the product should be fully discharged and then recharged to maximize battery power.
6. Use only the charger supplied with the product. If other chargers are used, the batteries can fail causing damage to the battery, product or personal property.
7. Ni-Cd batteries have a long useful life but at some time they will need to be replaced. To purchase replacement batteries and parts visit or website [www.sharkcompany.com](http://www.sharkcompany.com) or call customer service at 1 (800) 798-7398.

**Note:** If the product has never been used or has been stored for an extended period of time without use – it will take several complete charge and discharge cycles to realize the full operational time of your product.

### Battery Removal & Disposal

**Note:** If uncertain as to how to remove your battery pack, we suggest you take your sweeper to a reputable small appliance service technician to have this service performed.

Follow the steps in "**Removal of Battery Pack**" when battery removal is required.

This sweeper is equipped with Ni-Cd batteries and you need to dispose of them properly. When the batteries are no longer good for use, they must be removed from the sweeper for disposal. **Do not** remove the batteries for any reason other than disposal of them. **Call your nearest recycling center for information on the recycling and disposal of Ni-Cd batteries.**

**Warning:** You must never use ordinary batteries for replacement as these may leak and cause damage. Use only battery pack **XBV1925** provided for replacement.

## Operating Instructions

### Removal of Battery Pack

1. Turn unit over so that the base is facing upwards.  
**Be careful not to turn the unit ON.**
2. Push in locking tab and lift off the battery compartment cover. (Fig. 3)

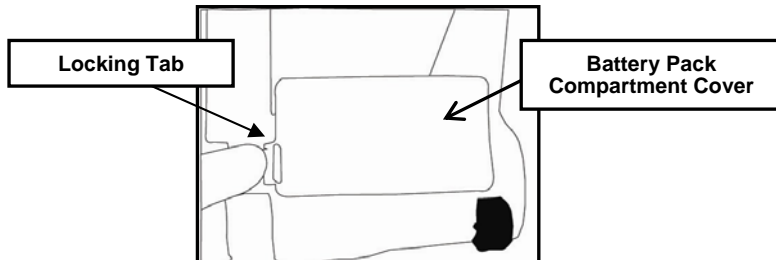


Fig. 3

3. Carefully lift out the battery pack and disconnect the wire terminals by pulling apart the wire terminal connector. Remove the battery pack from the unit. (Fig. 4)


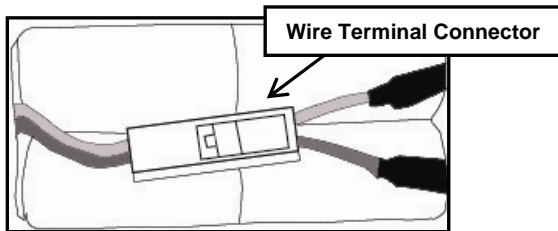


Fig. 4

4. Connect the wire terminal connector from the unit to the wire terminal connector of the new battery pack, and replace the battery pack into the unit. Replace the cover and press until it snaps in place.
5. Follow instructions for initial battery charging. Please call customer service at **1 (800) 798-7398** if there are any problems removing batteries.

**DO NOT ATTEMPT TO REPLACE THE BATTERIES USED IN THIS PRODUCT WITH ANY OTHER TYPE OF BATTERY.**

**Important:** This appliance contains Ni-Cd batteries. The batteries must be recycled or disposed of in accordance with local regulations. Please consult your Yellow Pages or local recycling center for more information.

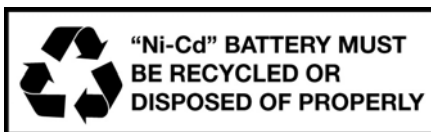

## Operating Instructions

### How To Operate Your Cordless Sweeper

1. **Before using, please ensure that the cordless sweeper has been initially charged for 20 hours.** Your cordless sweeper will only operate properly when the batteries are fully charged. Your sweeper will operate for varying lengths of time on a full charge. This will depend upon the type of surface being cleaned (longer operating time on bare floors vs. carpets).
2. Push the **On/Off** switch to operate the unit. To turn off, press switch again. (Fig. 5)

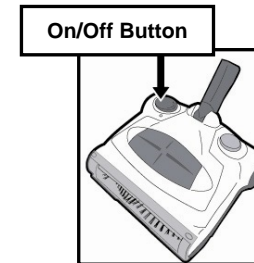


Fig. 5

3. To release the handle to a comfortable position, gently apply pressure to the top of the sweeper head with your foot while pulling back on the handle. (Fig. 6)



Fig. 6