 


# **EURO-PRO** X<sup>®</sup>

## **Classic Deluxe Toaster**

**Use and Care Instructions  
Model EP325**

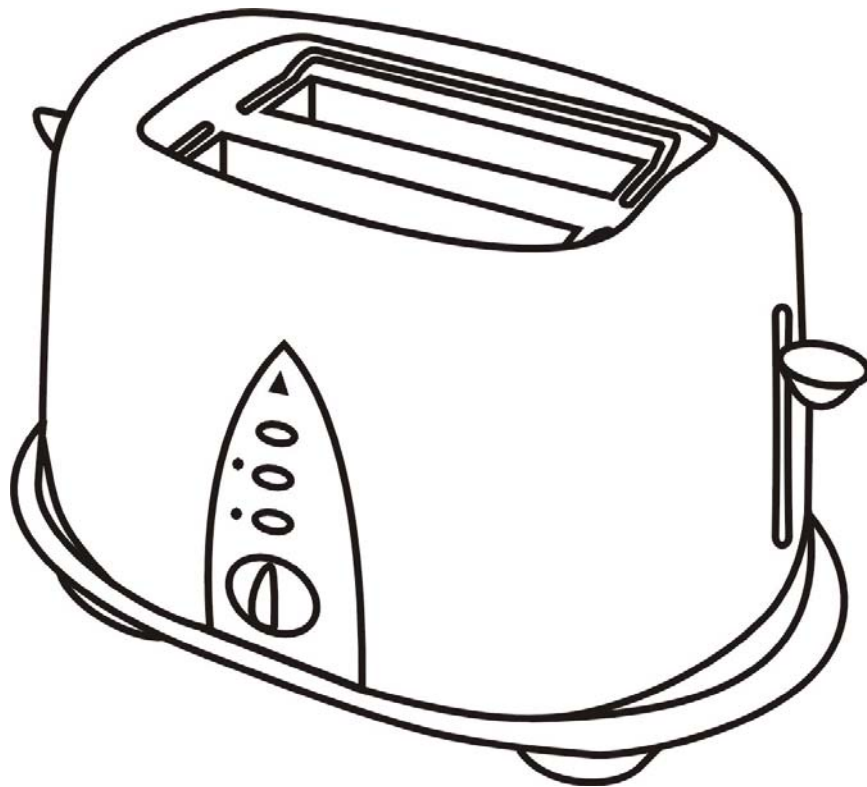

Congratulations! You are the owner of the **Euro-Pro** Classic Deluxe Toaster. To fully enjoy the advantages of your appliance, please take a few minutes to read all the “Use & Care Instructions” and keep the instructions handy for easy reference. Please review the product warranty and mail the owner registration form.

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions carefully.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord or plug in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, has been dropped or damaged in any manner. Return the appliance to **EURO-PRO Operating LLC** for examination, repair or adjustment. Always call **EURO-PRO Operating LLC** first if appliance needs servicing. See warranty.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over the edge of the table, counter or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use appliance for other than intended use.
12. Oversize foods, metal foil packages or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
13. Do not toast "buttered" items or try to make toasted sandwiches in the toaster, as this will cause or result in a fire.
14. Do not use torn, curled up, or misshapen slices of bread in the toaster as these may jam the eject mechanism.
15. A fire may occur if toaster is covered or touching flammable material, including curtains, draperies, walls and the like when in operation.
16. Always unplug toaster first before attempting to dislodge food that is jammed in the toaster.
17. Do not attempt to dislodge food with metal utensils especially when toaster is plugged in.
18. Do not cover crumb tray or any part of toaster with metal foil. This will cause overheating and risk of fire.
19. Use only with plug and cord provided.
20. Do not wrap the power supply cord around the toaster, use the cord storage clips underneath the base.
21. Do not leave appliance unattended when in use.

## SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY SPECIAL SAFETY INSTRUCTIONS

This appliance has a short cord to reduce hazards of becoming entangled or tripping over a longer cord. An extension cord may be used if the electrical rating of the extension cord is equal to or greater than the rating of the electric grill. Use only an extension cord rated 15 amperes or greater. Care must be taken to arrange the extension cord so that it will not drape over countertop or tabletop where it can be pulled on by children or tripped over.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

 
## Main Components

# EURO-PRO X<sup>®</sup>

## Classic Deluxe Toaster


Model EP325

120 V~, 60 Hz., 950 W.

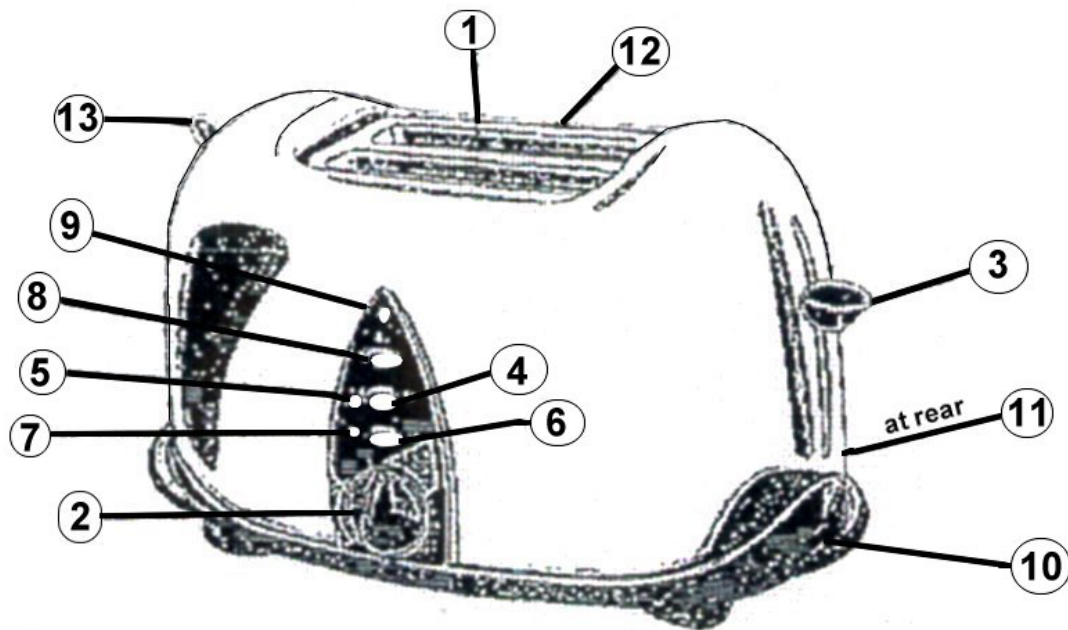

- |                          |                                       |
|--------------------------|---------------------------------------|
| 1. Bread Slots           | 7. Defrost Light                      |
| 2. Browning Control Knob | 8. Cancel Button                      |
| 3. Bread Carriage Lever  | 9. Power On Light                     |
| 4. Reheat Button         | 10. Cool Touch Handle                 |
| 5. Reheat Light          | 11. Removable Crumb Tray (see page 6) |
| 6. Defrost Button        | 12. Bun Warmer Rack (see page 5)      |
|                          | 13. Bun Warmer Lever                  |

# Features

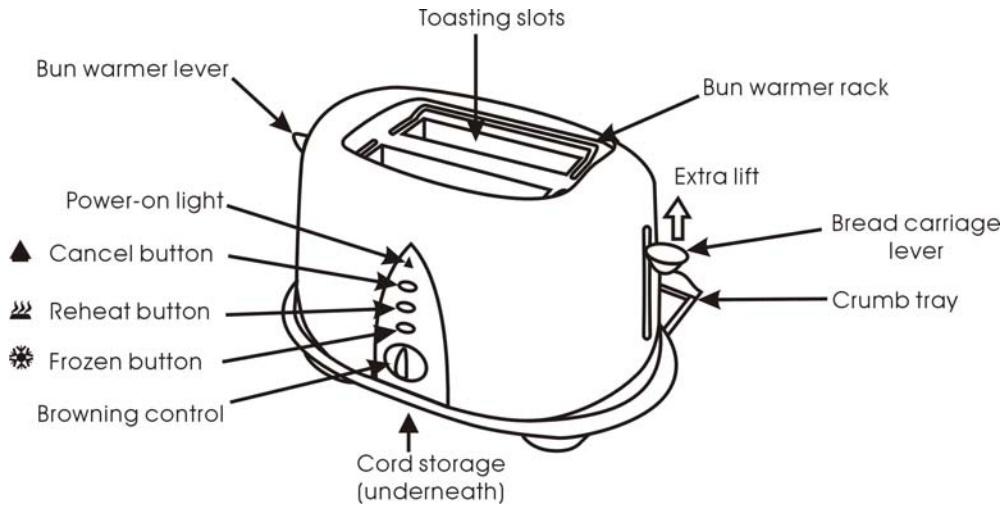 

This toaster is equipped with many safety features to give you optimum performance.

- Extra wide slots to hold waffles, thick slices of bread, bagels, etc.
- Electronic thermostat ensures precise browning every time.
- Automatic safety cutoff turns heating elements off if bread carriage gets stuck in toaster.
- Safety-Lift toast lifter raises bread carriage approximately 3/4" to safely remove small pieces of toast, bagel, etc.
- 3 Electronic Control Buttons: Cancel button (8) instantly stops toasting  
Reheat button (4) warms toast without additional browning  
Defrost button (6) defrosts and toasts bread, bagels, waffles etc. in one step.
- Warming Rack to warm croissants, buns, rolls, etc.
- Crumb tray makes cleanup easy and quick.
- Seven toast settings from light to dark.
- Cord wrap for easy storage.

## Before Using for the First Time

- A. Make sure that you have read and understand the **IMPORTANT SAFEGUARDS** section.
- B. Remove all packing paper and plastic from unit. Check inside the bread slots to make sure that no packaging materials or literature have fallen inside. Make sure crumb tray is in correct position. See **REMOVING, CLEANING AND REPLACING THE CRUMB TRAY** section on page 6.
- C. Using a soft cloth, gently wipe away all the dust particles from the outside of toaster.
- D. In order to remove any possible residues from the manufacturing process, the toaster should be heated twice at the highest temperature (with the toaster empty).
- E. Toaster slots should be empty before you plug into wall outlet.

**Note:** When using the toaster for the first time, a light smoke may appear. This is completely harmless and will disappear after a few uses.

# How to Use Your Toaster

## **Toasting:**

1. Position the toaster on a firm, level surface, away from any flammable surfaces (such as curtains, etc.).
2. Plug toaster into electrical wall outlet.
3. Insert slices of bread or bagels into Bread Slots (1). (Maximum thickness 25mm/1 inch.)
4. Select the desired degree of toasting using the Browning Control Knob (2), (#1 being the lightest and #7 being the darkest). Should you find that the setting that you have selected is too dark for your taste, press the Cancel Button (8) and reset the Browning Control Knob (2). Moving the Browning Control Knob (2) after toasting has begun will **NOT** change the degree of browning.
5. Fully depress the Bread Carriage Lever (3) until it engages and locks into position - the Bread Carriage Lever (3) will not lock down unless the toaster is plugged into the electrical supply. Power On Light (9) will light up.
6. When the toasting cycle is completed, the toast will automatically pop up. For small items such as English muffins, the Bread Carriage Lever (3) may be raised to allow for these items to be removed after toasting cycle is completed.
7. Should you find that the Browning Control Knob (2) setting is too dark, press the Cancel Button (8), reset the Browning Control Knob (2) setting and press the Bread Carriage Lever (3) down until it locks into position and "Power On Light" (9) comes on. You **MUST** press the Cancel Button (8) when resetting the Browning Control Knob (2) at all times.
8. When the Toasting Cycle is complete, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simply press the Cancel Button (8) to interrupt.
9. After use, unplug the toaster from the electrical outlet and let it cool thoroughly before cleaning and/or storing.

**Note:** The Bread Carriage Lever (3) will not lock down unless the toaster is connected to the electrical supply.

- Caution:**
1. Relatively dry slices of bread or bread that has already been toasted once, will become brown much more quickly and may, under certain circumstances, catch fire. Set the Browning Control Knob (2) to a lower setting if toasting the same piece of bread twice and do not leave toaster unattended.
  2. Do not toast food products or toaster pastries with frosting or runny fillings that could drip into the toaster and cause possible damage or result in the risk of fire.
  3. Never toast buttered breads or foil-wrapped foods as they will damage the toaster or result in the risk of fire or shock hazard.

**Note:** Should a piece of bread become trapped in the slot(s), the automatic safety cutoff will turn the toaster "Off", avoiding a fire hazard. To remove the bread, unplug the toaster and let it cool thoroughly. Carefully remove the item without touching the heating elements.

**Caution: Never use metal utensils to remove bread from the toaster.**

## **Settings on Browning Control Knob (2):**

- 1-3 Light
- 3-5 Medium
- 5-7 Dark

## **Tips on Toasting:**

Please note that when toasting different breads the different moisture levels from one type to another can result in varying toasting times.

- If bread is slightly dry, use a lower setting than you normally would.
- For very fresh bread or whole wheat bread, use a higher setting than normal.
- Breads with uneven surfaces (such as English muffins) will require a longer toasting time.
- When toasting raisin or other fruit bread, remove any loose fruit from the surface before placing into the toaster. This will prevent them from falling into the bottom or sticking to the guard wires in the slots.
- Sweet bread products (tea cakes, raisin bread, etc.) brown much quicker than regular bread, and should be toasted on the lighter settings.
- Thick slices of bread (1/2" to 1" in thickness) may require 2 cycles of toasting.
- Do not use torn, curled up or misshapen slices of bread as these may jam the ejection mechanism and could catch fire.

## **Defrosting:**

The Defrost Button (6) is designed to first defrost and then toast the bread - this slightly extends the toasting cycle.

1. Plug toaster into electrical wall outlet.
2. Insert slice(s) of bread into toaster,
3. Set the Browning Control Knob (2) to desired setting:
  - Setting 1-3: Refrigerated breads and thinner frozen items such as pancakes.
  - Setting 3-5: Toaster pastries, frozen waffles and refrigerated bagels.
  - Setting 5-7: Thicker frozen items such as bagels, hand cut breads and thick French Toast.
4. Press the Bread Carriage Lever (3) until it locks into position and the Power On Light (9) comes on.
5. Press the Defrost Button (6), Defrost Light (7) will come on. Bread will defrost first, and then go right into toasting cycle.
6. When the Defrost/Toasting Cycle is complete, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simply press the Cancel Button (8) to interrupt.
7. After use, unplug the toaster from the electrical outlet and let cool thoroughly before cleaning and/or storing.

## **Reheating:**

1. Plug toaster into wall electrical outlet.
2. Insert bread into slot(s).
3. Press the Bread Carriage Lever (3) until it locks into position and Power On Light (9) comes on.
4. Press Reheat Button (4) once. Reheat Light (5) will come on.
5. Bread will pop up after the Reheating cycle is complete. Bread Carriage Lever (3) may be raised to allow for smaller items to be easily removed after Reheating cycle is completed.
6. After use, unplug the toaster from the electrical outlet and let cool thoroughly before cleaning and/or storing.

**Note:** You do not have to set the Browning Control Knob (2) for this cycle.

**Warning: Never use metal utensils to remove bread from toaster.**

## **Bun Warmer Rack (12):**

The Bun Warmer Rack (12) can be used to crisp buns which have become limp or to warm rolls or croissants that are too large to fit inside the toaster slot(s). For faster warming or to prevent over browning, cut the bun/roll in half.

**Note:** Foods being warmed or crisped should not completely cover the toaster top, allow space for adequate air flow.

**Important:** Do not place food containers such as plates or foil pans on top of the Bun Warmer Rack (12).

1. Lift Bun Warmer Lever (13). (Fig. 1)
2. Center the food on the Bun Warmer Rack (12).
3. Set the Browning Control Knob (2) to position 4-5 for crisping or lower for warming.
4. Press down the Bread Carriage Lever (3). The Power On Light (9) will come on.
5. When cycle is completed, carefully remove the crisp/warm food from the Bun Warmer Rack (12).
6. Lower the Bun Warmer Rack (12) by pressing the Bun Warmer Lever (13) down when finished using and during regular toasting. The Bun Warmer Rack (13) should be at the rest position when toasting bread in the Bread Slot(s) (1). Never put bread in the Bread Slot(s) (1) while heating buns on the Bun Warmer Rack (12).
7. When finished using the unit, unplug the toaster from the electrical outlet and let cool thoroughly before cleaning and storing.

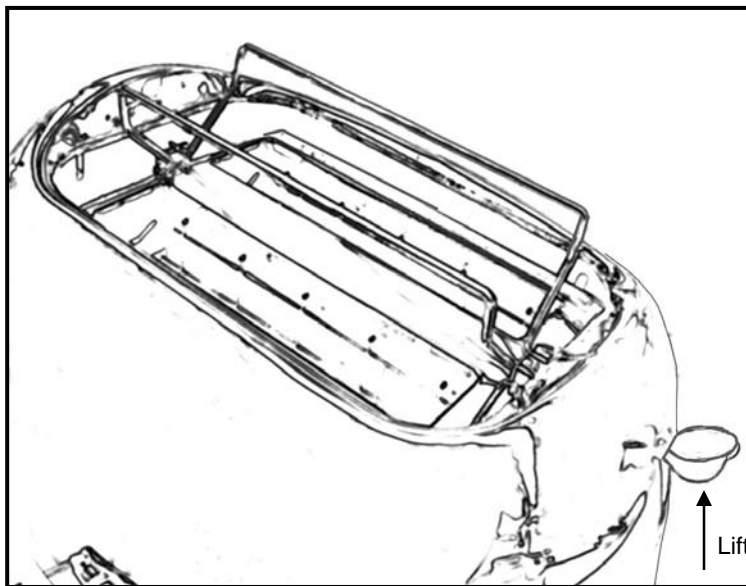 


Fig. 1

**Warning:** Never put bread in the Bread Slot(s) (1) while heating buns on the Bun Warmer Rack (12).

## **Canceling a Cycle:**

If, at anytime, you wish to stop a cycle midway through the operation, press the Cancel Button (8). This can be used during the Toasting, Defrosting, Reheating cycles as well as when using the Bun Warmer Rack (12).

## **Resetting the Browning Control Knob (2):**

To change the setting on the Browning Control Knob (2), you must first press the Cancel Button (8), reset the Browning Control Knob (2) and then proceed with the Toasting or Defrosting cycles.

## **Cleaning the Crumb Tray:**

1. Unplug the toaster from the electrical outlet and allow to cool thoroughly.
2. Gently grip the Removable Crumb Tray (11) and slide out from under the toaster. (Fig. 2)
3. Dispose of the crumbs, wipe out the remaining crumb from the Removable Crumb Tray (11) with a mild dishwashing detergent. Dry thoroughly before replacing the removable Crumb Tray (11) back into the toaster.
4. Gently slide the Removable Crumb Tray (11) back into its place.

**Note:** Never operate the toaster without the Removable Crumb Tray (11) in place. Do not cover the Removable Crumb Tray (11) or any other part of the toaster with foil. To avoid damage to the toaster heating elements, **NEVER** use any pointed or sharp utensils for cleaning the inside of the toaster. Empty the Removable Crumb Tray (11) periodically.

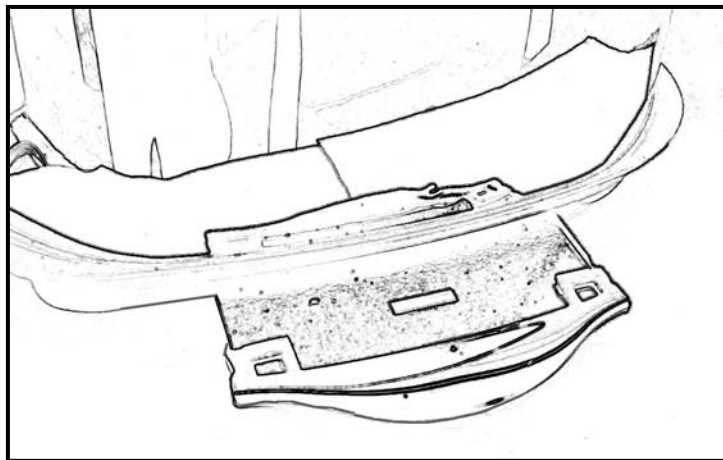 


Fig. 2

**Warning: Crumbs will accumulate in the Removable Crumb Tray (11) and could catch fire if not emptied periodically.**



## Care & Maintenance

1. Unplug toaster from electrical outlet. Make sure that toaster is completely cool before cleaning.
2. Removable Crumb Tray (11) should be cleaned every 4-5 uses.  
(See "Cleaning the Crumb Tray" Page 6)
3. Do not use harsh or abrasive cleaning agents. Outside surface may be wiped clean with a soft, damp cloth and dried thoroughly. If necessary, a mild dishwashing detergent may be applied to the cloth but not directly to the toaster.
4. Do not immerse toaster in water or any other liquid.
5. Do not allow plastic wrappings to lay against the toaster while toaster is being used. This will result in melting the plastic onto the outside surface of your toaster.

## Cord Storage

1. Unplug the toaster from the electrical outlet and let the unit cool thoroughly.
2. Turn the toaster on its side and wrap the cord around the inside base for storing. (Fig. 3)

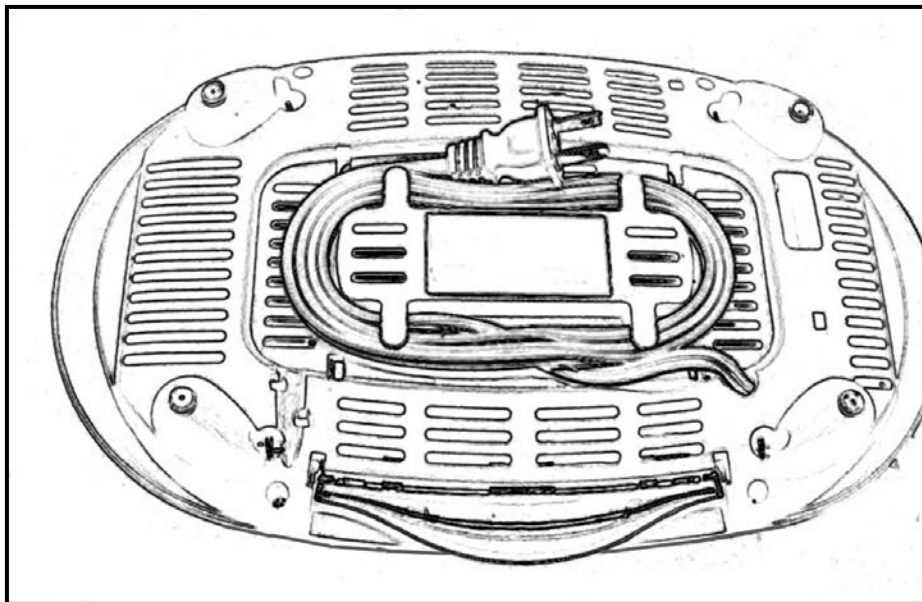 


Fig. 3



## ONE (1) YEAR LIMITED WARRANTY

**EURO-PRO Operating LLC** warrants this product to be free from defects in material and workmanship for a period of one (1) years from the date of purchase when utilized for normal household use.

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, return the complete appliance and accessories, freight prepaid to EURO-PRO Operating LLC. Call customer service at 1 (800) 798-7398 or visit our website at [www.euro-pro.com](http://www.euro-pro.com)

If the appliance is found by **EURO-PRO Operating LLC** to be defective in material or workmanship, **EURO-PRO** will repair or replace it free of charge. Proof of purchase date and \$9.95 to cover the cost of return shipping and handling must be included.\* The liability of **EURO-PRO Operating LLC** is limited solely to the cost of the repair or replacement of the unit at our option. This warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This limited warranty does not cover damage caused by misuse, abuse, negligent handling or damage due to faulty packaging or mishandling in transit.

This warranty is extended to the original purchaser of the unit and excludes all other legal and/or conventional warranties. The responsibility of **EURO-PRO Operating LLC**, if any, is limited to the specific obligations expressly assumed by it under the terms of the limited warranty. **In no event is EURO-PRO Operating LLC** liable for incidental or consequential damages of any nature whatsoever. Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**\*Important: Carefully pack item to avoid damage in shipping. Be sure to include proof of purchase date and to attach tag to item before packing with your name, complete address and phone number with a note giving purchase information, model number and what you believe is the problem with item. We recommend you insure the package (as damage in shipping is not covered by your warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE".**

### OWNERSHIP REGISTRATION CARD

Please fill out and mail the product registration card within ten (10) days of purchase in order to validate the foregoing Limited Warranty. The registration will enable us to contact you in the unlikely event of a product safety notification. By returning this card you acknowledge to have read and understood the instructions for use, and warnings set forth in the accompanying instructions. **RETURN TO:**

**EURO-PRO Operating LLC, 4400 Bois Franc, St. Laurent, Quebec, H4S 1A7**

EP325

---

Appliance model

---

Date purchased

Name of store

---

Owner's name

---

Address

City

State

Zip Code