

INSTRUCTIONS AND PARTS LIST

8 & 6 DISC HARROWS

12" DIAMETER

INSTRUCTIONS FOR ASSEMBLING

Remove gang bolts (1) from the frames and assemble discs (2) into right and left hand gangs, as shown. (Right and left hand is determined by the location of the adjustment arm (3) in relation to the curve of the discs.) Insert bolt through discs and wood bearings (4) and fasten with washer and nut. Then clamp disc gangs to the tool bar (5) with clamps (6) to the rear as shown.

ADJUSTMENTS

Disc gangs are reversible and can be set to throwin or throw-out. To reverse discs remove cotter pin from adjustment link (7), swing disc gang half way around and replace cotter pin.

To angle discs for greater or less penetration remove cotter pin, swing discs to desired angle and replace cotter pin in adjustment link. Set both gangs to the same angle. (There are two holes in the adjustment arm (3) so half spacing may be made to obtain finer angle adjustments.)

Tilt adjustment arm (8) provides for changing the tilt of the disc gang. Raising the arm causes the outside disc to penetrate deeper than the inner ones,

as is desirable when hilling. Tilt adjustment arm also permits perfect leveling of the discs at any depth of penetration.

Loosen bolts (9) on draw bar end to adjust handles of tractor to desired height, then retighten bolts.


When using as a disc harrow (with both gangs set to throw-out) it is desirable to double disc by lapping to avoid leaving ridges.

LUBRICATION

To lubricate the wood bearings remove cotter pin from bearings and apply ordinary machine oil.

CAUTION

When assembling disc blades to axle, be sure washers are placed on the inside or dish of the disc.

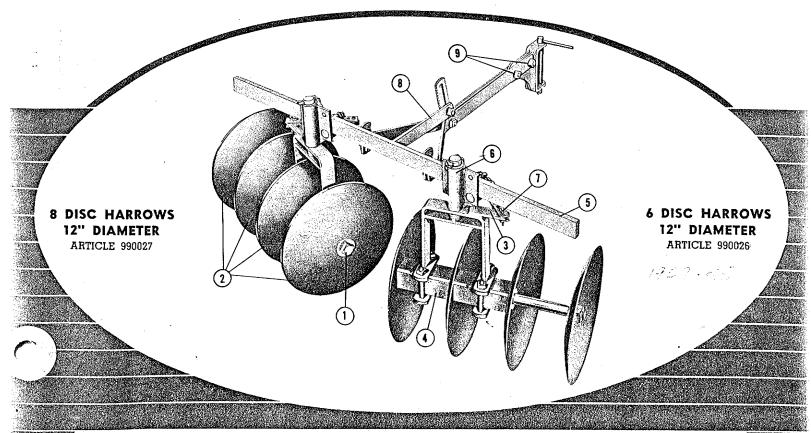

How to Order Repair Parts for Simplicity Garden Tractors and Attachments

The Authorized Simplicity dealer from whom you purchased your tractor and attachments can supply you with any replacement parts you may need. For prompt service, be sure to see your dealer first. He will furnish the correct parts from his stock or order them for you if necessary. However, you may mail-order directly from the factory.

To have your order filled correctly and for prompt ser-


vice, please furnish the following information:

- 1. Model, number and year of purchase of tractor attachment.
- 2. Part number, description, and quantity of part. (See parts list)

Be sure to include postage with your order. We do not pay transportation charges. Shipping weights are shown. Any excess will be promptly refunded.

We reserve the right to change construction, specifications, prices and terms, without notice and without obligation as to tractors and attachments heretofore shipped.

PRICES SHOWN ARE U.S.A. PRICES. PRICES OUTSIDE OF U.S.A. SUBJECT TO LOCAL IMPORT DUTIES, TAXES, ETC.

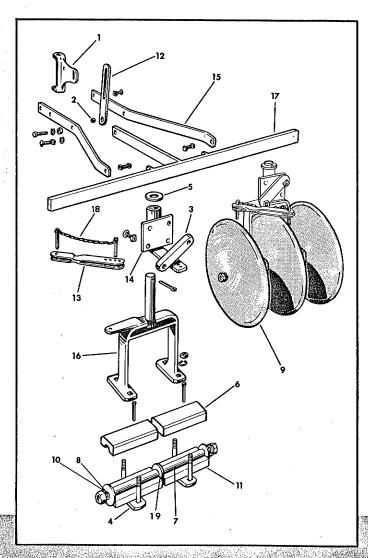

6-12" AND 8-12" DISC HARROW PARTS LIST

Order by Part Number					
Item	Part	Name of Part	Ship.		
No.	No.		Lbs.	Oz.	Each
1	-SSA7A	Draw Bar End 826/00	7 i	8	\$1.05
2	SSC-A4	Adj. Link Spacer - 82976	004	6	.20
3	SSC-A8	Clamp Clip - 828/008	1		.30
4	SSC-A13	Bearing Clip - 828/0/	3	8	.35
5	SSC-A14	Post Washer = 828/014	2	4	.15
6	SSC-A15	Upper Bearing Block - 🕄	8/012	-8	.35
7	SSC-A16A	Disc Spacer - 828/0/6	1	4	.60
8	SSC-A18	Axle—8 Disc only - 979/	0/2	10	.გი'
9	SSC-A19	12" Disc Blade - 89910	1014		1.9
10	SSC-A20	Axle—6 Disc only — 050	120		.4
11	SSC-A21	Lower Bearing Block . 572	8/02	8	.35
12	SSC-A24	Tilt Adj. Link - 828/02	4	10	.40
13	SSC-AX1	Angle Adj. Strap Assembly Clamp Assembly - \$282	-8286	κ12,	.70
14	SSC-BX1		504	14	1.80
15	SSC-C2	Draw Bar - 8283002	Ž	8	.90
16	SSC-CX2	Arch Assembly - \$2835	02	10	2.95
17	SSC-CX3	Cross Bar Assembly 929	218	⇒ 4	4.30
18	116004	Chain, 6 inches	300	6	.15
19	116001	Special Washer		4	.08
L					

BUNDLE-DRAW BAR \$10.85

"-FRAMES
6 DISC 23.40
8 DISC 25.30

BUNDLE-BLADES
6 DISC 14.00
8 DISC 18.50

Litho in U.S.A. — M. P.