



**Swing**  
(Seat moves  
front to back)



**Cradle**  
(Seat moves  
side to side)



**WARNING**

IMPORTANT! KEEP INSTRUCTIONS  
FOR FUTURE REFERENCE.

## Consumer Information



### WARNING

**To prevent serious injury and/or falls and being strangled in the restraint system:**

- Always use restraint system. Never rely on the tray to restrain child.
- Not recommended for children who can sit up by themselves (6 months approximately, until 9 kg/20 lbs).
- Never leave child unattended.
- It is dangerous to use this product on an elevated surface.



### CAUTION

**This product contains small parts in its unassembled state. Adult assembly is required.**

- Please read these instructions before use of this swing.
- Adult assembly is required.
- Tools needed for assembly: Allen Wrench (included) and Phillips Screwdriver (not included).
- Requires four LR20 ("D") alkaline batteries for operation (not included).
- Maximum Weight Limit: 9 kg (20 lbs).

**IMPORTANT!** If your child weighs less than 9 kg (20 lbs), but is really active and appears to be able to climb out of the swing, immediately discontinue its use.

- Product features and decorations may be different than shown in photos.

#### GREAT BRITAIN

Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB.  
Helpline: 01628 500303; [www.service.mattel.com/uk](http://www.service.mattel.com/uk)

#### AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

#### NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

#### ASIA

Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

 
#### MALAYSIA

Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P)  
Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel: 03-78803817, Fax: 03-78803867.

#### Care

- Remove the tray from the seat.
- Unbuckle the restraint system.
- Remove the pad elastic loops from the pegs and unfasten the pad fasteners from the seat.
- Remove the pad from the restraint system.
- Machine wash the pad and toys in cold water with a mild detergent. Do not use bleach. Tumble dry on low heat and remove promptly.
- To clean the seat, restraint system, tray, mobile, storage pouch, toys and motorized frame, use a mild cleaning agent and damp cloth. Rinse with clean water to remove residue.
- Periodically check the swing for loose fasteners or broken parts and tighten as needed.

# Parts

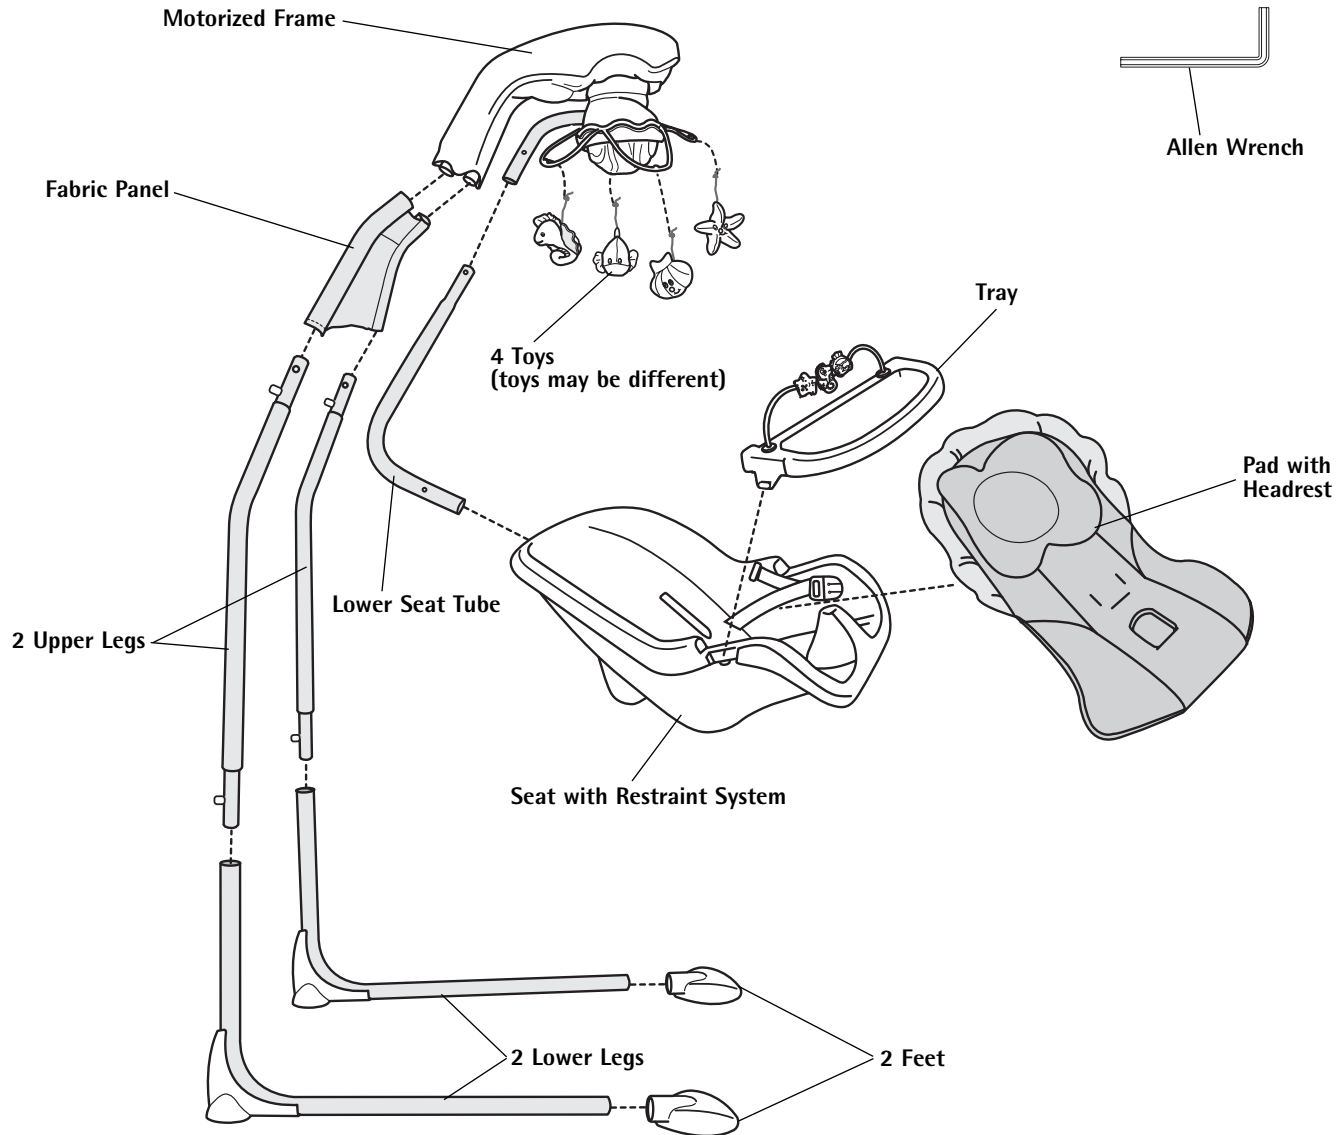

Note: Tighten the screws with the enclosed Allen wrench.



#8 x 1,3 cm Screw - 2



M5 x 30 mm Bolt - 2

 


M5 Lock Nut - 2


ALL SHOWN ACTUAL SIZE

# Assembly


**IMPORTANT!** Before assembly, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. DO NOT use if any parts are missing or broken. Contact Mattel for replacement parts and instructions if needed. Never substitute parts.

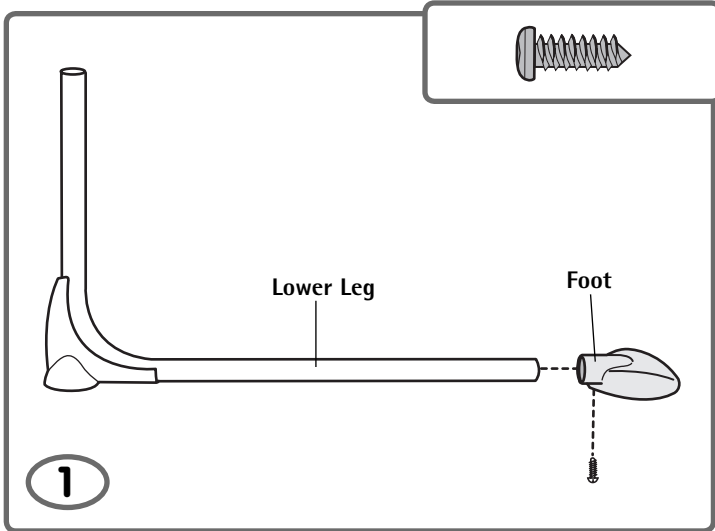

 
- Position a lower leg so that it stands on a flat surface, as shown.
- Fit a foot onto the end of the lower leg.
- Insert a #8 x 1,3 cm screw through the bottom of the foot and into the lower leg. Fully tighten the screw with the Allen wrench.
- Repeat this procedure to assemble the other foot to the other lower leg.

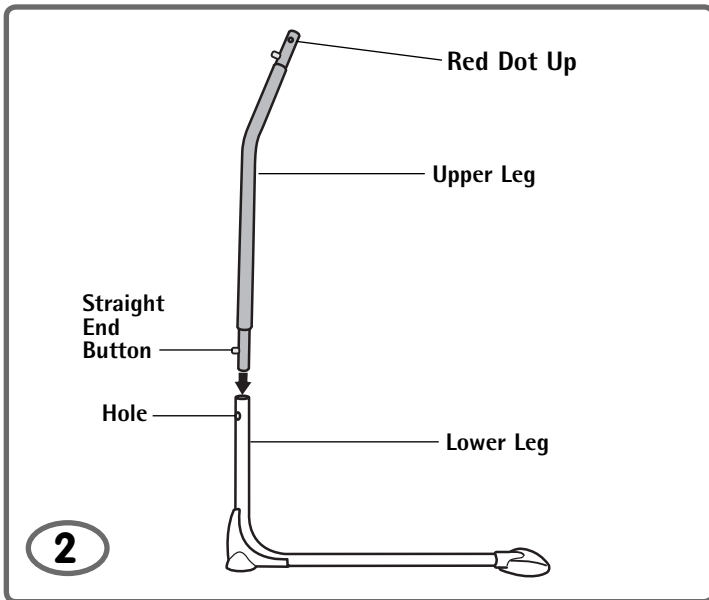

 - Position an upper leg so that the **red dot is up**.
- While pressing the button on the **straight end** of an upper leg, insert the upper leg into a lower leg. Make sure the button on the upper leg "**snaps**" into the hole in the lower leg.
- Repeat this procedure to assemble the other upper leg to the other lower leg.

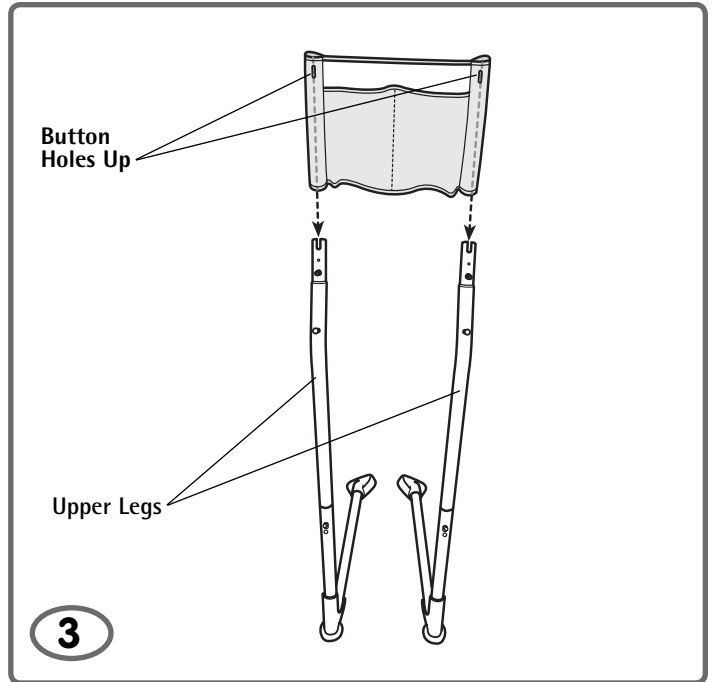


 - Position the fabric panel with the button holes up.
- Position the legs so that the feet are away from you.
- Slide the fabric panel onto the upper legs.

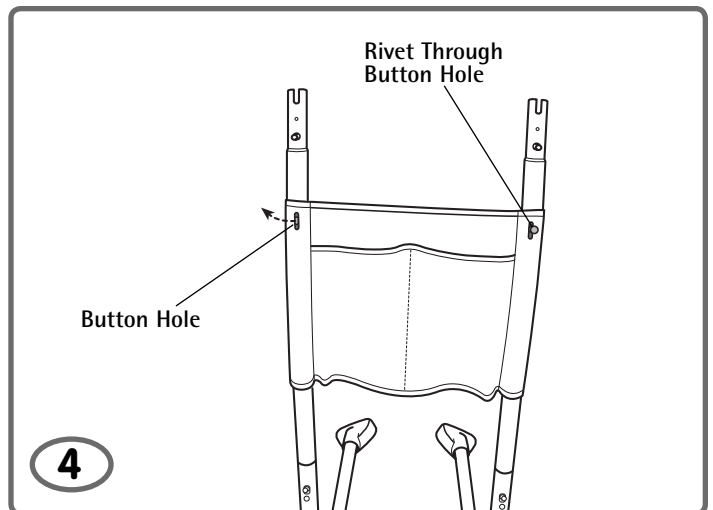


- Fit the rivets on the upper legs through the button holes in top ends of the fabric panel.


# Assembly

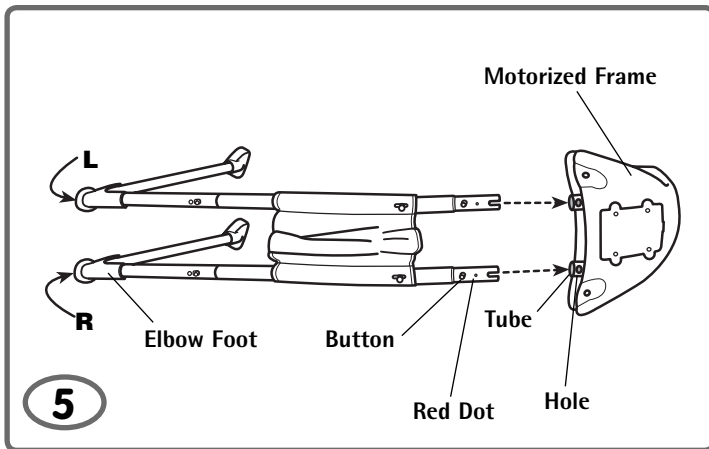 


- Locate the **R** and **L** on the underside of each elbow foot. The **R** indicates the right leg. The **L** indicates the left leg.
- While pressing the upper button on the right leg, fit it into the tube in the motorized frame. Make sure the upper button on the right leg "snaps" into the hole in the tube.
- Repeat this procedure to assemble the left leg to the motorized frame.
- When the legs are assembled correctly to the tubes in the motorized frame, you should **not** see the red dots.

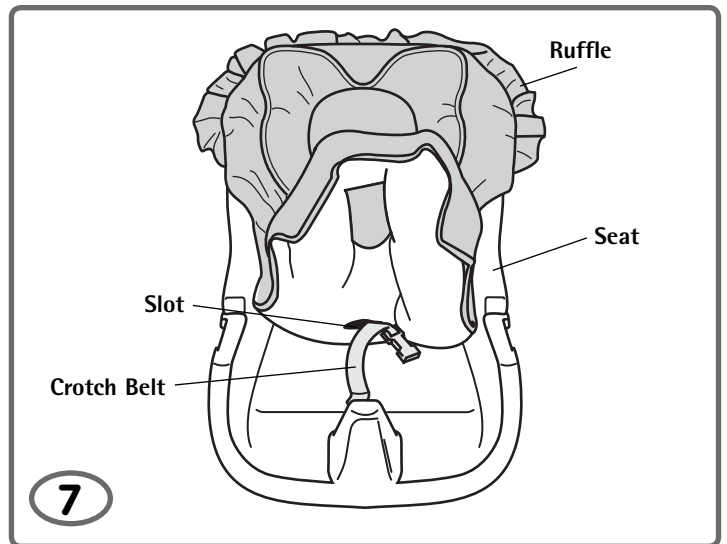 

 - Position the seat upright.
- Place the pad onto the seat with the ruffle toward the top of the seat.
- Fold the bottom of the pad up. Insert the crotch belt through the slot in the pad. Make sure the crotch belt is not twisted.

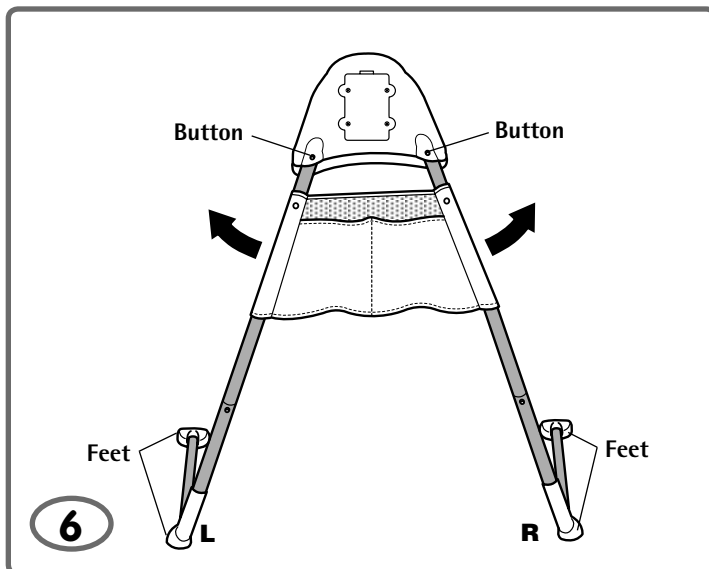


- Stand the assembly upright.
- Pull the legs out so that the buttons "snap" into the holes in the motorized frame.
- When standing behind the product, all four feet should be **flat** upon the floor. And, check for an **L** marking on the left foot and an **R** marking on the right foot.
- If the feet are not flat upon the floor, or the left and right feet have been reversed, remove both lower legs from the upper legs. Replace them onto the opposite upper leg.

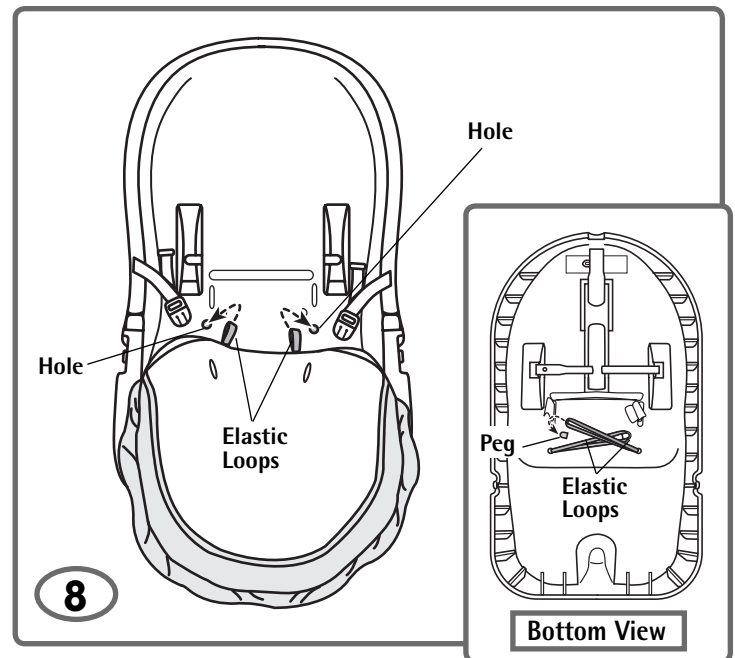 

- Fold the top of the pad down.
- Insert the two elastic loops on the pad through the holes in the seat bottom.
- While holding the elastic loops in place, turn the seat face down.
- Hook the elastic loop on the left side onto the peg on the right side.
- Hook the elastic loop on the right side onto the peg on the left side.


**Hint:** The elastic loops should cross over each other when attached correctly to the pegs.

# Assembly

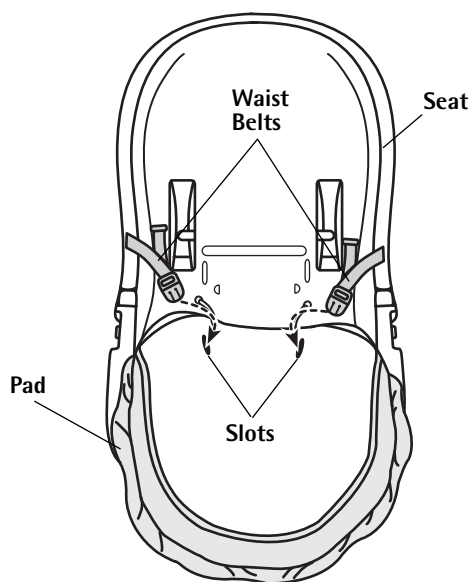 


9

 - Turn the seat upright.
- Fold the top of the pad down. Insert the waist belts through the slots in the pad. Make sure the waist belts are not twisted.

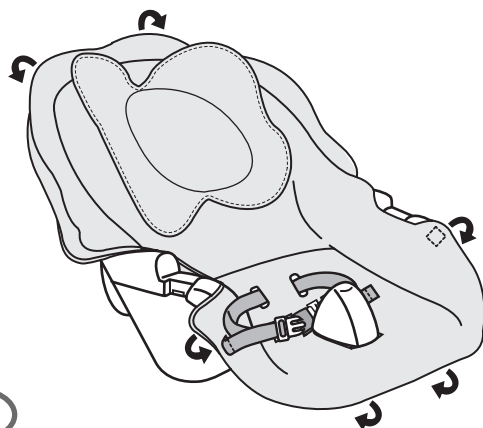


10

 - Fit the pad edges around the rim of the seat.
- Hook the two fastener straps on each side of the pad onto the rim on each side of the seat.

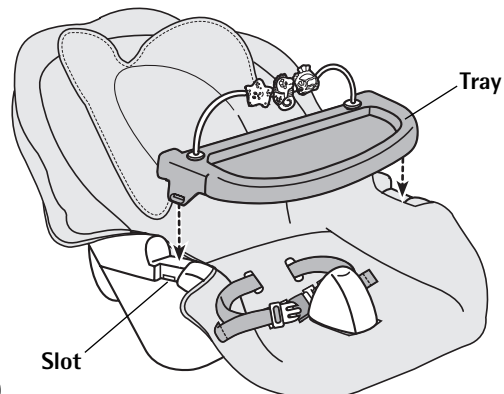

11

 
- Insert the tray tabs into the slots in each side of the seat.

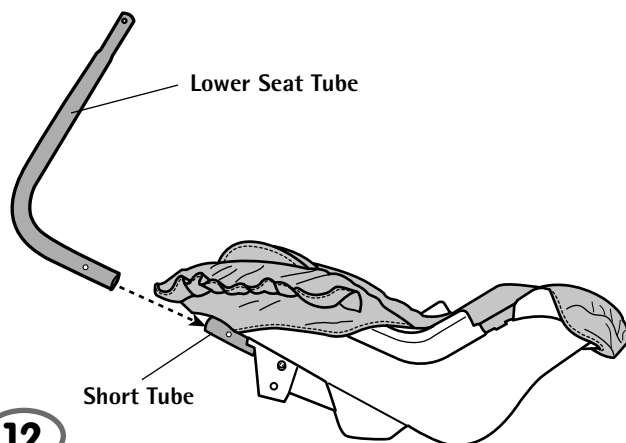

12


- Fit the lower seat tube into the short tube on the seat back.

# Assembly

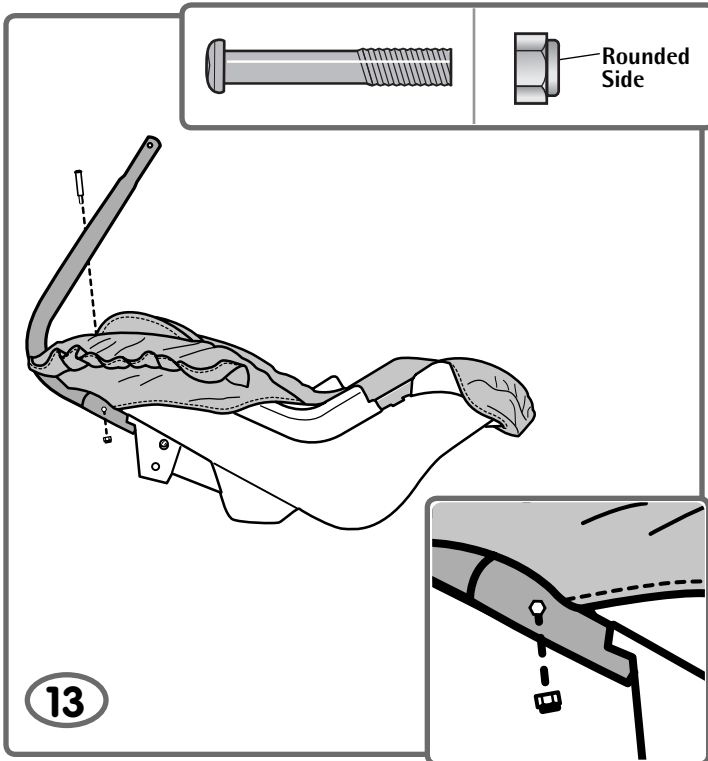 


13

 - First, fit an M5 lock nut into an opening in the short tube. Make sure the rounded side of the lock nut faces out.
- Next, insert an M5 x 30 mm screw through the opening in the opposite side of the short tube. Fully tighten the screw with the Allen wrench.

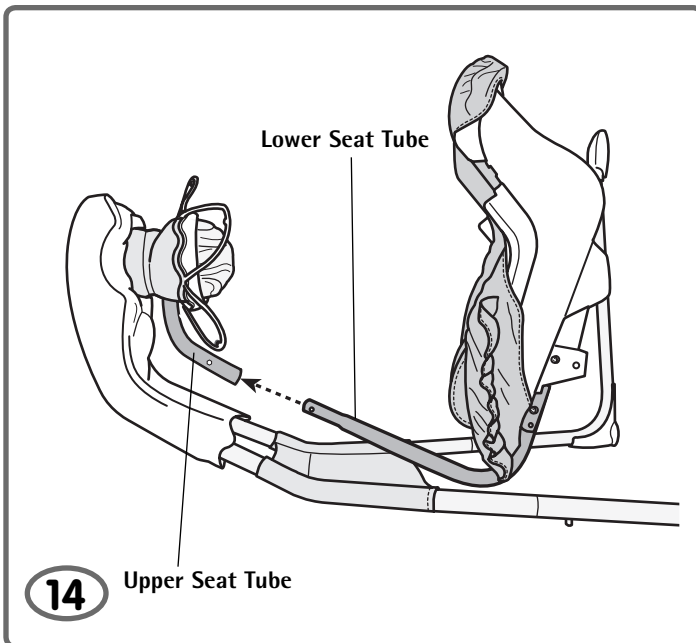


14

 - Tip the assembly on it's side on a flat surface.
- Fit the lower seat tube into the upper seat tube.

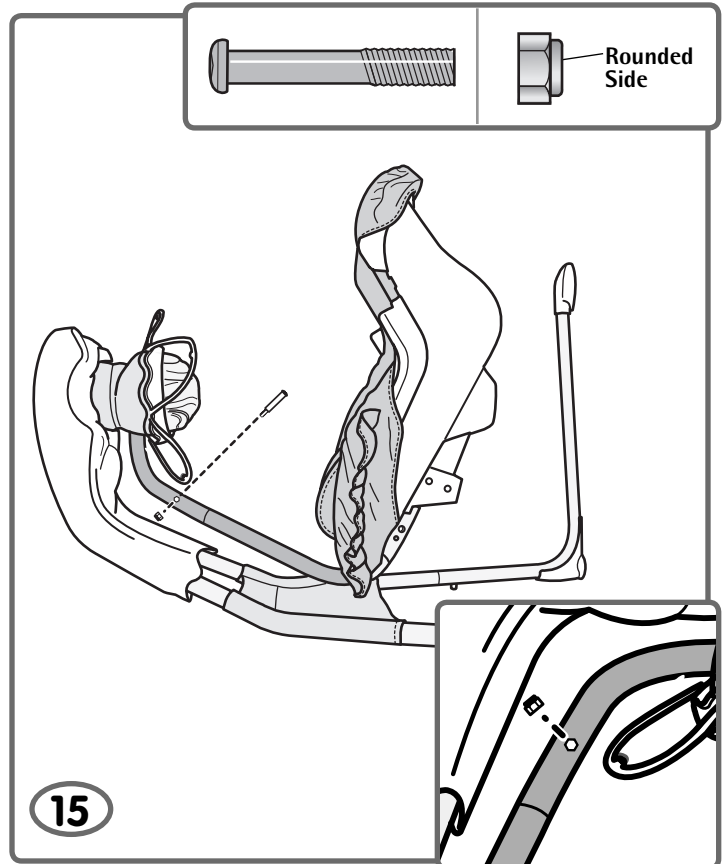

15

 - First, fit an M5 lock nut into an opening in the upper seat tube. Make sure the rounded side of the lock nut faces out.
- Next, insert an M5 x 30 mm screw through the opening in the opposite side of the upper seat tube. Fully tighten the screw with the Allen wrench.

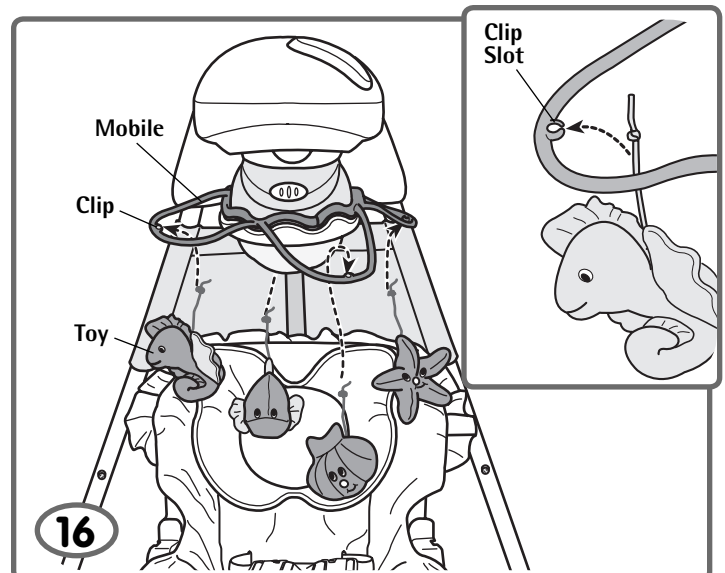


16


- Turn the assembly upright.
- Fit the string (below the knot) of a toy through the slot in a clip on the mobile.
- Pull down on the toy to be sure it is secure on the mobile.
- Repeat this procedure to assemble the other three toys to the mobile.

## Battery Installation

 **Hint:** If the swinging motion becomes noticeably slower, or sounds and lights become faint or stop, remove the batteries and replace them with four, new LR20 ("D") **alkaline** batteries. Dispose of exhausted batteries properly.

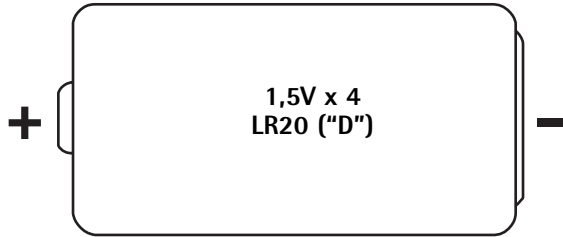

Battery Compartment Door

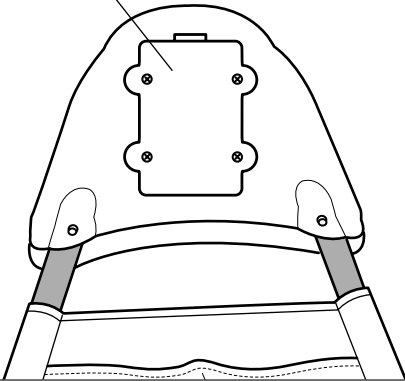 

**Hint:** We recommend using **alkaline** batteries for longer battery life.

- Loosen the screws in the battery compartment door with a Phillips screwdriver.
- Remove the battery compartment door.
- Insert four LR20 ("D") **alkaline** batteries.
- Replace the battery compartment door and tighten the screws with a Phillips screwdriver.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

## Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product.

To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removeable, rechargeable batteries are used, they are only to be charged under adult supervision.

 


## Set Up

### WARNING


**To prevent serious injury and/or falls and being strangled in the restraint system:**

- Always use restraint system. Never rely on the tray to restrain child.
- Not recommended for children who can sit up by themselves (6 months approximately, until 9 kg/20 lbs).
- Never leave child unattended.
- It is dangerous to use this product on an elevated surface.

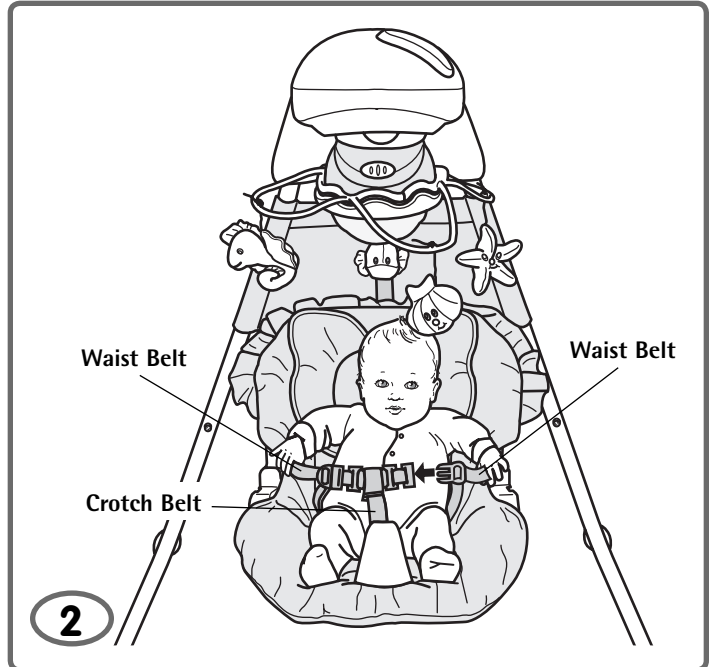


#### Restraint Belts

 - Place your child in the seat.
- Pull the crotch belt up between your child's legs and fasten both waist belts to the crotch belt. Make sure you hear a "click" on both sides.

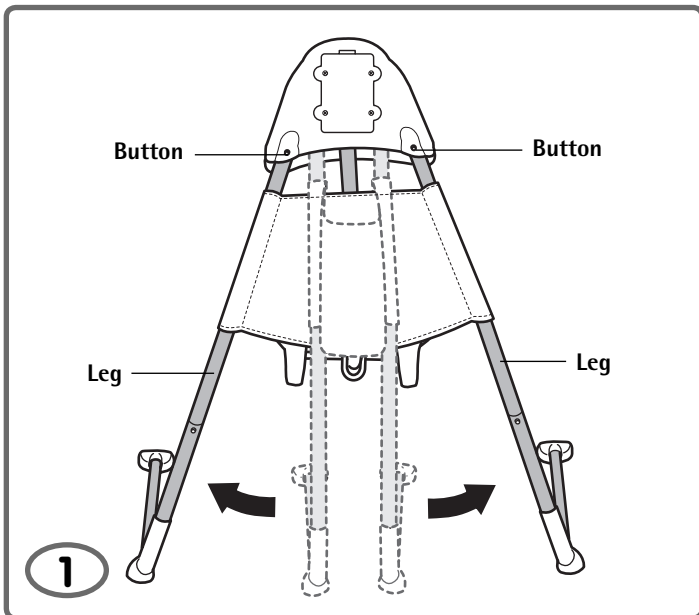

#### To Unfold

 - Firmly pull the legs outward. Make sure the buttons snap into the notches in the motorized frame.
- Check to be sure the legs are locked into position by pushing the legs inward. The legs should not move.

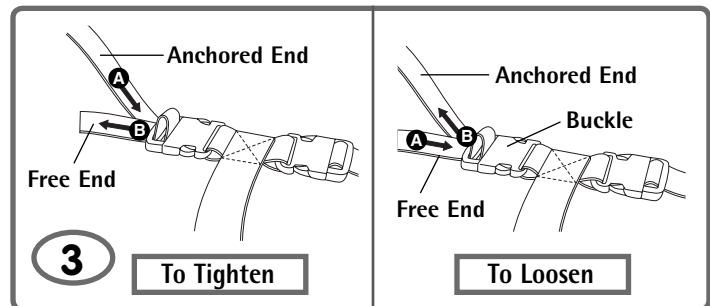

#### To tighten the waist belts:

 
- Feed the anchored end of the waist belt up through the buckle to form a loop **A**. Pull the free end of the waist belt **B**.

#### To loosen the waist belts:

- Feed the free end of the waist belt up through the buckle to form a loop **A**. Enlarge the loop by pulling on the end of the loop toward the buckle. Pull the anchored end of the waist belt to shorten the free end of the waist belt **B**.


**Note:** Check to be sure the restraint is securely attached by pulling it away from your child.

# Set Up

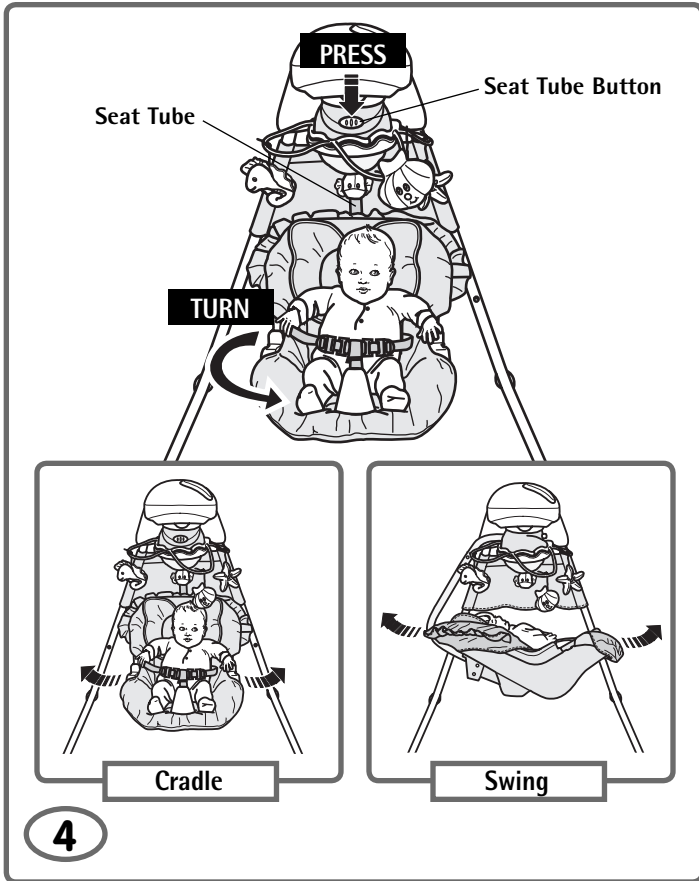


You can adjust the motion of the swing: side to side or front to back.

 - Press the seat tube button to unlock the seat tube.
- Rotate the seat tube to the desired position.

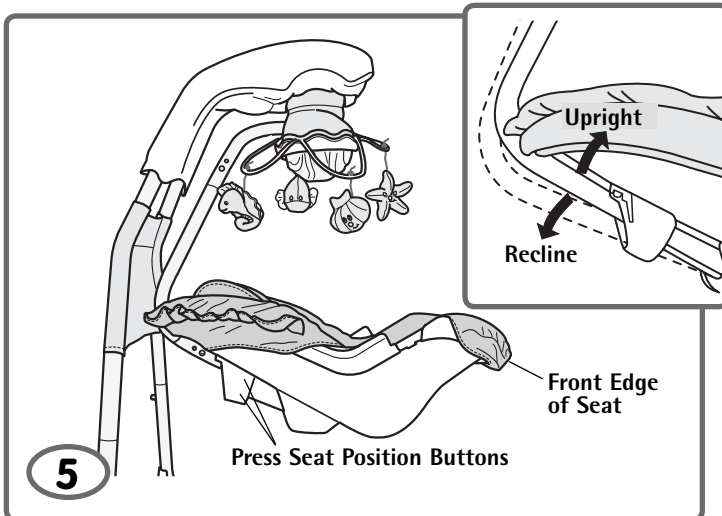


You can adjust the seat to two different positions: Recline or Upright.

 - From behind the seat, press both seat position buttons.
- Push the seatback up until the buttons “snap” into the upright position.
- Push the seatback down until the buttons “snap” into the recline position.

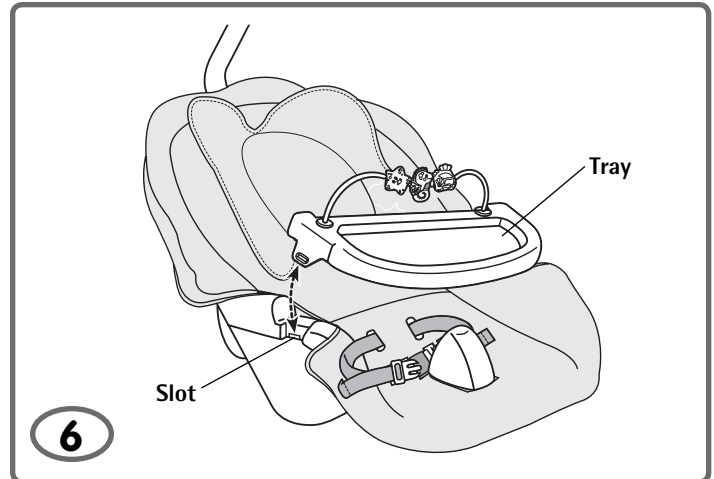

Using the Tray

 - Fit the tabs on the tray into the slots in the sides of the seat.
- To remove the tray, pull one edge of the tray out and lift.

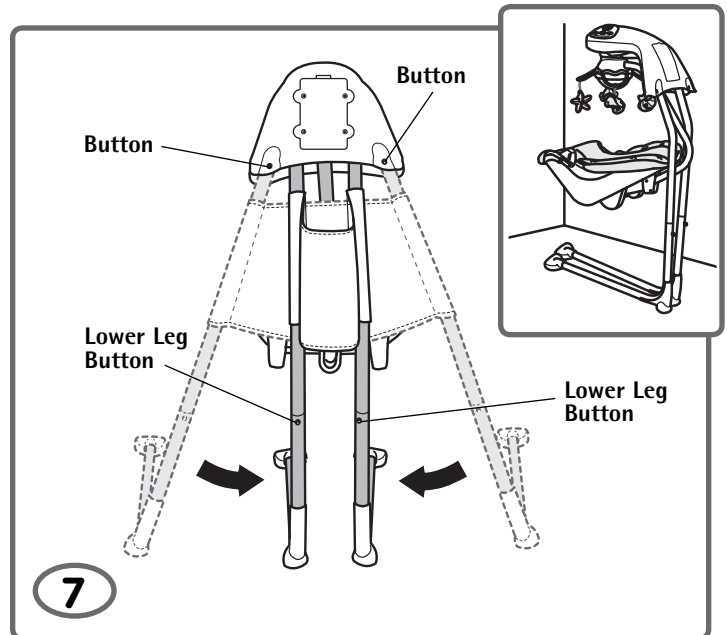


Storage

- Press the buttons on the back of the motorized frame while pushing the legs inward.
- Lean the swing frame against a wall for storage.

**IMPORTANT!** Remove the batteries for long-term storage.

**Hint:** The legs may be disassembled for long-term storage. Press the button on each lower leg and remove them from the upper legs.

## Swing, Waterglobe and Mobile Use

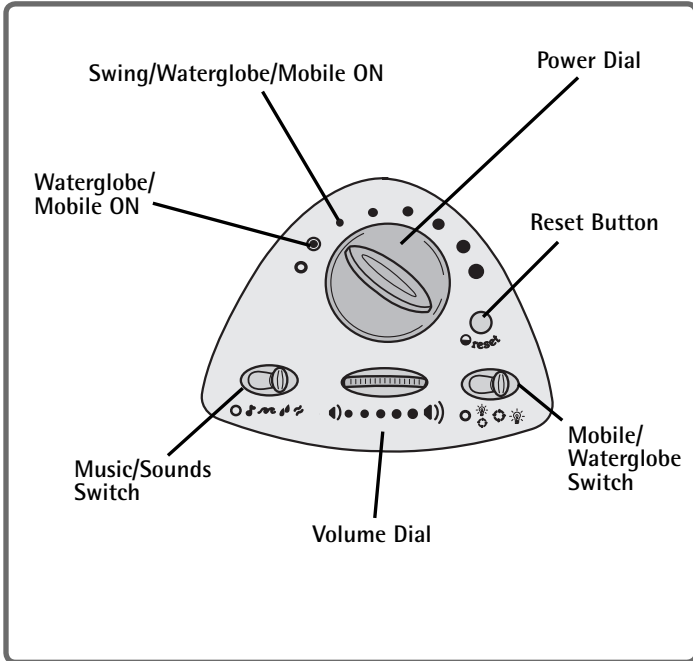 

### Swing

- Turn the **power dial** to the ON position ●. The swing begins swinging.
- Select any of six speed settings ⋯⋯⋯.
- Be sure to turn swinging OFF ○ when not in use.

### Hints:

- As with most battery-powered swings, a heavier child will reduce the amount of swinging motion on all settings. In most cases, the low setting works best for a smaller child while the high setting works best for a larger child.
- If the low setting provides too much swinging motion for your child, try placing one end of a blanket underneath your child and let the other end of the blanket drape down while swinging.

### Waterglobe, Mobile, Music and Sounds

Turn the power dial to ● to turn power ON for waterglobe, mobile, music and sounds.

**Hint:** The swing does not work on this power dial setting ○. If you'd like to use the waterglobe, mobile, music or sounds and swing at the same time, turn the power dial to any of the six speed settings ⋯⋯⋯.

### To select waterglobe/mobile, slide switch to:

- Mobile
- ☀ Lights (Waterglobe)
- ☀ Mobile and Lights (Waterglobe)
- Mobile and Lights (Waterglobe) Off












 

 


### To select sounds or music, slide switch to:

- 🎵 Music
- 🌊 Waves
- 🌧 Rain
- 🗨 Babbling Brook
- Music and Sounds Off

**To select a comfortable listening setting:** turn the volume dial 1●●●●●1).

**Hint:** The waterglobe, mobile, music or sounds will turn off after approximately seven minutes. To restart waterglobe, mobile, music or sounds, press the reset button ● for another seven minutes of use.

## Problems and Solutions

Problem	Probable Cause	Solution
Motor is not running; no swinging	Power is not on	Turn the power dial to one of six settings.
	Batteries incorrectly installed	Remove the batteries and replace in correct orientation, as indicated inside the battery compartment.
	Dead batteries	Replace all four batteries with four, fresh "D" <b>alkaline</b> batteries.
Motor is running but swinging stops after a few minutes	Need to start swinging motion	To start swinging motion, give the seat a light push.
	Swing motion setting is inappropriate for child's weight	Adjust the power dial to a higher speed setting and give the seat a light push.
	Weak batteries	Replace all four batteries with four, fresh "D" <b>alkaline</b> batteries.
No difference noticed in swinging motion after power dial is adjusted	Swing did not have sufficient time to adjust to different setting	Allow the swing time to adjust to new setting.
	Weak batteries	Replace all four batteries with four, fresh "D" <b>alkaline</b> batteries.
Swinging motion too high even at the lowest setting	Normal operation	To slow swinging motion, place one end of a blanket underneath your child and let the other end drape down while swinging.
Waterglobe (lights)/mobile, music/sounds do not work and swing is off	Power dial is not on correct setting	Position the power dial to the  position.
	Dead batteries	Replace all four batteries with four, fresh "D" <b>alkaline</b> batteries.
	Waterglobe (lights)/mobile, music/sounds turn off automatically after seven minutes	Press the reset button  to restart waterglobe (lights)/mobile, music/sounds for another seven minutes.
Music/sounds do not work (and power dial is set to  )	Music/sounds switch is in OFF  position	Slide music/sounds switch to desired setting  .
	Music/sounds turn off automatically after seven minutes	Press the reset button  to restart music/sounds for another seven minutes.
Waterglobe (lights) does not work (and power dial is set to  )	Mobile/waterglobe switch is in OFF  position or mobile only  position	Slide mobile/waterglobe (lights) switch to desired setting  .
	Waterglobe (lights)/mobile turn off automatically after seven minutes	Press the reset button  to restart waterglobe (lights)/mobile for another seven minutes.
Mobile does not work (and power dial is set to  )	Mobile/waterglobe (lights) switch is in OFF  position or waterglobe only  position	Slide mobile/waterglobe (lights) switch to desired setting  .
	Mobile/waterglobe (lights) turn off automatically after seven minutes	Press the reset button  to restart mobile/waterglobe (lights) for another seven minutes.