


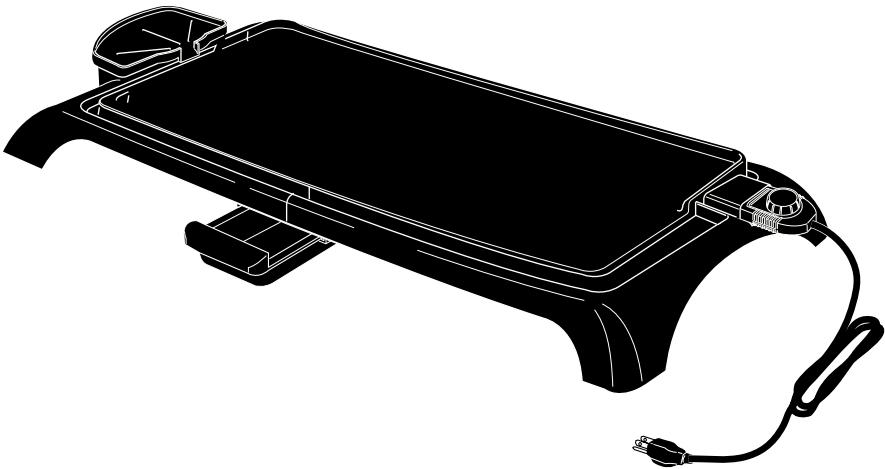

Electric Griddle



Item Stock Number

106733

UPC:

681131067331

For customer assistance, call customer service at (877) 207-0923

IMPORTANT SAFEGUARDS

Please read and save these instructions. When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using.
 2. Do not touch hot surfaces. Use handles or knobs.
 3. To protect against electrical shock, do not immerse temperature control probe or cord in water or other liquid.
 4. Close supervision is necessary when any appliance is used near children. This appliance is not for use by children.
 5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning.
 6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Call Customer Service (see warranty) to return for examination, repair, or adjustment.
 7. The use of accessory attachments not recommended by manufacturer may cause injuries.
- 8. Do not use outdoors.**
- 9. Do not let cord hang over edge of table or counter, or touch heated surfaces.**
- 10. Do not place on or near a hot gas or electric burner, or in a heated oven.**
- 11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.**
- 12. Always attach temperature control probe* to appliance first, then plug cord into the wall outlet. To disconnect, turn temperature control probe to "OFF", then remove plug from wall outlet.**
- 13. Do not use appliance for other than intended use.**
- *Use only model MPTC-1A temperature control probe.

SAVE THESE INSTRUCTIONS!

Consumer Safety Information

THIS APPLIANCE IS INTENDED FOR HOUSEHOLD USE ONLY.


This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

CAUTION: To reduce the risk of electrical shock, do not immerse the temperature control probe in water or other liquid.

A short power supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord. An extension cord may be used with care; However, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the griddle. The extension cord should not be allowed to drape over the counter or tabletop where it can be pulled on by children or tripped over.

Parts and Features

- 1** Griddle Surface
- 2** Grease Channel
- 3** Removable Grease Tray
- 4** Dupont Teflon Non-Stick Cooking Surface
- 5** Temperature Control Probe
- 6** Probe Guard
- 7** Removable Spatula Rest

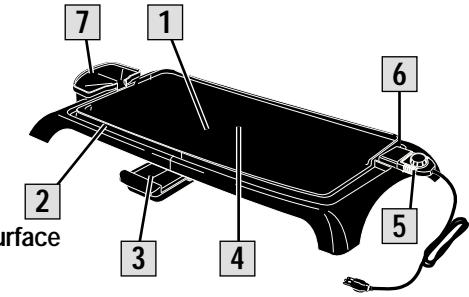

How to Use Your Griddle

1. Before use, wash the griddle and GREASE TRAY in warm soapy water, and dry completely. **CAUTION:** Do not immerse temperature control probe in water or other liquid.
2. Insert grease tray into guides under the griddle. Turn temperature control probe to "OFF" and attach securely to the griddle.
3. Condition the Dupont Teflon® non-stick surface with vegetable shortening, wiping off any excess with a paper towel. Plug griddle into 120 volt outlet. Preheat the griddle by aligning the selected temperature setting on the temperature control probe knob with the indicator light. Griddle is preheated when the light on the knob goes off. The light will cycle during use, indicating the selected temperature is being maintained.
4. When cooking is complete, turn temperature control probe to "OFF", unplug and allow unit to cool before cleaning. **NOTE:** It may be necessary to scrape grease into the grease channel. Always use wooden or nylon utensils to avoid scratching the Dupont Teflon® non-stick surface. **CAUTION:** Grease may be hot!

NOTE: When cooking consecutive batches of bacon or other high fat foods, it may be necessary to empty the grease tray to avoid grease overflowing onto the countertop.

CAUTION: Some counter tops are more sensitive to heat, use care not to place griddle on surfaces where heat may cause damage.

CAUTION: Griddle surfaces are hot during use. Allow to cool completely before handling or cleaning.

Temperature and Cooking Guide

FOOD	TEMP.*	TIME	DIRECTIONS
EGGS, fried	300° F	3 to 5 min.	DO NOT PREHEAT. Turn often.
BACON	350° F	8 to 14 min.	DO NOT PREHEAT. Turn often.
SAUSAGE	350° F	20 to 30 min.	Turn halfway into cooking time.
FRENCH TOAST	350° F	6 to 10 min.	Turn halfway into cooking time.
HAMBURGER	350° F	3 to 14 min.	Turn halfway into cooking time.
HAM SLICES	350° F	14 to 18 min.	Turn halfway into cooking time.
SANDWICHES	350° F	6 to 10 min.	Butter outside and brown both sides.
PORK CHOPS	350° F	20 to 30 min.	Brown both sides, reduce temp. to 250°. Turn halfway into cooking time.
POTATOES	350° F	10 to 12 min.	Turn halfway into cooking time.
STEAKS			
Rare	400° F	4 to 6 min	Turn halfway into cooking time.
Medium	400° F	7 to 12 min.	Turn halfway into cooking time.
Well Done	400° F	13 to 18 min.	Turn halfway into cooking time.
PANCAKES	350° F	2 to 6 min.	Pour batter onto griddle. When bubbles appear on top, turn.

* Unless otherwise noted, preheat griddle

How to Clean Your Electric Griddle

1. Unplug and allow to cool before cleaning.
2. Remove temperature control probe (Do not immerse in water). Wipe with damp cloth and dry thoroughly.
3. Remove grease tray and discard contents. With temperature control probe removed, the griddle is completely immersible. The griddle (with temperature control probe removed) and grease tray may be washed in the dishwasher. Or you may wash the griddle and grease tray with hot soapy water. Rinse, and dry thoroughly.

Caution: temperature control probe and probe guard must always be completely dry before use.

Care of Your Non-Stick Griddle

- Use only nylon, plastic, or wooden utensils with care to avoid scratching the non-stick surface. Never cut food on the griddle.
- Remove stubborn stains with plastic scouring pad and mild dishwashing liquid.
CAUTION: DO NOT USE steel wool.

Any service requiring disassembly other than the above cleaning should not be conducted by the consumer. If you have any questions, please call 1-877-207-0923.

Two Year Limited Warranty

What does your warranty cover?

- Any defect in material or workmanship.

For how long after the original purchase?

- Two years.

What will we do?

- Provide you with a new one!

How do you make a warranty claim?

- Save your receipt.
- Properly pack your unit. We recommend using the original carton and packing materials.
- Return the product to your nearest WAL/MART store or call Customer Assistance at 1-877-556-0973.

What does your warranty not cover?

- Commercial use.
- Damage from misuse, abuse, or neglect.
- Products which have been modified or incorporated into other products.

What if you purchased this product in Canada and encounter a problem while using it outside the country of purchase?

- The warranty is valid only in the country of purchase and if you follow the warranty claim procedure as noted.

 is a trademark of General Electric Company and is used under the license by WAL/MART Stores

For more information please visit us at www.walmart.com

- Que no cubre su garantía?**
- Daños debidos al mal uso, abuso o negligencia.
 - Uso comercial.
 - Negligencia.
 - Productos que se han modificado o incorporado a otros productos.
- Cómo hacer su solicitud de garantía?**
- Debe enviar su producto a su WAL/MART más proximo o llamar al Servicio al Cliente al 1-877-556-0973.
 - Recomendamos usar el cartón y materiales originales.
 - Empaquele su unidad apropiadamente.
 - Guarde su recibo.
 - Le proporcionaremos con una nueva!
- Qué hace su comprador después de la compra?**
- Cuanto tiempo tarda en cumplir.
 - Cuálquier defecto de material o fabricación.
 - Dos años
- Qué pasa si compra este producto en Canadá y experimenta problemas menores**
- Esta garantía es válida solo en el país de compra.
- General Electric Company es una marca registrada de WAL/MART y se usa bajo licencia por las tiendas de WAL/MART para información adicional visite nuestro sitio web: www.walmart.com
- Qué es la garantía especializada?**
- Esta garantía es válida solo en el país de compra y si sigue los procedimientos para comprarla y si sigue los procedimientos para comprarla.

Para asistencia al cliente llame al: (877) 207-0923


681131067331

UPC:

106733

de la unidad

Número de inventario

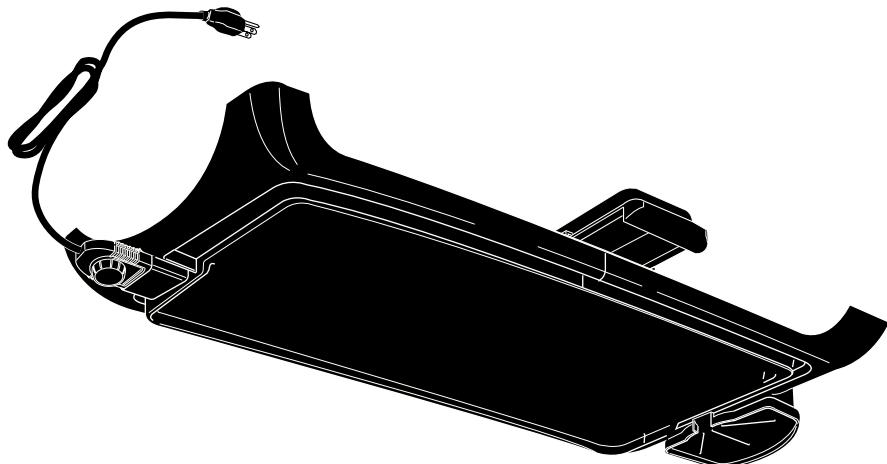

Parilla Eléctrica

