

GRACO®

 
Open Top Swing

OWNER'S MANUAL

Model No. _____
Serial No. _____

Dear Customer,

Please fill in the model and serial numbers above from the label inside the battery compartment of your new swing.

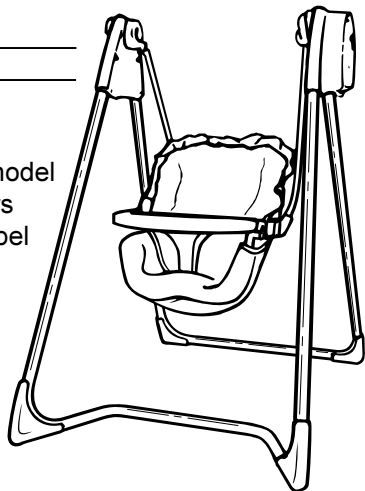

Model Nos. 1464 & 1466

Congratulations on your purchase of a Graco® swing!

Graco is the recognized leader in the design and manufacture of quality baby swings. We believe your new Graco® swing is a wise choice, promising many hours of enjoyment for your baby.

Before using your swing, please take a few minutes to read this Owner's Manual. The short time you spend reading these instructions will help you use your swing properly.

Please save your Owner's Manual for future use.

Customer Satisfaction

Our goal is to make every product the best it can be! We are also committed to supporting our products after purchase. If you would like to speak to Graco about your product, please contact our **Customer Service Department at 1-800-345-4109** or visit our Internet website, www.gracobaby.com. Our knowledgeable staff will be ready to answer any questions you may have concerning parts, use, or maintenance. When you call, please have the **model and serial numbers** ready so your call may be processed quickly and efficiently.

⚠ WARNING

 
Failure to follow these warnings could result in serious injury or death.



Never leave child unattended.
Always keep your child in view.



Strings can cause strangulation.
DO NOT place items with a string around your child's neck, such as hood strings or pacifier cords.
DO NOT suspend strings over the swing or attach strings to toys.

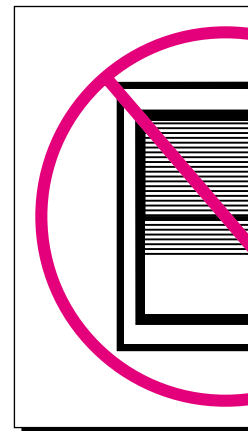

STRANGULATION HAZARD
DO NOT place strings in locations where they could cause strangulation, such as window blinds, drapes, phone cords, etc.

THIS PRODUCT REQUIRES ADULT ASSEMBLY.

FOLLOW ASSEMBLY INSTRUCTIONS CAREFULLY.

 
If you experience any difficulties, please contact the Customer Service Department.

DO NOT USE SWING without the seat cover.


DISCONTINUE USING YOUR SWING should it become damaged or broken.

WARNING

Read the instructions and the assembly instructions carefully to avoid serious injury or death.

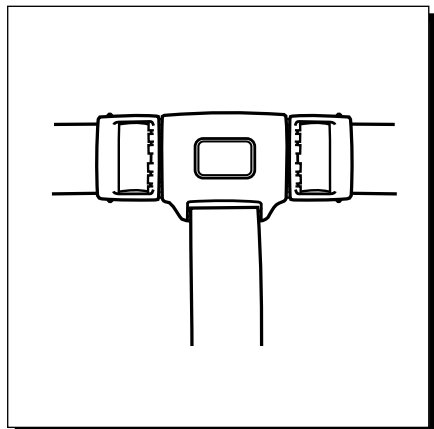

 Avoid serious injury from falling or sliding out. Always use seat belt.

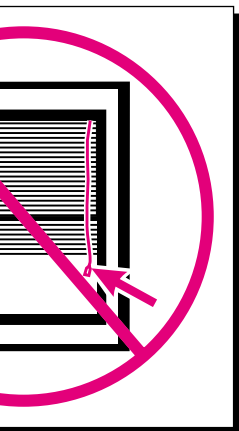

ATTENTION HAZARD: Do not use the swing in any area where there are cords, such as window blind cords, power cords, etc.



DO NOT use if child weighs over 25 pounds (11 kg) or becomes too active to safely use the swing.

CARE AND MAINTENANCE

FROM TIME TO TIME CHECK YOUR SWING for loose screws, worn parts, torn material or stitching. Replace or repair the parts as needed. Use only Graco® replacement parts.

REMOVABLE CLOTH SEAT COVER (on certain models) may be machine washed in lukewarm water on delicate cycle and drip-dried. **NO BLEACH.**

 
TO CLEAN SWING FRAME, use only household soap and detergent and warm water. **NO BLEACH.**

EXCESSIVE EXPOSURE TO SUN OR HEAT could cause fading or warping of parts.


PARTS LIST

CHECK that you have all the parts listed below BEFORE assembling your swing. If any parts are missing, call Customer Service at 1-800-345-4109 or visit our Internet website, www.gracobaby.com.


Tool required: Screwdriver

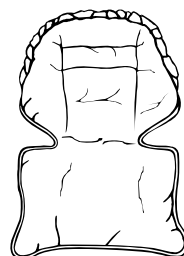

Seat cover

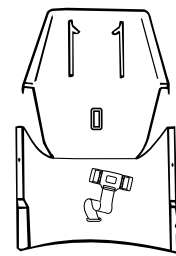 


Plastic seat with crotch strap

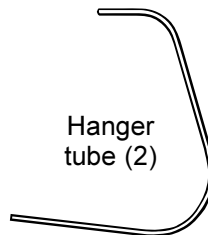 


Hanger tube (2)



 
Seat belt



Tray

 


Adjustment wire

 


Back brace



 
Toy mount cover (2)

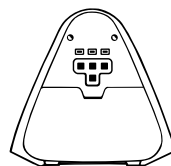


Motor housing

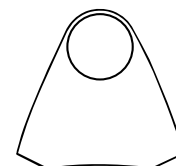 

Pivot housing

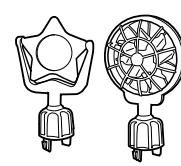 

Toy (2) (styles may vary)

 

Pin screw (2)



 
Large front foot (2)




Small rear foot (2)




Plastic leg tip (4)




Screw (4)

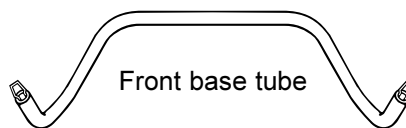 


Front base tube

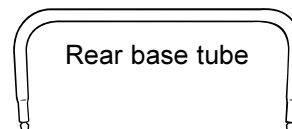 

Rear base tube

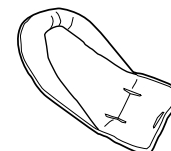 

 Head support cushion (on certain models)



Leg (4)

 
Attaching the Legs

Step 1.

The four legs have a double button at one end and a single button beneath it.


With the hub sides facing up, place the motor housing and pivot housing on the floor. Position legs so their single buttons also face up.

Insert legs into the motor housing and pivot housing as shown. **The double buttons must fit into the channels inside the housings.**

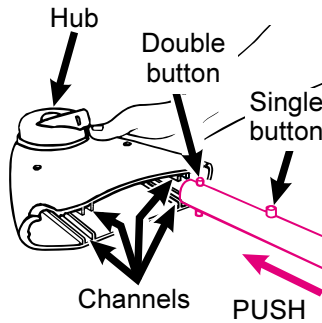

Step 2.

 Push each leg in until the double button snaps into the hole at the end of the channel. Then swing the legs outward until the single button snaps into its notch, as shown.

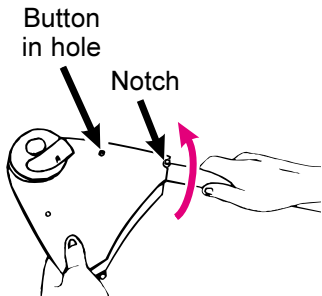


CHECK that the legs are properly attached by twisting them in the housings. They should resist twisting. If a leg twists and buttons come out of their holes, insert leg into the housing again. Be sure to align BOTH double buttons with BOTH sets of channels inside the housings.

Attaching the Feet


Step 1.

 Identify the front and rear base tubes from pictures below. The feet to use with each tube can be identified by the text "FRONT BOTTOM" or "REAR BOTTOM" printed on them.

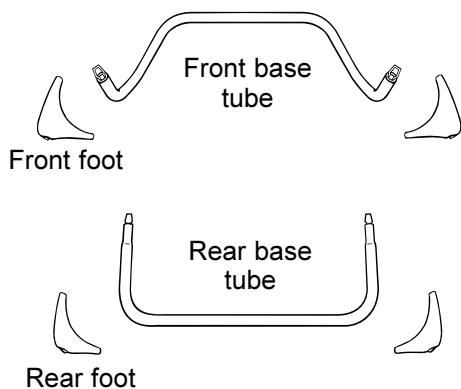

Step 2.

 Begin by inserting a screw all the way into the small hole on one foot. Position the foot as **shown at right**, so the text and viewing hole are **not** on the **short side of tube** near the wire end. Then use viewing hole to line up the end of the screw with the hole in the tube. Tighten the screw securely. Repeat above steps for the other feet.

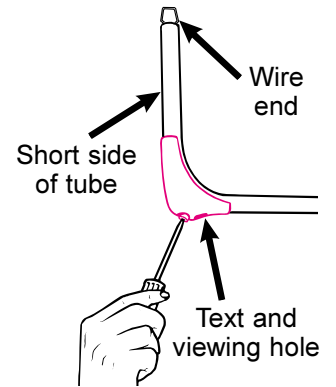


CHECK that feet are secure by wiggling the feet.

Step 3.

Push a plastic tip onto all four of the feet. Tap leg tips on the floor to be sure they are completely on.

 
The hole in the plastic tip permits future tightening of the screw if needed.

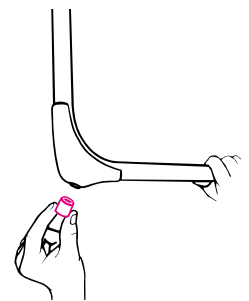

Attaching the Base Tubes

Step 1.

 Push the legs firmly onto the rear base tube **exactly as shown**.

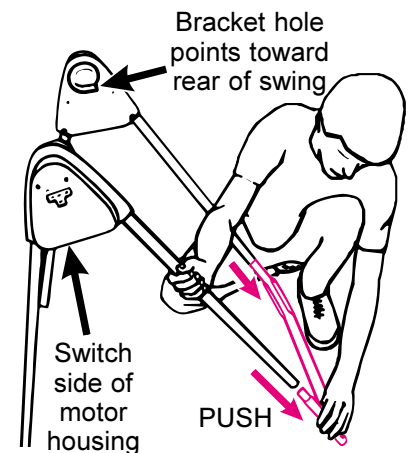


Step 2.

Push the other two legs onto the front base tube.

CHECK that all tubes are securely attached.

 
CHECK that the parts of the frame are assembled in the positions shown.

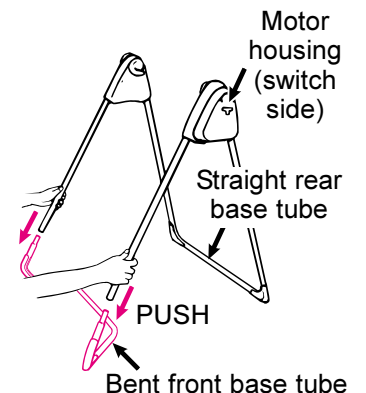


Attaching the Hanger Tubes and Seat

Step 1.

 Move seat back fully forward onto seat armrests.

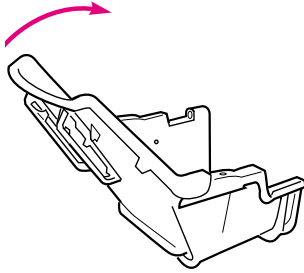


 The seat back must overlap the armrests.

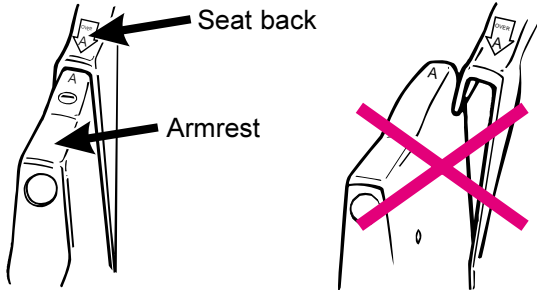


Step 2.

 Slide hanger tubes into armrests of seat as shown.

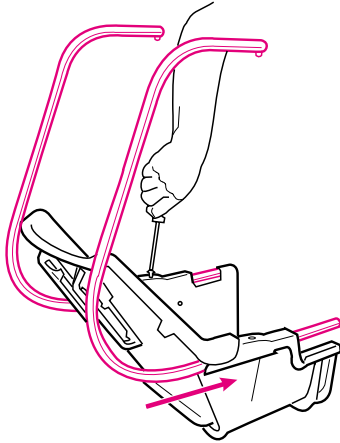

Step 3.

 Insert two pin screws through seat armrests into the holes in the hanger tubes and tighten securely.

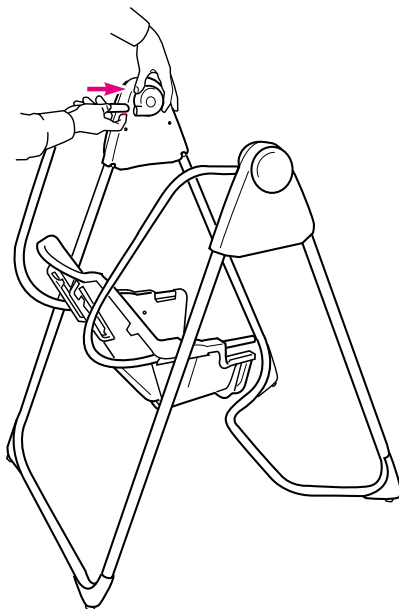


Step 4.

Insert the hanger tubes into the hubs as shown. Metal buttons should pop out and lock upon full insertion.


CHECK that the hanger tubes are secure in hubs by pulling firmly on them.

Attaching the Back Brace

 Working behind the seat, snap the four pins in the ends of the plastic back brace into the holes in the hanger tubes. The word "REAR" should be facing you.

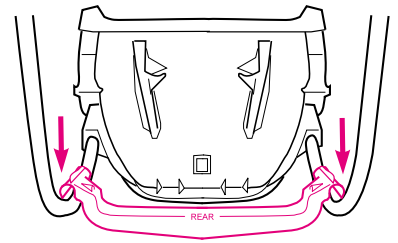

 Slide adjustment wire through openings in seat back, then insert ends into back brace holes as shown.

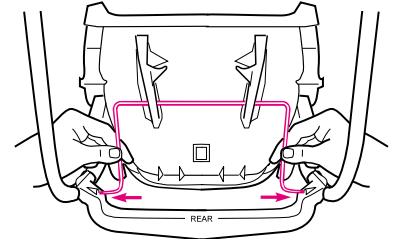


Be sure the back brace is securely attached by pulling on it.

Attaching the Tray

Place one hand on the armrest and slide the tray onto the hanger tube with other hand. Push sleeve of tray all the way into the armrest of seat until you hear it snap.

Sleeve on tray must snap completely into armrest.

 Pull firmly on tray to be sure it is securely attached.

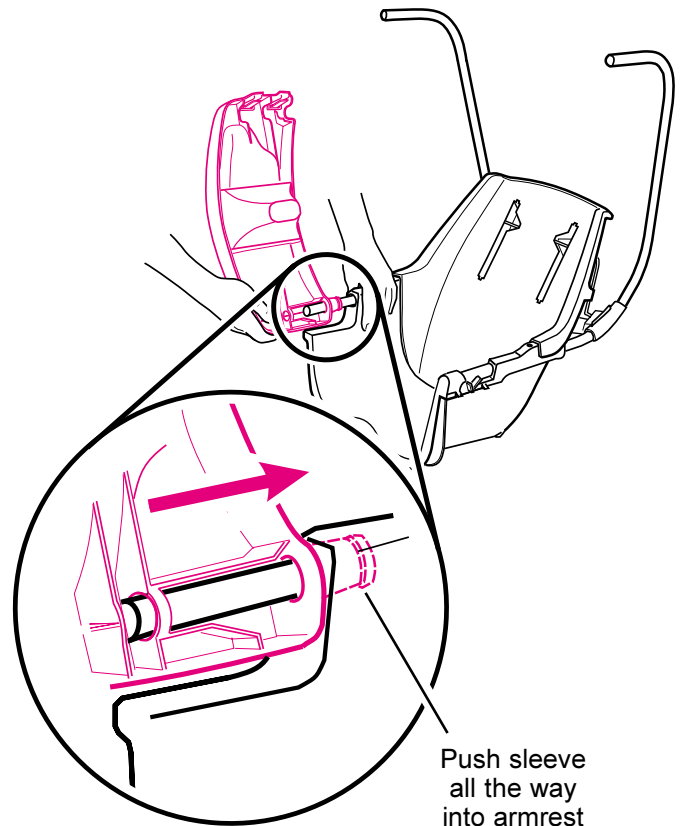


Mix 'N Move™ Toy System

Your swing is equipped with two toys in Graco's Mix 'N Move™ interchangeable toy system. This system, featured on various Graco® swings, highchairs, strollers and mobile entertainers, allows your baby to enjoy a changing array of amusements and even take favorites along. Look for other toys in the enclosed leaflet.


Step 1.

 To install a toy, insert the two prongs on the toy base into a toy mount at the notches.

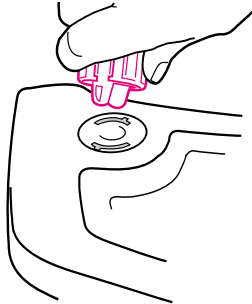

Step 2.

 Turn toy base one quarter turn until you feel the toy snap into place.

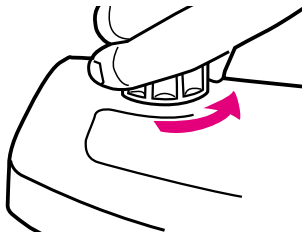


Check that toy is firmly inserted by pulling on the toy.

Toy is removable (turn it the other way with a little pressure) so that you can replace it with other toys when desired.

If you choose not to use the toys at this time, please insert the two plastic covers as described below to fill the holes in the tray.

To Install Covers

 To insert a cover into the tray of your swing, first push one side into a notch, then push in the other side.

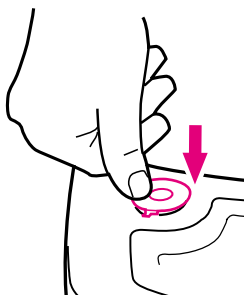


To Remove Covers

▲ WARNING
Remove child from swing before removing covers.

With the aid of a flat head screwdriver, carefully pry up one edge of a cover until it comes off.

 
▲ WARNING
Throw the covers away immediately; they are not reusable.

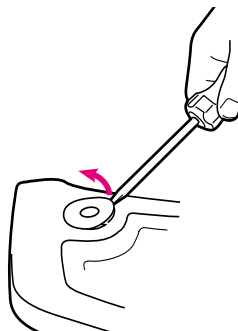

Attaching the Seat Belt

Step 1.

 
Thread one end of the seat belt through the belt retainer as shown.

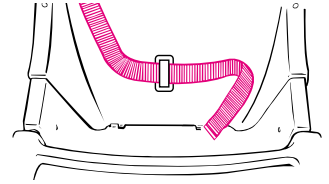


Step 2.

Thread both ends of seat belt through the buckles as shown.

 CHECK that the belt is threaded correctly by pulling on the seat belt. **The belt should not slip through the buckle.**

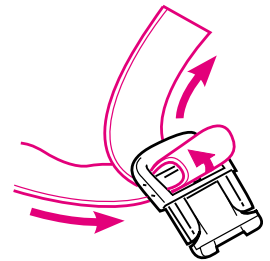


To release, push in on front of buckle.

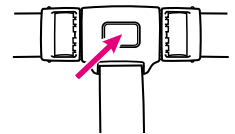 

Attaching the Seat Cover


Step 1.

 Slide the pocket of the seat cover over the top of the seat as shown.

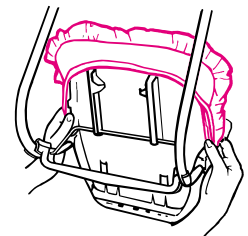


Step 2.

 Pull the crotch strap and both ends of the seat belt through the slots in the seat cover.

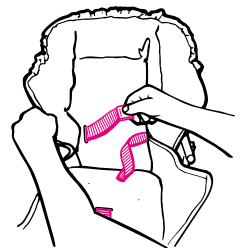

Step 3.

 
Push the elastic loop through the hole on one side of seat.

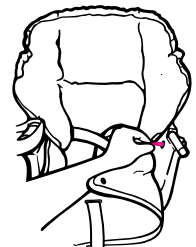

Step 4.

Fold cover around bottom of seat. Then fasten the hook into the elastic loop on one side as shown. Repeat on other side.

 CAUTION: Be sure the seat cover at armrest does not interfere with tray latching.

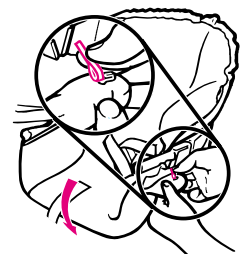

Using the Head Supports (on certain models)

To provide head support for a smaller child, your swing model may include one of the following accessories:

Two head supports:

 
Insert them into the pockets in the back of the cloth seat pad.



Back of cloth seat pad

Head support cushion:

Use it in the seat as shown, threading the seat belt straps through the corresponding holes in the cushion.

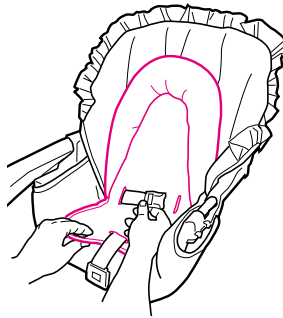


Using the Tray

If tray does not latch, check back brace to be sure the word "REAR" is away from the seat.

Step 1.

 Unlatch the tray by squeezing the two latches under the tray at the same time, and lift up. **Be careful** not to let the tray hit your baby when lifting or closing the tray.

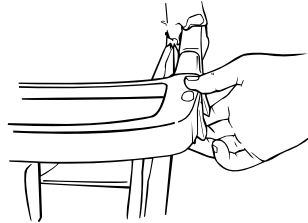


Step 2.

To latch tray, push it down firmly.


▲ WARNING Tray must be latched at all times when baby is in swing. Pull up on tray to be sure it is latched.

Reclining Back— Four Positions

 Pull adjustment wire upward and pull seat backward to recline seat. Extra pressure is required to go from the third position to full recline.

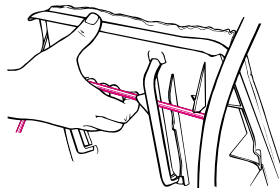

 
For upright position, simply lift back of seat forward.

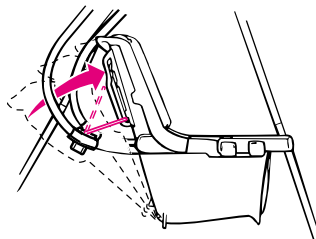

Installing the Batteries

Step 1.

 With baby out of swing, open the battery compartment lid by inserting a coin (penny, nickel or dime) into the coin slot. After the lid pops open, swing it down and remove it.

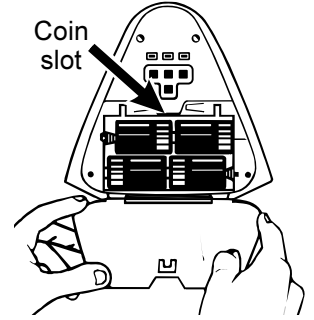


Step 2.

Insert four "D" cells. **CHECK** that the batteries are put in correctly. Your swing will not run if the batteries are put in backwards.

Step 3.

 To replace lid, put the two tabs of the lid into the two slots in the bottom of the motor housing. Swing lid up, and press it into place until you hear the latch click.

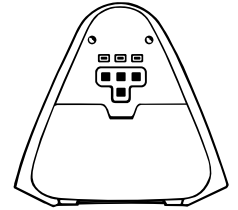

Using the Swing

 
CHECK that all parts are securely fastened together before using the swing.

Step 1.

Open tray and seat belt. Place baby in the seat.

Step 2.

Fasten the seat belt. Adjust belt as needed to get a snug fit around your child.

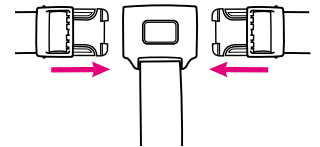

Step 3.

Close the tray. **CHECK that the tray is latched by pulling up on the tray.**

 
▲ WARNING Do not depend on the tray or seat belt alone to hold your baby. Always secure your baby with both the seat belt and tray when your child is in the swing.



Operating the Six-Speed Swing

Your swing has six speed settings. The “LOW” button controls the three low-range speeds and the “HIGH” button controls the three high-range speeds.

The lights indicate what speed is activated. The green lights indicate the three low range speeds and the red lights indicate the three high range speeds. For example, if the far right light is green, speed 3 is activated.

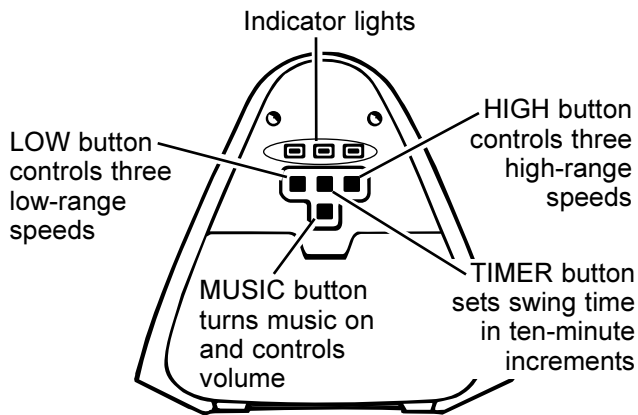

Push the LOW button once for speed 1, twice for speed 2 or three times for speed 3.

Push the HIGH button once for speed 4, twice for speed 5 or three times for speed 6.

To go from speed 2 to speed 3, just push the LOW button once.

It is not necessary to start at lowest speed and move up. The swing can begin directly at speed 5, for example, by pushing the HIGH button two times. Or it can go from speed 6 to speed 2 by pushing the LOW button twice.

After choosing speed, start swing by giving it a gentle push. Observe swinging motion for a minute. It takes time for the swing to adjust to a setting. Change setting as needed.

Your seat may be stopped at any time the motor is running without damaging the motor. Push swing to restart.

 
If your swing motor stops operating by itself, a protective device may have been activated. Turn off motor, wait three minutes, then restart swing.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To Turn Off the Swing

Press and hold either speed button. Indicator light will go off and swing will stop.

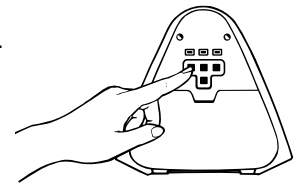

Using the Timer

You can program your swing to turn off after a certain period of time. The timer button, located between the two speed buttons, sets the swing time in ten-minute increments up to 40 minutes. Push the button once; the swing will run for ten minutes.

To add time, push the timer button once more for every ten minutes you wish to add. The active speed setting light will blink in repetition, one blink for every ten minutes programmed. The number of blinks will decrease to give you an indication of the time remaining.

 
The light will blink continuously when a minute or less of time is remaining. If you do not set the timer at all, your swing will run until you turn it off. To cancel timer mode, press and hold the timer button until the light stops blinking.

If you are using the timer, both the swing and the music will stop when the time runs out.

For example, if the center light is red and it's blinking two times quickly between pauses, your swing is on speed 5 and will run for twenty minutes before stopping.

To add time, push the timer button once or twice.


To turn swing off, press and hold either speed button briefly.

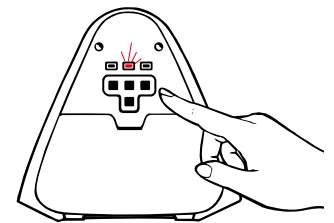

To Use Music

If you want music for your baby, push the music button until desired volume is reached:

 - Push once for high volume.
- Push a second time for medium volume.
- Push a third time for low volume.
- Push a fourth time to turn music off.

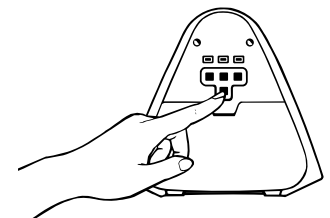

The music control is independent of the speed and timer settings. You can have any combination of speed, timer and music settings.

FOR SAFE BATTERY USE:

 
Keep the batteries out of children's reach.

Any battery may leak battery acid if mixed with a different battery type, if inserted incorrectly (put in backwards) or if all batteries are not replaced or recharged at the same time.

Any battery may leak battery acid or explode if disposed of in fire or an attempt is made to charge a battery not intended to be recharged. Never recharge a battery of one type in a recharger made for a battery of another type.

Discard leaky batteries immediately. Leaky batteries can cause skin burns or other personal injury. When discarding batteries, be sure to dispose of them in the proper manner, according to your state and local regulations.

Always remove batteries if the swing is not going to be used for a month or more. Batteries left in the unit may leak and cause damage.

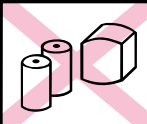

Recommended Type Batteries—Size D

- Rechargeables—Use and recharge according to manufacturer's instructions.
- Disposables—Alkaline.
- **NEVER** mix battery types.

Indicator lights blink yellow when batteries are becoming weak. Change batteries when swing ceases to operate satisfactorily.

Caring for Your Battery Powered Swing

Problem: Possible Reasons for Problem:

- | | |
|---------------------|---|
| Swing won't operate | <ol style="list-style-type: none"> 1. No batteries in swing. 2. Batteries dead. 3. Speed setting too low. 4. Batteries in backwards—check "+" and "-". 5. Corrosion on battery terminals. Rotate batteries in place against terminals, or clean with sandpaper or steel wool if corrosion is severe. 6. Baby leaning too far forward. 7. Baby grabbing swing legs. (Discontinue use.) 8. Seat not pushed high enough for a good start. 9. Protective device activated. (Turn off motor, wait 3 minutes, then restart swing.) |
|---------------------|---|

- | | |
|------------------------------|---|
| Seat doesn't swing very high | <ol style="list-style-type: none"> 1. Control setting too low. 2. Blanket hanging down, causing increased wind resistance. 3. Batteries too weak. 4. Baby leaning too far forward. 5. Baby too heavy or too active. (Discontinue use.) 6. Soft carpet (swings higher on hard floors). |
|------------------------------|---|

If you still have problems, call our toll-free number, 1-800-345-4109.

Replacement Parts

Instructions for ordering swing parts:

Complete form below. Your swing model number **MUST** be included on the form to ensure proper replacement parts. **Your model number can be found on a sticker beneath the swing motor. Payment must accompany your order.**

Parts List:	Price:**
Plastic seat	\$21.00
with strap & buckle	
Cloth seat cover	\$14.00
Hanger tube (each)	\$13.00
Seat belt	\$ 5.00
Tray	\$13.00
Adjustment wire	\$ 7.00
Back brace	\$ 7.00
Hardware	\$ 5.00
Motor housing	\$25.00
Pivot housing	\$10.00
Large front foot (2)	\$ 5.00
Small rear foot (2)	\$ 5.00
Front base tube	\$ 7.00
Rear base tube	\$10.00
Leg (each)	\$ 7.00
Head support cushion*.....	\$10.00

* On certain models

** Prices subject to change without notice.

IF YOU NEED HELP

If you have any questions or if you need any part not listed, please call toll-free:

1-800-345-4109

or visit our Internet website, www.gracobaby.com.

Return the form below with payment to:
GRACO CHILDREN'S PRODUCTS INC.
CUSTOMER SERVICE DEPARTMENT
P.O. BOX 100, MAIN STREET
ELVERSON, PA 19520

Model Number	SHIP TO:
(Must be filled in)	
<input type="checkbox"/> Plastic seat with strap & buckle	Name _____
<input type="checkbox"/> Cloth seat cover	Address _____
<input type="checkbox"/> Hanger tube	City, State, Zip _____
<input type="checkbox"/> Seat belt	(_____) _____
<input type="checkbox"/> Tray	Telephone _____
<input type="checkbox"/> Adjustment wire	
<input type="checkbox"/> Back brace	<input type="checkbox"/> Check enclosed (payable to Graco Children's Products Inc.)
<input type="checkbox"/> Hardware	<input type="checkbox"/> Charge to credit card:
<input type="checkbox"/> Motor housing	<input type="checkbox"/> Visa
<input type="checkbox"/> Pivot housing	<input type="checkbox"/> MasterCard
<input type="checkbox"/> Large front foot (2)	<input type="checkbox"/> Discover
<input type="checkbox"/> Small rear foot (2)	
<input type="checkbox"/> Front base tube	Total: _____
<input type="checkbox"/> Rear base tube	Shipping & handling*: _____ \$5.00
<input type="checkbox"/> Leg	6% sales tax (PA only): _____
<input type="checkbox"/> Head support cushion	Account #: _____
	Total amount due: _____
	Expiration date: _____
	Signature: _____
*Outside the continental U.S., please call for shipping cost.	