

GRACO®

 
Stroller

OWNER'S MANUAL

Model No. _____
Serial No. _____

Dear Customer,

Please fill in the model and serial numbers above from the label on the rear leg of your new stroller.

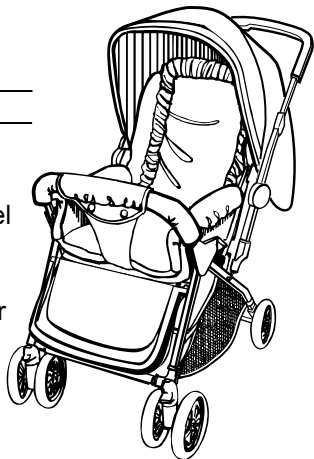

7500 Models

Congratulations on your purchase of a Graco® stroller!

Graco is a world leader in strollers and has helped thousands of parents transport their children in comfort. We believe your new Graco® stroller is a wise choice, promising many hours of enjoyment for your baby.

Before using your stroller, please take a few minutes to read this Owner's Manual. The short time you spend reading these instructions will help you assemble and use your stroller properly.

**Please save your Owner's Manual
for future use.**

 
Customer Satisfaction

Our goal is to make every product the best it can be! We are also committed to supporting our products after purchase. If you would like to speak to Graco about your product, please contact our **Customer Service Department at 1-800-345-4109** or visit our Internet website, www.gracobaby.com. Our knowledgeable staff will be ready to answer any questions you may have concerning parts, use or maintenance. When you call, please have the **model and serial numbers** ready so your call may be processed quickly and efficiently.


⚠ WARNING




Never leave child unattended.
Always keep your child in view.

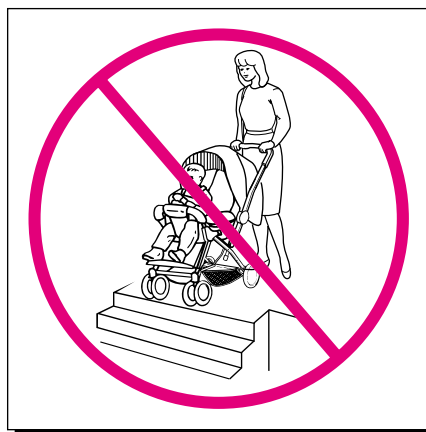

 
Never use stroller on stairs or escalators. You may suddenly lose control of the stroller or your child may fall out. Also, use extra care when going up or down a step or curb.

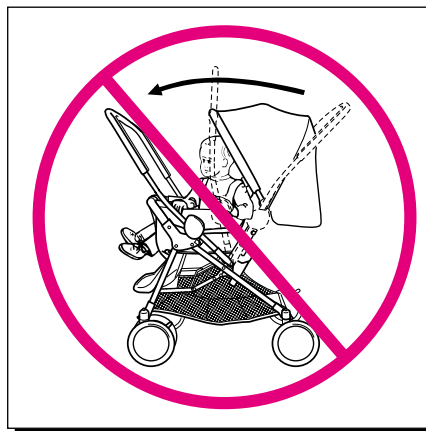

 Use care when reversing handle to avoid catching child's arms or hands in the mechanism. When making adjustments to your stroller, always be sure that all parts of your child's body are clear of any moving parts.

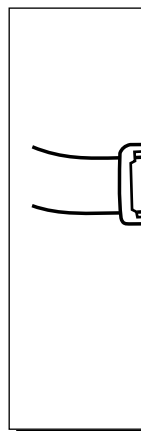

Avoid serious sliding out.

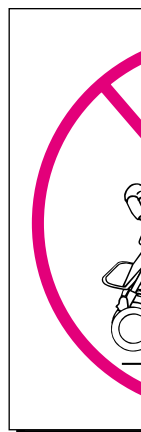 

DO NOT pull bags, parcels, or other items on the handle of the stroller.

TO PREVENT
(4.5 kg)

DO NOT
cause in

 
NEVER

STROLLER
while jog


AVOID
neck, su

DISCON

Failure to follow these warnings and the assembly instructions could result in serious injury or death.

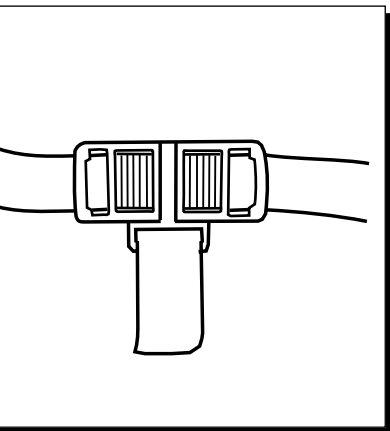

 Avoid serious injury from falling or tipping out. Always use seat belt.

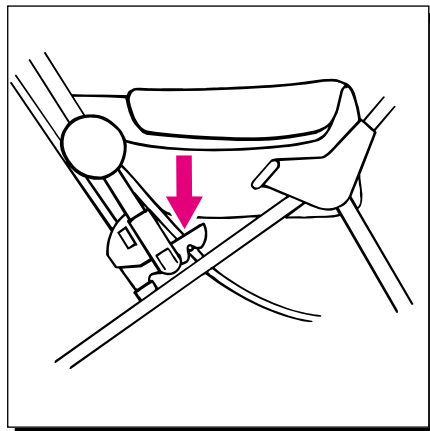

Be certain the stroller is fully erected and latched before allowing your child near the stroller.



 
Never place child in the stroller with head toward front of the stroller.



DO NOT place purses, shopping bags, parcels and accessory items on handle or canopy. They may fall on the child or change the balance of the stroller and make it unstable.



Use of the stroller with a child weighing more than 40 lbs. (18.1 kg) will cause excessive wear and stress on the stroller. Use the stroller with only one child at a time.

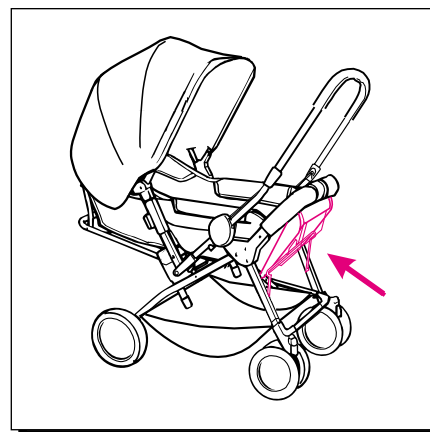

Child may slip into leg openings and strangle. Never use in reclined carriage position unless footrest is placed under padded front bar and wire snapped into lower notch.

TO PREVENT A HAZARDOUS CONDITION, do not place more than 10 lbs. (4.5 kg) in the storage basket or more than 2 lbs. (0.9 kg) in the canopy bag.

DO NOT ALLOW YOUR CHILD to stand on the basket. It may collapse and cause injury.

NEVER ALLOW YOUR STROLLER to be used as a toy.

STROLLER TO BE USED only at walking speed. Product not intended for use while jogging, skating, etc.

AVOID STRANGULATION. DO NOT place items with a string around your child's neck, suspend strings from this product, or attach strings to toys.

DISCONTINUE USING YOUR STROLLER should it become damaged or broken.

 
FOR ADDITIONAL IMPORTANT INFORMATION, please see the Helpful Hints and Care and Maintenance sections in these instructions.

PARTS LIST

CHECK that you have all the parts listed below
BEFORE assembling your stroller.
If any parts are missing, call Customer Service
at 1-800-345-4109 or visit our Internet website,
www.gracobaby.com.

THIS PRODUCT REQUIRES ADULT ASSEMBLY.


No tools required for assembly.

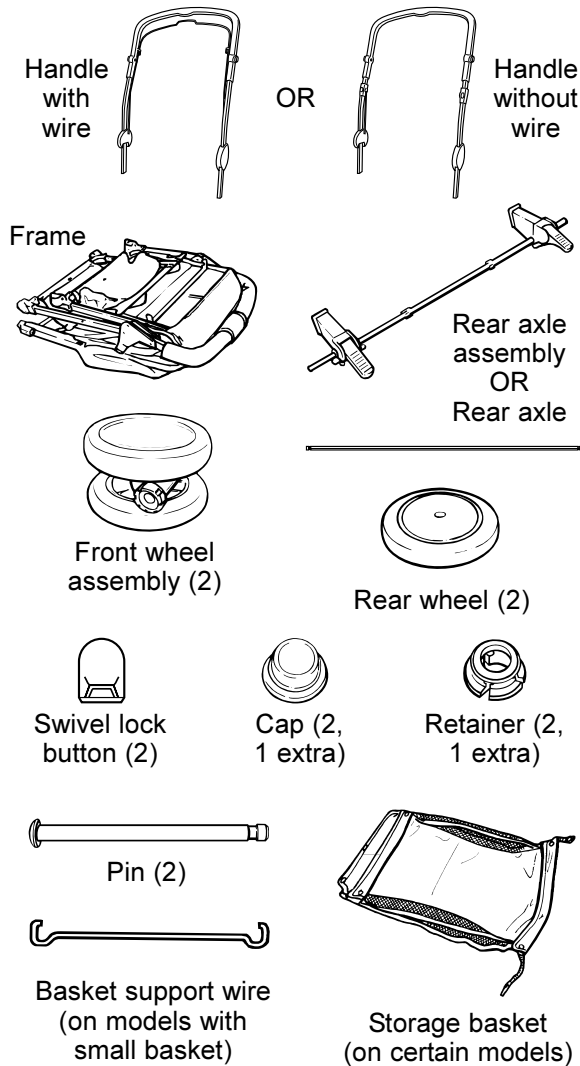

To Unpack Stroller


Step 1.

 Flatten stroller carton to protect floor.

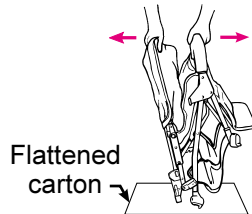

Step 2.

 Open stroller on carton as shown until latched.

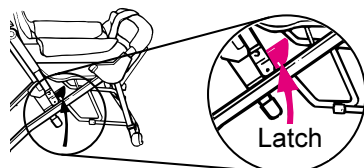

To Install Handle

Step 1.

 
Turn handle brackets straight up.

Step 2.

Position handle as shown.

Step 3.

Place both sides of handle into brackets and push down until latched.

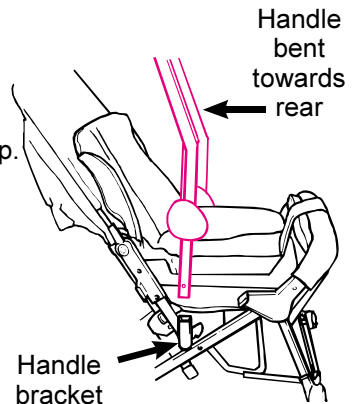

Be sure buttons are securely latched in bracket holes.
Check by pulling firmly up on handle.

To Assemble Rear Axle

Your stroller will have either a rear axle or a rear axle assembly with brackets. Follow the appropriate instructions below.

 
Rear Axle:

Step 1.


Turn stroller over as shown.

Step 2.

Slide the rear axle through the holes in both axle brackets.

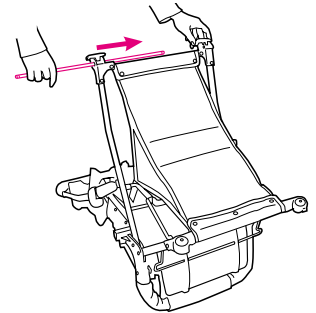

Rear Axle Assembly:

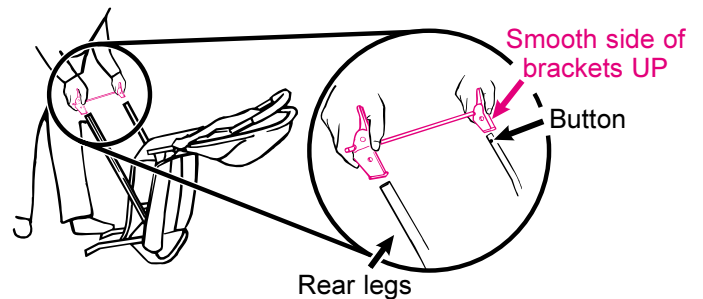 

Step 1.

Turn stroller over as pictured above.

Step 2.

Position rear axle assembly as shown.

 
Step 3.

Push both brackets all the way on until metal buttons snap into bracket holes on inside of legs.

Pull firmly on each bracket to be sure buttons are snapped into bracket holes.


To Assemble Rear Wheels

Place one rear wheel, red retainer, and white cap on one end of rear axle **in order** as shown below. Push red retainer onto axle **BEFORE** attaching white cap. Repeat on other side.

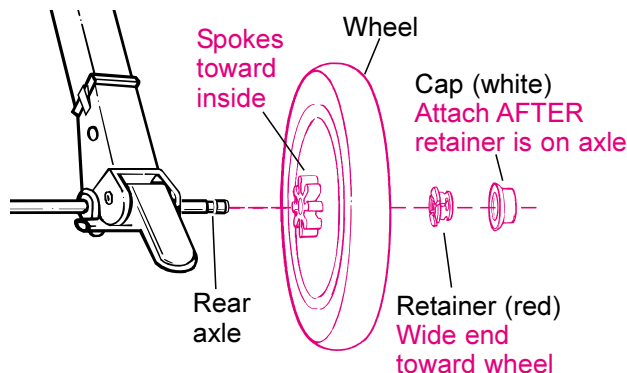

Snap red retainer into axle groove. Then snap cap over red retainer as shown.

 
Be sure cap is snapped securely over red retainer.

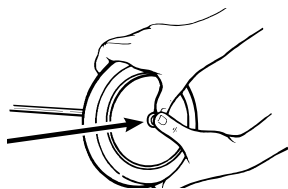

To Assemble Front Wheels

Step 1.

 Snap swivel lock button onto wheel mount as shown. This must be done **BEFORE** pin is inserted (next step).

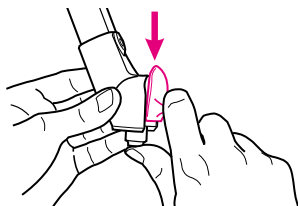


Step 2.

Insert pin through hole in wheel mount. Then push **round** end of a front wheel assembly up onto pin as shown until it snaps into place.

Check wheel attachment by pulling down on the front wheel assembly.

Step 3.

 
Repeat above steps for the other side.

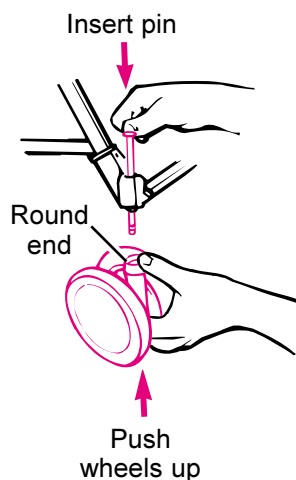

To Install Storage Basket (on certain models)


Step 1.

 Snap basket support wire onto rear legs as shown.

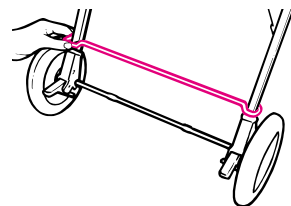

Step 2.

 Fasten the two straps around front legs, above the side braces, as shown.

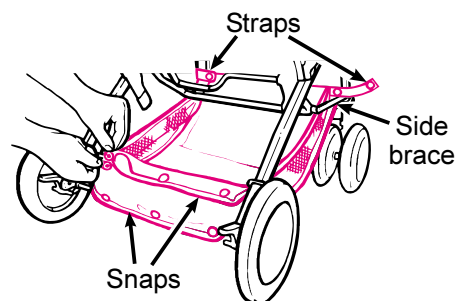

Step 3.

Fasten the bottom row of snaps around the rear axle.

 
Step 4.

Fasten the top row of snaps around the basket support wire.

To Unfold Stroller


Step 1.

Unfold footrest from under armrest.

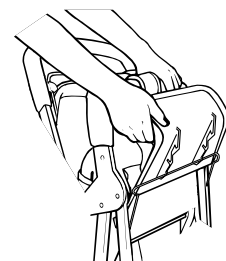


Step 2.

 Release storage latch.

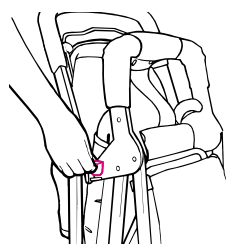


OR

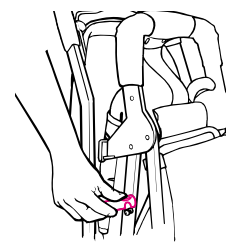 

Step 3.

Unfold as shown.

 ▲ WARNING Be certain the stroller is fully erected and latched before allowing your child near the stroller.

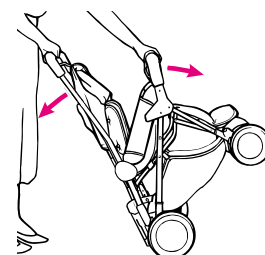


To Use Brakes

▲ WARNING Always apply both brakes to park stroller.

Push **DOWN** on each brake to park.


Check to make sure brakes are on by trying to push the stroller.

 Lift **UP** on each brake to stroll.

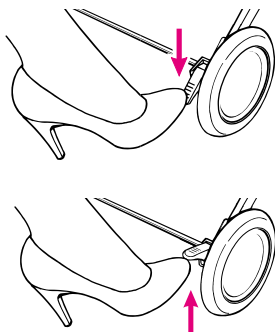

To Use Canopy

 To open canopy, pull it forward.

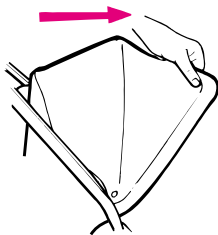


To Secure Your Child

▲ WARNING Avoid serious injury from falling or sliding out. Always use seat belt.


Step 1.

 Place crotch strap between child's legs and snap both side buckles to the center buckle. Adjust belt as needed to get a snug fit around your child.



Step 2.

 
Push in on front of buckle to release.

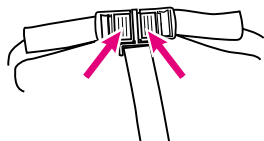

To Change to Swivel or Non-swivel Wheels

Front swivel wheels lock for use on uneven surfaces such as grass, stones or gravel.

 Before locking swivels, push stroller forward a few feet to ensure that the wheels are correctly positioned.

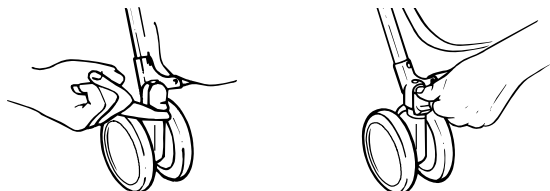


Push buttons up or down, depending on model, to lock or release swivels. Turn swivel to check that it is locked or released.

To Adjust Back


Step 1.

 Push back of seat slightly forward while squeezing as shown to unlock.

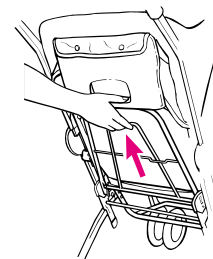


Step 2.

 Adjust to desired position.

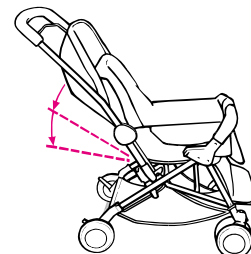


To Raise Footrest

 Lift footrest to desired position and hook wire into footrest bracket.

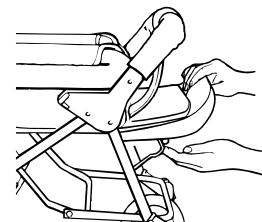

 
▲ WARNING Child may slip into leg openings and strangle. Never use in a reclined carriage position unless footrest is placed under padded front bar and wire is snapped into lower notch.

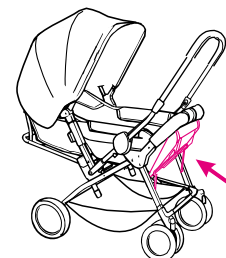

To Move Handle to Carriage Position

Step 1.

 On handles with a wire, squeeze wire as shown to unlock.

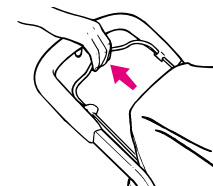

On handles without a wire, pull up on both plastic slides on the handle as shown to unlock.



Step 2.

 
Move handle to new position.

▲ WARNING Use care when reversing handle to avoid catching child's arms or hands in the folding mechanism.




To Use Large Basket **(on certain models)**

To lower basket, push **DOWN** on basket.

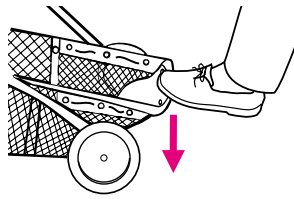


To raise basket, lift **UP** on basket.

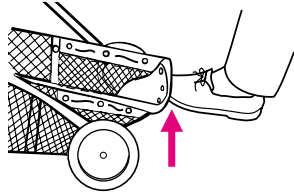 

⚠ WARNING Do not allow your child to stand on the basket. It may collapse and cause injury.

To Adjust Head Supports **(on certain models)**

 To use stroller with a smaller child, pull the plastic pieces from pockets located in the back of the cloth seat pad, and reinsert them with curved side toward the front.

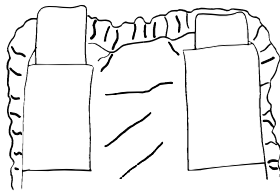

Back of cloth seat pad

To use stroller with a larger child who does not need head support, insert the plastic pieces with the curved side toward the back.

 
To Fold Stroller

Before folding, (1) adjust back to upright position; (2) adjust handle to rear position; (3) fold canopy.


On models with a large collapsible basket, lower the basket first to provide easier access to the folding latch.

Step 1.

Push on latch to fold as shown.

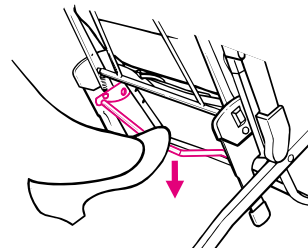


OR

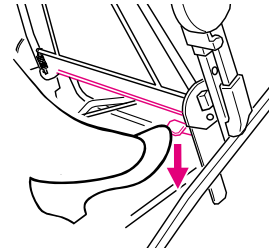 


Step 2.

 Push handle forward.

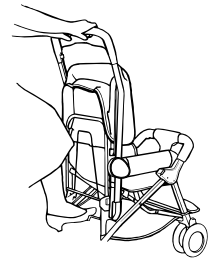


Step 3.

 Push on secondary lock on right side of stroller (red button).

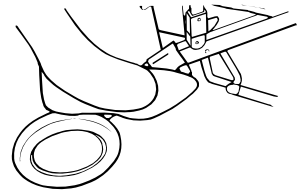


Step 4.

 Lock storage latch as shown.

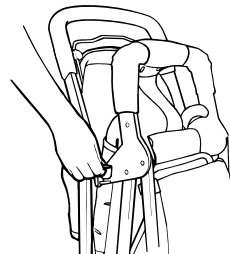


OR

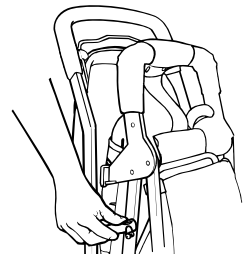 

HELPFUL HINTS

 IF WHEEL SQUEAKS, use a light oil (e.g., WD-40, 3-in-1, or sewing machine oil). It is important to get the oil into the axle and wheel assembly as shown.



WHEN USING YOUR STROLLER AT THE BEACH, completely clean your stroller afterward to remove sand and salt from mechanisms and wheel assemblies.

CARE AND MAINTENANCE

DO NOT MACHINE WASH SEAT (with permanent inner boards). It should only be wiped with a mild detergent, taking care not to soak the material. **NO BLEACH.**

REMOVABLE SEAT PAD may be machine washed in lukewarm water on delicate cycle and drip-dried. **NO BLEACH.**

FROM TIME TO TIME CHECK YOUR STROLLER for loose screws, worn parts, torn material or stitching. Replace or repair the parts as needed. Use only Graco® replacement parts.

DISCONTINUE USING YOUR STROLLER should it become damaged or broken.

TO CLEAN STROLLER FRAME, use only household soap or detergent and warm water. **NO BLEACH.**

EXPOSURE TO SUN OR HEAT could cause fading or warping of parts.

Replacement Parts

Instructions for ordering stroller parts:

Complete form below. Your stroller model number **MUST** be included on the form to ensure proper replacement parts. Your model number can be found on a sticker on the rear leg of your stroller. **Payment must accompany your order.**

Parts List:	Price:*
Removable seat pad	\$22.00
Front wheel assembly	\$16.00 (each)
(2 wheels per unit)	
Rear axle assembly*	\$12.00
Rear axle*	\$ 7.00
Rear wheel	\$ 8.00 (each)
Small basket	\$16.00
Large basket	\$16.00
Footrest cover	\$13.00
Canopy	\$18.00
Handle with wire	\$25.00
Handle without wire	\$25.00
Seat	\$30.00
Wheel hardware	No charge

* Certain models only

* Prices subject to change without notice.

IF YOU NEED HELP

If you have any questions or if you need any parts not listed, please call toll-free:

1-800-345-4109

or visit our Internet website, www.gracobaby.com.

Return the form below with payment to:
GRACO CHILDREN'S PRODUCTS INC.
CUSTOMER SERVICE DEPARTMENT
P.O. BOX 100, MAIN STREET
ELVERSON, PA 19520

Model Number	SHIP TO:
(Must be filled in)	Name
<input type="checkbox"/> Removable seat pad	Address
<input type="checkbox"/> Front wheel assembly	City, State, Zip
<input type="checkbox"/> Rear axle assembly	()
<input type="checkbox"/> Rear axle	Telephone
<input type="checkbox"/> Rear wheel	
<input type="checkbox"/> Small basket	
<input type="checkbox"/> Large basket	
<input type="checkbox"/> Footrest cover	
<input type="checkbox"/> Canopy	
<input type="checkbox"/> Handle with wire	<input type="checkbox"/> Check enclosed
<input type="checkbox"/> Handle without wire	(payable to Graco Children's Products Inc.)
<input type="checkbox"/> Seat	<input type="checkbox"/> Charge to credit card:
<input type="checkbox"/> Wheel hardware	<input type="checkbox"/> Visa
	<input type="checkbox"/> MasterCard
	<input type="checkbox"/> Discover
Total: _____	Account #:
Shipping & handling: <u>\$5.00</u>	Expiration date: _____
6% sales tax (PA only): _____	Signature: _____
Total amount due: _____	