


PRICE 35¢

ILLUSTRATED

PARTS LIST


HOMELITE®

S-8 Snow Thrower

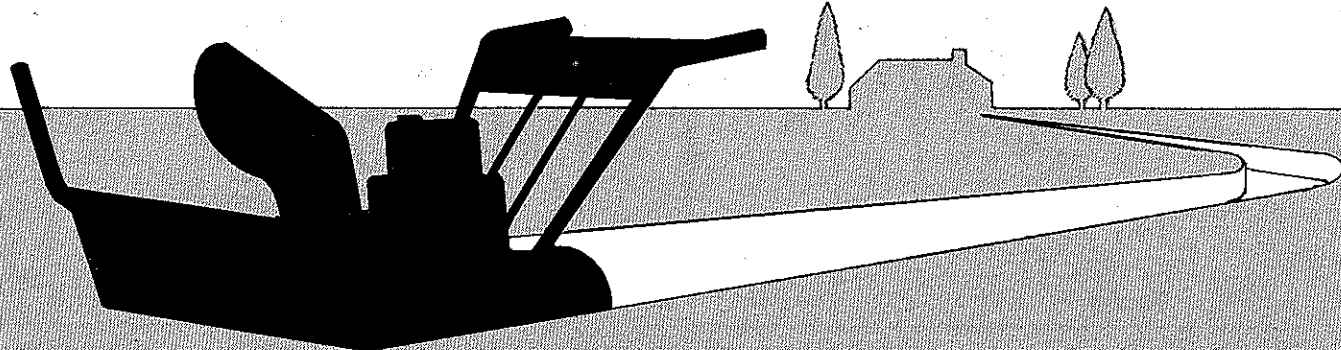

PART NO. 24597-3

Handles and Controls

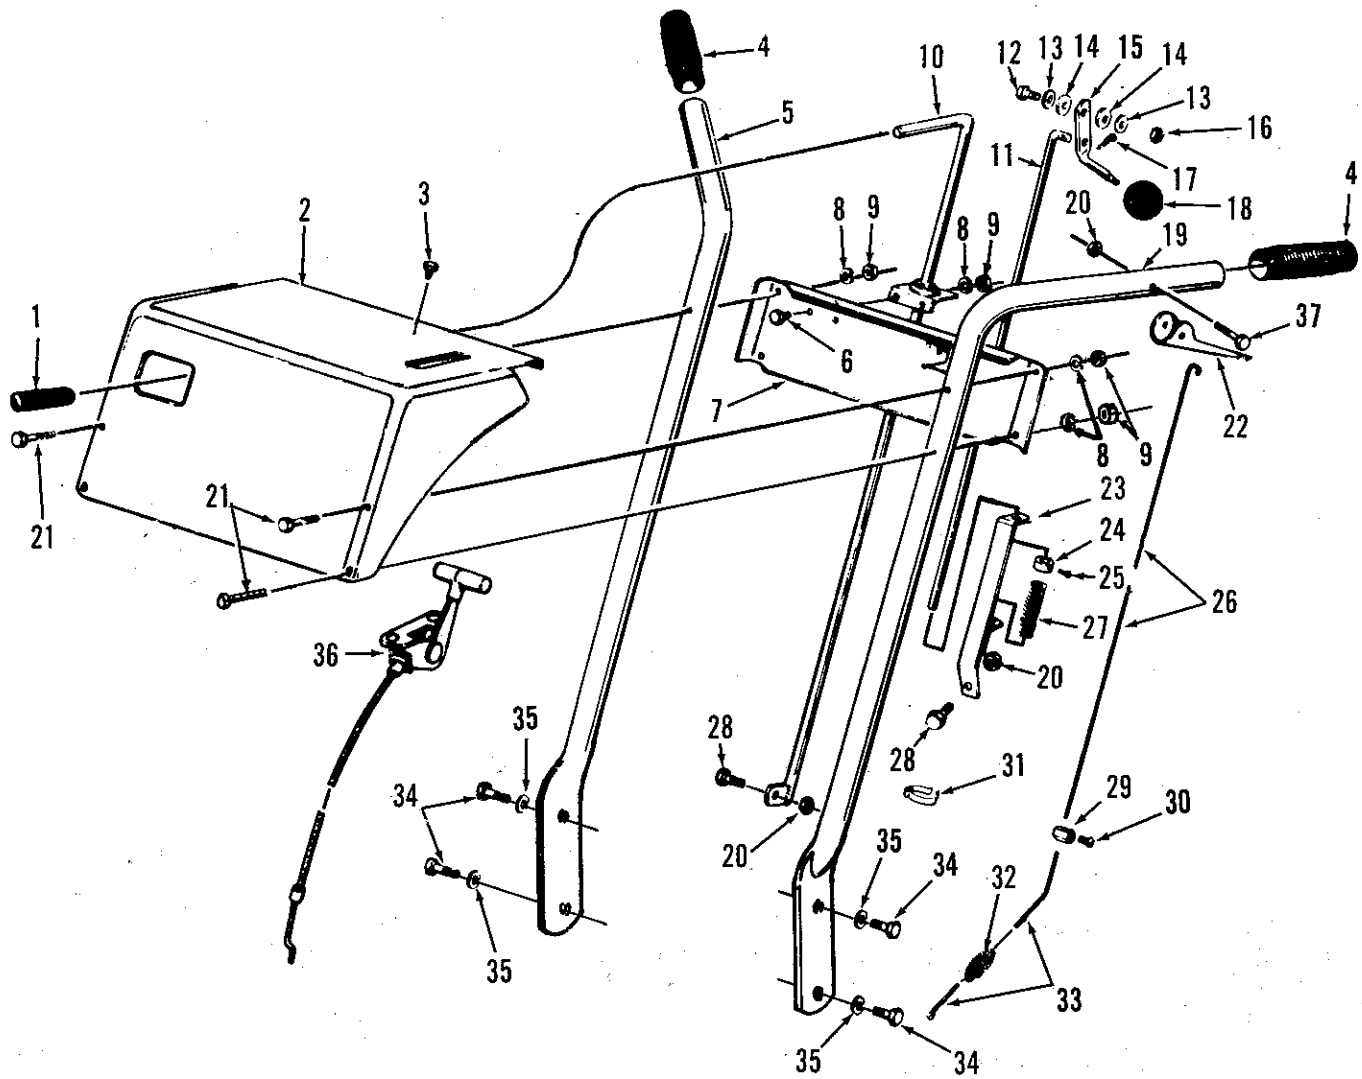


No.	Description	Part No.	Qty.	No.	Description	Part No.	Qty.
1	GRIP-handle	LM-01611-05	1	22	GRIP-clutch	LM-01180-56	1
2	CONTROL HOUSING ASSEMBLY	LM-01611-73	1	23	GUIDE ASSEMBLY	LM-01610-41	1
3	SCREW-hex, self-tapping, 1/4-20 x 1/2	LM-09231-88	2	24	COLLAR-set	LM-81910-22	1
4	GRIP	LM-01065-58	2	25	SCREW-set, 1/4-20 x 3/8	LM-09038-07	1
* 5	HANDLE-rear, R. H.	LM-01765-68	1	26	EXTENSION-spring	LM-01610-90	1
6	SCREW-hex cap, 1/4-20 x 1/2	LM-09082-95	2	27	SPRING	LM-81910-45	1
7	COVER-handle	LM-01761-05	1	28	SCREW-hex cap, 1/4-20 x 1	LM-09219-60	2
8	WASHER-lock, 1/4"	LM-09169-64	5	29	CLAMP-wire	LM-01610-92	1
9	NUT-full hex, 1/4-20	LM-09166-22	5	30	SCREW-rd. hd., 10-24 x 3/8	LM-09160-79	1
10	SHIFT ROD ASSEMBLY	LM-01760-25	1	31	CABLE CLIP	LM-80611-08	1
11	ROD-clutch	LM-01610-52	1	32	SPRING	LM-01610-93	1
12	SCREW-hex cap, 5/16-18 x 7/8	LM-09193-19	1	33	WIRE-extension	LM-01610-91	1
13	WASHER-flat, 1/4"	LM-09173-77	2	34	SCREW-hex cap, 5/16-18 x 7/8	LM-09233-25	3
14	WASHER-special	LM-01591-34	2	35	WASHER-lock, 5/16	LM-09173-56	3
15	HANDLE-auger clutch	LM-01610-85	1	36	THROTTLE CONTROL ASSEMBLY	LM-01611-78	1
16	NUT-elastic stop, 5/16-18	LM-09244-33	1	37	SCREW-cap, 1/4-20 x 3/4	LM-09193-16	1
17	PIN-cotter, 3/32 x 3/4	LM-09184-47	1		FILM-S-8	LM-01748-00	1
18	KNOB	LM-01220-05	1		FILM-instructions	LM-01743-62	1
* 19	HANDLE-rear, L. H.	LM-01765-69	1		DECAL-safety	LM-01612-47	1
20	NUT-full hex lock, 1/4-20	LM-09233-58	3		FILM-drive control	LM-01748-44	1
21	SCREW-hex cap, 1/4-20 x 1-1/2	LM-09182-40	3		FILM-HOMELITE	LM-01743-67	1
					FILM-caution	LM-01748-02	1

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.

* Denotes new parts

Spout and Controls

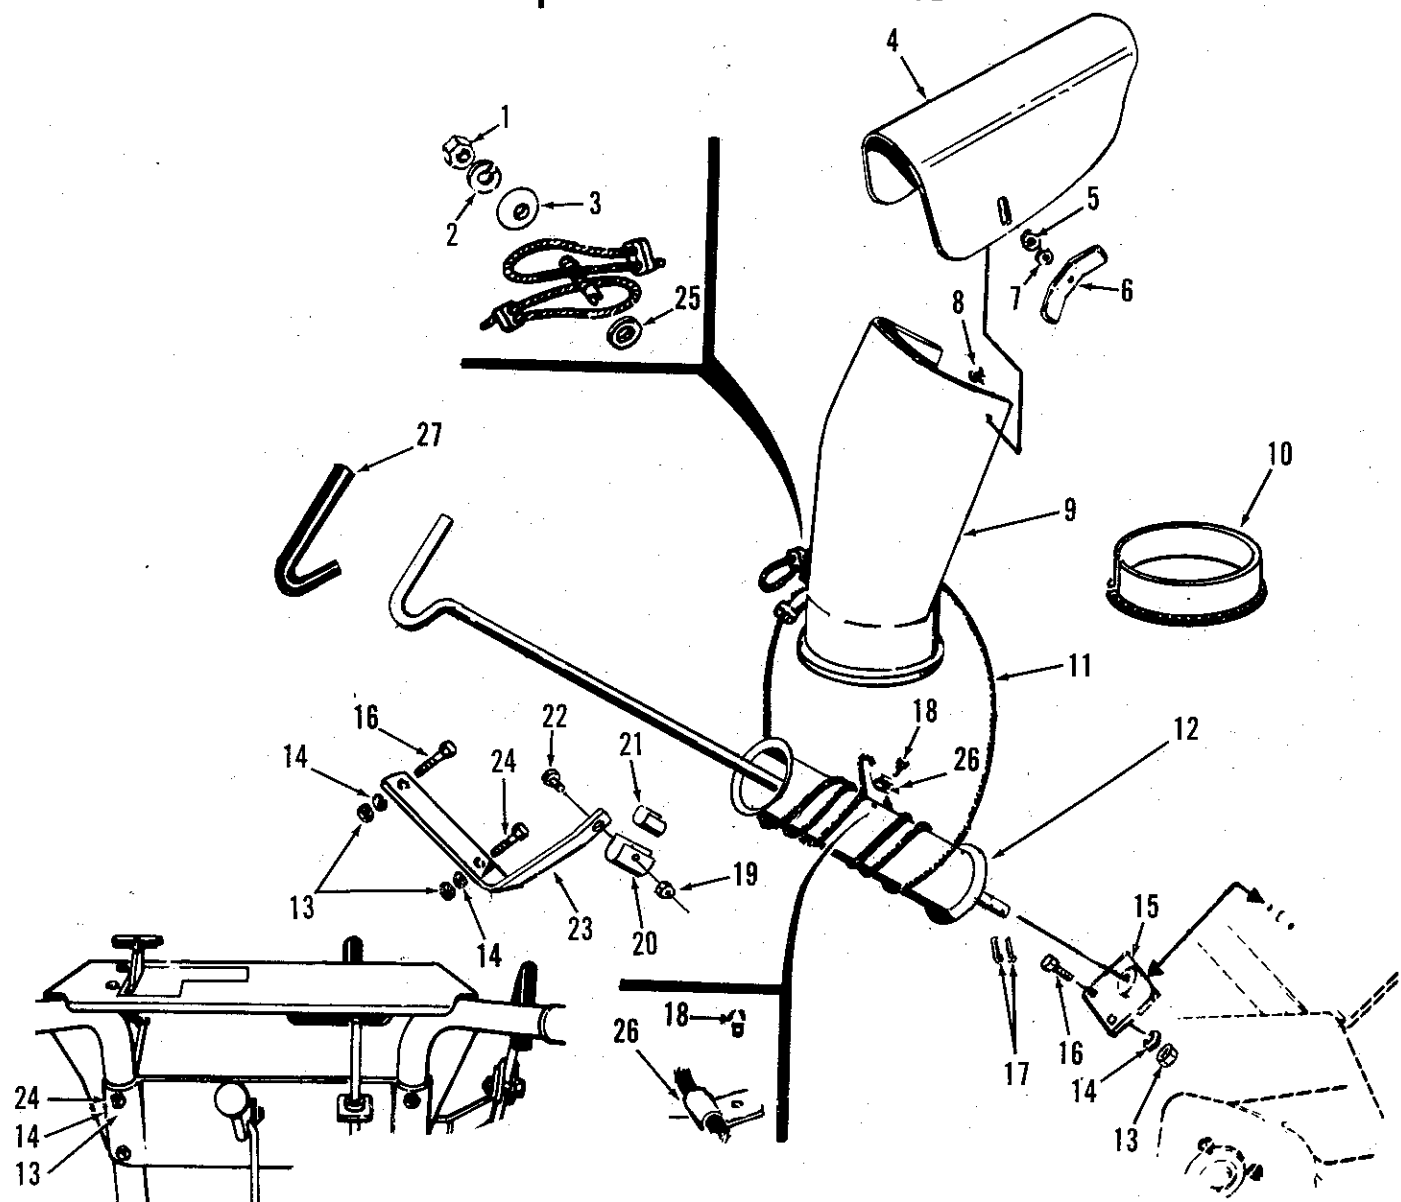


No.	Description	Part No.	Qty.	No.	Description	Part No.	Qty.
1	NUT-full hex, 5/16-18	LM-09173-72	1	15	BEARING	LM-01065-51	1
2	WASHER-lock, 5/16	LM-09173-56	1	16	SCREW-hex cap, 1/4-20 x 5/8	LM-09077-27	3
3	WASHER-cup	LM-01713-79	1	17	PIN-cotter, 1/8 x 3/4	LM-09184-51	2
4	EXTENSION-spout	LM-01064-89	1	18	SCREW-Taptite, 1/4-20 x 3/8	LM-09274-28	1
5	WASHER-lock, 3/8" shakeproof	LM-09287-10	2	19	NUT-full hex lock, 5/16-18	LM-09233-62	1
6	NUT-wing	LM-01062-29	2	20	GUIDE-rod	LM-01520-50	1
7	WASHER-flat, 3/8	LM-09176-42	2	21	LINER-guide	LM-01211-75	1
8	BOLT-carriage	LM-09205-62	2	22	SCREW-hex cap, 5/16-18 x 1-1/4	LM-09077-29	1
9	SPOUT-assembly	LM-01610-99	1	* 23	SUPPORT-bracket	LM-01760-26	1
10	LINER	LM-01612-81	1	24	SCREW-hex cap, 1/4-20 x 1-3/4	LM-09193-16	1
11	CABLE ASSEMBLY	LM-01713-62	1	25	WASHER-flat, 1/4	LM-09173-77	1
* 12	ROD-spout control	LM-01760-73	1	26	CLAMP	LM-01713-82	1
13	NUT-full hex, 1/4-20	LM-09166-22	4	* 27	HANDLE-grip	LM-01769-34	1
14	WASHER-lock, 1/4	LM-09169-64	4				

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.

* Denotes new parts


Rotor and Body Group

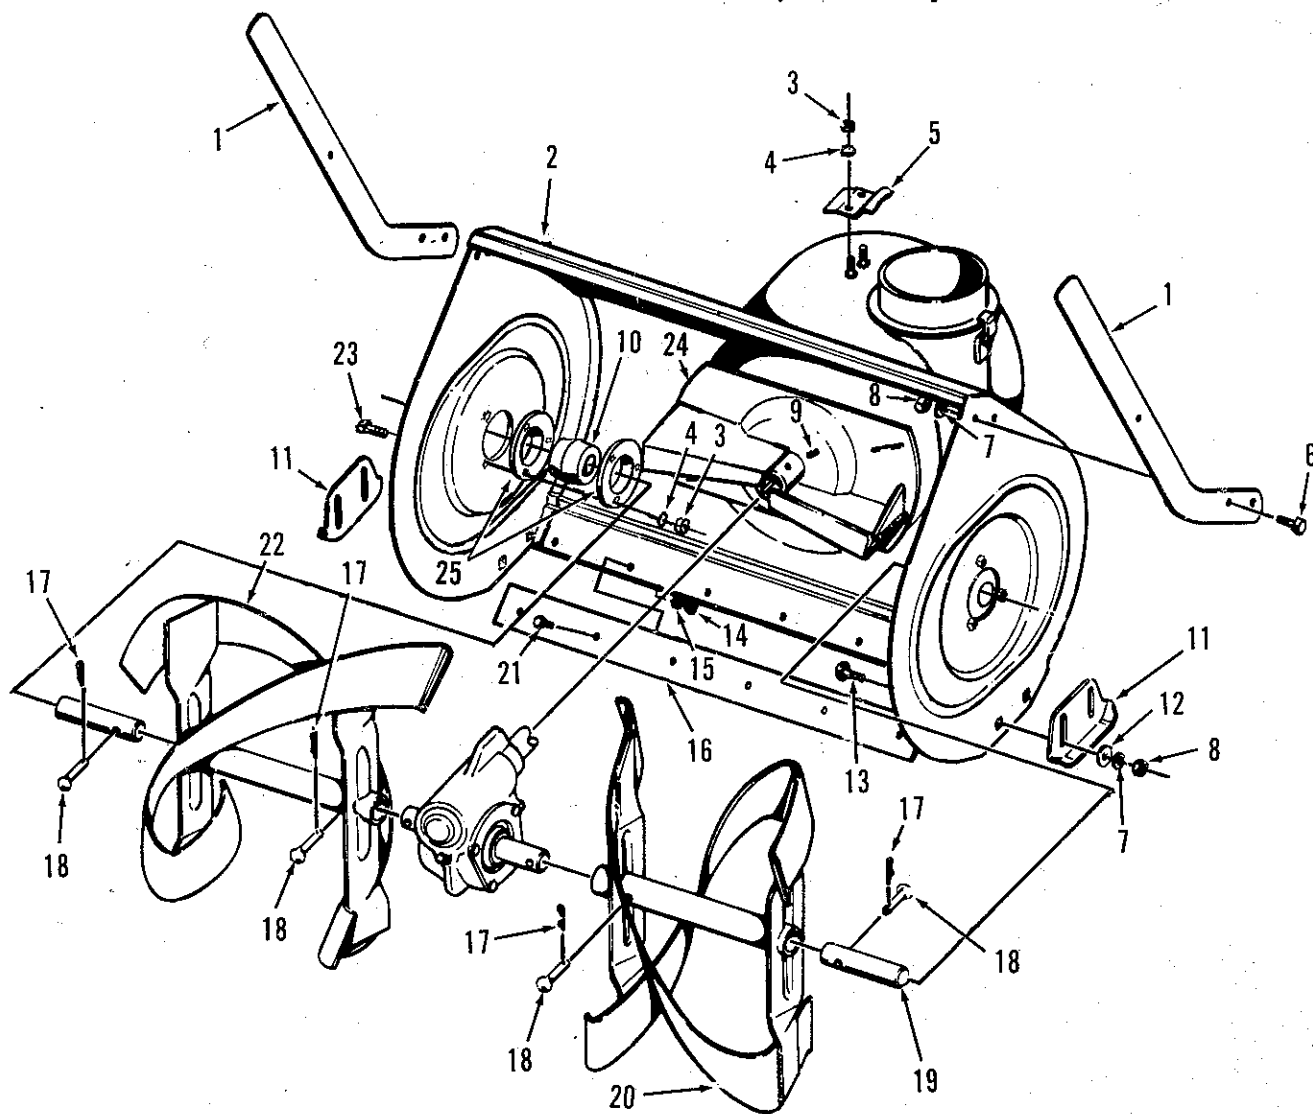

No.	Description	Part No.	Qty.	No.	Description	Part No.	Qty.
1	CUTTER-drift, 3/16 x 1-1/2 x 18 3/8	LM-01610-42	2	13	BOLT-carriage, 3/8-16 x 3/4	LM-09221-10	4
*2	BODY ASSEMBLY	LM-01733-75	1	14	NUT-full hex, 1/4-20	LM-09166-22	7
	Includes:			15	WASHER-lock, 1/4	LM-09169-64	7
	SLEEVE-(not shown)	LM-01610-26	1	*16	BLADE-scraper	LM-01733-80	1
3	NUT-hex, 5/16-18	LM-09173-72	8	17	PIN-cotter, 1/8 x 1	LM-09184-52	4
4	WASHER-lock, 5/16	LM-09173-56	8	18	PIN	LM-01180-53	4
5	CLIP-hold down	LM-01611-16	1	19	AUGER-shaft	LM-01610-60	2
6	SCREW-hex cap, 3/8-16 x 3/4	LM-09081-27	4	*20	BLADE-rotor, L. H.	LM-01733-83	1
7	WASHER-lock, 3/8	LM-09169-65	8	21	SCREW-hex cap, 1/4-20 x 5/8	LM-09219-59	7
8	NUT-full hex, 3/8-16	LM-09169-50	8	*22	BLADE-rotor, R. H.	LM-01733-84	1
9	SCREW-set, 5/16-18 x 3/8	LM-09287-09	1	23	SCREW-hex cap, 5/16-18 x 3/4	LM-09173-97	6
*10	BEARING ASSEMBLY	LM-01761-00	2	24	IMPELLER ASSEMBLY	LM-01610-11	1
11	SKID	LM-01610-06	2	*25	FLANGE-bearing	LM-01761-01	4
12	WASHER-flat, 3/8	LM-09173-78	4				

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.


Rotor Drive Group

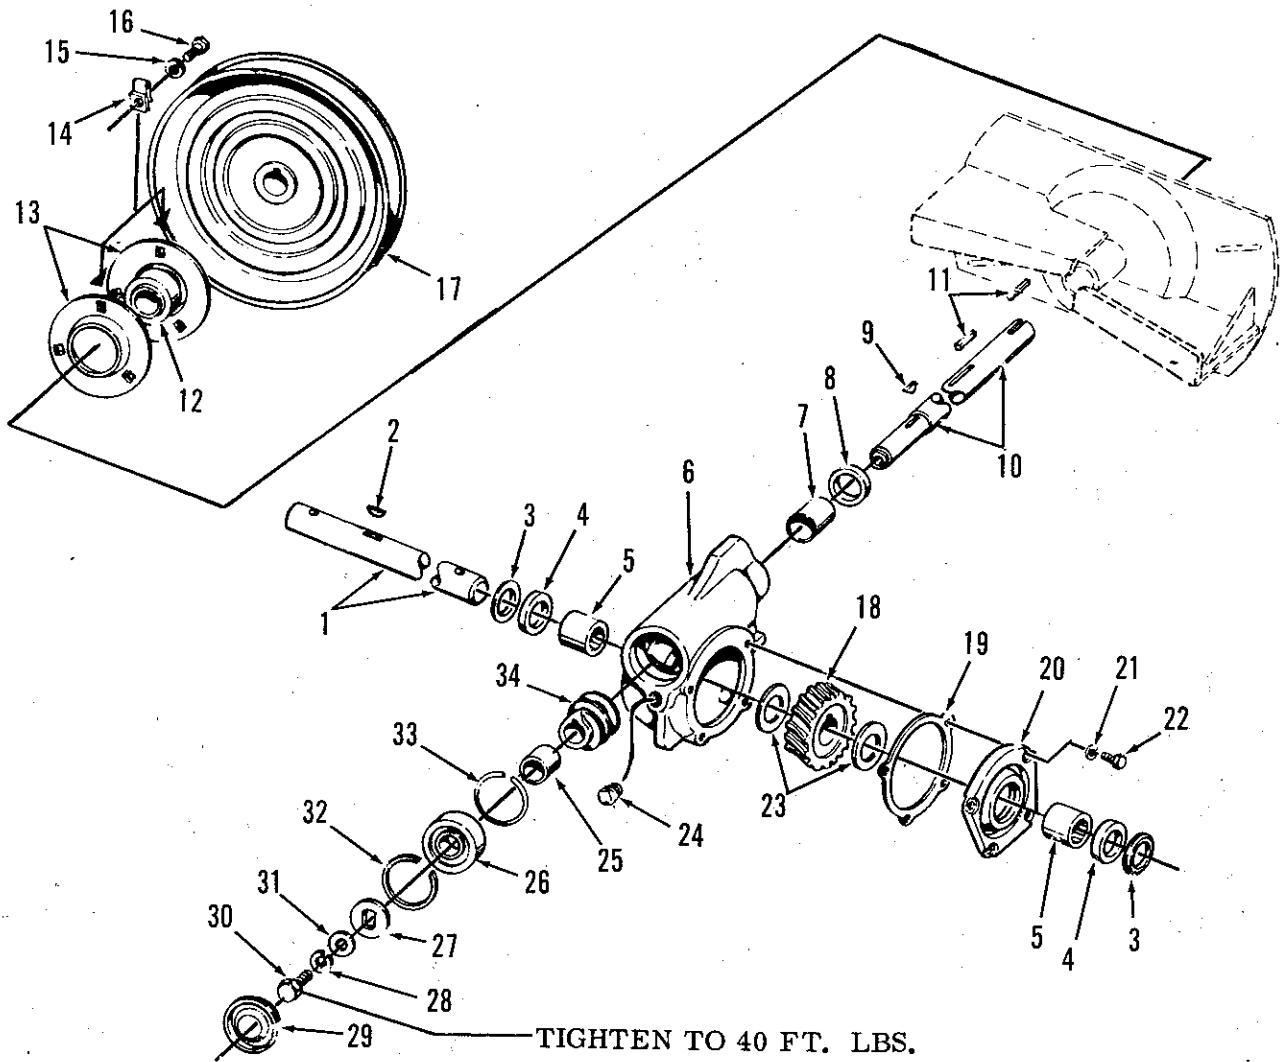

No.	Description	Part No.	Qty.	No.	Description	Part No.	Qty.
1	SHAFT-worm gear	LM-01610-66	1	20	COVER	LM-01183-16	1
2	KEY-woodruff	LM-09177-55	1	21	WASHER-lock, 1/4"	LM-09169-64	4
3	WASHER	LM-01180-82	2	22	SCREW-hex cap, 1/4-20 x 5/8	LM-09219-59	4
4	SEAL-oil	LM-01181-18	2	23	WASHER-thrust	LM-01183-15	2
5	BEARING-needle	LM-01180-20	2	24	PLUG-pipe, 3/8"	LM-09016-53	1
6	HOUSING-worm drive	LM-01610-18	1	25	SPACER	LM-01180-60	1
7	BUSHING	LM-01583-37	1	26	BEARING-ball	LM-01180-11	1
8	SEAL-oil	LM-01181-17	1	27	WASHER	LM-01181-78	1
9	KEY-3/16 x 7/8	LM-09111-71	1	28	WASHER-lock, 3/8"	LM-09169-65	1
10	SHAFT-worm gear	LM-01610-64	1	29	CUP	LM-01181-79	1
11	KEY	LM-80610-81	2	30	SCREW-hex cap, 3/8-24 x 1	LM-09270-08	1
12	BEARING-cartridge	LM-01610-68	1	31	WASHER-flat, 5/16	LM-09176-42	1
13	BEARING-flange	LM-01610-69	2	32	RING-retaining	LM-01180-61	1
14	NUT-retainer	LM-09287-01	3	33	RING-snap	LM-01180-94	1
15	WASHER-lock, 5/16	LM-09173-56	3	34	WORM	LM-01610-65	1
16	SCREW-hex cap, 5/16-18 x 3/4	LM-09173-97	3				
17	PULLEY	LM-01610-70	1		Accessories:		
18	GEAR-worm	LM-01610-67	1		PAINT-white, 12 oz. spray can	24765	1
19	GASKET	LM-01180-24	1		PAINT-blue, 12 oz. spray can	24764	1

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.


Engine and Frame

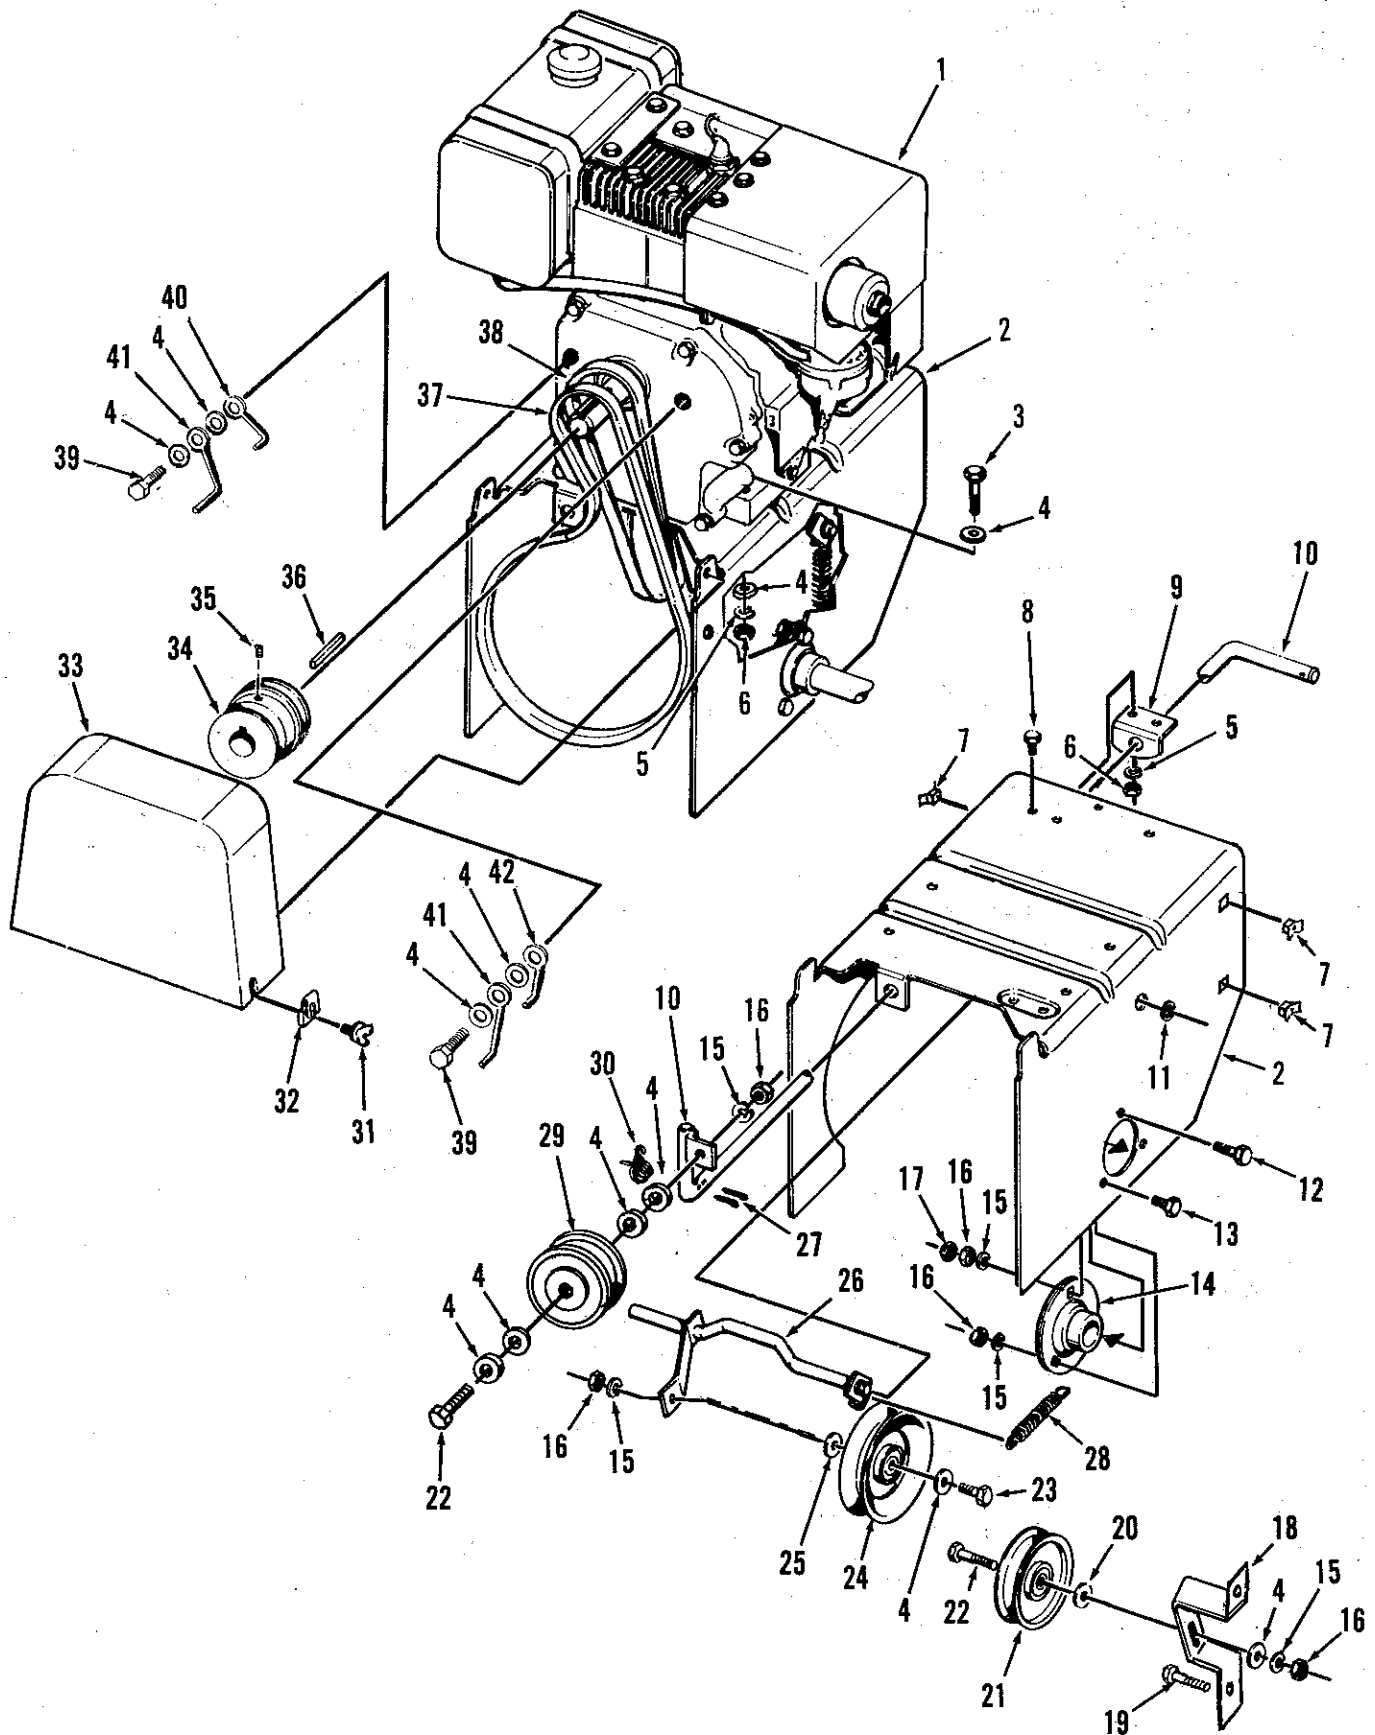

Engine and Frame

No.	Description	Part No.	Qty.
1	ENGINE-model 190412, Type 0695-01		1
2	ENGINE BASE & FRAME	LM-01743-39	1
3	SCREW-hex cap, 5/16-18 x 1-3/4	LM-09173-98	4
4	WASHER-flat, 5/16	LM-09176-42	18
5	WASHER-lock, 5/16	LM-09173-56	6
6	NUT-5/16-18	LM-09173-72	6
7	NUT-Tinnerman	LM-09204-70	3
8	SCREW-hex, 5/16-18 x 5/8	LM-09193-18	2
9	BRACKET-idler	LM-01610-56	1
10	ROD ASSEMBLY-auger	LM-01610-34	1
11	RING-retaining	LM-01583-99	1
12	SCREW-hex cap, 3/8-16 x 1-1/4	LM-09174-00	1
13	SCREW-hex cap, 3/8-16 x 1	LM-09077-31	2
14	BEARING-ball	LM-01612-38	1
15	WASHER-lock, 3/8	LM-09169-65	6
16	NUT-hex, 3/8-16	LM-09169-50	6
17	NUT-hex	LM-09234-28	1
18	BRACKET-idler	LM-01740-91	1
19	SCREW-3/8-16 x 1/2, Taptite	LM-09287-30	2
20	SPACER	LM-01063-92	1
21	PULLEY-idler	LM-01067-16	1
22	SCREW-3/8-16 x 1-1/2	LM-09193-60	2
23	SCREW-3/8-16 x 2	LM-09174-02	1
24	PULLEY	LM-01744-97	1
25	SPACER	LM-01590-29	1
26	CLUTCH PULLEY PIVOT	LM-01743-24	1
27	PIN-cotter, 5/32 x 1	LM-09184-55	2
28	SPRING-tension	LM-01591-06	1
29	PULLEY-idler	LM-01545-34	1
30	SPRING-Torsion	LM-01610-58	1
31	SCREW-thumb, 5/16-18 x 3/4	LM-09286-93	2
32	NUT-Tinnerman	LM-09287-01	2
33	COVER-engine pulley	LM-01610-17	1
34	PULLEY-engine	LM-01742-39	1
35	SCREW-set, 5/16-18 x 3/8	LM-09055-64	1
36	KEY	LM-01591-29	1
37	BELT-V	LM-01610-98	1
38	BELT-V	LM-01743-23	1
39	SCREW-hex, 5/16-24 x 1	LM-09219-44	2
40	STOP-belt	LM-01743-26	1
41	STOP-belt	LM-01630-65	2
42	STOP-belt	LM-01743-27	1

Transmission

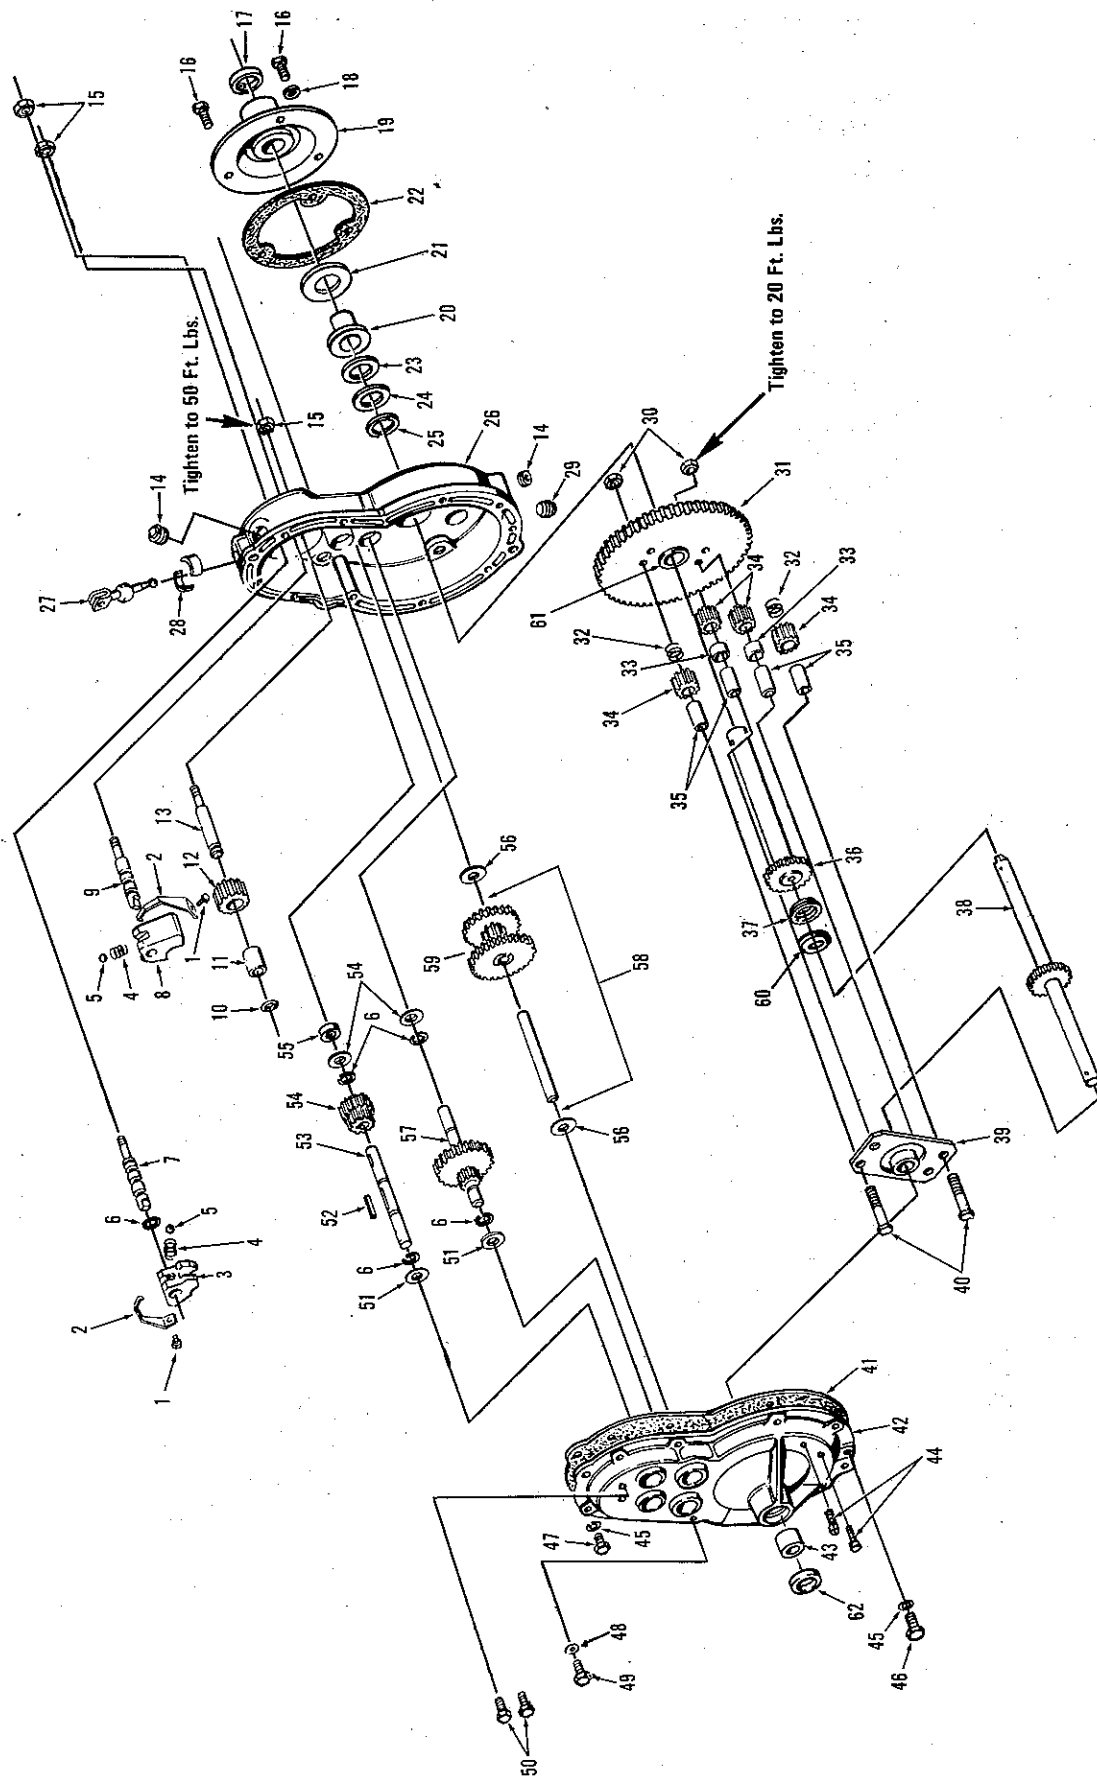


Transmission

No.	Description	Part No.	Qty.
1	SCREW-hex hd., 5/16-18 x 5/16	LM-07151-33	2
2	SPRING	LM-01713-42	2
3	FORK-shift, reverse	LM-01713-63	1
4	SPRING	LM-01714-56	2
5	BALL-shift lock	LM-01542-62	2
6	RING-retaining	LM-80610-48	4
7	SHAFT-shift, reverse & lo	LM-01713-65	1
8	FORK-shift, I & II	LM-01713-64	1
9	SHAFT-shift, hi-lo	LM-01713-72	1
10	"O" RING	LM-01650-06	1
11	BEARING-roller	LM-01560-82	1
12	PINION-reverse	LM-01650-07	1
13	SHAFT-reverse pinion	LM-01650-05	1
14	PLUG-pipe	LM-09270-00	2
15	NUT-hex	LM-09182-13	3
16	SCREW-hex hd., 3/8-16 x 7/8	LM-09193-57	3
17	SEAL-oil	LM-01630-19	1
18	WASHER-lock, 3/8	LM-09169-65	7
19	PLATE SUPPORT ASSEMBLY	LM-01630-56	1
20	Includes: BUSHING	LM-01630-20	1
21	WASHER	LM-01630-09	1
22	GASKET	LM-01630-16	1
23	WASHER	LM-01630-14 as req'd	
	WASHER	LM-01630-88 as req'd	
24	WASHER	LM-01630-15	1
25	RING-snap	LM-01630-17	1
26	CASE-gear sub assembly	LM-01630-94	1
27	Includes: SHIFT ROD ASSEMBLY	LM-01560-31	1
28	BUSHING-ball half	LM-01010-42	2
29	PLUG-pipe	LM-09016-53	1
30	NUT-hex, 3/8-16	LM-09234-28	4
31	GEAR-drive	LM-01630-13	1
32	SPRING-thrust	LM-01620-85	2
33	SPACER-diff.	LM-01210-84	2
34	PINION-diff.	LM-01585-79	4
35	SPINDLE-pinion diff.	LM-01210-83	4
36	AXLE TUBE & BUSHING ASSEMBLY	LM-01612-17	1
37	CUP-thrust	LM-01583-58	1
38	AXLE-assembly	LM-01612-06	1
39	PLATE ASSEMBLY-diff.	LM-01630-54	1
40	SCREW-hex hd., 3/8-16 x 2-1/2	LM-09219-72	4
41	GASKET-case	LM-01561-03	1
42	COVER-gear case sub-assembly	LM-01735-66	1
43	Includes: BUSHING	LM-01630-21	1
44	SCREW-soc. hd., 3/8-16 x 3/8	LM-09028-70	3
45	WASHER-lock, 5/16	LM-09173-56	10
46	SCREW-hex hd., 5/16-18 x 1-1/2	LM-09212-21	1
47	SCREW-hex hd., 5/16-18 x 1-1/4	LM-09077-29	9
48	WASHER-flat, 3/8	LM-09173-78	4
49	SCREW-hex hd., 3/8-16 x 5/8	LM-09182-28	6
50	SCREW-hex hd., 7/16-14 x 3/4	LM-09193-21	2
51	WASHER	LM-01560-85	4
52	Key	LM-01560-86	1
53	SHAFT-pulley	LM-01560-83	1
54	PINION ASSEMBLY-hi-lo	LM-01560-87	1
55	SEAL-oil	LM-01560-84	1
56	WASHER	LM-01560-89	2
57	GEAR & SHAFT ASSEMBLY	LM-01650-13	1
58	SHAFT & GEAR ASSEMBLY	LM-01610-71	1
59	Includes: CLUSTER GEAR	LM-01650-11	1
60	SEAL-oil	LM-01612-12	1
61	BUSHING	LM-01583-65	1
62	SEAL-oil	LM-01630-12	1

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.

Wheels

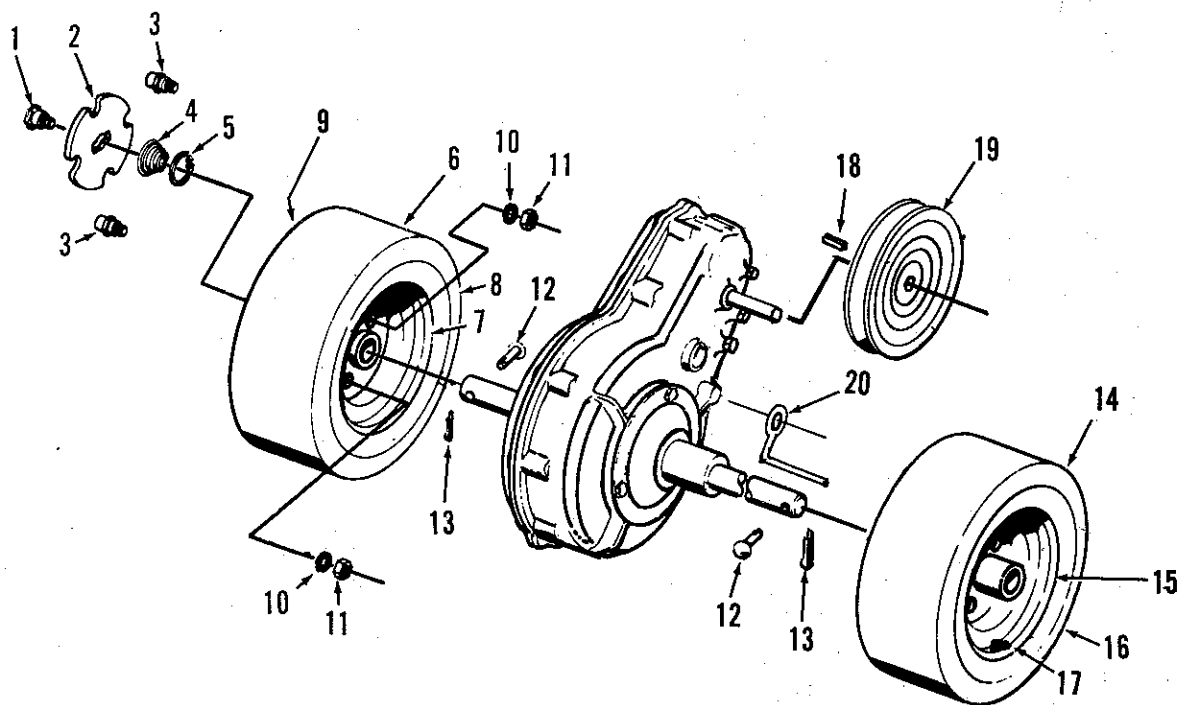

No.	Description	Part No.	Qty.
1	BOLT-shoulder	LM-01611-66	1
2	PLATE	LM-01612-59	1
3	STUD	LM-01612-04	2
4	SPRING	LM-01611-76	1
5	RING-retaining	LM-01612-07	2
6	WHEEL & TIRE ASSEMBLY-L. H.	LM-01612-26	1
	Includes:		
7	WHEEL-L. H.	LM-01612-25	1
8	TIRE-5.30/4.50 x 6	LM-01562-13	1
9	STEM & CAP-valve	LM-01563-05	1
10	WASHER-flat	LM-09176-42	2
11	NUT-full hex lock, 3/8-16	LM-09234-28	2
12	PIN	LM-01180-53	2
13	PIN-cotter, ext. prong	LM-09184-51	2
14	WHEEL & TIRE ASSEMBLY-R. H.	LM-01612-35	1
	Includes:		
15	WHEEL-R. H.	LM-01612-34	1
16	TIRE-5.30/4.50 x 6	LM-01562-13	1
17	STEM & CAP-valve	LM-01563-05	1
18	KEY	LM-01182-78	1
19	PULLEY	LM-01742-40	1
20	STOP-belt	LM-16060-14	1

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.

Part No.	Description	Qty.	Part No.	Description	Qty.
LM-01010-42	Bushing-ball half	1	LM-01610-60	Auger-shaft	2
LM-01063-92	Spacer	1	LM-01610-64	Shaft-worm gear	1
LM-01064-89	Extension-spout	1	LM-01610-65	Worm	1
LM-01065-51	Bearing	1	LM-01610-66	Shaft-worm gear	1
LM-01065-58	Grip	2	LM-01610-67	Gear-worm	1
LM-01067-16	Pulley-idler	1	LM-01610-68	Bearing-cartridge	1
LM-01180-11	Bearing-ball	1	LM-01610-69	Bearing-flange	2
LM-01180-20	Bearing-needle	2	LM-01610-70	Pulley	1
LM-01180-24	Gasket	1	LM-01610-71	Shaft & Gear	1
LM-01180-53	Pin	5	LM-01610-85	Handle-clutch	1
LM-01180-56	Grip-clutch	1	LM-01610-90	Extension-spring	1
LM-01180-60	Spacer	1	LM-01610-91	Wire-extension	1
LM-01180-61	Ring-retaining	1	LM-01610-92	Clamp-wire	1
LM-01180-94	Ring-snap	1	LM-01610-93	Spring	1
LM-01181-17	Seal-oil	1	LM-01610-98	Belt-V	1
LM-01181-18	Seal-oil	2	LM-01610-99	Spout Assembly	1
LM-01181-79	Cup	1	LM-01611-05	Grip-handle	1
LM-01182-78	Key	1	LM-01611-16	Clip-hold down	1
LM-01183-16	Cover	1	LM-01611-35	Cover-rear	1
LM-01210-83	Spindle-pinion	4	LM-01611-73	Control Housing Assembly	1
LM-01210-84	Spacer	2	LM-01611-76	Spring	1
LM-01211-75	Liner-guide	1	LM-01611-78	Throttle Control Assembly	1
LM-01220-05	Knob	1	LM-01612-04	Studs	2
LM-01520-50	Guide-rod	1	LM-01612-06	Axle Assembly	1
LM-01542-62	Ball-shift lock	2	LM-01612-07	Ring-retaining	2
LM-01545-34	Pulley-idler	1	LM-01612-12	Seal-oil	1
LM-01560-31	Shift Rod Assembly	1	LM-01612-17	Axle Tube & Bushing	1
LM-01560-82	Bearing-roller	1	LM-01612-25	Wheel- L. H.	1
LM-01560-83	Shaft-pulley	1	LM-01612-26	Wheel & Tire (L. H.)	1
LM-01560-84	Seal-oil	1	LM-01612-34	Wheel-right hand	1
LM-01560-86	Key	1	LM-01612-35	Wheel & Tire (R. H.)	1
LM-01560-87	Pinion Assembly	1	LM-01612-38	Bearing-ball	1
LM-01561-03	Gasket-case	1	LM-01612-59	Plate	1
LM-01562-13	Tire	2	LM-01612-81	Liner	1
LM-01563-05	Stem & Cap-valve	2	LM-01620-85	Spring-thrust	2
LM-01570-81	Spacer	1	LM-01630-09	Gasket	1
LM-01583-37	Bushing	1	LM-01630-12	Seal-oil	1
LM-01583-58	Cup-thrust	1	LM-01630-13	Gear-drive	1
LM-01583-65	Bushing	1	LM-01630-17	Ring-snap	1
LM-01583-99	Ring-retaining	1	LM-01630-19	Seal-oil	1
LM-01585-79	Pinion	4	LM-01630-20	Bushing	1
LM-01590-29	Spacer	1	LM-01630-21	Bushing	1
LM-01591-06	Spring-tension	1	LM-01630-54	Plate Assembly	1
LM-01591-29	Key	1	LM-01630-56	Plate Support Assembly	1
LM-01610-06	Skid	2	LM-01630-65	Stop-belt	2
LM-01610-11	Impeller Assembly	1	LM-01630-94	Case-gear	1
LM-01610-17	Cover	1	LM-01650-05	Shaft-reverse pinion	1
LM-01610-18	Housing-worm drive	1	LM-01650-06	"O" Ring	1
LM-01610-26	Sleeve-sub assembly	1	LM-01650-07	Pinion-reverse	1
LM-01610-34	Rod Assembly	1	LM-01650-11	Cluster Gear	1
LM-01610-35	Shift Rod Assembly	1	LM-01650-13	Gear & Shaft Assembly	1
LM-01610-41	Guide Assembly	1	LM-01713-42	Spring	2
LM-01610-42	Cutter-drift	2	LM-01713-62	Cable Assembly	1
LM-01610-52	Rod-clutch	1	LM-01713-63	Fork-shift reverse	1
LM-01610-56	Bracket-idler	1	LM-01713-64	Fork-shift	1
LM-01610-58	Spring-torsion	1			

Part No.	Description	Qty.	Part No.	Description	Qty.
LM-01713-65	Shaft-shift	1	LM-09077-29	5/16-18 x 1-1/4	10
LM-01713-72	Shaft-shift (hi-lo)	1	LM-09077-31	3/8-16 x 1	2
LM-01713-82	Clamp	1	LM-09081-27	3/8-16 x 3/4	4
LM-01714-56	Spring	2	LM-09082-95	1/4-20 x 1/2	2
*LM-01733-75	Body Assembly	1	LM-09160-79	10-24 x 3/8	1
*LM-01733-80	Blade	1	LM-09166-22	Nut-1/4-20	16
*LM-01733-83	Blade-rotor, L. H.	1	LM-09169-50	Nut-3/8-16	14
*LM-01733-84	Blade-rotor, R. H.	1	LM-09169-64	Washer-1/4	20
LM-01735-66	Cover-gear case	1	LM-09169-65	Washer-3/8	22
LM-01740-91	Bracket-idler	1	LM-09173-56	Washer-5/16	41
LM-01742-39	Pulley Engine	1	LM-09173-72	Nut-5/16-18	15
LM-01742-40	Pulley	1	LM-09173-77	Washer-1/4	4
LM-01743-23	Belt-V	1	LM-09173-78	Washer-3/8	10
LM-01743-24	Clutch Pulley Pivot	1	LM-09173-97	5/16-18 x 3/4	9
LM-01743-26	Stop-belt	1	LM-09173-98	5/16-18 x 1-3/4	4
LM-01743-27	Stop-belt	1	LM-09174-00	3/8-16 x 1-1/4	1
LM-01743-39	Engine Base & Frame	1	LM-09174-02	3/8-16 x 2-1/4	1
LM-01744-97	Pulley	1	LM-09176-42	Washer-5/16	19
*LM-01760-25	Shaft-rod	1	LM-09177-55	Key-woodruff	1
*LM-01760-26	Support-bracket	1	LM-09182-13	Nut-hex	3
*LM-01760-73	Rod-spout control	1	LM-09182-28	Nut-3/8-16	12
*LM-01761-00	Bearing Assembly	2	LM-09182-40	1/4-20 x 1-1/2	3
LM-01761-01	Flange-bearing	4	LM-09184-47	Pin-cotter	1
LM-01761-05	Cover-handle	1	LM-09184-51	Pin-cotter	3
*LM-01765-68	Handle-rear, (R. H.)	1	LM-09184-52	Pin-cotter	4
*LM-01765-69	Handle-rear, (L. H.)	1	LM-09184-55	Pin-cotter	2
*LM-01769-34	Handle-grip	1	LM-09193-16	1/4-20 x 1-3/4	2
LM-16060-14	Stop-belt	1	LM-09193-18	5/16-18 x 5/8	2
LM-09016-53	Plug-pipe (3/8")	2	LM-09193-19	5/16-18 x 7/8	1
LM-09111-71	Key (3/16 x 7/8)	1	LM-09193-21	7/16-14 x 3/4	2
LM-09270-00	Plug-pipe	2	LM-09193-57	3/8-16 x 7/8	3
LM-10590-29	Spacer	1	LM-09193-60	3/8-16 x 1-1/2	1
LM-80610-48	Ring-retaining	4	LM-09193-61	3/8-16 x 1-3/4	1
LM-80610-81	Key	2	LM-09204-70	Nut	3
LM-80611-08	Cable Clip	1	LM-09205-62	Bolt-carriage	2
LM-81910-22	Collar-set	1	LM-09212-21	5/16-18 x 1-1/2	1
LM-81910-45	Spring	1	LM-09219-44	5/16-24 x 1	2
FASTENING PARTS			LM-09219-59	1/4-20 x 5/8	11
LM-01062-29	Nut-wing	2	LM-09219-60	1/4-20 x 1	2
LM-01180-82	Washer	2	LM-09219-72	3/8-16 x 2-1/2	4
LM-01181-78	Washer	1	LM-09221-10	Bolt-carriage	4
LM-01183-15	Washer-thrust	2	LM-09231-88	1/4-20 x 1/2	2
LM-01560-85	Washer	4	LM-09233-25	5/16-18 x 7/8	3
LM-01560-89	Washer	2	LM-09233-58	Nut-1/4-20	3
LM-01591-34	Washer-special	1	LM-09233-62	Nut-5/16-18	1
LM-01611-66	Bolt-shoulder	1	LM-09244-33	Nut-5/16-18	1
LM-01630-14	Washer	as req'd	LM-09270-08	3/8-24 x 1	1
LM-01630-15	Washer	1	LM-09274-28	1/4-20 x 3/8	1
LM-01630-16	Washer	1	LM-09286-89	#14 x 5/8	3
LM-01630-88	Washer	as req'd	LM-09286-93	5/16-18 x 3/4	2
LM-01713-79	Washer-cup	1	LM-09287-01	Nut	5
LM-07151-33	5/16-18 x 5/16	2	LM-09287-03	Nut	3
LM-09028-70	3/8-16 x 3/8	3	LM-09287-09	5/16-18 x 3/8	1
LM-09038-07	1/4-20 x 3/8	1	LM-09287-10	Washer-3/8	2
LM-09055-64	5/16-18 x 3/8	1	LM-09287-30	3/8-16 x 1/2	2
LM-09077-27	1/4-20 x 5/8	2			

ALWAYS FURNISH MODEL AND SERIAL NUMBER WHEN ORDERING PARTS.

* Denotes new parts



PRINTED IN U.S.A.

E2279EZ