

# PHILIPS



AJ 3710

AJ 3712

- |   |                 |      |
|---|-----------------|------|
| Ⓒ | Clock radio     | 4 ▶  |
| Ⓕ | Radio réveil    | 7 ▶  |
| Ⓓ | Radio-Wecker    | 10 ▶ |
| Ⓖ | Klokradio       | 13 ▶ |
| Ⓔ | Radio reloj     | 16 ▶ |
| Ⓘ | Radio a sveglia | 19 ▶ |
| Ⓒ | Klockradio      | 22 ▶ |
| Ⓕ | Kelloradio      | 25 ▶ |



**PHILIPS**

**English.....page 4**

Illustrations .....page 3

**Français .....page 7**

Illustrations .....page 3

**Deutsch.....Seite 10**

Abbildungen .....Seite 3

**Nederlands .....pagina 13**

Afbeeldingen.....pagina 3

**Español .....página 16**

Ilustraciones.....página 3

**Italiano .....pagina 19**

Illustrazioni .....pagina 3

**Svenska .....sida 22**

Figurer .....sida 3

**Suomi .....sivu 25**

Kuvat.....sivu 3

- 1 FM PRESET
- 2 RADIO OFF
- 3 DISPLAY
- 4 SLUMBER

- 5 MANUAL/RADIO ON
- 6 AL. RESET
- 7 FM PRESET TUNING
- 8 BAND

9 TUNING



 
 
- 15 LINE IN
- 16 PHONES
- 17 ALARM SET
- 18 TIME SET
- 19 HOURS
- 20 MINUTES

- 10 VOLUME
- 11 TONE

- 12 BRIGHTNESS
- 14 REPEAT AL./SLUMBER OFF
- 13 RAD/OFF/BUZ.

18 BAND

7 FM PRESET TUNING

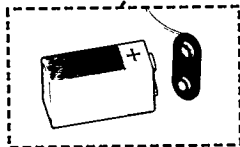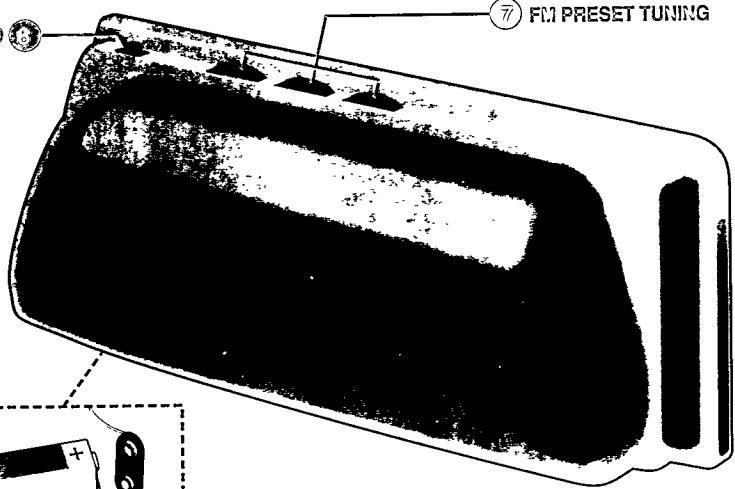

9V BATTERY  
TYPE 6F22

# ENGLISH

## WHICH BUTTONS ARE WHERE?

- ① FM 1, FM 2 and FM 3 preset buttons
- ② RADIO OFF button - to switch off the radio
- ③ Clock DISPLAY with ALARM indicator
- ④ SLUMBER button - to switch on slumber function / to adjust the slumber time
- ⑤ MANUAL button - to switch on radio function
- ⑥ ALARM RESET button - to switch off the alarm for 24 hours
- ⑦ FM PRESET TUNING controls
- ⑧ BAND switch - for selecting wavebands
- ⑨ TUNING dial - for locating the required station
- ⑩ VOLUME control - for adjusting the volume
- ⑪ TONE control - for adjusting the tone
- ⑫ Display BRIGHTNESS switch - high / low
- ⑬ RAD/OFF/BUZ switch:
  - RADIO - for waking up by radio
  - OFF - alarm off
  - BUZZER - for waking up by buzzer and radio
- ⑭ REPEAT ALARM / SLUMBER OFF button:
  - To switch off alarm temporarily
  - To switch off the slumber
- ⑮ LINE IN socket
- ⑯ PHONES ⚡ socket
- ⑰ ALARM SET button - for setting the alarm time
- ⑱ TIME SET button - for setting the time
- ⑲ HOURS button - for setting the hours
- ⑳ MINUTES button - for setting the minutes

## MAINS CONNECTION

The clock radio is suitable for connection to a 220 V / 50 Hz power supply (for Great Britain 240 V / 50 Hz). As soon as the power plug is put into the wall outlet, the numbers on the display will start to flash. This means that you must set the correct time. To disconnect the set from the mains completely, withdraw the mains plug from the wall socket.

### Important note for users in U.K.:

This apparatus is fitted with an approved moulded 13 Amp plug.

To change a fuse in this type of plug proceed as follows:

1. Remove fuse cover and fuse.
2. Fix new fuse which should be a BS1362 5A, A.S.T.A. or BSI approved type.
3. Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place.

If the mains plug contains a fuse, this should have a value of 5A. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5A.

### How to connect a plug

The wires in the mains lead are coloured in accordance with the following code:

BLUE — "NEUTRAL" ("N")

BROWN — "LIVE" ("L")

1. The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
2. The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.
3. Do not connect either wires to the earth terminal in the plug which is marked by the letter "E" or by the safety earth symbol or coloured green or green-and-yellow.

Note: The severed plug must be destroyed to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere. Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead — not simply over the two wires.

## RADIO

### Aerials

Due to the directional effect of the built-in AM-aerial it may be necessary to rotate the set for optimum reception. The appliance is also provided with an FM-aerial at the back. In some cases it may be necessary to reposition the aerial, in order to obtain optimum reception.

### Radio on

You can use this clock radio solely as a radio.

- Press MANUAL button ⑤ to switch the radio on
- Adjust the sound using VOLUME ⑩ and TONE ⑪
- You may connect stereo headphones with 3.5 mm plug to socket PHONES ⚡ ⑯
- Select the waveband using BAND switch ⑧
- Locate the required transmitter using TUNING dial ⑨.

### Radio off

- To switch off the radio, press RADIO OFF button ②.

### Storing FM PRESET stations

This can store 3 preferred FM-transmitters in the memory:

- Press FM 1 button ① to switch the radio on
- Locate the required FM-transmitter using the FM 1 PRESET TUNING controls ⑦
- Do the same for FM 2 and FM 3.

### FM PRESET tuning

- Press the desired FM PRESET button ①

## CLOCK

### Clock display

The clock indicates the time on the display. In case of 12-hour clock system, the PM-indicator will light up (on=PM, off=AM). The ALARM indicator comes on when you switch on the alarm. You can adjust the luminous intensity of the display figures with BRIGHTNESS switch ⑫.

### Setting the time

- Keep the TIME SET button ⑱ pressed.
- Set the correct time using the MINUTES ⑳ and HOURS ⑲ buttons.
- Release the TIME SET button ⑱.

## ALARM

### Alarmtime

If you wish to use the alarm, then you should first of all set the alarmtime. The alarmtime is the time when you wish to be woken up.

### Setting the alarmtime

- Keep the ALARM SET button (17) pressed.
- Set the correct alarmtime using the MINUTES (20) and HOURS (19) buttons.
- Release the ALARM SET button (17).

You can check the alarmtime by simply pressing ALARM SET button.

## ALARM ON

The clock radio can awaken you in 2 ways:

### Wake by radio

- Make sure the volume of the radio is loud enough to wake you.
- Set RAD/OFF/BUZ switch (13) to RADIO. The alarm indicator appears in the display.
- You will be awakened at the set alarm time by the radio.

### Wake by buzzer

- Set RAD/OFF/BUZZ switch (13) to BUZZER. The alarm indicator appears in the display.
- At the set alarm time you will be awakened by the buzzer.

## ALARM OFF

You can switch off the alarm in 3 ways:

### Switching off the alarm for 9 minutes

- Press the REPEAT ALARM button (14). With this switch you temporarily switch off the alarm. After nine minutes the alarm (radio or buzzer) will sound again. If you again press the REPEAT ALARM button (14), the same will happen again. If the REPEAT ALARM button (14) is not pressed again, the alarm will switch itself off after 1 hour and 59 minutes. The following day the alarm signal will sound again at the set alarm time.

### Switching off the alarm for 24 hours

- Press the ALARM RESET button (6). The alarm is now switched off for 24 hours and will sound again the next day at the same time.

### Switching off the alarm completely

- Set the RAD/OFF BUZ switch (13) to OFF. On the display the ALARM indicator will disappear and the alarm is now switched off. If you wish to be awakened the following day again, you must reset the RAD/OFF/BUZ switch (13) to RADIO or BUZZER before going asleep.

## SLUMBER

The clock radio has a built-in slumber function.

This function enables you to listen to the radio before you fall asleep. You will not have to switch off the clock radio yourself. This will take place automatically.

### Slumbertime

The time you listen to the radio before you fall asleep is called the slumbertime.

### *If you wish to slumber for 59 minutes, proceed as follows:*

- Press the SLUMBER button (4) only. The display will show that you have a slumber time of 59 minutes.

### *If you wish to slumber for less than 59 minutes, proceed as follows:*

- Hold down the SLUMBER (4) The display now starts to count down from 59 to 00 minutes.

### *If you wish to slumber for more than 59 minutes, proceed as follows:*

- Keep the SLUMBER button (4) pressed.
- Press the HOURS button (19). The display now starts to count down from 1.59 to 00 minutes.

### Slumber off

You can switch off the radio before the slumber time has elapsed:

- Press the SLUMBER OFF button (14) and the clock radio is switched off.
- The slumber function does not affect the alarm.

## CD/LINE IN

Socket for amplifying the signal from an external sound source.

- Set the radio on.
- Connect the CD/LINE IN socket (15) to the output sockets of the external sound source. You can use Philips connector SBC 1085. The radio will automatically be muted.

**Note:** Only use BUZZER ALARM when CD/LINE IN is used.

## **POWER FAILURE**

- As soon as a power failure occurs, the complete clock radio will be switched off.
- As soon as the power supply returns, the numbers on the display start to flash. This indicates that you must set the correct time on the clock.
- You can insert a 9 Volts pack battery (type 6F22) in the clock radio. Should there be a power failure, the clock will continue to function. You will not see this, however, because the battery does not illuminate the clock display. As soon as the power is switched on again, the display will indicate the correct time. For clarity: Alarm, radio and display do not work on battery.
- Before inserting the battery, connect the power plug to the wall outlet.
- Place the battery in the compartment on the underside of the clock radio (see diagram).
- Replace the battery once a year. It is not possible to say precisely how long the battery will last. The service life depends on how often and for how long the power supply fails. This varies according to country and region.

## **MAINTENANCE**

- If you do not intend to use the clock radio for a long time, it is better to remove the plug from the wall socket. In addition to this, it is advisable to remove the battery from the clock radio. This will prevent any danger of leakage and the clock radio will not be damaged.
- Fingerprints, dust and dirt on the clock radio should be removed using a clean and damp soft cloth or charmois leather. When cleaning do not use any products which contain abrasive agents or solvents (benzine, thinner, alcohol etc.). These might affect the housing.
- Rain, dampness and extreme heat may damage the clock radio. For this reason it should not be placed in full sun or close to heating elements for any period of time.

*The type-plate is located on the underside of the clock radio.*



#### **GUARANTEE AND SERVICE VALID FOR AUSTRALIA**

The benefits given to the purchaser by this warranty are in addition to all other rights and remedies, which, under the Trade Practices Act or other Commonwealth or State law, the purchaser or owner has in respect of the product.

The Philips product carries the following warranties:

C-Series Hi-Fi-systems 12 months Compact Disc Players 12 months Home Audio Systems 6 months Clock radios, portable radios, cassette recorders, cassette players and radio recorders 90 days

Any defect in materials or workmanship occurring within the specified period from the date of delivery, will be rectified free of charge by the retailer from whom this product was purchased.

*Note:* Please retain your purchase docket to assist prompt service.

#### **Conditions of this warranty**

1. All claims for warranty service must be made to the retailer from whom this product was purchased. All transport charges incurred in connection with warranty service or replacement will be paid by the purchaser.

2. These warranties do not cover batteries and extend only to defects in materials or workmanship occurring under normal use of the product where operated in accordance with our instructions.

**Philips Consumer Products Division, Technology Park, Figtree Drive,  
Australia Centre, HOMEBUSH 2140, New South Wales**

#### **GUARANTEE AND SERVICE FOR NEW ZEALAND**

Thank you for purchasing this quality Philips product. The document you are now reading is your guarantee card.

#### **Guarantee.**

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

#### **Conditions.**

1. The product must have been purchased in New Zealand, and this guarantee card completed at time of purchase (this is your proof of the date of purchase).

2. The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.

3. The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.

4. Reasonable evidence (in the form of a sales docket or completed guarantee card) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.

5. In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee.

*This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.*

#### **How to claim.**

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product.

However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact

**the Guarantee Controller, Philips New Zealand Ltd,**

**P.O. Box 1041, AUCKLAND - ☎ (09) 605-914**

#### **GARANTÍA PARA MÉXICO**

Este aparato está fabricado con materiales de alta calidad y ha sido cuidadosamente verificado. Philips, por lo tanto, da a usted una garantía de 12 meses a partir de su fecha de compra.

La garantía ampara la reposición de las piezas defectuosas debidas a fallas en su montaje o en los materiales, incluyendo la mano de obra necesaria para su reemplazo en nuestros Sucursales o talleres autorizados.

En caso de fallas en su aparato le rogamos se sirva poner en contacto con su distribuidor.

Esta garantía no cubre las averías que resulten como consecuencia de una instalación incorrecta del aparato, manifiesto maltrato o uso inadecuado del mismo.

Philips se obliga a reparar y devolver a usted su aparato en un plazo no mayor de 30 días hábiles contados a partir de la fecha de haber ingresado su aparato a uno de nuestros talleres.

Para que esta garantía sea válida, es necesario que el certificado que figura en la parte posterior de este instructivo haya sido debidamente llenado en el momento de la compra del aparato.

En caso de extravío del certificado con la presentación de la factura o remisión de su aparato podrá hacer efectiva la garantía correspondiente.

 
Si usted tiene alguna duda o pregunta que no le pueda solucionar su distribuidor, por favor consérvese en contacto con **Oficinas Centrales de Servicio,  
Av. Coyoacán No. 1051, Col. del Valle, 03100 MEXICO, D.F.**

**☎ 5-75-20-22 o 5-75-01-00**





- Ⓒ This sign on the packaging is only meant for Germany.
- Ⓕ Ce signal sur l'emballage concerne uniquement l'Allemagne.
- Ⓓ Dieses Zeichen auf der Verpackung gilt nur für Deutschland.
- Ⓖ Dit teken op de verpakking geldt alleen voor Duitsland.
- Ⓔ Este símbolo en el embalaje es únicamente para Alemania.
- Ⓘ Questo contrassegno sull'imballaggio interessa solo la Germania.
- Ⓗ Este símbolo na embalagem é só para a Alemanha.
- Ⓚ Dette mærke har kun betydning i Tyskland.
- Ⓢ Recirkulationsmärket på förpackningen avsedd endast för Tyskland
- Ⓜ Tämä merkki pakkauksessa koskee vain Saksaa.



Printed in Hong Kong