 


PHILIPS **MAGNAVOX**

AJ 3925 CD Clock Radio

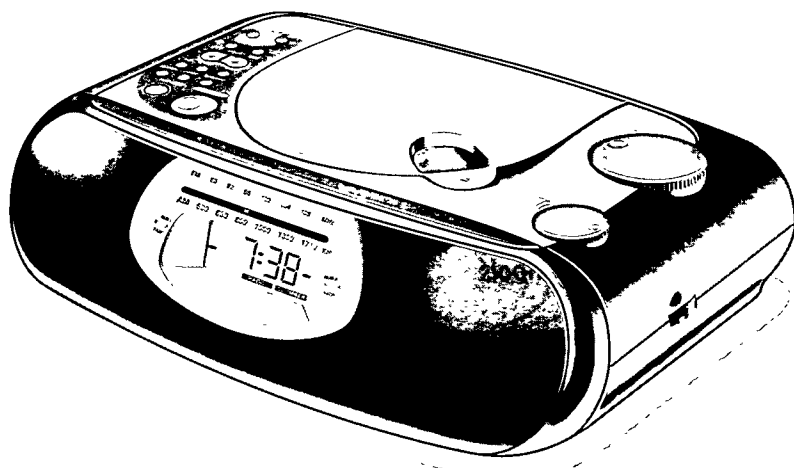

Owner's Manual
Mode d'emploi
Instructivo de manejo

Toll Free Help Line
Ligne d'assistance en service libre
Línea de ayuda telefónica sin cargo

800-531-0039



English 4

English

Français 15

Français

Español 26

Español



Know these
safety symbols


Connaissez ces
symboles de *sécurité*


Conozca estos
símbolos de *seguridad*


	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		


	ATTENTION RISQUE DE CHOC ELECTRIQUE NE PAS OUVRI	
ATTENTION: POUR REDUIRE LE RISQUE DE CHOC ELECTRIQUE, NE PAS ENLEVER LE COUVERCLE (OU LE PANNEAU ARRIERE). CET APPAREIL NE COMPORTE AUCUNE PARTIE QUI PEUT ETRE REPARABLE PAR L'UTILISATEUR. CONSULTEZ UN ENTRETIEN A UN TECHNICIEN QUALIFIE.		


	PRECAUCION RIESGO DE SACUDIDA ELECTRICA NO ABRIR	
PRECAUCION: PARA REDUCIR EL RIESGO DE SACUDIDA ELECTRICA NO REMOVER LA CUBIERTA (O EL PANEL POSTERIOR). ESTE APARATO NO CONTIENE NINGUNA PARTE QUE PUEDE SER REPARADA POR EL USUARIO. DEBE SER REPARADO POR SERVICIO O REPARACIONES ASESORADO, LLAMADO UN TECNICO CALIFICADO.		


 This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

 
 Cet "éclair à pointe de flèche" indique qu'un matériau non isolé, situé à l'intérieur de l'unité, risque de provoquer un choc électrique. Pour la sécurité de chacun, nous vous prions de ne pas retirer le boîtier de ce produit.

 El símbolo del "rayo" indica que algún material no aislado dentro de su unidad podrá resultar en una sacudida eléctrica. Para la seguridad de todos, favor de no remover la cubierta del producto.

 The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

 Le "point d'exclamation" attire votre attention sur des sujets risquant de provoquer des problèmes de fonctionnement et d'entretien si vous ne lisez pas les informations s'y reportant.

 El signo de "exclamación" le llama la atención a características sobre las que Ud debe leer la información adjunta detenidamente para evitar problemas de funcionamiento y mantenimiento.

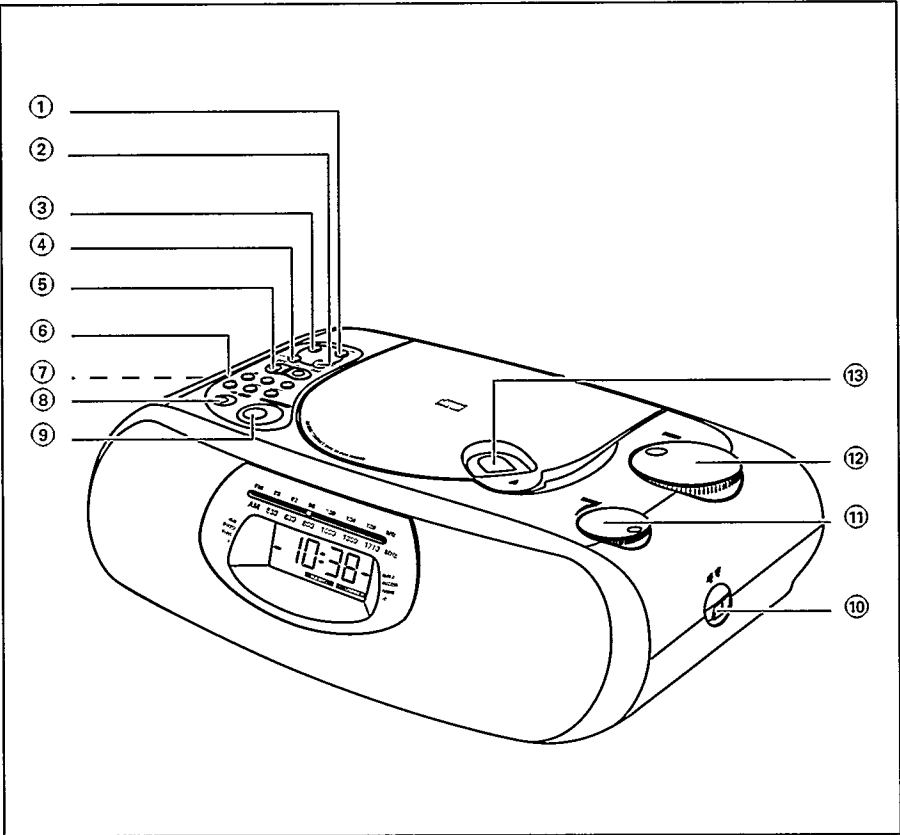

**CLASS 1
LASER PRODUCT**

Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

- Once your Philips Magnavox purchase is registered, you're eligible to receive all the privileges of owning a Philips Magnavox product.
- So complete and return the Warranty Registration Card enclosed with your purchase at once. And take advantage of these important benefits.

Warranty Verification

Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your Philips Magnavox warranty.

Owner Confirmation


Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.


Model Registration

Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

Know these
safety symbols



 This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

 The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

For Customer Use

Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No. _____

Serial No. _____

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

PHILIPS MAGNAVOX Visit our World Wide Web Site at <http://www.magnavox.com>

Safety

WARNING

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure.

The set complies with the FCC-Rules, Part 15 and with 21 CFR 1040.10


CDN Canada

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

 
English

SAFETY INSTRUCTIONS – Read before operating equipment

This product was designed and manufactured to meet strict quality and safety standards. There are, however, some installation and operation precautions which you should be particularly aware of

- 1. Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
- 2. Retain Instructions** - The safety and operating instructions should be retained for future reference.
- 3. Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
- 4. Follow Instructions** - All operating and use instructions should be followed
- 5. Water and Moisture** - The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement or near a swimming pool, etc
- 6. Carts and Stands** - The appliance should be used only with a cart or stand that is recommended by the manufacturer.
- 6A.**  An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
- 7. Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
- 8. Ventilation** - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
- 9. Heat** - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- 10. Power Sources** - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.

- 11. Grounding or Polarization** - The precautions that should be taken so that the grounding or polarization means of an appliance is not defeated.



AC
Polarized Plug

- CAUTION:** To prevent electric shock, match the wide blade of this plug to the wide slot, fully insert. Do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.
- 12. Power-Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords and plugs, convenience receptacles, and the point where they exit from the appliance.
 - 13. Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
 - 14. Power Lines** - An outdoor antenna should be located away from power lines.
 - 15. Nonuse Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
 - 16. Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
 - 17. Damage Requiring Service** - The appliance should be serviced by qualified service personnel when:
 - A.** The power-supply cord or the plug has been damaged; or
 - B.** Objects have fallen, or liquid has spilled into the appliance; or
 - C.** The appliance has been exposed to rain; or
 - D.** The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E.** The appliance has been dropped, or the enclosure damaged.
 - 18. Servicing** - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

91/8

EL 4562-1

Warranty

English

PHILIPS MAGNAVOX PORTABLE COMPACT DISC

One Year Free Exchange

This product must be carried in for an exchange.

WHO IS COVERED?

You must have proof of purchase to exchange the product. A sales receipt or other document showing that you purchased the product is considered proof of purchase. Attach it to this owner's manual and keep both nearby.

WHAT IS COVERED?

Warranty coverage begins the day you buy your product. For one year thereafter, a defective or inoperative product will be replaced with a new, renewed or comparable product at no charge to you. A replacement product is covered only for the original warranty period. When the warranty on the original product expires, the warranty on the replacement product also expires.

WHAT IS EXCLUDED?

Your warranty does not cover:

- labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Philips Consumer Electronics Company.
- reception problems caused by signal conditions or cable or antenna systems outside the unit.
- a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, prerecorded material, whether copyrighted or not copyrighted.)
- a product that is used for commercial or institutional purposes.

WHERE IS EXCHANGE AVAILABLE?

You may exchange the product in all countries where the product is officially distributed by Philips Consumer Electronics Company. In countries where Philips Consumer Electronics Company does not distribute the product, the local Philips service organization will attempt to provide a replacement product (although there may be a delay if the appropriate product is not readily available).

BEFORE REQUESTING EXCHANGE...

Please check your owner's manual before requesting an exchange. Adjustments of the controls discussed there may save you a trip.

EXCHANGING A PRODUCT IN U.S.A., PUERTO RICO OR U.S. VIRGIN ISLANDS...

Contact your dealer to arrange an exchange. Or, ship the product, insured and freight prepaid, and with proof of purchase enclosed, to the address listed below.

Small Product Service Center
Philips Service Company
907 Snapps Ferry Road, Plant 2, Building 6
Greeneville, TN 37743

(In U.S.A., Puerto Rico and U.S. Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. But, because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.)

EXCHANGING A PRODUCT IN CANADA...

Contact your dealer to arrange an exchange. Or, ship the product, insured and freight prepaid, and with proof of purchase enclosed, to one of the Philips consumer service centers listed below.

Philips Electronics Ltd.
601 Milner Avenue, Scarborough, Ontario, M1B 1M8
(416) 292-5161
4977 Levy Street, St. Laurent, Québec, H4R 2N9
(514) 956-0120
1741 Boundary Road, Vancouver, B.C., V5M 3Y7
(604) 294-3441

(In Canada, this warranty is given in lieu of all other warranties. No other warranties are expressed or implied, including any implied warranties of merchantability or fitness for a particular purpose. Philips is not liable under any circumstances for any direct, indirect, special, incidental or consequential damages, howsoever incurred, even if notified of the possibility of such damages.)

TO GET OUT-OF-WARRANTY EXCHANGE...

In U.S.A., Puerto Rico or U.S. Virgin Islands, contact Philips Service Company at (800) 851-8885 to obtain the cost of out-of-warranty exchange. Then carefully pack the product and ship it to the Small Product Service Center (address listed above). In Canada, contact the nearest Philips consumer service center (phone number and address listed above) to obtain the cost of out-of-warranty exchange. Then carefully pack the product and ship it to that service center.

REMEMBER...

Please record the model and serial numbers found on the product below. Also, please fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary.

MODEL # _____

SERIAL # _____

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province

Philips Service Company, P.O. Box 555, Jefferson City, Tennessee 37760, (423) 475-8869

EL4967E003 / MAC 4108 / 12-95

 
TOP, FRONT and SIDE PANEL

- ① **TIME** - To adjust clock time.
- ② **WAKE UP TRACK** - To set / select / review CD wake up track number for ALM 1 or 2.
- ③ **ALM 1** - To set / review / switch off ALM 1.
- ④ **ALM 2** - To set / review / switch off ALM 2.
- ⑤ **SEARCH** ◀◀ ▶▶ - To adjust clock time / alarm time; to skip CD tracks / search for a particular passage; to select a different buzzer melody.
- ⑥ **Function buttons**
CD ▶ - To start CD playback; to select CD mode for ALM 1 or 2.
RADIO - To go to radio mode; to select radio mode for ALM 1 or 2
BUZZER - To select buzzer mode / melody for ALM 1 or 2.

BRIGHTNESS - To change the brightness of the display illumination.


SLUMBER - To switch slumber time on / off; to display remaining slumber time.

ALARM RESET - To stop the active alarm for 24 hours

- ⑦  - 3.5 mm socket for plugging in headphones / speakers.
- ⑧ **CD** ■ **OFF** - To switch off CD / RADIO / ALM 1 or 2.
- ⑨ **REPEAT ALARM** - To switch off the alarm for a 10 minute period.
- ⑩ **FM AM** - To select the waveband.
- ⑪ **VOLUME** - To adjust the sound level.
- ⑫ **TUNING** - To tune to radio stations.
- ⑬ ▲ - To open the CD door.

MAINS CONNECTION

 
1. Check if the mains voltage as shown on the type plate (on the bottom of the set) corresponds to your local mains voltage. If it does not, consult your dealer or service organisation.
2. Connect the mains plug to the wall socket.
 - The mains supply is now switched on and the numbers on the display will start to flash. You will need to set the correct time.
3. To switch off the mains supply completely, pull the mains plug out of the wall socket.

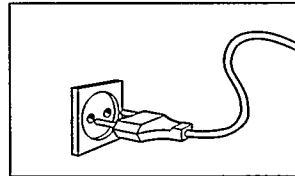

Power breakdown

In the event of a power failure the set will be completely switched off. All settings will remain in the memory for three minutes.

Connecting headphones / loudspeakers

Connect headphones / loudspeakers with a 3.5 mm plug in to the  socket.

→ The built-in loudspeakers of the set will now be muted.

Illumination brightness

Press the **BRIGHTNESS** button once or more.

 
→ The brightness of the display will change in this sequence:
 LOW → MEDIUM → BRIGHT → LOW

SETTING THE CLOCK

The time is displayed using the 24-hour clock.

For some versions, the clock display may use a 12 hour display with AM/PM indicators.




1. Press and hold down the **TIME** button.
2. Use **SEARCH** ◀◀ or ▶▶ to set and adjust both the hours and minutes:
 - Keep the **SEARCH** ◀◀ or ▶▶ button pressed to increase or decrease rapidly and continuously from minutes to hours.
 - Press **SEARCH** ◀◀ or ▶▶ briefly and repeatedly to adjust the alarm time minute by minute.
3. Release the **TIME** button when you have reached the correct setting.

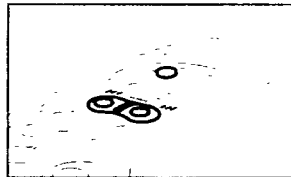

CD PLAYER

CD playback

   1. Press ▲ to open the CD door.
2. Insert a CD with the printed side facing up, and press the door down to close.
3. Press CD ▶ to start playback.
 - The CD mode indicator, 'cd' and the total number of tracks flashes briefly on the display followed by the current track number.
 - The display reverts back to showing the clock time. The CD mode indicator will remain throughout CD playback.
4. Adjust the sound by using the **VOLUME** control.
5. To check the current track number during playback, press **CD** ▶.
6. Press **CD** ■ **OFF** to stop playback.
 - **OFF** appears briefly in the display before the set is switched off.
 - Playback also stops after the last track and the set will be switched off.

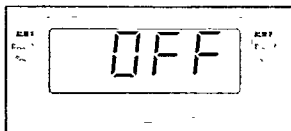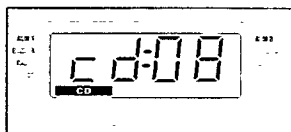

Selecting a different track

During playback, to jump to the next or a previous track, press **SEARCH** ◀◀ or ▶▶ once more until the desired track number appears in the display.

Finding a passage within a track

 
 
1. During playback, press and hold down the **SEARCH** ◀◀ or ▶▶ button.
 - The CD is played at an increasingly high speed and low volume.
2. Release the **SEARCH** ◀◀ or ▶▶ button when you recognize the passage you want. Normal CD playback will resume.

RADIO

1. Press **RADIO** to switch on the radio mode.
→ The RADIO mode indicator appears in the display.
2. Adjust the **FM AM** band switch to select your waveband.
3. Use the **TUNING** control to find your station.

To improve radio reception:

- For **FM**, extend the wire aerial at the back of the set fully for optimum reception.
 - For **AM**, the set is provided with a built-in aerial. Direct the aerial by turning the whole set.
4. Adjust the sound using the **VOLUME** control.
 5. Press **CD ■ OFF** to switch off the radio.
→ **OFF** appears briefly in the display before the set is switched off.

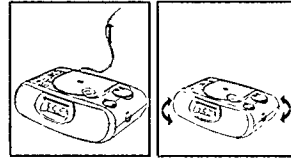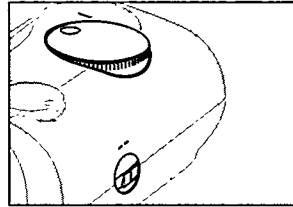



SETTING THE ALARM TIME

General

Two different alarm times can be set in a variety of modes. This can be useful when for example you need to be woken up at a different time during the week and at the weekend.

Setting alarm 1 and 2

  1. Press and hold down the **ALM 1** or **2** button.
2. Use **SEARCH** ◀◀ or ▶▶ to set and adjust both the hours and minutes.
 - Keep the **SEARCH** ◀◀ or ▶▶ button pressed to increase or decrease rapidly and continuously from minutes to hours.
 - Press **SEARCH** ◀◀ or ▶▶ briefly and repeatedly to adjust the alarm time minute by minute.
3. Select your choice of alarm mode by pressing **CD ▶**, **BUZZER** or **RADIO**.
4. Release the **ALM 1** or **2** button.
→ An indicator will appear next to your selected alarm mode.
5. To review the alarm time, press your selected **ALM 1** or **2** button.

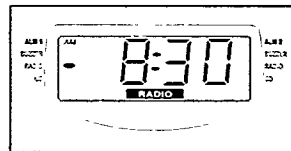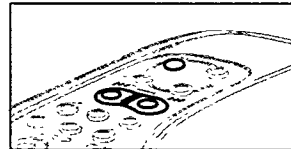

IMPORTANT !

- If you want the alarm to wake you up, **FIRST CHECK** if:
- you have adjusted the volume loud enough when using the CD / wake up track / radio alarm modes;
 - you have disconnected the headphones;
 - the loudspeakers are switched on if you are using amplified loudspeakers in the headphone socket.

ALARM on / off

 
 
English

SETTING THE WAKE UP TRACK

You can programme and select a CD WAKE UP TRACK number between 01-99, when the set is in the standby mode or during CD playback.

However, if the track number programmed does not exist on your CD, the first track of the CD will be played during the alarm call.

1. Insert a CD into the CD compartment
2. Press and hold down the selected **ALM 1** or **2** button and set your alarm time using the **SEARCH** ◀◀ or ▶▶ controls.
3. Before releasing **ALARM**, press the **CD** ▶ button.
→ An indicator will appear next to the CD.
4. Hold down the **WAKE UP TRACK** button and select your track number by pressing **SEARCH** ◀◀ or ▶▶.
5. Release the **WAKE UP TRACK** and **SEARCH** ◀◀ or ▶▶ controls when you have found the desired track number.
6. To review your programmed track number, press **WAKE UP TRACK** again.
→ The wake up track and alarm number will be shown.

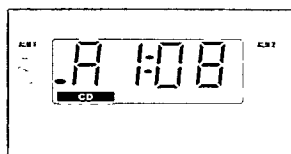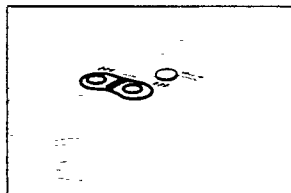


Note:

- The **BUZZER** alarm option will automatically replace the CD / wake up track alarm if you have;
 - inserted a CD incorrectly;
 - inserted a damaged CD;
 - forgotten to insert any CD.
- Reviewing the wake up CD track number is not possible during the **REPEAT ALARM** mode.

SETTING BUZZER MELODIES

You can set 5 different melodies for both alarm 1 or 2. The buzzer melodies are set at a fixed volume and cannot be adjusted.

 1. Set the alarm time as described in steps 1-3 of 'Setting alarm 1 and 2'.
2. To select your buzzer melody, hold down **BUZZER** and press **SEARCH** ◀◀ or ▶▶ repeatedly until you find the desired melody.
 - The buzzer melody and alarm number will be shown.
3. To review your selected buzzer melody over the speakers, press **BUZZER**.

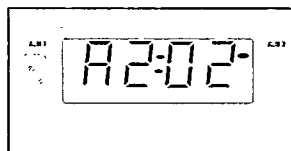

SWITCHING OFF THE ALARM

There are three ways to switch off the alarm. Unless you cancel the alarm completely, the ALARM RESET will be automatically selected after 60 minutes, from the time your alarm goes first off.

Alarm reset

If you want the alarm mode to be stopped immediately but also wish to retain the same alarm setting for the following day:

1. Press ALARM RESET.

- You will hear a long beep tone to confirm that the ALARM RESET has been activated.

Repeat alarm

This will repeat your alarm call at 10 minutes intervals.

1. During the alarm call, press REPEAT ALARM.

- After 10 minutes the alarm will call again.

2. You can press REPEAT ALARM again as often as desired.

- The **ALM 1** or **2** indicator '•' and ':' in the display will flash throughout the time when REPEAT ALARM is active.

NOTES: REPEAT ALARM for WAKE UP / CD TRACK

In standby mode:

 
 
 
 
- At the set alarm time the normal clock display (standby mode) is interrupted.
 - The display flashes and shows in order: CD mode; total number of tracks of the inserted CD; and the WAKE UP TRACK number before playing the WAKE UP / first CD track.
- When **REPEAT ALARM** is pressed, the position of the WAKE UP / CD track is memorized and playback stops. The set goes to standby mode.
 - After 10 minutes, the WAKE UP / CD track will resume playback at the point interrupted by REPEAT ALARM.
- To cancel the REPEAT ALARM and return to normal CD playback, press the **CD ►** button.

During RADIO / CD playback:

Basically the same happens, except that the WAKE UP / first CD track starts from the beginning each time you press **REPEAT ALARM**. If you are playing a CD, the current track will be interrupted at the alarm time and the track position memorized. Playback from this position will resume when **REPEAT ALARM** is pressed.

Cancelling the alarm completely

- To cancel the set alarm time before it goes off, press the activated **ALM 1** or **2** button and **CD ■ OFF** simultaneously.
 - The alarm indicator will disappear from the display.
- To cancel the alarm during a call, first press **ALARM RESET**, and then the activated **ALM 1** or **2** and **CD ■ OFF** button simultaneously.

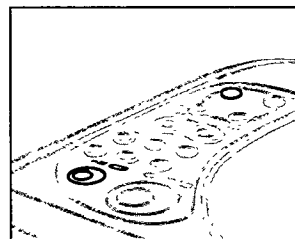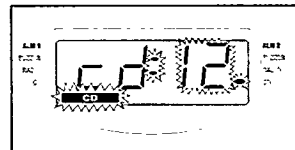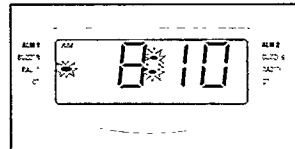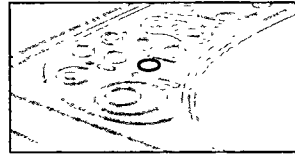


REFLECTION DETECTOR*not all versions*

This detector which can detect objects placed within close range (15 cm maximum distance), is located on the front of the set as an additional device for operating the REPEAT ALARM.

1. During an alarm call, place your hand in front of the set.
 - The alarm will be switched off for 10 minutes, during which the display will flash.

 Note: The display will also flash if an alarm you have set is accidentally deactivated by objects within range of the reflection detector. To prevent this from happening, place a sticker over the reflection detector.

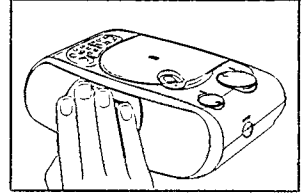**SLUMBER****About slumber time**

The CD clock radio has a built-in device called the slumber, which enables the set to be automatically switched off during the RADIO or CD playback modes after a set period of time. There are three slumber times: 10, 30 and 60 minutes before the set turns itself off.



- During SLUMBER, the radio or CD player is set to a lower volume. If you wish to be woken by the alarm next day, it may be necessary to adjust the volume to a higher volume before setting SLUMBER.

Setting the slumber

1. Press the **CD ►** or **RADIO** button.
 - For the CD mode, make sure you have inserted a disc first.
2. Select your slumber time by pressing the **SLUMBER** once or more:


<i>once:</i>	60 minutes;
<i>twice:</i>	30 minutes;
<i>three times:</i>	10 minutes.

   - The word SLUMBER will appear on the bottom of the display when slumber is active.
3. To review the remaining slumber time, press the **SLUMBER** button.
 - The display will show '51 : ' and the minutes.
4. To cancel the slumber function, you can;
 - press the **SLUMBER** button until the word disappears from the display;
 - press **CD ■ OFF** to cancel immediately and switch off the set.

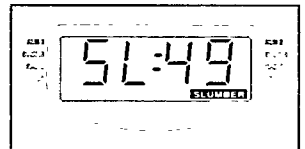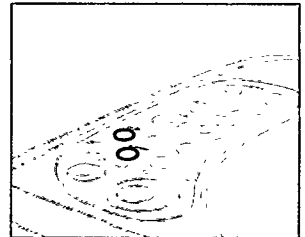


GENERAL

 - If you do not intend to use your CD clock radio for a long time, withdraw the plug from the wall socket.
- Do not expose the set or CDs to humidity, rain, sand, or excessive heat caused by heating equipment or direct sunlight.
- A chamois leather slightly moistened with water is sufficient for cleaning the housing. Do not use cleaning agents containing alcohol, spirits, ammonia or abrasives as these may harm the housing.

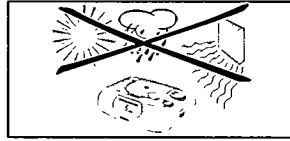

CD PLAYER AND CD HANDLING

 - The lens of the CD player should never be touched.
- The lens may cloud over if the CD player is moved from cold to warm surroundings. The CD player will not start. Give the player some time to acclimatize.
- To take a CD out of its box, press the center spindle while lifting the CD. Always pick up the CD by the edge and replace the CD back in its box after use to avoid scratching and dust.
- To clean the CD, wipe in a straight line from the centre towards the edge using a soft, lint-free cloth. Do not use cleaning agents as they may damage the disc.
- Never write on a CD or attach stickers to it.

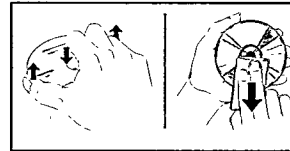

Environmental information

All redundant packaging material has been omitted. We have done our utmost to make the packaging easily separable into three mono materials: cardboard (box), expandable polystyrene (buffer) and polyethylene (bags, protective foam sheet).

Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

TROUBLESHOOTING

English

If a fault occurs, first check the points listed below before taking the set for repair. If you are unable to remedy a problem by following these hints, consult your dealer or service center.

WARNING: Under no circumstances should you try to repair the set yourself, as this would invalidate the warranty.

PROBLEM

– *POSSIBLE CAUSE*

- REMEDY

GENERAL

No sound

- *VOLUME is not adjusted.*
- Adjust the VOLUME.
- *Headphones are connected.*
- Disconnect headphones.

Set does not react to operation of any of the controls

- *Electrostatic discharge.*
- Switch off the set, disconnect the mains plug, reconnect after a few seconds.

CD PLAYER

CD playback does not work

- *CD is badly scratched or dirty.*
- Replace or clean the CD, see Maintenance.
- *Laser lens steamed up.*
- Wait until lens has acclimatized.

RADIO

Crackling sound during FM broadcast

- *Weak signal.*
- Aim and extend wire aerial fully.

Continuous crackling / hiss disturbance during AM broadcast

- *Electrical interference from TVs, computers, fluorescent lamps, etc.*
- Move the set away from other electrical equipment.

ALARM

The alarm does not function

- *Alarm time not set.*
- Set the alarm time.
- *Alarm mode not selected.*
- Hold down your selected alarm and press the CD / RADIO / BUZZER button.
- *Volume too low for radio / CD / wake up track alarm mode.*
- Adjust the volume.
- *Alarm deactivated by object within range of reflection detector.*
- Move object away / place a sticker over reflection detector.

The production plate is located on the bottom of the set.

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100

Philips Magnavox AJ 3925 - CD Clock Radio

English

English 4


Français

Français 15

Español

Español 26

 MAGNAVOX Visit our World Wide Web Site at <http://www.magnavox.com>

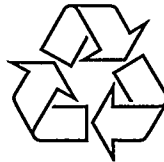

PHILIPS CONSUMER ELECTRONICS COMPANY
A Division of Philips Electronics North America Corporation
Knoxville, Tennessee 37914-1810, U.S.A.