SERVICE LEVEL: 2





PC-075/085/095

REPLACING THE FOOTREST ROD

Tools Required: 4 mm (5/32") Allen Key (provided), 10-mm wrench SAVE ALL REMOVED PARTS FOR USE DURING REASSEMBLY




Footrest rod assembled


GET READY

1. Gently tip the chair on its back (Fig.1).

REMOVING THE FOOTREST ROD

- 1. Using a 10-mm wrench, turn the metal footrest rod nut counter-clockwise to detach the rod from the spacer barrel, then remove the rod from the chair frame.
- 2. Using the 4 mm (5/32") Allen Key (provided), remove the screw from the top of the black plastic spacer barrel to detach the spacer barrel from the bracket (Fig.2).

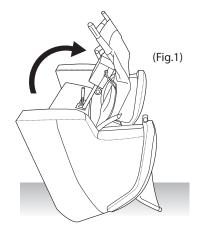

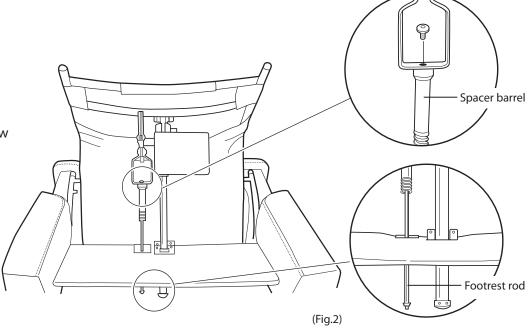

INSTALLING THE NEW FOOTREST ROD

- 1. Remove the screw from the top of the black plastic spacer barrel (Fig.3).
- 2. Align the spacer barrel with the corresponding hole on the bracket, then secure it using the screw you removed in the previous step and the 4 mm (5/32") Allen Key (Fig.4).
- 3. From below the chair frame, insert the metal rod through the corresponding hole in the chair frame then into the black spacer barrel (Fig.4).
- 4. Turn the metal rod clockwise by hand to secure it, then tighten it using a 10-mm wrench.

