



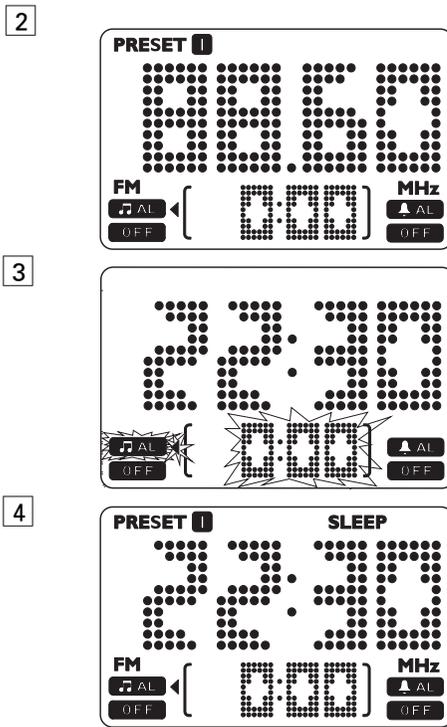

PHILIPS

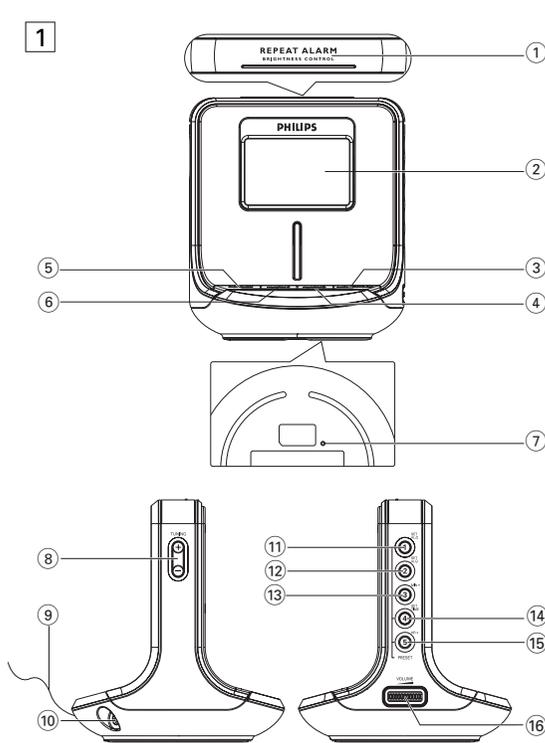

Clock radio

Meet Philips at the Internet
<http://www.philips.com>

English



English

SUPPLIED ACCESSORIES

- 1 X certified AC 7.5V adapter
 (Input: 230-240V ~ 50Hz 30mA, Output: 7.5V==250mA)

TOP AND FRONT PANEL (See 1)

- ① **REPEAT ALARM / BRIGHTNESS CONTROL**
 - switches off the alarm for a 9 minute period
 - changes the brightness of the display illumination
 - stops SLEEP function
- ② **DISPLAY** – shows clock/alarm times and status of the set
- ③ **ALARM RESET / SLEEP**
 - stops active alarm for 24 hours
 - activates the radio for sleep function
 - displays/adjusts/switches off sleep timer
- ④ **ALARM** – switches on/off buzzer mode
 - displays time
- ⑤ **RADIO ON/OFF**
 - switches the radio on/off; displays radio frequency
 - switches off sleep timer
- ⑥ **ALARM** – switches on/off radio mode
 - displays time
- ⑦ **RESET** – press if the set / display does not react to operation of any button

SELF-POWERED BACK-UP

The self-powered back-up conveniently allows your preset stations, alarm and clock time settings to be stored for **up to 3 minutes** when there is a power interruption e.g. AC power failure. The complete clock radio and backlight illumination will be switched off.

If power supply returns after 3 minutes and the display shows:

- clock time blinking - indicates you need to re-adjust the clock time.

BASIC FEATURES

Reset

Should your set receive external interference e.g. static electricity from carpets, thunderstorms, etc. RESET allows you to clear all previous settings and start up again.

- Use a ballpoint pen to press the RESET hole found on the bottom of the set.

Illumination brightness

Press **REPEAT ALARM / BRIGHTNESS CONTROL** once or more.

- The brightness of the display can be adjusted:

Bright → **Low** → **Off** → **Bright**.

SETTING THE CLOCK

The time is displayed using the 24-hour clock.

1. Check the radio is switched off.
2. Press **SET TIME** to enter the clock setting mode.
3. Hold down or press **HR +** or **MIN +** repeatedly to set and adjust the hours and minutes respectively. Release **HR +** or **MIN +** when you have reached the correct setting.
4. Press **SET TIME** to confirm.

SIDE PANEL (See 1)

- ⑧ **TUNING +/-** – tunes to radio stations
- ⑨ **Pigtail** – improves FM reception
- ⑩ **DC 7.5V** – socket for AC/DC 7.5V adapter
- ⑪ **SET AL / PRESET 1** – sets **AL** time
 - stores, recalls and shows station 1
- ⑫ **SET AL / PRESET 2** – sets **AL** time
 - stores, recalls and shows station 2
- ⑬ **MIN + / PRESET 3** – adjusts the minutes for clock and alarm times
 - stores, recalls and shows station 3
- ⑭ **SET TIME / PRESET 4** – sets the clock time
 - stores, recalls and shows station 4
- ⑮ **HR + / PRESET 5** – adjusts the hours for the clock and alarm times
 - stores, recalls and shows station 5
- ⑯ **VOLUME** – adjusts the sound level

POWER SUPPLY

Mains adapter

- 1 Connect the mains adapter to the set's **DC 7.5V** socket and to the power socket.

Helpful hints: To avoid damage to the set, use only the adapter supplied!

The type plate is located on the bottom of the set.

This product complies with the radio interference requirements of the European Community.

CAUTION

- **High voltage! Do not open.** You run the risk of getting an electric shock. The machine does not contain any user-serviceable parts.
- **Modification of the product could result in hazardous radiation of EMC or other unsafe operation.**

RADIO

- 1 Press **RADIO ON/OFF** once to switch on the radio.
 - Display shows the radio frequency of the last selected waveband briefly before returning to the clock time. Your preset station is also shown if you are listening to a preset. (See 2)
- 2 Adjust the sound using **VOLUME**.
- 3 To select preset stations, press the respective **PRESET** button (1-5) once or repeatedly.
- 4 Press **RADIO ON/OFF** to switch off.

TUNING TO RADIO STATIONS

Automatic tuning

- Press **TUNING +/-** one second or more to tune to your station.
 - The radio automatically tunes to a station of sufficient reception.

Manual tuning

- Press **TUNING +/-** briefly or repeatedly until you reach the desired frequency.

To improve reception:

For **FM**, extend and position the pigtail fully to obtain optimum reception.

STORING AND USING PRESET STATIONS

You can store up to a total of 5 FM radio stations in the memory.

- 1 Tune to your desired station (see TUNING TO RADIO STATIONS).
- 2 To store a preset, hold down briefly on a PRESET button 1-5 until you hear a double beep.
 - Display shows the preset number of your station.
- 3 Repeat steps 1 and 2 to store your other stations.
 - You can overwrite a preset station by storing another frequency in its place.
- 4 Press a **PRESET** button 1-5 to listen to a preset station.



