

Barbie™

Hour Garden™ Talking Alarm Clock AM/FM Radio with Night Light



OWNER'S MANUAL

BAR800

Barbie and associated trademarks and trade dress are owned by, and used under license from, Mattel, Inc. ©2007 Mattel, Inc. All Rights Reserved.

SAFETY PRECAUTIONS



CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



DANGEROUS VOLTAGE:

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



ATTENTION:

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION—ELECTRICALLY OPERATED PRODUCT:

Not recommended for children under 5 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

The Caution Marking is located at the bottom enclosure of the apparatus.

SAFETY INSTRUCTIONS

1. Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.
2. Do not use this unit near water.
3. Clean only with a dry cloth. Unplug this product from the wall before cleaning.
4. Do not block any ventilation openings. Install in accordance with manufacturer's instructions.
5. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
6. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. This product should be operated only from the type of power source indicated on the marking label.
7. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the unit.
8. Only use attachments/accessories specified by the manufacturer.
9. Unplug this unit during lightning storms or when unused for long periods of time.
10. Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as the following: the power-supply cord or plug has been damaged; liquid has been spilled or objects have fallen into the unit; and/or the unit has been exposed to rain or moisture, does not operate normally, has changed its performance or has been dropped. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards.
11. This unit should not be exposed to dripping or splashing water and no object filled with liquids such as vases should be placed on the unit. Never push objects of any kind into this unit through any openings.
12. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Do not overload wall outlet. Use only power source as indicated.
14. Use replacement parts as specified by the manufacturer.
15. The product may be mounted to a wall only if recommended by the manufacturer.
16. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.

PORTABLE CART WARNING
(symbol provided by IRETAG)



FCC WARNING:

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

FCC INFORMATION:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Emerson Radio Corp. has produced this audio product under license from Mattel. We have taken great care to make sure your unit was in perfect working order when it left our factory.

It has been designed to give you many years of enjoyment and trouble-free operation. Read this manual before operating this unit to become familiar with its features. In the event you require technical assistance, please contact the Emerson Radio Customer Service hotline at 1-800-898-9020. Retain this manual for future reference.



WARNING

 
 
Choking Hazard—Small Parts and Packaging Materials. Not for children under 5 years.

- All materials for fastening or packing purposes are not part of the unit and should be discarded for children's safety.
- Please keep all information for future reference.
- This is not a toy.

NOTES:

- Please avoid using this unit in places of high temperature or humidity over prolonged periods of time as damage may occur.
- Exposure to direct sunlight in places such as car interiors may cause the unit to become warped and/or lead to malfunctioning.
- Avoid using or storing this unit in dusty or sandy locations.

LOCATION OF CONTROLS

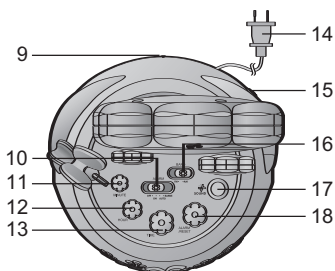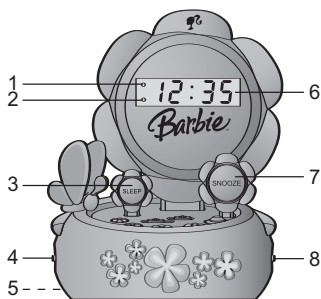


1. AM Indicator
2. ALARM ON Indicator
3. SLEEP Button
4. VOLUME Control
5. Battery Compartment
(Bottom of the Unit)
6. Display
7. SNOOZE Button
8. TUNING Control
9. Speaker
10. ALARM Switch
(OFF/ON/AUTO/BARBIE)
11. MINUTE Button
12. HOUR Button

13. TIME Button
14. AC Cord
15. Night Light (ON/
OFF) Switch
16. BAND Switch (FM/AM)
17. GEMSTONE FUN
(Sound) Button
18. ALARM/RESET Button


POWER SOURCES

 Unravel the AC cord and connect it to a conveniently located AC outlet having 120V and 60Hz only. The Clock Display will illuminate and a flashing time will appear in the window. The Clock Display will continue to flash until the time has been set.

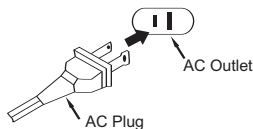

CAUTION: To prevent electric shock, match the wide blade of the plug to the wide slot and fully insert.

 If the AC cord is disconnected or if there is a power failure, this electronic clock is designed to continue operating internally (without showing the time on the Clock Display) with a 9 volt battery (not included). To install the battery, open the Battery Compartment by pressing in the tab and lifting off the door. Connect the battery to the terminals of the battery snap inside the compartment (use of an alkaline battery is recommended) and slide the Battery Compartment cover into place.

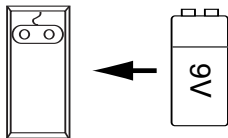


Be sure to check the condition of the battery periodically by disconnecting the AC cord and connecting it again 2-3 minutes later. The preset times should continue operating. If a flashing time appears on the Clock Display, it indicates the battery is dead or not connected properly. The 9 volt battery will keep the internal time accurately for approximately 30 minutes. If the power is restored after 30 minutes, the time may need to be reset.

BATTERY PRECAUTIONS


- * Replacement of batteries must be done by an adult.
- * Do not mix old and new batteries.
- * Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- * The supply terminals are not to be short-circuited.
- * Non-rechargeable batteries are not to be recharged.
- * Exhausted batteries are to be removed.
- * Only batteries of the equivalent type are to be used.
- * Batteries are to be inserted with the correct polarity.
- * Dispose of batteries properly.
- * Do not dispose of batteries in fire; batteries may explode or leak.

OPERATION

 TO LISTEN TO THE RADIO

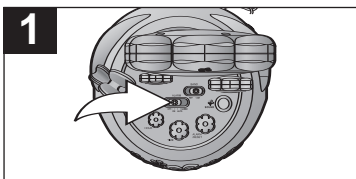

 Slide the ALARM switch to the ON position to turn the unit on.

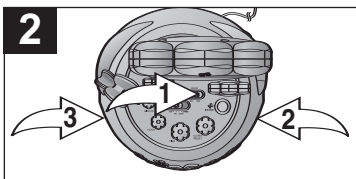


Slide the BAND switch **1** to the desired band (AM or FM) and tune a station by turning the TUNING control **2**. Adjust the VOLUME control **3** as desired.

Antennas


FM: Extend and rotate the AC cord for better FM reception.

AM: Turn the unit for better AM reception.

 TO SET OR RESET THE ACTUAL TIME

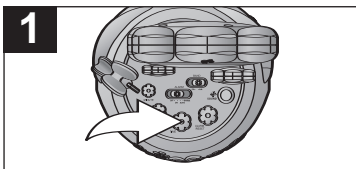


Press and hold the TIME button.

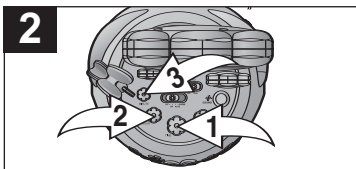 


While holding the TIME button **1**, press the HOUR **2** and MINUTE **3** buttons to advance the time until the desired time is shown on the display. Make sure the AM indicator is lit if the time is AM and not lit if the time is PM.

OPERATION (CONTINUED)

 TO SET OR RESET THE ALARM TIME

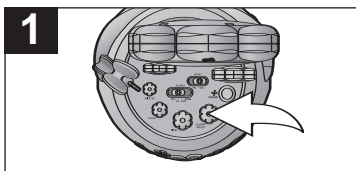


Press and hold the ALARM/RESET button.

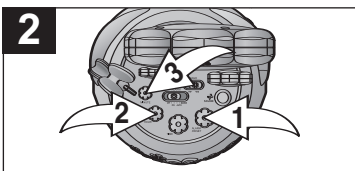 


While holding the ALARM/RESET button ❶, press the HOUR ❷ and MINUTE ❸ buttons to advance the time until the desired alarm time is shown on the display. Make sure the AM indicator is lit if the time is AM and not lit if the time is PM.

 TO SET THE ALARM TO WAKE TO RADIO

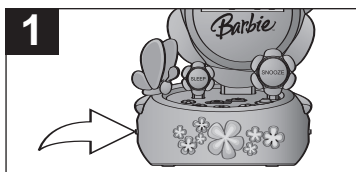

 Set the alarm time as previously instructed. Select a radio station and make sure the VOLUME control is set as desired.

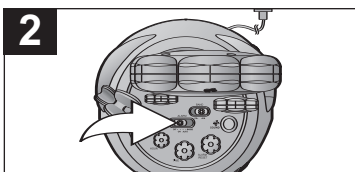

Slide the ALARM switch to the AUTO position. When the actual time matches the selected preset alarm time, the radio automatically turns on for one hour and 59 minutes and then shuts off.

 
NOTES:

- Make sure the volume is not set to the minimum; otherwise, when it reaches the alarm time, you will not hear the radio sound.
- See next page to shut off the alarm and for the Snooze feature.

OPERATION (CONTINUED)

TO SET THE ALARM TO WAKE TO BARBIE™


1

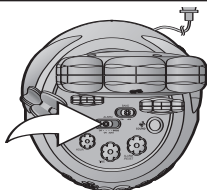

Set the alarm time as previously instructed. Slide the ALARM switch to the BARBIE position. When the actual time matches the selected preset alarm time, Barbie phrases will automatically sound for one hour and 59 minutes and then shut off.

TO SHUT ALARM OFF

 
1

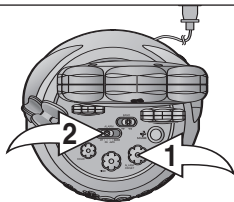

To shut off the alarm, press the ALARM/RESET button ❶ once and the alarm time will be reset for the next day. Slide the ALARM switch ❷ to the OFF position to turn off the alarm and not set it for the next day.

SNOOZE FUNCTION

 1

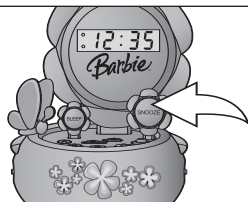


The alarm can be temporarily turned off manually by pressing the SNOOZE button; the alarm will turn back on automatically nine minutes later.

OPERATION (CONTINUED)

TO ACTIVATE THE SLEEP FUNCTION

 
1

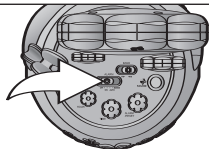

Slide the ALARM switch to the OFF, AUTO or BARBIE position.


NOTE: When the ALARM switch is set to the ON position, the SLEEP function will be disabled.

 2

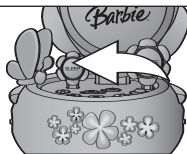


Press the SLEEP button, 0:59 will appear on the display and the unit will come on, then release the button.

 3

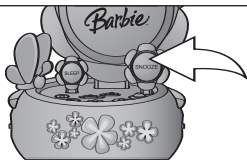

To cancel sleep time before it counts down to "00" and turn the radio off, press the SNOOZE button.

 4

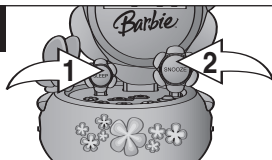


If you press the SLEEP button ❶ again after setting the sleep time, the sleep time will be set to 59 minutes automatically. To turn off the sleep time, press the SNOOZE button ❷.

NOTE:


To select a longer playing time up to a maximum of 1 hour and 59 minutes, press the SLEEP and HOUR buttons simultaneously (the display will show 1 hour and 59 minutes). To adjust the minutes, press and hold the SLEEP button and press the MINUTE button until the desired time is shown on the clock display. Release the button when the preferred time is shown in the display.

OPERATION (CONTINUED)

 TO ACTIVATE THE NIGHT LIGHT

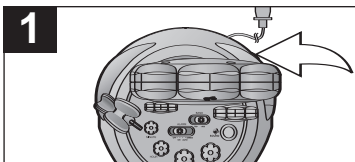

 Slide the NIGHT LIGHT switch to the ON position to turn the night light on.

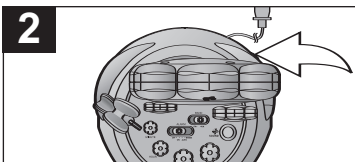

Slide the NIGHT LIGHT switch to the OFF position to turn the night light off.

NOTE: The long-life LEDs inside the Night Light should last for the life of the clock radio; they are not user-replaceable.

 
OPERATION (CONTINUED)



Barbie™ has a surprise just for you! Just follow the instructions below and see what you can do with your GEMSTONE FUN button!



Step 1

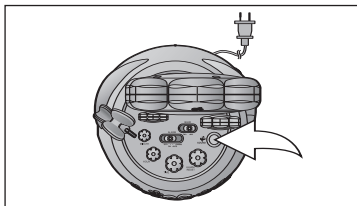

Press the GEMSTONE FUN (Sound) button on your clock radio.

SURPRISE! With your GEMSTONE FUN button, you can listen to Barbie phrases recorded for you.

NOTE: Press to hear these different Barbie phrases:

- Hi, it's Barbie. Time to wake up.
- Wake up, sleepy head.
- Rise and shine Barbie girl.
- Today's going to be a great day!



Step 2



There are three option modes for listening to the Barbie phrases. The default setting for the Barbie phrases is bilingual—first press English, second press French.

OPTION 1: To hear these phrases in French only, press and hold the GEMSTONE FUN button for five seconds until French is spoken twice; French only will be selected.

OPTION 2: To hear these phrases in English only, press and hold the GEMSTONE FUN button for five seconds again until English is spoken twice; English only will be selected.

OPTION 3: To reset back to bilingual (English/French), disconnect the AC plug and back-up battery for five seconds, and then connect the AC plug again; the default setting of bilingual will be selected.

TROUBLESHOOTING GUIDE

If you experience a problem with this unit, check the chart below before calling for service.

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
GENERAL		
Power does not come on.	AC cord not plugged in.	Insert plug firmly into AC outlet.
RADIO		
No sound.	ALARM switch is not set to ON position.	Set ALARM switch to ON position.
	VOLUME control at minimum position.	Turn the VOLUME control up.
Noise or sound distorted on AM or FM.	AM—Interference from traffic.	Turn the radio for better AM reception.
	FM—AC cord not extended.	Extend AC cord.
Unit does not turn off with SLEEP feature.	ALARM switch is in ON position.	Don't set ALARM switch to the ON position.
CLOCK		
Flashing time.	Battery connected improperly, not connected or dead.	Check the battery.
	Clock not set.	Set the clock.
Alarm does not turn on.	ALARM switch is not in AUTO or BARBIE position.	Set ALARM switch to the AUTO or BARBIE position.
	Clock not set.	Set the clock.
	Alarm time not set.	Set alarm time.

EMERSON RADIO CORP.
LIMITED WARRANTY (Valid in the United States)

Emerson Radio Corp. warrants manufacturing defects in original material, including original parts and workmanship, under normal use and conditions, for a period of ninety (90) days from the date of original purchase in the U.S. With your dated proof of purchase, we will provide repair service at no charge for labor and parts at an authorized Depot Repair Facility, or replace the product in our discretion. For repair or replacement, pack your unit in a padded box, enclose your check or money order payable to Emerson Radio Corp. in the amount of \$9.00 (not required by California residents) to cover shipping and handling costs, and enclose a copy of your proof of purchase. Send your unit to:

Emerson Radio Corp.
5101 Statesman Drive
Irving, TX 75063

This warranty does not cover damage from negligence, misuse, abuse, accident, failure to follow operating instructions, commercial use, rental, repairs by an unauthorized facility, or products purchased, used, serviced or damaged outside of the United States.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

AU898M

The serial number of your system is located on a label on the bottom cabinet. Please take a moment now to locate the serial number and write the number in the space provided below. You may be asked to provide this number when calling for product service.

Model Number: **BAR800**
Serial Number: _____



Emerson®

SERVICE

TO FIND THE LOCATION AND PHONE
NUMBER OF YOUR NEAREST SERVICE
CENTER PERMITTED TO PERFORM
WARRANTY...

CALL TOLL FREE: 1-800-695-0098

FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE
PLEASE CALL:
1-800-898-9020

FOR CUSTOMER SERVICE, PLEASE WRITE TO:
Emerson Radio Corp.,
Consumer Affairs Dept.,
5101 Statesman Drive,
Irving, TX 75063.

EMERSON® WARRANTY (Valid in Canada)
Consumer Electronics, Home Appliances and Home Office Products

Thank you for choosing EMERSON®!

SYNNEX Canada Limited gives the following express warranty to the original consumer purchaser or gift recipient for this EMERSON product, when shipped in its original container and sold or distributed in Canada by SYNNEX Canada Limited or by an Authorized EMERSON Dealer:

SYNNEX Canada Limited warrants that this product is free, under normal use and maintenance, from any defects in material and workmanship. If any such defects should be found in this product within the applicable warranty period, SYNNEX Canada Limited shall, at its option, repair or replace the product as specified herein. Replacement parts furnished in connection with this warranty shall be warranted for a period equal to the unexpired portion of the original equipment warranty.

This warranty shall not apply to:

- a. Any defects caused or repairs required as a result of abusive operation, negligence, accident, improper installation or inappropriate use as outlined in the owner's manual.
- b. Any EMERSON product tampered with, modified, adjusted or repaired by any party other than SYNNEX Canada Limited or EMERSON's Authorized Service Centres.
- c. Damage caused or repairs required as a result of the use with items not specified or approved by SYNNEX Canada Limited, including but not limited to head cleaning tapes and chemical cleaning agents.
- d. Any replacement of accessories, glassware, consumable or peripheral items required through normal use of the product including but not limited to earphones, remote controls, AC adapters, batteries, temperature probe, stylus, trays, filters, cables, paper, cabinet, cabinet parts, knobs, buttons, baskets, stands, shelves, cookware and cooking utensils.
- e. Any cosmetic damage to the surface or exterior that has been defaced or caused by normal wear and tear.
- f. Any damage caused by external or environmental conditions, including but not limited to transmission line/power line voltage or liquid spillage.
- g. Any product received without appropriate model, serial number and CSA /cUL /cULus /cETL /cETLus markings.
- h. Any products used for rental or commercial purposes.
- i. Any installation, setup and/or programming charges.

Should this EMERSON product fail to operate during the warranty period, warranty service may be obtained upon delivery of the EMERSON product together with proof of purchase and a copy of this LIMITED WARRANTY statement to an Authorized EMERSON Service Centre. This warranty constitutes the entire express warranty granted by SYNNEX Canada Limited and no other dealer, service centre or their agent or employee is authorized to extend, enlarge or transfer this warranty on behalf of SYNNEX Canada Limited. To the extent the law permits, SYNNEX Canada Limited disclaims any and all liability for direct or indirect damages or losses or for any incidental, special or consequential damages or loss of profits resulting from a defect in material or workmanship relating to the product, including damages for the loss of time or use of this EMERSON product or the loss of information. The purchaser will be responsible for any removal, reinstallation, transportation and insurance costs incurred. Correction of defects, in the manner and period of time described herein, constitute complete fulfillment of all obligations and responsibilities of SYNNEX Canada Limited to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise.

CARRY-IN PARTS & LABOUR WARRANTY PERIODS:

- Audio Products: 1 Year (Remote Control, if applicable – 90 Days)
- Home Appliances: 1 Year
 - Microwave Magnetron parts only additional 3 Years
 - Refrigerator / Freezer Compressor parts only, additional 4 years
- Home Office Products: 1 Year

To obtain the name and address of the nearest Authorized EMERSON Service Centre or for more information on this warranty

- visit www.emersonelectronics.ca
- mail your inquiry to: SYNNEX Canada Limited, EMERSON Customer Service
200 Ronson Drive, Toronto, ON M9W 5Z9, or
- call toll free 1-800-663-5954, Monday to Friday 9:00am – 5:00pm Eastern Standard Time.

08.2007

