



KAMBROOK

GET MORE THAN YOU PAY FOR™

Stainless Steel 1.5L Kettle



KSK400

Issue 01/07



KAMBROOK SAFETY

Welcome to Kambrook and your new Stainless Steel 1.5L Kettle.

At Kambrook, we believe that safe performance of our products is the first priority in any consumer product so that you, our valued customer, can confidently use and trust our appliances.

We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions:

IMPORTANT SAFEGUARDS FOR YOUR KAMBROOK STAINLESS STEEL 1.5L KETTLE

Carefully read all instructions before operating the appliance and retain for future reference.

Remove any packaging material and promotional labels before using the kettle for the first time.

This appliance has been designed specifically for the purpose of boiling drinking quality water only. Under no circumstances should this product be used to boil any other liquids or foodstuffs.

Do not place the kettle near the edge of a table, counter or bench top during operation. Ensure that the surface is level, clean and free of water.

Do not let the cord hang over the edge of a table or counter, touch hot surfaces or become knotted. Fully unwind the cord before use.

Keep kettle clear of walls, curtains and other heat or steam sensitive materials. Minimum 200mm distance.

Do not place on or near a hot gas or electric burner, or where it could touch a heated oven.

Do not use on metal surfaces, for example, a sink drain board.

To protect against electric shock, do not immerse the kettle base, switch area, power base, power supply cord or plug in water or allow moisture to come in contact with these parts.

Always ensure the kettle switch is in the 'OFF' position, then turn the power off at the power outlet and remove the plug from the power outlet before attempting to move the

appliance, when the appliance is not in use and before cleaning or storing. Allow all parts to cool before cleaning.

Do not move the kettle from the power base during operation. Ensure the kettle has switched to 'OFF' position, after the water has boiled, before removing the kettle from the power base.

Do not touch hot surfaces. Use the handle for lifting and carrying the appliance.

Keep the appliance clean. Refer to care and cleaning (Page 4).

The appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.

Young children should be supervised to ensure that they do not play with the appliance.

Do not leave the appliance unattended when in use.

It is recommended to regularly inspect the appliance. Do not use the appliance if power supply cord, plug and appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Kambrook Service Centre for examination and/or repair. Please call 1300 139 798 for service centre details.

Any maintenance other than cleaning should be performed at an authorised Kambrook Service Centre.

This appliance is intended for household use only. Do not use this appliance for other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.

The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

⚠ DO NOT OPERATE THE KETTLE ON AN INCLINED SURFACE. DO NOT MOVE THE KETTLE WHILE IT IS SWITCHED ON.

FEATURES OF YOUR KAMBROOK STAINLESS STEEL 1.5L KETTLE



1. Removable filter for cleaner water.

2. Safety locking lid.

3. Water window.

4. Power on/off switch.

5. Cord storage.

6. Multi directional cordless base.

7. 2200 watt concealed element

OPERATING YOUR KAMBROOK STAINLESS STEEL 1.5L KETTLE

BEFORE FIRST USE

Remove any packaging material and promotional labels before using the kettle for the first time.

It is recommended that before the first use to fill the kettle to the maximum level with cold tap water, bring to the boil and then discard the water. (TIP: add a few slices of lemon for a fresher scent). Your kettle will only operate when positioned on the power base with the ON/OFF switch in the ON position. The kettle will automatically switch off once the water is boiled.

OPERATION OF YOUR KETTLE

1. To fill the kettle with water, remove it from the power base and open the lid by pressing the lid release button on top of the handle. The lid will automatically open. Fill with the desired amount of water. Do not operate the kettle without water. Always fill the kettle between the minimum and maximum marks on the water window. Too little water will result in the kettle switching off.
2. Ensure that the lid is closed and locked firmly into position before placing the kettle on the power base.
3. Place the kettle firmly onto the power base. Plug the cord into a 230/240V power outlet and switch on.
4. Press the ON/OFF switch down to the 'ON' position. The water level window will illuminate.
5. The kettle will automatically switch off once the water has boiled. Lift the kettle from the power base and pour the water. Take care to hold the kettle level, especially when filled to the maximum level. To re-boil it may be necessary to wait for a few seconds to allow the control to reset.

The kettle should be stored on its power base when not in use. The power outlet should be switched off and the power cord unplugged from the power outlet when not in use.

NOTE: Never operate the kettle dry - too little water will result in the kettle switching off.

Do not overfill the kettle - filling above the maximum mark on the water window may result in boiling water splashing from the kettle.

NOTE: This kettle must only be used with the

power base supplied. Use caution when pouring water from your kettle as boiling water will scald. Do not pour water too quickly.

NOTE: DO not remove the kettle from the power base during operation. Ensure the kettle has switched to 'OFF' position after the water has boiled before removing the kettle from the power base.

⚠WARNING: This appliance is designed for the boiling of drinking quality water only. Never use it to heat or boil any other liquids or foodstuff. The lid should always be firmly in place when using.

⚠WARNING: Do not release the lid while the water is boiling. Ensure the lid is closed whilst boiling.

SAFETY BOIL DRY PROTECTION

The kettle is fitted with a safety device, which protects against overheating should your appliance be operated with insufficient water. If this occurs the kettle will stop heating and automatically switch off.

Should this occur, switch off at the power outlet and unplug. Allow kettle to cool before refilling. When the kettle has cooled down, the safety device will automatically reset when the kettle has cooled down.

CARE AND CLEANING

Always switch appliance off, then switch off at the power outlet and then unplug before cleaning the appliance.

CLEANING THE KETTLE EXTERIOR

The outside stainless steel surface of the kettle may be wiped over with a damp cloth and polished with a soft, clean dry cloth.

NOTE: Do not use chemicals, steel wool, or abrasive cleaners to clean the outside of the kettle.

⚠WARNING: NEVER IMMERSE THE KETTLE BASE, SWITCH AREA, POWER BASE, POWER SUPPLY CORD OR POWER PLUG IN WATER OR ALLOW MOISTURE TO COME IN CONTACT WITH THESE PARTS.

CLEANING THE REMOVABLE FILTER

The Kambrook Stainless Steel 1.5L Kettle features a removable mesh filter to filter out scale deposits for cleaner water. To remove the scale deposits, remove the filter by opening the lid of the kettle. Pull the filter firmly to remove.

The filter can be cleaned by running under hot water and rubbing with a soft cleaning cloth or brush. To replace the filter, simply press the filter down firmly into the slot behind the spout of the kettle.

TIP: The filter could become damaged with time, please check regularly and replace if found damaged

MINERAL DEPOSITS AND DISCOLOURATION

Due to the large surface area of the concealed element interior base, discolouration due to mineral deposits from tap water may appear more obvious by leaving a brown stain on the base. **THIS IS NOT RUST.**

To remove the discolouration, follow the instructions "Removing mineral deposits".

REMOVING MINERAL DEPOSITS

Mineral deposits in tap water may cause the kettle interior and water window to discolour over time. This may be removed by using a proprietary kettle descaler which is available from most leading supermarkets, department stores and hardware stores.

ALTERNATIVELY:

1. Fill the kettle until $\frac{2}{3}$ full with 1 part vinegar (or a few slices of lemon) and 2 parts water, bring to the boil and allow to stand overnight.
2. Empty the solution from the kettle. Fill the kettle with clean water, bring to boil and discard the water. Repeat and the kettle will be ready for use.

⚠WARNING: Never immerse the kettle base, switch area, power base, power supply cord or power plug in water, or allow moisture to come into contact with these parts.

STORAGE

Ensure the kettle is switched off, cleaned and dried before storing. Ensure that the lid is closed and locked firmly into place.

Wrap the power cord around the cord storage under the power base. Stand the kettle upright on the power base. Do not store anything on top.



Notes

Notes





KAMBROOK 12 MONTH REPLACEMENT WARRANTY

Kambrook warrants the purchaser against defects in workmanship and material for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the Kambrook guarantee.

Kambrook reserves the right to replace or repair the appliance within the warranty period,

Warranty does not apply to any defect, deterioration, loss, injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. The guarantee excludes breakages and consumable items such as kneading blades.

This warranty is void if there is evidence of the product being tampered with by unauthorised persons.

If the product includes one or a number of accessories only the defective accessory or product will be replaced. In the event of Kambrook choosing to replace the appliance, the guarantee will expire at the original date, i.e. 12 months from the original date of purchase.

In Australia, this KAMBROOK Guarantee is additional to the conditions and guarantees which are mandatory as implied by the Trade Practises Act 1974 and State and Territory legislation.

For service, spare parts or product information in Australia, please call KAMBROOK on the Customer Service Line; 1300 139 798.

For service, spare parts or product information in New Zealand, please call KAMBROOK New Zealand; 0800 273 845. For spare parts phone 0800 273 845.

If claiming this guarantee the product must be returned freight prepaid.

KAMBROOK 12 MONTH REPLACEMENT WARRANTY

YOUR PURCHASE RECORD (Please complete)

Attach a copy of the purchase receipt here.

DATE OF PURCHASE _____

MODEL NUMBER _____

SERIAL NUMBER _____

PURCHASED FROM _____

(Please don't return purchase record until you are making a claim)

Register your warranty at www.kambrook.com.au/service.asp

KAMBROOK
GET MORE THAN YOU PAY FOR™

Kambrook - Australia

461 Plummer Street, Port Melbourne, 3207, Australia

Customer Service Line 1300 139 798

Customer Service Fax 1800 621 337

Kambrook - New Zealand

Private Bag 94411, Greenmount, Auckland, New Zealand

Customer Service Line/Spare Parts 09 271 3980

Customer Service Fax 0800 288 513

Due to continual improvement in design or otherwise, the product you purchase may differ slightly from the illustration in this book. Issue 1/07