

# Barbie™

---

Story Teller™  
Alarm Clock with Nightlight  
and Projection Feature



**OWNER'S MANUAL**

**BAR805**

Barbie and associated trademarks and trade dress are owned by, and used under license from, Mattel, Inc. ©2007 Mattel, Inc. All Rights Reserved.

# SAFETY PRECAUTIONS



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



## **DANGEROUS VOLTAGE:**

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



## **ATTENTION:**

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## **CAUTION—ELECTRICALLY OPERATED PRODUCT:**

Not recommended for children under 5 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

**The Caution Marking is located at the bottom enclosure of the apparatus.**

# SAFETY INSTRUCTIONS

1. Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.
2. Do not use this unit near water.
3. Clean only with a dry cloth. Unplug this product from the wall before cleaning.
4. Do not block any ventilation openings. Install in accordance with manufacturer's instructions.
5. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
6. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. This product should be operated only from the type of power source indicated on the marking label.
7. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the unit.
8. Only use attachments/accessories specified by the manufacturer.
9. Unplug this unit during lightning storms or when unused for long periods of time.
10. Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as the following: the power-supply cord or plug has been damaged; liquid has been spilled or objects have fallen into the unit; and/or the unit has been exposed to rain or moisture, does not operate normally, has changed its performance or has been dropped. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards.
11. This unit should not be exposed to dripping or splashing water and no object filled with liquids such as vases should be placed on the unit. Never push objects of any kind into this unit through any openings.
12. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Do not overload wall outlet. Use only power source as indicated.
14. Use replacement parts as specified by the manufacturer.
15. The product may be mounted to a wall only if recommended by the manufacturer.
16. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.

PORTABLE CART WARNING  
(symbol provided by RETAC)



**FCC WARNING:**

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

**FCC INFORMATION:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Emerson Radio Corp. has produced this audio product under license from Mattel. We have taken great care to make sure your unit was in perfect working order when it left our factory.

It has been designed to give you many years of enjoyment and trouble-free operation. Read this manual before operating this unit to become familiar with its features. In the event you require technical assistance, please contact the Emerson Radio Customer Service hotline at 1-800-898-9020. Retain this manual for future reference.



## **WARNING**

 
Choking Hazard—Small Parts and Packaging Materials. Not for children under 5 years.

- All materials for fastening or packing purposes are not part of the unit and should be discarded for children's safety.
- Please keep all information for future reference.
- This is not a toy.

### **NOTES:**

- Please avoid using this unit in places of high temperature or humidity over prolonged periods of time as damage may occur.
- Exposure to direct sunlight in places such as car interiors may cause the unit to become warped and/or lead to malfunctioning.
- Avoid using or storing this unit in dusty or sandy locations.


## LOCATION OF CONTROLS

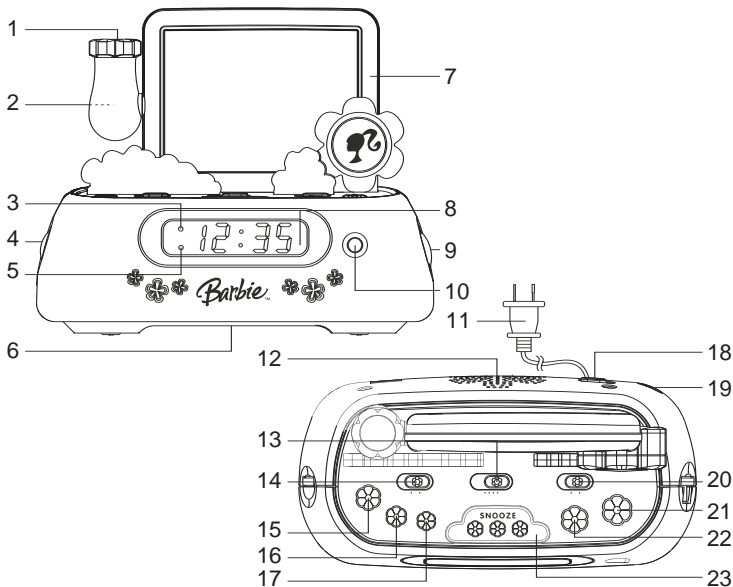

- |  |  |
|--|--|
| 1. Projector                                   | 13. ALARM Switch<br>(OFF/ON/AUTO/BUZZER) |
| 2. Projector Control                           | 14. Projector (ON/OFF) Switch            |
| 3. AM Indicator                                | 15. SLEEP Button                         |
| 4. VOLUME Control                              | 16. HOUR Button                          |
| 5. ALARM ON Indicator                          | 17. MINUTE Button                        |
| 6. Battery Compartment<br>(Bottom of the Unit) | 18. Night Light (ON/OFF)<br>Switch       |
| 7. Night Light                                 | 19. AUX IN Jack (Rear of Unit)           |
| 8. Display                                     | 20. BAND Switch (FM/AM)                  |
| 9. TUNING Control                              | 21. ALARM/RESET Button                   |
| 10. GEMSTONE FUN (Sound)<br>Button             | 22. TIME Button                          |
| 11. AC Cord                                    | 23. SNOOZE Button                        |
| 12. Speaker                                    |  |


## POWER SOURCES

 Unravel the AC cord and connect it to a conveniently located AC outlet having 120V and 60Hz only. The Clock Display will illuminate and a flashing time will appear in the window. The Clock Display will continue to flash until the time has been set.

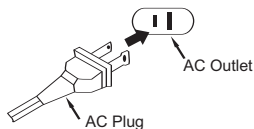

**CAUTION:** To prevent electric shock, match the wide blade of the plug to the wide slot and fully insert.

 If the AC cord is disconnected or if there is a power failure, this electronic clock is designed to continue operating internally (without showing the time on the Clock Display) with a 9 volt battery (not included). To install the battery, open the Battery Compartment by pressing in the tab and lifting off the door. Connect the battery to the terminals of the battery snap inside the compartment (use of an alkaline battery is recommended) and slide the Battery Compartment cover into place.

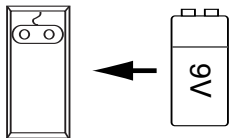



Be sure to check the condition of the battery periodically by disconnecting the AC cord and connecting it again 2-3 minutes later. The preset times should continue operating. If a flashing time appears on the Clock Display, it indicates the battery is dead or not connected properly. The 9 volt battery will keep the internal time accurately for approximately 30 minutes. If the power is restored after 30 minutes, the time may need to be reset.

### BATTERY PRECAUTIONS

  - \* Replacement of batteries must be done by an adult.
- \* Do not mix old and new batteries.
- \* Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- \* The supply terminals are not to be short-circuited.
- \* Non-rechargeable batteries are not to be recharged.
- \* Exhausted batteries are to be removed.
- \* Only batteries of the equivalent type are to be used.
- \* Batteries are to be inserted with the correct polarity.
- \* Dispose of batteries properly.
- \* Do not dispose of batteries in fire; batteries may explode or leak.

# OPERATION

## TO LISTEN TO THE RADIO

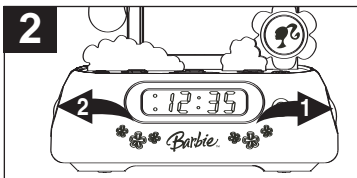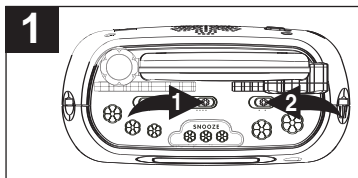

Slide the ALARM switch ❶ to the ON position to turn the unit on. Slide the BAND switch ❷ to the desired band (AM or FM)



Tune a station by turning the TUNING control ❶. Adjust the VOLUME control ❷ as desired.

### Antennas

  **FM:** Extend and rotate the AC cord for better FM reception.

**AM:** Turn the unit for better AM reception.

## TO SET OR RESET THE ACTUAL TIME

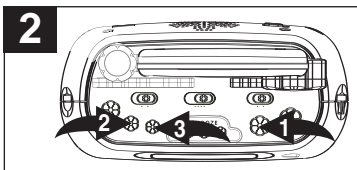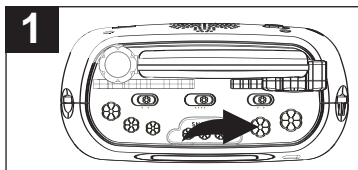



Press and hold the TIME button.

While holding the TIME button ❶, press the HOUR ❷ and MINUTE ❸ buttons to advance the time until the desired time is shown on the display. Make sure the AM indicator is lit if the time is AM and not lit if the time is PM.



## OPERATION (CONTINUED)

 
 
### TO SET OR RESET THE ALARM TIME

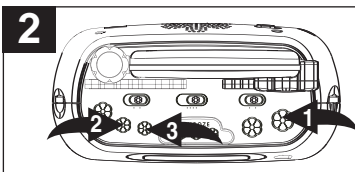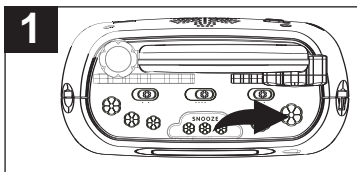

Press and hold the ALARM/RESET button.

While holding the ALARM/RESET button ①, press the HOUR ② and MINUTE ③ buttons to advance the time until the desired alarm time is shown on the display. Make sure the AM indicator is lit if the time is AM and not lit if the time is PM.

### TO SET THE ALARM TO WAKE TO RADIO

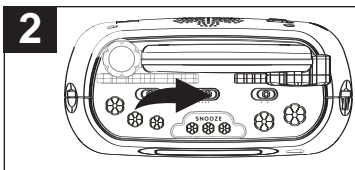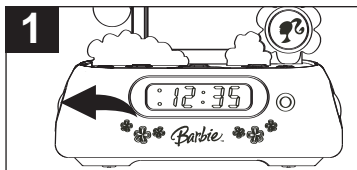  

Set the alarm time as previously instructed. Select a radio station and make sure the VOLUME control is set as desired.

Slide the ALARM switch to the AUTO position. When the actual time matches the selected preset alarm time, the radio automatically turns on for one hour and 59 minutes and then shuts off.


#### NOTES:

 - Make sure the volume is not set to the minimum; otherwise, when it reaches the alarm time, you will not hear the radio sound.
- See next page to shut off the alarm and for the Snooze feature.

## OPERATION (CONTINUED)

### TO SET THE ALARM TO WAKE TO BUZZER


1

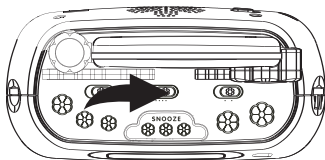

Set the alarm time as previously instructed. Slide the ALARM switch to the BUZZER position. When the actual time matches the selected preset alarm time, the buzzer will automatically sound for one hour and 59 minutes and then shut off.

### TO SHUT ALARM OFF

 
1

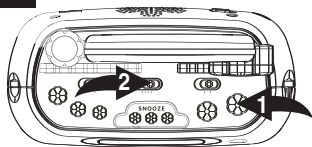

To shut off the alarm, press the ALARM/RESET button ❶ once and the alarm time will be reset for the next day. Slide the ALARM switch ❷ to the OFF position to turn off the alarm and not set it for the next day.

### SNOOZE FUNCTION

 
1

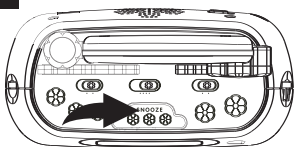

The alarm can be temporarily turned off manually by pressing the SNOOZE button; the alarm will turn back on automatically nine minutes later.


## OPERATION (CONTINUED)
 
### TO ACTIVATE THE SLEEP FUNCTION

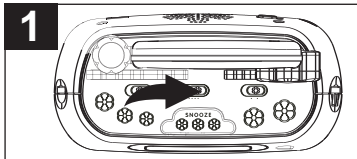


Slide the ALARM switch to the OFF, AUTO or BUZZER position.

 
**NOTE:** When the ALARM switch is set to the ON position, the SLEEP function will be disabled.

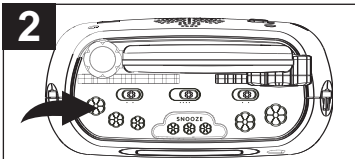

 Press the SLEEP button, 0:59 will appear on the display and the unit will come on, then release the button.

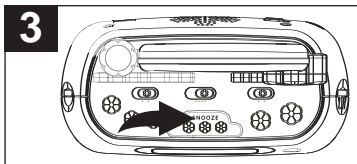

 To cancel sleep time before it counts down to "00" and turn the radio off, press the SNOOZE button.

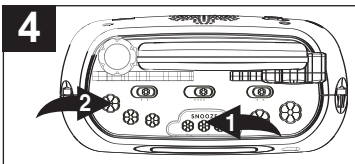


If you press the SLEEP button ❶ again after setting the sleep time, the sleep time will be set to 59 minutes automatically. To turn off the sleep time, press the SNOOZE button ❷.

#### **NOTE:**

 
To select a longer playing time up to a maximum of 1 hour and 59 minutes, press the SLEEP and HOUR buttons simultaneously (the display will show 1 hour and 59 minutes). To adjust the minutes, press and hold the SLEEP button and press the MINUTE button until the desired time is shown on the clock display. Release the button when the preferred time is shown in the display.

## OPERATION (CONTINUED)

### TO ACTIVATE THE NIGHT LIGHT

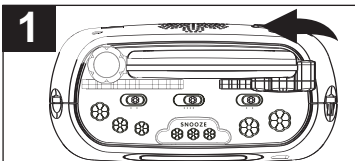

 
Slide the NIGHT LIGHT switch to the ON position to turn the night light on.

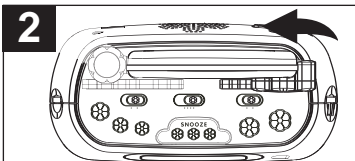


Slide the NIGHT LIGHT switch to the OFF position to turn the night light off.

**NOTE:** The long-life LEDs inside the Night Light should last for the life of the clock radio; they are not user-replaceable.

### USING THE PROJECTOR

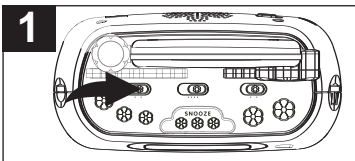 

 Slide the PROJECTOR switch to the ON position to turn on the projector; an image will be projected on the wall (maximum 8 feet).

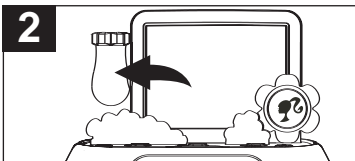

Rotate the Projector control to select one of the images, see below. Rotate the actual projector to position the image on the wall as desired.



### PROJECTOR IMAGES


  
## OPERATION (CONTINUED)

### USING THE AUX (AUXILIARY) JACK

By using a home audio connection cable (not included), an external unit, such as a CD player or cassette player, can be heard through this unit. Before making any connections, turn off the power to all equipment.

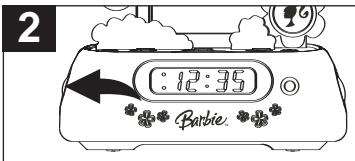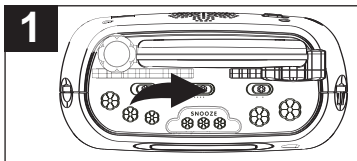

Connect an external unit to the AUX IN jacks using a home audio connection cable (not included). Slide the ALARM switch to the ON position to turn the unit on.


Start playback of the external unit and adjust the VOLUME control as desired; the sound will be heard through the unit's speakers as the Auxiliary input overrides the radio when connected.

## OPERATION (CONTINUED)



 Barbie™ has a surprise just for you! Just follow the instructions below and see what you can do with your GEMSTONE FUN button!

### Step 1

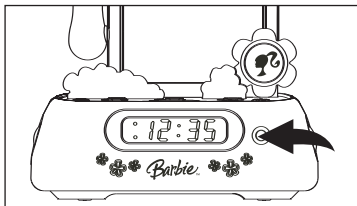

Press the GEMSTONE FUN (Sound) button on your clock radio.

**SURPRISE!** With your GEMSTONE FUN button, you can listen to Barbie™ tell two full length stories.

**NOTE:** Press to hear two different Barbie stories:

- Barbie™ as the Princess and the Pauper.
- Barbie™ as the 12 Dancing Princesses.

### Step 2



This is how the Gemstone "FUN" Button works: Press the Gemstone "FUN" Button once to here the first story, press it twice to hear the second story and three times to exit the stories.

## TROUBLESHOOTING GUIDE

If you experience a problem with this unit, check the chart below before calling for service.

SYMPTOM	POSSIBLE CAUSE	POSSIBLE SOLUTION
<b>GENERAL</b>		
Power does not come on.	AC cord not plugged in.	Insert plug firmly into AC outlet.
<b>RADIO</b>		
No sound.	ALARM switch is not set to ON position.	Set ALARM switch to ON position.
	VOLUME control at minimum position.	Turn the VOLUME control up.
Noise or sound distorted on AM or FM.	AM—Interference from traffic.	Turn the radio for better AM reception.
	FM—AC cord not extended.	Extend AC cord.
Unit does not turn off with SLEEP feature.	ALARM switch is in ON position.	Don't set ALARM switch to the ON position.
<b>CLOCK</b>		
Flashing time.	Battery connected improperly, not connected or dead.	Check the battery.
	Clock not set.	Set the clock.
Alarm does not turn on.	ALARM switch is not in AUTO or BUZZER position.	Set ALARM switch to the AUTO or BUZZER position.
	Clock not set.	Set the clock.
	Alarm time not set.	Set alarm time.

**EMERSON RADIO CORP.  
LIMITED WARRANTY (Valid in the United States)**

Emerson Radio Corp. warrants manufacturing defects in original material, including original parts and workmanship, under normal use and conditions, for a period of ninety (90) days from the date of original purchase in the U.S. With your dated proof of purchase, we will provide repair service at no charge for labor and parts at an authorized Depot Repair Facility, or replace the product in our discretion. For repair or replacement, pack your unit in a padded box, enclose your check or money order payable to Emerson Radio Corp. in the amount of \$9.00 (not required by California residents) to cover shipping and handling costs, and enclose a copy of your proof of purchase. Send your unit to:

Emerson Radio Corp.  
5101 Statesman Drive  
Irving, TX 75063

This warranty does not cover damage from negligence, misuse, abuse, accident, failure to follow operating instructions, commercial use, rental, repairs by an unauthorized facility, or products purchased, used, serviced or damaged outside of the United States.

**THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.**

AU898M

The serial number of your system is located on a label on the bottom cabinet. Please take a moment now to locate the serial number and write the number in the space provided below. You may be asked to provide this number when calling for product service.

**Model Number:**            **BAR805**  
**Serial Number:**            \_\_\_\_\_

 SERVICE	TO FIND THE LOCATION AND PHONE NUMBER OF YOUR NEAREST SERVICE CENTER PERMITTED TO PERFORM WARRANTY...
CALL TOLL FREE: 1-800-695-0098	
FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE PLEASE CALL: 1-800-898-9020	
FOR CUSTOMER SERVICE, PLEASE WRITE TO: Emerson Radio Corp., Consumer Affairs Dept., 5101 Statesman Drive, Irving, TX 75063.	



