



AM/FM CLOCK RADIO MODEL CR-210

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storm or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. The AC/DC adaptor and apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.




WARNING:

To reduce the risk of electric shock, do not expose this apparatus to rain or moisture.

* Marking plate was located at bottom enclosure of the apparatus.



CAUTION - TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.

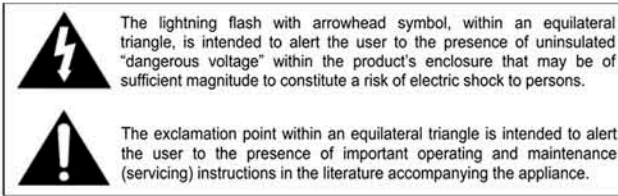

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

FCC NOTES

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesirable operation.

WARNING:


Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technical for help.

OPERATING INSTRUCTIONS

AM/FM ALARM CLOCK RADIO

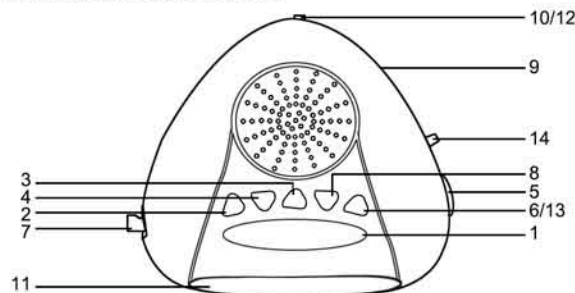

1. SNOOZE/SLEEP OFF BUTTON
2. SLEEP SET BUTTON
3. MINUTE SET BUTTON
4. HOUR SET BUTTON
5. TUNING CONTROL
6. ALARM SET BUTTON
7. ON/OFF/AUTO/ALARM SELECTOR

8. TIME SET BUTTON
9. VOLUME CONTROL
10. FM ANTENNA (FOR EXTERNAL ANTENNA)
11. AUTO INDICATOR
12. MAIN PLUG (AC CORD)
13. ALARM OFF BUTTON
14. AM/FM SELECTOR

AC POWER OPERATION

Before connecting to the power supply ensure that the supply corresponds to the information on the rating label on the bottom of the apparatus.

WARNING

Disconnect the mains plug from the supply socket when not in use. To prevent fire or shock hazard do not expose the apparatus to rain or moisture.

SETTING THE CLOCK

1. Set the On/Off/Auto/Alarm Switch (7) to "OFF". Connect the Main Lead to the power supply. The clock display will flash on and off indicating a power interruption and that the display time is incorrect.
2. To set the correct time, press the Time Set Button(3) and Minute Set Button (6), or Hour Set Button (5), together, until the correct time is displayed.

SETTING THE ALARM/SNOOZE CONTROL

1. To set the alarm time, press the Alarm Set Button (2) and Minute Set Button (6), or Hour Set Button (5), together, until the required alarm time is displayed.
2. Switch the On/Off/Auto/Alarm Switch (7) to either "AUTO" or "ALARM" position for choice of wake by radio or wake by buzzer respectively. The Auto Indicator (11) will illuminate and alarm is now set to activate at the required time.
3. The alarm can be temporarily stopped for 9 minutes by pressing the Snooze/Sleep Off Button (1).
4. The alarm will switch off automatically after 120 minutes, or can be cancelled by pressing the Alarm Off Button(13) once.
5. The alarm will activate again after 24 hours unless the On/Off/Auto/Alarm Switch (7) is set to "OFF".

NOTE: When setting alarm time always remember to release the Minute Set or Hour Set or Hour Set Button before releasing the Alarm Set Button to ensure that the real time will not be affected.

SLEEP CONTROL

1. Set the On/Off/Auto/Alarm Switch (7) to "OFF", "AUTO" or "ALARM" position.
2. Press the Sleep Set Button (4) and Minute Set Button(6) together. The sleep time will be displayed and count down from 59 minutes to zero. Release the button when the required sleep time is displayed.
3. The radio will now operate until the sleep time has elapsed or may be switched off by pressing the Snooze/Sleep Off Button (1).

PLAYING THE RADIO

The FM band required the AC cord for FM ant., this should be uncoiled and positioned for best reception. Set the On/Off/Auto/Alarm Switch (7) to "ON" position.

1. Adjust the Tuning Control (8) to select the desired station.
2. Adjust the Volume Control (9) as required.
3. To turn off the radio, set the On/Off/Auto/Alarm Switch (7) to "OFF".

If the radio does not switch off this may be caused by inadvertent operation of the Sleep Set Button (4). To cancel this press the Snooze/Sleep Off Button (1) once.
4. Adjust the Switch (15) to the required waveband.

CLEANING

Clean the cabinet with a soft cloth moistened with water or mild detergent. Do not use solvents such as alcohol, benzene or thinner, as they may damage the cabinet finish. Make sure to disconnect the main lead from the supply before cleaning. Please retain these instructions for future reference.

SPECIFICATIONS

Frequency Range :	AM 530-1700KHz
	FM 88 -108 MHz
Power Source :	AC 110V ~ 60 Hz 6 W
Power Output :	300 mW

90 DAYS LIMITED WARRANTY

What to do for warranty service

If you purchased the alarm clock from a retail vendor, Southern Telecom Inc. warrants the alarm clock against defects in material and workmanship for a period of 90 days from the original date of purchase. This warranty is in lieu of all other express warranties. This warranty begins when you purchase the telephone and continues for 90 days.

TO OBTAIN WARRANTY SERVICE:

- Provide proof of the date of purchase within the package (Dated bill of sale).
- Prepay all shipping costs to the authorized service center.
- Include a check or money order made out to Southern Telecom Inc. for \$3.00 to cover shipping and handling.
- Include a return shipping address (No P.O.Boxes) and telephone number within the package.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines the product is defective. Products received damaged, as a result of shipping will require you to file a claim with the carrier prior to repair. A product received with missing parts will be returned to you C.O.D. freight collect with \$3.00 handling charge. Please allow a minimum of 3 weeks for the return of your product. The shipping address of the authorized service center is:

Southern Telecom Inc.
14C 53rd Street
Brooklyn, NY 11232

For Customer Service email us at cs@southerntelecom.com, or call: (718) 567-0536

Monday-Thursday: 9AM-5:30PM
Friday: 9AM-3PM