

PARTS LIST

for

KitchenAid®

PRO LINE COFFEE GRINDER

MODELS:

KPCG100PM0 (Pearl Metallic)
4KPCG100PM0 (Pearl Metallic)




FOR CUSTOMER SATISFACTION ALWAYS USE
FACTORY SPECIFICATION PARTS




PEDESTAL JAR ASSEMBLY PARTS

For Models: KPCG100__0, 4KPCG100__0

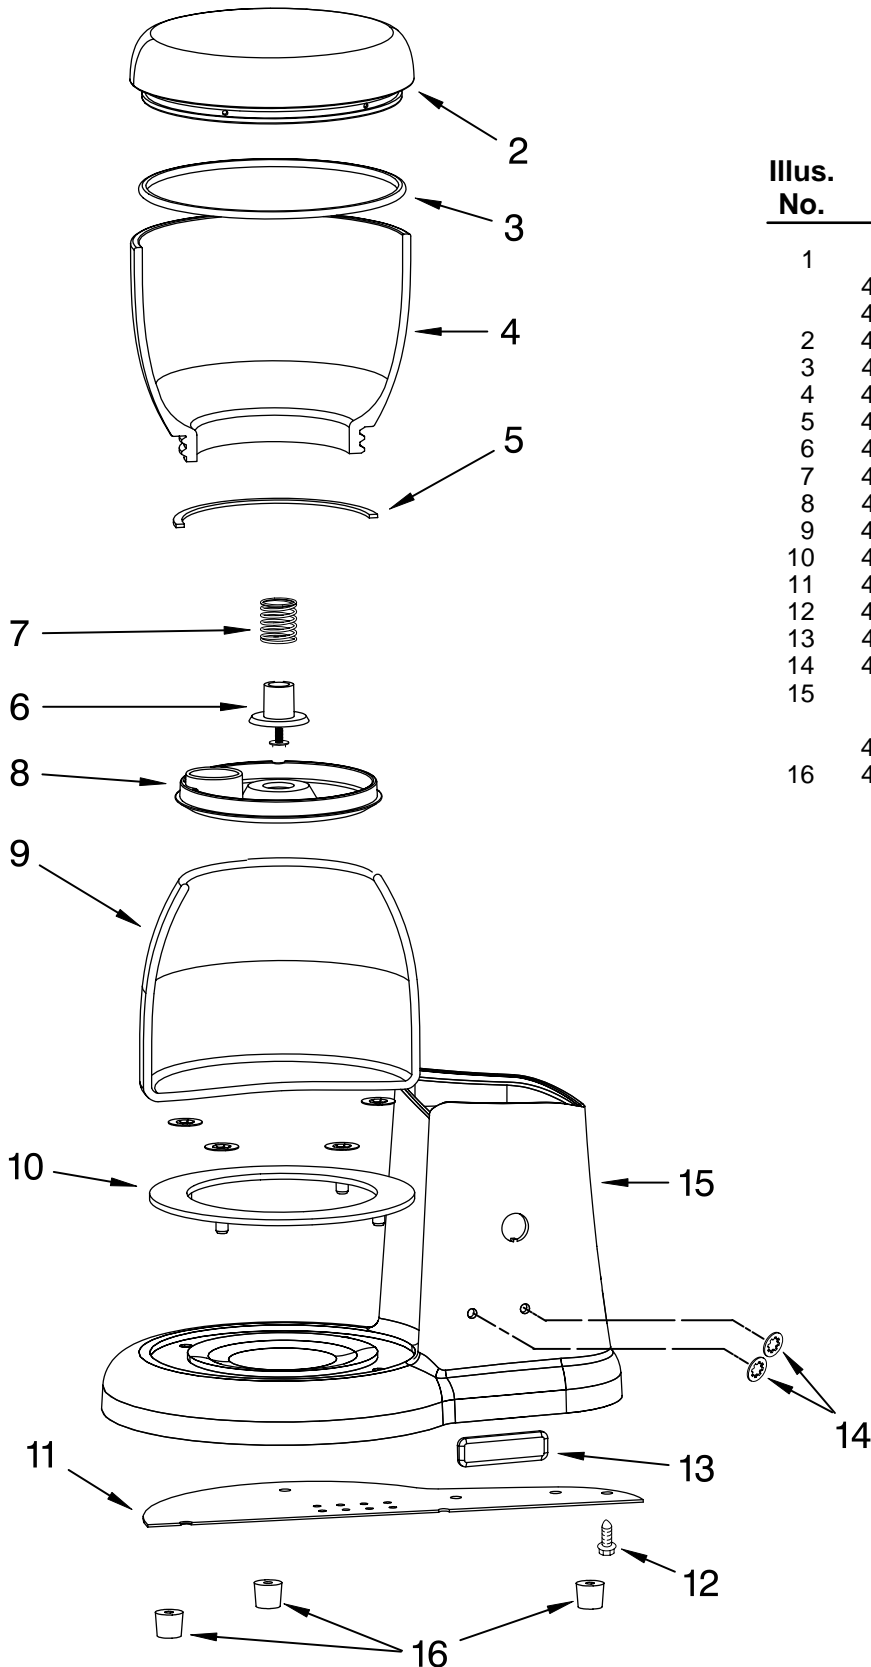


Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	4176735	Use and Care Guide
	4176736	Repair Parts List
2	4176717	Lid, Bean Jar
3	4176731	O-Ring, Lid
4	4176730	Jar, Bean
5	4176729	Seal, Bean Jar
6	4176723	Nozzle, Holder
7	4176715	Spring, Housing
8	4176721	Cover, Nozzle
9	4176728	Jar, Coffee Ground
10	4176722	Ring, Abrasion
11	4176703	Cover, Baseplate
12	4176760	Screw
13	4176701	Nameplate
14	4176713	Lockwasher
15		Pedestal Assy (Incl Nameplate)
	4176700	Pearl Metallic
16	4176725	Foot, Rubber

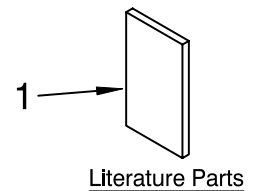

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MOTOR HOUSING AND BURR ASSEMBLY PARTS

For Models: KPCG100__0, 4KPCG100__0

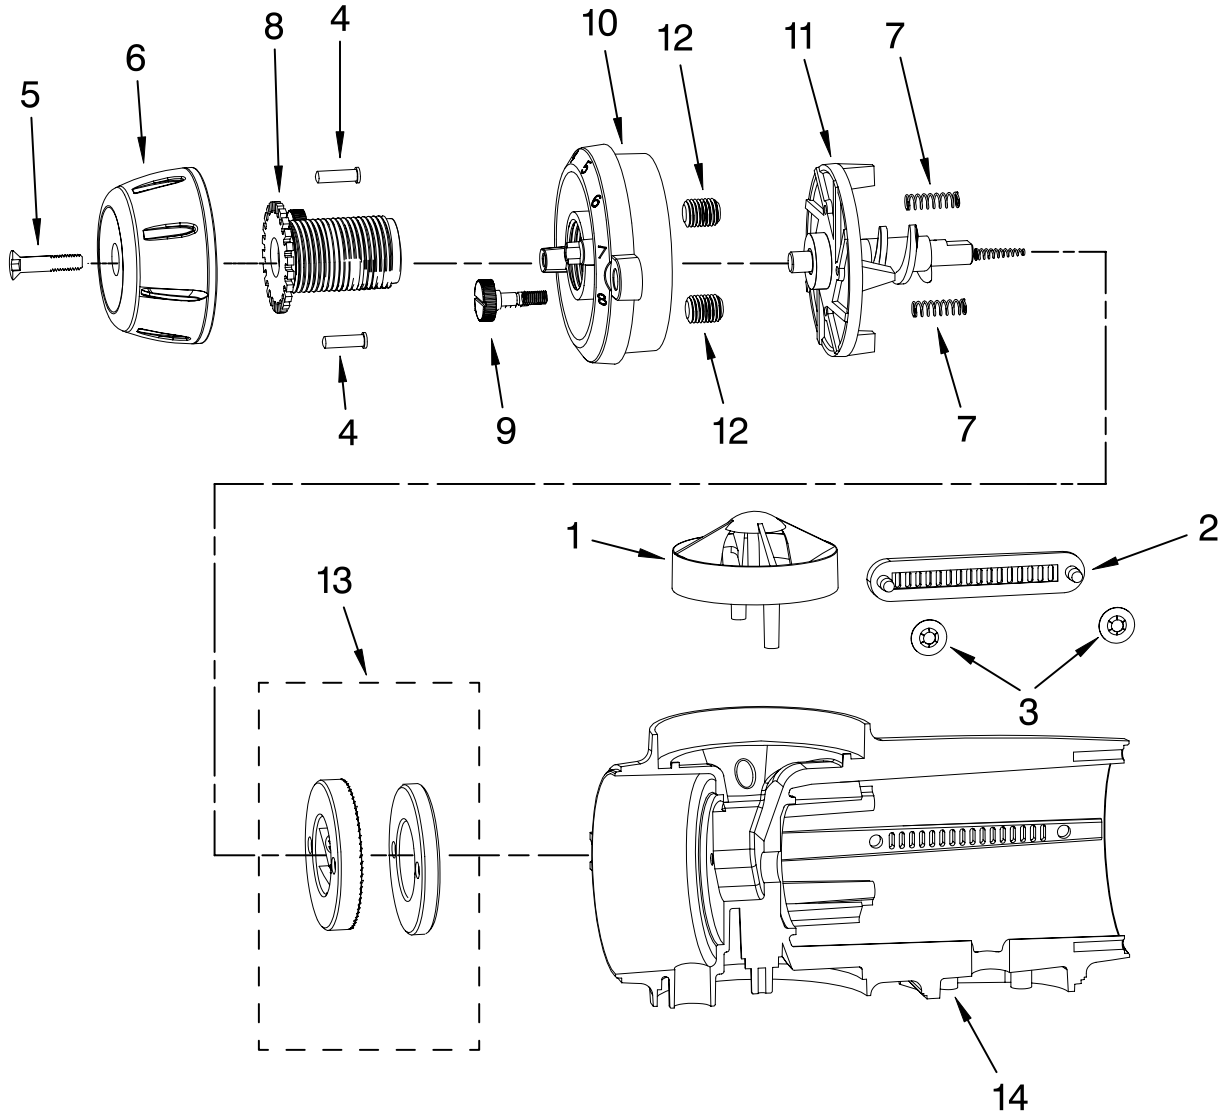


Illus. No.	Part No.	DESCRIPTION
1	4176695	Guard, Finger
2	4176696	Vent
3	4176713	Lockwasher
4	8212392	Pin, Detent
5	4176754	Bolt, Knob
6	4176718	Knob, Selector
7	8212394	Spring, Detent
8	4176716	Screw, Adjustment
9	4176705	Screw, Bezel
10	4176697	Bezel, Gearbox
11	4176694	Auger Assy
12	4176712	Screw, Socket
13	4176702	Burr Assy
14	4176698	Housing, Motor Pearl Metallic

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MOTOR AND CONTROL PARTS

For Models: KPCG100__0, 4KPCG100__0

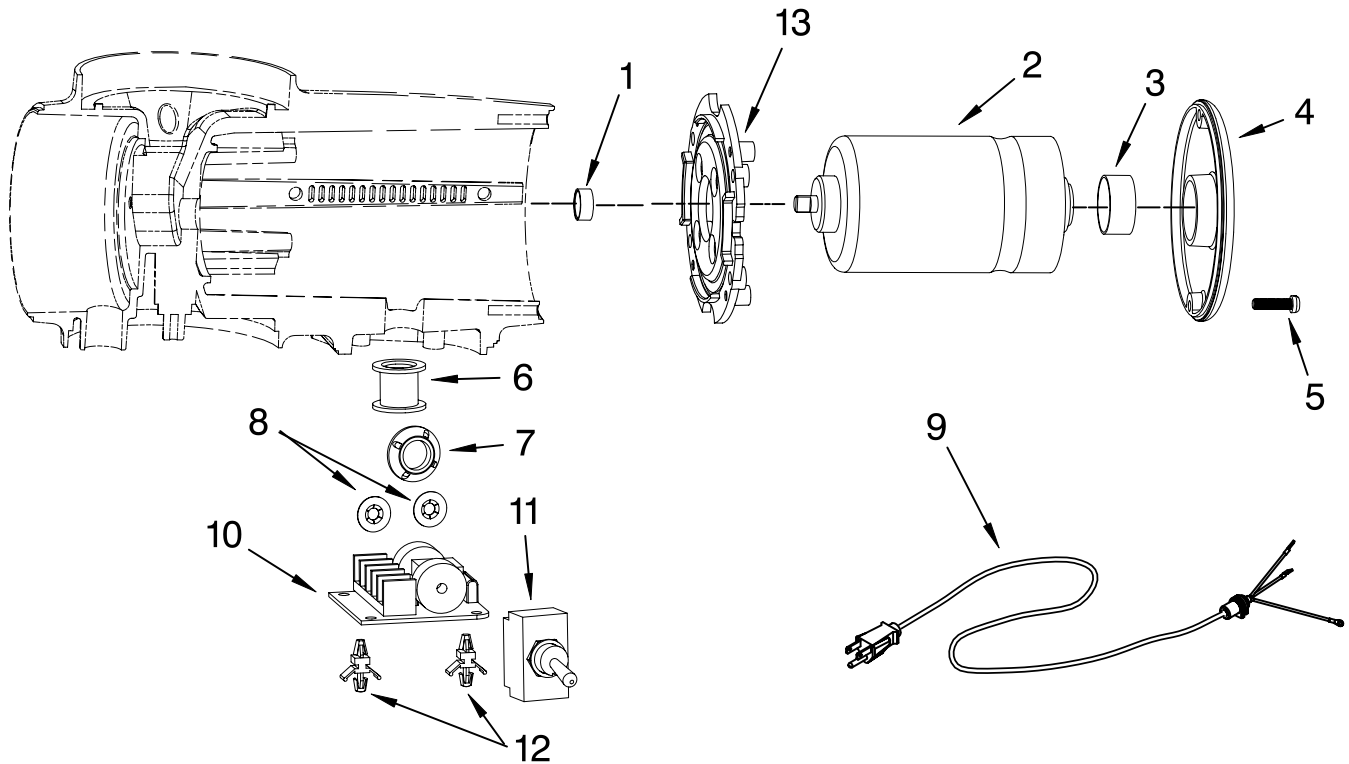

Illus. No.	Part No.	DESCRIPTION
1	4176707	Bushing, Copper
2	4176733	Motor
3	4176726	Seal, Vibration
4		Cap, Motor
	4176699	Pearl Metallic
5	4176755	Screw, Motor Cap
6	4176734	Tube, Housing
7	4176710	Nut, Switch
8	4176713	Lockwasher
9	4176757	Cord, Power
10	4176727	PCB Board
11	4176758	Switch, Toggle
12	4176724	Spacer
13	4176720	Plate, Motor

OPTIONAL PARTS NOT ILLUSTRATED

- 4176764 Scoop, Coffee
- 4176763 Brush, Cleaning

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST