


UK

KOMPERNASS GMBH · BURGSTRASSE 21 · D-44867 BOCHUM
www.kompernass.com

ID-Nr.: KH1550-11/06-V1



GB Toaster KH 1550
Operating Instructions

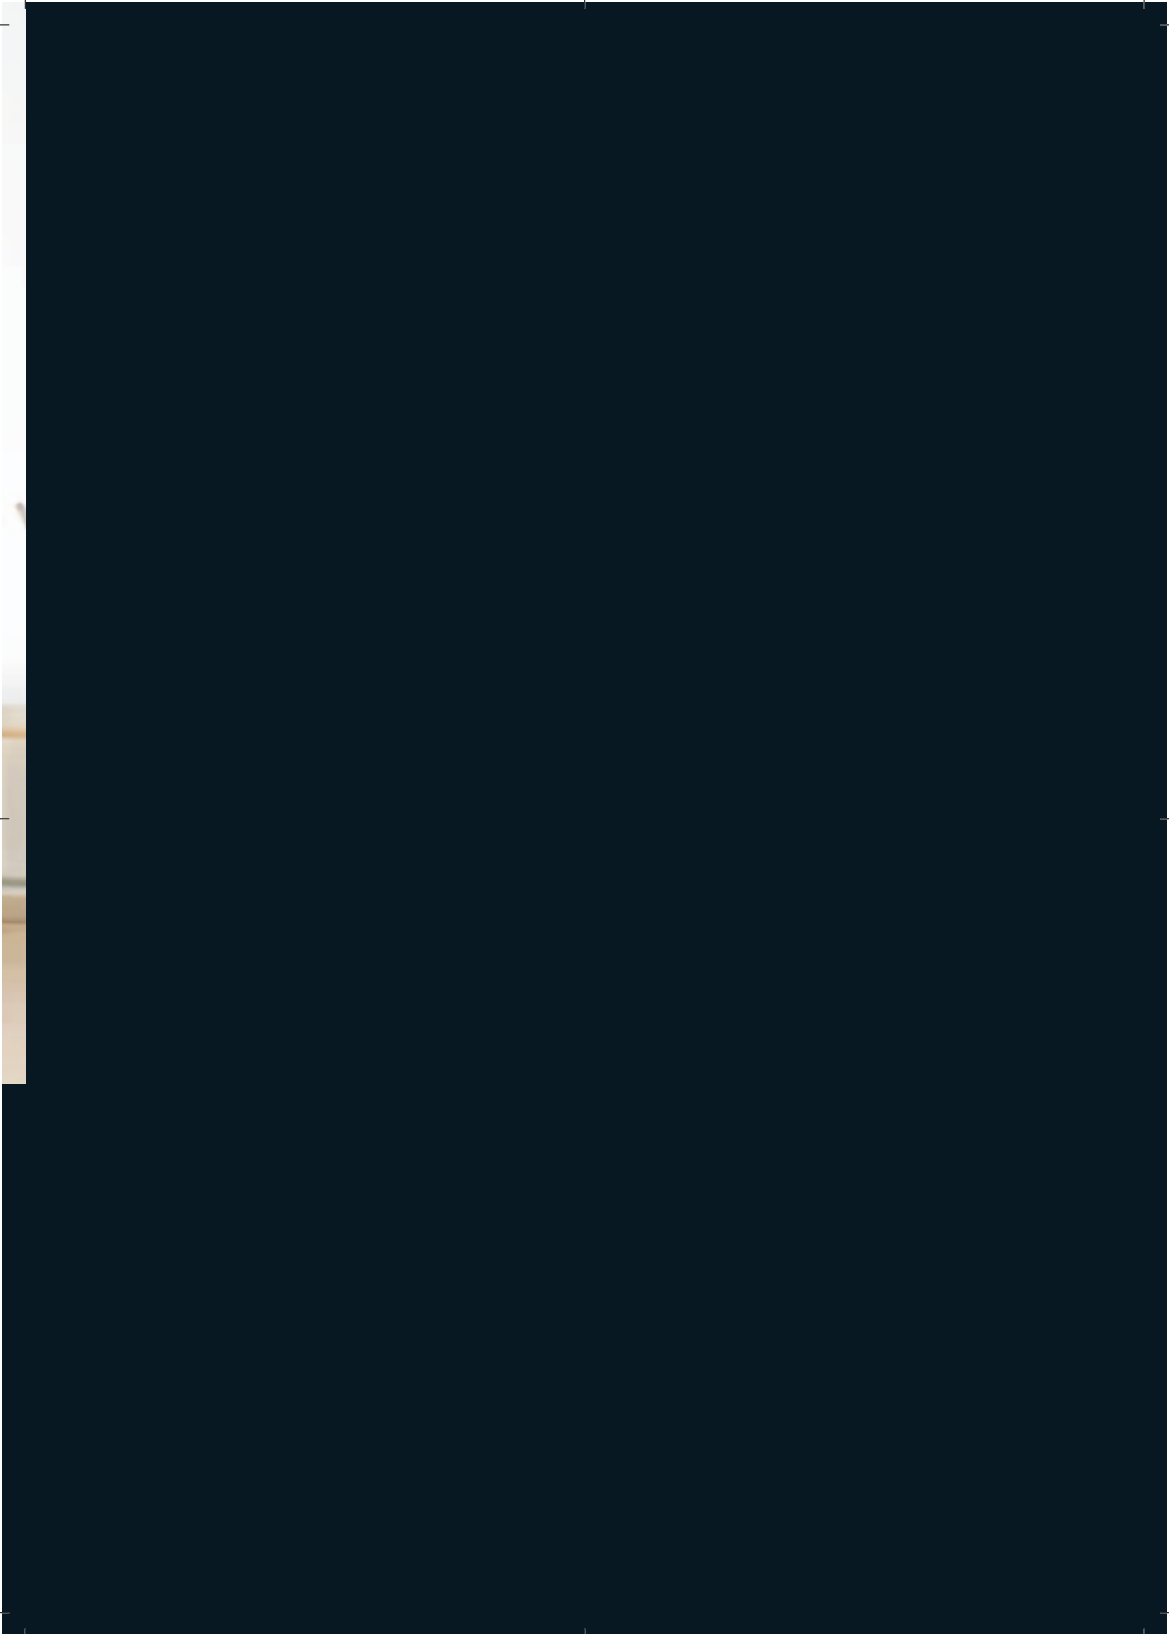

KH 1550



Toaster KH 1550	Page
Proper use	4
Technical information	4
Operating features and controls	4
Important safety advice	4
Advice for use	5
Before using the toaster for the first time	5
Setting the browning control (toasting timer)	5
Toasting	5
Interrupting the toasting process	6
Warming function	6
Thawing function	6
Crumb drawer	6
Bread roll holder	6
Cleaning and maintenance	7
Disposal	7
Warranty and service	7

Read the operating instructions carefully before using the appliance for the first time and preserve this booklet for later reference. Hand over the manual to anyone, whom you pass on the appliance to.

KH 1550

Toaster KH 1550

Proper use

This toaster is intended for home use of toasting slices of bread, rolls and toasted waffles. It is not intended for use with other foods, other materials or commercial or industrial use. Any other use or modification shall be deemed improper use and could give rise to considerable dangers.

Technical information

Nom. voltage: 220 - 240V ~ 50 Hz

Nom. power input: 1300 - 1500 W

Operating features and controls

- ① Bread roll warmer
- ② Control button
- ③ Stop button for cancelling the toasting process (cancel)
- ④ Button for warming function (reheat)
- ⑤ Button for defrosting function (defrost)
- ⑥ Browning control (for infinitely controllable electronic toasting timer)
- ⑦ Crumb drawer
- ⑧ Bread roll warmer button
- ⑨ Toasting slot

Important safety advice

Please observe the following instructions to avoid the hazard of electrical shock:

- Never put cutlery or other metallic objects into the toaster slits.
- Never allow the toaster to come into contact with water as long as the plug is in the socket (especially if you use it in a kitchen near the sink).
- Please ensure that the power cable never gets wet or moist when the toaster is in use. Never allow it to get pinched or otherwise damaged. Should the power cable or the plug get damaged, have the customer service replace it before you use the toaster again.
- Always pull the plug out of the socket after use to make sure it is not used unintentionally.

Please observe the following instructions to avoid the hazard fire or injury.

- The toaster parts may get hot when in use. Therefore, only touch the operating elements.
- Pasta can catch fire. Therefore, never put the toaster under flammable objects, especially flammable curtains.
- Never cover the toaster when it is being used.
- Never leave the toaster alone when it is being used.
- Do not allow children or infirm persons handle heat-generating household appliances without supervision because they may not always be able to correctly assess potential hazards.
- Only use the toaster on a stable, non-slip and flat surface.

Advice for use

- Older, drier bread toasts quicker than fresh bread. Wholemeal bread requires a higher browning setting than white bread.
- Do not use too large or over-thick slices as they are difficult for toaster to grip.
- Remove the plug from the socket during power cuts and when cleaning the toaster.
- Stuck slices can be freed using a short wooden stick (e.g. an artists' paint brush handle), so as not to touch the heating elements.
- Differences in the type of bread, moisture content and thickness of the individual slices affect the browning action of the toaster. Bread for toasting should be kept in a sealed package if possible.

Before using the toaster for the first time

Operate the toaster at least five times at the maximum setting without toast. For advice on cleaning the toaster, please read »Cleaning and maintenance«.

Please note: the control button will only engage when the mains supply is connected. When the toaster is first used a slight smell may be noticed (and there may be a small amount of smoke). This is normal and only lasts for a short time. Ensure there is adequate ventilation.

Setting the browning control (toasting timer)

The desired browning setting can be chosen from 'light' to 'dark' using the variable control knob ⑥ to set the toasting timer.

Toasting

- After setting the browning control, insert the bread into the toasting slot ⑨.
- Press down the control button ②.
- The KH 1550 automatic bread centring feature centres the inserted slice in the toasting slot ⑨.
- When the required browning level is reached, the toaster switches itself off automatically and then raises the toast.
- The KH 1550 has a toast removal lever, which gives you a simple and safe way of removing hot slices of toast from the toaster slot ⑨. Just slide the lever ② upwards.
- To achieve the same degree of browning over several consecutive toasting cycles, wait for about 1 to 1,5 minutes between each toasting cycle.
- Do not cover the slots ⑨ when using the toaster.

KH 1550

Interrupting the toasting process

If you wish to interrupt the toasting process, press the stop button ③. The toaster switches off.

Warming function

The warming function ④ allows you to warm bread without toasting it. This function can be selected in the illuminated operating button display.

- Insert the bread and press down the operating button ②.
- Press the button for the warm-up function ④.
- The toaster automatically shuts off and the slices of bread are raised.

Thawing function

By selecting the thawing function ⑤ you can thaw frozen sliced bread. This function can be selected in the illuminated operating button display.

- Insert the bread and press down the control button ②.
- Press the button for the thawing function ⑤.
- The toaster automatically shuts off and the slices of bread are raised.

- ① Depending on the selected degree of toasting, the bread will be just thawed or thawed and toasted.

Crumb drawer

The crumb drawer ⑦ collects any crumbs that fall down during toasting. To remove the crumbs, pull the crumb drawer ⑦ out to the side.

Bread roll holder

- Never place the rolls directly on top of the toaster. Always use the bread roll holder ①.
- Press the bread roll warmer button ⑧ down, until it is fully extended.
- Place the rolls on top and start the toasting process. Set the browning control ④ to 3 at the most.

- ① Place the bread roll onto the bread roll rack in such a way that it cannot fall through the wires of the rack. The rolls are very hot after the toasting process.

- As soon as the toaster switches itself off, turn over the rolls and switch the toaster on again.
- Return the bread roll warmer ① to its original position by pushing the bracket for the bread roll warmer ⑧ back up again.

Cleaning and maintenance

- **Warning!** Before cleaning remove the mains plug and let the toaster cool.
- **Warning!** For electrical safety reasons do not allow the toaster to come into contact with or be immersed in liquids.
- Do not use harsh or abrasive cleaners.
- Clean the housing with a dry or slightly damp cloth.
- Clean the crumb drawer ⑦ regularly to avoid the risk of fire.

Disposal



Do not throw the device in your normal domestic waste.

Dispose of the appliance through an approved disposal centre or at your community waste facility. Observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre.



Dispose of the packaging materials in an environmentally responsible manner.

Warranty and service

The warranty conditions and service centre address for your country are provided on the warranty card.

KOMPERNASS GMBH
BURGSTRASSE 21
D-44867 BOCHUM
www.kompernass.com

KH 1550