



bifinett



(GB) Citrus Press KH 25
Operating Instructions



Index	Page
Intended use	4
Technical Data	4
Items supplied	4
Important safety instructions	4
Appliance description	5
Set-up and assembly of the appliance	5
Juice extraction	6
Emptying	6
Disassembly	6
Cleaning and Care	7
Storage	7
Disposal	7
Warranty & Service	7
Importer	7

Read the operating instructions carefully before using the appliance for the first time and preserve this booklet for later reference. Pass the manual on to whoever might acquire the appliance at a later date.

Citrus Press KH 25

Intended use

The appliance is intended for the extraction of juices from citrus fruits such as oranges and lemons. Only foodstuffs may be processed with the appliance. All other usages or modifications are regarded as contrary to the operating instructions and contain a great risk of accidents.

The manufacturer accepts no liability for damage(s) resulting from usage that is contrary to these instructions.

Not for commercial use.

Technical Data

Mains voltage:	220-240 V~ 50 Hz
Rated output:	25 W

Items supplied

Citrus Press
Large squeezing cone
Small squeezing cone
Fruit pulp sieve (2 parts)
Operating instructions
Warranty card

Important safety instructions

To avoid potentially fatal electric shocks:

- The rating of the local power supply must tally completely with the details given on the rating plate of the appliance.
- Arrange for defective power plugs and/or cables to be replaced at once by qualified technicians or our Customer Service Department.
- Arrange for damaged or malfunctioning appliances to be inspected and/or repaired by a qualified specialist or the Customer Service Department as soon as possible.
- Do not expose the appliance to rain and never use it in a humid or wet environment. Ensure that the power cable never becomes moist or wet during operation.

To avoid the risks of fire and burn injuries:

- This appliance is not suitable for children or for those whose physical, sensorial or intellectual faculties prevent the safe usage of the appliance without support or supervision. Children should be supervised to ensure that they do not play with the appliance.
- Provide for a safe and slip-free positioning of the appliance.
- Ensure that the power plug is easily accessible in the event of danger, and that there is no danger of anyone tripping over the power cable.

Using the appliance safely:

- In the event of danger, immediately remove the power plug from the wall socket.
- Never use the appliance for purposes other than those for which it was designed.
- Remove the power plug from the wall socket when the appliance is not in use, when you remove parts and before cleaning the appliance.
- Do not use the appliance outdoors.

Appliance description

- ① Lid
- ② Large squeezing cone
- ③ Small squeezing cone
- ④ Upper fruit pulp sieve
- ⑤ Fruit pulp regulator
- ⑥ Lower fruit pulp sieve
- ⑦ Juice collector
- ⑧ Drive axle
- ⑨ Power cable with power plug
- ⑩ Appliance plinth
- ⑪ Power cable storage

Set-up and assembly of the appliance

⚠ Important: Ensure that the power plug is not in the power socket before assembling the appliance.

1. Unwind the power cable ⑨ completely from the cable storage ⑪ and secure it in the lateral recess on the appliance plinth ⑩.
2. Place the appliance plinth ⑩ on a level and slip-free surface.

❗ Note: Rinse all removable components thoroughly before the first usage of the appliance (see chapter "Cleaning and care").

3. Place the juice collector ⑦ on the drive axle ⑧ of the appliance plinth ⑩ and turn it clockwise as far as it will go.
4. Place both parts of the fruit pulp sieve ④/⑥ into each other so that the fruit pulp regulator ⑤ protrudes through the recess. Both parts must audibly engage.
5. Place the assembled fruit pulp sieve ④/⑥ on the juice collector ⑦. The fruit pulp regulator ⑤ must lie on the grip and catch in the rabbet on the grip.
6. Press the small squeezing cone ③ on the drive axle ⑧ so that it engages.

❗ Note: If you want to press oranges or other larger fruits, place the large squeezing cone ② over the small squeezing cone ③. Ensure that the lobes of the small squeezing cone ③ engage in the recesses of the large squeezing cone ②.

7. Insert the power plug into a wall power socket. The appliance is now ready for use.

Juice extraction

1. Adjust the fruit pulp regulator ⑤, by sliding it, so that the slits in the fruit pulp sieve ④/⑥ lie exactly above each other if you wish to have fruit juice with fruit pulp. Adjust the fruit pulp regulator ⑤, by sliding it, so that the slits in the fruit pulp sieve ④/⑥ are not lying above each other if you do not wish to have fruit juice with fruit pulp.
2. Cut the fruits in half (orange, lemon etc.)
3. Press the halved fruit lightly onto the squeezing cone ②/③. The appliance switches itself on automatically as soon as the squeezing cone ②/③ is pressed down.
4. Apply pressure at various parts of the fruit rind with your fingers. Thereby the juice will be evenly squeezed out of the fruit.
5. When no more juice flows from the fruit, stop applying pressure to the squeezing cone ②/③. The appliance stops.
6. Press the squeezing cone ②/③ down repeatedly to loosen it, until it turns in the opposite direction.
7. When no more juice flows from the fruit, stop applying pressure to the squeezing cone ②/③. The appliance stops. Remove the fruit skin from the squeezing cone ②/③.
8. Continue similarly with further fruit-halves until you have squeezed out the desired volume of fruit juice. The current volume squeezed can be read off from the scale on the side of the juice collector ⑦.

i Note: When pressing out juice, do not exceed the 600 ml volume marking on the scale of the juice collector ⑦.

Emptying

⚠ Important: Remove the power plug from the wall socket when you empty the fruit pulp sieve or the juice collector ⑦.

- Turn the juice collector ⑦ anti-clockwise until the perceptible resistance desists. You can now lift it from the drive axle ⑧ and pour the juice out.

Disassembly

If you wish to disassemble the Citrus Press, e.g. for the cleaning of it, proceed as follows:

1. Remove the power plug from the wall socket ⑨.
2. Remove the squeezing cone ②/③.
3. Remove the fruit pulp sieve ④/⑥. Press the hook on the underside of the upper fruit pulp sieve ④ inwards. At the same time exert light pressure on the fruit pulp sieve ⑤. The components allow themselves to be pressed apart.
4. Turn the juice collector ⑦ anti-clockwise until the perceptible resistance desists. You can now lift it from the drive axle ⑩.

Cleaning and Care

- ⚠ Important:** Always remove the power plug from the wall socket before cleaning the appliance.
- ⚠ Important:** To avoid receiving an electrical shock, NEVER submerge the appliance plinth ⑩ in water or other fluids.
- Disassemble the Citrus Press as described in the chapter "Disassembly".
 - Clean the appliance plinth ⑩ only with a slightly moistened cloth.
 - Clean all other removable parts in a warm mild-detergent solution and dry them carefully.
 - To clean the fruit pulp sieve ④/⑥, take it apart and clean it with a dishwashing brush under running water.
- ❗ Note:** Do not use aggressive detergents to clean the appliance. The appliance and its components may not be cleaned in a dishwasher or in boiling water.

Storage

If you do not intend to use the appliance for an extended period, wrap the power cable ⑨ around the power cable storage ⑪, directing the end of the cable through the lateral recess on the appliance plinth ⑩. Assemble the appliance completely and close the lid.
Store the appliance at a clean and dry location.

Disposal



Do not dispose of the appliance in your normal domestic waste.

Observe the currently applicable regulations. In case of doubt, please contact your waste disposal centre.



Dispose of the packaging materials in an environmentally responsible manner.

Warranty & Service

The warranty conditions and the service address can be found on the supplied warranty card.

Importer

KOMPERNASS GMBH
BURGSTRASSE 21
D-44867 BOCHUM
www.kompernass.com