 


LifeFitness

Arctic Silver 93R Recumbent Bike

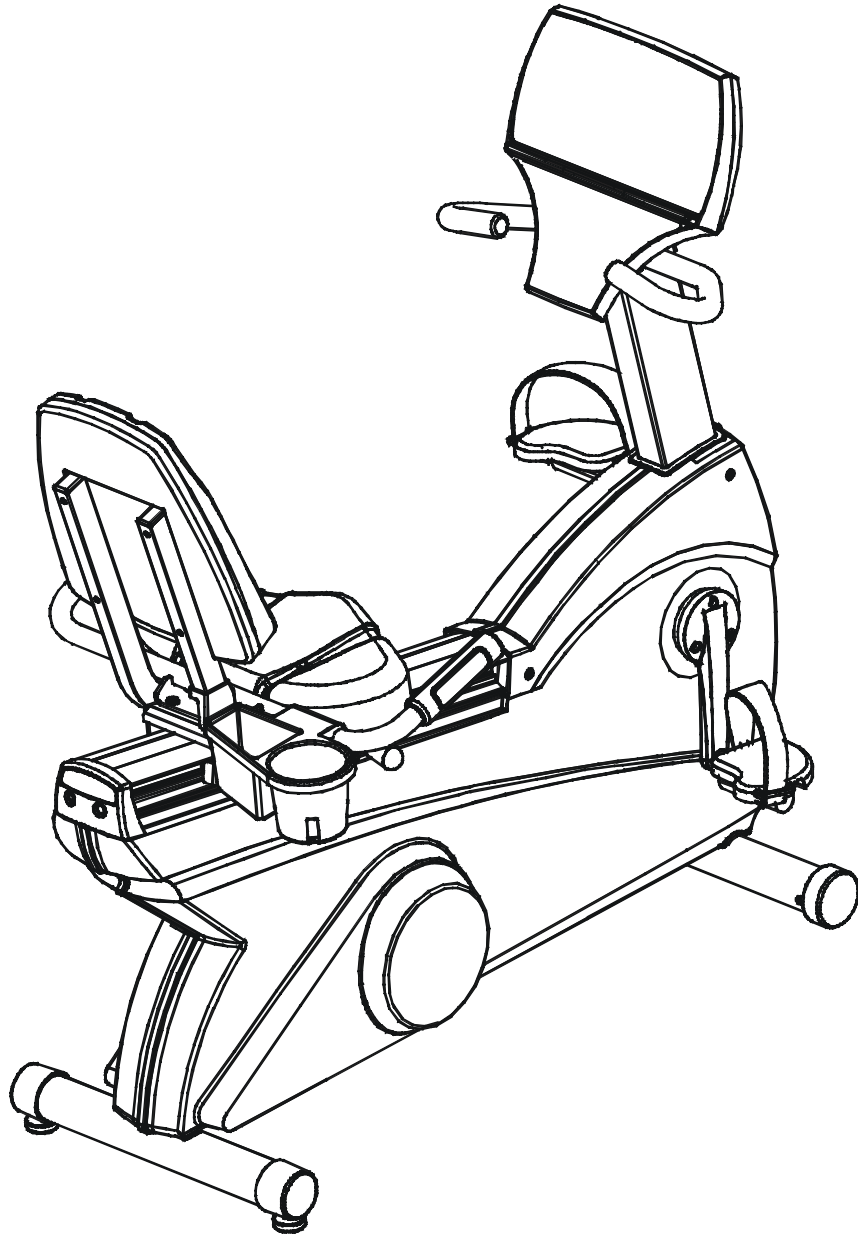

Customer Support Services
PARTS MANUAL revised 29 Apr 2008

OPERATION MANUAL – (ENG)	M051-00K39-A112
OPERATION MANUAL – (F,S,P)	M051-00K39-A113
OPERATION MANUAL – (G,D,I)	M051-00K39-A114
OPERATION MANUAL – (JAP)	M051-00K39-A115
NETWORK C-SAFE KIT	GK63-00002-0003
HARDWARE BAG	GK39-00002-0008
TOUCH UP PAINT: SPRAY CAN	0017-00008-0204
.5 OZ BOTTLE W/APPLICATOR	0017-00008-0205
.33 OZ PEN	0017-00008-0206
ACCESS PANEL ASSEMBLY CONSISTS OF: 90" COAX CABLE	AK39-00093-0000
120" POWER EXT. CABLE ASSY.	AK32-00020-0001
POWER/COAX INPUT BRACKET	AK32-00078-0001
F-TYPE CONNECTOR	0K39-01087-0000
	0017-00021-2846
SERVICE MANUAL	M051-00K39-A012


NOTE: When this model is ordered with an attachable LCD TV it becomes a 93RER-0XXX-04. See the Entertainment parts list marked LCD-0XXX-02 for the part numbers and descriptions for the attachable LCD TV, remote and hardware for this product.

	Page
CONSOLE COMPONENTS	4
CONSOLE SUPPORT ASSEMBLY	5
SHROUDS, END CAP, CRANKARMS AND PEDALS	6
BELTS AND 6V BATTERY	7
RESISTOR ASSEMBLY	8
POWER CONTROL BOARD	9
ALTERNATOR W/PULLEY	10
CRANKSHAFT AND BEARING ASSEMBLY	11
INTERMEDIATE SHAFT AND BEARING ASSEMBLY	12
IDLER BRACKET ASSEMBLY	13
SEAT ASSEMBLY	14
SEAT BOTTOM ASSEMBLY	15
SEAT FRAME ASSEMBLY	16
SEAT PADS AND ACCESSORY TRAY	17
EXTRUSION ASSEMBLY	18
SEAT LOCKING ASSEMBLY	19
WHEEL AND LEVELER	20
CABLES	21


The -04 version of the 93R has both Life Pulse sensors and Telemetry for reading Heart Rate. In addition it is pre-wired for attachable LCD TV's.

ARCTIC SILVER 93R
Console Components

 93R-0XXX-04
S/N 100000 and UP

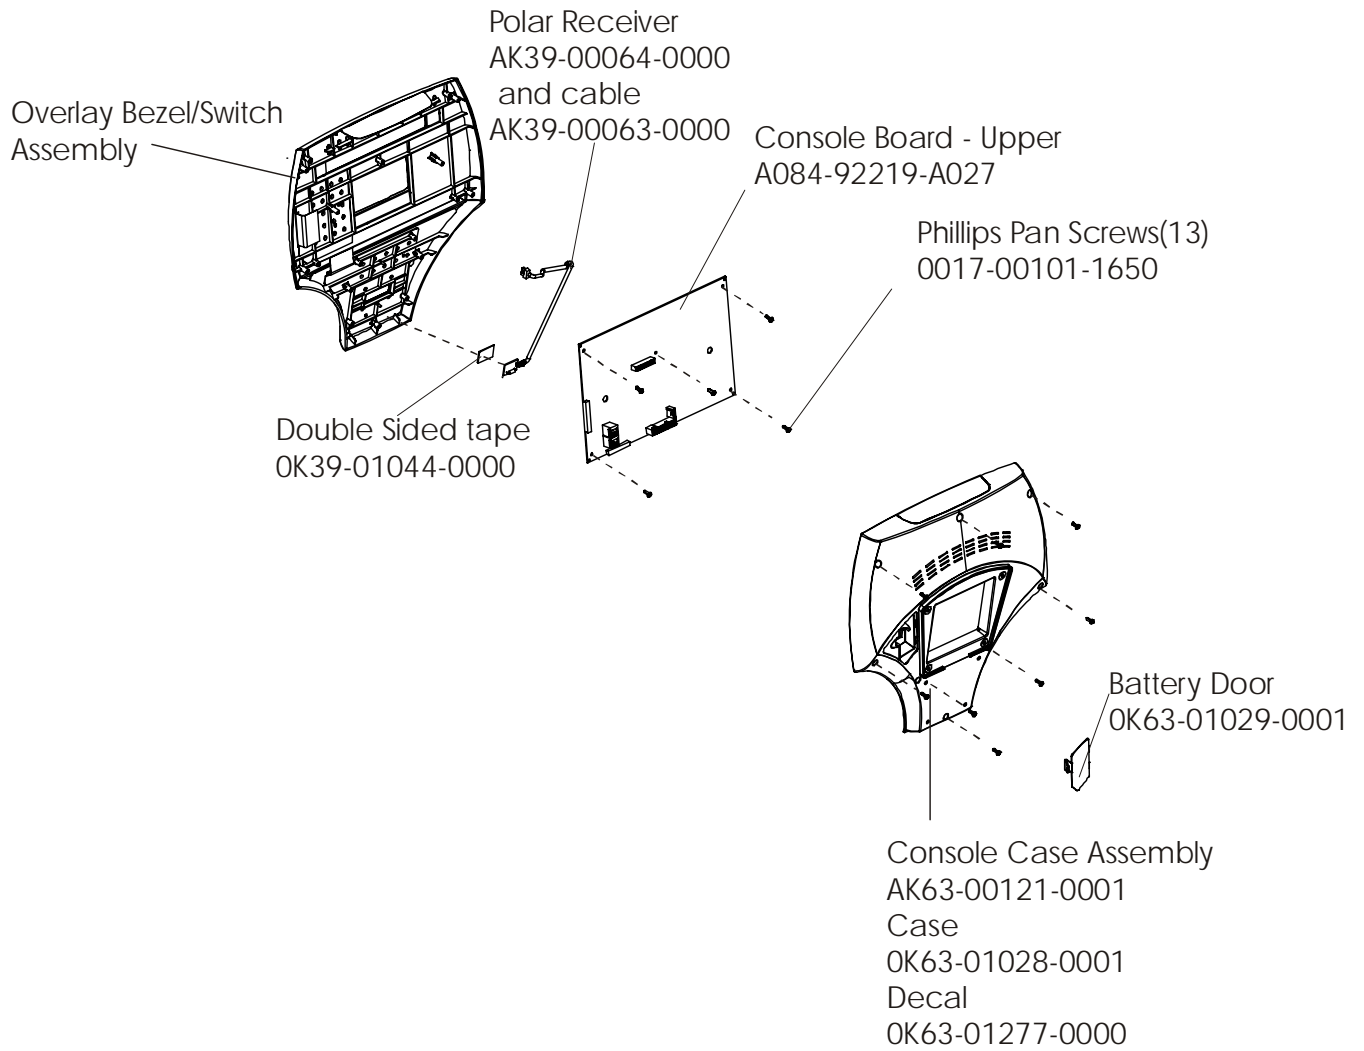


Console Assembly	Overlay/Bezel/Switch Assy.
AK39-00111-0001 Eng/LED	AK63-00166-0001 Eng Met
AK39-00111-0002 Eng/LED	AK63-00166-0001 Eng Met
AK39-00111-0003 Ger/LED	AK63-00166-0003 Ger Met
AK39-00111-0004 Spn/LED	AK63-00166-0004 Spn Met
AK39-00111-0005 Jap/LCD	AK63-00166-0005 Jap Met
AK39-00111-0006 Jap/LED	AK63-00166-0006 Jap Met
AK39-00111-0007 Frn/LED	AK63-00166-0007 Frn Met
AK39-00111-0008 Itl/LED	AK63-00166-0008 Itl Met
AK39-00111-0009 Dut/LED	AK63-00166-0009 Dut Met
AK39-00111-0010 Por/LED	AK63-00166-0010 Por Met
AK39-00111-0014 Tur/LED	AK63-00166-0001 Tur Met

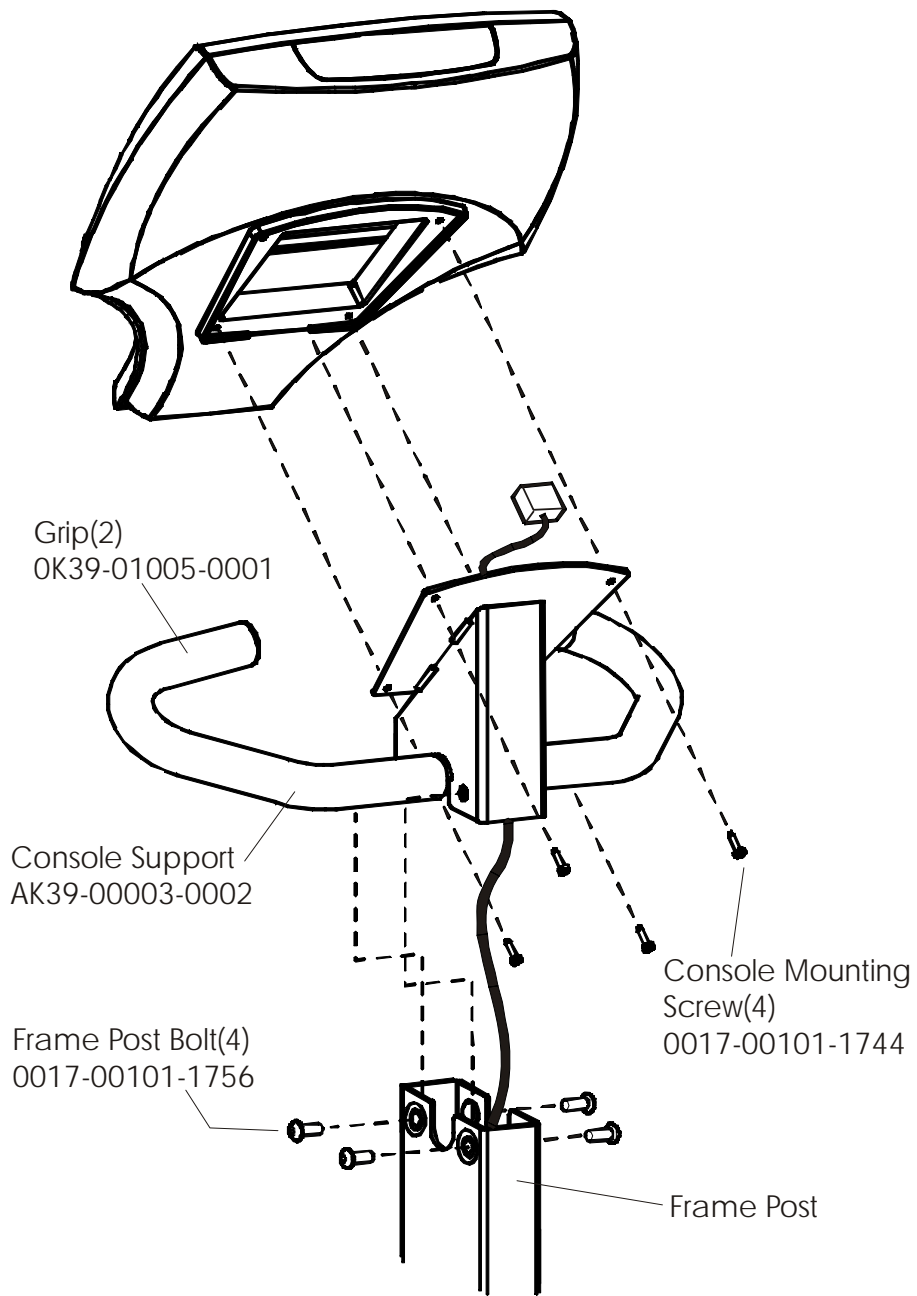 


ARCTIC SILVER 93R
Shrouds, End Cap and Pedals

 93R-0XXX-04
S/N 100000 and UP

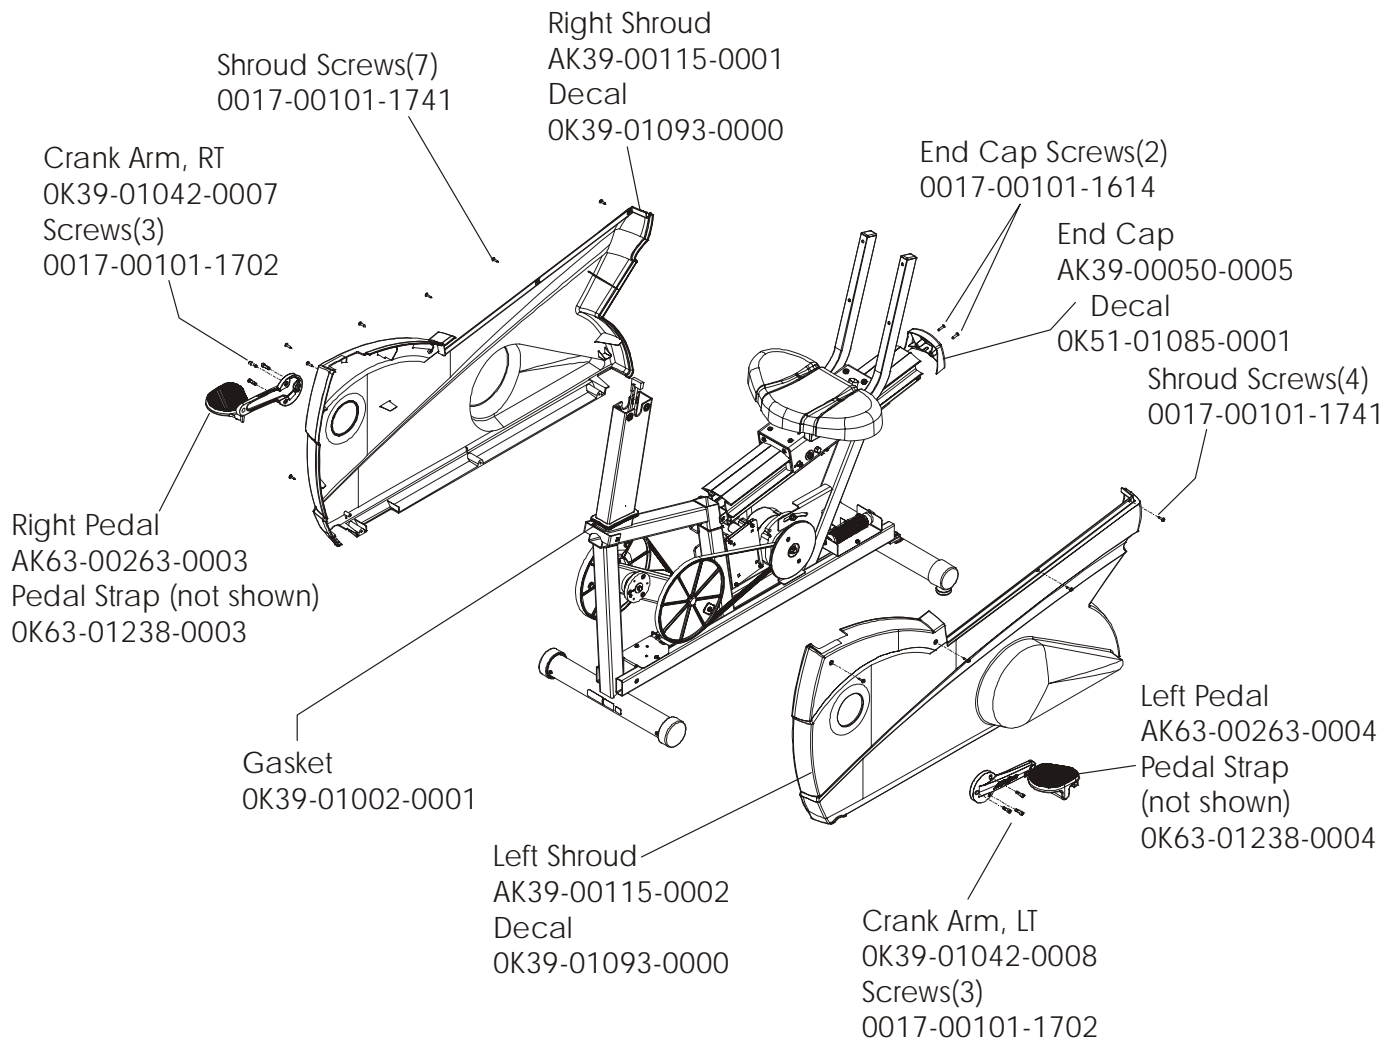


ARCTIC SILVER 93R
Belts

 93R-0XXX-04
S/N 10000 and UP

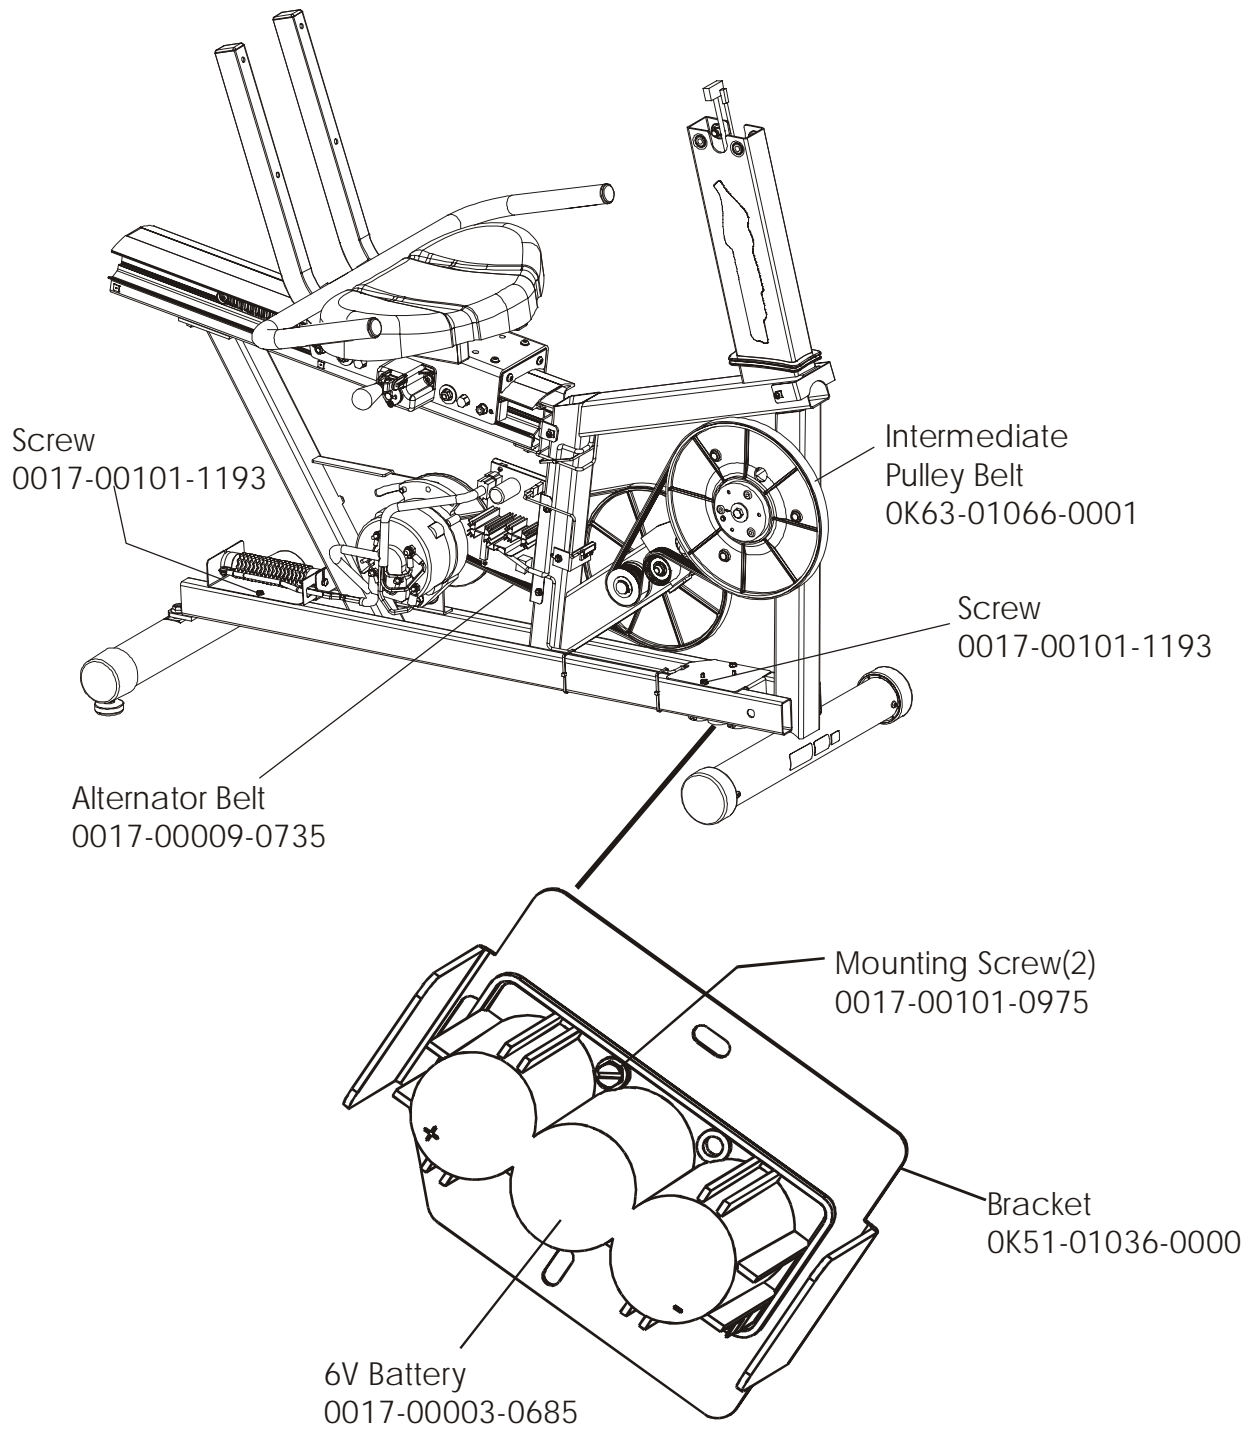

ARCTIC SILVER 93R
Resistor Assembly – AK39-00020-0002

 
93R-0XXX-04
S/N 100000 and UP

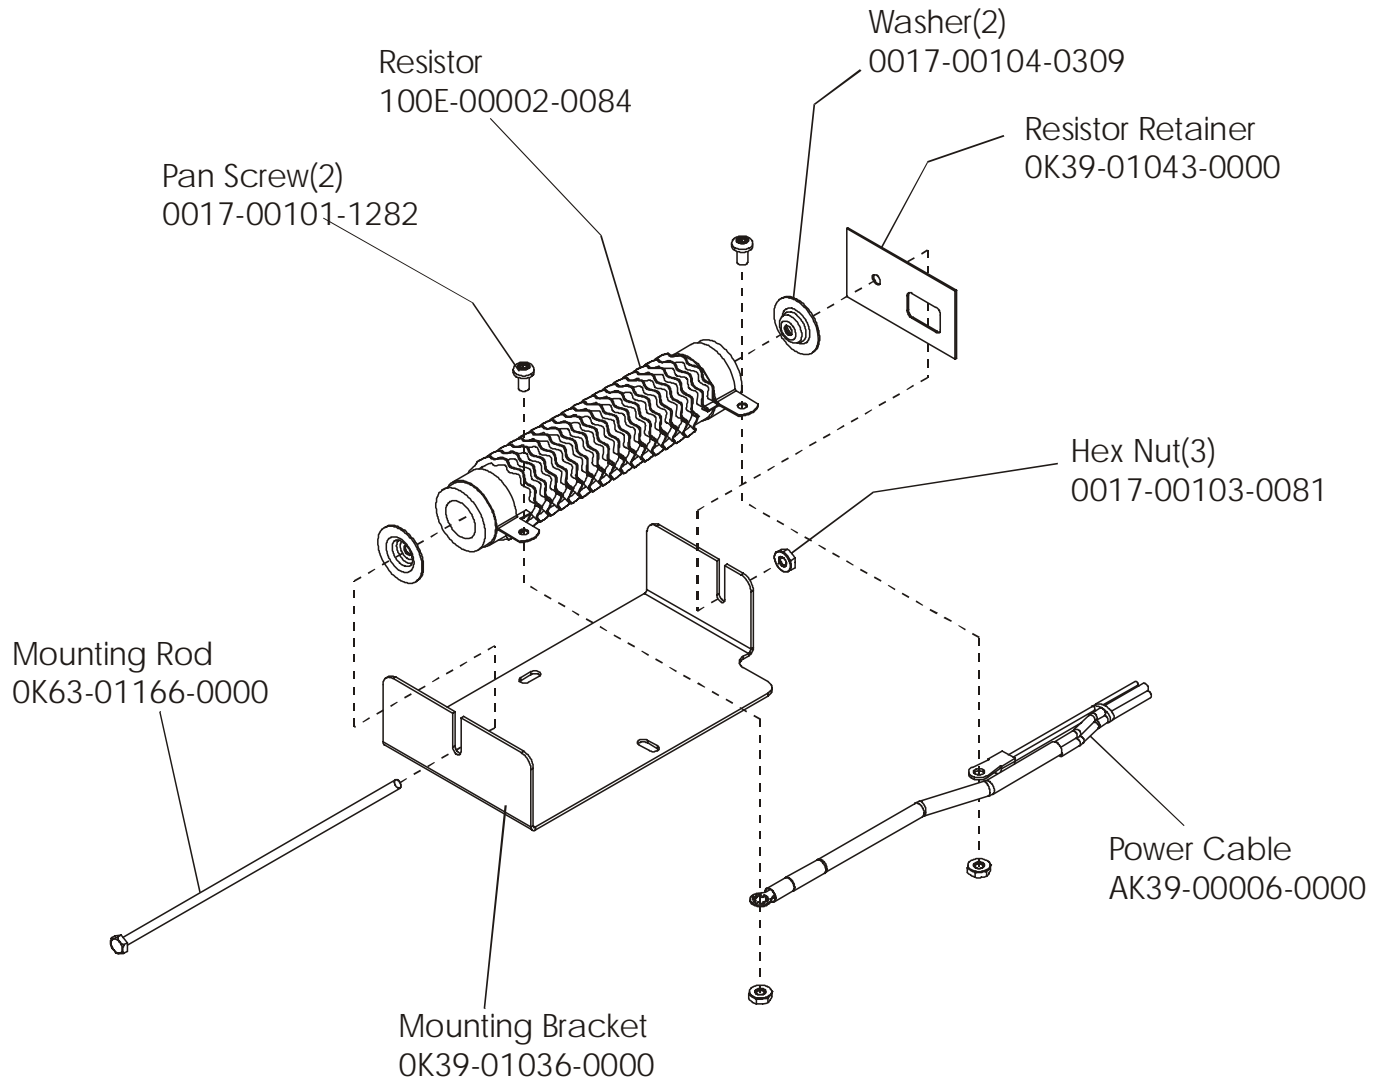

ARCTIC SILVER 93R
Power Control Board

93R-0XXX-04
S/N 10000 and UP

 
Assembly Number - AK39-00022-0001

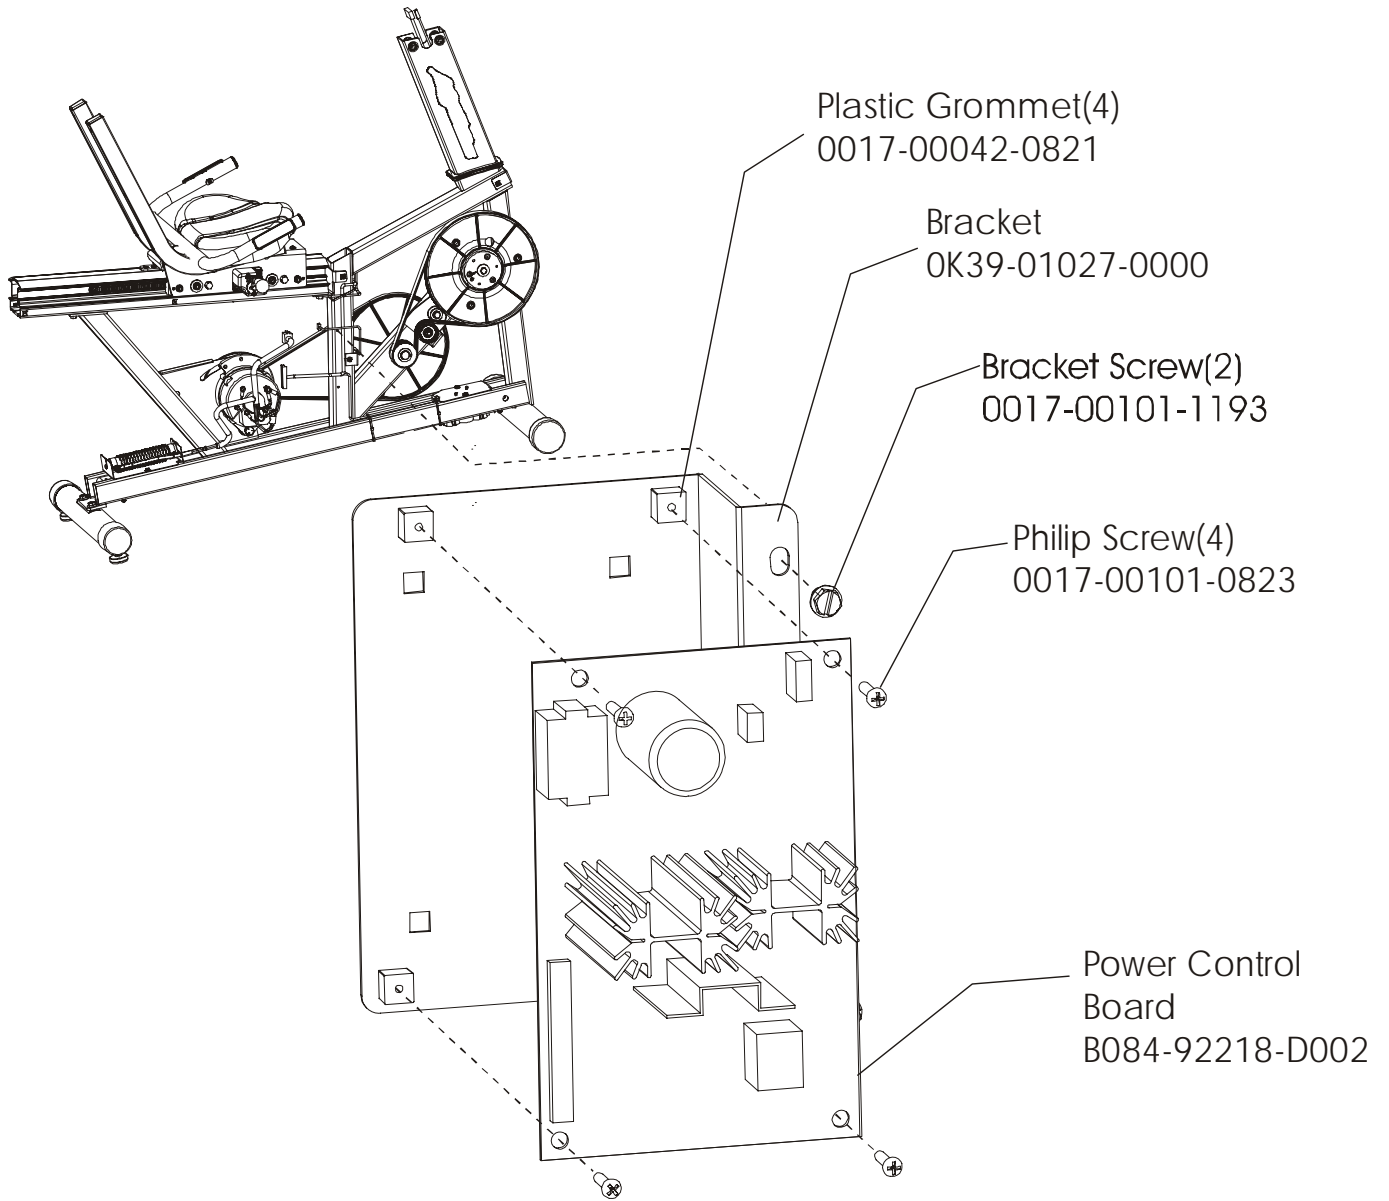

ARCTIC SILVER 93R
Alternator w/Pulley Assembly

93R-0XXX-04
S/N 10000 and UP

 
Assembly Number – AK63-00093-0000

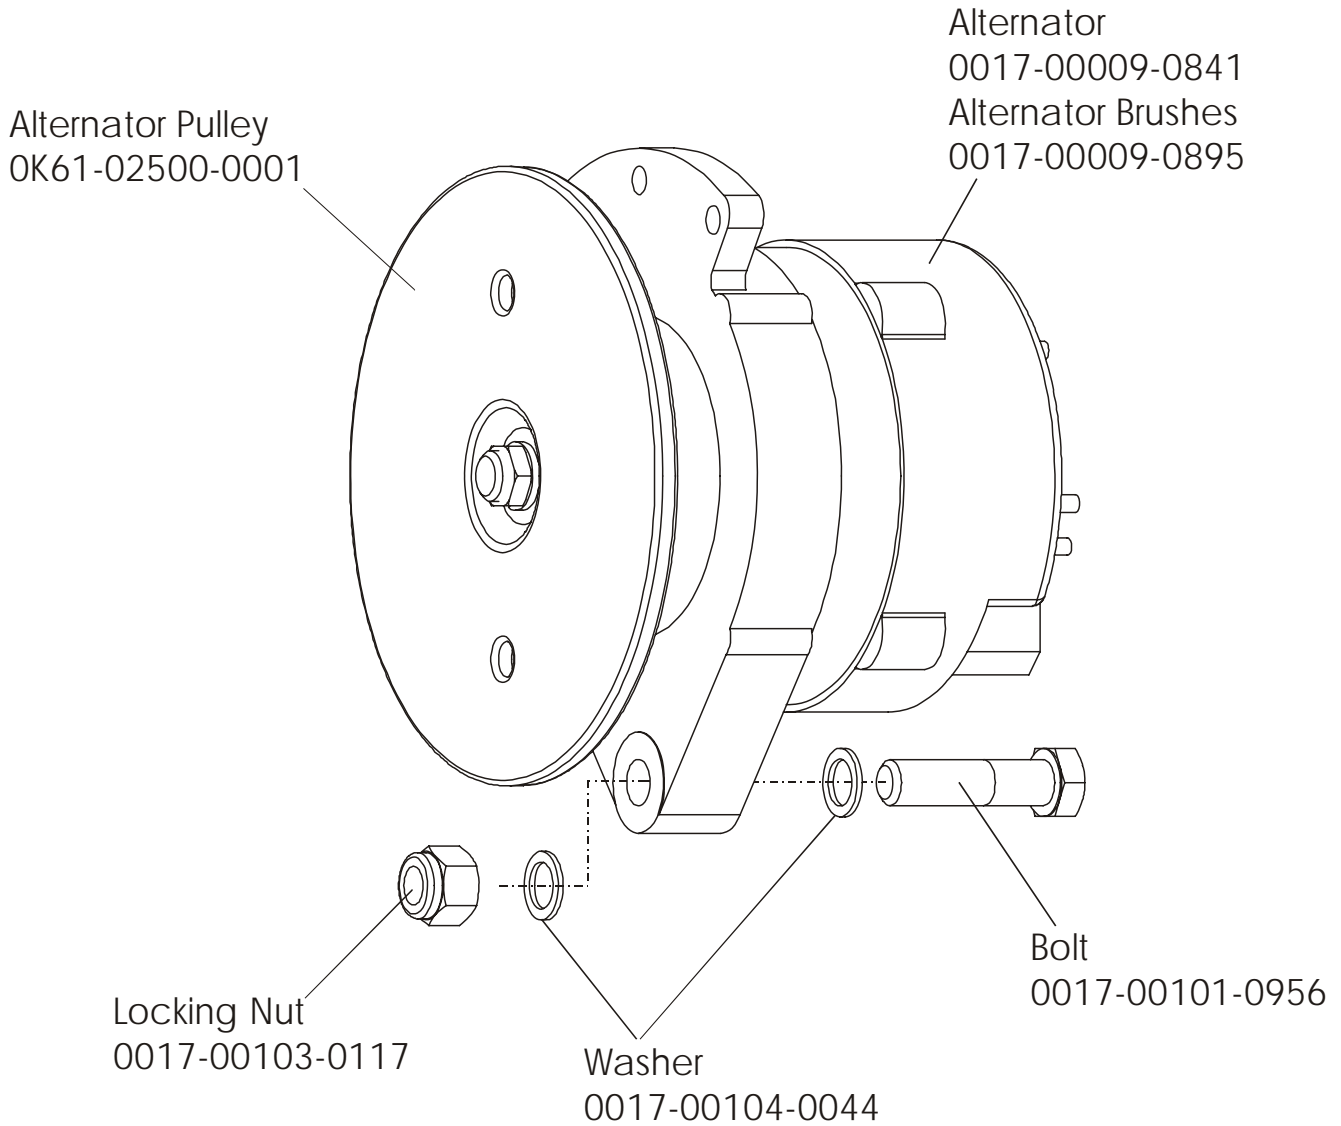

ARCTIC SILVER 93R

Crank Shaft and Bearing Assembly

 93R-0XXX-04
S/N 10000 and UP

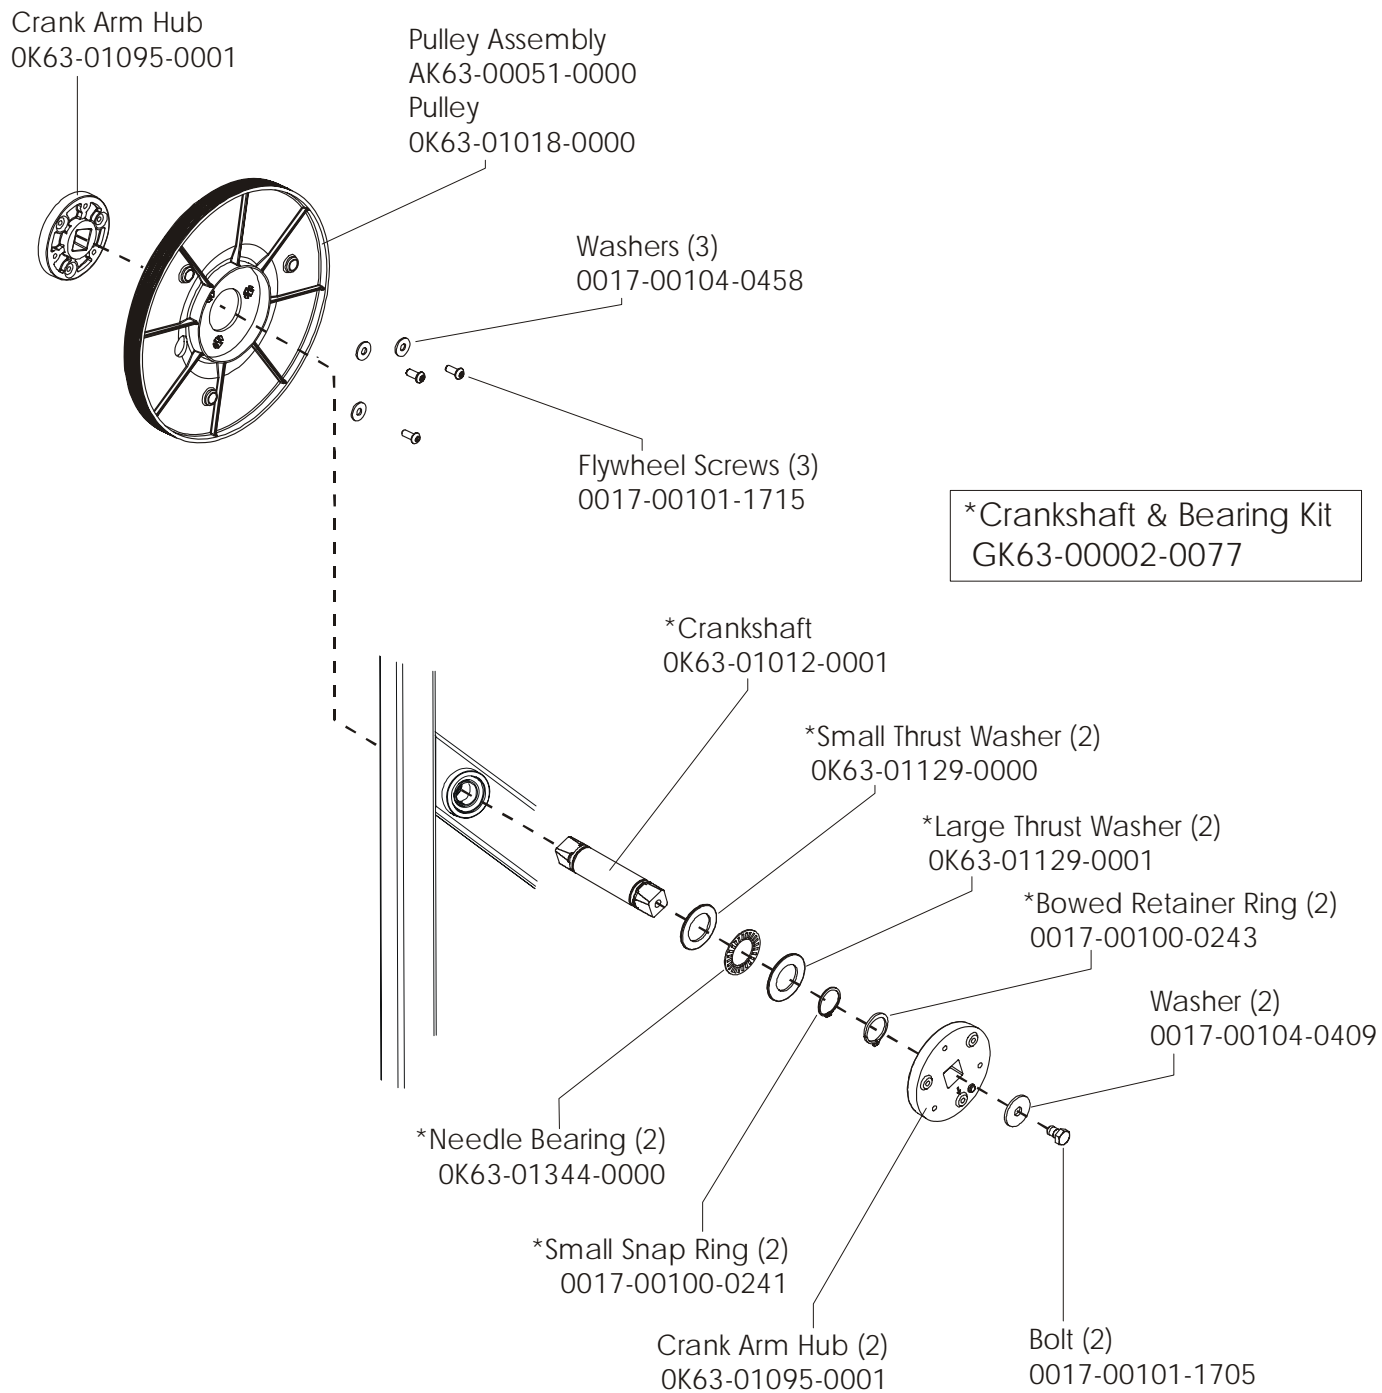


ARCTIC SILVER 93R
Intermediate Shaft and Bearing Assembly


93R-0XXX-04
S/N 10000 and UP

Clutch Assembly
AK63-00026-0000
(not included in kit)

 Magnet
118E-00001-0124
(not included in kit)

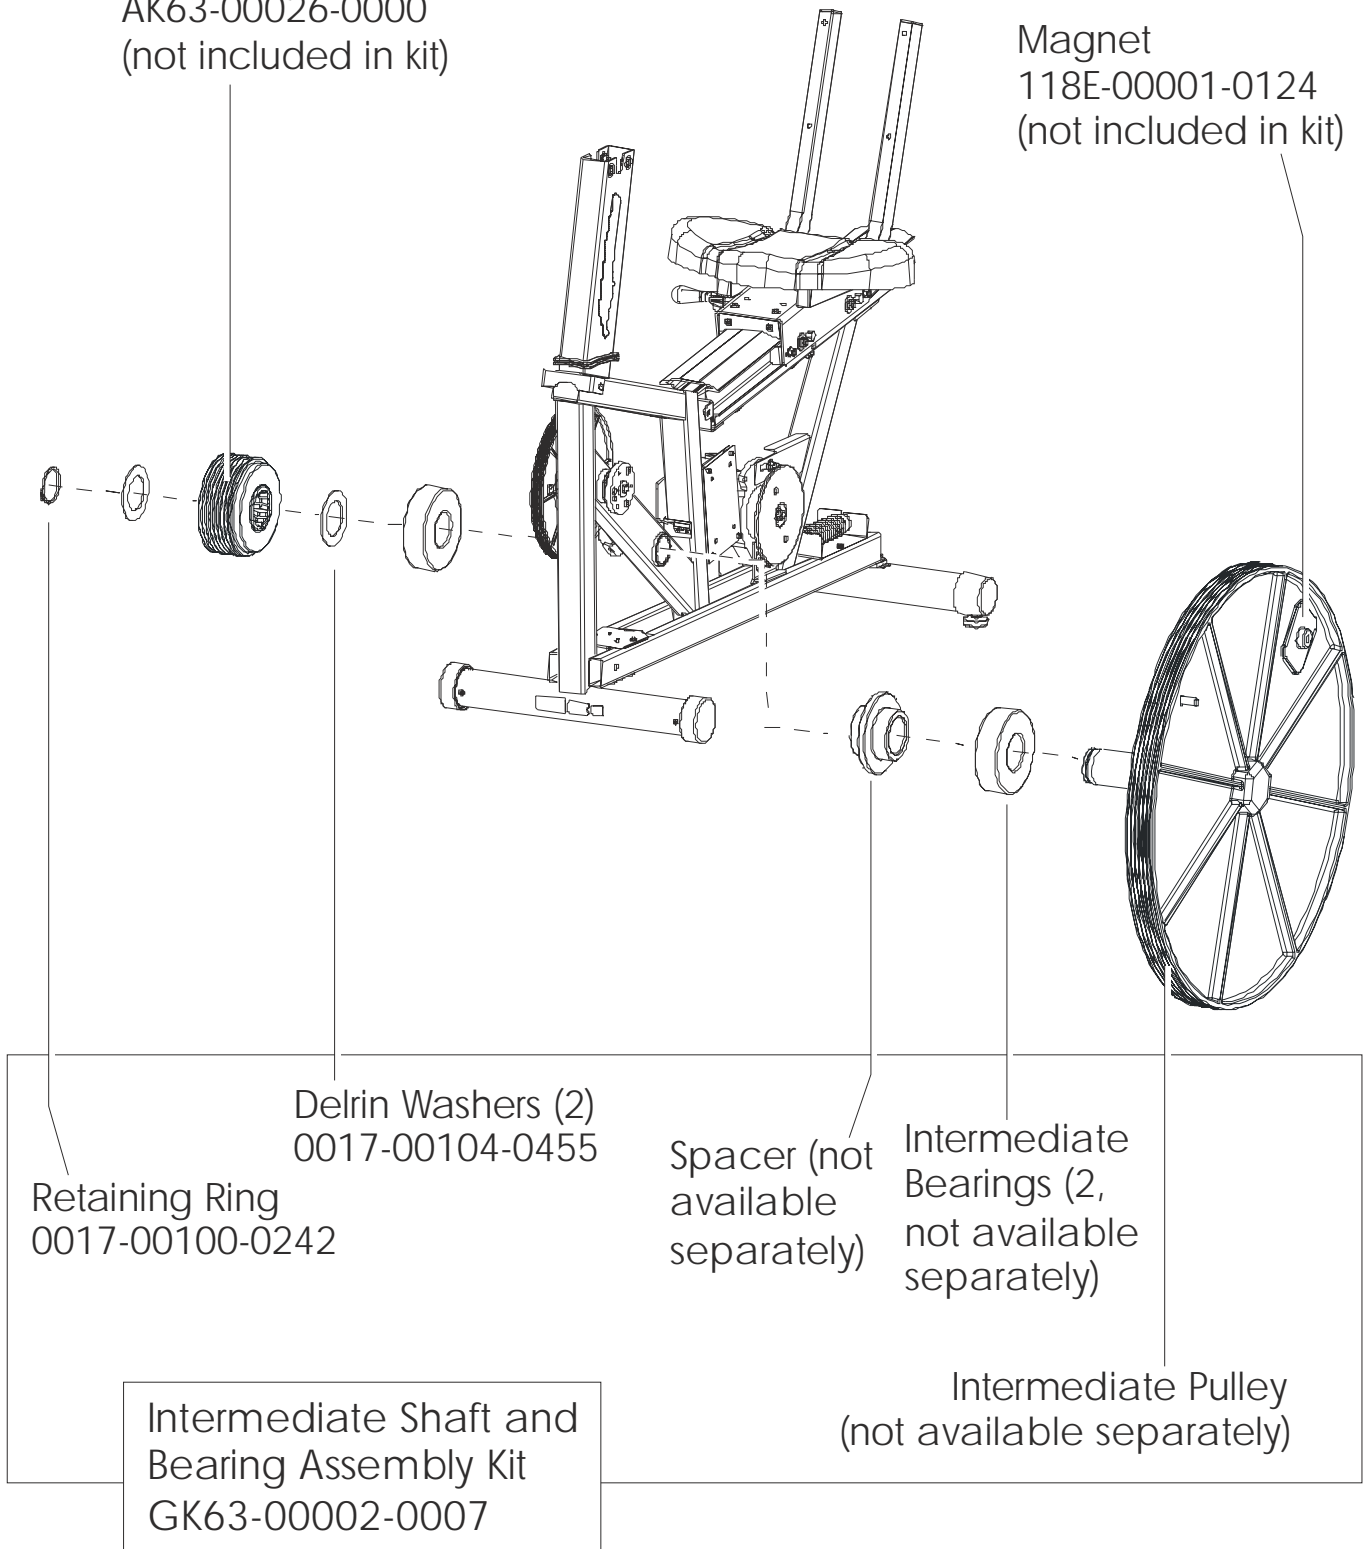


 Idler Bracket Assembly – AK63-00021-0000

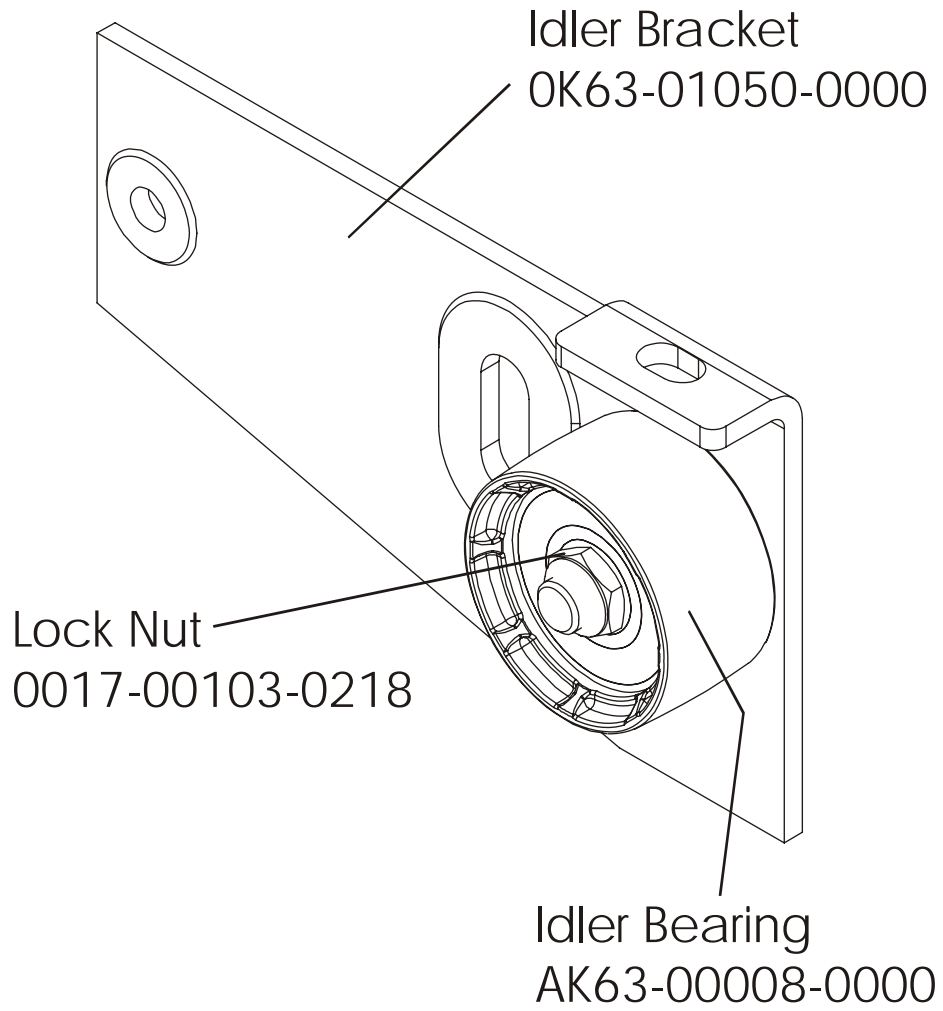


ARCTIC SILVER 93R
Seat Assembly

 93R-0XXX-04
S/N 10000 and UP

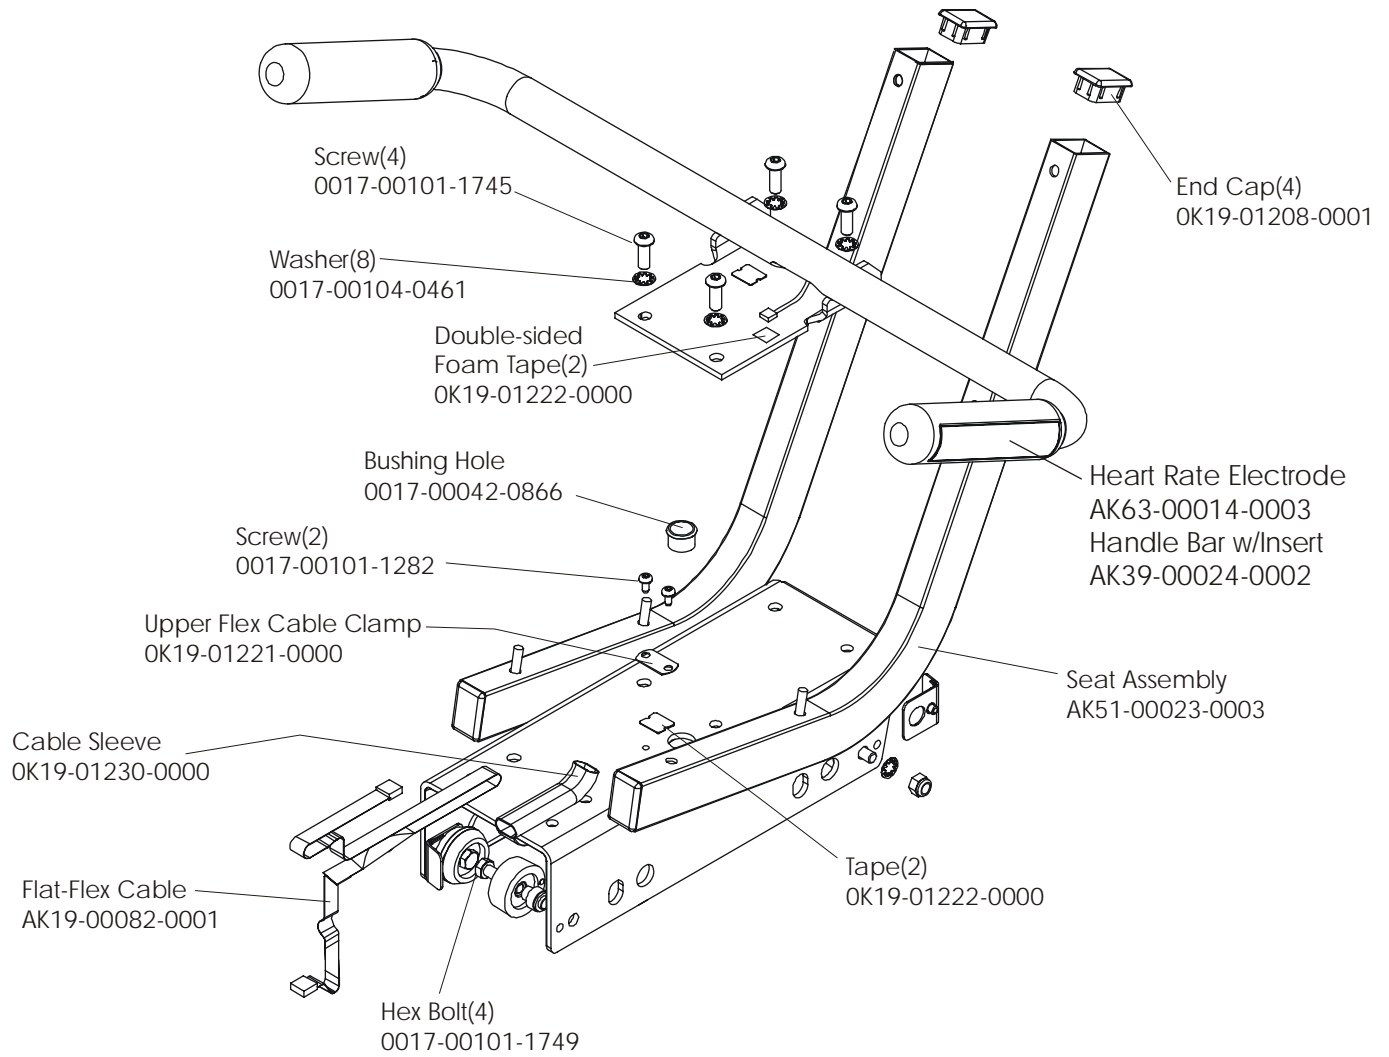


ARCTIC SILVER 93R
Seat Assembly - Bottom

 93R-0XXX-04
S/N 10000 and UP

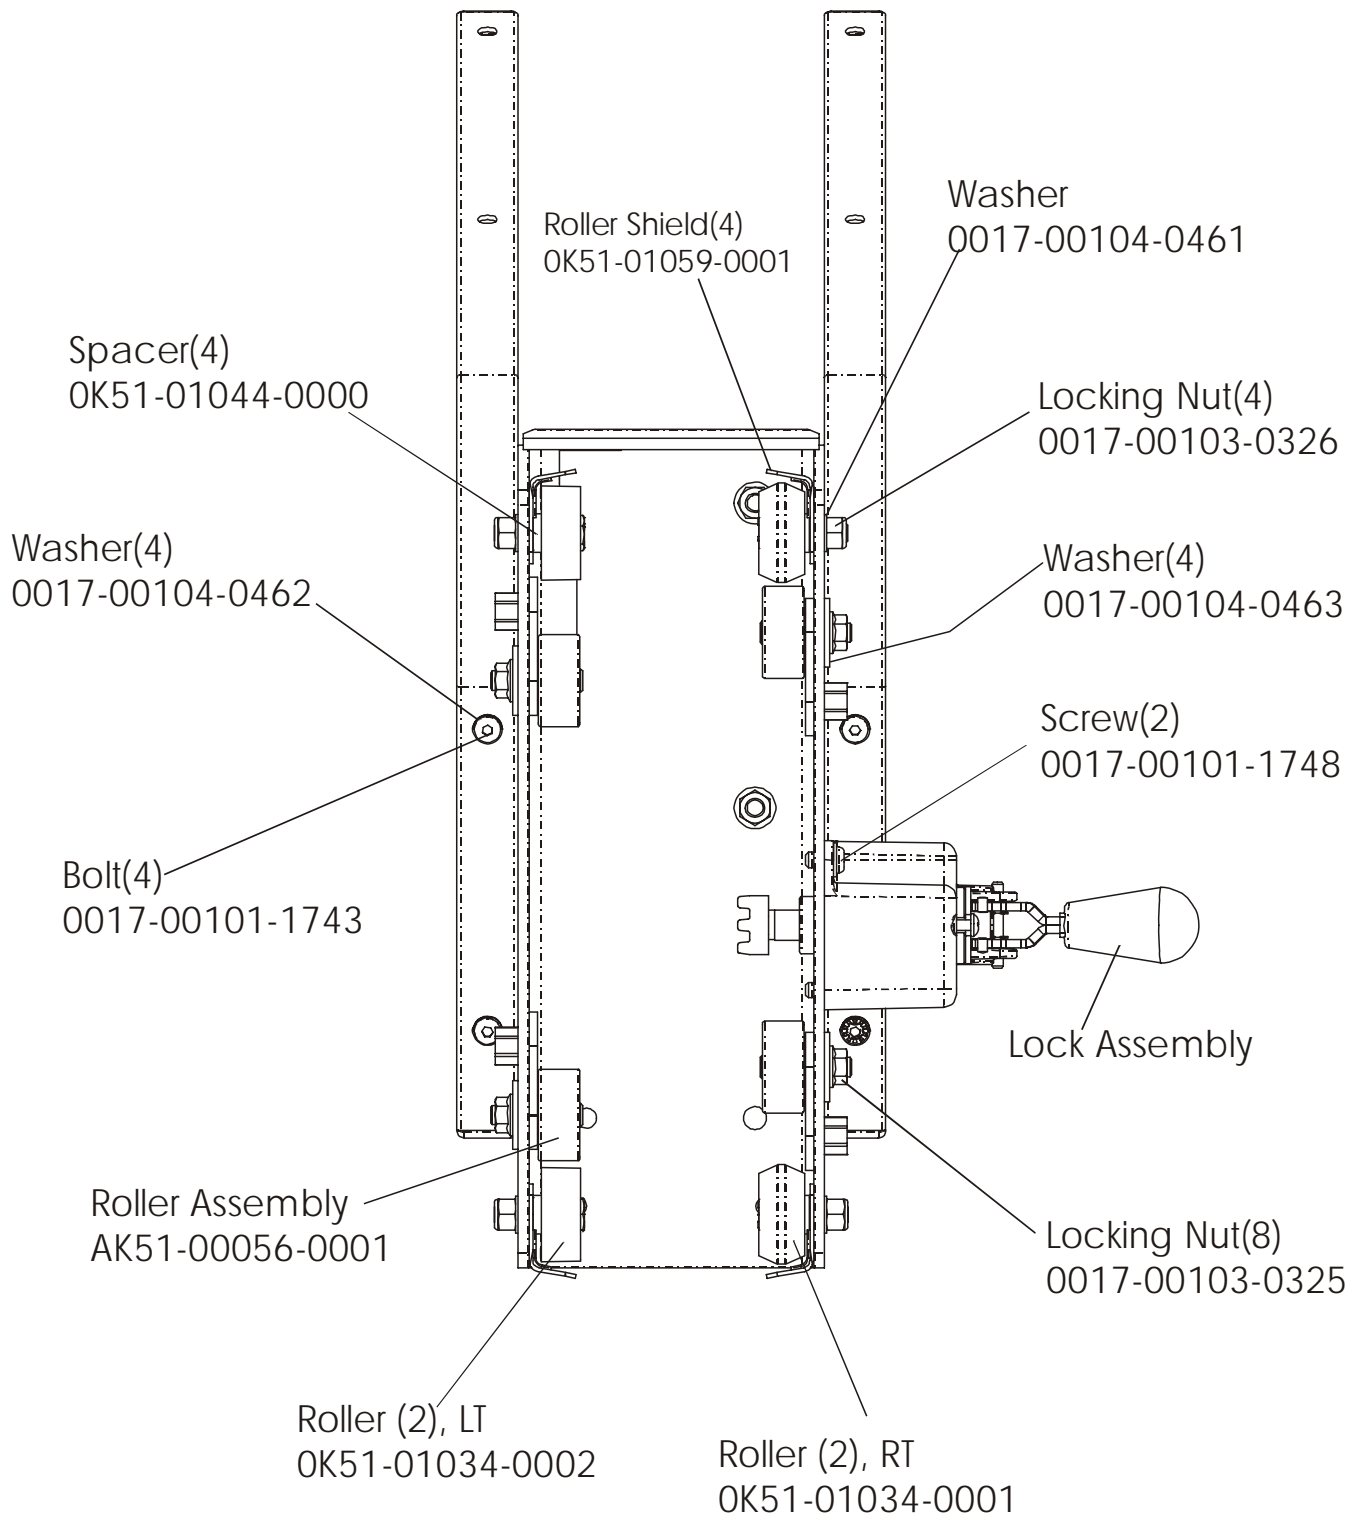


ARCTIC SILVER 93R
Seat Frame Assembly

 93R-0XXX-04
S/N 10000 and UP

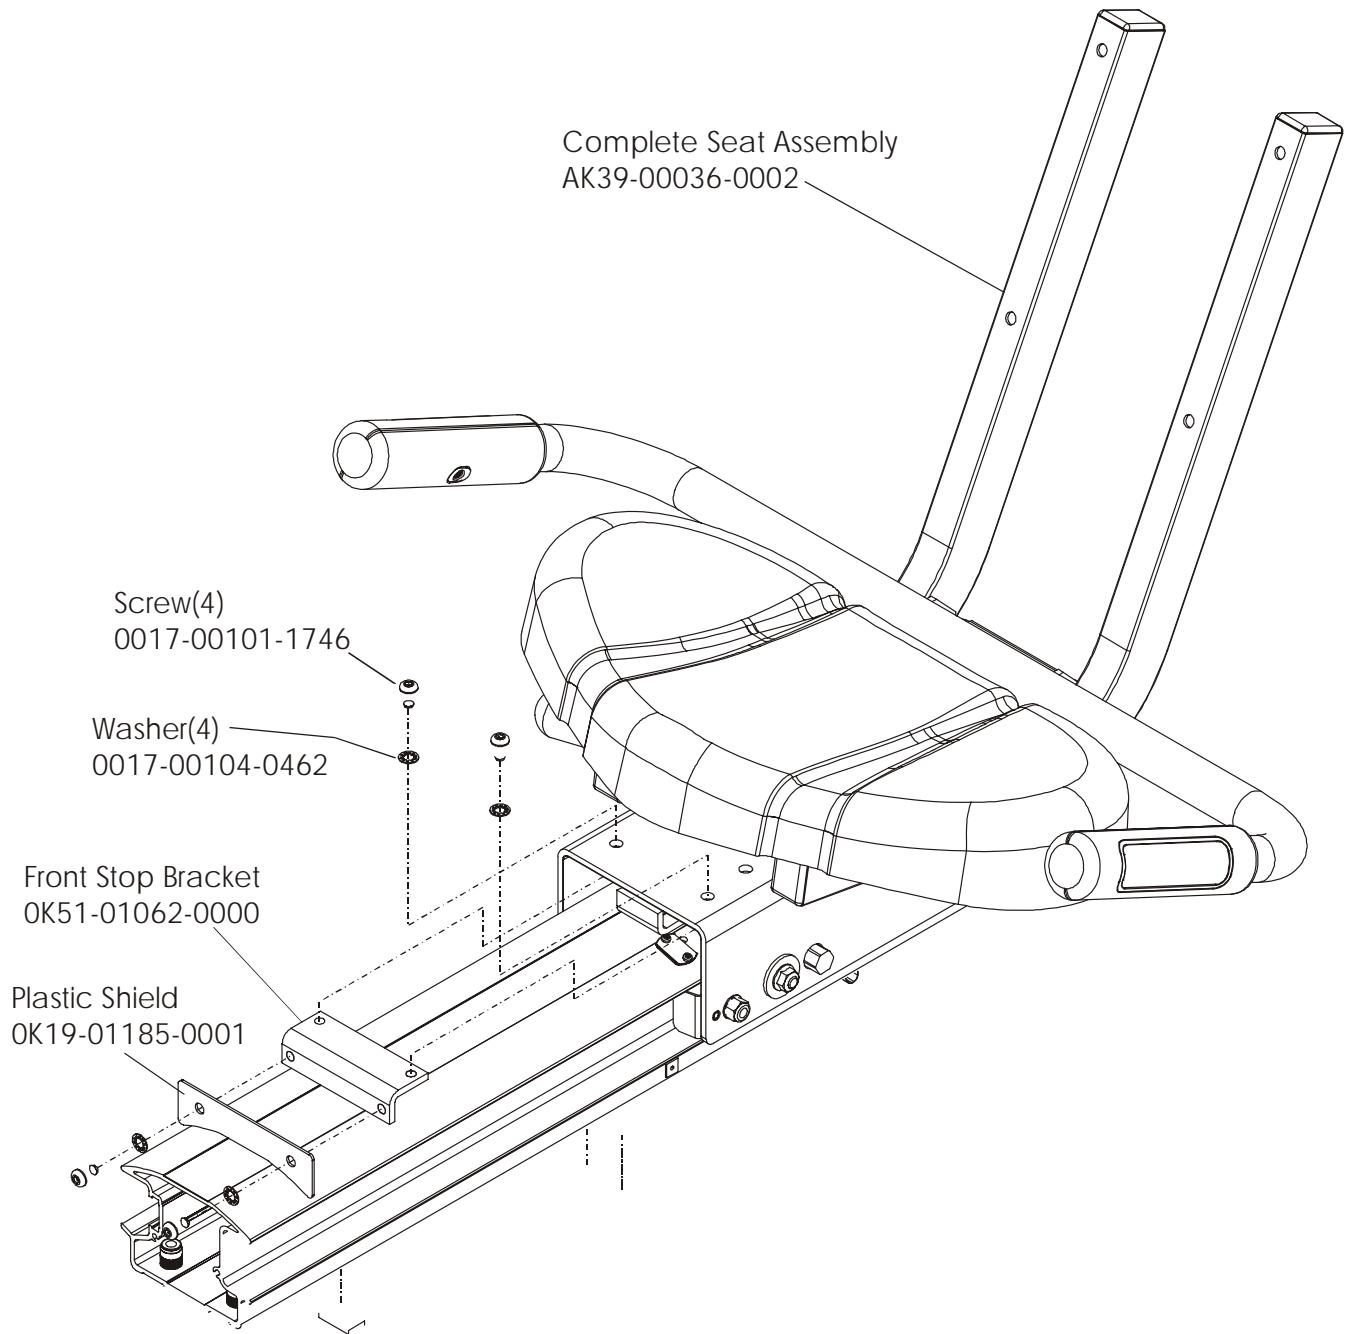

ARCTIC SILVER 93R
Seat Pads and Accessory Tray

 93R-0XXX-04
S/N 100000 and UP

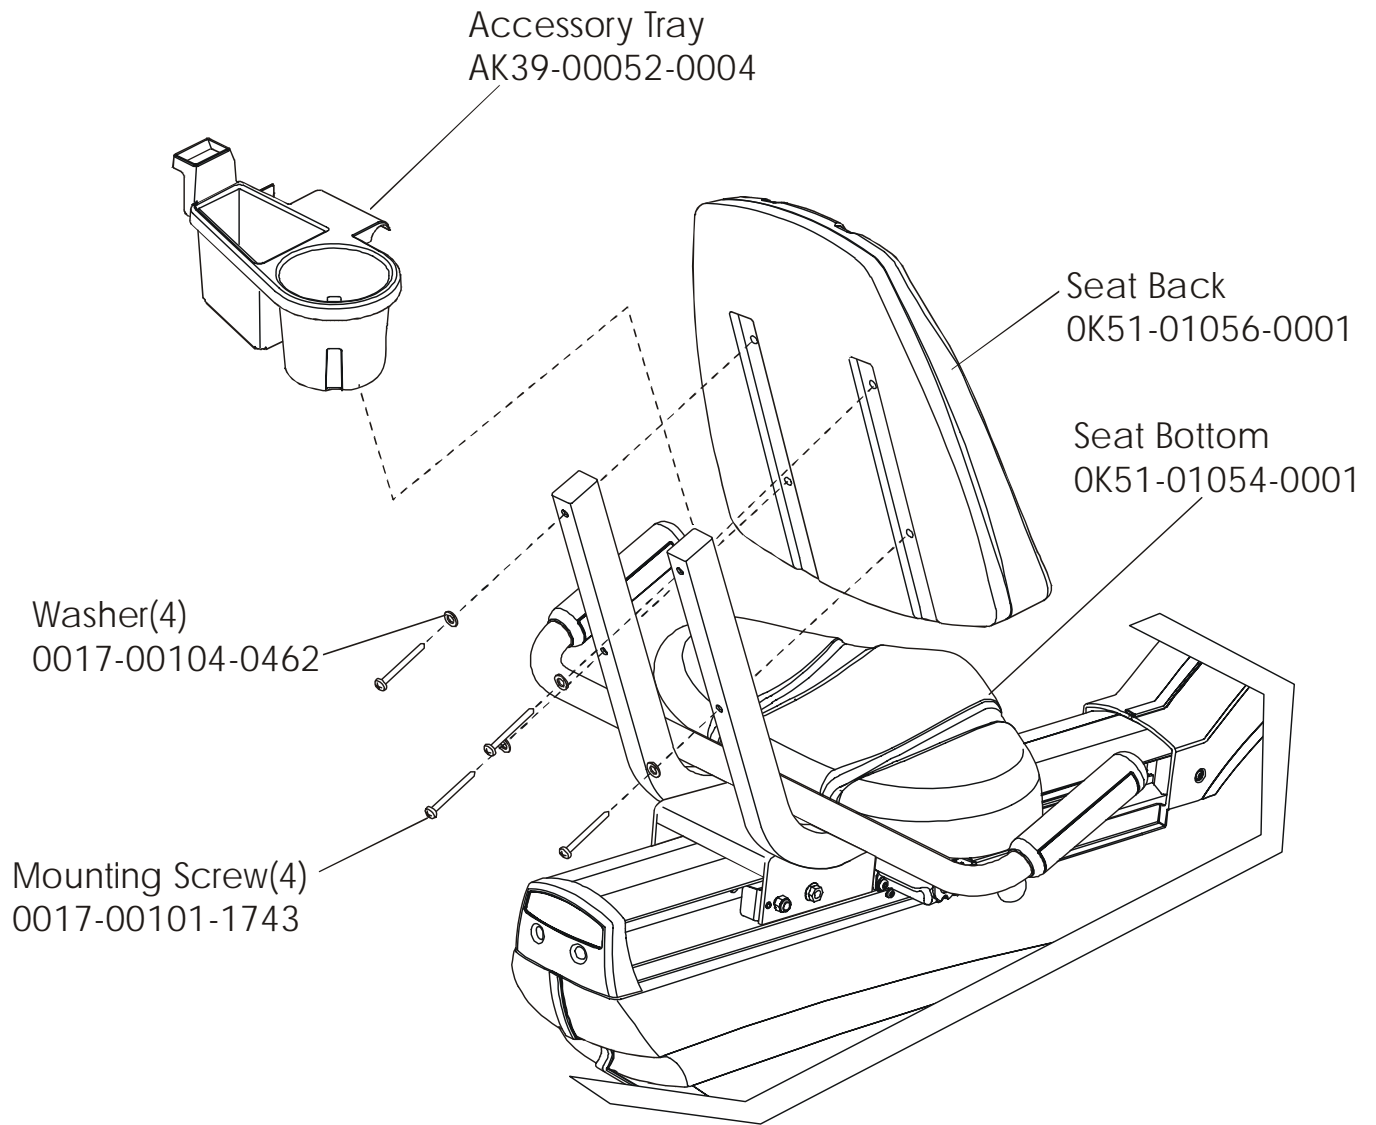


ARCTIC SILVER 93R

Extrusion Assembly – AK39-00027-0005


93R-0XXX-04

 S/N 100000 and UP

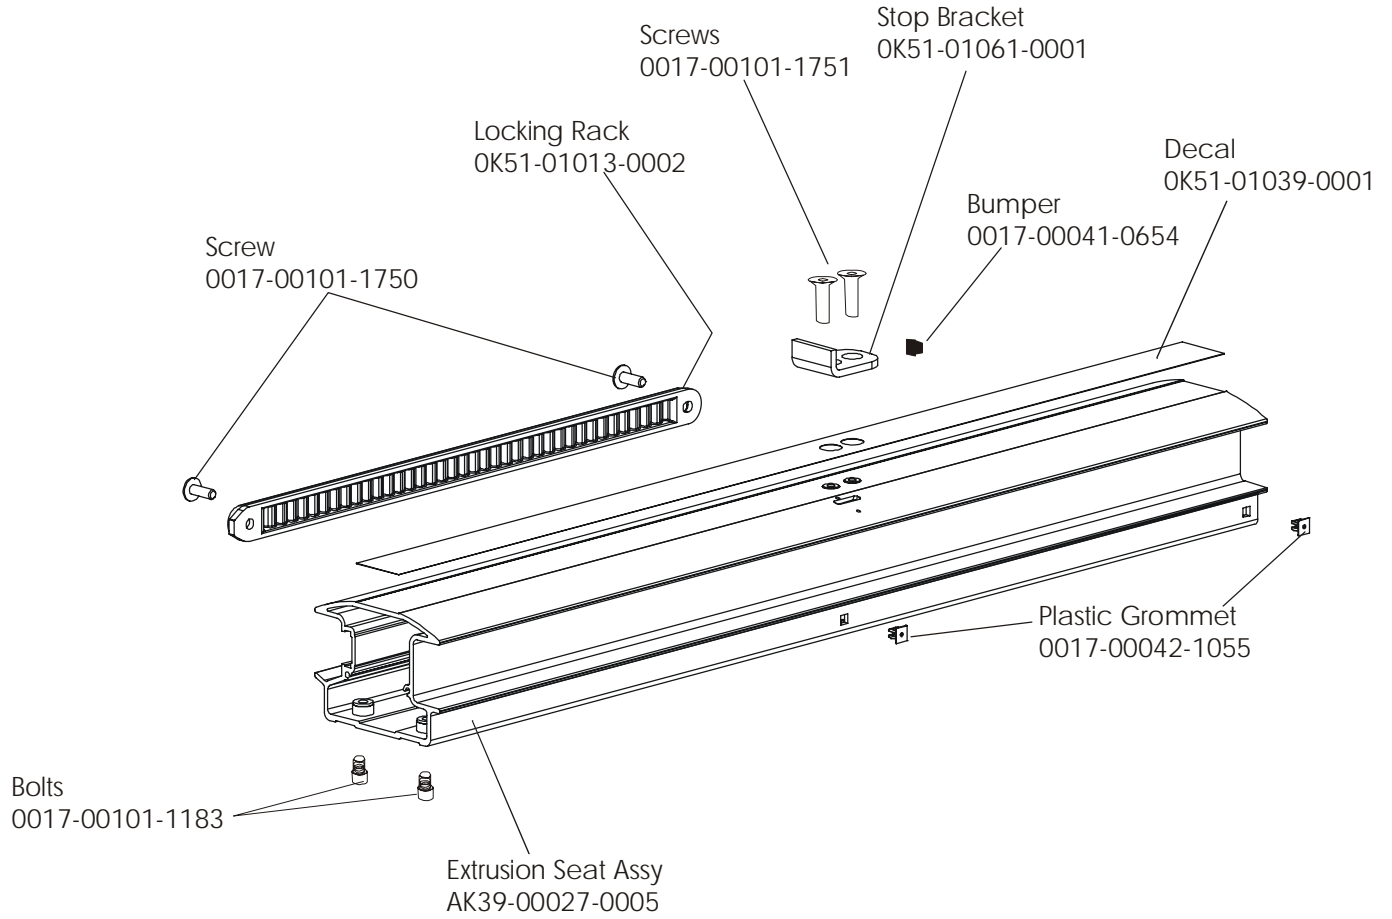

ARCTIC SILVER 93R
Locking Assembly – AK51-00053-0001

 93R-0XXX-04
S/N 100000 and UP

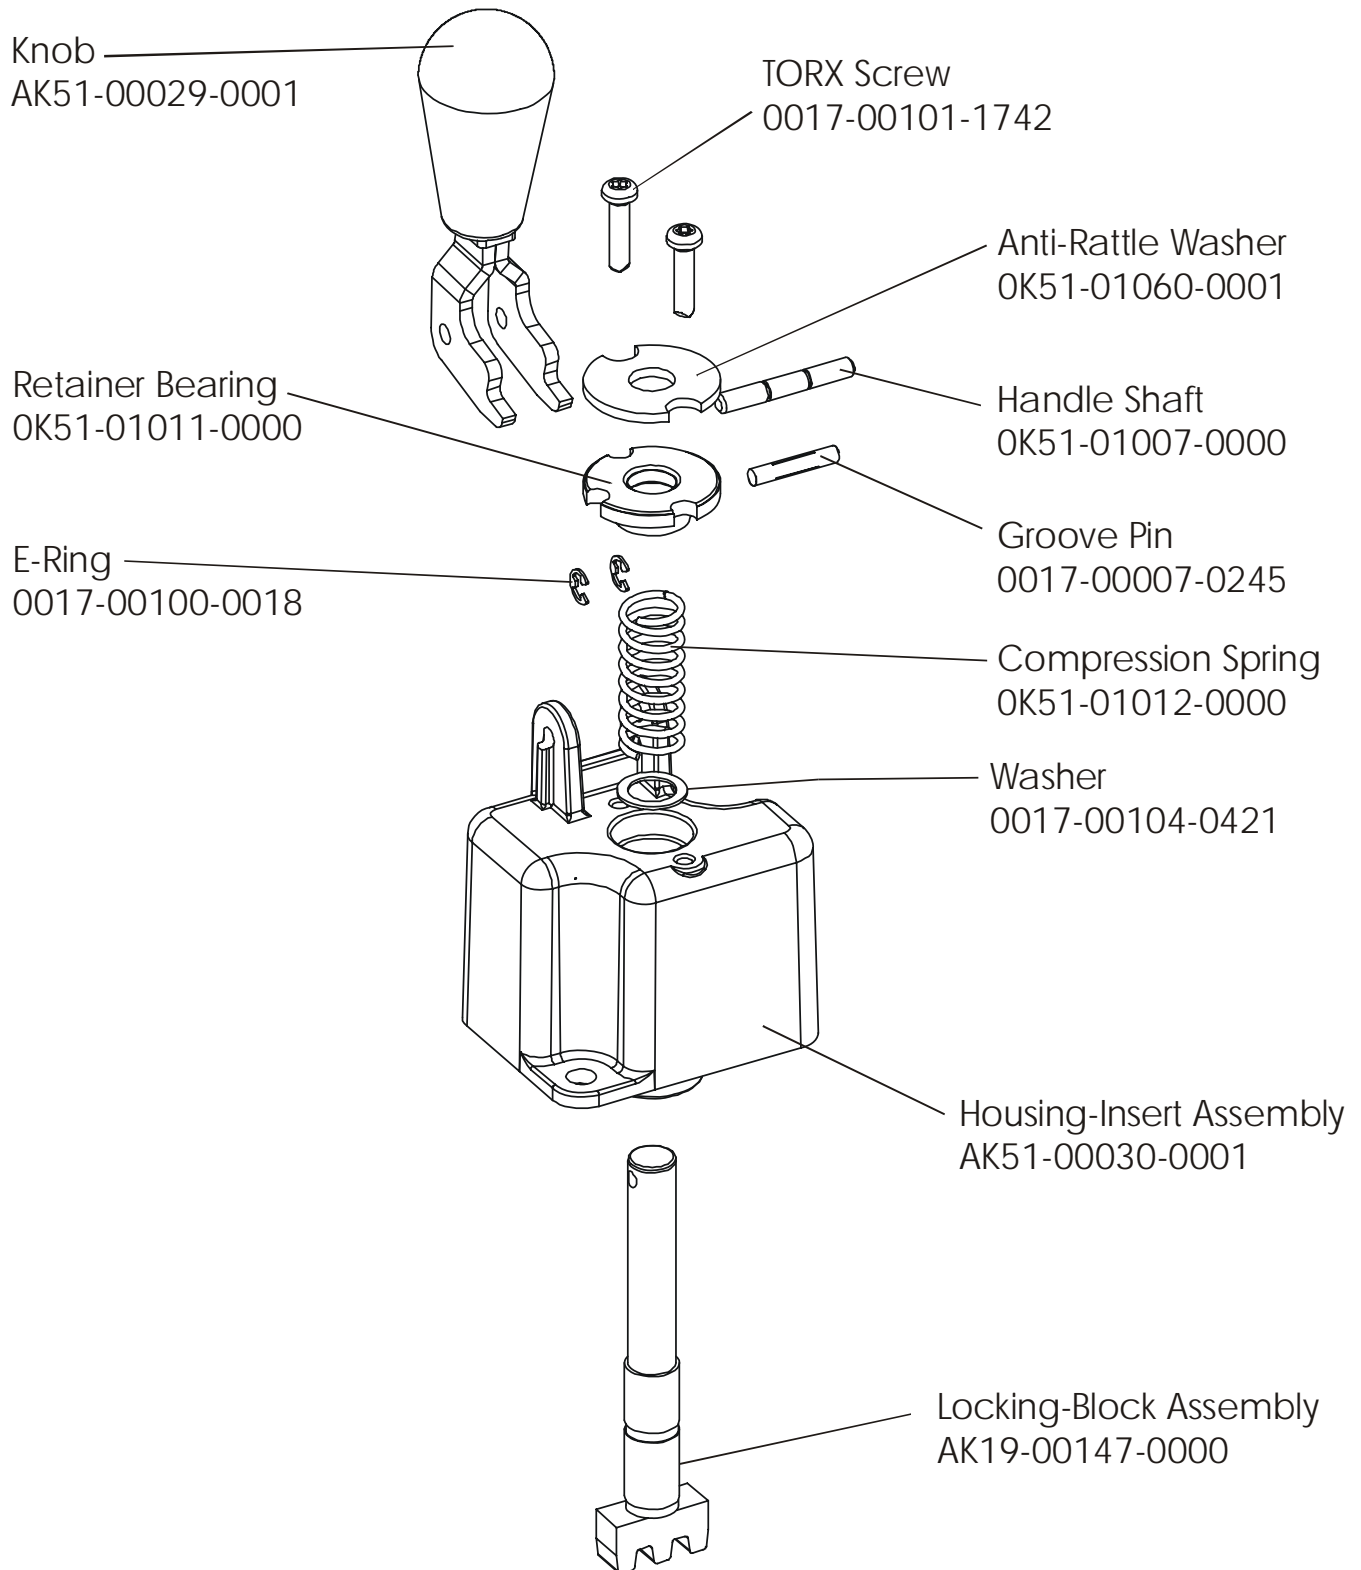

ARCTIC SILVER 93R
Wheel and Leveler

93R-0XXX-04
S/N 10000 and UP

