


LifeFitness

ARCTIC SILVER 93C Upright Bike

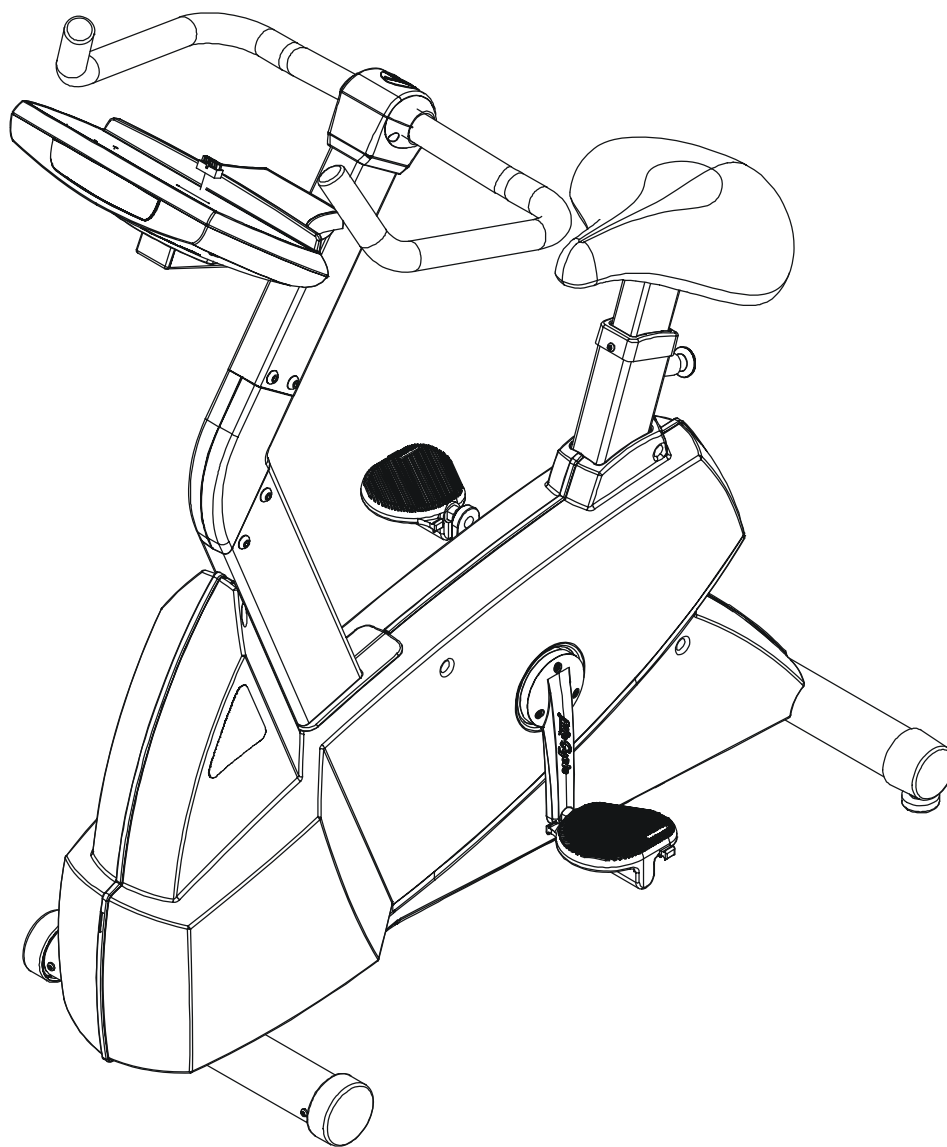

Customer Support Services
PARTS MANUAL rev 29 Apr 2008

ARCTIC SILVER 93C
REFERENCES

93C-0XXX-02
S/N CCL100000 and up

OPERATION MANUAL	M051-00K63-A068
HARDWARE BAG	GK63-00002-0044
NETWORK C-SAFE KIT	GK63-00002-0003
TOUCH UP PAINT: SPRAY CAN .5 OZ BOTTLE W/APPLICATOR .33 OZ PEN	0017-00008-0204 0017-00008-0205 0017-00008-0206
SERVICE MANUAL	M051-00K63-A009


ARCTIC SILVER 93C
CONTENTS

93C-0XXX-02
S/N CCL100000 and up

CONSOLE AND RELATED COMPONENTS.....	4
CONSOLE MOUNTING SCREWS AND POLAR COVERS	5
ALTERNATOR W/PULLEY	6
CRANKSHAFT AND BEARING ASSEMBLY.....	7
INTERMEDIATE SHAFT AND BEARING ASSEMBLY.....	8
SEAT LATCH ASSEMBLY	9
SEAT POST ASSEMBLY	10
SEAT POST SHROUDS	11
IDLER BRACKET ASSEMBLY.....	12
CONSOLE SUPPORT ASSEMBLY.....	13
LEFT SIDE SHROUD AND CRANKARM	14
RIGHT SIDE SHROUD AND CRANKARM.....	15
PCB MOUNTING BRACKET ASSEMBLY	16
FRONT WHEELS.....	17
RESISTOR ASSEMBLY	18
HANDLEBAR ASSEMBLY	19
BELTS.....	20
CABLES.....	21

ARCTIC SILVER 93C
Console and Related Components

93C-0XXX-02
S/N CCL100000 and up

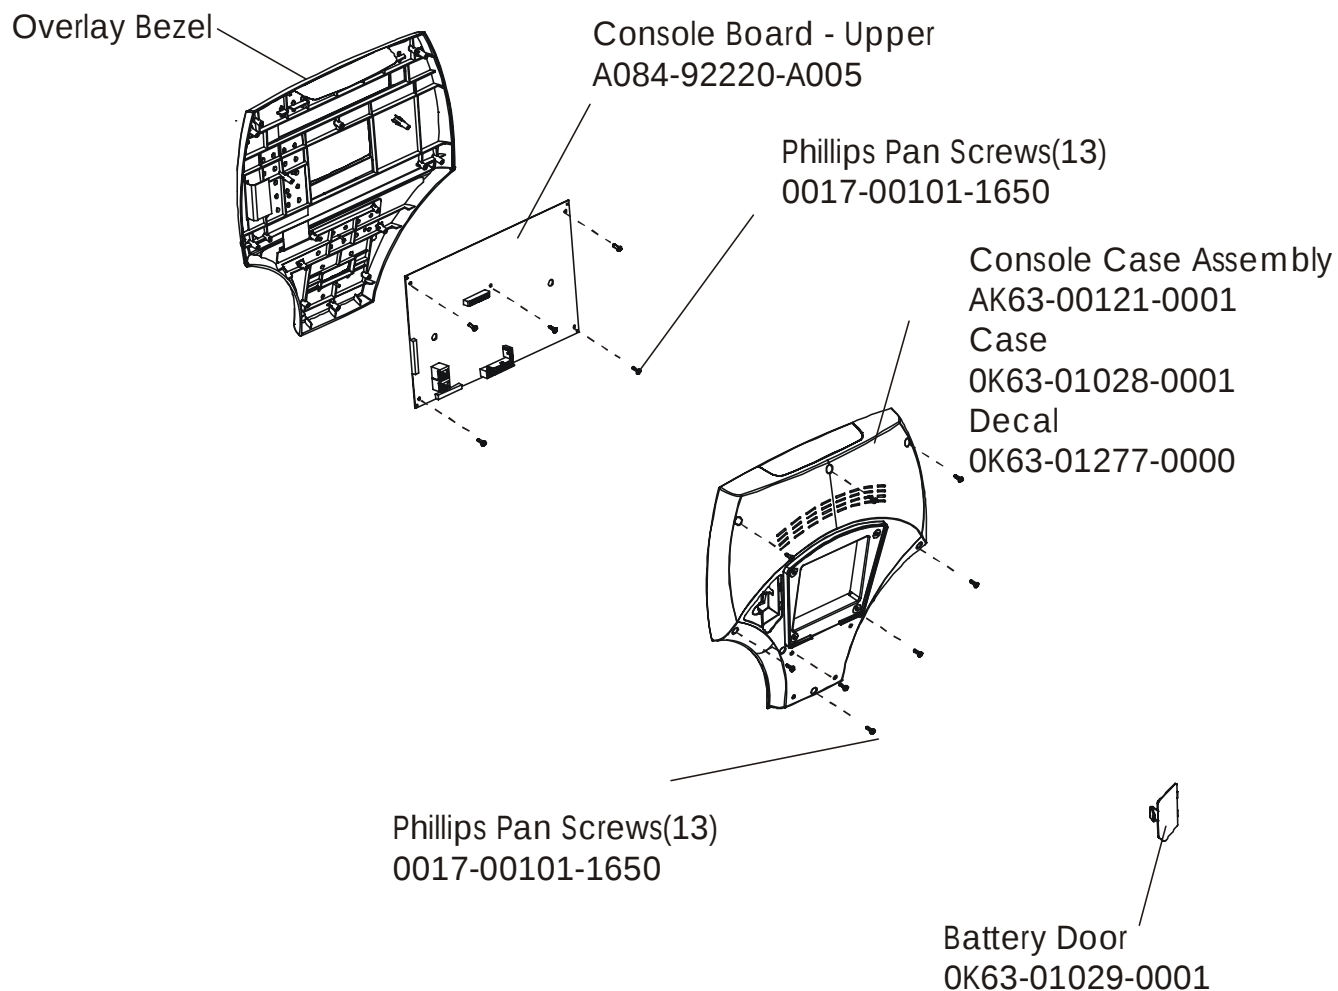


Console Assembly	Bezel W/Overlay Assy.
AK63-00161-0001 Eng Met	AK63-00166-0001 Eng Met
AK63-00161-0003 Ger Met	AK63-00166-0003 Ger Met
AK63-00161-0004 Spn Met	AK63-00166-0004 Spn Met
AK63-00161-0006 Jap Met	AK63-00166-0006 Jap Met
AK63-00161-0007 Frn Met	AK63-00166-0007 Frn Met
AK63-00161-0008 Itl Met	AK63-00166-0008 Itl Met
AK63-00161-0009 Dut Met	AK63-00166-0009 Dut Met
AK63-00161-0010 Por Met	AK63-00166-0010 Por Met

ARCTIC SILVER 93C

Console Mtg. Screws & Polar Covers

93C-0XXX-02

S/N CCL100000 and up

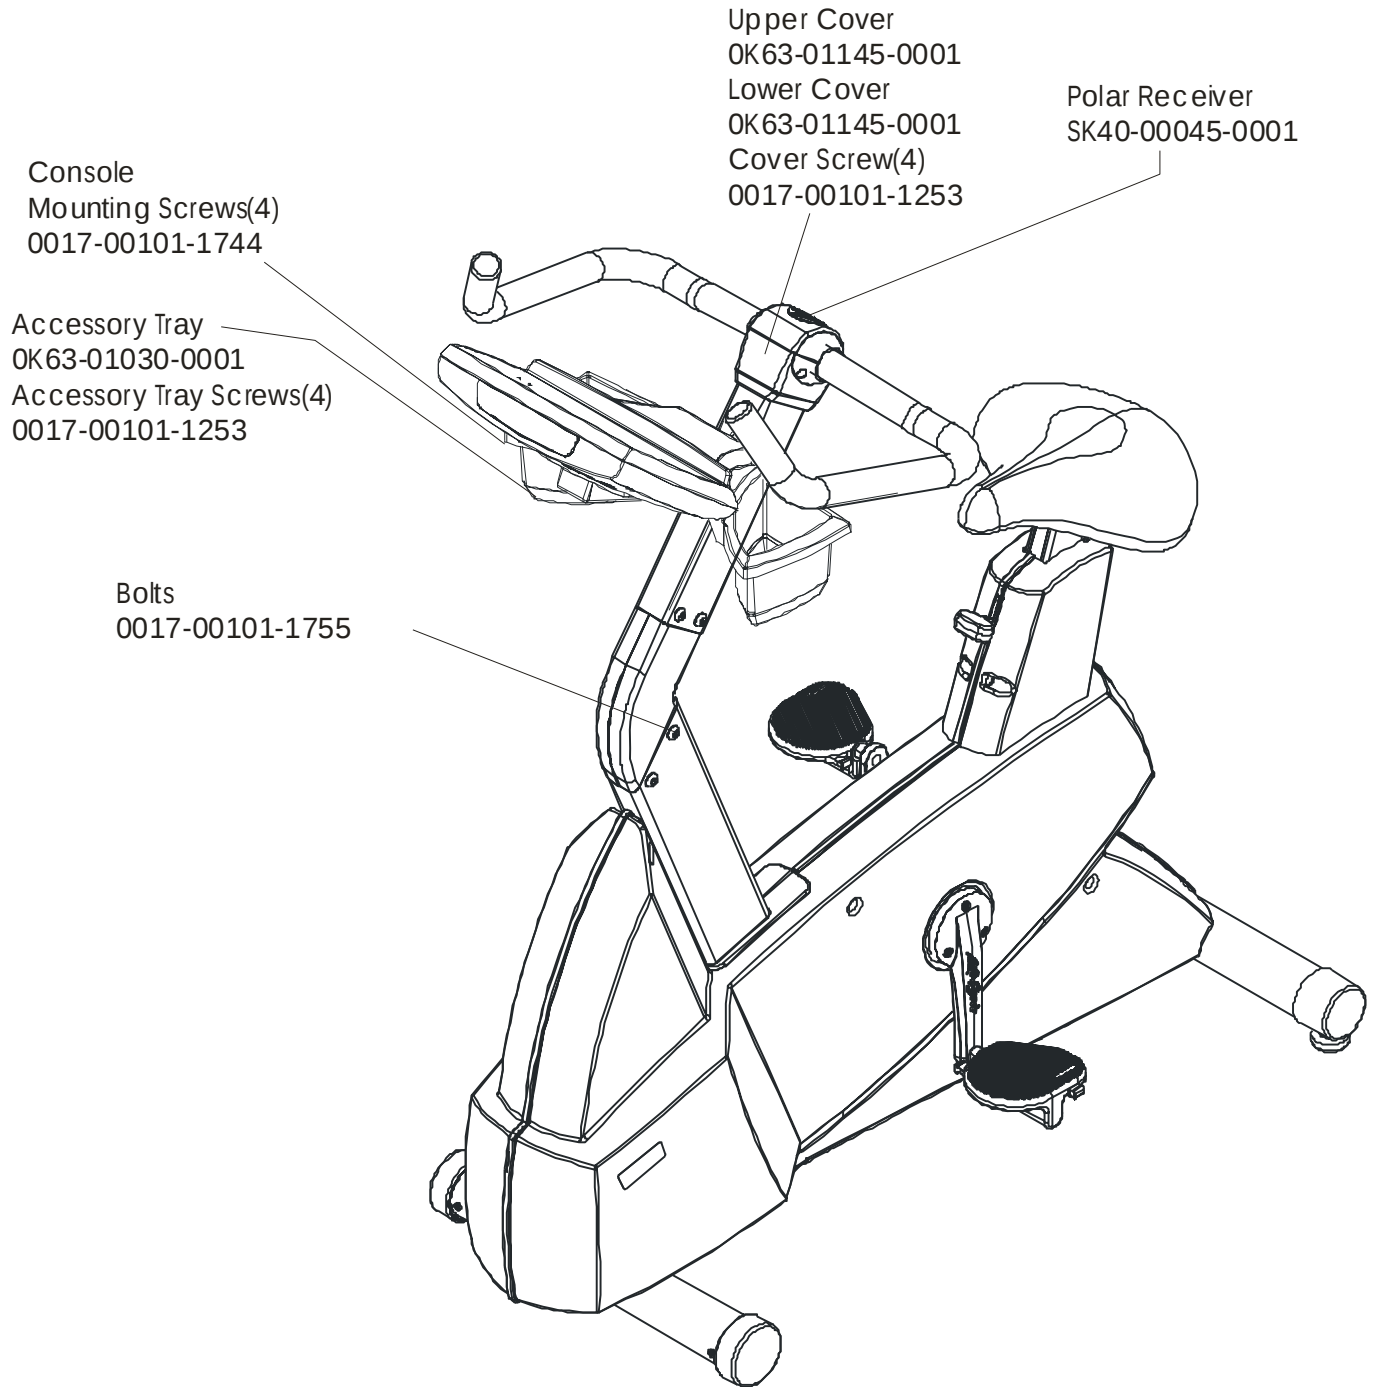


ARCTIC SILVER 93C

Alternator w/Pulley-AK63-00093-0000


93C-0XXX-02

S/N CCL100000 and up

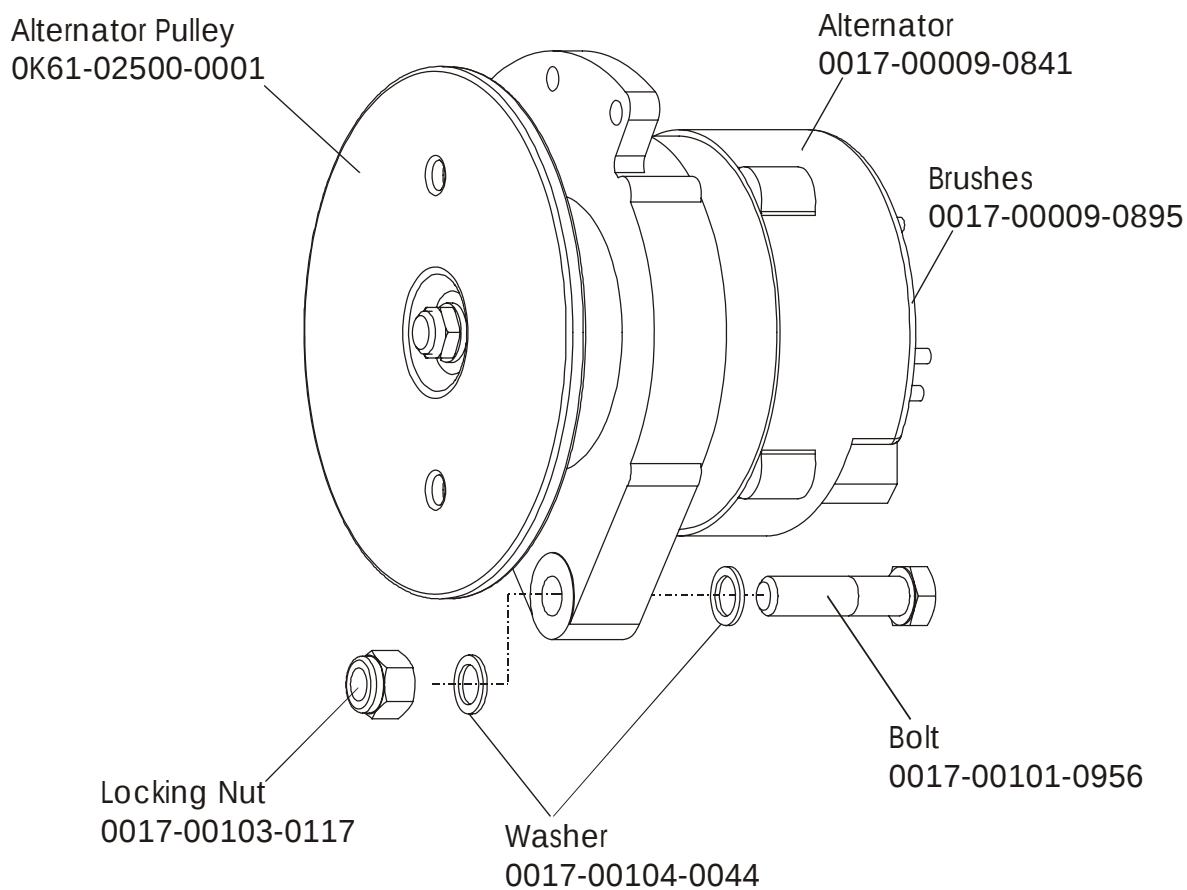

ARCTIC SILVER 93C
Crankshaft and Bearing Assembly

93C-0XXX-02
S/N CCL100000 and up

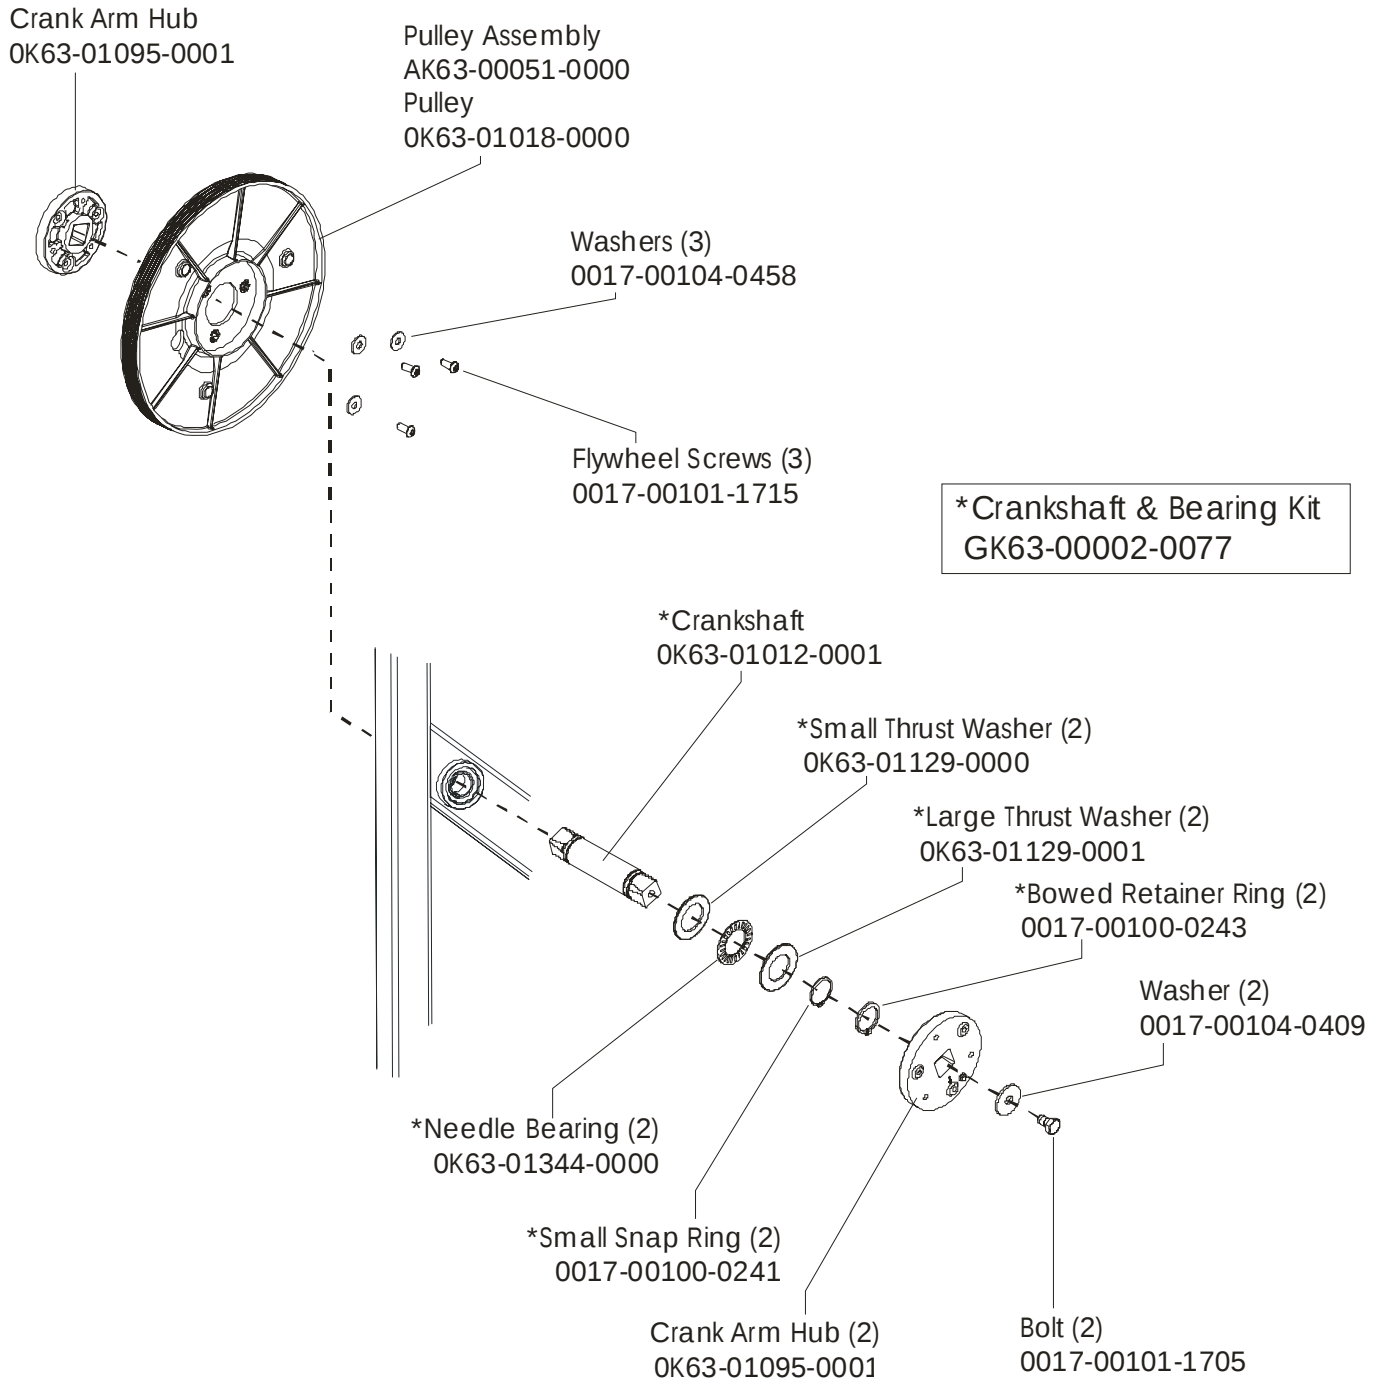


ARCTIC SILVER 93C

Intermediate Shaft and Bearing Assembly

93C-0XXX-02

S/N CCL100000 and up

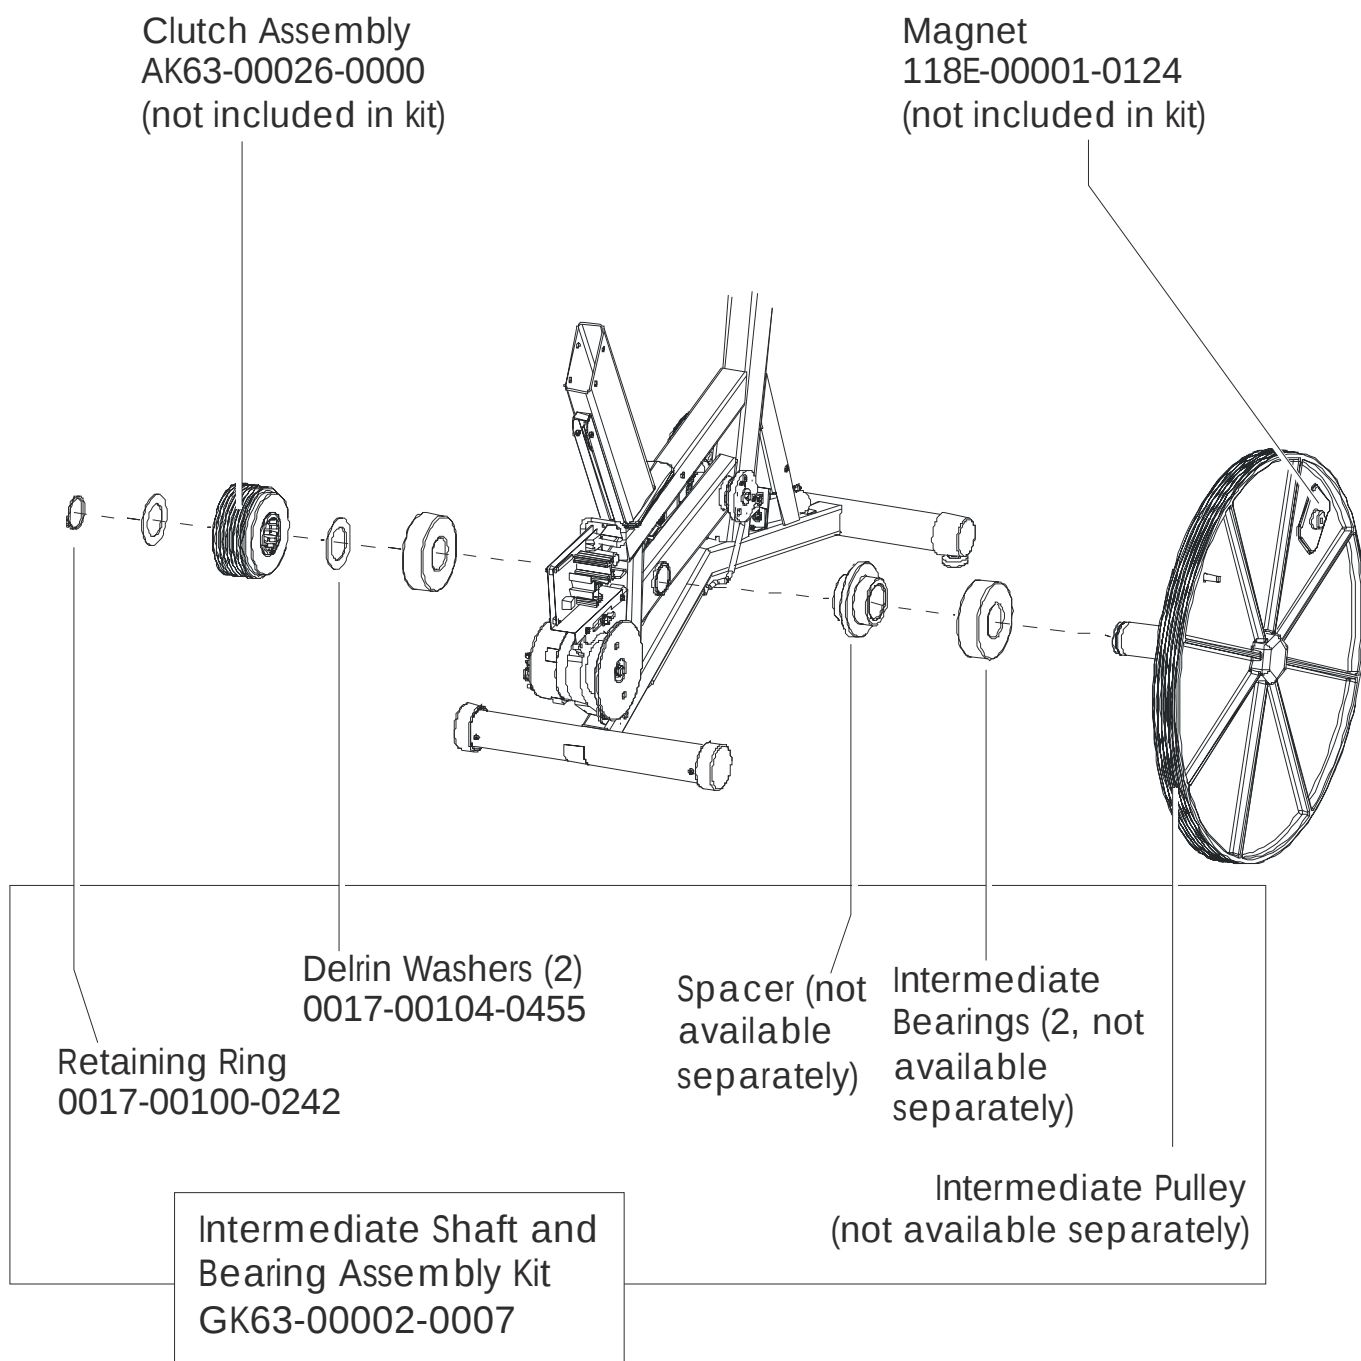


ARCTIC SILVER 93C

Seat Latch Assy. -AK63-00043-0001

93C-0XXX-02

S/N CCL100000 and up

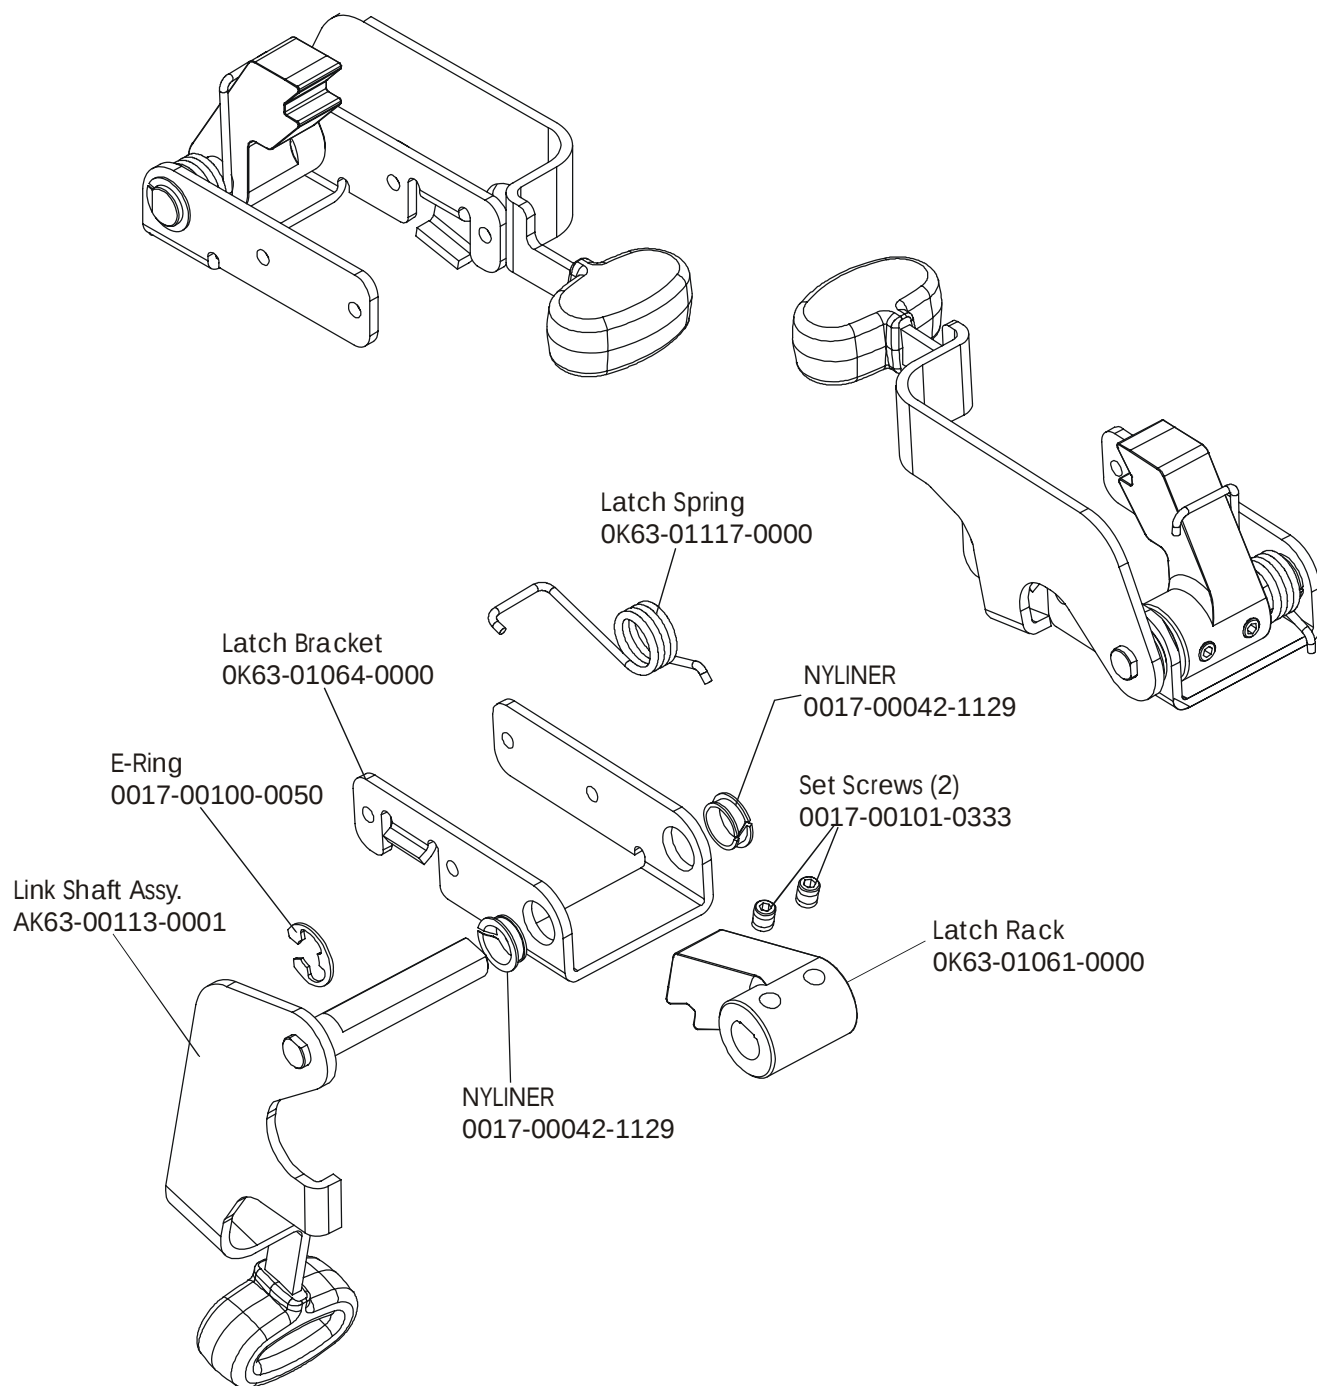


ARCTIC SILVER 93C

Seat Post Assy. – AK63-00232-0003



93C-0XXX-02

S/N CCL100000 and up

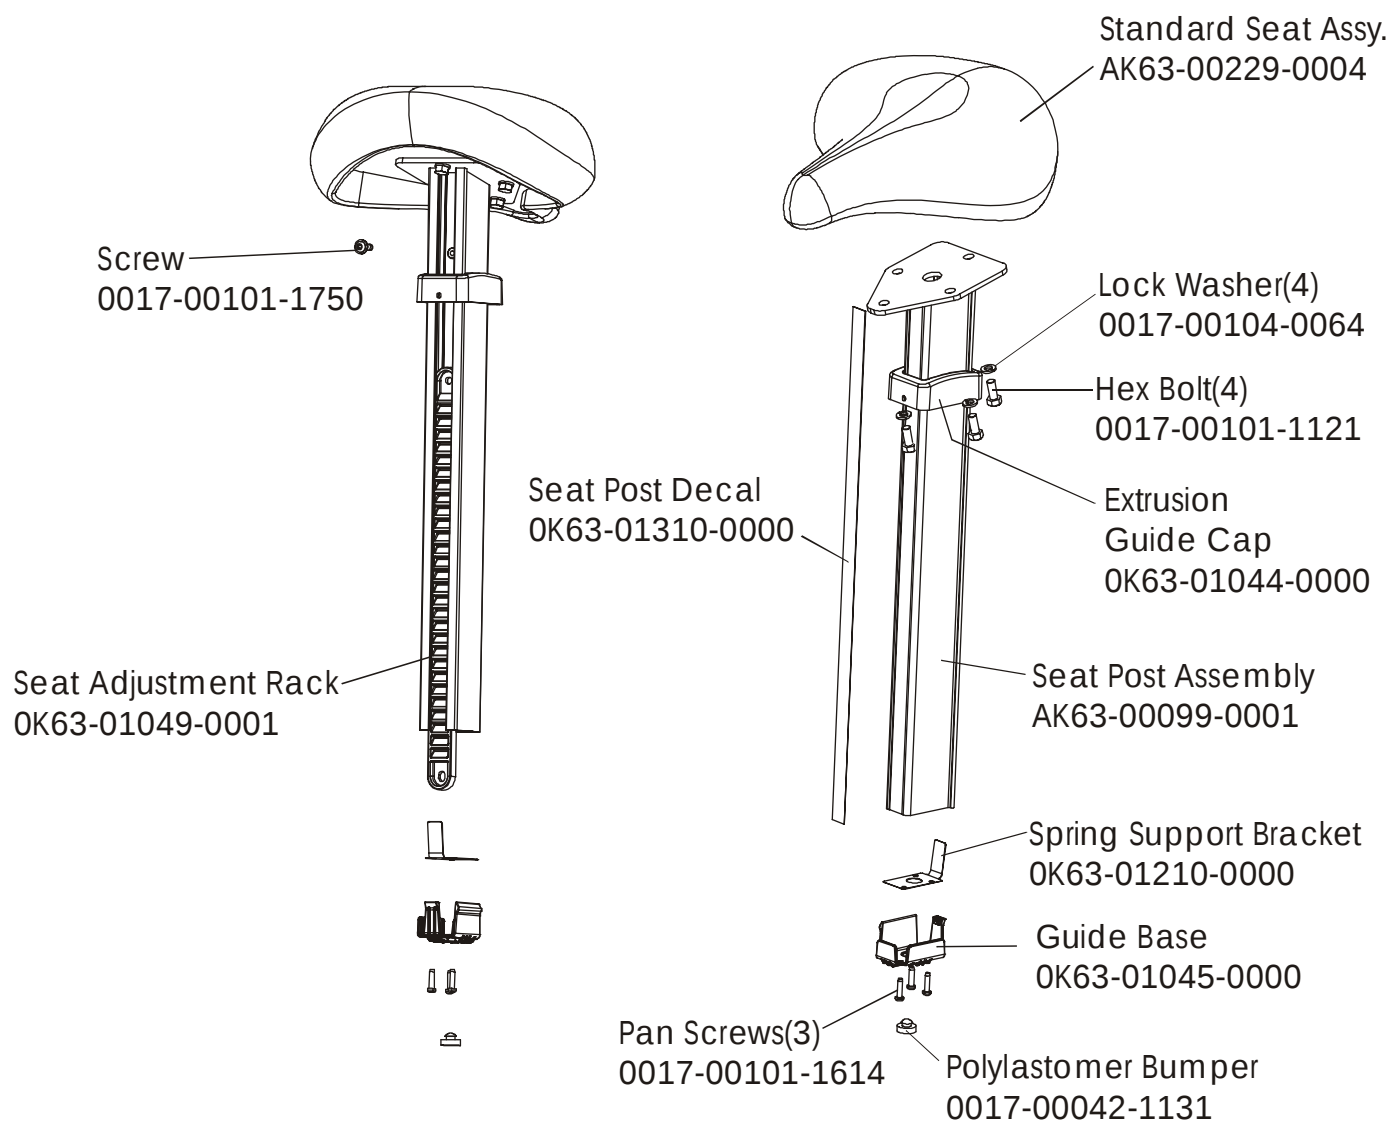

ARCTIC SILVER 93C
Seat Post Shrouds

93C-0XXX-02
S/N CCL100000 and up

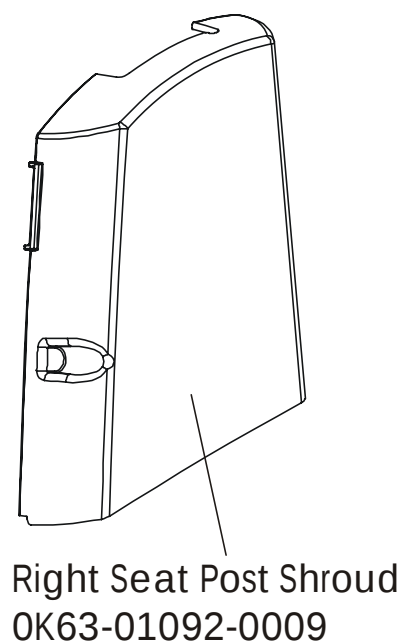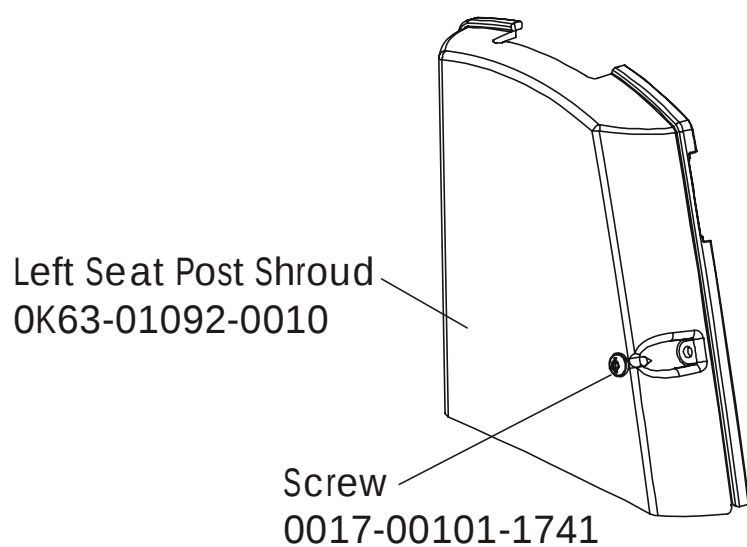


ARCTIC SILVER 93C

Idler Bracket Assy.-AK63-00021-0000


93C-0XXX-02

S/N CCL100000 and up

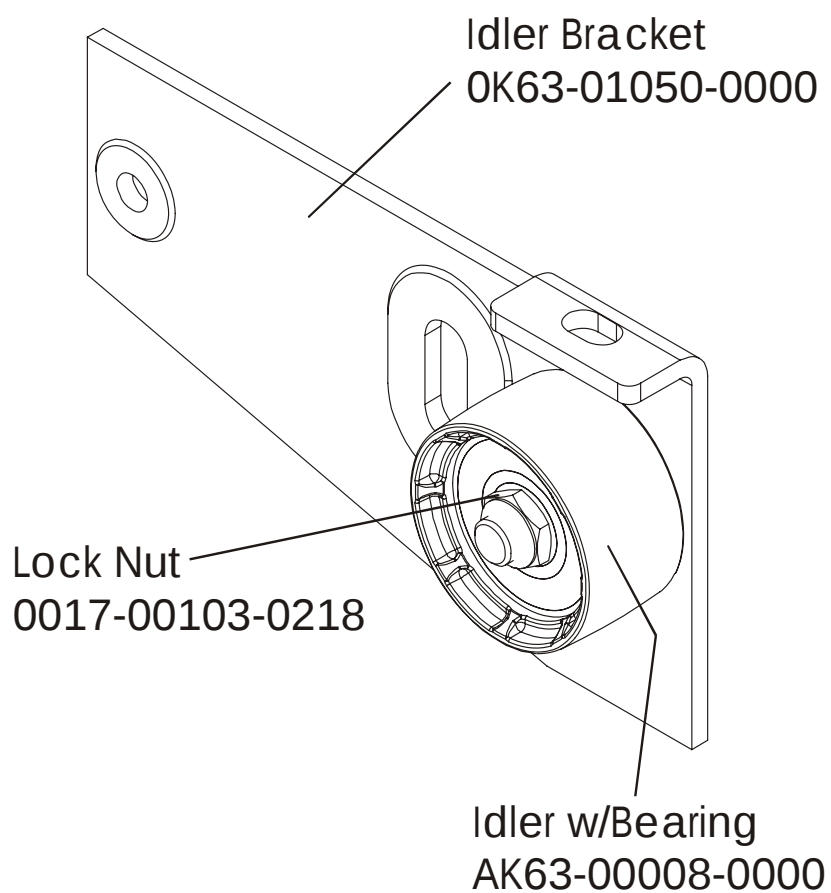

ARCTIC SILVER 93C
Console Support Assembly

93C-0XXX-02
S/N CCL100000 and up

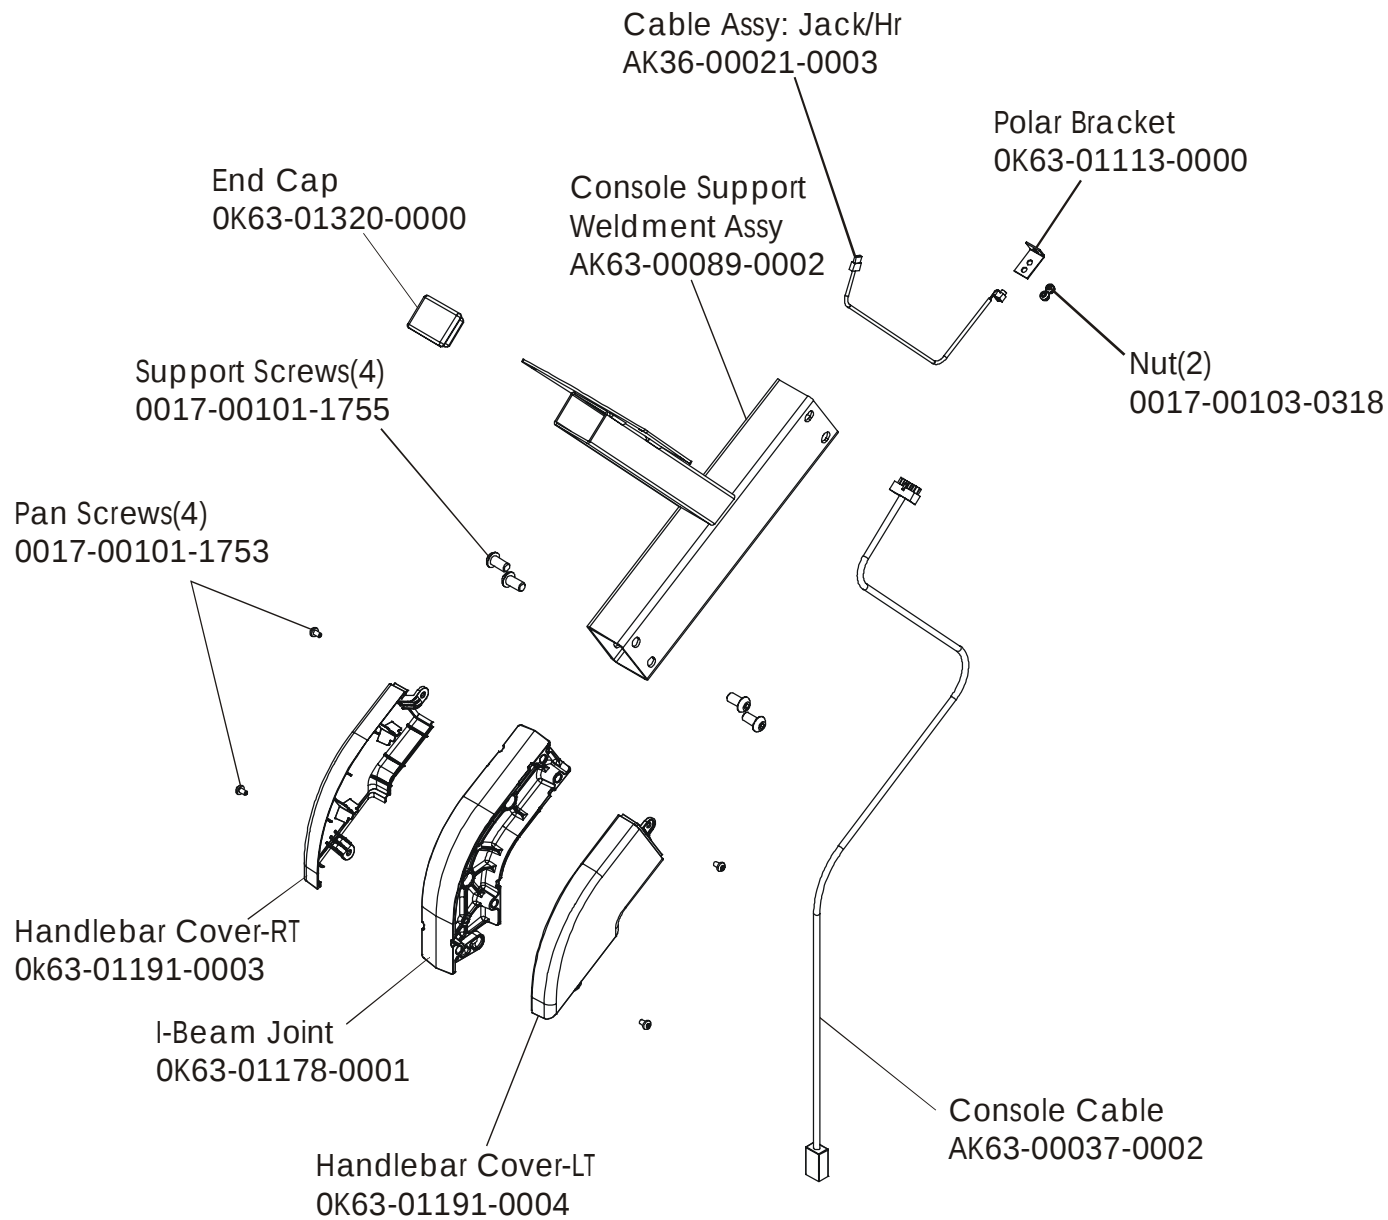


ARCTIC SILVER 93C

Left Side Shroud and Crankarm

93C-0XXX-02

S/N CCL100000 and up

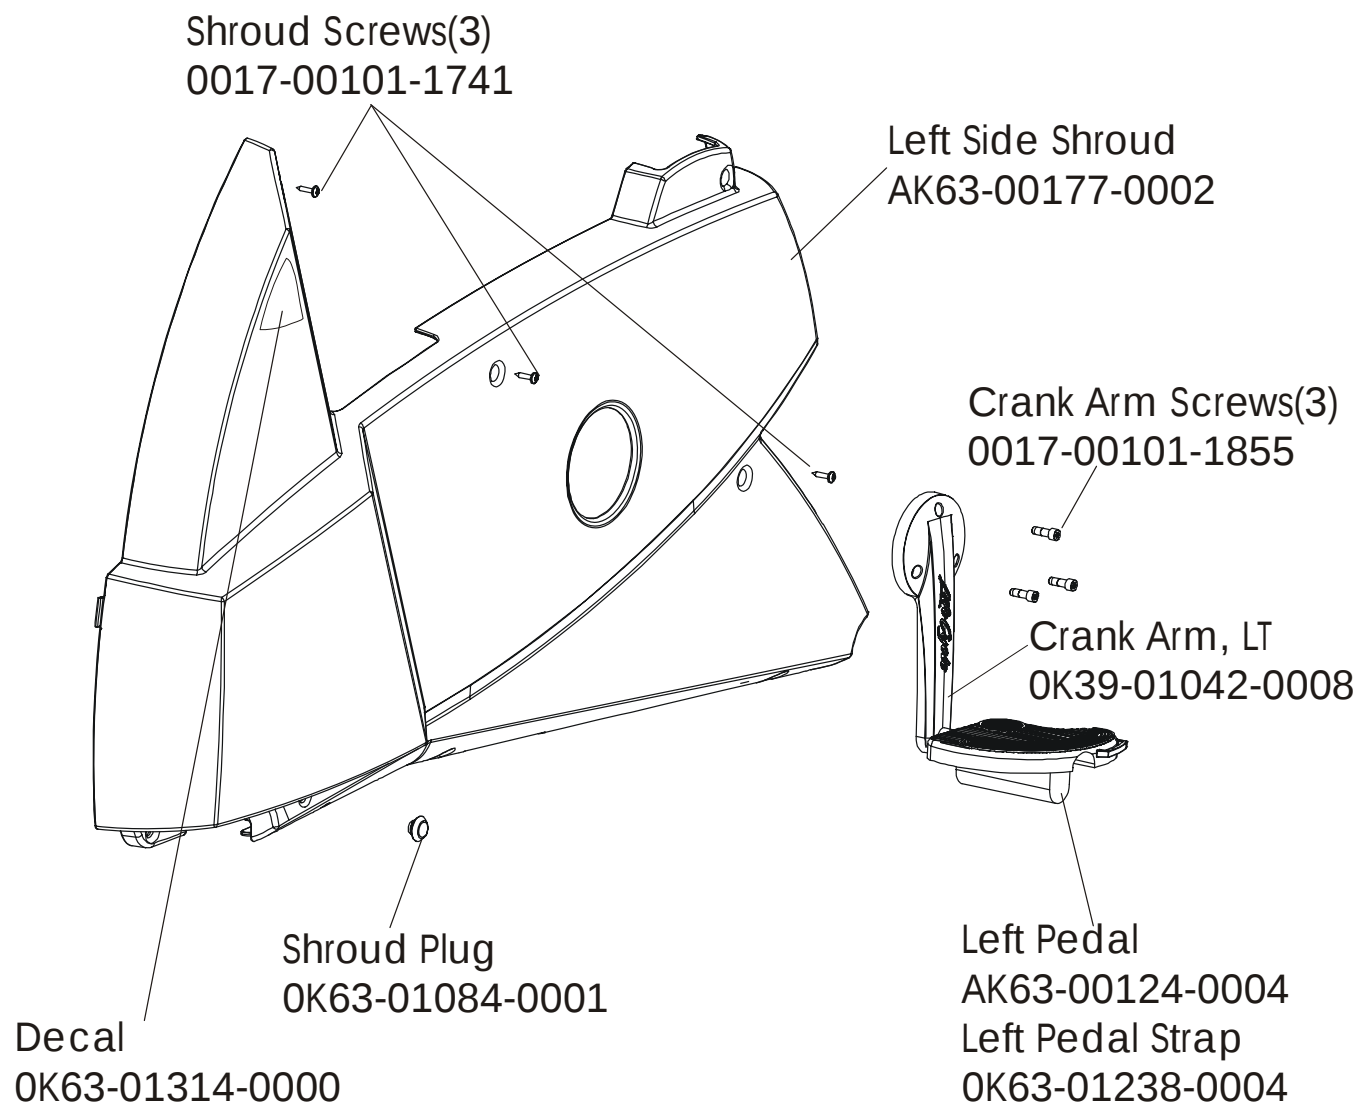


ARCTIC SILVER 93C

Right Side Shroud and Crankarm

93C-0XXX-02


S/N CCL100000 and up

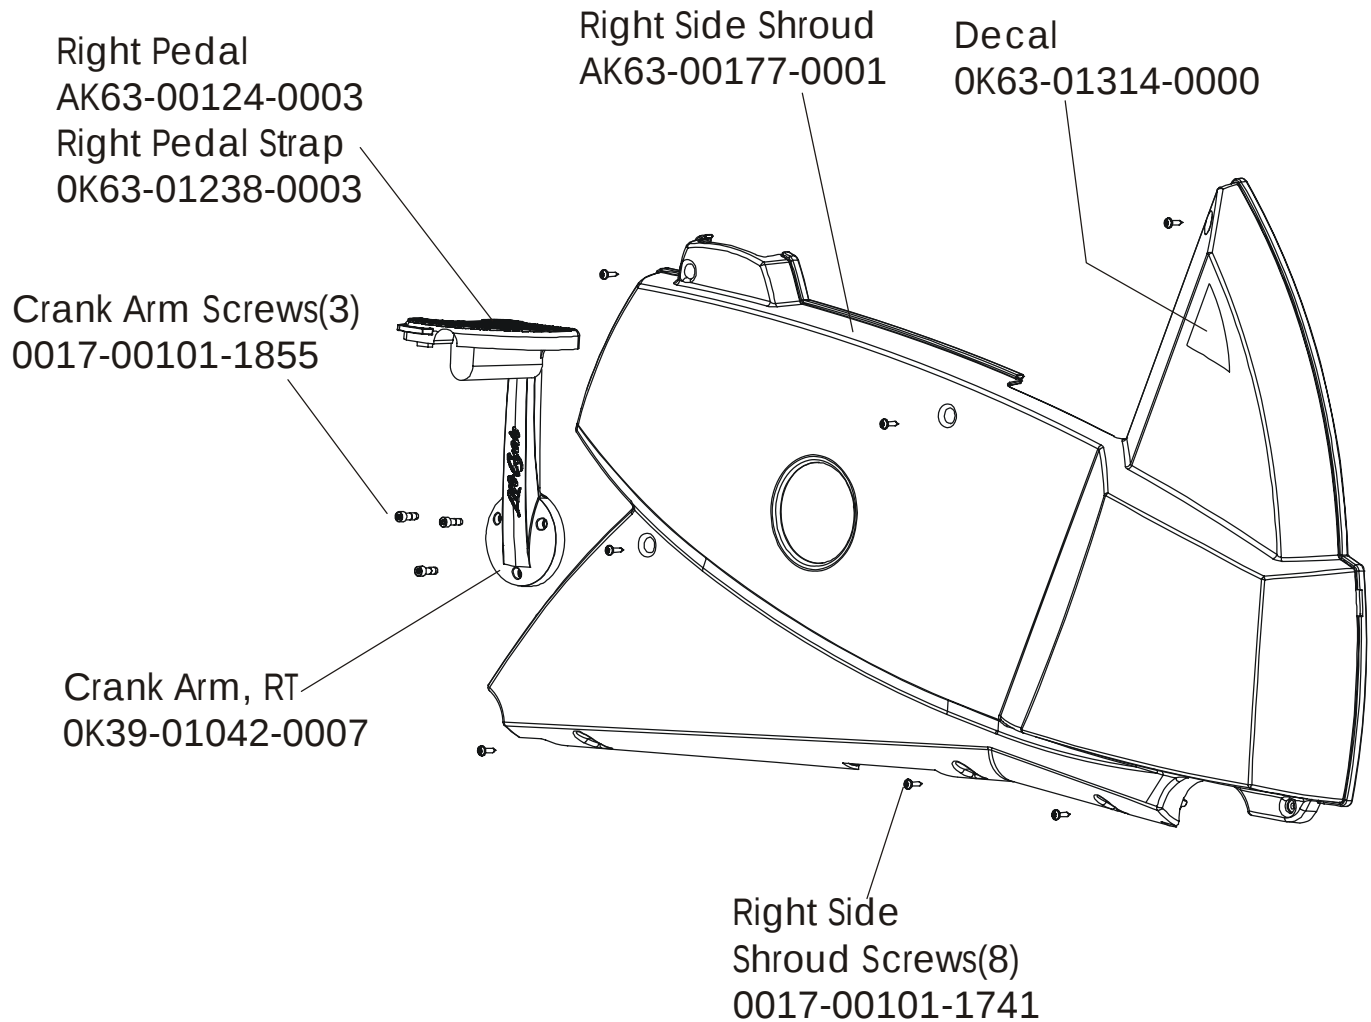

ARCTIC SILVER 93C
PCB Mounting Bracket Assembly

93C-0XXX-02
S/N CCL100000 and up

Assembly Number – AK63-00049-0000

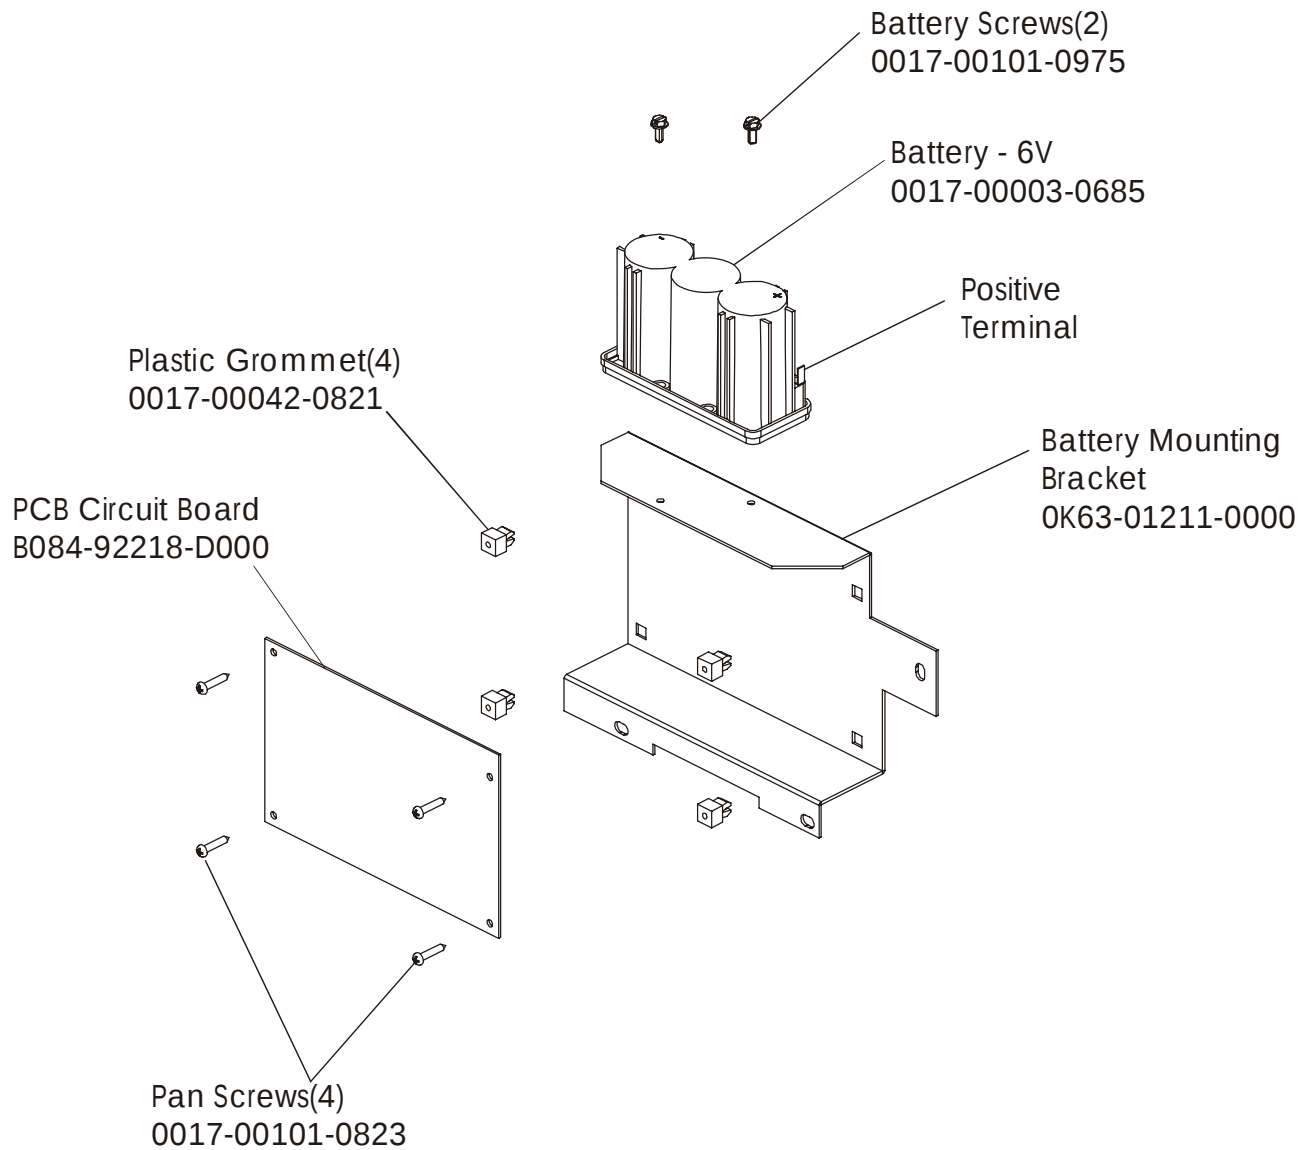


ARCTIC SILVER 93C

Front Wheels – AK63-00017-0001

93C-0XXX-02

S/N CCL100000 and up

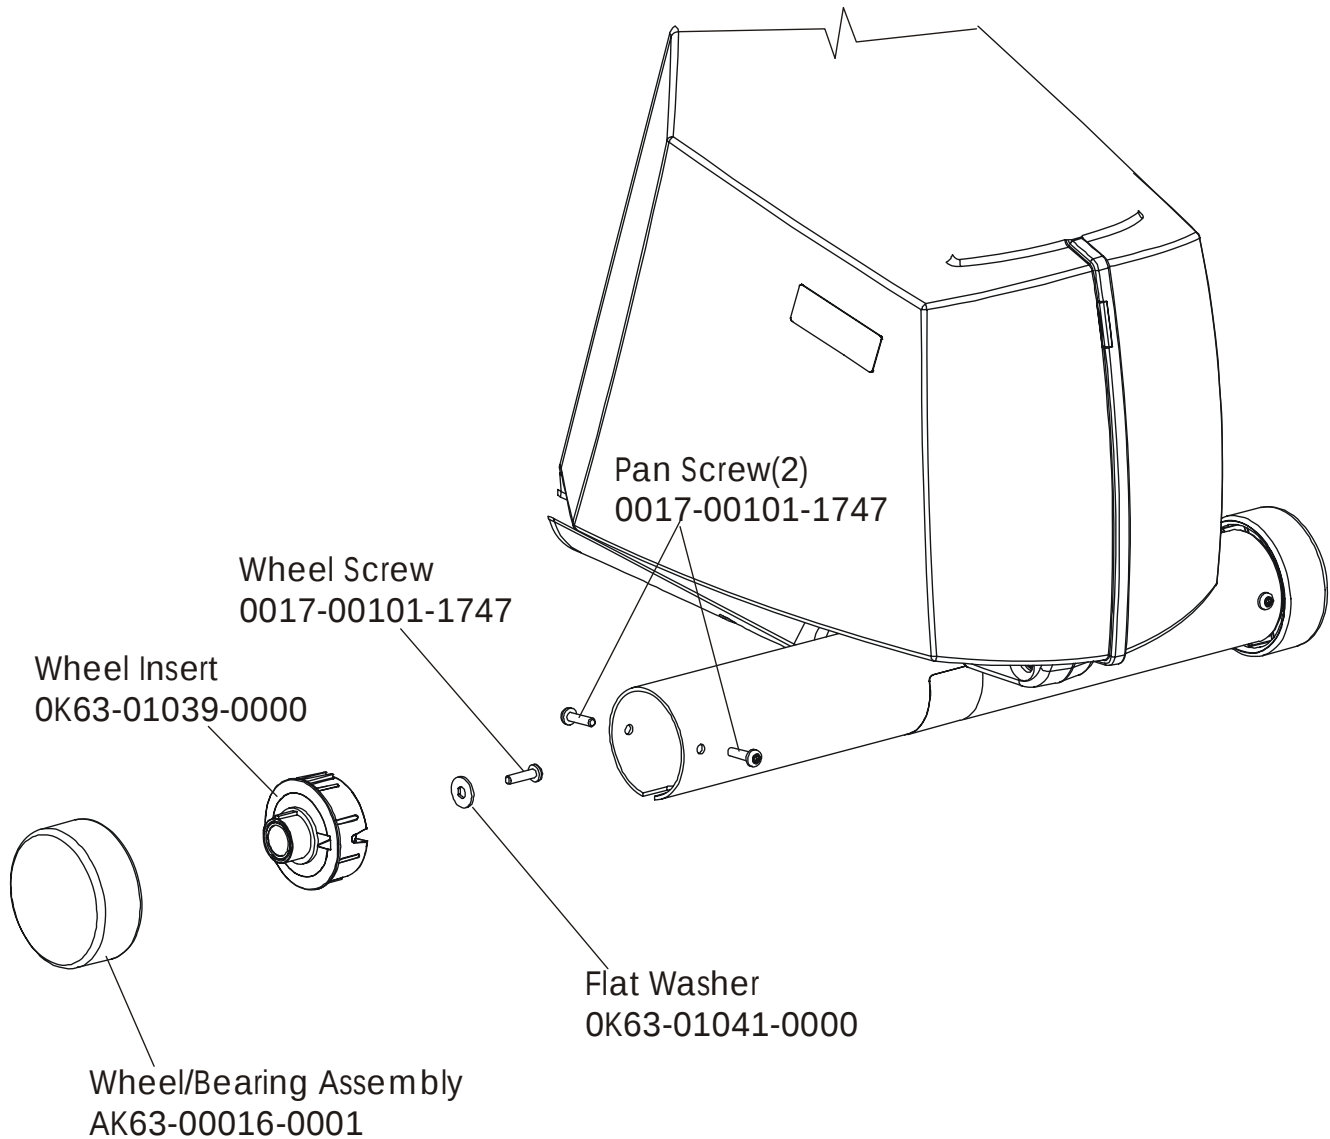


ARCTIC SILVER 93C

Resistor Assembly- AK63-00047-0000

93C-0XXX-02

S/N CCL100000 and up

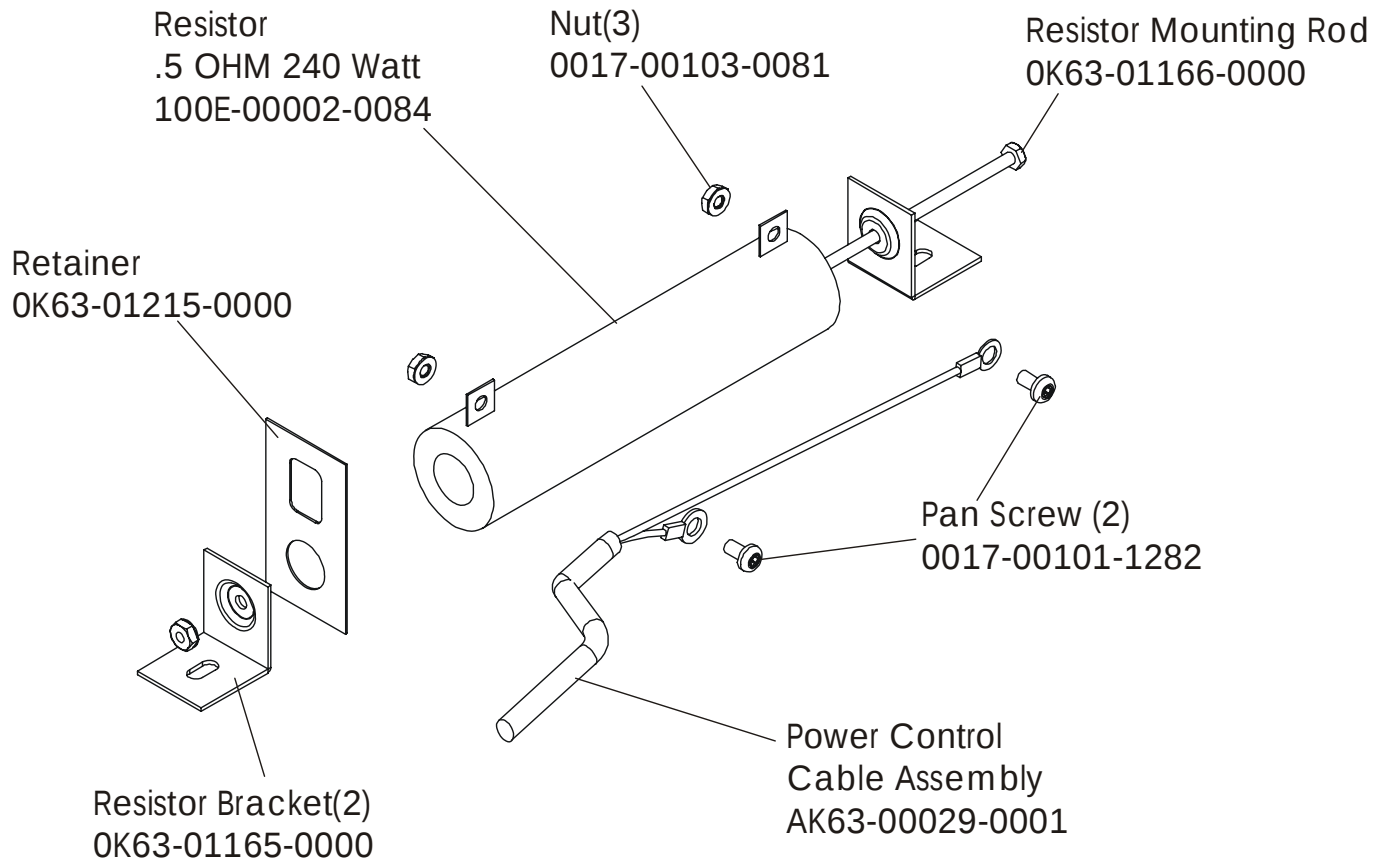



ARCTIC SILVER 93C

Handlebar Assy. - AK63-00101-0001


93C-0XXX-02

S/N CCL100000 and up

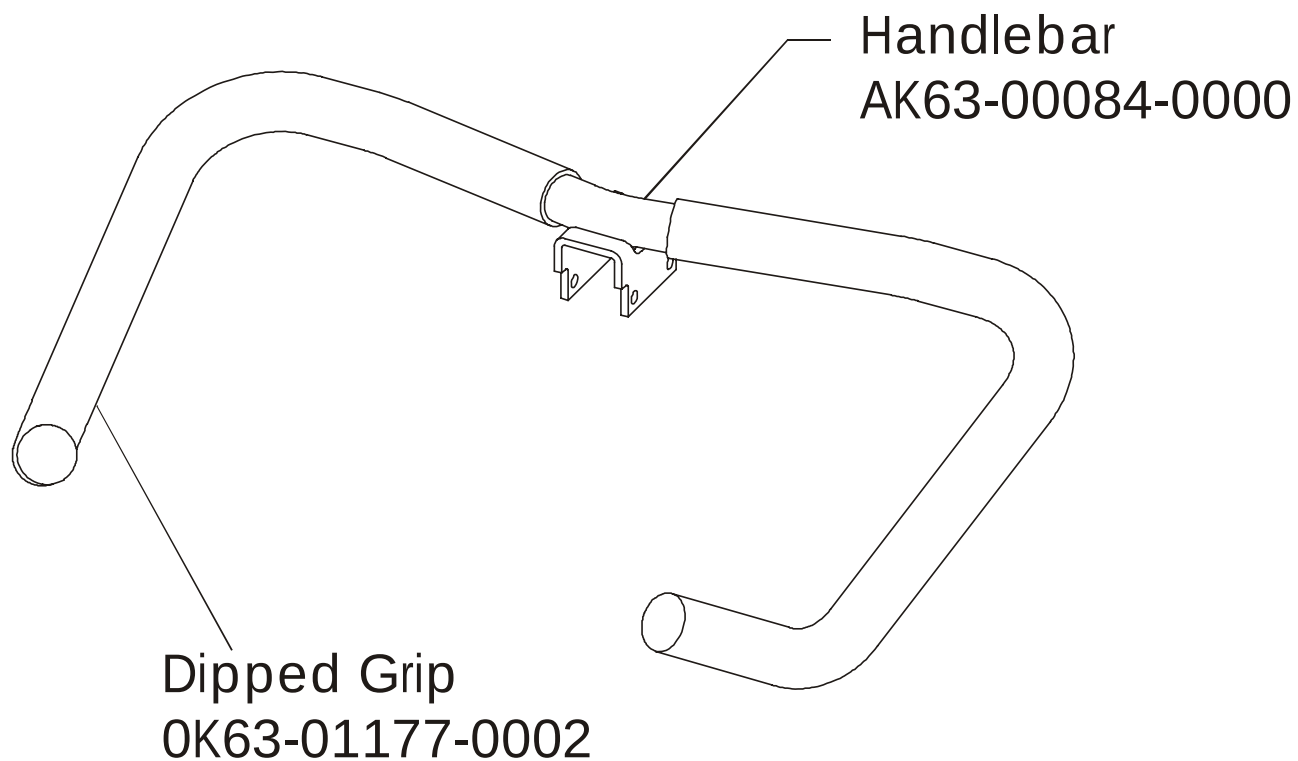

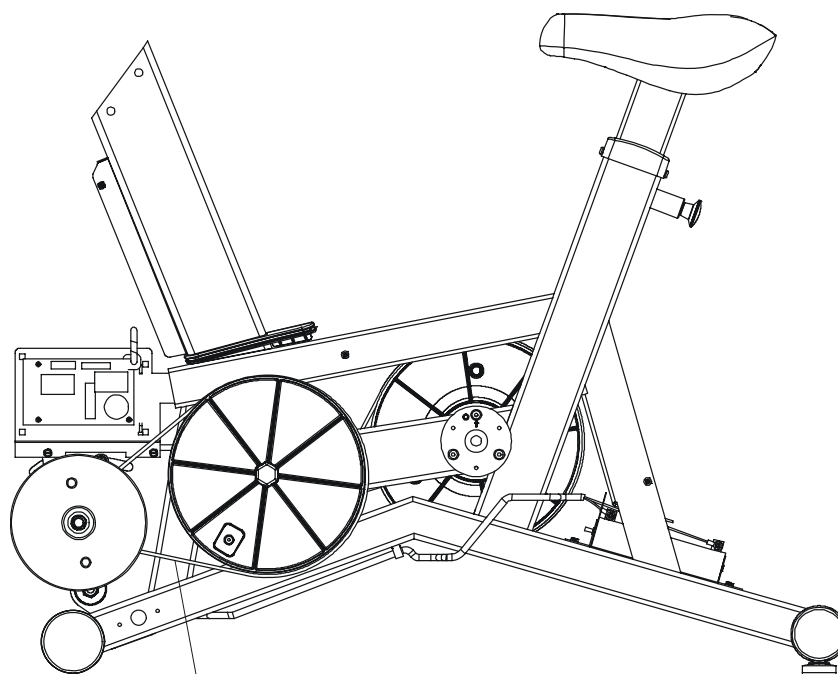

Alternator Belt
OK63-01065-0000

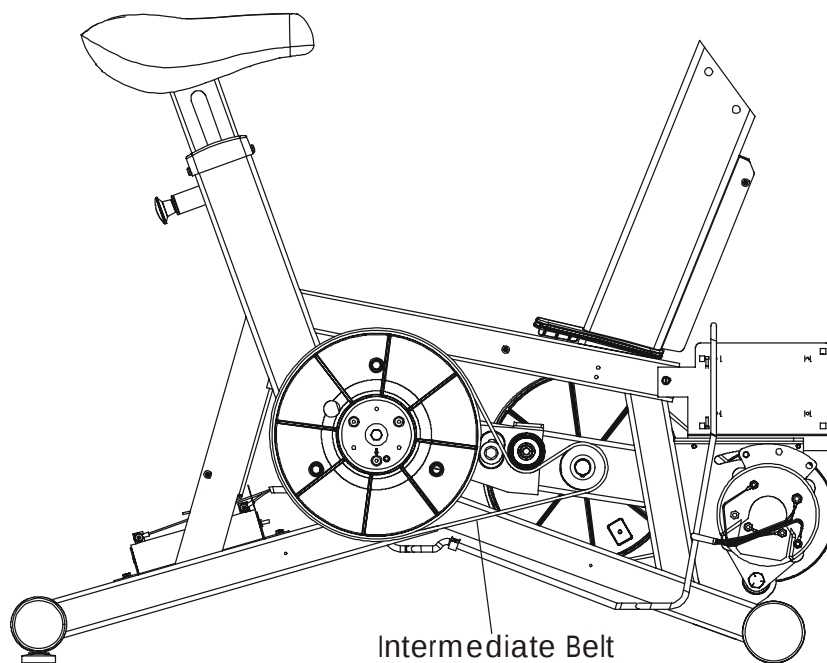

Intermediate Belt
OK63-01066-0001

ARCTIC SILVER 93C

Cables

93C-0XXX-02
S/N CCL100000 and up

