

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

HES4900/12



---

EN User manual

---

**PHILIPS**

# Contents

<b>1 Important</b>	4
Safety	4
Notice	5
<b>2 Your DVD Home Theater System</b>	8
Introduction	8
What's in the box	8
Overview of the main unit	9
Overview of the remote control	10
<b>3 Connect</b>	12
Connect speakers	12
Connect TV	12
Connect external audio devices	13
Connect FM antenna	15
Place the unit	15
Prepare the remote control	16
Connect power	16
<b>4 Get started</b>	18
Turn on	18
Find the correct viewing channel	18
Select menu display language	19
Use Philips EasyLink	19
Turn on Progressive Scan	19
<b>5 Play</b>	21
Select source	21
Watch video	21
Listen to music	23
Play MP3/WMA/picture files	24
<b>6 Tune to FM radio stations</b>	25
Program radio stations automatically	25
Program radio stations manually	25
Tune to a preset radio station	25
Set RDS clock	25
<b>7 Adjust settings</b>	27
General setup	27
Audio setup	28
Video setup	28
Preference setup	29
<b>8 Adjust volume level and sound effect</b>	31
Adjust volume level	31
Select a sound effect	31
Adjust treble/bass level	31
Mute sound	31
<b>9 Product information</b>	32
Specifications	32
Supported disc formats	33
USB playability information	33
<b>10 Troubleshooting</b>	34
<b>11 Appendix</b>	36
Mount to a wall	36
<b>12 Glossary</b>	38

# 1 Important

## Safety

Know these safety symbols



This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The 'exclamation point' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

**WARNING:** To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, fully insert.

### Important Safety Instructions

- ① Read these instructions.
- ② Keep these instructions.
- ③ Heed all warnings.
- ④ Follow all instructions.
- ⑤ Do not use this apparatus near water.
- ⑥ Clean only with dry cloth.
- ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⑨ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- ⑩ Only use attachments/accessories specified by the manufacturer.
- ⑪ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- ⑫ Unplug this apparatus during lightning storms or when unused for long periods of time.
- ⑬ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- ⑭ Battery usage **CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
  - Install all batteries correctly, + and - as marked on the unit.

- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Remove batteries when the unit is not used for a long time.

- ⑮ **Apparatus shall not be exposed to dripping or splashing.**
- ⑯ **Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).**
- ⑰ **This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: [www.eiae.org](http://www.eiae.org).**

Never look into the laser beam inside the unit.



#### Warning

- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

Wall mounting of the unit should only be performed by qualified personnel. The unit must only be mounted on an appropriate wall bracket and on a wall that can safely hold the weight of the unit. Improper wall mounting can result in severe injury or damage. Do not attempt to wall mount the unit yourself.

### Safety-Important notes for users in the U.K.

#### Mains plug

This apparatus is fitted with an approved 13 Amp plug. To change a fuse in this type of plug proceed as follows:

- ① Remove fuse cover and fuse.
- ② Fix new fuse which should be a BS1362 5 Amp, A.S.T.A. or BSI approved type.
- ③ Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place.

If the mains plug contains a fuse, this should have a value of 5 Amp. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5 Amp.

Note: The severed plug must be disposed off to avoid a possible shock hazard should it be inserted into a 13 Amp socket elsewhere.

#### How to connect a plug

The wires in the mains lead are coloured with the following code: blue = neutral (N), brown = live (L).

As these colours may not correspond with the colour markings identifying the terminals in your plug, proceed as follows:

- Connect the blue wire to the terminal marked N or coloured black.
- Connect the brown wire to the terminal marked L or coloured red.
- Do not connect either wire to the earth terminal in the plug, marked E (or e) or coloured green (or green and yellow).

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the two wires.

#### Copyright in the U.K.

Recording and playback of material may require consent. see Copyright Act 1956 and The performer's Protection Acts 1958 to 1972.

#### Norge

Typeskilt finnes på apparatens bakside.

Observer: Nettbryteren er sekundert innkoplet. Den innebygde nettdelen er derfor ikke fraktoplett nettet så lenge apparatet er tilsluttet nettkontakten.

For å redusere faren for brann eller elektrisk støt, skal apparatet, ikke utsettes for regn eller fuktighet.

---

### Notice



This product complies with the radio interference requirements of the European Community.

This product complies with the requirements of the following directives and guidelines: 2004/108/EC + 2006/95/EC

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

---

## Recycling



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste.

When you see the crossed-out wheel bin symbol with the chemical symbol 'Pb', it means that the batteries comply with the requirement set by the directive for lead:



Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

### Environmental information

All unnecessary packaging has been omitted.

We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



**Be responsible  
Respect copyrights**

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.



HDMI, and HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC.



DivX, DivX Certified, and associated logos are trademarks of DivX, Inc. and are used under license.

Official DivX® Ultra Certified product. Plays all versions of DivX® video (including DivX® 6) with enhanced playback of DivX® media files and the DivX® Media Format.



Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and DTS Digital Surround are registered trademarks and the DTS logos and Symbol are trademarks of DTS, Inc. © 1996-2007 DTS, Inc. All Rights Reserved.



The USB-IF Logos are trademarks of Universal Serial Bus Implementers Forum, inc.



Manufactured under license from Dolby Laboratories. Dolby, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



ENERGY STAR and the ENERGY STAR mark are registered U.S. marks.

Note

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This apparatus includes this label:



Note

- The type plate is located on the back of the apparatus.

## 2 Your DVD Home Theater System

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

This DVD Home Theater System is designed to complement your home perfectly. Enjoy the DVD Home Theater System with multi-channel surround sound and excellent picture quality.

---

### Introduction

With this unit, you can:

- watch video from DVD/VCD/SVCD or USB devices
  - enjoy audio from discs or USB devices
  - view pictures from discs or USB devices
  - listen to FM radio
  - Control EasyLink-compliant devices through a single remote control
  - Sync audio output with the video output
- You can enrich sound output with these sound effects:**
- Surround sound experience
  - Preset sound modes

The unit supports these media/disc formats:



You can play DVD discs with the following region codes:

DVD region code	Countries
 	Europe


---

### What's in the box

Check and identify the contents of your package:

- Main unit
- Speakers (x 2)
- Digital wireless subwoofer
- Remote control (with batteries)
- Power adapter for the main unit
- Power cord
- AV cable (red/white/yellow)
- MP3 Link cable
- SCART adapter
- FM wire antenna
- Wall mount bracket and screws (x4)


## Overview of the main unit

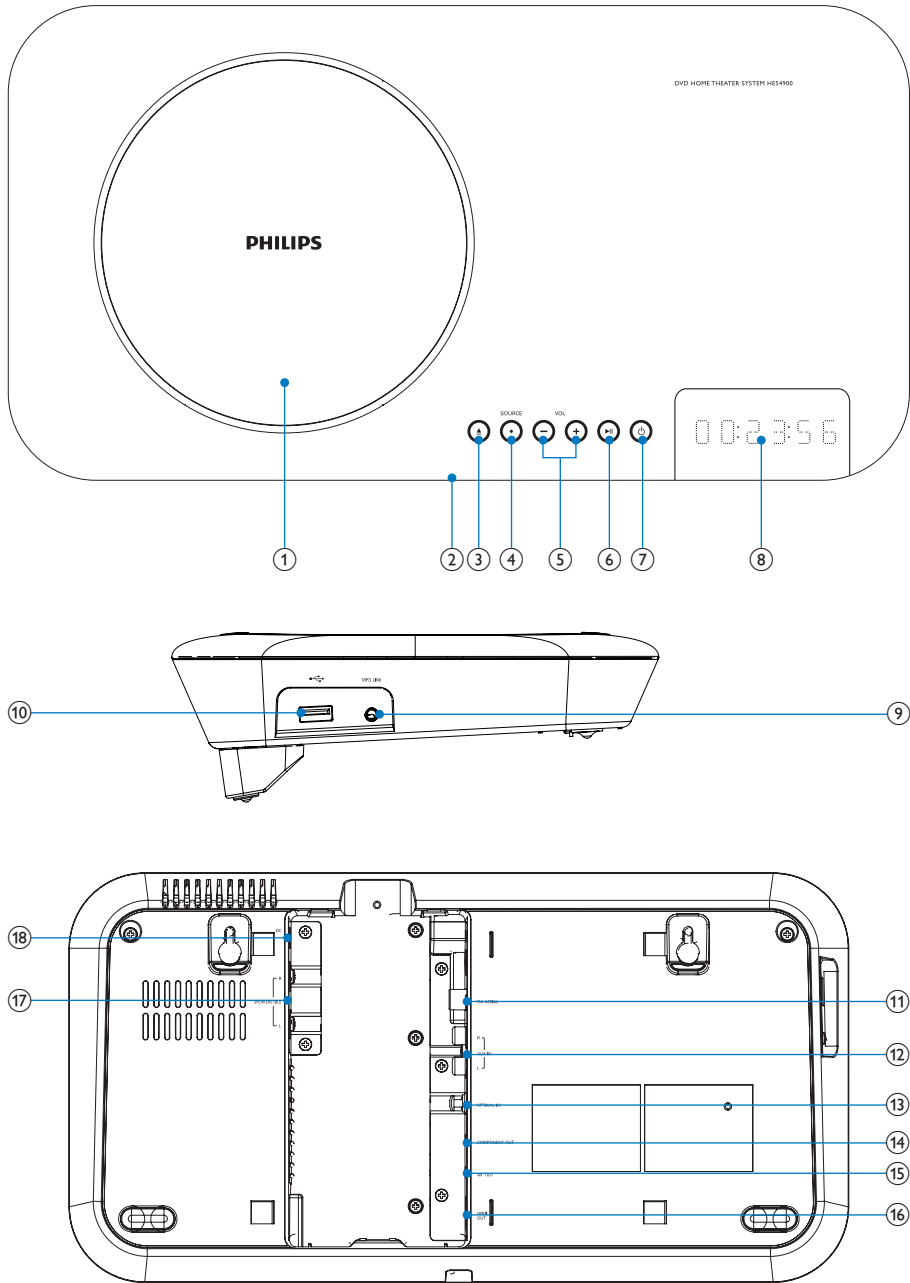





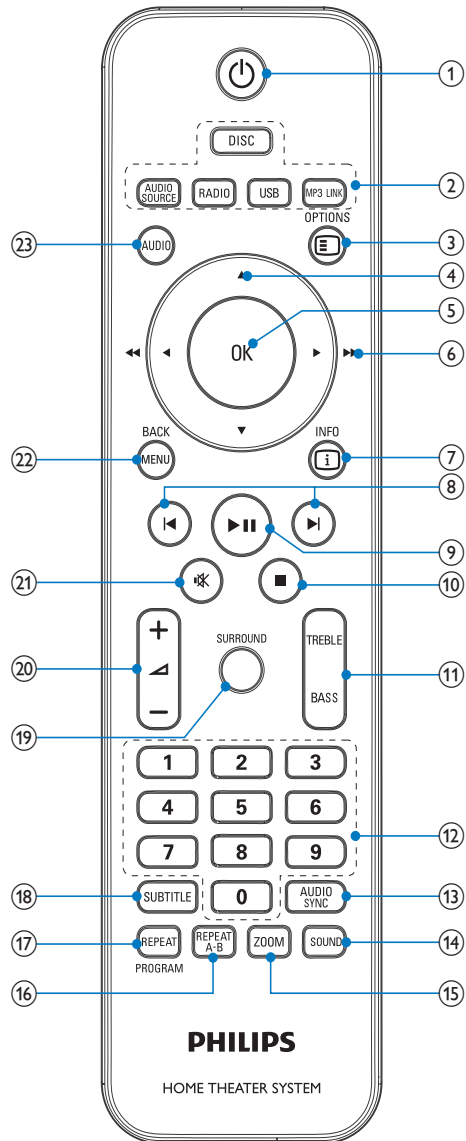


- ① Disc compartment
- ② Remote control sensor
- ③ ▲
  - Open the disc compartment.
- ④ SOURCE
  - Select a source.
- ⑤ VOL +/-
  - Adjust volume.
- ⑥ ►►
  - Start or pause play.
- ⑦ ⏻
  - Turn on the unit.
  - Switch to normal standby mode or low-power-consumption standby mode.
- ⑧ Display panel
  - Display current status.
- ⑨ MP3 LINK
  - Jack for an external audio device.
- ⑩ 🔄
  - USB socket.
- ⑪ FM ANT
  - FM antenna socket.
- ⑫ AUX IN L/R
  - Sockets for external audio input.
- ⑬ OPTICAL IN
  - Optical audio input socket.
- ⑭ COMPONENT OUT
  - Socket for component video output.
- ⑮ AV OUT
  - Socket for audio/video output.
- ⑯ HDMI OUT
  - HDMI output socket.
- ⑰ SPEAKER L/R
  - Socket for left/right speaker connection.
- ⑱ DC
  - Socket for power connection.


## Overview of the remote control



- ① 
  - Turn on the unit.
  - Switch to normal standby mode or low-power-consumption standby mode.
- ② **Source selection keys**
  - Select a source.
- ③ **OPTIONS** 
  - Access or exit the system setup menu.
- ④ **▲/▼**
  - For menus: navigate up/down.
  - Move an enlarged picture up/down.
  - Rotate or invert pictures.
- ⑤ **OK**
  - Confirms an entry or selection.
- ⑥ **◀/▶ (◀◀/▶▶)**
  - For menus, navigate left/right.
  - Search within a track or disc.
  - Move an enlarged picture left/right.
  - Tune to a radio station.
- ⑦ **INFO** 
  - For video/audio play, display information about the current status or the disc.
  - For pictures, display a thumbnail view of picture files.
  - For FM radio, display RDS clock.
- ⑧ **◀▶**
  - Skip to the previous/next title/ chapter/track.
  - Select a preset radio station.
- ⑨ **▶||**
  - Start or pause play.
- ⑩ **■**
  - Stop play.
  - Erase a preset radio station.
- ⑪ **TREBLE/BASS**
  - Adjust treble/bass level.
- ⑫ **Numeric keypad**
  - Select a title/chapter/track directly.
  - Select a preset radio station directly.
- ⑬ **AUDIO SYNC**
  - Access audio delay setting.
- ⑭ **SOUND**
  - Selects a predefined sound effect.
- ⑮ **ZOOM**
  - For pictures or video: zoom in/out.
- ⑯ **REPEAT A-B**
  - Repeat a specific section within a track/disc.
- ⑰ **REPEAT/PROGRAM**
  - Selects or turns off repeat or shuffle mode.
  - Program radio stations.
- ⑱ **SUBTITLE**
  - Select DVD or DivX subtitle language.
- ⑲ **SURROUND**
  - Enable/disable Dolby Virtual Speakers (DVS) sound effect.
- ⑳ **+  -**
  - Adjust volume.
- ㉑ ** \***
  - Mute or restore volume.
- ㉒ **MENU/BACK**
  - Return to the previous screen.
  - For video discs: access or exit the disc menu.
  - For video discs with playback control(PBC): turn on/off PBC.
- ㉓ **AUDIO**
  - For VCD, select stereo, mono-left or mono-right channel.
  - For DVD/DivX video, select an audio language.

## 3 Connect

### Connect speakers

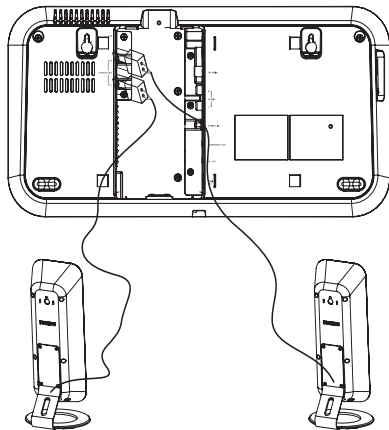

- 1 Insert the speaker plug into the SPEAKER L/R sockets.


### Connect TV

#### Option 1: Connect through HDMI - Highest quality

If you want to experience full high-definition video, use HDMI connection. HDMI provides an uncompressed, digital interface between your TV and the unit. Both audio and video signals are combined in one HDMI cable.

#### Note

- To use Philips EasyLink, you must have HDMI connection (see 'Use Philips EasyLink' on page 20).
- This unit is HDMI CEC compatible. It enables the connected TV/device to control each other over HDMI.

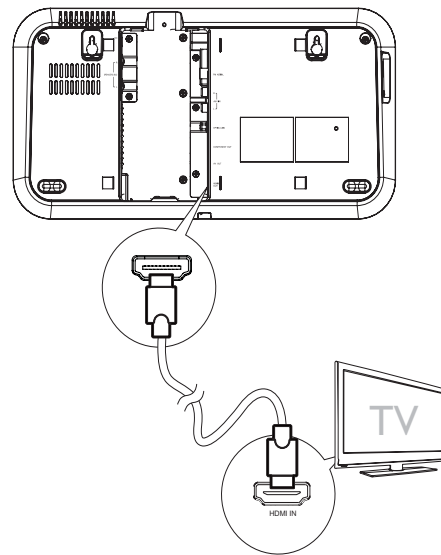


- 1 Connect an HDMI cable (not supplied) to:
  - - the HDMI OUT socket on this unit.
  - - the HDMI input socket on the TV.

#### Tip

- If your TV has only a DVI connection, connect through a HDMI/DVI adaptor. An extra audio connection is needed to complete this connection.

#### Option 2: Connect through component video - Higher quality


Component video provides better picture quality than AV out connections. Though component video supports high-definition signals, picture quality is lower than HDMI and is analog.

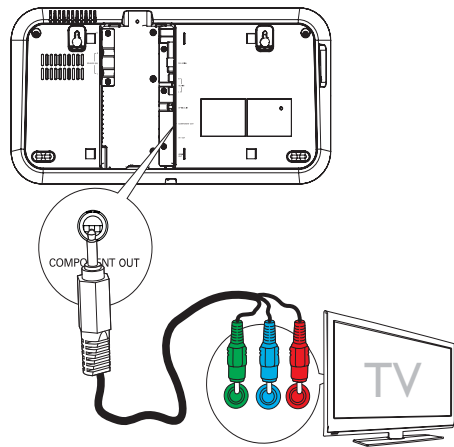

- ① Connect a component video cable (red/blue/green - not supplied) to:
- the COMPONENT OUT socket on this unit.
  - the component input sockets on the TV.

### Option 3: Connect through SCART - Good quality


SCART combines audio and video signals in one cable. Audio signals are stereo, video signals are composite. SCART does not support high-definition video and is analog.

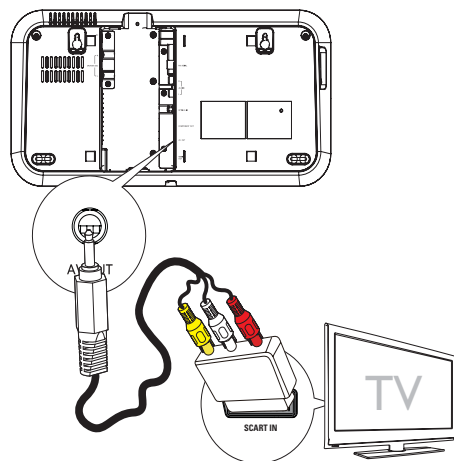

- 1 Connect the supplied AV cable to:
  - the AV OUT socket on this unit.
  - the AV In sockets on the SCART adaptor.
- 2 Connect the SCART adaptor to the TV.

### Option 4: Connect through AV out - Basic quality

AV out provides basic analog connectivity.

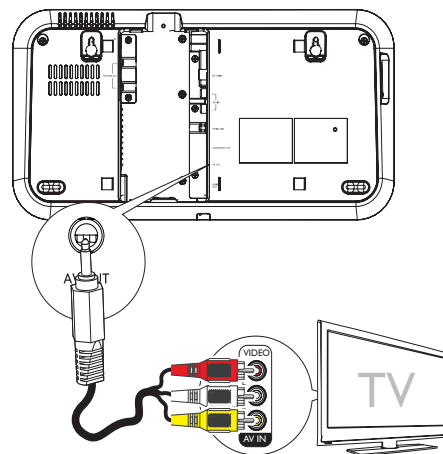

- ① Connect the supplied AV cable to:
- the AV OUT socket on this unit.
  - the AV In sockets on the TV.

#### Tip

- If you want to listen to sound from the unit instead of from TV, connect the video cable (yellow) only. Do not connect the audio cable (red and white).


### Connect external audio devices

You can play music from external audio devices such as MP3 player, portable CD player etc.

---

## Connect through Aux in

For audio device with red/white audio output sockets:

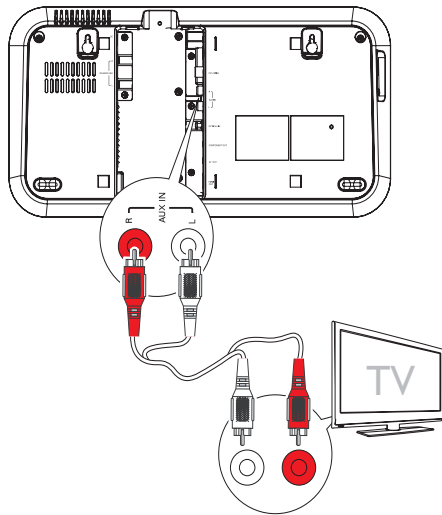


- 1 connect an audio cable (red/white - not supplied) to:
  - - the **AUX IN L/R** sockets on this unit.
  - - the audio output sockets on the device.
- 2 Press **AUX** on the remote control.
- 3 Operate the controls of the connected device to play music (see the user manual of the device).

---

## Connect through MP3 Link


For audio device with headphone socket:

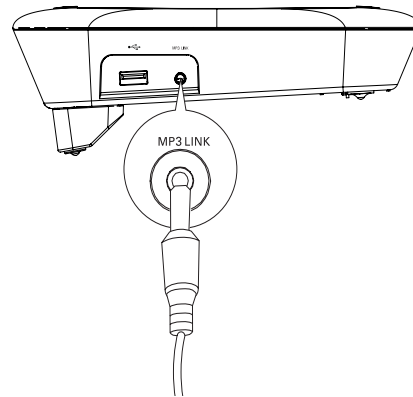

- ① Connect the supplied MP3 link cable to:
  - - the **MP3 LINK** socket on the main unit.
  - - the headphone socket on an external device.
- ② Press **MP3 LINK**.
- ③ Operate the controls of the connected device to play music (see the user manual of the device).

---

## Connect digital amplifier/receiver

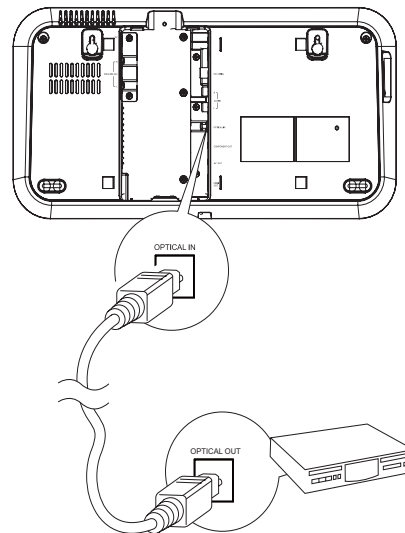


- ① Connect an optical cable (not supplied) to:
- - the **OPTICAL IN** socket on this unit.
  - - the Optical output socket on the digital amplifier/receiver.

## Connect FM antenna

 Tip

- This unit does not support MW radio reception.

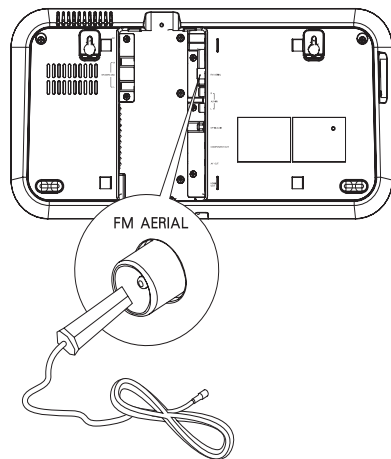


- 1 Connect the supplied FM antenna to the **FM ANT** socket on the unit.

## Place the unit




 Note

- To avoid magnetic interference or unwanted noise, never place this apparatus and speakers too close to any radiation devices.
- Never place this unit in an enclosed cabinet.
- Install this unit near the AC outlet where the AC power plug can be easily reached.


- 1 Complete the connections (see above), then mount on the back panel to keep the back smooth.

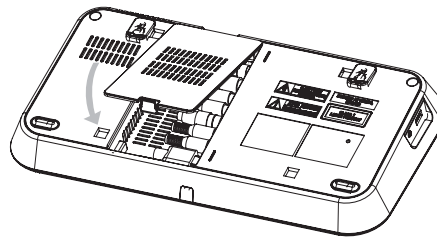


- 2 Mount on the stand and place the main unit near to the TV.

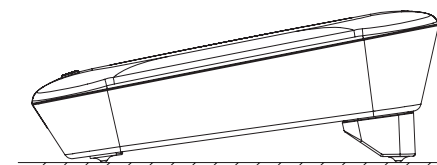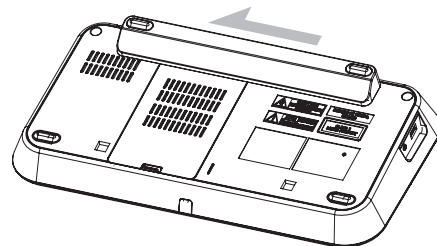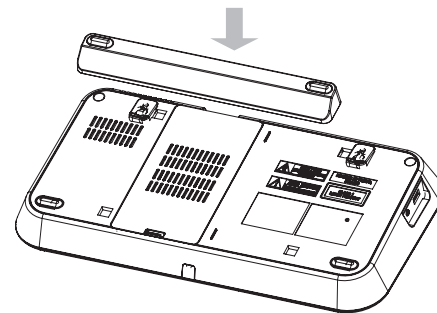

- 3** Mount on the speaker stands and position the speakers at the normal listening ear-level and directly parallel to the listening area.

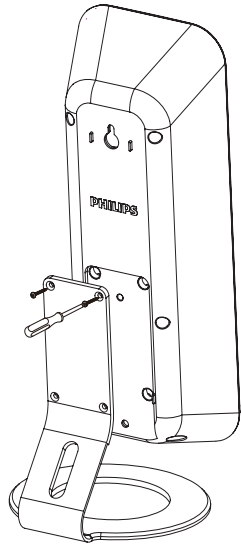

- 4** Place the subwoofer at the corner of the room or at least 1m (3.3ft) away from the TV.

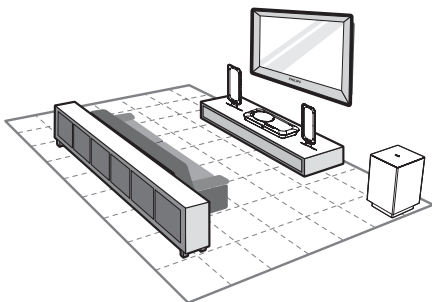

## Prepare the remote control


### ! Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Risk of decreased battery life! Never mix different brands or types of batteries.
- Risk of product damage! When the remote control is not used for long periods, remove the batteries.

### ≡ Note

- Perchlorate Material - special handling may apply. See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate).

- 1** Open the battery compartment.
- 2** Insert two R03 or AAA batteries with correct polarity (+/-) as indicated.
- 3** Close the battery compartment.

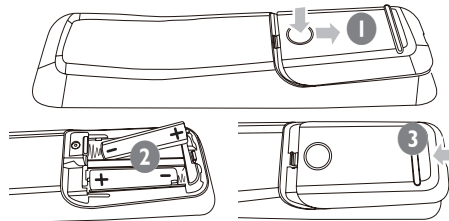

## Connect power

### ! Caution


- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the product.
- Risk of electric shock! When you unplug the AC power, always pull the plug from the socket. Never pull the cord.




Note

- Before connecting AC power, ensure you have completed all other connections.

**1** Connect the power adaptor to the DC socket on the unit and a wall outlet.

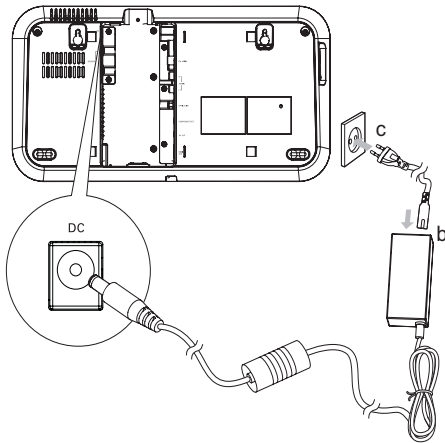

**2** Connect the power plug of the digital wireless subwoofer to a wall outlet.

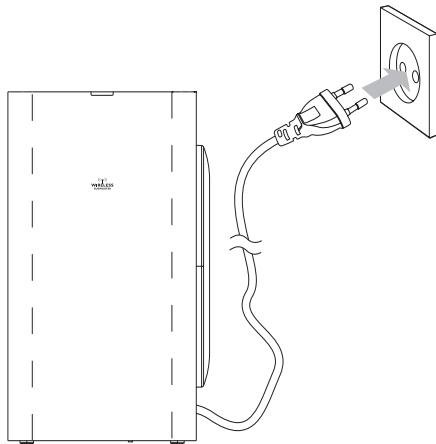



## 4 Get started

### Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the back of the apparatus. Write the numbers here:


Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

---

### Turn on

- 1 Press **⏻**.
  - ↳ The unit switches to the last selected source.
- 2 Wait for automatic setup of wireless connection between the main unit and subwoofer:
  - ↳ **[PAIRING]** (pairing) flashes.
  - ↳ If the connection succeeds, **[PAIR OK]** (pair OK) is displayed and the blue indicator on the subwoofer lights up.
  - ↳ If the connection fails, **[PAIR FAIL]** (pair fail) is displayed and the green indicator on the subwoofer lights up.
  - ↳ If the wireless connection fails, set up the connection manually.

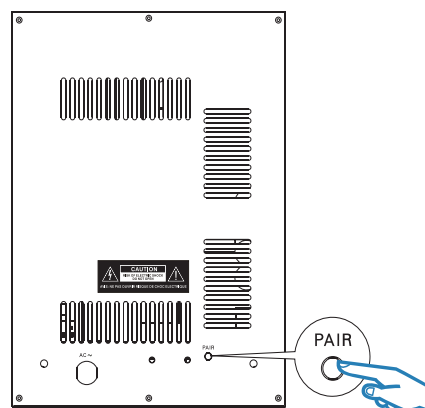

---

### Set up wireless connection manually

- 1 In standby mode, press and hold **SOURCE** on the main unit for 3 seconds.
  - ↳ **[PAIRING]** (pairing) flashes.
- 2 Press and hold **PAIR** on the subwoofer for 3 seconds.
  - ↳ The blue and green indicators on the subwoofer flash alternately.
  - ↳ If wireless connection succeeds, **[PAIR OK]** (pair OK) is displayed and the blue indicators on the subwoofer lights up.
- 3 Turn on the main unit again.

### Note

- If the wireless connection fails again, check whether there is any conflict or strong interference (for example, interference from other electronic devices) around your location. After removal of the conflict or strong interference, repeat the above procedures.

---

### Find the correct viewing channel

- 1 Press **DISC** to switch to disc mode.

- 2 Turn on the TV and switch to the correct video-in channel. (See the TV user manual on how to select the correct input.)

---

## Select menu display language

- 1 Press **OPTION**.
- 2 Select **[General Setup]**.
- 3 Select **[OSD Language]** and then press **▶**.
- 4 Select a setting and then press **OK**.
- 5 To exit the menu, press **OPTION**.

---

## Use Philips EasyLink

This unit supports Philips EasyLink, which uses the HDMI CEC (Consumer Electronics Control) protocol. EasyLink-compliant devices that are connected through HDMI connectors can be controlled by a single remote control.

### Note

- Philips does not guarantee 100% interoperability with all HDMI CEC devices.

- 1 Turn on the HDMI CEC operations on the TV or other connected devices. See TVs/ devices manual for details.
- 2 You can now enjoy the following Philips EasyLink controls.

---

### One touch play[Auto Wakeup TV]

When you press **▶||**, this unit will wake up from standby mode and start disc play (if a video disc is found in the disc compartment). At the same time, your TV will also be turned on and be switched to the correct viewing channel.

---

### One touch power-off[System Standby]

When you connect this unit to devices that support standby mode, you can use the remote control of this unit to switch this unit and all connected HDMI devices to standby mode. You can also use the remote control from any of the connected HDMI devices to perform one-touch standby.

---

### One touch audio play[System Audio Control]

When you connect this unit to HDMI CEC compliant devices, the unit can switch automatically to play audio from the connected device.

---

## Turn on Progressive Scan

Progressive scan displays twice the number of frames per seconds than interlaced scanning (ordinary TV system). With nearly double the number of lines, progressive scan offers higher picture resolution and quality.

Before you turn on this feature, ensure that:

- The TV supports progressive scan signals.
- You have connected this unit with the TV through component video.

- 1 Turn on the TV.
- 2 Ensure that the TV progressive scan mode is deactivated (see the TV user manual).
- 3 Switch the TV to the correct viewing channel for this unit.
- 4 Press **DISC**.
- 5 Press **OPTION**.
- 6 Press **▲/▼** to select **[Video Setup]** in the menu, then press **▶**.

- 7 Select **[Progressive]** > **[On]**, then press **OK**.  
↳ A warning message is displayed.
- 8 To proceed, select **[Ok]** and press **OK**.  
↳ The progressive setup is complete.

 **Note**

- If a blank/distorted screen is displayed, wait for 15 seconds for auto recovery or turn off progressive scan manually.

- 9 Turn on the progressive scan mode on the TV.

---

#### Turn off progressive scan manually

- 1 Turn off the progressive scan mode on the TV.
- 2 Press **⏻** **OPTIONS**.
- 3 Press **▲/▼** to select **[Video Setup]** in the menu, then press **▶**.
- 4 Select **[Progressive]** > **[Off]**, then press **OK**.
- 5 To exit the menu, press **⏻** **OPTIONS**.

## 5 Play

### Note

- With some disc/file types, play may differ.

### Select source


You can enjoy video, audio or picture files from DVD/VCD/SVCD disc or USB devices.

For disc

### Caution

- Never look at the laser beam inside the unit.
- Risk of product damage! Never play discs with accessories such as disc stabilizer rings or disc treatment sheets.
- Never put any objects other than discs into the disc compartment.

- 1 Press **▲** on the main set to open the disc compartment.
- 2 Place a disc into the disc compartment.
  - Ensure that the label faces upwards.

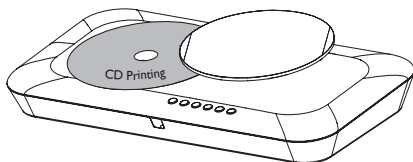


- 3 Press **▲** to close the disc compartment.
- 4 Press **DISC** to select the DISC source.

For USB device

### Note

- Ensure that the USB device contains playable music, pictures or video.

- 1 Insert the USB device to the  socket.

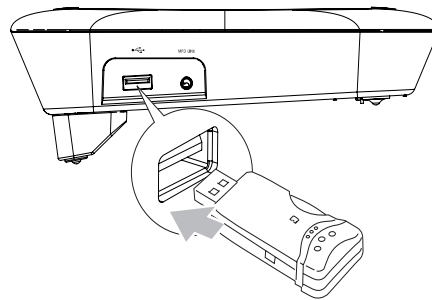

- 2 Press **USB** to select the USB source.
  - A contents menu is displayed.

For connected MP3 device (see 'Connect through MP3 Link' on page 15)

### Watch video

- 1 Select source. (see 'Select source' on page 22)
- 2 For disc, press **▶||** to start play.
- 3 For USB device: select a folder first, then select a file, and then press **OK**.
  - To return to the main menu, press **▲** until the 'Previous' folder is selected, then press **OK**.
- 4 To stop play, press **■**.
- 5 To pause or resume play, press **▶||**.
- 6 To skip to the previous/next title/chapter/track, press **◀|▶**.  
If play does not start automatically:

- Select a title/chapter/track and then press **▶||**.

 **Tip**

- To play a locked DVD, enter the 4-digit parental control password.

---

### Use the disc menu

When you load a DVD/(S)VCD disc, a menu may be displayed on the TV screen.

**To return to the menu during play:**

- 1 Press **MENU/BACK**.

 **Note**

- To see the disc menu of a VCD disc, you must turn on PlayBack Control (PBC) feature of the disc.

---

### Fast forward/backward

- 1 During play, press **◀/▶** (**◀◀/▶▶**) repeatedly to select a search speed.
  - To resume play at normal speed, press **▶||**.

---

### Resume video play from last stopped point

 **Note**

- This feature is only available for video play.

- 1 In stop mode and when the disc has not been removed, press **OK**.

**To cancel resume mode and stop play completely:**

- 1 In stop mode, press **■**.

---

### Select an audio language

You can select an audio language on DVDs, DivX video or VCDs.

- 1 During disc play, press **AUDIO**.
  - ↳ The language options appear.

 **Note**

- For some DVDs, the language can only be changed from the disc menu. Press **MENU/BACK** to access the menu.

---

### Select a subtitle language

 **Note**

- This feature is only available for DVDs/DivX videos recorded with multiple audio languages.

- ① During play, press **SUBTITLE** repeatedly to select an available subtitle language.

 **Tip**

- For some DVDs, the language can only be changed from the disc menu. Press **MENU/BACK** to access the menu.

---

### Sync audio output with video play

If the video play is slower than the audio output (sound does not match with the pictures), you can delay the audio output to match the video.

- 1 Press and hold **AUDIO SYNC** until 'AUDIO SYNC XXX' is displayed.
  - ↳ 'XXX' denotes the delay time.
- 2 Within five seconds, press **▲ +/-** to set the delay time for audio output.

## Repeat A-B (DVD/VCD/CD/MP3/WMA)

- 1 During music or video play, press **REPEAT A-B** at the start point.
- 2 Press **REPEAT A-B** at the end point.
  - ↳ The selected section starts to play repeatedly.
    - To cancel repeat play, press **REPEAT A-B** again.

### Note

- The section A and B can be set only within the same track/title.

## Zoom in/out image

- 1 During video/picture play, press **ZOOM** repeatedly to zoom in/out the image.
  - When the image is zoomed in, you can press **◀/▶/▲/▼** to pan through the image.

## Display play information

- 1 During play, press **INFO** repeatedly to display play information.

## Play DivX video

You can play DivX files copied onto a CD-R/RW, recordable DVD or USB device.

- 1 Insert a disc or connect a USB device.
- 2 Select a source:
  - For discs, press **DISC**.
  - For USB devices, press **USB**.
- 3 Select a title to play, then press **▶||**.
  - To stop play, press **■**.
  - To pause or resume play, press **▶||**.
  - To change a subtitle language, press **SUBTITLE**.

### Note

- You can only play DivX videos rented or purchased through the DivX registration code of this unit.
- Subtitle files with the following filename extensions (.srt, .smi, .sub, .ssa, .ass) are supported but do not appear on the file navigation menu.
- The subtitle filename has to be the same as the file name of the video.

## Listen to music

- 1 Select source.
- 2 For disc, press **▶||** to start play.
- 3 For MP3, select a folder first, then select a file, and then press **OK**.
  - To return to the main menu, press **▲** until the 'Previous' folder is selected, then press **OK**.
- 4 To stop play, press **■**.
- 5 To pause or resume play, press **▶||**.
- 6 To skip to the previous/next file, press **◀/▶**.

## Select repeat/shuffle play options

- 1 During play, press **REPEAT/PROGRAM** repeatedly to select a repeat option or the shuffle play mode.
  - To resume normal play, press **REPEAT/PROGRAM** repeatedly until **[Repeat Off]** is displayed.

## Change the audio channel

### Note

- This feature is only available for VCD/DivX play.

- 1 During play, press **AUDIO** repeatedly to select an audio channel available on the disc:
  - Mono Left

- Mono Right
- Stereo



#### Tip

- See the respective pages for below play options:
- Fast forward/backward (see 'Fast forward/backward' on page 23)
- Repeat A-B (see 'Repeat A-B (DVD/VCD/CD/MP3/WMA)' on page 23)
- Display play information

---

## Play MP3/WMA/picture files

You can play MP3/WMA/picture files copied onto a CD-R/RW, recordable DVD or USB device.

- 1 Insert a disc or connect a USB device.
- 2 Select a source:
  - For discs, press **DISC**.
  - For USB devices, press **USB**.
  - A contents menu is displayed.
- 3 Select a folder; then press **OK**.
- 4 Select a file to play, then press **▶||**.
  - To return to the main menu, press **▲** until the 'Previous' folder is selected, then press **OK**.
  - To stop play, press **■**.
  - To pause or resume play, press **▶||**.
  - To skip to the previous/next file, press **◀/▶**.

---

## Start slideshow of pictures

- 1 During play, press **☰** **OPTIONS**.
  - ↳ The thumbnails of 12 pictures are displayed.
- 2 Select a file, then press **▶||** to start slideshow play.
  - To go to previous or next screen display, press **◀/▶**.
  - To select a picture, press the cursor buttons.

- To display the selected photo only, press **OK**.

---

## Rotate picture

- 1 During play, press **▲/▼** to rotate the picture anti-clockwise/clockwise.

---

## Start musical slideshow

You can play MP3/WMA music files and JPEG photo files simultaneously to create musical slideshow. The MP3/WMA and JPEG files must be stored on the same disc or USB device.

- 1 Play MP3/WMA music.
- 2 Navigate to the photo folder/album and press **▶||** to start slideshow play.
  - ↳ Slideshow begins and continues till the end of the photo folder or album.
  - ↳ Audio continues to play till the end of the disc.
  - ↳ To return to the menu, press **MENU/BACK**.
- 3 To stop slideshow play, press **■**.
- 4 To stop music play, press **■** again.

## 6 Tune to FM radio stations

- 1 Ensure that you have connected and fully extended the supplied FM antenna.
  - 2 Press **RADIO**.
  - 3 Press and hold **◀/▶** (**◀◀▶▶**).
  - 4 When the frequency indication starts to change, release the button.
    - ↳ The FM tuner tunes to a station with strong reception automatically.
  - 5 Repeat steps 3-4 to tune to more stations.
- To tune to a weak station:**  
Press **◀/▶** (**◀◀▶▶**) repeatedly until you find optimal reception.

### Program radio stations automatically

#### Note

- You can program a maximum of 20 preset radio stations.

- 1 Press **◀/▶** to select a preset number to start programming.
- 2 Press and hold **REPEAT/PROGRAM** for 2 seconds to activate automatic programming.
  - ↳ **[AUTO]** (auto) is displayed briefly.
  - ↳ All available stations are programmed in the order of waveband reception strength.
  - ↳ The last programmed radio station is broadcast automatically.

### Program radio stations manually

#### Note

- You can program a maximum of 20 preset radio stations.

- 1 Tune to a radio station.
- 2 Press **REPEAT/PROGRAM** to activate programming.
- 3 Press **◀/▶** to allocate a number from 1 to 20 to this radio station, then press **REPEAT/PROGRAM** to confirm.
  - ↳ The preset number and the frequency of the preset station are displayed.
- 4 Repeat the above steps to program other stations.

#### Note

- To overwrite a programmed station, store another station in its place.

### Tune to a preset radio station

- 1 Press **◀/▶** to select a preset number that you want.

#### Tip

- You can also use the numerical keypad to select a preset station directly.

### Set RDS clock

You can use time signal broadcast together with the RDS signal to set the clock of the apparatus automatically.



- 1 Tune to a RDS radio station that transmits time signals.
  - ↳ The apparatus reads the RDS time and sets the clock automatically.

 Note

- The accuracy of the transmitted time depends on the RDS station that transmits the time signal.

---

## Show RDS information

RDS (Radio Data System) is a service that allows FM stations to show additional information. If you tune to a RDS station, a RDS icon and the station name are displayed.

When automatic programming is used, RDS stations are programmed first.

- 1 Tune to a RDS station.
- 2 Press **INFO** repeatedly to scroll through the following information (if available):
  - ↳ Station name
  - ↳ Program type such as **[NEWS]** (news), **[SPORT]** (sport), **[POP M]** (pop music)...
  - ↳ Frequency

## 7 Adjust settings

- 1 Press **OPTIONS**.
- 2 Select a setup page.
- 3 Select an option and then press **▶**.
- 4 Select a setting and then press **OK**.
  - To return to the previous menu, press **◀**.
  - To exit the menu, press **OPTIONS**.

### General setup

On **[General Setup Page]**, you can set the following options:

#### **[Disc Lock]**

Set play restriction for specific discs. Before you start, place the disc in the disc compartment (maximum 40 discs can be locked).

- **[Lock]** – Restrict access to the current disc. You need to enter a password to unlock and play the disc.
- **[Unlock]** – Play all discs.



#### Tip

- To set or change the password, go to **[Preference Setup] > [Password]**.

#### **[OSD Language]**

Select the preferred language for on-screen display.

This unit supports Philips EasyLink, which uses the HDMI CEC (Consumer Electronics Control) protocol. EasyLink-compliant devices that are connected through HDMI connectors can be controlled by a single remote control.



#### Note

- Philips does not guarantee 100% interoperability with all HDMI CEC devices.

#### **[EasyLink]**

- **[Auto Wakeup TV]** - Turn on or off one touch play.
- **[System Standby]** - Turn on or off one touch power-off.
- **[System Audio Control]** - Turn on or off one touch audio play.

#### **[Display Dim]**

Turn on or off adjustment of display brightness level.

#### **[Screen Saver]**

The screen saver protects the TV screen damage due to prolonged exposure to a static image.

- **[On]** – Enable the screen saver.
- **[Off]** – Disable the screen saver.

#### **[Sleep Timer]**

Switches to standby automatically after the preset time.

- **[15 mins], [30 mins], [45 mins], [60 mins]** – select the count down time before the apparatus switches to standby.
- **[Off]** – disable sleep mode.

### Switch to standby mode

#### **[Standby Mode]**

Set the standby mode.

- **[Normal]** - power consumption <4W.
- **[Low Power]** - power consumption <1W. However, it requires longer time to power up.

#### **[DivX(R) VOD Code]**

Display the DivX® registration code.

 **Tip**

- Enter this DivX registration code when you rent or purchase video from [www.divx.com/vod](http://www.divx.com/vod). The DivX videos rented or purchased through the DivX@VOD (Video On Demand) service can be played only on the device to which it is registered.

---

## Audio setup

On **[Audio Setup Page]**, you can set the following options:

### **[HDMI Audio]**

When you connect this apparatus and TV with an HDMI cable, select the audio output setting for this connection.

- **[On]** – the sound is output through both your TV and this apparatus. If the audio format on the disc is not supported, it is downmixed to two-channel sound (Linear-PCM).
- **[Off]** – disable audio output from the TV. The sound is only output through this apparatus.

### **[Night Mode]**

Make loud sound level softer and soft sound level louder so that you can watch the DVD movies at a low volume, without disturbing others.

- **[Off]** – enjoy surround sound with its full dynamic range.
- **[On]** – enjoy quiet viewing at night (DVDs only).

---

## Video setup

On **[Video Setup Page]**, you can set the following options:

### **[TV Type]**

Change this setting if the video does not appear correctly. By default, this setting matches the most common setting for TVs in your country.

- **[PAL]** – For TV with PAL color system.
- **[NTSC]** – For TV with NTSC color system.
- **[Multi]** – For TV that is compatible with both PAL and NTSC.

### **[TV Display]**

The TV format determines the aspect ratio of display according to the type of TV you have connected.



4:3 Pan Scan (PS)    4:3 Letter Box (LB)    16:9 (Wide Screen)

- **[4:3 Pan Scan]** – For 4:3 screen TV: full-height display with the trimmed sides.
- **[4:3 Letter Box]** – For 4:3 screen TV: wide-screen display with black bars on the top and bottom of the screen.
- **[16:9 Wide Screen]** – For wide-screen TV: display ratio 16:9.

### **[Progressive]**

Turn on or off progressive scan mode.

### **[Picture Settings]**

Select a predefined set of picture color settings or customize your personal setting.

- **[Standard]** – original color setting.
- **[Bright]** – vibrant color setting.
- **[Soft]** – warm color setting.
- **[Personal]** – customize the color setting. Adjust the level of brightness, contrast, sharpness/tint and color saturation.

### **[Closed Caption]**

Turn off or on display captions.

- **[On]** – show the sound effects in subtitles. Applicable only to discs with Closed Caption information included and the TV that supports this feature.
- **[Off]** – turn off closed caption.

## Preference setup

On **[Preference Page]**, you can set the following options:

### **[Audio]**

Select the preferred audio language for disc play.

### **[Subtitle]**

Select the preferred subtitle language for disc play.

### **[Disc Menu]**

Select the preferred disc menu language.

#### Note

- If the language you have set is not available on the disc, the disc uses its own default language.
- For some discs, the subtitle/audio language can only be changed from the disc menu.
- To select the languages that are not listed in the menu, select **[Others]**. Then check the Language Code list at the back of this user manual and enter the respective 4-digit language code.

### **[Parental]**

Restricts access to discs that are unsuitable for children. These types of discs must be recorded with ratings.

- 
- 1) Press **OK**.
  - 2) Select a rating level, then press **OK**.
  - 3) Press the numeric keys to enter the password.
- 

#### Note

- Rated discs above the level you set in **[Parental]** require a password to be played.
- The ratings are country-dependent. To allow all discs to play, select **'8'**.
- Some discs have ratings printed on them but are not recorded with ratings. This function has no effect on such discs.

#### Tip

- You can set or change the password (see **[Preference Setup] > [Password]**).

### **[PBC]**

Turns on or off the content menu of VCDs/SVCDs with PBC (playback control) feature.

- **[On]** - display index menu when you load a disc for play.
- **[Off]** - skip the menu and start play from the first title.

### **[MP3/JPEG Nav]**

Select to display the folders or display all the files.

- **[With Menu]** – display the folders of MP3/WMA files.
- **[Without Menu]** – display all the files.

### **[Password]**

Set or change the password for locked discs and play restricted DVDs.

- 
- 1) Press the numeric keys to enter '0000' or your last set password at **[Old Password]** field.
  - 2) Enter the new password at **[New Password]** field.
  - 3) Enter the new password again at **[Confirm PWD]** field.
  - 4) Press **OK** to exit the menu.
-

 Note

- If you forget the password, enter '0000' before you set a new password.

**[DivX Subtitle]**

Select a character set that supports the DivX subtitle.

---

**[Standard]** English, Irish, Danish, Estonian, Finnish, French, German, Italian, Portuguese, Luxembourgish, Norwegian (Bokmål and Nynorsk), Spanish, Swedish, Turkish

---

**[Central Europe]** Polish, Czech, Slovak, Albanian, Hungarian, Slovene, Croatian, Serbian (Latin script), Romanian

---

**[Cyrillic]** Belarusian, Bulgarian, Ukrainian, Macedonian, Russian, Serbian

---

**[Greek]** Greek

---

**[Hebrew]** Hebrew

 Note

- Ensure that the subtitle file has the exact same file name as the movie file. If for example the file name of the movie is 'Movie.avi', then you will need to name the text file 'Movie.sub' or 'Movie.srt'.

**[Version Info]**

Display the software version of this apparatus.

 Tip

- This information is required when you want to find out if a newest software version is available at the Philips website that you may download and install on this apparatus.

**[Default]**

Resets all the settings of this apparatus to factory default, except for **[Disc Lock]**, **[Password]** and **[Parental]** settings.

## 8 Adjust volume level and sound effect

### Adjust volume level

- 1 During play, press +  - to increase/decrease the volume level.

### Select a sound effect

#### Note

- You cannot use different sound effects at the same time.

### Select a preset sound effect

- 1 During play, press **SOUND** repeatedly to select:
  - **[CLASSIC]** (Concert)
  - **[ROCK]** (Action)
  - **[Sports]** (Gaming)
  - **[Lounge]** (Drama)
  - **[Night]**


### Select surround sound effect

DVS (Dolby Virtual Speaker) technology creates a highly compelling 5.1-channel listening experience from as few as two speakers. It is an ideal entertainment solution for locations where space for multiple speaker setup is limited.

- 1 During play, press **SURROUND** to turn on/off surround sound effect.

### Adjust treble/bass level

- 1 Press **TREBLE** or **BASS**.

- 2 Within 5 seconds, press  +/- to set the level for high tones (treble) or low tones (bass).

### Mute sound

- 1 During play, press  to mute/unmute sound.

## 9 Product information

### Note

- Product information is subject to change without prior notice.

### Specifications

#### Amplifier

Total output power	2x75W +250W RMS
Frequency Response	20 -20000Hz, +/-3dB
Signal to Noise Ratio	>67dB
Aux Input	1.00v RMS 20kohm

#### Disc

Laser Type	Semiconductor
Disc Diameter	12cm/8cm
Video Decoding	MPEG-1 / MPEG-2 / DivX
Video DAC	12Bits
Signal System	PAL / NTSC
Video Format	4:3 / 16:9
Video S/N	>48dB
Audio DAC	24Bits / 96kHz
Total Harmonic Distortion	<1%
Frequency Response	4Hz - 20kHz (44.1kHz) 4Hz - 22kHz (48kHz) 4Hz - 24kHz (96kHz)
S/N Ratio	>67dBA

#### Tuner (FM)

Tuning Range	87.5 - 108MHz
Tuning grid	50kHz
Sensitivity	<22dBf
- Mono, 26dB S/N Ratio	
Search Selectivity	>28dBf
Total Harmonic Distortion	<3%
Signal to Noise Ratio	>50dB

#### Speakers

Speaker Impedance	8ohm
Speaker Driver, subwoofer	6.25" subwoofer
Speaker Driver, woofer	3" woofer
Speaker Driver, tweeter	19mm tweeter
Sensitivity	
- Subwoofer	>84dB/m/W ± 4dB/m/W
- Woofer/Tweeter	>82dB/m/W ± 4dB/m/W

## General information

AC power	220-230V, 50Hz
Operation Power	32W
Consumption	38W
- Main unit	
- Subwoofer	
Normal standby Power Consumption	<4W
Low Standby Power Consumption	<1W
Composite Video Output	1.0Vp-p, 75ohm
Optical Output	0.5Vpp ± 0.1Vpp 75ohm
HDMI (CEC) Output	1.3a
USB Direct	Version 2.0
Dimensions	
- Main Unit (W x H x D)	360 x 190 x 65mm
- Speakers	135 x 330 x 135mm
- Wireless Subwoofer Box (W x H x D)	170 x 330 x 340mm
Weight	
- With Packaging	13kg
- Main Unit	1.2 kg
- Speaker Box	1.1kg x 2
- Wireless Subwoofer Box	5.4 kg

## Supported disc formats

- Digital Video Discs (DVDs)
- Video CDs (VCDs)
- Super Video CDs (SVCDs)
- Digital Video Discs + Rewritable (DVD+RW)
- Compact Discs (CDs)
- Picture (Kodak, JPEG) files on CDR(W)
- DivX(R) disc on CD-R(W):
- DivX 3.11, 4.x and 5.x
- WMA

### Supported MP3-CD formats:

- ISO 9660
- Max. title/album name: 12 characters
- Max. title number plus album: 255.
- Max. nested directory: 8 levels.
- Max. album number: 32.

- Max. MP3 track number: 999.
- Supported sampling frequencies for MP3 disc: 32 kHz, 44.1 kHz, 48 kHz.
- Supported Bit-rates of MP3 disc are: 32, 64, 96, 128, 192, 256 (kbps).
- The following formats are not supported:
  - Files like \*.VMA, \*.AAC, \*.DLF, \*.M3U, \*.PLS, \*.WAV
  - Non-English Album/Title name
  - Discs recorded in Joliet format
  - MP3 Pro and MP3 with ID3 tag

## USB playability information

### Compatible USB devices:

- USB flash memory (USB 2.0 or USB1.1)
- USB flash players (USB 2.0 or USB1.1)
- memory cards (requires an additional card reader to work with this apparatus)

### Supported formats:

- USB or memory file format FAT12, FAT16, FAT32 (sector size: 512 bytes)
- MP3 bit rate (data rate): 32-320 Kbps and variable bit rate
- WMA v9 or earlier
- Directory nesting up to a maximum of 8 levels
- Number of albums/ folders: maximum 99
- Number of tracks/titles: maximum 999
- ID3 tag v2.0 or later
- File name in Unicode UTF8 (maximum length: 128 bytes)

### Unsupported formats:

- Empty albums: an empty album is an album that does not contain MP3/ WMA files, and is not be shown in the display.
- Unsupported file formats are skipped. For example, Word documents (.doc) or MP3 files with extension .dlf are ignored and not played.
- AAC, WAV, PCM audio files
- DRM protected WMA files (.wav, .m4a, .m4p, .mp4, .aac)
- WMA files in Lossless format



# 10 Troubleshooting



## Warning

- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site ([www.philips.com/welcome](http://www.philips.com/welcome)). When you contact Philips, ensure that the apparatus is nearby and the model number and serial number are available.

### No power

- Ensure that the AC cord of the apparatus is connected properly.
- Ensure that there is power at the AC outlet.
- As a power-saving feature, the system switches off automatically 15 minutes after track play reaches the end and no control is operated.

### Remote control does not work

- Before pressing any function button, first select the correct source with the remote control.
- Reduce the distance between the remote control and the system.
- Aim the remote control directly at the sensor on the front of the main unit.
- Insert the batteries with their polarities (+/- signs) aligned as indicated.
- Replace the battery.

### Wireless connection fails.

- Set up wireless connection manually (see 'Set up wireless connection manually' on page 19).

### USB device or SD/MMC card not supported

- The USB device or SD/MMC card is incompatible with the apparatus. Try another one.

### No disc detected or disc does not play

- Insert a disc.
- Check if the disc is inserted upside down.
- Check the disc type, color system and regional code.
- Disable the password for parental control or change the rating level.
- Check for any scratches or smudges on the disc. Replace or clean the disc.
- Moisture has condensed inside the system. Wait until the moisture is cleared.

### No picture

- Check the video connection.
- Turn on the TV to the correct Video-In channel.
- Progressive scan is activated but the TV does not support progressive scan.

### No picture on HDMI connection.

- Check if the HDMI cable is faulty. Replace a new HDMI cable.
- If this happens when you change the HDMI video resolution, select the correct resolution until the picture appears.

### Black and white or distorted picture

- The disc does not match the TV color system standard (PAL/NTSC).
- Sometimes a slight picture distortion may appear. This is not a malfunction.
- Clean the disc.
- A distorted picture may appear during progressive scan setup.

### Audio or subtitle languages cannot be set

- The disc is not recorded with sound or subtitles in multiple languages.
- The audio or subtitle language setting is prohibited on the disc.

### Unable to select Progressive Scan

- Ensure the video output mode is set to **[Pr/Cr Pb/Cb Y]**.

**The aspect ratio of the TV screen cannot be changed even though you have set the TV display format.**

- The aspect ratio is fixed on the loaded DVD disc.
- The aspect ratio may not be changed for some TV systems.

**Cannot display some files in USB device or SD/MMC card**

- The number of folders or files in the USB device or SD/MMC card has exceeded a certain limit. This phenomenon is not a malfunction.
- The formats of these files are not supported.

**No sound or poor sound**

- Adjust the volume.
- Ensure the wireless subwoofer is connected.

**No sound on HDMI connection.**

- You may not hear any sound if the connected device is non-HDCP compliant or only DVI-compatible.

**Poor radio reception**

- Increase the distance between the main unit and your TV or VCR.
- Fully extend the FM antenna.
- Connect an outdoor FM antenna instead.

# 11 Appendix


## Mount to a wall

### Caution

- Risk of product damage! Always consult professional personnel to safely mount the product to a wall.
- Risk of injury! Ensure that no supply ducts such as gas, water or electricity are harmed when you drill the holes.

### What's in the supplied mounting kit

4 x wall mount screws (2 for main unit, 2 for speakers)

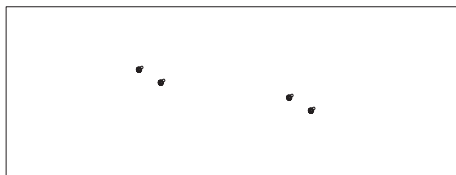

### What else you'll need

- Electric drill
- Screwdriver
- Pencil


### Mount the main unit and speakers

#### Caution


- Mount the main unit and speakers to a solid concrete wall or plaster board wall only!

You can mount the main unit and speakers to the wall.


- 1** Use a pencil to mark the drilling positions, the drill holes as marked.

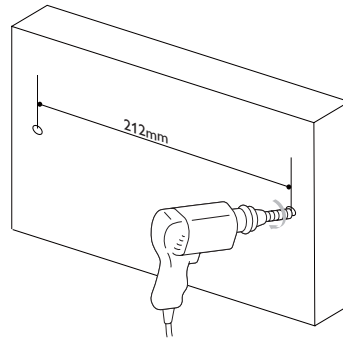


- 2** Screw on the supplied mounting screws.

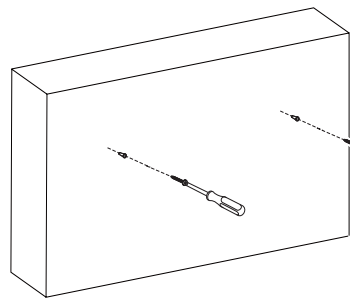


- 3** If you have installed the back bracket on the back of the main unit, take it off.

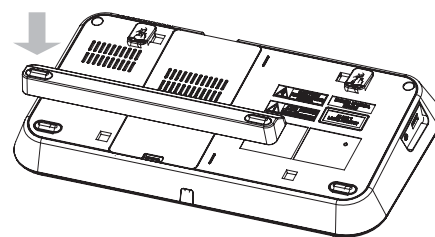

- 4** Mount the back bracket on the back bottom side of the main unit.

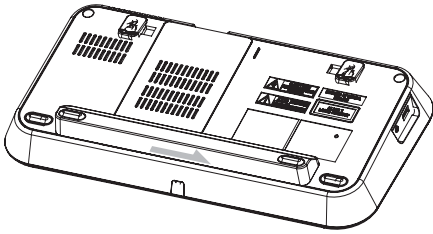

5 Hook the main unit and speakers in place.

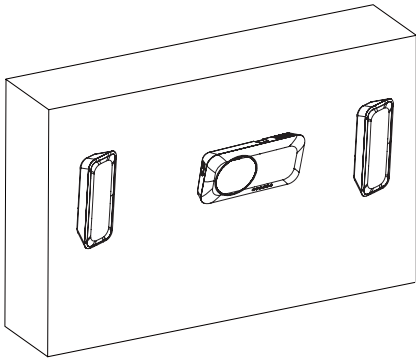

# 12 Glossary

---

## A

### **Analog audio**

Sound that has not been turned into numbers. Analog sound is available when you use the AUDIO LEFT/RIGHT. These red and white jacks send audio through two channels, the left and right.

### **Aspect ratio**

Aspect ratio refers to the length to height ratio of TV screens. The ratio of a standard TV is 4:3, while the ratio of a high-definition or wide TV is 16:9. The letter box allows you to enjoy a picture with a wider perspective on a standard 4:3 screen.

---

## B

### **Bit rate**

Bit rate is the number of bits that are conveyed or processed per unit of time. The bit rate is usually measured in some multiple of bits per second (kilobits per second: kbps). The term bit rate is a synonym for data transfer rate (or simply data rate).

---

## C

### **Chapter**

Chapter

Sections of a picture or a music piece on a DVD that are smaller than titles. A title is composed of several chapters. Each chapter is assigned a chapter number that enables you to locate a specific chapter.

---

## D

### **Digital Audio**

Digital Audio is a sound signal that has been converted into numerical values. Digital sound can be transmitted through multiple channels. Analog sound can only be transmitted through two channels.

### **Disc menu**

A screen display that allows election of images, sounds, subtitles, multi-angles, etc., recorded on a DVD.

### **DivX®**

The DivX® codec is a patent-pending, MPEG-4 based video compression technology developed by DivX®, Inc. It can shrink the file size of digital video and still maintain the high visual quality.

### **Dolby Digital**

A surround sound system developed by Dolby Laboratories that contains up to six channels of digital audio (front left and right, surround left and right, center and subwoofer.)

---

## H

### **HDMI**

High-Definition Multimedia Interface is a high-speed digital interface that can transmit uncompressed high definition video and digital multichannel audio. It delivers high quality picture and sound quality, completely free from noise. HDMI is fully backward-compatible with DVI.

As required by the HDMI standard, connecting to HDMI or DVI products without HDCP (High-bandwidth Digital Content Protection) will result in no Video or Audio output.

---

## J

### JPEG

A very common digital still picture format. A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio. Files are recognized by their file extension '.jpg' or '.jpeg'

---

## M

### MP3

A file format with a sound data compression system. MP3 is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. With the MP3 format, one CD-R or CD-RW can contain about 10 times more data than a regular CD.

### Multichannel

Usually DVD is specified to have each sound track constitute one sound field. Multichannel refers to a structure of sound tracks having three or more channels.

---

## P

### Parental control

A function of the DVD to limit playback of the disc by the age of the users according to the limitation level in each country. The limitation varies from disc to disc; when it is activated, playback will be prohibited if the software's level is higher than the user-set level.

### PBC

Playback Control. A system where you navigate through a Video CD/Super VCD with on-screen menus that are recorded onto the disc. You can enjoy interactive playback and search.

---

## R

### Region code

A system that allows discs to be played only in the region designated. This unit only plays discs that have compatible region codes. You can find the region code of your unit on the product label. Some discs are compatible with more than one region (or ALL regions.)

---

## S

### Surround

A system that creates realistic, three-dimensional sound fields. It is usually achieved with multiple speakers that are arranged around the listener.

