




# Remote For use with the Lola Remote Music Player

The Lola Remote works with the Lola Remote Music Player systems. The remote lets you access all the features of the Lola application from the comfort of your easy chair.

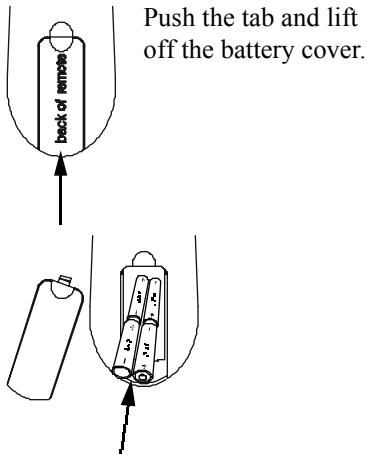

Insert four AAA alkaline batteries, taking care to match the + and - marks in the battery compartment.



## BUTTON DESCRIPTIONS

### Setup

Used to setup the remote to control your TV, cable, or audio system as follows:

1. Turn on the device you want to control (TV, Cable Box, or Audio system).
2. Press and release mode button for the device you want to control (TV, Cable, or Audio).
3. Press and hold SETUP until the green LED indicator under the button you pressed in step 2 lights steadily. Release SETUP.
4. Enter the 3 digit Code from the Library Code Tables on the back of this sheet. The LED turns off after the last digit entered.
5. Point the remote at the device and press the POWER button. Your device should turn off.

### Learn

Learns TV/Audio codes not in the remote's library, as follows:

1. Point your existing remote at the Lola Remote on a hard surface with a distance of about 1 inch between remotes.
2. Press the mode button that matches the equipment you want to learn (TV, Cable, or Audio). The LED blinks once.
3. Press and hold SETUP until the green LED indicator under the button you pressed in step 2 lights steadily. Release SETUP.
4. Press and release the LEARN button. The LED blinks once.
5. Press and release the button on the Lola Remote that you want to teach. (e.g. POWER) The LED blinks once.
6. Press the matching button on your existing remote that you want to learn. Hold button until the LED on the Lola Remote blinks off.
7. Repeat steps 5 and 6 for each button you want to learn.
8. When you've finished learning all the keys, press SETUP.

Note: You can only learn codes under Power, Vol +/-, Ch+/-, and Mute buttons.

**Power** Hides/Reopens Lola. Also operates your TV/Stereo.

**PC, TV, Audio, Cable** Changes the remote's control from Lola, to TV, to Audio, to Cable System, respectively.

**X10** Used for Home Control functions.

**0-9** Selects track numbers directly.

**Add/Delete** Marks a track to be added to a playlist, or excluded from play.

**A/B** Selects input mode on your TV.

**Album, Artist, Genre, Track** Selects how you want to display/select your music files.

**Up, Down, Left, Right Arrows** Moves around the current list displayed. Works like a joystick.

**Enter** Opens the current selection. (Like pressing joystick button).

**Page Up and Down** Moves up and down through screens.

**Playlist** Displays your play lists.

**Playing** Displays info on the track that's playing.

**Top, End, Find, Select** Used to move around within, and organize your music files. **Top** and **End** go to the top and end of a list. **Find** lets you find albums/artists/tracks alphabetically. **Select** lets you change the way tracks are played (Regular, Repeat Track, Repeat All, Shuffle, or Preview).

**Play, Stop, Pause, FF, REW, Scan+/-** Used like you would use on your CD player.

**Play** Plays the currently highlighted selection. Also, with Add/Delete, used to exclude a track from play.

**Record** Saves the track exclusion for every time Lola is run.

**See the help in the Lola software for more information. To access the help, right-click your mouse button while at the main Lola screen.**

**F.C.C. CAUTION - THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION. NOTE: NO CHANGES OR MODIFICATIONS MAY BE MADE TO THE UNITS. ANY CHANGES MADE TO THE UNITS WILL VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.**

**See: [http://www.x10.com/support/return\\_policy.htm](http://www.x10.com/support/return_policy.htm) for warranty info.**

**For help or more information on setup, please visit: <http://www.x10.com/support>**

# Code List

## TV

ABEX	185
ACME	003 031
ADA	009
ADC	009 002
ADMIRAL	001 173
ADVENTURA	174
AIKO	058
AIWA	195 196
ALLERON	046
AMARK	020
AMTRON	053
AKAI	002
AMSTRAD	189
ANAM NATIONAL	003 025 042 053 193
AOC	004 005 007 009 014 132 156 175
ARCHER	020
AUDIOVOX	053
BANG & OLUFSEN	190
BELCOR	004
BELL & HOWELL	000 001 049
BRADFORD	053
BROKSONIC	136 147
BROKWOOD	004
CANDLE	004 008 009 174
CAPEHART	175
CELEBRITY	002
CENTURION	009
CETRONIC	042
CHANGHONG	214
CITIZEN	001 004 008 009 042 053 058 105 109 177
CLAIRTONE	014
CLASSIC	042 214
COLORTYME	004 009 010
CONCERTO	004 009
CONCIERGE	121
CONTEC/CONY	012 013 014 042 053
CRAIG	042 053
CROWN	042 053
CURTISMATHES	000 001 004 009 015 031 049 105 109 130
CXC	042 053
DAEWOO	004 005 009 017 018 019 042 058 082 085 097 100 126 127 130 138
DAYTRON	004 009
DIMENSIA	000 031
DUMONT	004 121
DYNASTY	042
ELEKTRA	001
ELECTROBAND	002 014
ELECTROHOME	003 004 009 022 133
EMERSON	004 009 014 023 024 025 026 027 030 032 033 034 035 036 037 038 039 040 041 042 043 045 046 049 053 116 135 147 155 177 179 189 198
ENVISION	004 009
FISHER	013 049 050 180 209
FUJITSU	046 197
FUNAI	042 053 046 155 189 198
FUTURETEC	042 053
GE	000 003 004 009 022 031 044 052 054 055 087 092 103 107 125 164 181
GIBRALTER	004 121
GOLDSTAR	004 005 009 056 057 133 155 156 172
GRUNDY	046 053
HALLMARK	004 009
HARVARD	053
HITACHI	001 004 009 013 059 060 061 088 091 137 139 140 141 142 143 144 145 146 179 210
IMA	053
INFINITY	062
INTEQ	121
JANEIL	174
JBL	062
JCB	002

JC PENNY	000 004 005 008 009 022 031 052 054 055 063 087 105 107 109 172 181
JENSEN	004 009
JVC	013 054 055 060 065 067 089
KAWASHO	002 004 009
KAYPANI	175
KEC	042
KENWOOD	004 009 133
KLOSS NOVABEAM	068 069 174
KONKA	016 047 066 157 158 176
KTV	014 021 042 053 070 116 177
LODGENET	000 001
LOEWE	062 211
LOGIK	000 001
LUXMAN	004 009
LXI	000 004 009 031 049 062 107 109 181
MAGNAVOX	004 008 009 062 068 069 074 075 076 077 089 133 163 165
MAJESTIC	000 001
MARANTZ	004 009 062
MEGATRON	004 009 059
MEI	014
MEMOREX	000 001 004 009 046 049 051 135
MGA	004 005 009 022 046 133 180
MIDLAND	054 055 107 121 172 181
MINUTZ	052
MITSUBISHI	004 005 009 022 046 081 089 132 133 180
MONTGOMERY WARD	000 001
MOTOROLA	003 173
MTC	004 005 009 014 105 109
MULTITECH	053
MULTIVISION	084
NAD	004 009 109 185
NEC	003 004 005 009 010 085 089 095
NIKEI	042
NIKKO	004 009 058
NTC	058
ONKING	042
ONWA	042 053
OPTIMUS	170 185
OPTONICA	095 173
ORION	035 121 135
PANASONIC	003 054 055 062 070 148 170 171
PHILCO	003 004 005 008 009 062 068 069 074 075 077 133
PHILIPS	003 004 006 008 062 068 069 074 075 076 086 087 089 133 163 183 184 205 206 207 208 212 213
PHILIPS/MAGNAVOX	183 184 204 208 213
PILOT	004
PIONEER	004 009 090 179 185
PORTLAND	004 005 009 058
PRECISION	166
PRICE CLUB	105
PRISM	055
PROSCAN	000 031 107 181
PROTON	004 009 093 175 186 192
PULSAR	121
PULSER	004
QUASAR	003 054 055 062 070 148 170 171
RADIO SHACK	000 004 009 031 041 042 048 049 053 095 133 155 170 172 194
RCA	000 003 004 005 007 009 011 048 078 082 092 094 096 098 099 101 102 103 107 113 125 129 133 167 179 181 187 188 191 194
REALISTIC	000 004 009 031 041 042 048 049 053 095 133 155 170 172
RHAPSODY	014
RUNCO	121
SAMPO	004 009 172 175
SAMSUNG	004 005 009 015 104 105 106 109 133 172
SAMSUX	009
SANSUI	135 136
SANYO	004 013 049 108 110 180 209

SCOTCH	004 009
SCOTT	004 009 024 035 042 046 053
SEARS	000 004 009 013 031 046 049 105 107 109 110 133 180 181 189
SHARP	004 009 079 095 111 112 114 122 123 124 173
SHOGUN	004
SIGNATURE	000 001 023
SIMPSON	008
SONIC	014
SONY	002 006 071 128
SOUNDESIGN	004 008 009 042 053 046
SPECTRAVISION	203
SQUAREVIEW	189
SSS	004 042 053
STARLITE	053
SUPREMACY	174
SUPREME	002
SYLVANIA	004 008 009 062 068 069 074 075 076 077 133 155 161 163 189 198
SYMPHONIC	033 053 155 189 198
TANDY	173
TATUNG	003
TECHNICS	054 055
TECHWOOD	004 009 054 055
TEKNIKA	000 001 004 005 008 009 013 042 046 053 058 076 105 109 170 174
TELECAPTION	117
TELERENT	000 001
TERA	004 186
TMK	004 009
TOSHIBA	013 049 089 105 109 117 118 120 159 178
UNIVERSAL	052 087
VICTOR	060
VIDTECH	004 005 009
VIKING	174
WARDS	000 001 004 005 009 024 031 033 046 052 062 068 069 074 075 076 087 095 119 133
WHITE WESTINGHOUSE	097 100 130 155
YAMAHA	004 005 009 133
ZENITH	000 001 004 023 038 058 059 064 121 135 136 153

PARAGON	486
PHILIPS	471 472 473 479 485 490 491 492
PHILIPS/MAGNAVOX	505 534
PIONEER	493 494 498
PULSAR	486
RADIO SHACK	505 525 534
RCA	460 507
REALISTIC	469
REGAL	482
REGENCY	477
REMBRANDT	463
RUNCO	486
SAMSUNG	474 494
SCIENTIFIC ATLANTA	466 496 497 498 535 596 607
SIGNAL	474 478
SIGNATURE	463
SL MARX	474
SPRUCER	460
STANDARD COMPONENTS	499
STARCOM	461 467 478
STARGATE	474 478
STAR SIGHT	520
STAR SIGHT CABLE SERVICE	507
STARQUEST	478
STAR TRAK	516
TANDY	500
TELEVISION	474
TELEWEST	532
TEXSCAN	499
TOCOM	464 501 513
TOSHIBA	486
TUSA	478
TV86	487
UNIKA	468 469 471
UNITED ARTISTS	462
UNITED CABLE	461
UNIVERSAL	468 469 470 471 502
VIDEOWAY	504
VIEWSTAR	475 485 487 500
VIDEO TECH	550
ZENITH	486 488 503 517 519 520 521 522 523 524 525 527 533

## Audio

## Cable

ABC	461 462 463 464 465 466 467
ADELPHIA	596
ALLEGRO	524 525
AMERICAST	527
ANTRONIX	468 469
ARCHER	468 469 470 471
AT&T	511
CABLETENNA	468
CABLEVIEW	468
CENTURY	471
CITIZEN	471
COLOUR VOICE	472 473
COMTRONICS	474 475
CONTEC/CONY	476
EASTERN	477
GARRARD	471
GC ELECTRONICS	469
GEMINI	478 479 536
GE	549
GENERAL INSTRUMENT	463 509 511 513 514 518 528 529 530 531
HAMLIN	480 481 482
HITACHI	463
HYTEK	462
JASCO	471
JERROLD	461 463 464 465 467 478 484 509 510 511 526 528 529
MAGNAVOX	485
MEMOREX	486
MOVIE TIME	462 487
NSC	462 487
OAK	462 476 489
PACE	532
PANASONIC	460 508

AIWA	839 842 851 860
CARVER	825
CITIZEN	826
DENON	803 817
FISHER	814 821
GOLDSTAR	766
HARMAN KARDON	804 818
JVC	790 813 819
KENWOOD	683 808 816 828 832 869
MAGNAVOX	796 814
MARANTZ	688 824
MITSUBISHI	877
NAD	721 739 743
ONKYO	805 811 812
OPTIMUS	667 747 748 749 751 752 754 793
PANASONIC	810 815
PHILIPS	814 823 824 825
PIONEER	837 866 867 878
RADIOSHACK	706 754 793 806 865 866 867 868 875 878 879
RCA	717 772 781 795 827 866 867 870 871 872 875 878 879
REALISTIC	822
SANYO	705
SCOTT	768
SHARP	671 684 809
SHERWOOD	706 806 858 859
SONY	778 785 797 798 799 833 834 835 836 843
TEAC	710 807 855 856 857
TECHNICS	791 810 815 823 863 864
VENTURER	745
YAMAHA	801 802 838 840 841 846 847 848 849
ZENITH	676 730 749 759 765 766 784 814 850