Isolator Module ISM1-2

- Safe disconnection of a faulty loop section
- For use in a System Sensor/200 loop
- Installation in commercial installation boxes or in the LST standard grid
- Small design



Description

The Isolator Module ISM1-2 is used on the ADM loop with System Sensor/200 protocol and disconnects the loop in the event of a short circuit of the loop connection. Thereby only the loop elements located between ends of the loop, until the fault is removed. two isolator modules are affected by the short circuit.

The Fire Detection Control Panels Series BC216 report the affected loop elements as faulty and operate the remaining loop sections, which are not faulty, from both

Specifications

Operating voltage	Supply through loop voltage
Current consumption	max. 0.2mA
Ambient temperature	-5°C to +50°C
Dimensions L × W × H	70 × 24 × 15 (mm)
Weight	20g
Approval	VdS G296011
Order number	249003
Order name	Isolator Module/Anal./500/200/SS ISM1-2



