


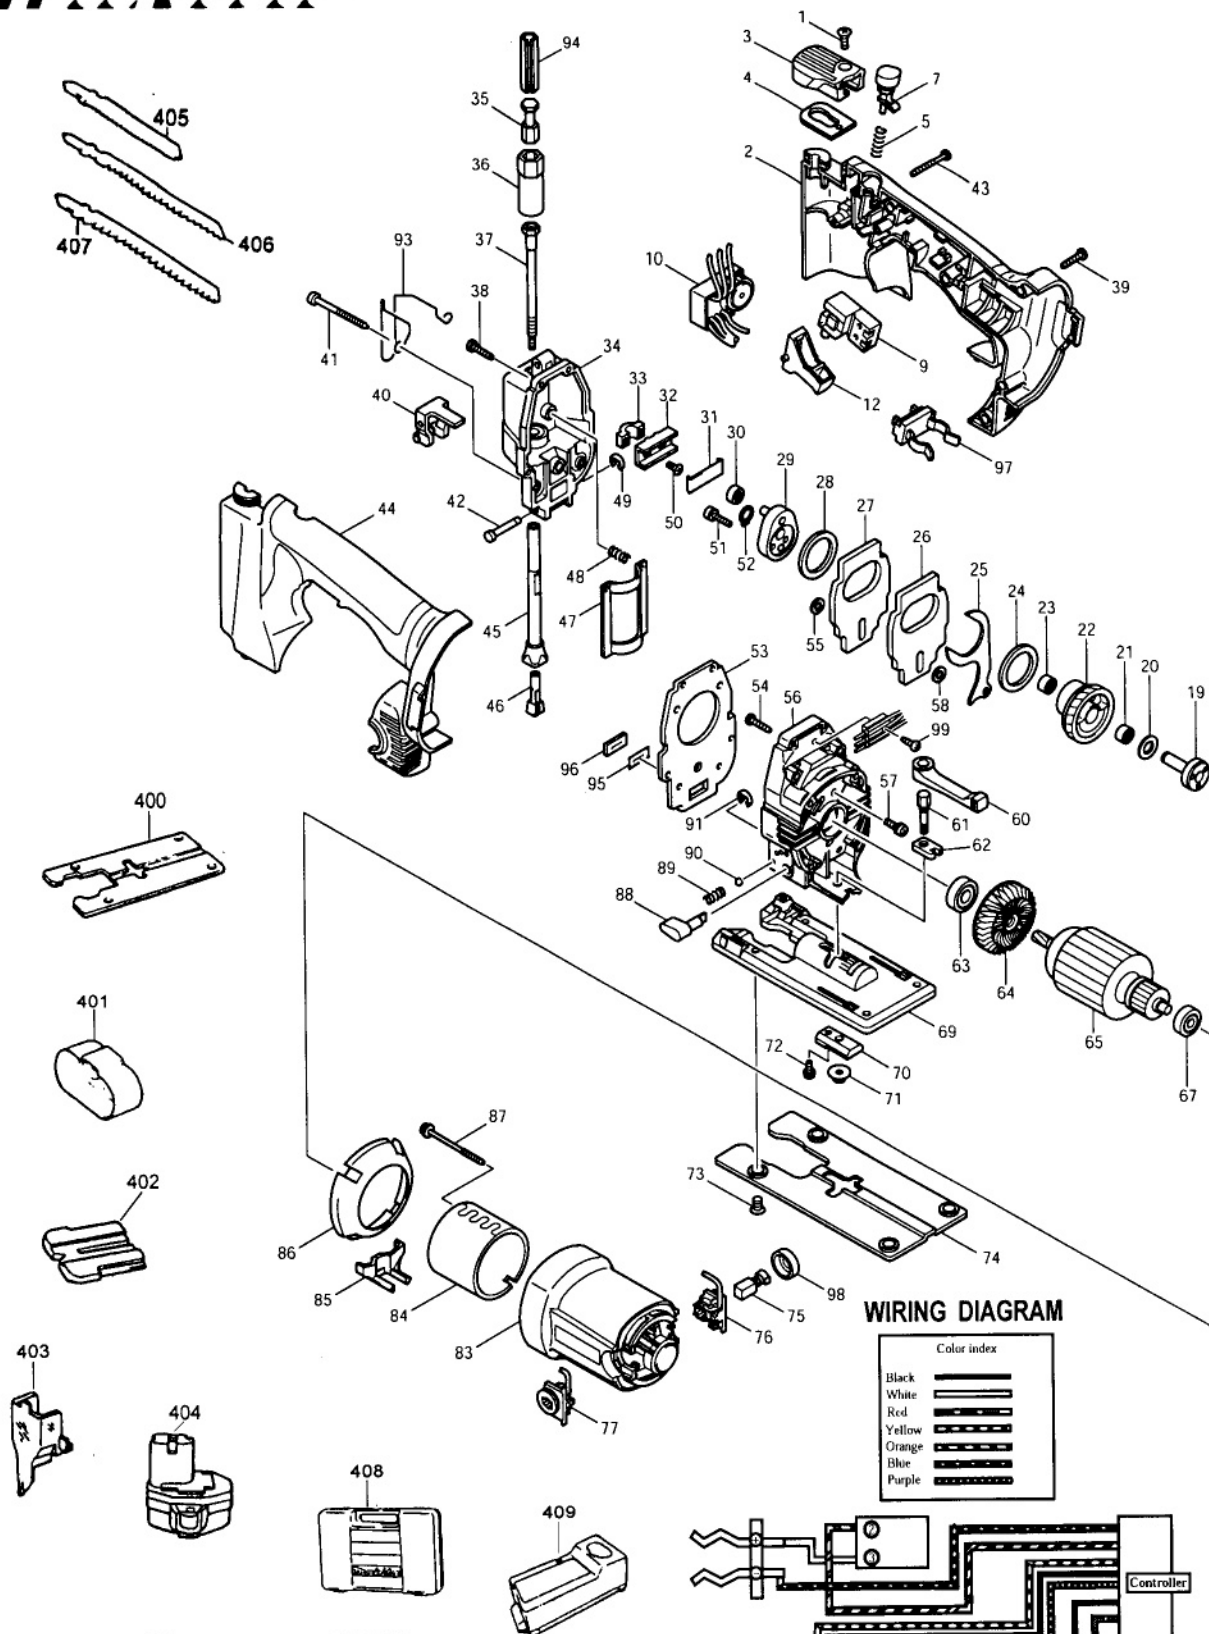

CORDLESS JIG SAW

Model 4334DWD



IMPORTANT - To assure product **SAFETY** and **RELIABILITY**, repairs, maintenance or adjustments should be performed by **MAKITA** service Centers or other qualified service organizations. Always use **MAKITA** replacement parts.

12-00