morphy richards

2 Band Alarm **Clock Radio**



28049 OPERATING INSTRUCTIONS

Electrical requirements

Check the voltage on the rating plate of your clock radio corresponds with your house electricity supply which must be A.C. (Alternating current).

Use only with the adaptor unit supplied.

Switching on, and setting the clock time

Before any alarm functions can be used on your alarm clock radio you must first set the clock to the correct time.


- Place the unit on a flat surface. Plug the adaptor plug into the adaptor socket on the product and plug into the wall socket and switch on the wall
- The clock LED display (1) will flash.
- Press and hold the hour button (6) or the minute button (5). The LED clock display (1) will fast forward the hour and minute segments. Release all buttons when the correct time is set.

Radio operation

To obtain the maximum reception rotate the clock radio.

- Slide the FUNCTION switch (9) to the 'ON' position.
- Adjust the VOLUME control (11) to a suitable level. 2
- Set the BAND switch (12) to either MW or FM as desired.
- Slowly adjust the TUNING control (13) to select your desired station.
- To switch off the radio, slide the FUNCTION switch (9) to the 'OFF' position.

Illustration

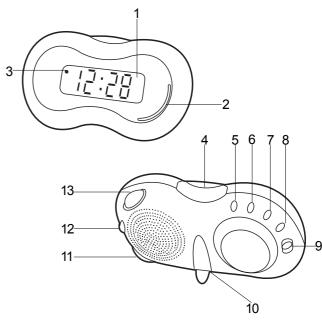

Location of controls

- LED display
- Dial scale with pointer
- Auto/Alarm indicator
- Snooze button
- Minute button
- Hour button

- Alarm button
- Sleep button
- Function switch
- AC adaptor socket
- Buzzer on/volume control
- Band switch
- Tuning control

P.2

Wake up to the radio alarm

Having selected your station and set the volume at the desired level, proceed as follows:

- Switch the FUNCTION switch (9) to the 'AUTO' position. The auto/alarm indicator (3) will light.
- Press the ALARM button (7) and simultaneously press the HOUR button (6) and then the minute button (5) until the desired alarm time is set.
- To check the wake up time simply press the ALARM button and the clock will show the present time.

The preset wake up time will continue to be registered in the timer memory and the radio will switch on automatically the next day.

Ensure the station you select will be transmitting at the preset alarm time.

Wake to buzzer

- Set the controls as for 'wake to radio' and set the VOLUME/BUZZER control (11) to the BUZZER position.
- The dial will click when the buzzer position is reached.

To stop the alarm

The alarm is programmed to run for 1 hour 59 minutes.

- The alarm can be switched off by pressing the by sliding the FUNCTION switch to the 'OFF' position.
- To stop the alarm temporarily, press the SNOOZE button (4). The alarm will sound again 9 minutes later.

The alarm will stop and will operate again 24 hours later.

The buzzer alarm will wake you up at the set alarm time.

The buzzer will automatically turn off after a set period.

Snooze function

The alarm can be interrupted for a 9 minute period.

1 Press the SNOOZE button (4), after 9 minutes the radio or alarm buzzer will sound again.

To set the sleep function

Your clock radio is equipped with a sleep function that will turn the radio on and switch it off automatically after a set period of time from between 1 minute to 1 hour 59 minutes.

- 1 Ensure all controls are preset to 'wake to radio'.
- 2 Press the SLEEP button (8) the LED display (1) will show 0:59 sleep time at the same time the radio will come on and stay on for 59 minutes.
- 3 Press and hold the SLEEP button (8) whilst pressing the MINUTE button (5) the sleep time shown on the LED display (1) will start descending.
- 4 Press the HOUR button (6) to set the sleep time to 1:59.
- 5 Release all buttons when the desired sleep time is shown on the LED display (1).
- **6** After the set sleep time has elapsed, the radio will automatically switch off
- 7 To switch off before the set sleep time has elapsed press the SNOOZE button (4).

Maintenance

Do not expose your clock radio to extremes of temperature. The product should be kept in a warm environment free from dust and damp. For external cleaning use only a soft, clean, damp cloth. Use of detergents may damage the finish.

Technical specification

AC Output : 9v \sim 200mA (1.8va)

Use only adaptor supplied or service

department replacement

Radio : FM 88Mhz - 108MHz

MW 530Khz - 1600kHz

P.5

Warning labels

WARNING: to reduce the risk of electric shock, do not expose this appliance to rain or moisture.



ATTENTION: To reduce the risk of electric shock, do not remove the cover. There are no user serviceable parts inside the unit. Refer any servicing to qualified personnel.



The lightning flash with arrowhead symbol within the triangle is a warning sign alerting the user of 'dangerous voltage' inside the unit.



The exclamation point within the triangle is a warning sign alerting the user of important instructions accompanying the product.

To prevent fire or shock hazard do not expose this apparatus to dripping or splashing.

Guarantee

Morphy Richards products are manufactured to internationally accepted quality standards. In addition to your statutory rights, Morphy Richards guarantee your product to be free from manufacturing and component defects for a period of TWO YEARS from date of purchase.

P.6

If your product proves to be defective within 28 days of purchase, your Morphy Richards dealer from whom the product was purchased will be pleased to replace it free of charge.

Should your product develop a defect within the guarantee period but after the replacement period, please return the product to the following address, together with the proof of purchase, brief details of the symptoms and your own name and address.

Registered address Morphy Richards Limited Mexborough South Yorkshire S64 8AJ

Your post office will provide a certificate of posting. The product will be repaired and returned to you promptly.

Helpline (8:30-5:00 Mon-Thur/ 8:30-4:00 Fri) UK 0870 060 2614 Republic of Ireland 1800 409119 Replacement parts 0870 167 6645

www.morphyrichards.co.uk

CE

AD28049M UK Rev 1