 


Panasonic

Clock Radio Cassette Player

RC-X160

Operating Instructions

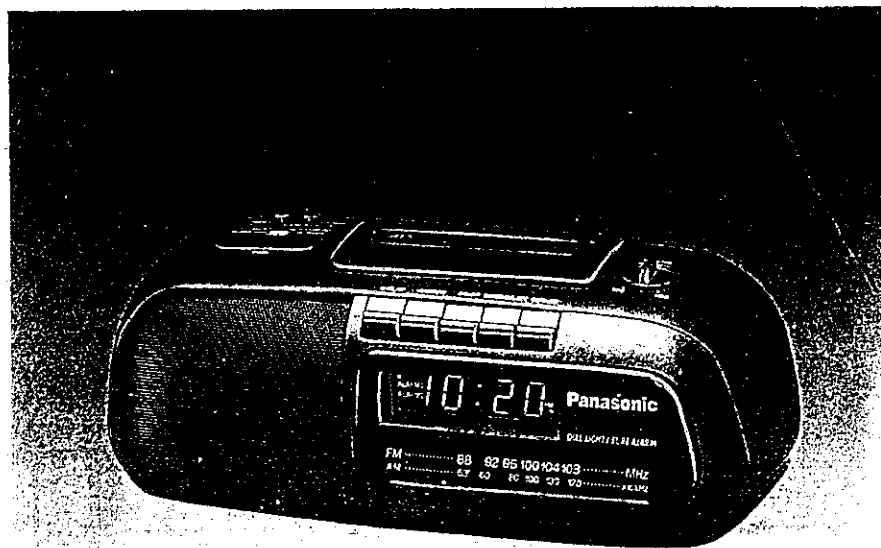

GN

Before connecting, operating or adjusting this product, please read these instructions completely.

Thank you for purchasing the RC-X160 Clock Radio Cassette Player.

For optimum performance and safety, please read these instructions carefully.

Sure Time Battery Back-Up

 
The back-up battery will keep the clock operating during a power interruption. When power is resumed, the display will show the current time.

The alarm time is not affected by a power interruption—so there is no need to reset the alarm.


Battery installation

- 1 Connect a 9-Volt battery (not included) to the snaps, observing correct polarity. A battery installed with incorrect polarity may leak and damage the unit.

- 2 Place the battery in the compartment by inserting it in the direction of the arrow **B**, while pushing the battery holder in the direction of the arrow **A**. Note no battery cover is used.

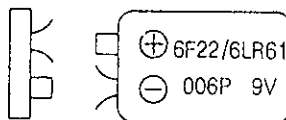

Bottom of the unit

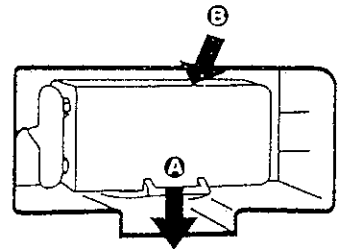 

When should the battery be replaced

Unplug the AC power cord from the AC power outlet. After several seconds, plug it back into the outlet. If the digits flash continuously, replace the battery with a new one.

If an extended power failure or interruption occurs, replace the battery with a new one.

Replace the battery with a new one after one year of use (most batteries have a shelf life of approximately one year).

Operation

The sure time battery back-up is designed to keep the clock operating in the event of a power failure or interruption. (Such as when moving this unit to a different room.) Whenever a power interruption occurs, the clock display will disappear. However even though the display is completely blacked out, the 9-volt back-up battery will take over as the power source and the present time and the alarm time will be preserved.

Even if the power is not resumed by the wake-up time, the buzzer alarm will activate.

Notes

When the set is unplugged (not in use) for a long time, remove the back-up battery to prevent possible battery leakage.

Power failures may occur at any time of the night or day and can be of a long or short duration.

Most failures are so short that people don't even notice the interruption. These interruptions do, however, affect clocks which do not incorporate a battery back-up.

 
If the power is not resumed by the wake-up time, the radio alarm will not activate.

If the back-up battery goes dead during a power interruption, the present time and alarm time must also be reset after the interruption.

The back-up battery will be exhausted after about 17 hours of total (accumulative) use. (The battery life will vary depending on the frequency of the power interruption.)

After a power interruption, the time shown in the display window may not be always correct (it may gain or lose about six minutes per hour).

Location and Function of Controls

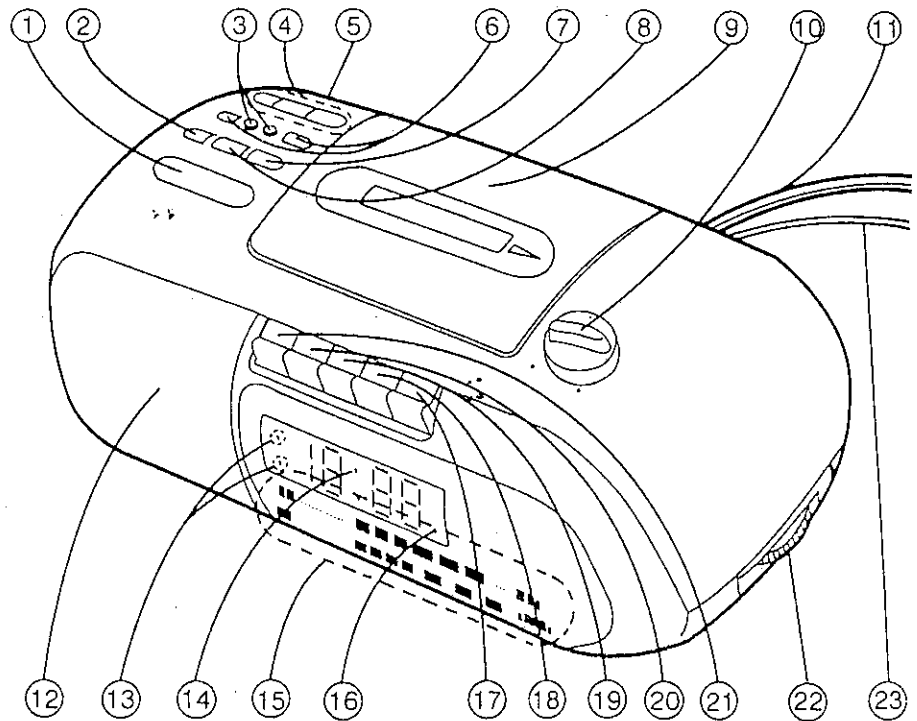

- ① **Doze button (DOZE)**
When the alarm activates, but you do not wish to wake up immediately, press this button. The alarm will be quiet for 7 minutes, then the alarm will operate again.
- ② **Sleep button (SLEEP)**
Press this button when you wish to fall asleep while listening to radio.
- ③ **Alarm 1 and 2 select buttons**
Press the alarm 1 select button, the alarm 1 indicator will light up. Press the alarm 2 select button, the alarm 2 indicator will light up. Alarm 1 is radio or tape alarm. Alarm 2 is buzzer alarm.
- ④ **Time set buttons (TIME SET)**
The FWD button forwards the displayed time and the REV button reverses it. To forward or reverse the displayed time rapidly, press and hold the FAST button with the FWD or REV button.
- ⑤ **Band Selector (BAND)**
[back of the unit]
- ⑥ **Alarm 1 and 2 display/adjust buttons (DISP/ADJ)**
Set the desired time by the time set buttons, while pressing this button. If the alarm 1 and 2 display/adjust buttons are pressed at the same time, the clock display shows the alarm 1 time.
- ⑦ **Radio button (RADIO)**
Press this button to listen to the radio.
- ⑧ **Off/time set button**
(OFF TIME SET)
Press this button to shut off the radio, alarm, doze and sleep operation. Press and hold to set the correct time.
- ⑨ **Cassette compartment cover**
- ⑩ **Volume control (VOLUME)**
- ⑪ **AC power cord**
- ⑫ **Speaker**
- ⑬ **Alarm 1 and 2 indicators**
- ⑭ **Clock display**
- ⑮ **Radio dial display**
- ⑯ **PM indicator**
- ⑰ **Pause button (|| PAUSE)**
- ⑱ **Stop/eject button**
(■ STOP/▲ EJECT)
- ⑲ **Fast forward button**
(▶▶ FF)
- ⑳ **Rewind button**
(◀◀ REW)
- ㉑ **Play button (▶ PLAY)**
- ㉒ **Tuning control (TUNING)**
- ㉓ **FM antenna cord**

Helpful Hints

Keep the unit away from heating devices and electrical noise generating devices such as fluorescent lamps and motors.

The unit should be kept free from dust, moisture, and vibration, and should not be exposed to direct sunlight.

Do not clean the plastic cabinet with benzine or thinner. Clean it with a solution of soap and water.

Avoid spray-type insecticides. Some insecticides contain chemicals that could cause cabinet deformation.

Do not connect the unit to an AC outlet other than one supplying the specified voltage.

 
Avoid cuts, scratches, or poor connections in the AC power cord which may result in fire or electric shock hazard. Also excessive bending, pulling, or splicing of the cord should be avoided.

Do not unplug the AC power cord by pulling on the cord. To do so may cause premature failure or shock hazard.

If the unit is not going to be used for a long period of time, remove the back up battery to prevent possible damage due to battery leakage.

To Set the Correct Time

To set the correct time on the clock display, use the following procedure.

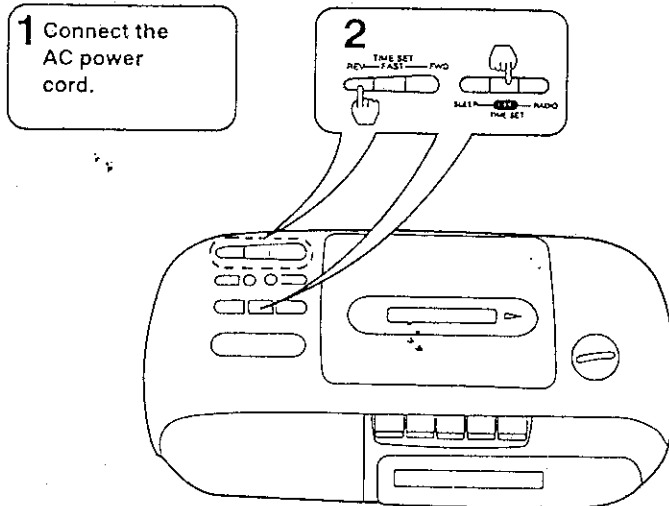

- 1** Connect the AC power cord to your household AC power outlet. The clock display will begin to flash continuously.

- 2** While pressing the off/time set button, press and hold the time set buttons until the correct time appears on the clock display. The digits should stop flashing.

To forward or reverse the displayed time rapidly, press and hold the FAST button with the FWD or REV button.

To forward or reverse the displayed time minute by minute, press the FWD or REV button repeatedly.

 
The seconds are automatically set to "0" when the FWD or REV button is pressed.

Observe the PM indicator. A green dot (PM indicator) indicates "PM" and no dot indicates "AM".

The correct time can usually be obtained by listening for time checks on the radio or from telephone time services.

The time set (REV-FAST-FWD) buttons can only activate when the off/time button is pressed.

Listening to Radio Broadcasts

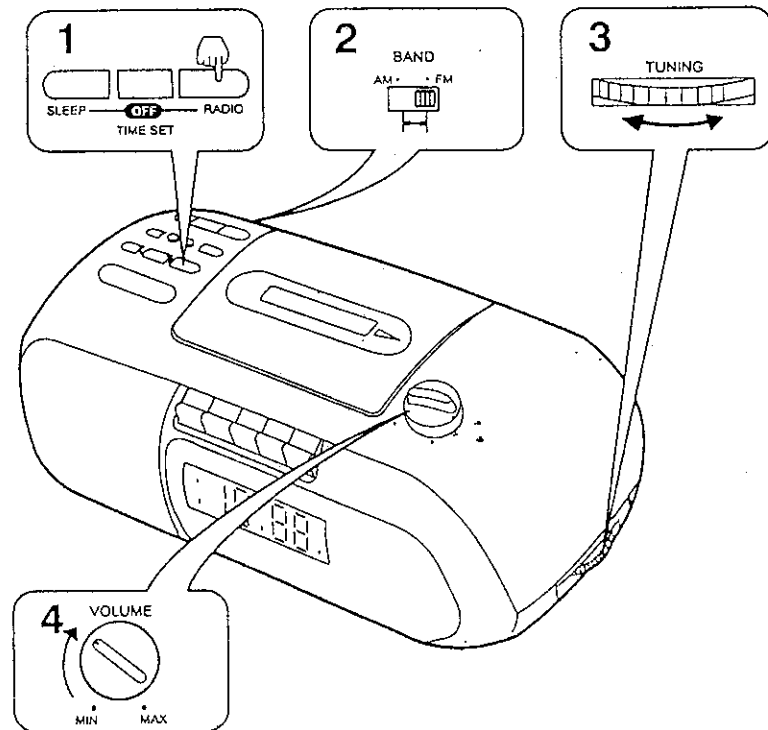

- 1** Press the radio button.
- 2** Set the band selector on the back of the unit to "AM" or "FM".
- 3** Tune in the desired station with the tuning control.
- 4** Adjust the volume control to the desired level.

To turn off the radio, press the off/time set button.

Antennas

 
FM: To obtain the best FM reception, extend and change the direction of the FM antenna cord.

AM: A sensitive ferrite core antenna is built in this unit to assure excellent AM reception in most areas. To improve the reception of weak stations, turn the unit in the direction which gives the best results.

Listening to Tapes

Before use, press the off/time set button to turn off the radio. Set the alarm 1 select

button to off position.

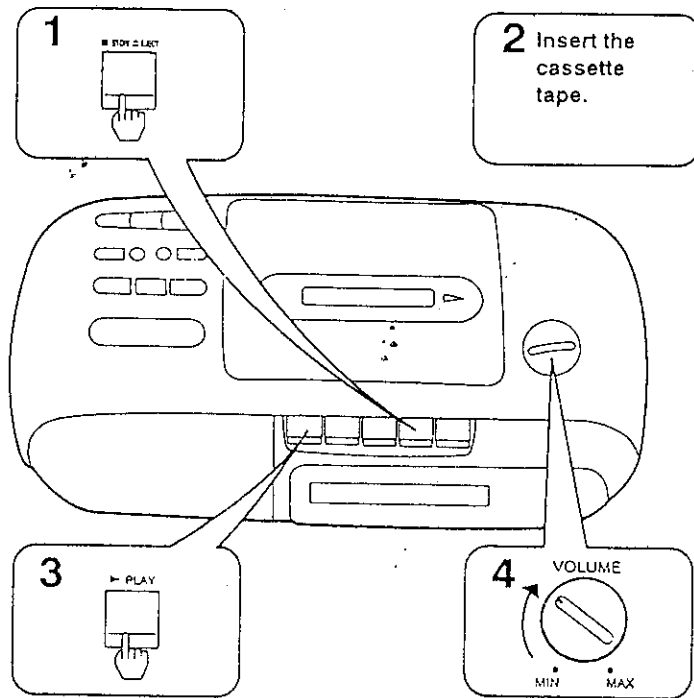

1 Press the stop/eject button to open the cassette compartment cover.

2 Insert the cassette tape.

3 Press the play button to begin tape playback.

4 Adjust the volume control to the desired level.

 
To stop playback, press the stop/ eject button.




Use normal types of cassette tapes only.

Fast forward and rewind

This unit allows the tape to fast forward or rewind by simply pressing the fast forward or rewind button.




 To fast forward the tape, press the fast forward button.



To rewind the tape, press the rewind button.

 Pause button



The pause button can be used to temporarily stop the tape from moving during playback.

Do not use the pause button to stop the tape for a long period of time. This may cause damage to the tape.

Full auto-stop

When the tape reaches its end during playback, fast forward or rewind, the automatic stop system will release the operation buttons.

Concerning Cassette Tapes

 
Cassette tapes exceeding 90 minutes
These tapes are handy for their long play-back time but be careful about repeatedly stopping and starting, rewinding and fast forwarding these tapes in short intervals as they are thin, tend to stretch and may become entangled in the machine.

Use normal types of cassette tapes only. If other tapes are used, you may not obtain optimum performance.

Cassette tapes, both recorded and un-recorded, should not be stored in locations with high temperature, high humidity or direct sunlight. Never place a recorded cassette near a magnetic source, such as a magnet or a TV set as this may affect tape performance.


OK

If the tape loosens, take up the slack by turning the reel in the proper direction.

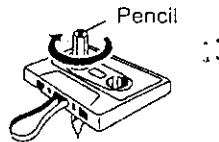

NO

 
Do not handle, or pull the tape out of the cassette.

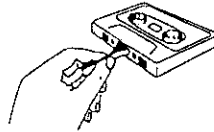

Operation for Dual Wake-Up System

This set incorporates a dual wake-up system. You can set each alarm time to any desired wake-up time in the following way.

 Alarm time setting

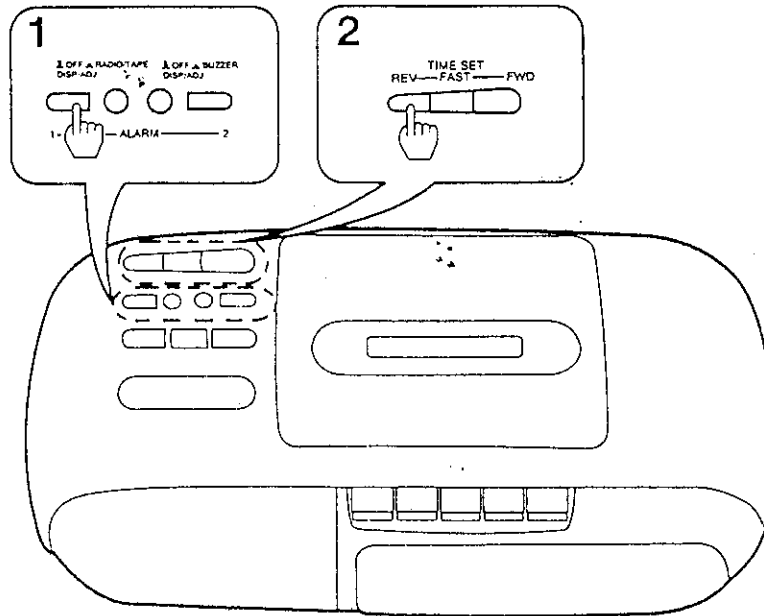

- 1** Press and hold the alarm 1 (or 2) display/adjust button.
The clock display shows "12:00".

- 2** While pressing the alarm 1 (or 2) display/adjust button, press and hold time set buttons until desired wake-up time appears on the clock display.
Make sure the AM or PM setting is correct.

 
Release the alarm 1 (or 2) display/adjust button, and the present time is restored on the clock display.

To make sure of the preset time, press the alarm 1 (or 2) display/adjust button again.

Operation for Dual Wake-Up System

(continued)

Radio alarm (ALARM 1)

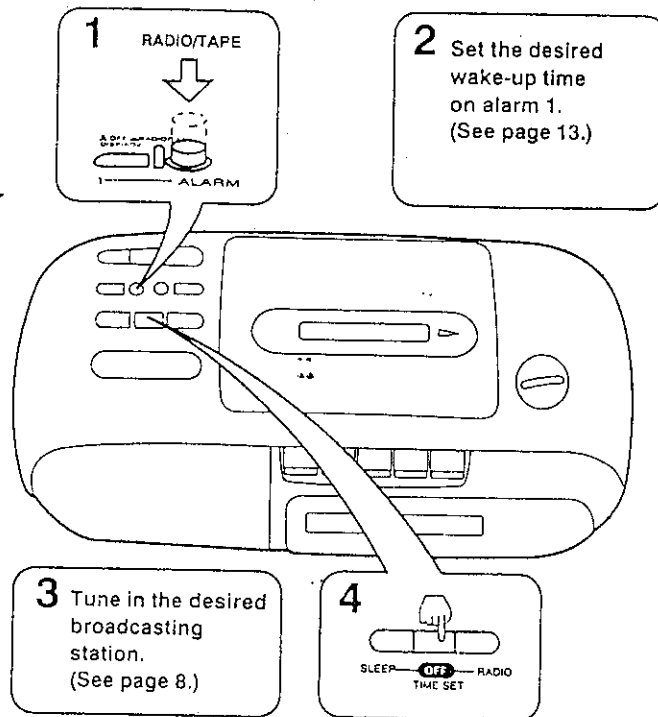


- 1** Press the alarm 1 select button.
The alarm 1 indicator will light up.
- 2** Set the desired wake-up time on alarm 1.
(See page 13.)
- 3** Tune in the desired broadcasting station.
(See page 8.)

- 4** Press the off/time set button.

At the set wake-up time, the radio alarm will activate.
The alarm will shut off automatically in about 59 minutes.

To shut off the alarm before automatic shut-off, press the off/time set button.

 Tape alarm (ALARM 1)

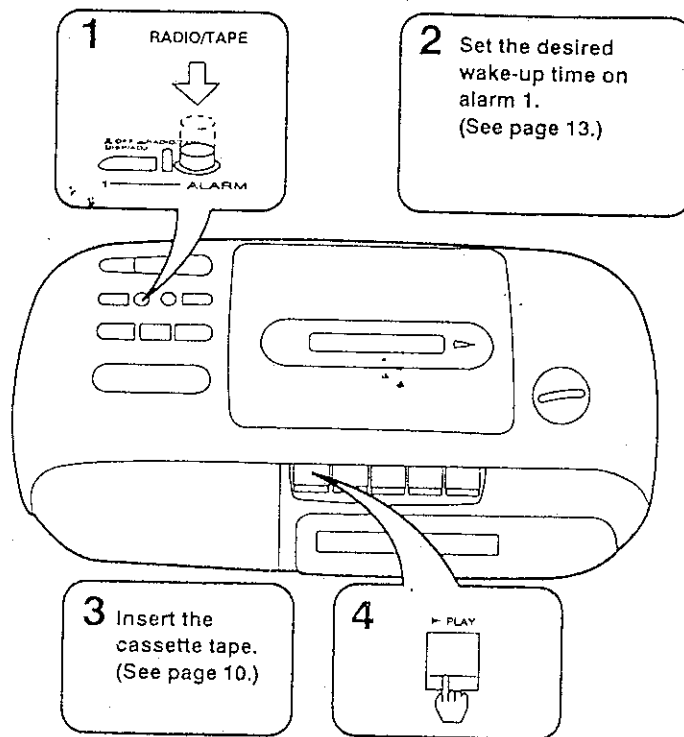

- 1** Press the alarm 1 select button.
The alarm 1 indicator will light up.
- 2** Set the desired wake-up time on alarm 1.
(See page 13.)
- 3** Insert the cassette tape.
(See page 10.)
- 4** Press the play button.

 
At the set wake-up time, the tape alarm will activate.

- To shut off the tape alarm, press the stop/eject button. The tape play stops and the radio alarm will continue automatically.
- The alarm will shut off automatically in 59 minutes. When the tape reaches the end during playback, the automatic stop system will release the playback button and the radio alarm will continue automatically.
- To shut off the alarm before automatic shut-off, press the off/time set button.

Operation for Dual Wake-up System

(continued)

Buzzer alarm (ALARM 2)

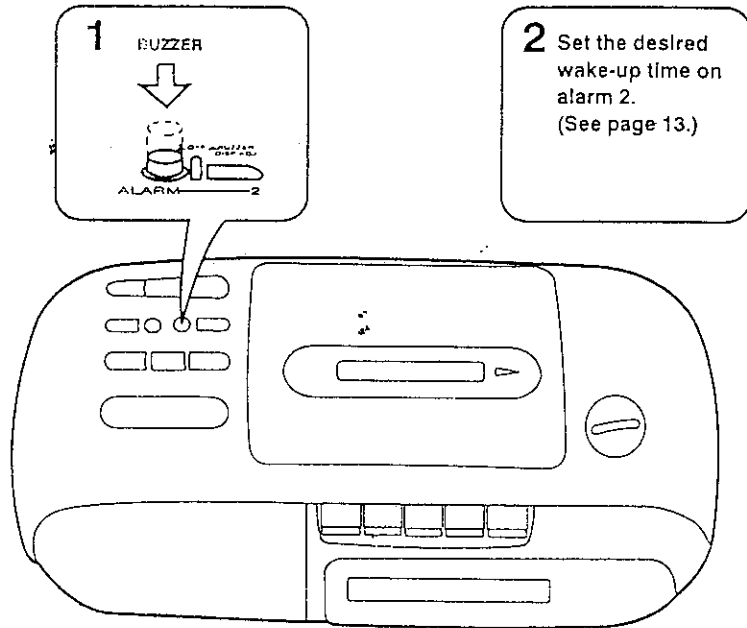


- 1** Press the alarm 2 select button.
The alarm 2 indicator will light up.

At the set wake-up time, the buzzer alarm will activate.
The alarm will shut off automatically in about 59 minutes.

- 2** Set the desired wake-up time on alarm 2.
(See page 13.)

To shut off the alarm before automatic shut-off, press the off/time set button.

 Combination of the alarm 1 and the alarm 2 —

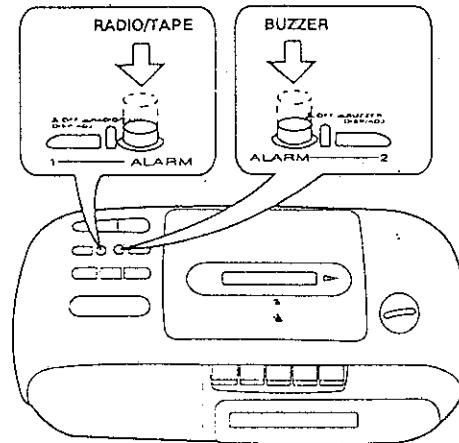


The buzzer alarm and the radio (or tape alarm) are set at the same time. Both alarms will activate simultaneously.

Combination of the alarm 1 and the alarm 2 permits the following convenience.

Example

 Set the wake up time for weekday on the alarm 2, and for weekend on the alarm 1.

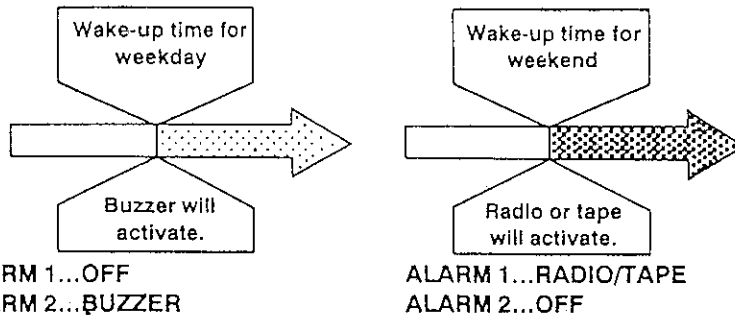


Note:

- The alarm will activate automatically at the same time every day.
- Make sure to set the alarm select button to "OFF" when you want to cancel the alarm.

Special Features

 Doze operation

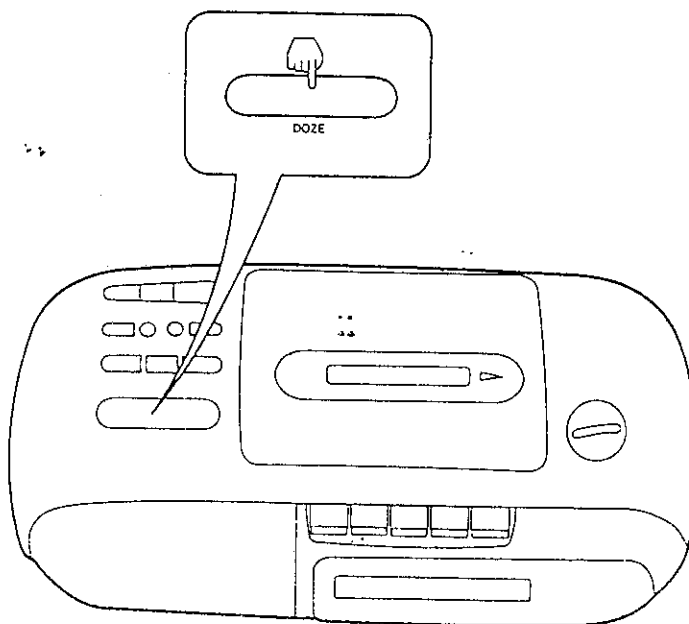


When the alarm activates, but you do not wish to wake up immediately, press the doze button.

The alarm will be quiet for 7 minutes, then the alarm will operate again.

If you do not need doze time and want to cancel the alarm, press the off/time set button.

While pressing the doze button, the seconds will also appear. (At this time, the clock display changes from hours and minutes to minutes and seconds.)

 Radio sleep timer

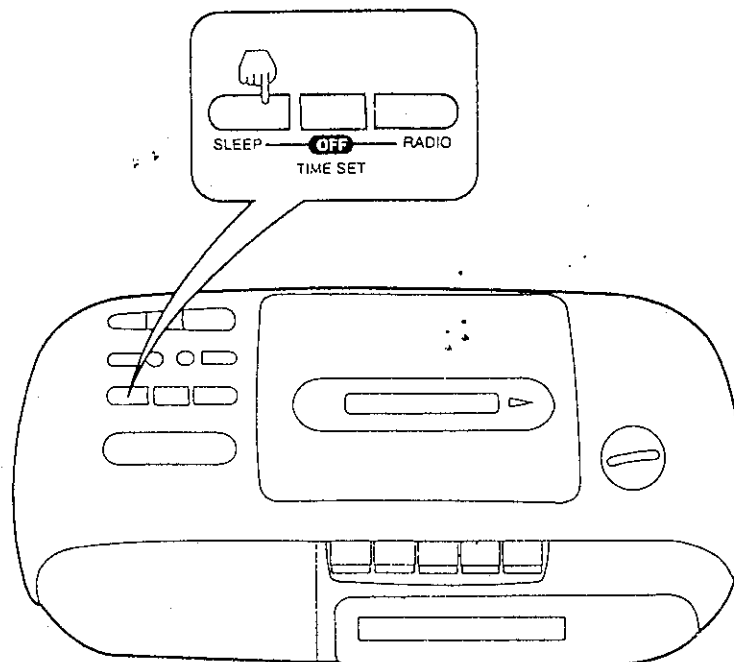

You can set the clock radio to play up to about 59 minutes, and then to shut off automatically.

Press and hold the sleep button until the length of time for which you wish to listen to the radio is shown on the clock display.

Watch the display as it counts backwards from 59 to 00.

At first, the clock display shows 59 minutes. When you release the sleep button, the correct time returns on the clock display.

During radio-listening, you can confirm the number of minutes remaining by pressing the sleep button and looking at clock display.

You can change the length of time, for which you wish to listen to the radio, by the time set buttons while pressing the sleep button.

Radio will be shut off automatically in the preset sleep time.

To cancel the sleep timer and shut off the radio, press the off/time set button.

 
Special Features (continued)

Radio sleep timer and alarm

You can set the clock radio to play for the desired time (up to 59 minutes) and shut off automatically, then activate the alarm automatically at the desired wake-up time.

- 1** Set the desired wake-up time and press the desired alarm select button (alarm 1 select button or alarm 2 select button).
- 2** Set the desired length of time for which you wish to listen to the radio.
(See page 19.)

Maintenance

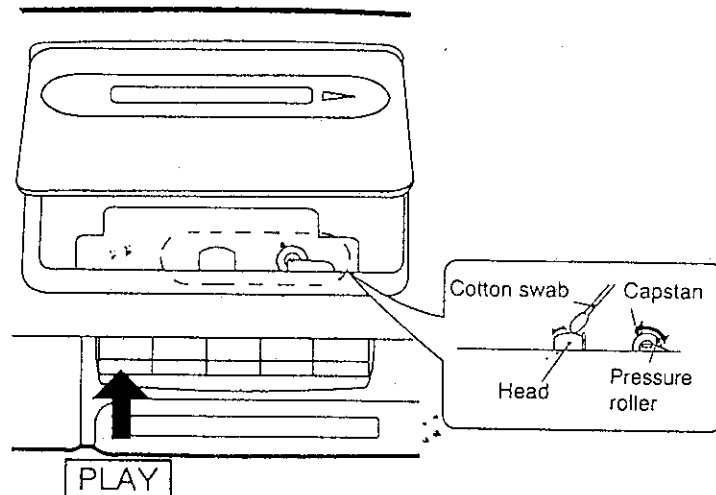

The head assembly, capstan and pressure roller are in constant contact with the tape. If these parts are dirty, the sound quality will be impaired. Periodically, clean these parts as shown above.

1. Open the cassette compartment cover by pressing the stop/eject button.
2. Press the play button.
The playback head, capstan and the pressure roller can be seen. Clean them with a cotton swab.

If the head assembly is extremely dirty, clean it with a soft cloth dampened with a little alcohol.

The use of cleaning tapes is not recommended, as some are abrasive and may cause premature wear of the heads. Simply, clean the head assembly as described.

Avoid spray-type insecticides. Some insecticides contain chemicals that could cause cabinet deformation.

Head demagnetization

In order to maintain good sound quality during playback, it is recommended that the head assembly be demagnetized when distortion or poor sound quality persists after cleaning the head.

If the head assembly becomes magnetized, it could create loss of high end frequency response.

Several types of head demagnetizers are available and may be purchased separately at local electronics supply stores. Follow the instructions that are supplied with the device.

Do not bring any type of metal objects or tools such as magnetic screwdrivers in contact with the head assembly.

Specifications

Radio

Frequency Range: FM; 88-108 MHz
AM; 525-1710 kHz

Tape Player

Frequency Range:
Normal; 50-14000 Hz
Track System: MONO

General

Power

Requirement: AC; 230-240 V, 50 Hz
Power consumption;
8 W
Battery; 9 V (006P/6F22)
for back-up

Speaker: 8 cm

Dimensions

(W×H×D): 303×113×152 mm

Weight: 1600 g
without battery

Note:
Specifications are subject to change with-
out notice.
Weight and dimensions are approximate.

Index

AC power cord	5	PM indicator	5, 7
Alarm 1 and 2 display/adjust button . . .	13	Pause button	5, 11
Alarm 1 and 2 indicator	5	Play button	5, 10
Alarm 1 and 2 select button . . . 14, 15, 16		Radio button	8
Antennas	9	Radio dial display	5
Band selector	5	Rewind button	11
Clock display	5	Sleep button	19
Doze button	18	Speaker	5
Fast forward button	11	Stop/eject button	5, 10
Off/time set button	7, 8	Time set buttons	7, 13
		Tuning control	8
		Volume control	8, 10